 
 


This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

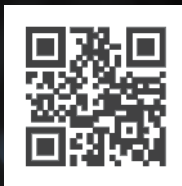

[fordowner.com](http://fordowner.com) (U.S.)

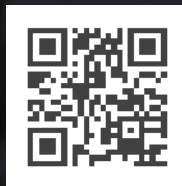

[ford.ca](http://ford.ca) (Canada)



### LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.

### WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



FT4J19G217 AA



December 2014  
First Printing  
Quick Reference Guide  
Edge  
Litho in U.S.A.

2015 *EDGE*

QUICK REFERENCE GUIDE



### United States

Ford Customer Relationship Center  
1-800-392-3673 (FORD)  
(TDD for the hearing impaired:  
1-800-232-5952)

[fordowner.com](http://fordowner.com)



@FordService

### Canada


Ford Customer Relationship Centre  
1-800-565-3673 (FORD)  
[ford.ca](http://ford.ca)



@FordServiceCA



# COMMONLY USED SYNC® VOICE COMMANDS

SYNC. Say the Word. Press the voice button  on the steering wheel and then say:



## Basic Commands

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Pair my phone



## Phone

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb <On/Off>
- Listen to text message (phone-dependent feature)



## Navigation\*

- Navigation list of commands
- Destination street address <number, name, city>
- Destination home
- Navigation voice <On/Off>
- Navigation voice volume <increase/decrease>
- Repeat instruction
- Show <map/north-up/heading-up/3-D>
- Travel Link list of commands
- Traffic
- Weather
- Movie listings
- Fuel prices
- Sports <headlines/scores/schedule>



## Climate\*\*

- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate temperature



## Entertainment

- Audio list of commands: You can also get detailed lists of commands for radio, USB, **Bluetooth®** audio, SiriusXM and SD card\*
- Radio
  - <On/Off>
  - FM <87.9-107.9>
  - FM preset <#>
- CD
  - Play track <1-512>
  - Shuffle <On/Off>
- USB
  - Play song <name>
  - Play album <name>
- SiriusXM
  - <Channel name>
  - Preset <#>

\*if equipped

\*\*available only with MyFord Touch

Some services may not be available in your area. Refer to your **Owner's Manual**, visit the website or call the toll-free number for more information.

For U.S. customers: visit [SyncMyRide.com](http://SyncMyRide.com) or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit [SyncMyRide.ca](http://SyncMyRide.ca) or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).

# TABLE OF CONTENTS

INSTRUMENT PANEL	4-7
SYNC	8-9
SYNC WITH MYFORD TOUCH	10-12
COMFORT	13
CONVENIENCE	14-15
FUNCTION	16-17
ESSENTIAL INFORMATION	18-19



# INSTRUMENT PANEL



## 1. ADAPTIVE CRUISE CONTROL\*

Adjusts your vehicle speed the set gap between you and the vehicle in front of you in the same lane. You can select from one of four **GAP** settings. Refer to the **Cruise Control** chapter of your **Owner's Manual** for more information.

**Note:** Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your **Owner's Manual** for safety information, more details and limitations.

## 2. LEFT VEHICLE INFORMATION DISPLAY

Displays information about various systems on your vehicle. Use the left, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the **Information Displays** chapter in your **Owner's Manual** for more information.

## 3. PADDLE SHIFTERS\*

With your vehicle in drive (D), the paddle shifters provide temporary manual control. They allow you the ability to shift gears quickly, without taking your hands off the steering wheel.

You can achieve extensive manual control by moving the gearshift lever to the sport (S) position.


- Pull the right paddle (+) to upshift.
- Pull the left paddle (–) to downshift.

The instrument cluster displays your currently selected gear.

**Note:** The system stays in manual control until you make another shift selection (for example, drive [D]).

Refer to the **Transmission** chapter in your **Owner's Manual** for more information.

## 4. SERVICE ENGINE SOON LIGHT

 Illuminates briefly when you switch the ignition on. If the light remains on or blinks after you start the engine, the On-Board Diagnostics (OBD-II) system detects a problem. Drive in a moderate fashion and contact an authorized dealer as soon as possible.

## 5. RIGHT VEHICLE INFORMATION DISPLAY\*

Displays information about Entertainment, Phone and Navigation\*. Use the right, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the **MyFord Touch®** chapter in your **Owner's Manual** for more information.

## 6. STEERING WHEEL CONTROLS


### Audio Controls

Press **VOL +** or **–** to increase or decrease volume levels.

Press **◀▶** to access the next or previous radio station preset, CD track or preset satellite radio channel\*.

### Voice Controls

Press  to access voice recognition.

Press  to access phone mode or to answer a call.

Press  to disconnect a phone call.

## 7. POWER TILT AND TELESCOPE STEERING COLUMN

Use the 4-way control on the side of the steering column to adjust the position.



\*if equipped

# INSTRUMENT PANEL




## 8. PUSH-BUTTON START\*


Allows you to start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again to switch the engine off.


**Note:** Your intelligent access key must be inside the vehicle for keyless starting to work. It sounds the horn twice when you exit the vehicle with the transmitter and the vehicle is running.

## 9. FRONT VIEW CAMERA\*

Provides a video image of the area in front of your vehicle.

Place the transmission in any gear except reverse (R). An image of the front of your vehicle appears once you press the camera enable button . The area displayed on the screen may vary according to your vehicle's position or road condition.

Press the camera button  to toggle between different views:


- **Front Normal View:** Provides an image of what is directly in front of your vehicle.
- **Front Split View:** Provides an extended view of what is in front of your vehicle. Access this view by pressing the camera button  from the **Front Normal View** screen.

**Note:** The front camera can be activated when traveling below 6 mph (10 km/h) in park (P), neutral (N) and drive (D) by pressing the camera button. Traveling above 6 mph (10 km/h) turns off the camera.

See the **Parking Aids** chapter of your **Owner's Manual** for details.

## 10. HAZARD CONTROL

## 11. ELECTRIC PARKING BRAKE\*

The electric parking brake replaces the conventional hand brake. The operating switch  is on the center console.

To apply the electric parking brake, pull the switch up. The brake system warning lamp lights to confirm that the parking brake has been applied.

To release the electronic parking brake manually, switch the ignition on, press the brake pedal and then press the electric parking brake control down. The brake system warning lamp turns off.



Your vehicle automatically releases the parking brake when all of the following conditions exist:


- The driver door is closed.
- The vehicle is accelerated.
- There are no faults detected in the parking brake system.

**Note:** If the electric parking brake warning lamp stays on, then the electric parking brake did not automatically release. You must release the electric parking brake using the electric parking brake switch.

## 12. ACTIVE PARK ASSIST\*

The system detects an available parallel or perpendicular parking space and automatically steers your vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly guides you to park your vehicle.

- To use the parallel parking feature, press the  button once.
- To use the perpendicular parking feature, press the  button twice.

Park out assist automatically steers your vehicle out of a parallel parking space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to enter traffic. To use the park out assist feature, press the  button once.

**Note:** The driver is always responsible for controlling the vehicle, supervising the system and intervening, if required.


See the **Parking Aids** chapter in the **Owner's Manual** for more details.



\*if equipped




## BEFORE YOU GET STARTED

1. Set up your owner account at **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada). Register by following the on-screen instructions. After registering you can see which services you are eligible for.
2. SYNC uses a wireless connection called  **Bluetooth®** to communicate with your phone. Turn **Bluetooth** mode on in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit **SyncMyRide.com** (U.S.), **SyncMyRide.ca** (Canada) or your phone manufacturer's website.

## PAIRING YOUR CELL PHONE WITH SYNC

In order to use the many features of SYNC, you must first connect or pair your phone with SYNC.

### To Pair Your Cell Phone for the First Time

1. Make sure that your vehicle is in park (P) and you switch your ignition and radio on.
2. Press the phone button . When the display indicates **No Phone Found**, press **OK**.
3. When **Add Bluetooth Device?** appears in the **SYNC** display, press **OK**.
4. When **Find SYNC** appears in the display, press **OK**. When prompted on your phone's display, enter the **PIN** provided by **SYNC** into your phone.
5. The display indicates when the pairing is successful.

**Note:** The system may prompt you to set your phone as the primary or favorite. The primary phone receives messages and voicemail. Download your phone book, a requirement to use the full set of voice commands, and switch on 911 Assist®.

### Tips

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to **Pairing Subsequent Cell Phones** in the **SYNC** chapter of your **Owner's Manual**.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone, and then repeating the process.

## WHY DO YOU NEED A SYNC OWNER ACCOUNT?

A SYNC owner account lets you receive the latest software updates that add new places, directions and information; and if you have questions, you'll get free customer support. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.


**Note:** Your SYNC system may offer more advanced features. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

\*if equipped


## USING YOUR CELL PHONE WITH SYNC

**Note:** Enter your phone book contacts with both first and last names to increase the ability of SYNC to select the correct contact. Remember to say the contact name exactly as it is listed in your phone book.



### Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button  and when prompted, giving a voice command.

For example, you could say **"Call Jake Smith at home"**. SYNC repeats the command back to you and dials the number.

**Note:** You can also make phone calls by pressing the voice button . When prompted, give the voice command **"Dial"**, then say the phone number.

### Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

### Do Not Disturb Mode

This feature blocks incoming calls and text messages and diverts them to your voicemail and saves text messages for later. You still have access to outgoing calls when this feature is active. Say the voice command **"Do not disturb on"** to enable and **"Do not disturb off"** to disable.


## USING SYNC TO ACCESS DIGITAL MEDIA

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

**Note:** SYNC indexes your music; the more stored information you have on your USB device, the longer it takes SYNC to index.

### Using Voice Commands to Play Music

You can use voice commands to access and play music on your digital media player when it is plugged into your media hub.

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say **"USB"**, then follow-up by saying a voice command. For a list of voice commands, say **"What can I say?"**.



# SYNC® WITH MYFORD TOUCH®\*



A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE.

## GETTING STARTED, UNDERSTANDING SYNC WITH MYFORD TOUCH

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system\*.

### Pairing Your Cell Phone with MyFord Touch

- Put the transmission in park (P) and switch on both your vehicle ignition and the radio.
- Touch **Add Phone** in the upper left corner of the touchscreen. **Find SYNC** appears on the screen and instructs you to begin the pairing process from your device.
- Make sure that *Bluetooth* is set to **On** and that your cellular phone is in the proper mode. See your phone's manual, if necessary.
- Select SYNC and a six-digit PIN appears on your device.
- If you are prompted to enter a PIN on your device, it does not support Secure Simple pairing. To pair, enter the PIN displayed on the touchscreen. Skip the next step.
- When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.
- The display indicates when the pairing is successful.

\*if equipped



### PHONE

Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.

Your phone also connects you with other features:

- Automatically connect with a 911 Operator in the event of an accident (you must switch this feature **ON** prior to an incident).
- Transfer calls seamlessly from **SYNC** to your phone as you get in or out of your vehicle.

Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.



### NAVIGATION\*

Get started with your navigation system by pressing the upper-right, green corner. The available voice-activated navigation system includes:

- SiriusXM Traffic™
- SiriusXM Travel Link™
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Some features require activation. Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.

#### Set a Destination

Set a destination on your touchscreen by using a street address, a city center, a place on the map or a point of interest (POI). The easiest way, however, is by voice.



- Press the voice button . When prompted, say **"Destination street address"**.
- The system asks you to say the full address and displays an example on-screen.
- You can then speak the address naturally, such as: **"One two three Main Street, Anytown"**.

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- Fastest:** uses the fastest moving roads possible.
- Shortest:** uses the shortest distance possible.
- Eco (EcoRoute):** uses the most fuel efficient route.

\*if equipped



# SYNC® WITH MYFORD TOUCH®\*



## CLIMATE

SYNC with MyFord Touch controls the temperature, airflow direction, fan speed, and activates other climate features like heated front seats for you and your passenger.

To use voice commands to operate climate, say a voice command like **“Climate set temperature 72 degrees”** and MyFord Touch makes that adjustment.

### Set Your MyTemp\*

- Touch the lower-right, blue Climate corner on the touchscreen.
- Press **+** or **-** to adjust the temperature.
- Touch and hold **MyTemp** to select a temperature you would like your vehicle to remember and maintain for you.



## ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you are behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM, FM, SiriusXM and other media sources.

### Set Your Radio Presets

- Touch the Entertainment corner on the touchscreen.
- Touch **FM**.
- Touch **Direct Tune**.
- Enter the desired station and touch **Enter**.
- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. The sound mutes briefly and returns when the system saves the station.



### Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- USB
- Bluetooth streaming
- SD card\*
- Line in

Refer to the **MyFord Touch** chapter in your **Owner's Manual**, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



\*if equipped

# COMFORT

## CLIMATE CONTROLLED FRONT SEATS\*

On touchscreen-equipped vehicles, press the Climate corner on your touchscreen. Press the or seat icon repeatedly to cycle through the various settings and off.

For non-touchscreen vehicles, use the hard button controls (indicated by the same symbols). Press the controls repeatedly to cycle through the various settings and off. More lights indicate warmer or cooler settings.

## MEMORY FUNCTION\*



The memory function allows a one touch recall of personalized memory features including the driver seat, power mirrors and steering column\*. Use the memory controls on the driver's door to program and then recall memory positions. To program position **1**, press and hold **1** until you hear a tone. Use this same procedure to set positions **2** and **3** by pressing the respective buttons. You can now use these controls to recall the set memory positions.

You can also program your memory seats to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved position. See the **Seats** chapter in your **Owner's Manual** for more details.

## MOONROOF\*

The moonroof controls are on the overhead console and have a one-touch open and close feature. To stop its movement during one-touch operation, press the control a second time.



### Moonroof open button:

Press and release to open. The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the open control again.



### Moonroof close button:

Press and release to close. The moonroof stops short of the fully closed position. To close the moonroof fully, press and release the close control again.



### Moonroof vent button:

Press and release to vent.

## Sunshade Controls\*



### Sunshade open button:

Press and release to open. The power shade automatically opens with the moonroof. You can also open the power shade with the moonroof closed. The sunshade stops short of its fully opened position for the comfort of rear passengers. To open the sunshade fully, press the control again.



### Sunshade close button:

Press and release to close.



\*if equipped

# CONVENIENCE



## AUTOWIPERS\*

 
To switch this feature on, move the wiper controls to intermittent wipe. The autowiper system turns the wipers on only when moisture is present on the windshield. The wiper speed depends on how much moisture the system detects and the sensitivity setting.

- A low sensitivity means the wipers turn on when the system detects a large amount of moisture on the windshield.
- A high sensitivity means the wipers turn on when the rain sensor detects a small amount of moisture on the windshield.
- To switch this feature off, use your wiper controls. To change this feature to intermittent wipe every time you use your wipers, use the information display.
- To switch intermittent wipe back to autowipers, use the information display.

**Note:** Make sure you switch off this feature before entering a car wash.

## REMOTE START\*

Remote start allows you to start your vehicle from outside your vehicle using your remote transmitter. To start, press  and then press  twice within three seconds. Once inside, apply the brake

while pressing the **START STOP** button. Shift into drive (D) and go. If you have an integrated keyhead transmitter, insert the key into the ignition and switch the ignition on as you normally would before driving. To switch the engine off from outside your vehicle after using your remote start, press  once.




 

You can personalize your settings within the information display. For complete information, refer to the **Information Display** chapter in your **Owner's Manual**.

## INTELLIGENT ACCESS\*

To unlock and open a door, pull an exterior door handle. Make sure not to touch the lock sensor area on the front of the handle. Touch the top of the door handle to lock your vehicle. To unlock and open the liftgate, press the exterior liftgate release button on the top of the liftgate pull-cup handle. The intelligent access transmitter also contains a mechanical key blade that can be used to unlock the driver door, if necessary.

**Note:** Your intelligent access key must be inside the vehicle for keyless starting to work. It sounds the horn twice when you exit the vehicle with the transmitter and the vehicle is running.

## INTEGRATED KEYHEAD TRANSMITTER AND INTELLIGENT ACCESS\* REMOTE ENTRY ICONS

- Press  once to lock all doors. Press again within three seconds to confirm you locked all doors.
- Press  once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press  to activate the panic alarm. Press again or switch on the ignition to deactivate.
- Press  twice within three seconds to open the liftgate.
- **Car finder:** Press  twice within three seconds to locate your vehicle. The horn sounds and the direction indicators flash.



\*if equipped

## DUAL ZONE AUTOMATIC CLIMATE CONTROLS\*

Press the AUTO button to turn on automatic operation, and set your preferred temperature by using the left-hand side **TEMP** (+) or (-) button. The system adjusts fan speed, air distribution, air conditioning operation, and selects outside air or recirculated air to heat or cool the vehicle in order to maintain the desired temperature.

A front passenger can adjust the temperature on the passenger side by pressing the right-hand side **TEMP** (+) or (-) button.

**To return back to single zone:** Press and hold the **AUTO** button for more than two seconds.

## EASYFOLD® REAR FOLDING SEATS\*

The controls are on the left-hand side (accessible from the liftgate area). Press and hold the top control to lower the left seatback, or the bottom control to lower the right seatback. To unfold the seatbacks, rotate each seatback up until it latches in the upright position. The seatback clicks when it locks into position.



**Note:** This feature is operational when the vehicle is in park (P) and the liftgate has been open for less than 10 minutes.


 
## 110-VOLT POWER OUTLET\*

The power outlet is on the rear of the center console. You can use it to power electrical devices that require up to 150 watts.

\*if equipped

## POWER LIFTGATE\*

You can use the power feature to open or close your liftgate.

- Press the  button on the instrument panel.
- Press the remote control  button twice within three seconds.

## HANDS-FREE POWER LIFTGATE OPERATION\*

**To Open Your Liftgate Hands-Free While You Are at the Liftgate**

1. Make sure you have an intelligent access transmitter\* within 3 feet (1 meter) of the liftgate.
2. Move your foot under and away from the center rear bumper in a single-kick motion. Do not move your foot sideways or the sensors may not detect the motion.

**Note:** Allow the power system to open the liftgate after pressing the control. Manually pushing or pulling the liftgate may activate the system's obstacle detection feature and stops the power operation.





# FUNCTION

## FRONT AND REAR PARKING AIDS\*

The front sensors are active when the transmission is in any position other than park (P). When your vehicle approaches an object, a warning tone sounds. When your vehicle moves closer to an object, the warning tone repeat rate increases.

The rear sensors are only active when the transmission is in reverse (R). As your vehicle moves closer to the obstacle, the rate of the audible warning increases.

**Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your **Owner's Manual** for safety information, more details and limitations.

## LANE KEEPING SYSTEM\*


This system notifies you to stay in your lane through the steering system and the instrument cluster display when the front camera detects an unintentional drift out of your lane is likely to occur.

Select from three notification modes within your information display:

**Alert:** Provides a steering wheel vibration.

**Aid:** Provides an assistance steering torque input toward the lane center.

**Alert + Aid:** Provides an assistance steering torque input toward the lane center. If your vehicle continues drifting out of the lane, the system provides a steering wheel vibration.

Press the  button located on the left steering wheel lever to switch the system ON or OFF.

## DRIVER ALERT\*



The system automatically monitors your driving behavior using various inputs including the front camera sensor. If the system detects that your driving alertness is reduced below a certain threshold, the system will alert you using a tone and a message in the cluster display.

Switch the system on or off using the information display. When activated, the system monitors your alertness level based upon your driving behavior in relation to the lane markings and other factors.

See the **Driving Aids** chapter in your **Owner's Manual** for more information.

## TILTING HEAD RESTRAINTS\*

The front head restraints tilt for extra comfort. To tilt the head restraint, do the following:

1. Adjust the seatback to an upright driving or riding position.
2. Pivot the head restraint forward toward your head to the desired position.

After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, un-tilted position.



\*if equipped

## REAR VIEW CAMERA\*

The feature provides a video image of the area behind the vehicle. The image automatically appears in the touchscreen when the vehicle is in reverse (R) and operates at speeds below 3 mph (5 km/h). The system uses green, yellow and red guides to alert you of your proximity to objects.

## ADAPTIVE STEERING\*

The adaptive steering system optimizes your vehicle's steering based on your steering wheel input, changes in vehicle speed and other conditions. You can change the settings in the information display. Refer to your **Owner's Manual** for more details.

**Note:** The adaptive steering system includes a locking device that may make a sound when you start or switch off your vehicle. This is completely normal.

## BLIS® (BLIND SPOT INFORMATION SYSTEM) WITH CROSS TRAFFIC ALERT\*

BLIS aids you in detecting vehicles that may have entered into your blind spot area on both sides of the vehicle, extending rearward from the exterior mirrors to approximately 10 feet (3 meters) beyond the bumper.

Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). It detects approaching vehicles from approximately 46 feet (14 meters) away.

The Blind Spot Information and cross traffic alert systems illuminate a yellow alert indicator in the outside mirror on the side of your vehicle the approaching vehicle is coming from. In addition, the yellow alert indicator flashes if the direction indicator is ON when a Blind Spot Warning System alert is active.

**Note:** The alert indicator dims when the system detects nighttime darkness. Cross traffic alert also sounds a series of tones and a message appears in the information display indicating a vehicle is coming from the right or left. NEVER use BLIS or cross traffic alert as a replacement for using the interior and exterior mirrors and looking over your shoulder before changing lanes. The systems are not replacements for careful driving. Use both systems only as an assist.

\*if equipped

## SECURICODE™ KEYLESS ENTRY SYSTEM\*

Invisible until touched, the keypad allows you to lock or unlock the doors. Make sure you have your five-digit factory code located on your owner's wallet card in the glove box.

### To Unlock the Driver Door

Enter the factory-set 5-digit code or your personal code. You must press each number within five seconds of each other. The interior lamps light.

### To Unlock All Doors

Enter the factory-set code or your personal code, then press **3-4** within five seconds.

 
### To Lock All Doors

Press and hold **7-8** and **9-0** at the same time (with the driver door closed). You do not need to enter the keypad code first.

### To Release the Liftgate

Enter the factory-set code or your personal code, then press **5-6** within five seconds.

See the **Locks** chapter in your **Owner's Manual** for more information on how to use **SecuriCode**.

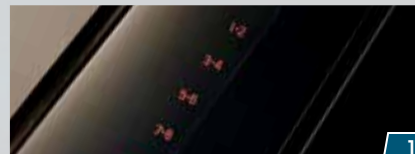



# ESSENTIAL INFORMATION

## EASY FUEL® SYSTEM



### When Fueling Your Vehicle

1. Put the vehicle in park (P) and switch off the ignition.
2. Press the center-rear edge of the fuel filler door and release to open.
3. Slowly insert the fuel filler nozzle fully into the fuel system to open both doors. Leave the nozzle fully inserted until you have stopped pumping fuel. Allow about 5-10 seconds after pumping fuel before removing the fuel filler nozzle. This allows residual fuel to drain back into the fuel tank and not spill onto the vehicle.
4. Slowly remove the fuel filler nozzle and close the fuel filler door.

## REFUELING WITH A PORTABLE FUEL CONTAINER

When using a portable fuel container, slowly insert the fuel funnel (located in the spare wheel storage tray) and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. You can purchase extra funnels from your authorized dealer. Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage.

## FUEL TANK CAPACITY AND FUEL INFO

Depending on your drive type, your vehicle's fuel tank capacity can vary. All-wheel drive vehicles have an 18.5 gallon (70.0L) fuel tank capacity. Front-wheel drive vehicles have an 18.4 gallon (69.5L) fuel tank capacity. Use only "Regular" unleaded gasoline with a minimum octane rating of 87 or higher. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.

### MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like speed restrictions, limited

 
volume levels and safety belt reminders. For complete information, refer to the **MyKey** chapter in your **Owner's Manual**.

### AUTO-START-STOP\*

The system helps reduce fuel consumption by automatically shutting off and restarting the engine when your vehicle is stopped. The engine restarts automatically when you release the brake pedal.

To switch this feature off, press the (A) auto-start-stop button on the center console. The button lights. Press the button again to restart, or restart the vehicle. See the **Unique Driving Characteristics** chapter in your **Owner's Manual** for more details.


### CONFIGURABLE DAYTIME RUNNING LAMPS\*

When you switch the feature on in the information display, daytime running lamps turn on when you are driving, the lighting control is in the autolamps position  and the headlights are off.

You can switch the Configurable Daytime Running Lamps feature ON or OFF using the information display controls. See the **Lighting** chapter in your **Owner's Manual** for complete information.

*\*if equipped*

## TIRE PRESSURE MONITORING SYSTEM

Your vehicle has a tire pressure monitoring system that lights a low tire pressure warning light  in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure.

Refer to the **Tire Pressure Monitoring System** section in the **Wheels and Tires** chapter of your **Owner's Manual** for more information.

## LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are beneath the carpeted floor panel in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the **Changing a Road Wheel** section in the **Wheels and Tires** chapter in your **Owner's Manual**.

## OPEN WINDOW BUFFETING

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

*\*if equipped*



## ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

## PRE-COLLISION ASSIST SYSTEM\*

This system alerts you of certain collision risks. The system's sensor detects your vehicle's rapid approach to other vehicles traveling in the same direction as your vehicle.

When your vehicle rapidly approaches another vehicle, a red warning light flashes and a tone sounds. The brake support system assists you in reducing any collision speed by pre-charging the brakes. If the risk of collision continues to increase after the audio-visual warning, the brake support prepares the brake system for rapid braking. The system does not automatically activate the brakes, but if the brake pedal is pressed even lightly, the brakes apply full stopping power.

## TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to **Towing the Vehicle on Four Wheels** in the **Towing** chapter of your **Owner's Manual**.

