

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

United States
Ford Customer
Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing
impaired: 1-800-232-5952)
fordowner.com

 @FordService

Canada
Ford Customer
Relationship Centre
1-800-565-3673 (FORD)
ford.ca

 @FordServiceCA

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



FordOwner.com



Ford.ca



October 2014
First Printing
Quick Reference Guide
F-150
Litho in U.S.A.
FL3J19G217 AA



2015 F-150 QUICK REFERENCE GUIDE



Commonly Used Voice Commands

SYNC® Say the Word. Press the voice button  and then say:

BASIC COMMANDS

- What can I say?
- List of commands
- Main menu
- Previous page
- Next page
- Go back
- Exit
- Help

ENTERTAINMENT

- Audio list of commands:
You can also get detailed lists of commands for radio, USB, *Bluetooth*® audio, SiriusXM and SD card*
- Radio
 - <On/Off>
 - FM <87.9-107.9>
 - FM preset <#>
- CD
 - Play track <1-512>
 - Shuffle <On/Off>
- USB
 - Play song <name>
 - Play album <name>
- SiriusXM
 - <Channel name>
 - Preset <#>

PHONE

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb
- Listen to text messages (phone-dependent feature)

CLIMATE**

- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate automatic

NAVIGATION**

- Navigation list of commands
- Destination street address <number, name, city>
- Destination home
- Voice guidance <On/Off>
- Navigation voice volume <increase/decrease>
- Repeat instruction
- Show <map/north-up/heading-up/3-D>
- Destination <favorites/home/intersection>
- Where am I?
- Zoom <In/Out>
- Detour

**if equipped*

***available only with MyFord Touch*

Some services may not be available in your area. Refer to your Owner's Manual, visit the website or call the toll-free number.

FOR U.S. CUSTOMERS:

Visit SyncMyRide.com or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

FOR CANADIAN CUSTOMERS:

Visit SyncMyRide.ca or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).



4 – 9	INSTRUMENT PANEL
10 – 11	SYNC
12 – 16	SYNC WITH MYFORD TOUCH
17	CONVENIENCE
18	COMFORT
19 – 21	FUNCTION
22 – 23	ESSENTIAL INFORMATION

Table of Contents

Instrument Panel



1 POWERSCOPE® POWER-FOLDING, POWER-ADJUSTABLE TELESCOPING MIRRORS*

To telescope your mirrors, make sure you switch your vehicle on (with the ignition in accessory mode or the engine running) and then:

1. Press and release the or control.

2. Press the adjustment control to position the mirrors.

- Press the left arrow to extend the mirrors out. Press the right arrow to retract the mirrors in.
- Press the up or down arrow to fold the mirrors toward the window glass. Press the up or down arrow to fold the mirrors out.

Note: Once you press the control to use the power telescoping mirrors feature, you lock out other mirror functions for a short time. Press the control again to unlock other power mirror features, or wait until the lock out times out.

2 LED SIDE-MIRROR SPOTLIGHTS CONTROL*

The spot lamps are on the forward-facing side of the exterior mirrors.

With the lighting control switch in the parking lamps, headlamps or autolamps position, press the buttons located above the lighting control switch to activate the left-hand or right-hand side spot lamps. Once switched on, the

spot lamps light the area in front of and to the side of your vehicle. Adjust the aim of the spot lamps by moving the exterior mirrors' positions.

LIGHTING CONTROL

- Headlamps off.
- Parking lamps on.
- Headlamps on.
- Autolamps on. Automatically switches the exterior lamps on or off based on available daylight.
- Fog lamps on. Press the control to switch the fog lamps on or off. You can switch the fog lamps on when the lighting control is in any position except off and the high beams are not on.

ELECTRIC PARKING BRAKE*

- 4 On certain models, the electric parking brake replaces the conventional foot brake. The operating switch is on the instrument panel, to the left of the steering column.

To apply the electric parking brake, make sure the transmission is locked into park (P), and then pull the switch up. The brake system lamp then lights to confirm that the parking brake is applied.

To release the electric parking brake, switch the ignition on, press the brake pedal, and then manually press the switch down. The brake system lamp then turns off to confirm the parking brake is released.

5 ADJUSTABLE FOOT PEDALS*

Move the brake and accelerator pedals by using the control located on the left side of the steering column.

Press the left arrow to move the pedals away from you.

Press the right arrow to move the pedals closer to you.

Adjust the pedals only after stopping your vehicle and placing it in park (P).

6 INFORMATION DISPLAY PRODUCTIVITY SCREEN*

Monitor and control important vehicle information and features through the information display.

- Press the up or down arrows to scroll through and highlight the options within a menu.

- Press the right arrow to enter into a sub-menu.

- Press the left arrow to exit a menu.

- Press **OK** to choose and confirm a setting or message.

You can even customize your views using MyView.

Refer to the *Information Displays* chapter in your *Owner's Manual* for more details.

7 ADAPTIVE CRUISE CONTROL*

Automatically adjust your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. Set the gap distance between your vehicle and the vehicle in front of you by pressing **GAP+** or **GAP-** or controls on the steering wheel.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to the *Cruise Control* chapter in your *Owner's Manual* for more details.

8 POWER TILT-TELESCOPE STEERING COLUMN*

Use the control on the side of the steering column to adjust the position.

To tilt: Press the top or bottom of the control.

To telescope: Press the front or rear of the control. The column moves to the full up and away position when you switch the ignition off. It returns to your previous setting when you switch the ignition on. You can enable or disable this feature in the information display.

Instrument Panel



AUDIO AND MEDIA CONTROLS

- 9**
- Press **VOL+** or **VOL-** to increase or decrease your volume level.
 - Press **M** repeatedly to access all possible media sources.
 - Press to access voice recognition*.
 - Press to access SYNC® phone features*.

PUSH-BUTTON START*

- 10**
- Press the brake pedal and then press the **START STOP** button.

An indicator light comes on when the ignition is on and when the engine starts.

If you leave your vehicle idling for an extended period of time, the engine and ignition automatically turn off.

Before the engine shuts down, a message appears in the information display allowing the driver time to override the shutoff feature.

Note: Your intelligent access transmitter must be inside your vehicle to switch the ignition on and start the engine.

ELECTRONIC SHIFT 4WD SYSTEM*

- 11**
- The electronic shift 4WD system allows you to choose between 2WD, 4x4 AUTO*, 4x4 HIGH or 4x4 LOW.

2H (2WD) sends power to the rear wheels only and should be used for street and highway driving. Provides optimal smoothness and fuel economy at high speeds.

4A (4x4 AUTO)* provides electronic control four-wheel drive with power delivered to the front and rear wheels, as required, for increased traction. This is appropriate for all on-road driving conditions, including dry road surfaces, but is especially useful on wet pavement, snow, dirt or gravel.

4H (4x4 HIGH) helps provide extra traction while driving in snow or on icy roads or off road situations. This mode is not intended for use on dry pavement.

4L (4x4 LOW) uses extra gearing to provide maximum power to all four wheels at reduced speeds. Intended only for off-road applications such as deep sand, steep grades or pulling heavy objects. 4L (4x4 LOW) does not engage while the vehicle is moving above 3 mph (5 km/h); this is normal and should be no reason for concern.

Refer to *Shifting to or from 4L (4x4 LOW)* in the *Four-Wheel Drive* chapter of your *Owner's Manual* for details.

ELECTRONIC LOCKING DIFFERENTIAL*

When engaged, the system temporarily locks the rear axle, allowing both rear wheels to turn at the same speed. This function helps to provide additional traction as needed.

Note: Do not use this feature on dry surfaces.

To use:

4X4: Pull the 4WD control.

4X2: Twist the control to **ON**.

The indicator light continuously displays in the cluster when the **ELD** is active.

INTEGRATED TRAILER BRAKE CONTROLLER*

- 12**
- The fully integrated trailer brake controller assists in smooth and effective trailer braking by powering the trailer's electric or electric-over hydraulic brakes with a proportional output based on the towing vehicle's brake pressure.

The **Gain** setting is used to set the trailer brake controller for specific towing conditions and should be changed as towing conditions change. Changes to towing conditions include trailer load, vehicle load, road conditions and weather.

Use the **Gain +** and **-** adjustment buttons to increase or decrease the braking feature's power output to the trailer in 0.5 increments.

Adjust the **Gain** by:

1. Pressing the **Gain+** or **Gain-** buttons to increase or decrease the setting to the desired starting point. For example, a **Gain** setting of 6.0 is a good starting point for heavier loads.
2. Test the adjusted **Gain** setting again after you make adjustments. When testing:
 - A. In a traffic-free environment, tow the trailer on a dry, level surface at a speed of 20-25 mph (30-40 km/h) and squeeze the manual control lever completely.
 - B. If the trailer wheels lock up (the tires will squeal), reduce the **Gain** setting. If the trailer wheels turn freely, increase the **Gain** setting.
 - C. The proper **Gain** setting will be at the point just below trailer wheel lock-up.

Note: If towing a heavier trailer, trailer wheel lock-up may not be attainable even with the maximum **Gain** setting of 10.

360-DEGREE CAMERA*

See page 19 for details.

Instrument Panel




14 15 16 17 18 19

14 HILL DESCENT CONTROL

 
The feature helps you set and maintain vehicle speed while descending steep grades on various surface conditions. This feature can maintain vehicle speeds on downhill grades between 2 mph (5 km/h) and 20 mph (32 km/h). At speeds between 20 mph (32 km/h) and 40 mph (64 km/h), the system remains armed, but descent speed cannot be set or maintained. At speeds above 40 mph (64 km/h), the system will turn off and you need to switch the system back on to use.

To switch this feature on and set the descent speed, do the following:


1. Press and release the hill descent button  located on the instrument panel. A light in the control turns on and a tone sounds.
2. To increase descent speed, press the accelerator pedal until you reach the desired speed. To decrease descent speed, press the brake pedal until you reach the desired speed. For more detailed information, please refer to your *Owner's Manual*.

15 ADVANCETRAC® WITH ROLL STABILITY CONTROL™ (RSC®) STABILITY ENHANCEMENT SYSTEM

The AdvanceTrac stability system helps you to keep control of your vehicle when on a slippery surface. The electronic stability control portion of the system helps avoid skids and lateral slides. Roll

stability control helps avoid a vehicle rollover. The traction control system helps avoid drive wheel spin and loss of traction. You can switch the system off manually . Refer to your *Stability Control* chapter in your *Owner's Manual* for more details.

TRAILER SWAY CONTROL*

The feature applies your vehicle brakes at individual wheels and, if necessary, reduces engine power. If the trailer begins to sway, the stability control light flashes . The first thing to do is slow your vehicle down, then pull safely to the side of the road and check for proper tongue load and trailer load distribution. For more information, please refer to the *Towing* chapter in your *Owner's Manual*.

16 TOW/HAUL MODE

This feature helps improve transmission operation when towing a trailer or hauling a heavy load.

To switch tow/haul on, press the button (on the side of the gearshift lever on a floor-shift transmission [as shown], or on the end of the column-shift transmission lever).

The TOW HAUL indicator light appears in the instrument cluster.

To switch off, press the button again. Refer to the *Transmission* chapter in your *Owner's Manual* for more information.

PROGRESSIVE RANGE SELECTION

With the gearshift lever in drive (D), press the (–) button on your transmission gearshift lever or column shifter to switch progressive range selection on. The available and selected gears light in the information display. All available gears show with the current gear indicated. Press the (–) button again to lock out gears beginning with the highest gear.

For example, press the (–) button twice to lock out the 6th and 5th gears. Only the available gears display and the transmission automatically shifts between the available gears.

Press the (+) button to unlock gears to allow the transmission to shift to higher gears. The transmission will shift automatically within the gear range you select.

17 HAZARD WARNING FLASHER CONTROL

18 AUTO START-STOP*

On certain models, the system helps reduce fuel consumption by automatically shutting off and restarting the engine while at a stop. The engine will restart automatically when you release the brake pedal.

To switch this feature off, press the **Auto Start-Stop** button , located on the center console. The button lights. Press the button again to restart.

Note: The system automatically turns off when you switch on tow/haul or 4x4 mode.

See the *Unique Driving Characteristics* chapter in your *Owner's Manual* for more details.

19 110-VOLT, 400-WATT POWER OUTLET

You can use the power outlet when your vehicle is running to power many electric devices, including but not limited to:

- Electric hand drills.
- Rechargeable power tools.
- Video games.
- Laptops.
- Television screens.

Other power points and outlets are in the center console. See the *Auxiliary Power Points* chapter in your *Owner's Manual* for details.

SYNC®*

GETTING STARTED WITH YOUR SYNC SYSTEM


SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. SAY THE WORD.

BEFORE YOU GET STARTED

1. Set up your owner account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering, you can see what services you may be eligible for.
2. SYNC uses a wireless connection called **Bluetooth®** to communicate with your phone. Switch *Bluetooth* mode on in your phone's menu options. This lets your phone find SYNC. For more details on setting up your phone with SYNC, visit SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada), or your phone manufacturer's website.

PAIRING YOUR PHONE WITH SYNC

In order to use many of the features of SYNC, you must first pair and connect your phone with SYNC. To pair your phone for the first time:

1. Make sure that your vehicle is in park (P) and you switch on your ignition and radio.
2. Press the phone button . When the display indicates that the system does not have a paired phone, press **OK**.
3. When **Find SYNC** appears in the display, press **OK**.
4. Put your phone into *Bluetooth* discovery mode. See your device's manual, if necessary.
5. When prompted on your phone's display, enter the six-digit PIN provided by SYNC in the radio display.
6. The display indicates when the pairing is successful.

*if equipped

The system may prompt you to:

- Set your phone as the primary or favorite (the primary phone receives messages and voicemail).
- Download your phone book (required to use the full set of voice commands).
- Switch on 911 Assist®.

TIPS

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to Pairing Subsequent Phones in the SYNC chapter of your *Owner's Manual*.
- If you experience pairing problems, try performing a clean pairing by deleting your device from SYNC and deleting the SYNC connection from your phone, and then repeat the process.

 
WHY DO YOU NEED A SYNC OWNER ACCOUNT?

A SYNC owner account is a requirement if you want to take advantage of the many personalization features, such as saving your favorites. Receive the latest software updates that add new places, directions and information; and if you have questions, you also receive free customer support. For more information, refer to your *Owner's Manual*, visit the website or call the toll-free number. See the inside front cover of this guide for details.

 
USING YOUR PHONE WITH SYNC

Note: You can download your phone book to make phone calls with voice commands by name.


MAKING A PHONE CALL

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, give a voice command.

For example, you could say "Call Jake Smith at home". When the system confirms the number, say "Dial" to initiate the call.

Note: You can also make phone calls by pressing the voice button . When prompted, give the voice command "Dial" and then verbally say the phone number.

ANSWERING INCOMING CALLS

Whenever you have an incoming call, you will be able to see the name and number of the person calling in your display. Press the phone button to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

USING SYNC TO ACCESS DIGITAL MEDIA

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

Note: SYNC indexes all of your music. The more music that is stored on your device, the longer it takes SYNC to index. You can then use voice indexing to find a specific song, artist, playlist or genre when using the USB port to hard-wire your media device. When using a *Bluetooth* connection, voice indexing is not available.




SYNC® with MyFord Touch®*



GET IN TOUCH USING YOUR FOUR-CORNER TOUCHSCREEN

GENERAL TIPS

- Press the home icon  at any time to return to your home screen.
- Large knobs and buttons are easy to use, even when you wear gloves.
- For a list of commonly used voice commands and additional support (including toll-free phone numbers and websites), see the inside front cover.

A REVOLUTIONARY WAY TO CONNECT WITH YOUR TRUCK

GETTING STARTED, UNDERSTANDING SYNC WITH MYFORD TOUCH

The four-corner, four-color touchscreen provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation* system. Each feature has its own corner represented by its own color. The touchscreen works the same way as traditional controls, knobs and buttons do.

For easy interaction, press the corners (Phone, Navigation*, Entertainment and Climate) to personalize your vehicle features and settings all in one place.

*if equipped

PHONE

Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you do not need to know the phone number. Instead, say the name of the person you want from your contacts.

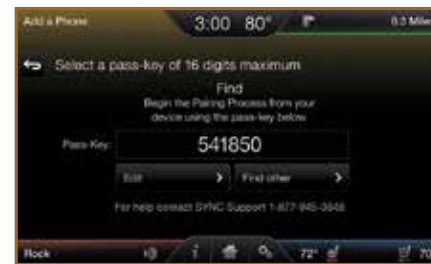 
Your phone connects you with other features:

- Automatically connects with a 911 Operator in the event of an accident (you must switch the system on prior to an event).
- Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.



PAIRING YOUR PHONE

- Touch **Add Phone** in the upper left corner of the touchscreen. **Find SYNC** appears on the screen and instructs you to begin the pairing process from your device.
- Make sure that *Bluetooth* is set to On and that your cellular phone is in the proper mode. See your device's manual, if necessary.
- If prompted to enter a PIN on your device, it does not support Secure Simple Pairing. To pair, enter the PIN displayed on the touchscreen. Skip the next step.
- When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.
- The display indicates when the pairing is successful.



SYNC® with MyFord Touch®*



NAVIGATION*

Get started with your navigation system by pressing the **upper-right, green corner**.

The available, voice-activated navigation system includes:

 
- SiriusXM Traffic™
- SiriusXM Travel Link™
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Some features require a subscription. Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.



SET A DESTINATION

Set a destination through your touchscreen by using a street address, a city center, a place on the map or a point of interest (POI). The easiest way, however, is by voice.

1. Push the voice button . When prompted, say "Destination street address".
2. The system asks you to say the full address and displays an example on-screen.
3. You can then speak the address naturally, such as: "One two three Main Street, Anytown".

While the vehicle is in park (P), you can use the touchscreen to enter a destination and narrow your choices by city or street as you type.

Choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel-efficient route.



You can also change your map views from Heading Up, North Up or 3-D.



SAVE A FAVORITE

When you find a specific address or a point of interest (POI) that you'd like to store within the system, you can save it to your Favorites. Using the touchscreen, press **Save to Favorites**. When you want to view that destination again, you can press **Favorites** to retrieve your stored locations.

Note: Some features, such as Point of Interest (POI) ratings and the ability to type in a destination, are not available while the vehicle is moving. For more complete information, see the *MyFord Touch* chapter in your *Owner's Manual*.

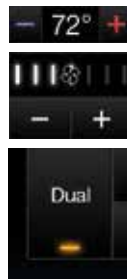 


CLIMATE

SYNC with MyFord Touch controls the temperature, airflow direction, fan speed, and activates other climate features like heated front seats for you and your passenger. To use voice commands to operate climate, say a voice command like "Climate temperature 72 degrees" and MyFord Touch makes that adjustment.

SET YOUR TEMPERATURE

- Touch the **lower-right, blue Climate corner** on the touchscreen.
- Set your exact, desired temperature by using the arrows.
- Touch and hold **MyTemp** to select a temperature that you would like the vehicle to remember and maintain for you.
- You can also adjust your climate settings by using the buttons and knobs located on the instrument panel.



SET YOUR PASSENGER'S TEMPERATURE

- Touch **Dual** to switch on the passenger temperature control.
- Touch **+** or **-** to adjust the temperature.

ADJUST CLIMATE CONTROLLED FRONT SEATS*

- Touch the heated or cooled seat icon to control the seat setting.
- More light bars indicate a higher setting.

SYNC® with MyFord Touch®*



ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you are behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM or FM, SiriusXM, and other media sources.

Set Your Radio Presets

- Touch the **lower-left Entertainment corner** on the touchscreen.
- Touch **FM**.
- Touch **Direct Tune**.
- Enter the desired station and touch **Enter**.
- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. The sound mutes briefly and then returns after the system saves the station.



USING SYNC TO ACCESS DIGITAL MEDIA

Plug in your USB media devices such as phones and MP3 players, and use SYNC to play all of your favorite music.

USING VOICE COMMANDS TO PLAY MUSIC

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say "USB", then follow-up saying a voice command.
 - USB
 - Bluetooth streaming
 - SD card*

Refer to your *Owner's Manual*, visit the website or call the toll-free number. See the inside front cover of this guide for details.

*if equipped

USB AND POWER POINT LOCATIONS

Depending on your vehicle, you may find USB and power point outlets in and around the center console, in the instrument panel and on the back of the center console for rear-seat passengers. See the *Storage Compartment* section in your *Owner's Manual*.

MEMORY FUNCTION*

The feature automatically recalls the position of the driver seat, power mirrors, adjustable pedals* and steering column*. Use the memory controls, located on the door panel, to program and then recall memory positions. To program, switch the ignition on.

1. Move the memory features to the desired positions.
2. Press and hold button 1 until you hear a tone.
3. Use this same procedure to set the second and third positions using buttons 2 and 3, respectively.

Press a control to recall the set positions.



ADJUSTABLE HEAD RESTRAINTS

Adjust the front head restraints to suit your needs. To raise, pull up on the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve button.

You may also be able to tilt the head restraint forward or backward for additional comfort. Pivot the head restraint forward to the desired location. After the head restraint reaches the forward-most tilt position, pivot it forward again to return it to its standard position.

Note: After tilting the head restraint, do not attempt to force the head restraint backward. Instead, continue tilting the head restraint forward until it releases to the upright position.



MULTI-CONTOUR FRONT SEATS WITH ACTIVE MOTION*

Using the button mounted on the outside of the front seats, or through the touchscreen, you and a front-seat passenger can adjust the massage and support settings. You can also control the intensity of the massage, increase or decrease the lumbar bolster and cushion support, and adjust the height of the bolster. To program, switch the ignition on.




 
Convenience

*if equipped

Comfort

CLIMATE CONTROLLED FRONT SEATS*

To operate the heated feature, press  to cycle through the various settings and off.

To operate the cooled feature, press  to cycle through the various settings and off. The cooled seats will function only when the engine is running.

 

Note: More lights indicate higher settings.



REAR HEATED SEATS*

The rear-seat heat controls are on the rear door armrest.

To operate the heated seats:

- Press  for maximum heat. Press again to switch the feature off.
- Press  for minimum heat. Push again to switch off.

The indicator light illuminates when you switch the heated seats on.






*if equipped




 
OVERHEAD CONSOLE*

From right to left, the controls operate the following functions:

 

Driver Lighting Controls

-  **Driver map light:** Press to switch on and off.
-  **Overhead dome light:** Press to switch on and off.
-  **Door open overhead dome light:** Press to override the dome light automatically turning on.

Moonroof Controls*


-  **Moonroof open button:** Press to open. The moonroof stops short of the fully opened position. To open the moonroof fully, press the  open button again.
-  **Moonroof close button:** Press to close.
-  **Moonroof vent button:** Press to vent.

Sunshade Controls*

-  **Sunshade open button:** Press to open. The sunshade opens automatically with the moonroof. You can also open the sunshade with the moonroof closed.
-  **Sunshade close button:** Press to close.

Note: The sunshade stops short of a full-open position for the comfort of rear passengers. To open the sunshade fully, press the control again.

Passenger Lighting Control

-  **Passenger map light:** Press to switch on and off.



360-DEGREE CAMERA*

The system consists of front, side and rear cameras. Press the control to toggle through different camera views to see:



- What is directly in front or behind your vehicle.
- Cross traffic view in front and behind your vehicle.

Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

REVERSE SENSING SYSTEM*

This system can warn you if there is an object behind the vehicle. A warning tone sounds and increases in frequency as you get closer to the object. It sounds a continuous warning when the object is less than 10 inches away. The system is not effective when the vehicle is traveling above 3 mph (5 km/h) and may not detect angular or moving objects.


Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program speed restrictions, limited volume levels and more, depending on your vehicle's level of equipment. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

ACTIVE PARK ASSIST*

The system detects an available parallel parking space and automatically steers the vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle.


To use active park assist, press the button  located on the center console near the gearshift lever.

To stop the parking procedure, grab the steering wheel or press the control again. Before using this feature and for complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

Note: The driver is always responsible for controlling the vehicle, supervising the system, and intervening, if required.

LANE KEEPING SYSTEM*

The system notifies you to stay in your lane through the steering system and the instrument cluster display when the front camera detects an unintentional drift out of your lane is likely to occur. The system automatically detects and tracks the road lane markings using a camera mounted behind the interior rear view mirror.

Press the button  located on the center console to switch the system on or off.

BLIS® (BLIND SPOT INFORMATION SYSTEM) WITH CROSS TRAFFIC ALERT*


BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. The cross traffic alert feature alerts you if a car is coming toward you when you are backing out of a parking space. BLIS and cross traffic alert will display a yellow indicator light in your exterior mirrors. Cross traffic alert will also sound tones and display messages to warn you which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.


Function

 
*if equipped


Function

REMOTE ENTRY SYSTEM FEATURES*


Press  once to unlock the driver door. Press again within three seconds to unlock all of the doors and tailgate*.

Press  once to lock all the doors and the tailgate*. Press again within three seconds to confirm that you closed and locked all of the doors and tailgate*.

Press  to activate the panic alarm. Press again or switch the ignition on to deactivate the panic alarm.

Car finder: Press  twice within three seconds. The horn sounds and the direction indicators flash. We recommend that you use this method to locate your vehicle, rather than using the panic alarm.

REMOTE TAILGATE RELEASE*

With the tailgate unlocked, you can open the power tailgate by using the remote transmitter. Press  twice within three seconds.

POWER RUNNING BOARDS*

The running boards automatically extend down and out when you open the door. This can help you enter and exit your vehicle. When you close the doors, the running boards return to the stowed position after a two-second delay. To operate the Power Deploy feature manually, use the information display.

Set the running boards in the deployed position (OUT) to access the roof. The running boards return to the stowed position and enter automatic mode when the vehicle speed exceeds 5 mph (8 km/h).

You can enable and disable the power running board feature in the information display. See the *Information Display* section in your *Owner's Manual* for details.



TAILGATE STEP*

Use the step to make entering the truck bed easier. This feature includes a step up into the box and a handle. These items store inside the tailgate.

To use:

1. Lower the tailgate.
2. Push the button in the center of the tailgate moulding. The step pops out approximately 1 inch (2.5 centimeters).
3. Pull the step out and away from the tailgate, and lower.
4. Pull the yellow handle stop out and away from the tailgate.
5. Lift the yellow handle up by rotating it from a horizontal position to a vertical one until you hear a sound, indicating that the handle locked into place.

To close:

1. Close the step panel then lift and fully close the step into the tailgate.
2. Move the yellow lever on the grab handle to the unlock position and lower the handle.

BOX SIDE STEP*

Push on the button with your foot. The step automatically extends from the stowed position.

Push the step under the truck with your foot until it fully latches. Take care not to push on the button while attempting to stow the step.



LED BOX LIGHTS*

Side-panel-mounted lights illuminate your cargo area, helping to increase visibility when loading and unloading. Use the control in the box or on the instrument panel to switch the lights on and off.



Note: The box lights turn off automatically after 10 minutes, fading gradually to off.

BOXLINK™

Your vehicle has side-panel-mounted cleats strategically located and attached to the inner box walls to help you secure your cargo.

You can take the cleats out to attach accessories, upfitter package items and more. See your *Owner's Manual* for complete details.

Essential Information

EASY FUEL® SYSTEM

The Easy Fuel system is self-sealing and therefore protected against dust, dirt, water, snow and ice. Open the fuel filler door, insert the nozzle and start fueling. Wait 5-10 seconds after pumping the fuel before removing the fuel filler nozzle. This allows the residual fuel to drain into the tank.

To refuel using a portable fuel container, use the fuel funnel. The fuel funnel location can vary, depending on your vehicle:

- **In SuperCab and SuperCrew® vehicles:** Attached behind the rear seat on the passenger side.
- **In Regular cab vehicles:** Attached behind the passenger seat. For easier access, move the passenger seat forward.

Slowly insert the funnel into the Easy Fuel system and fill the tank with fuel from the container. When done, clean the funnel or properly dispose of it. You can purchase extra funnels from your authorized dealer.

Note: Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage.

FUEL TANK CAPACITY AND FUEL TYPE

Depending on your vehicle, your fuel tank has a capacity of either 23 gallons (81.7L) or 36 gallons (136.2L). Use "Regular" unleaded gasoline with a minimum octane rating of 87. Do not use E85 fuels, because your vehicle was not designed to run on fuels with more than 15% ethanol.

To provide improved performance, we recommend premium fuel for severe duty usage, such as when towing a trailer.

FUEL-EFFICIENT TRANSMISSION

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.



TIRE PRESSURE MONITORING SYSTEM

Your vehicle comes with a tire pressure monitoring system (TPMS) that displays a low tire pressure warning light (⚠️) when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure.

Refer to the *Wheels and Tires* chapter in your *Owner's Manual* for more information.

LOCATION OF SPARE TIRE AND TOOLS

Your vehicle comes with a full-size spare tire located under the vehicle, just forward of the rear bumper. Use it for emergency use only, and be sure to replace it as soon as possible.

The jack and tools location can vary, depending on your vehicle:

- **In SuperCab and SuperCrew® models:** Attached behind the rear seat on the passenger side.
- **In Regular cab models:** Attached to the floor behind the passenger seat—for easier access, move the passenger seat forward.

For complete details on how to change your tire, refer to the *Wheels and Tires* chapter in your *Owner's Manual*.

TOWING YOUR F-150 ON FOUR WHEELS

In an emergency situation, you can flat-tow (tow your vehicle on four wheels) under the following conditions:

- Your vehicle is facing forward for towing.
- You place the transmission in neutral (N).
- You do not exceed a maximum speed of 35 mph (56 km/h).
- You do not travel beyond a maximum distance of 50 miles (80 kilometers).

Note: For other towing features including neutral tow and recreational towing, see your *Owner's Manual* for details.

ROADSIDE ASSISTANCE

Your new Ford F-150 comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.

