#### WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



United States Lincoln Customer Relationship Center 1-800-521-4140 (TDD for the hearing impaired 1-800-232-5952) lincolnowner.com

Canada Lincoln Customer Relationship Centre 1-800-387-9333 lincolncanada.com

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/ or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.





Lincoln MKC August 2014 Second Printing Quick Reference Guide Litho in U.S.A. FJ7J 19G217 AB

THE LINCOLN MOTOR COMPANY



# Quick Reference Guide

#### 2015 MKC



# Commonly Used Voice Commands

## SYNC.<sup>®</sup> Say the Word.

# Table of Contents

Press the voice button (s) on your steering wheel and then say:

# Basic Commands

### What can I say?

- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Pair my phone



- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate temperature

# Phone

#### Phone list of commands • Dial

### • Call <name> on cell/ at home/at work

- Call voicemail
- Do not disturb <On/Off> Listen to text messages
- (phone-dependent feature)
- ▶ CD

Radio

 Play track <1-512> Shuffle <On/Off>

• FM <87.9-107.9>

FM preset <#>

and SD card\*

<On/Off>

Entertainment

Audio list of commands:

You can also get detailed lists

of commands for radio. USB.

Bluetooth<sup>®</sup> audio. SiriusXM

- USB
  - Play song <name>
- Plav album <name> ▶ SiriusXM
- <Channel name>
- Preset <#>

## Navigation\*

- Navigation list of commands Destination street address
- <number, name, city> Destination home
- Navigation voice <On/Off>
- Navigation volume <increase/decrease>
- Repeat instruction
- Show <map/north-up/ heading-up/3-D>
- Travel Link list of commands
  - Traffic
- Weather
- Movie listings
- Fuel prices
- Sports <headlines/</li>
- scores/schedule>

Lincoln Experiences ......11 Liftgate......12 The Lincoln Pledge.....19



Some services may not be available in your area. For additional support, refer to your Owner's Manual, visit the website or call the toll-free number. U.S. customers: Visit SyncMyRide.com or call 1-800-392-3673 (select Option 1 or 2 for language, then press 3). Canadian customers: Visit SyncMyRide.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then press 3).

#### 2015 MKC

#### LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.





#### Adaptive Cruise Control\*

Automatically adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can set the gap distance between your vehicle and the vehicle in front of you by pressing the 1and **1** buttons on the steering wheel.

#### Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to the Cruise Control chapter of your Owner's Manual for safety information, more details and limitations.

### 2 Left Vehicle Information Display

Provides information about various systems on your vehicle. Use the left, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the Information Displays chapter in your Owner's Manual for more information.

## Instrument Panel

### 3 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or blinks after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion (avoid heavy acceleration and deceleration) and contact your authorized dealer as soon as possible.

### **1** Right Vehicle Information Display

Displays information about Entertainment, Climate, Phone and Navigation\*. Use the right, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the MvLincoln Touch<sup>™</sup> chapter in your Owner's Manual for more information.

### $5\,$ Steering Wheel Controls

#### Audio

Press VOL + or – to increase or decrease volume levels. Press SEEK to access the next or previous radio station preset, CD track or preset satellite radio channel\*.

#### Voice

Press 🕻 to answer call. Press **T** to exit phone mode or end a call. Press 🔥 to access voice recognition.

### **6** Power Tilt/Telescoping Steering Column\*

The 4-way rocker control allows you to adjust the steering wheel to your desired position.

### 7 Push Button Start

Allows you to start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. If your vehicle idles for an extended period of time, it automatically shuts down. Before the engine shuts down, a message appears in the information display. allowing the driver to override the shutdown feature. Press the button again to switch the enaine off.

Note: Your intelligent access transmitter must be inside the vehicle for the ignition to start. The keyless warning alert sounds the horn twice when you exit the vehicle with the intelligent access transmitter and the keyless vehicle is in RUN, indicating the vehicle is still on.

### 8 Push Button Shift Transmission

Your vehicle includes an electronic transmission. The shift buttons are on the center stack next to the MyLincoln Touch system.

#### 2015 MKC

#### Putting Your Vehicle in Gear

- 1. Fully press down the brake pedal.
- 2. Press and release one of the PRNDS buttons to select your gear.
- 3. The gear shift button you select lights and the information display shows a telltale of the selected gear.
- 4. Release the brake pedal and your transmission remains in the selected gear.

Note: When entering an automatic car wash, always put your vehicle into Stay in Neutral mode. To put your vehicle in Stay in Neutral mode, make sure your vehicle is stationary first and then:

- 1. Press the neutral (N) button on the shifter assembly once. The information display screen then reads "Press N to enter Stav in Neutral mode".
- 2. Press N on the shifter assembly again. The message "Stay in Neutral mode engaged" then appears in the information display and the **N** button flashes continuously to confirm your selection.
- 3. To exit Stay in Neutral mode, press another gear.



#### Using SYNC with MyLincoln Touch

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do.

Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system<sup>\*</sup>.

#### General Tips

- Press the home icon at any time to return to the home screen.
- For additional support, refer to your
  Owner's Manual, visit the website or call the toll-free number. See the inside front cover of this guide for more details.

#### Before You Get Started

- If you have the navigation SD card\*, make sure that it is inserted into the media port or your navigation cannot work.
- The touchscreen is sensitive, so make sure you press the desired icon accurately.

### Create Your Owner Account

- Set up your owner account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering, you can see what complimentary services you are eligible for.
- SYNC uses a wireless connection called Bluetooth® to communicate with your phone. Turn Bluetooth mode on in your phone's menu options. This lets your phone find SYNC. For more details on setting up your phone with SYNC, visit SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada), or your phone manufacturer's website.

#### Why You Need a SYNC Owner Account

A SYNC owner account gives you the latest software updates, and if you have questions, you'll get free customer support. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

# Pairing Your Phone with SYNC

- Make sure that your vehicle is in park (P) and you switch on your radio and ignition. Touch Add Phone in the upper left corner of the touchscreen. Find SYNC appears on the screen and instructs you to begin the pairing process from your device.
- Make sure that Bluetooth is set to ON and that your cellular phone is in the proper mode. See your phone's manual if necessary. Select SYNC and a six-digit PIN appears on your device.

- If you are prompted to enter a PIN on your device, it does not support Secure Simple Pairing. To pair, enter the PIN displayed on the
  - touchscreen. Skip the next step.
- When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN
- displayed on your cellular phone.
- 5. The display indicates when the pairing is successful.

Note: The system may prompt you to set your phone as the primary/favorite (the primary phone receives messages and voicemail); download your phone book (a requirement to use the full set of voice commands) and switch on 911 Assist<sup>®</sup>.

#### 2015 MKC

#### Tips

 Make sure you accept the request from SYNC to access your phone.

 To pair subsequent phones, please refer to Pairing Subsequent
 Phones in the MyLincoln Touch chapter of your Owner's Manual.

 If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone, and then repeating the Pairing Your Phone with SYNC process.

### Phone

Voice-control your phone to connect with many other features:

- Connect automatically with a 911 Operator in the event of an accident (feature must be on before an event).
- Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.
- Refer to the MyLincoln Touch chapter of your Owner's Manual for complete details.



# SYNC<sup>®</sup> with MyLincoln Touch<sup>TM</sup>

#### Using Your Phone with SYNC

Note: Enter your phone book contacts with both first and last names to increase the ability of SYNC to select the correct contact. Remember to say the contact name exactly as it's listed in your phone book.

#### Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button. When prompted, give a voice command. For example, you could say **"Call Jake Smith at home".** SYNC repeats the command back to you and dials the number.

Note: You can also make phone calls by giving the voice command "Dial", then verbally saying the phone number.

#### Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press ACCEPT on the touchscreen or the **C** phone button to answer an incoming call.

# Ending the Call

Press and hold the 🛟 phone button.

#### Do Not Disturb Mode

This feature blocks incoming calls and text messages, and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command **"Do not disturb on"** to enable, and **"Do not disturb off"** to disable.

# Get started with v

Get started with your navigation system by pressing the upper-right, green corner. The available, voice activated navigation system includes:



- SiriusXM Traffic
- SiriusXM Travel Link
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Note: Some features may require activation. Refer to the MyLincoln Touch chapter of your Owner's Manual for more details.

#### Set a Destination

Set a destination on your touchscreen by using a street address, city center, a place on the map or a point of interest (POI). The easiest way, however, is by voice.

- Press the voice button. When prompted, say "Destination street address".
- The system asks you to say the full address and displays an example on-screen.
- You can then speak the address naturally, such as: "One two three Main Street, Anytown".

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type. You can choose from up to three different types of routes:

- Fastest: Uses the fastest moving roads possible.
- Shortest: Uses the shortest distance possible.
- Eco (EcoRoute): Uses the most fuel efficient route.

#### Tips

- Save your favorite locations by touching "Save to Favorites".
- Change your map views from Heading-up, North-up or 3-D.

# Climate



Control the temperature, airflow direction, fan speed and other climate features for you and your front passenger. Say **"Climate temperature 72 degrees"** and MyLincoln Touch makes the adjustment.

#### Set Your Temperature

- Touch the lower-right, blue Climate corner on the touchscreen.
- Set your exact, desired temperature by using the + or – buttons.

# **Entertainment**

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM/FM, SiriusXM and other media sources.

#### Set Your Radio Presets

- Touch the Entertainment corner on the touchscreen.
- ► Touch FM.
- ► Touch Direct Tune.
- Enter the desired station and touch Enter.
- Touch Presets and then touch and hold one of the memory preset buttons to save it. The sound mutes briefly and then returns when the system saves the station.



#### Using SYNC to Access Digital Media



SYNC has a media hub with multiple inputs, allowing you to access personal media from your digital devices. Plug in your USB media devices, such as phones and MP3 players, and use SYNC to play all of your favorite music.

**Note:** SYNC indexes your music; the more information that is stored on your USB device, the longer it takes SYNC to index.

# Using Voice Commands to Play Music

- 1. Plug your media player into your USB port.
- Press the voice button (%) . When prompted, say "USB", then follow up by saying a voice command.

For more information, refer to the MyLincoln Touch chapter of your Owner's Manual. For support, visit the website or call the toll-free number. See the inside front cover of this guide for details.

#### Intelligent Access



Note: Your intelligent access transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

**To unlock and open the driver's door**, pull the front exterior door handle.

To lock all of the doors, touch and briefly hold the sensor button on top of the door handle.

To open the liftgate, press the button located in the top of the liftgate pull cup handle to unlatch the liftgate and then pull on the outside handle.

**Note:** The transmitter also contains a mechanical key blade that can be used to unlock the driver door, if necessary.

#### Power Windows: Global Opening and Closing

You can use the remote control to operate the windows with the ignition off.

Open the windows for a short time after you unlock your vehicle with the remote control. After you unlock your vehicle, press and hold the remote control unlock button to open the windows. Release the button once movement starts. Press the lock or unlock button to stop movement.

To close the windows, press and hold the remote control lock button. Release the button once movement starts. Press the lock or unlock button to stop movement.

#### Automatic Climate Control Settings

Use your remote start to start and warm or cool your vehicle. When set to AUTO, the climate control system automatically adjusts the cabin temperature during remote start.

In hot weather, the air conditioning automatically turns on. The cooled seats\* also turn on if the cooled seats are set to high (if available and set to AUTO in the information display).

In cold weather, the heat automatically turns on. The heated seats and heated steering wheel are set to high (if available and also set to AUTO in the information display). Additionally, the heated rear window and mirrors also turn on automatically.

#### Autowipers\*

If switched on, your wipers automatically turn on when the system detects moisture on the windshield. The wiper speed varies based on the amount of moisture detected and the sensitivity setting. To deactivate, switch off your wiper control. To switch on, use the wiper stalk or the information display. To adjust the sensitivity setting, use the rotary control on the stalk.

Note: Make sure you switch off this feature before entering a car wash.

#### Remote Start

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press (a) and then press (a) twice within three seconds. Once inside, shift into drive (D) and go. To switch the engine off from outside the vehicle after using your remote start, press (a) once.

As you approach or leave your vehicle, key areas of your vehicle automatically adjust, including the following personalization features.

#### Welcome Lighting

Lights select exterior lighting as you approach your vehicle. You can switch this feature on and off in your information display. See the **Information Display** chapter in your **Owner's Manual** for details.

#### Auto-folding Exterior Mirrors\*

Automatically folds the exterior mirrors toward the glass when you place the transmission into park (P). When you place the transmission into drive (D), the mirrors fold back out automatically.

#### Interior Lighting


Lights select interior lighting and ambient lighting including the push button start as you enter your vehicle. Once you start your vehicle, the information display and the touchscreen also light.

#### Easy Entry

Automatically recalls your seat and power tilt and telescoping steering wheel positions when you push the keyless start ignition button.

#### Easy Exit

Moves the driver seat rearward up to 2 inches (5 centimeters). Additionally, the power tilt and telescoping steering wheel moves to the full up position when the transmission is in park (P) and you switch off the keyless start ignition. The driver

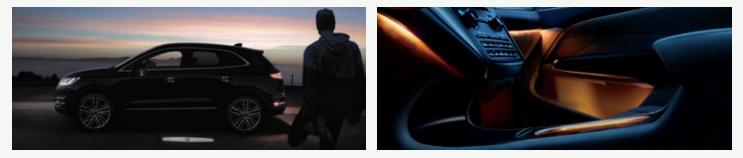

\*if equipped

#### 2015 MKC

seat and steering column return to their previous positions when you push the keyless start ignition button.

**Note:** You must have your intelligent access transmitter with you for these features to work.

#### MyLincoln Mobile<sup>TM\*</sup>

This smartphone-compatible app combines vehicle service, client support and driver convenience features. For more details, visit support.lincoln.com/mylincolnmobile.

#### Manual Liftgate

#### To Open the Liftgate

- Unlock the liftgate with the remote control or power door control. If the intelligent access transmitter is within 3 feet (1 meter) of the liftgate, the liftgate unlocks when you press the liftgate release button.
- 2. Unlock all the vehicle doors.
- 3. Press the button located inside the liftgate pull-cup handle to unlatch the liftgate.
- 4. Pull on the outside handle to raise the liftgate.

### Power Liftgate\*

#### To Open Using the Outside Liftgate Button

- Unlock the liftgate with the remote control or power door control. If the intelligent access transmitter is within 3 feet (1 meter) of the liftgate, the liftgate unlocks when you press the liftgate release button.
- 2. Press the button located in the top of the liftgate pull-cup handle.
- 3. Allow the power system to open the liftgate after pressing the control.
- 4. To close, press and release the control (pictured).

### To Open Using the Remote Transmitter

Open or close the liftgate with your remote control by pressing the button twice within three seconds. A tone sounds when the liftgate activates. You can also open or close the liftgate from inside the vehicle by pressing the control button on the instrument panel.

#### Setting the Liftgate Open Height

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.





2. Manually move the liftgate to your desired height.

3. Press and hold the control button on the liftgate

programming of the liftgate height is successful.

The next time you use the power feature to open the

liftgate, it opens to its newly programmed height.

To change the programmed height, repeat the

until you hear a tone, indicating that your

To Program a New Height

1. Open the liftgate.

process above.

#### **Obstacle Detection\***

When you use the power open or close feature and the liftgate detects a problem, a warning tone sounds and the liftgate stops.

#### The Liftgate Does Not Power Open or Close When

- ▶ It detects an object in its opening or closing path.
- ► The 12-volt battery does not have enough charge to power the liftgate.
- The ignition is on and the transmission is not in park (P).
- You are traveling at speeds at or above 3 mph (5 km/h).

**Note:** Entering the vehicle while the liftgate is closing could cause the vehicle to bounce and activate obstacle detection.

#### Hands-free Liftgate Operation\*

- Make sure you have your intelligent access transmitter within 3 feet (1 meter) of the liftgate.
- Move your foot under and back from the rear bumper, similar to a kicking (front-to-back) motion. Do not move your foot sideways or the sensors may not detect the motion.

**Note:** In vehicles equipped with the towing package, you must kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the hitch.

#### **Built-in Storage**

Cargo tie-downs, located in key areas of the rear cargo area, fold out of the way when not in use.

Umbrella tray, located on the outboard side of the driver seat, lets you store a wet umbrella and keeps it within easy reach.

Toll-ticket holder, located between the headliner and the sunvisor hinge: slide your toll ticket in the space provided.



#### Lincoln Drive Control\*

This feature intelligently integrates chassis and powertrain systems for personalized ride comfort, steering, handling, powertrain response and sound. Choose between two default settings or customize your own.

Factory default settings include Normal Handling and Normal Performance while you are in drive (D). Select sport (S) to engage Sport Handling and Sport Performance settings.

Customize your Handling and Performance settings through the information display by navigating through the menu to **Settings** > **Vehicle > Drive Control** to configure:

#### Handling

- Comfort: Provides lower steering efforts and a more fluid suspension.
- Normal: Delivers an engaging drive experience with confident handling.
- Sport: Increases handling and control with a sporty feel.

#### Performance

- Normal: Provides smooth power delivery and a refined sound.
- Sport: Increases engine and transmission responsiveness, while adding a more powerful engine tone.

### Active Park Assist with Park Out Assist\*

Active Park Assist detects an available parallel parking space and automatically steers the vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle. To use active park assist, press the button located near the shifter.

To stop the parking procedure, grab the steering wheel or press the control again. Park Out Assist determines the clearance to the front and rear of your vehicle and automatically steers your vehicle out of a parallel parking space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to enter traffic.

For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual**.

**Note:** The driver is always responsible for controlling the vehicle, supervising the system, and intervening, if required.

### SelectShift Automatic® Transmission

The transmission gives you the ability to manually change gears, if you like. To use SelectShift, press sport (S). Use the paddle shifters, located on the steering wheel, to manually select gears. Pull (+) to upshift, pull (–) to downshift. The system stays in manual control until you make another shift button selection, for example, drive (D).

#### BLIS® (Blind Spot Information System) with Cross Traffic Alert\*

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. The cross traffic alert feature warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and cross traffic alert display a yellow indicator light in your exterior mirrors and the cross traffic alert also sounds tones and displays messages to warn you from which direction vehicles are approaching. Refer to the **Driving Aids** chapter in your **Owner's Manual** for more information.

**Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to the **Owner's Manual** for safety information, more details and system limitations.



### Lan The driv auto

The system detects unintentional drifting toward the outside of the lane and alerts or aids the driver to stay in the lane through the steering system and information display. The system automatically detects and tracks the road lane markings using a camera that is mounted behind the interior mirror.

#### **Rear View Camera**

This system provides a video image of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

#### Forward Sensing System\*

This system sounds an audible warning tone if there is an obstacle near the vehicle's front bumper. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency. The front sensors are automatically activated when the gearshift is in any position other than park (P) or neutral (N) and the vehicle speed is below 6 mph (10 km/h). See the **Parking Aids** chapter in your **Owner's Manual** for complete information.

#### Configurable Daytime Running Lamps\*

When you start your vehicle with your headlamp control in the autolamps position  $\overset{\infty}{\to}$ , the configurable daytime running lamps turn on automatically while you are driving. You can configure the daytime running lamps ON or OFF using your information display controls. See the **Lighting** chapter in your **Owner's Manual** for complete information.

\*if equipped

#### Lane Keeping System\*



# **Essential Features**

#### Easy Fuel® System



With this system, you open the fuel door, insert the nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait 5 to 10 seconds from the time the refueling nozzle is shut-off until you remove the nozzle from the vehicle to allow residual fuel in the nozzle to drain into the tank. When using a portable fuel container, slowly insert the fuel funnel in the rear of the vehicle, inside the load compartment, underneath the load floor carpet and pour the fuel into the funnel.

Note: Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage. Properly clean the funnel after each use.

#### **Automatic Engine Shutdown**

Your vehicle is equipped with a feature that automatically shuts down the engine if it has been idling for an extended period of time. The ignition also turns off in order to save battery power. You can override this feature temporarily by pressing the brake or accelerator pedal, or by pressing OK or the RESET button in your information display. Refer to the Information Displays chapter of your Owner's Manual for more details

#### Towing Your Vehicle

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to Towing the Vehicle on Four Wheels section in the **Towing** chapter of your Owner's Manual for more information.

#### Fuel Tank Capacity/Fuel Info

Your vehicle has a 15.5 gallon (58.7L) fuel tank. Use only UNLEADED gasoline with a minimum of an 87 octane rating. Do not use ethanol (E85), diesel, fuelmethanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

#### **Tire Pressure Monitoring System**

Your vehicle has a tire pressure monitoring system that lights a low tire pressure warning light in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Inflating** Your Tires section in the Wheels and Tires chapter of your Owner's Manual for more information.



#### Location of Spare Tire and Tools

Your spare tire and tools are located beneath the carpeted load floor in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the Changing a Road Wheel section in the Wheels and Tires chapter of your Owner's Manual.

#### **Fuel-efficient Transmission**

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

#### Rear Window Buffeting

When just one of the windows is open, you may hear a pulsing noise. Lower the opposite window until the noise subsides.



#### **Electric Parking Brake**





The operating switch (P) replaces the conventional handbrake, and is to the left of the steering column. To use, pull the switch. The brake system warning lamp lights to confirm that you applied the electric parking brake. You can release the electric parking brake manually

by switching the ignition on, pressing the brake pedal and then pressing the electric parking brake switch. Refer to the **Brakes** chapter of your Owner's Manual for more details.

#### **Climate Controlled Front Seats**\*



To use, press the heated or the cooled seat symbol located on the touchscreen to cycle through the various settings and off. Warmer or cooler settings are indicated by more lights. The climate controlled seats function only when the engine is running.

#### Heated Steering Wheel\*

Your vehicle may be equipped with a heated steering wheel. Press the icon in your touchscreen to turn this feature on and off.

Note: The wood trim\* does not heat between the 10 and 2 o'clock positions.

### **Rear Heated Seats**\*

The rear heated seat controls are on the rear of the center console. To use, press the heated seat button to cycle through the various heat settings and off. Warmer settings are indicated by more indicator lights. The rear heated seats function only when the engine is running.

#### Tilting Head Restraints

You can adjust the front-row head restraints by pulling up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust/ release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more releases it to the upright position.

**Note:** Do not attempt to force the head restraint backward after it is in a tilted position. Instead, continue tilting it forward until the head restraint releases to the upright position.

### Second-row Seat Functionality

#### Fold the Seatback Down

Fold the outboard head restraints and lower the center head restraint first. With the seat empty, pull the lever up to fold the seatback forward. Pull the seatback upward to unfold the seatback.

#### Recline the Seatback Down

With the seat occupied, pull the lever up to recline the seatback.

Panoramic Vista Roof® with Power Sunscreen\*

To open the moonroof, press the  $\bigcirc$  open button. It stops short of the fully opened position. To open the moonroof fully, press the  $\bigcirc$  open button again. To close, press the  $\bigcirc$  close button. To vent the moonroof, press the  $\checkmark$  vent button.

The sunscreen automatically opens with the moonroof, but if the moonroof is closed, you can open the sunscreen by pressing the **T** open button. To close it, press the **T** close button.



The Lincoln Motor company is proud to introduce the Lincoln Pledge. It's the collective promise of everyone at the Lincoln Motor Company—from our trusted service advisors to expert technicians to the voice on the other end of the line should you call—that we'll be there for you and your Lincoln wherever, whenever, if ever you need us. Here are some of the ways the Lincoln Pledge comes to life and makes the journey of owning a Lincoln a rewarding one.

#### Lincoln Pledge Amenities

#### Bumper-to-Bumper Warranty

Be assured that everything between the bumpers of your Lincoln is covered for four years/50,000 miles.<sup>2</sup>

#### Lifetime Roadside Assistance

If ever you need help on the road, the Lincoln Motor Company will be there for you with 24-hour/seven-days-a-week assistance nationwide.<sup>2</sup>

#### Lincoln Complimentary Maintenance

The luxury of a two-year/24,000-mile maintenance plan including oil changes and tire rotations, scheduled to accommodate your busy life.<sup>2</sup>

#### **Complimentary Car Wash**

As an added touch, after each service visit we're happy to provide your Lincoln back to you washed and ready for the road ahead.  $^{\rm 3}$ 

#### **Complimentary Loaner**

Should your Lincoln require warranty service, we'll be there for you with a loaner vehicle.  $\!\!^3$ 

#### Service Parts Warranty

We'll stand behind our service and you with a two-year, unlimited-mile warranty on both parts and labor.<sup>2</sup>

#### 2015 MKC

### **Dedicated Support**

Lincoln Client Relationship Center and Roadside Assistance 1-800-521-4140

TDD for the Hearing Impaired 1-800-232-5952

#### Digital Links and Assistance

#### LincolnOwner.com

- How-to and informational videos.
- ▶ Warranty and maintenance information.
- Make your payment or schedule service online.
- ▶ Shop for accessories.
- Plus more.

#### support.Lincoln.com

SYNC<sup>®</sup> with MyLincoln Touch<sup>™</sup>

#### Discover More at Lincoln.com or Join us in Conversation



- <sup>1</sup> Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at LincolnCanada.com for more details.
- <sup>2</sup> See dealer for complete details. Lincoln reserves the right to change program details at any time without obligations.
- <sup>3</sup> Availability depends on dealership participation.



Our caring agents are empowered to handle your call and concerns from beginning to end.