

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

 


United States
Lincoln Client Relationship Center
1-800-521-4140
(TDD for the hearing impaired
1-800-232-5952)
owner.lincoln.com

Canada
Lincoln Client Relationship Centre
1-800-387-9333
(TDD for the hearing impaired
1-888-658-6805)
lincolncanada.com

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

Lincoln MKZ Hybrid
March 2016
First Printing
Quick Reference Guide
Litho in USA
HH6J 19G217 DA



2017 MKZ HYBRID



Quick Reference Guide



THE LINCOLN MOTOR COMPANY

Help Maximize Your Fuel Economy by Utilizing These Few Tips

- 1. **Use smooth acceleration and braking.** According to the United States Department of Energy, aggressive driving can lower your gas mileage by up to 33 percent at highway speeds and 5 percent in the city.
- 2. **Carry the bare essentials.** The Department of Energy estimates that an extra 100 pounds (45.4 kilograms) in your vehicle could reduce your fuel economy by up to two percent.
- 3. **Seasonal fuel makes a difference.** Winter fuel contains slightly less energy than summer fuel, so the fuel blend you fill up with can impact your efficiency.
- 4. **Idling burns fuel, too.** You can burn up to half a gallon (1.9 liters) of fuel per hour while idling. Minimize your morning warm-up and parking lot waits to get the most out of filling your tank.
- 5. **Avoid extreme temperatures.** Find a shady or sheltered spot to help keep your lithium-ion battery operating efficiently, and minimize the amount of energy required to heat or cool your cabin.
- 6. **Use accessories wisely.** Heated seats, the rear defroster, the air conditioner and other power features draw electrical energy. When you operate your accessories, you may notice that the gasoline engine needs to start. Check out your "Accessory Power" when configuring your MyView screen to see how much electricity you are using to power your vehicle's accessories.

- 7. **Check your tires.** Proper tire inflation can help you improve your fuel economy by up to 3.3 percent, according to the Department of Energy, while under-inflation could lower your fuel economy by 0.3 percent for every 1 psi drop in pressure of all four tires. Check your vehicle's door sticker for recommended cold tire inflation pressure.

Fuel History and Coach

Within the information displays, you'll be able to see how your driving style directly impacts your fuel economy.


Fuel history provides instant fuel economy, plus your recent fuel economy averaged over selectable intervals of 1, 2 or 6 minutes.

Coach can teach you how to improve your fuel economy by providing feedback on your recent acceleration, braking and cruising behavior.

Efficiency leaves and flowers show your recent driving efficiency measured over the last few minutes. Better efficiency equals more leaves, and when long-term driving efficiency improves, you'll see flowers!

Eco Cruise

This feature saves vehicle energy by slowing down acceleration compared to standard cruise control. Your vehicle may relax its acceleration temporarily when going uphill. See the **Cruise Control** chapter in your **Owner's Manual**.

Eco Cruise is part of the EcoSelect feature. You can switch EcoSelect on by pressing the ECO button  on the center console, and then switching on your cruise control. For more information, refer to the **Unique Driving Characteristics** chapter in your **Owner's Manual**.



Instrument Panel 4 – 5

SYNC® 3..... 6 – 9

Convenience 10 – 11

Comfort..... 12 – 13

Unique Hybrid Features 14

Function 15

Essential Information 16 – 17

Quick Tips 18

The Lincoln Pledge 19



owner.lincoln.com



 
lincolncanada.com



MyLincoln Mobile

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed), and you can access even more information about your vehicle.

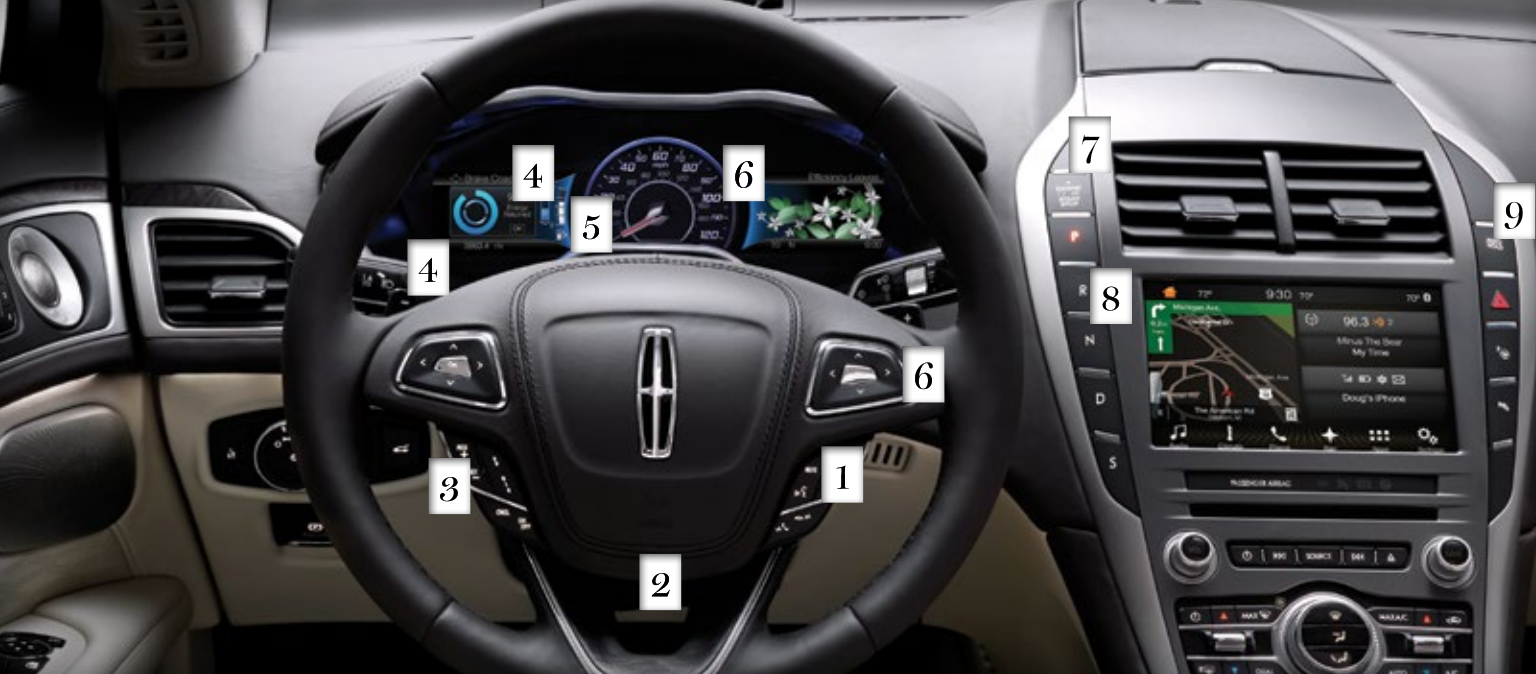

1 Steering Wheel Audio and Media Controls*
Press **VOL** + or – to increase or decrease volume levels.

Press **◀** or **▶** to access the next or previous radio station preset, CD track or preset satellite radio channel*.

Press **☎** to answer an incoming call or switch between calls.

Press **☎** to reject an incoming call or end a call.

Press **🗨** to access voice recognition.

2 Power Tilt and Telescoping Steering Column*
The 4-way control allows you to adjust the steering wheel to your desired position.

3 Adaptive Cruise Control*
In addition to cruise control, your vehicle may also include adaptive cruise control. The system adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can select one of four gap settings by pressing the **↑** and **↓** controls on the steering wheel. See page 11 of this guide for more details.

*if equipped

Instrument Panel

2017 MKZ HYBRID

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to the **Cruise Control** chapter of your **Owner's Manual** for safety information, more details and limitations.

4 Left Vehicle Info Display

Use the steering wheel controls to navigate to various screens.

- ▶ **The Display/Trip Mode** provides hybrid-specific information through the following screens:

| | |
|-----------|--------------|
| ° Engage | ° MyView |
| ° Empower | ° Trip 1 & 2 |

MyView lets you choose what information you wish to display. Select **Change MyView** in the **Options** menu to scroll through the content and make your selections.

- ▶ **Brake Coach** appears after the vehicle comes to a stop. It coaches you to maximize the amount of energy that can be returned through the regenerative braking system. The displayed percentage indicates your braking efficiency, with 100% representing the maximum amount of energy recovery. You can switch this feature ON and OFF in the information display.

*if equipped

5 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or is blinking after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

6 Right Vehicle Info Display

Use the steering wheel controls to access a variety of features:

- ▶ **Fuel Economy** provides ways you can monitor your energy use:

| | |
|---------------------------------|----------------|
| ° Efficiency Leaves and Flowers | ° Fuel History |
| | ° Coach |
- ▶ **Audio, Phone and Navigation*** information is also available. Refer to the **SYNC 3** chapter in your **Owner's Manual** for more information.

7 Push Button Start

Allows you to start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again to switch off the engine.

Note: Your intelligent access key must be inside the vehicle for the vehicle to start.

8 Push Button Shift Transmission

The transmission shift buttons are on the instrument panel, next to the touchscreen.

Press the brake pedal down and press one of the **PRNDL** buttons to select a gear. The button you select illuminates and the instrument cluster shows the selected gear.

Note: When entering an automatic car wash, always put your vehicle into **Stay in Neutral** mode:

- Press the neutral (N) button once. The information display reads “**Press N Again to Enter Stay in Neutral mode**”.
- Press the neutral (N) button again. The message “**Stay in Neutral mode engaged**” appears in the information display and the neutral (N) button flashes continuously to confirm your selection.

To exit **Stay in Neutral** mode, press another gear.

9 Auto Hold

Auto hold uses your vehicle's brakes to hold the vehicle stationary and prevent it from rolling after you come to a stop. When your vehicle is stopped, press the **AUTO HOLD** button to switch the system on and take your foot off the brake pedal. When the system is on and active, the **AUTO HOLD** indicator light appears in the instrument cluster, and your vehicle remains stationary until you press the accelerator pedal. Auto hold turns off automatically when you power down your vehicle. See the **Brakes** chapter in your **Owner's Manual** for more information.




Using SYNC 3

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

Use the touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. The system provides easy interaction with your audio, climate, phone, navigation,* mobile apps and settings.

Press **Settings** on the feature bar on your touchscreen to personalize the many features and settings of your vehicle all in one place.

General Tips

- ▶ Press the home  icon at any time to return to the home screen.
- ▶ For additional support, refer to your **Owner's Manual**, visit owner.lincoln.com or call the toll-free number.



EV Info

- ▶ Your system has hybrid-specific screens that display vehicle power settings.
- ▶ Press the Power Flow button to view the Power Flow Status screen. This shows you where your vehicle power is coming from and where it is being used.



- ▶ The touchscreen is sensitive, so make sure you press the desired icon accurately.

Why Do You Need a SYNC Owner Account?

A SYNC owner account allows you to receive the latest software updates, and when you have questions, free client support. Some services may not be available in your area.

Create Your Account

Create your account by visiting owner.lincoln.com. Call the toll-free number for more information.

In the United States:

owner.lincoln.com
1-800-521-4140

In Canada:

syncmyride.ca
1-800-387-9333

Pairing Your Phone with SYNC 3

Pair your phone to SYNC 3 before use. Make sure your vehicle is in park (P) and you switch on your ignition.

- ▶ Make sure you switch Bluetooth on and your device is discoverable. See your phone's manual, if necessary.
- ▶ Touch **Add Phone** on the touchscreen. Follow the on-screen instructions.
- ▶ You will hear a prompt telling you to search for SYNC on your device. Select your vehicle make and model as it displays on your device.
- ▶ Confirm the six-digit PIN appearing on your device matches the six-digit PIN displayed on the SYNC 3 touchscreen.
- ▶ Once the PIN is confirmed, the display indicates when the pairing is successful.

Note: SYNC 3 prompts you to choose your settings for certain features. Your cell phone may also prompt you to give SYNC 3 permission to access information. For more information on your cell phone's capability, see your cell phone's manual and visit the website.



Phone

After pairing your phone, you can access more phone-dependent features:

- ▶ Recent call lists.
- ▶ Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- ▶ Phone settings: Pair another phone, and set ring tones and alerts.
- ▶ Text messages.
- ▶ Do not disturb: Send all calls to your voice mail, all ring tones and alerts set to silent mode and text message notifications are not displayed on the touchscreen.

Note: Use the voice commands to make calls. Say **“Call James at home”** or **“Dial 555-1212”**. You can use the touchscreen to place calls as well. Refer to the **SYNC 3** chapter in your **Owner's Manual** for more details.



Making a Phone Call

Use SYNC 3 to make a phone call to anyone in your phone book through the touchscreen:

- ▶ Press **Contacts**, and then select the name of the contact you want to call.
- ▶ To call using a number from your recent calls, press **Recent Call List**, and then select an entry you want to call.
- ▶ To call a number that is not stored in your **Contacts** list, use the **Keypad** feature to manually dial the number. Press **Call** to initiate the call.


Note: Pressing the backspace button deletes the last typed digit.

Receiving Calls

Whenever you have an incoming call, an audible tone sounds. Caller information also appears in the display, if the information is available.

- ▶ Press **Accept** on the touchscreen or the phone button on the steering wheel to answer an incoming call.
- ▶ Do nothing to ignore an incoming call, and SYNC 3 logs it as a missed call.
- ▶ Reject any incoming call by pressing **Reject** on the touchscreen.

Ending the Call

Press and hold the phone button  on your steering wheel.

Do Not Disturb Mode

Touch the **Do Not Disturb** button to send all calls directly to your voicemail. All ringtones and alerts are silent.



Navigation*

Press the navigation* icon to set your destination. Select one of two ways to find your destination:


- ▶ Destination mode lets you key in a specific address or use a variety of search methods to locate where you want to go.
- ▶ Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).

Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a point of interest (POI).

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

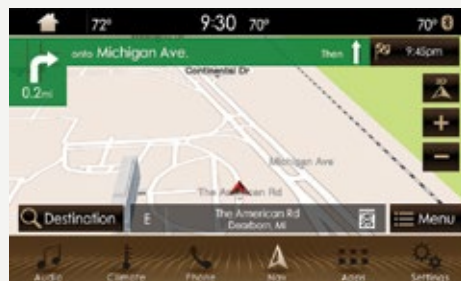

Navigation Menu

While you are on your route, you can change your touchscreen view. Touch **Menu**, and then select **Screen View** to select from these options:

- ▶ **Full Map**.
- ▶ **Highway Exit** displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- ▶ **Turn List** shows all of the available turns on your current route.
- ▶ **Traffic List** displays SiriusXM Traffic and Travel Link* information.


Refer to the **SYNC 3** chapter in your **Owner's Manual** for more details.



Climate

Touch the Climate icon on the touchscreen to access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger. Say **“Climate set temperature to 72 degrees”** and SYNC 3 makes the adjustment.

You can also use the ▲ or ▼ buttons to change the temperature setting.

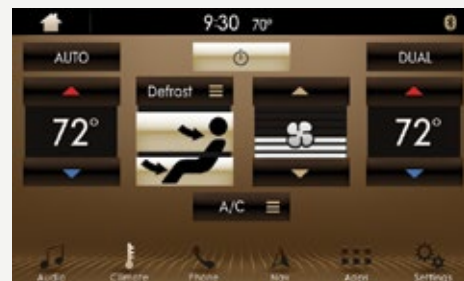

*if equipped



Audio

SYNC 3 gives you a mix of media. Press the **Audio** icon on the touchscreen, and select **Sources**. Choose from AM, FM, SiriusXM*, CD, USB, **Bluetooth** Stereo or Apps.

Set Your Radio Presets

- ▶ Tune to the station and then press and hold one of the memory preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- ▶ Two preset banks are available for AM, three for FM, and three for SiriusXM*. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.



*if equipped



Apps

Voice Control Your Smartphone Apps

The system supports the use of certain types of apps such as Pandora® or iHeartRadio® (U.S.), Spotify® or Glympse® through a USB or **Bluetooth**-enabled device. Each app gives you different on-screen options depending on the app's content. To find new apps, use the voice command, “Find new apps”.

Refer to the **SYNC 3** chapter in your **Owner's Manual** for details. For support, visit owner.lincoln.com or call the toll-free number.




 
 
9

Universal Garage Door Opener

The universal garage door opener replaces the common hand-held garage door opener with a three-button transmitter located on the driver's sun visor.

The system includes two primary features, a garage door opener and a platform for remote activation of devices within the home. This functionality allows you to program garage doors, as well as entry gates, security systems, entry door locks and home or office lighting.

Remote Start

Remote start allows you to start your vehicle from the outside using your intelligent access key. To start, press  and then press  twice within three seconds. Once inside, apply the brake and press the **START STOP** button. Shift into drive (D) and go. To switch off your vehicle after using remote start, press  once.

An LED on the intelligent access key provides status feedback of remote start or stop commands:

Solid green: The remote start or extension was successful.

Solid red: The remote stop was successful and the engine is off.

Blinking red: The remote start or stop failed.

Blinking green: The system is waiting for a status update.





Intelligent Access




Note: Your intelligent access key must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly. The keyless warning alert* sounds a tone twice when you exit the vehicle with the intelligent access key and your vehicle is in RUN, indicating the vehicle is still on.


- ▶ To unlock and open a door, pull an exterior door handle. Make sure not to touch the lock sensor on top of the handle. To lock the doors, touch the sensor on top of the door handle.
- ▶ To unlock and open the luggage compartment, press the exterior release button to the right of the high-mount brake lamp.

The intelligent access key also contains a mechanical key blade that you can use to unlock your vehicle, if necessary.

- ▶ Press  once to lock all doors. Press again within three seconds to confirm all doors are locked.
- ▶ Press  once to unlock the driver's door. Press again within three seconds to unlock all doors.
- ▶ Press  to activate the panic alarm. Press again or switch on the ignition to switch the panic alarm off.
- ▶ Press  twice within three seconds to open the luggage compartment.

Car finder: Press  twice within three seconds to locate your vehicle. A tone sounds and the lamps flash.

Luggage Compartment Release

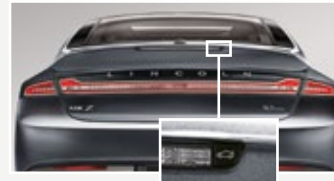

When your intelligent access key is within 3 feet (1 meter) of the vehicle, you can open your luggage compartment by pressing the release button.

Power Decklid Close*



Press the button in the luggage compartment to use the power-close feature.


 
Autowipers*

To switch this feature on, move the wiper controls to intermittent wipe. The autowiper system turns the wipers on **only** when moisture is present on the windshield. The wiper speed depends on how much moisture the system detects and the sensitivity setting.

- ▶ A low sensitivity means the wipers turn on when the system detects a large amount of moisture on the windshield. A high sensitivity means the wipers turn on when the rain sensor detects a small amount of moisture on the windshield.
- ▶ To switch this feature off, use your wiper controls. To change this feature to intermittent wipe every time you use your wipers, use the information display.
- ▶ To switch intermittent wipe back to autowipers, use the information display.

Note: Make sure that you switch off this feature before entering a car wash.

Adaptive Cruise Control*

The system adjusts your speed to maintain a set distance between you and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the  and  buttons on the steering wheel.

To set a cruise speed, accelerate to the desired speed, switch cruise control on, select a gap setting, and press the **SET-** button. An indicator light, the current gap setting and your set speed appear in the information display.

Press **CNCL** to cancel cruise control. To resume your set speed, press the **RES+** button and your vehicle returns to the set speed and gap setting.

To resume your set speed from a complete stop:

- ▶ If your vehicle stops for less than three seconds, it automatically accelerates to follow the vehicle ahead when you release the brake pedal.



- ▶ If your vehicle stops for more than three seconds, you must press the **RES+** button or the accelerator pedal to resume following the vehicle ahead.

Press the **OFF** button or switch off the ignition to turn off cruise control. See the **Cruise Control** chapter in your **Owner's Manual** for complete details.

Open Window Buffeting


You may hear a pulsing noise when one of the windows is open. Lower the opposite window slightly to reduce this noise.

Climate Controlled* Front Seats


To use, press the heated seat symbol  or the cooled seat symbol  to cycle through the various settings and off. More lights indicate warmer or cooler settings.

The cooled seats only function when the engine is running.

Heated Steering Wheel*

Press the  button on the climate control panel to switch this feature on and off.

Rear Heated Seats*

The rear heated seat controls are on the rear of the center console. To use, press the heated seat button  to cycle through the various heat settings and off. More lights indicate warmer settings. The rear heated seats only function when the ignition is on.

Memory Function

Use the memory buttons on the driver door to program and recall the positions of the driver seat, power mirrors and power tilt and telescopic steering column*.

To program position **1**, press and hold the **SET** button until you hear a single tone, then press and hold the **1** button until you hear another single tone. Use this same procedure to set position **2**. You can recall the set memory positions by pressing the pre-set button.

You can also program your memory seats to your intelligent access key. That way, when you unlock your door with the intelligent access key, your memory features automatically move into your saved position. See the **Seats** chapter in your **Owner's Manual** for more details.


Tilting Head Restraints



You can adjust your front-row head restraints. Pull up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust and release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, untilted position.

Note: Do not attempt to force the head restraint backward after tilting it.

Multi-Contour Front Seats with Active Motion*

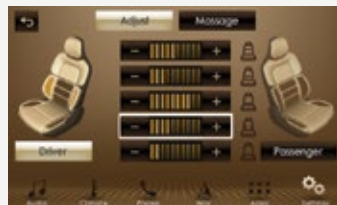




 
Using the button mounted on the outside of the front seats or through the touchscreen menu, you and a front seat passenger can adjust the massage and support settings. You can also control the intensity of the massage, increase or decrease the lumbar bolster and cushion support, and adjust the height of the bolster.


Retractable Sunshade and Moonroof*



The moonroof controls are on the overhead console and have a one-touch open and close feature.

- ▶ To open the moonroof, press and release . The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the control again. To close the moonroof, press and release .
- ▶ To vent the moonroof, press and release .

 The sunshade automatically opens with the moonroof. You can also open the sunshade with the moonroof closed. To open the sunshade, press and release . The sunshade stops short of its fully opened position for the comfort of rear passengers. To open the sunshade fully, press the control again.

- ▶ To close the sunshade, press and release . The sunshade stops short of its fully closed position. To close the sunshade fully, press the control again.

Ambient Lighting*

When you switch this feature on, you light key areas of your vehicle interior with a choice of colors.

To access and make adjustments:

1. Press the **Settings** icon > **Vehicle** > **Ambient Lighting**.
2. Tap the desired color to activate.
3. Drag the scroll bar up or down to increase or decrease the intensity.

To switch ambient lighting off, tap the active color once or drag the scroll bar for the active color all the way down to zero intensity.


Welcome Lighting

The Lincoln welcome mat projection lights are on the bottom of the exterior mirror housings. They project an image onto the ground a short distance from your vehicle when welcome lighting or lighted entry turns on.

Dual Automatic Temperature Control


You and your front passenger can press independent controls to adjust the air temperature on each side of the vehicle. To return to one temperature, hold down the **AUTO** button for more than two seconds. The passenger setting then switches to the driver's set temperature.

Silent Key Start

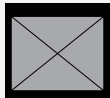

When you switch on the ignition, your engine may not sound like it has started because your hybrid vehicle is equipped with silent key start. This fuel-saving feature allows your vehicle to be ready to drive without requiring your gas engine to be running. Look for the green 'ready to drive' indicator light in your information display. When the light displays, your vehicle has been successfully started and is ready to drive.

ECOSelect

This feature is designed to offer the best possible fuel economy with only a slight impact to vehicle performance and comfort. To activate ECOSelect, press the  button and a graphic shows on your information display.

With ECOSelect active, you may notice:

- ▶ Less aggressive cooling.
- ▶ Softer acceleration, increased deceleration when coasting, and changes in engine, braking and cruise control behavior.

See the **Unique Driving Characteristics** chapter in your **Owner's Manual** for more information.

Unique Driving Characteristics

This hybrid vehicle combines electric and gasoline propulsion to provide breakthrough performance and improved efficiency. Familiarizing yourself with these unique characteristics will provide an optimal driving experience from your new vehicle.

Accelerating: Step on the gas and get all the responsiveness of a traditional gasoline engine.

City Driving: In stop-and-go driving and at low speeds, the electric motor provides the necessary power, with the gas engine only kicking in to recharge the battery or when more power is needed.

Cruising/Highway Driving: Due to greater power demands at highway speeds, your vehicle uses the gasoline engine more frequently than while driving at city traffic speeds. This is normal.

Braking: Your vehicle is equipped with standard hydraulic braking and regenerative braking. The regenerative braking system allows the energy normally lost through braking to be recovered and stored in the high-voltage battery.

Stopped: To save energy, the gasoline engine usually turns off.

EV+ Mode

EV+ allows your vehicle to learn frequent destinations and automatically change to electric mode when nearing your destination. The EV indicator displays **EV+** when this mode is active. You should see this about 1/8 mile (200 meters) from a frequent destination.

Note: You can switch the **EV+** feature on and off through the **Driver Assist** section of the **Settings** menu in your information display.




Active Park Assist*



Detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle.

To use:


- ▶ To use active park assist, press the button  on the right side of the instrument panel or on the center console, depending on your vehicle. Press once for parallel parking, or twice for perpendicular parking.
- ▶ To stop the parking procedure, grab the steering wheel or press the button again. For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual**.

Note: The driver is always responsible for controlling the vehicle, supervising the system, and intervening, if required.

Front and Rear Parking Aids*

Sounds a warning tone if there is an obstacle near the front or rear bumper. The front sensors are active when the transmission is in any position other than park (P) and the vehicle is traveling at low speed. The rear sensors are active when the transmission is in reverse (R) and your vehicle speed is below 3 mph (5 km/h). The warning tone increases in frequency as the object gets closer.

Autolamps*

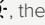When the lighting control is in the autolamps position , the headlamps automatically turn on in low light situations or when the wipers activate. The headlamps remain on for a period of time after you switch the ignition off. Use the information display controls to adjust the period of time that the headlamps remain on.


Lincoln Drive Control

This feature integrates chassis and steering controls to optimize ride comfort, steering and handling. There are a range of modes you can choose from to customize your ideal driving experience. Use the information display to set your preference:


- ▶ **Normal:** Delivers a balanced combination of comfortable, controlled ride and confident handling.
- ▶ **Comfort:** Provides a more relaxed driving experience, maximizing comfort.
- ▶ **Sport:** Provides a sportier driving experience with an emphasis on handling and control.

Refer to the **Driving Aids** chapter of your **Owner's Manual** for more details.

Lane Keeping System*


This system uses a camera mounted behind the interior mirror to detect unintentional drifting toward the outside of the lane. If drifting is detected, the system either vibrates the steering wheel (Alert mode) or assists the driver by gently steering back toward the center of the lane (Aid mode). The activation button  is on the end of the direction indicator lever. See the **Driving Aids** chapter in your **Owner's Manual** for complete information.

Configurable Daytime Running Lamps*

When you switch this feature ON in the information display, daytime running lamps turn on when you are driving, the lighting control is in the autolamps position  and the headlamps are off. You can switch the Configurable Daytime Running Lamps feature ON or OFF using the information display. See the **Lighting** chapter in your **Owner's Manual** for more information.

Capless Fuel System

When refueling your vehicle:

1. Put your vehicle in park (P) and switch the ignition off.
2. Press the  fuel button on the driver door to open the fuel filler door. It could take up to 15 seconds for the fuel door to pop open. Insert the fuel filler nozzle fully into the fuel system and begin fueling.
3. Leave the nozzle fully inserted until you stop pumping fuel. Stop refueling when the fuel pump nozzle automatically shuts off for the first time. Wait at least 10 seconds before removing the fuel filler nozzle to allow residual fuel to drain back into the fuel tank.
4. Remove the fuel filler nozzle, and then press and release the center rear edge of the fuel filler door to close it.



Note: When using a portable fuel container, do not use aftermarket funnels as they do not work with the capless fuel system and may cause damage. Always use the plastic funnel included with your vehicle. Clean the funnel after each use, or dispose of it properly.

MyKey™

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things such as speed warnings and limited volume levels. For complete information, refer to the **MyKey** chapter in your **Owner's Manual**.

Automatic Engine Shutdown

Your vehicle has a feature that automatically shuts down the engine if it has been idling for an extended period. The ignition also turns off to save battery power. You can override this feature temporarily by pressing the brake or accelerator pedal, or by pressing **OK** or the **RESET** button in your information display. Refer to the **Information Displays** chapter of your **Owner's Manual** for more details.

Electric Parking Brake



The operating switch (P) replaces the conventional handbrake. It is on the instrument panel, to the left of the steering wheel. To use, pull the switch. The brake system warning lamp flashes for approximately 2 seconds then stays lit to confirm that you applied the electric parking brake. Release the electric parking brake manually by switching on the ignition, pressing the brake pedal and then pressing the electric parking brake switch. The parking brake automatically releases when:

- ▶ The driver door is closed.
- ▶ You are accelerating.
- ▶ There are no faults detected in the parking brake system.

Refer to the **Brakes** chapter of your **Owner's Manual** for more details.

Towing Your Vehicle

Towing your vehicle behind an RV or other vehicle may be limited. Refer to the **Towing** chapter of your **Owner's Manual** for more information.

Hybrid Transmission

Due to the technologically advanced, electronically controlled, continuously variable transaxle, you may not feel shift changes like those of a non-hybrid vehicle. Since the transmission controls your engine speed, the engine speed may seem elevated at times. This is normal hybrid operation, as it helps deliver fuel efficiency and performance.

Fuel Tank Capacity/Fuel Info

Your vehicle's fuel tank capacity is 14.0 gallons (53 L). Use only "Regular" unleaded gasoline with an octane rating of 87 or higher. **Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.**



BLIS® (Blind Spot Information System) and Cross Traffic Alert*



BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and cross traffic alert display a yellow indicator light in your exterior mirrors, and cross traffic alert also sounds tones and displays messages to warn you from which direction vehicles are approaching.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to the **Driving Aids** chapter in your **Owner's Manual** for safety information and system limitations.


Tire Sealant and Inflator Kit

The kit is under the load floor of the luggage compartment. The kit consists of an air compressor to reinflate the tire and a sealing compound in a canister that effectively seals most punctures caused by nails or similar objects. The canister contains only enough sealant compound for one tire. See an authorized dealer for a replacement sealant canister after each use.

This kit provides a temporary tire repair seal, allowing you to drive your vehicle up to 120 miles (200 kilometers) at a maximum speed of 50 mph (80 km/h) to reach a tire service location.

Note: After sealant use, the tire pressure monitoring system sensor and valve stem on the wheel must be replaced by an authorized dealer. For more details, refer to the **Wheels and Tires** chapter of your **Owner's Manual**.

Tire Pressure Monitoring System

Your vehicle lights a low tire pressure warning light  in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Tire Pressure Monitoring System** section in the **Wheels and Tires** chapter of your **Owner's Manual** for more information.

Quick Tips



The **Brake Coach** appears in the display after the vehicle comes to a stop, and coaches you to maximize the amount of energy that can be returned through the regenerative braking system.

SmartGauge® with EcoGuide

Delivers specific information about various systems on your vehicle using menus that build on previous data. Use your 5-way steering controls to scroll through your menu choices:

Engage: Adds gas or electric power-split information.

Empower: Adds an engine on or off threshold to the power demand gauge. See how much power you request based on how far you press the accelerator pedal.

MyView: Lets you customize your menu options, allowing you to select key information and combine it into one screen.

EcoGuide: Displays leaf graphics within the right-hand cluster, showing you when you're driving efficiently. More leaves and flowers equal better driving habits!

The Lincoln Pledge¹

The Lincoln Pledge is the collective promise of everyone at the Lincoln Motor Company—from our trusted service advisors to expert technicians to the voice on the other end of the line should you call—that we'll be there for you and your Lincoln wherever, whenever, if ever you need us. Here are some of the ways the Lincoln Pledge comes to life and makes the journey of owning a Lincoln a rewarding one.

Lincoln Warranties

Be assured that everything between the bumpers of your Lincoln is covered for four years/50,000 miles² as well as a six-year/70,000-mile Powertrain Warranty for life.²

Roadside Assistance for Life

If ever you need help on the road, the Lincoln Motor Company will be there for you with 24-hour/seven-days-a-week assistance nationwide.²

Complimentary Car Wash

As an added touch, after each service visit we're happy to provide your Lincoln back to you washed and ready for the road ahead.³

Complimentary Loaner

Should your Lincoln require warranty service, we'll be there for you with a loaner vehicle.³

Service Parts Warranty

We'll stand behind our service and you with a two-year, unlimited-mile warranty on both parts and labor.²

2017 MKZ HYBRID

Dedicated Support

Lincoln Client Relationship Center and Roadside Assistance
1-800-521-4140

TDD for the Hearing Impaired
1-800-232-5952

owner.lincoln.com

- ▶ How-to and informational videos.
- ▶ Warranty and maintenance information.
- ▶ Make your payment or schedule service online.
- ▶ Shop for accessories.

Join us in Conversation



Our caring agents are empowered to handle your call and concerns from beginning to end.

¹ Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at **LincolnCanada.com** for more details.

² See dealer for complete details. Lincoln reserves the right to change program details at any time without obligations.

³ Availability depends on dealership participation.