

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



owner.ford.com (U.S.)



ford.ca (Canada)



WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

United States

Ford Customer Relationship Center 1-800-392-3673 (FORD) (TDD for the hearing impaired: 1-800-232-5952)

owner.ford.com

@FordService

Canada

Ford Customer Relationship Centre 1-800-565-3673 (FORD) (TDD for the hearing impaired: 1-888-658-6805) ford.ca



☞ @FordServiceCA



COMMONLY USED VOICE COMMANDS

Press the voice button $(1)^2$ on the steering wheel and then say:



AUDIO

- Audio list of commands
- » AM <530-1710>
- » FM <87.9-107.9>
- SiriusXM < 0-233>1 <Sirius channel name>1
- » Bluetooth audio
- » USB



APPS

- List mobile apps
- Find new apps



BASIC COMMANDS

- Main menu
- Go back²
- Cancel
- List of commands²
- Next page²
- Previous page²
- » Help



PHONE

- Phone list of commands
- Pair phone
- Call <name> <on cell/ at home/at work>
- Dial
 - <phone number>
- » Listen to text message

Refer to the SYNC 3 chapter in your Owner's Manual, visit the website or call the toll-free number for more information.

For U.S. customers: Visit owner.ford.com or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

For Canadian customers: Visit syncmyride.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).



NAVIGATION^{1,2}

- Navigation list of commands
- Destination <home/previous</pre> destination>
- » Find
 - <an address/POI/ intersection>
- Show route
- Where am I?
- SiriusXM Traffic and Travel Link¹
- Show
- <traffic/weather map/ fuel prices/5-day forecast>
- Help



CLIMATE1

- Climate list of commands
- Climate set temperature <# degrees>

- 1 only available with SYNC 3
- ² if equipped





GLASSES HOLDER

To access the glasses holder tray, press near the center of the door. You can then pull out the tray.

2 CRUISE CONTROL

To set a cruise control speed:

- A. Press and release the **ON** button.
- B. Drive to your desired speed and then press and release the SET+ button.
- C. Take your foot off the accelerator pedal

To change your set speed, press and release SET+ or SET-.

To cancel your set speed, press and release **CNCL** or tap the brake pedal. To resume a set speed, press and release **RES**.

To turn cruise control off, press and release **OFF**.

For information regarding adaptive cruise control*, see the Cruise Control chapter in your Owner's Manual.

3 LIGHTING CONTROL

- O Switches off the headlamps.
- Switches on the parking instrument panel, license plate and tail lamps.
- Switches on the headlamps.

- automatically switch the exterior lamps on or off based on the available davlight.
- Switch the fog lamps* on or off by pressing the control.

4 SERVICE ENGINE **SOON LIGHT**

Lights briefly when you switch the ignition on. If it remains on or is blinking after you start the engine. the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion (avoid heavy acceleration and deceleration) and contact an authorized dealer as soon as possible.

5 INFORMATION DISPLAY

Provides information about various systems on your vehicle. Use the left-hand. 5-way controls on the steering to choose and settings and messages Refer to the Information Displays chapter in your Owner's Manual for more information.

6 STEERING WHEEL **MEDIA CONTROLS**

Press **VOL** + or - to increase/decrease volume levels.

Press x to mute the active audio.

Press \bowtie or \bowtie to access the previous or next radio station. CD track or preset satellite radio channel*.

Press & to access SYNC phone features or to answer a call.

Press reto end a call.

Press (1) to access voice recognition.

Use the toggle control and the **OK** button to select and confirm options for SYNC 3.

Press the 1 button to exit a menu.

KEYLESS STARTING

Allows you to start your vehicle by pressing the START/STOP button when fully pressing down on the brake pedal (with automatic transmission) or the clutch (with manual transmission). If your vehicle has been idling for an extended period of time, it automatically shuts down. Before the engine shuts down, a message appears in the information display, allowing the driver to override the shutdown feature. Press **OK** to switch the engine off.

Note: Your keyless remote must be inside the vehicle to switch the ignition on and start your vehicle. The keyless warning alert sounds the horn twice when you exit the vehicle with the keyless remote when your vehicle is running.



SYNC is an in-vehicle communications system that works with your *Bluetooth*-enabled phone and portable media player.

SUPPORT

The SYNC support team is available to help you with any questions you cannot answer on your own.

In the United States, call 1-800-392-3673.

In Canada, call 1-800-565-3673.

DRIVING RESTRICTIONS

For your safety, certain features are speed-dependent and restricted when your vehicle is traveling over 3 mph (5 km/h).

PAIRING YOUR PHONE WITH SYNC

In order to use many of the features of SYNC such as making a phone call or receiving a text, you must first connect or pair your phone with SYNC.

To pair your phone for the first time

- 1. Make sure your vehicle is in park (P) (automatic transmission) or 1 (manual transmission), and switch on your ignition, radio and your phone's *Bluetooth* feature.
- 2. Press the phone button . When the display indicates no phone is paired, select the option to add a phone.
- 3. When a message to begin pairing appears in the audio display, search for SYNC on your phone to start the pairing process.

4. Confirm that the six-digit PIN appearing on your phone matches the six-digit PIN that displays on the SYNC screen. The display indicates when the pairing is successful.

The system may prompt you to

- Set your phone as the primary or favorite (the phone SYNC automatically tries to connect with first upon vehicle start-up).
- » Download your phone book (required to use the full set of voice commands).
- » Switch on 911 Assist®.

WHY DO YOU NEED A SYNC OWNER ACCOUNT?

A SYNC owner account lets you receive the latest software updates, and, when you have questions, free customer support. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

Tips

- » Make sure you accept the request from SYNC to access your phone.
- » To pair subsequent phones, please refer to Pairing Subsequent Phones in the SYNC chapter of your Owner's Manual.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone and then repeating the Pairing Your Phone with SYNC process.

USING YOUR PHONE WITH SYNC

Note: You must download your phone book to make phone calls with voice commands by name.

Making a phone call

WCSX BAD (p) 94.7 MHz

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button (). When prompted, say a voice command.

For example, you could say, "Call Jake Smith at home". When the system confirms the number, say, "Dial" to initiate the call.

Note: You can also make phone calls by pressing the voice button $_{(k)}$, and when prompted, say, "Dial", then verbally say the phone number.

Answering incoming calls

Press the phone button to answer an incoming call. You can hang up at any time by pressing the hotton.

USING SYNC TO ACCESS DIGITAL MEDIA

Plug your USB media device, such as a phone or MP3 player, into a USB port and then wait for the system to finish indexing your music. When indexing is complete, you can use SYNC to play all of your favorite music.

Using voice commands to play music

- 1. Plug your media player into your USB port.
- 2. Press the voice button (. When prompted, say, "USB", then follow up by saying a voice command.

6

SYNC® 3*

USING SYNC 3

The SYNC 3 system allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your *Bluetooth*-enabled phone, the touchscreen provides easy interaction with audio, multimedia, climate control, navigation, and your phone's SYNC 3 compatible apps.

General tips

- » Press the home icon at any time to return to your home screen.
- » Refer to the SYNC 3 chapter in your Owner's Manual, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

To pair your phone

Pair your *Bluetooth*-enabled phone with the system before using the functions in hands-free mode. Switch on *Bluetooth* on your device to begin pairing. See your phone's manual if necessary.

- » Select Add Phone.
- » Follow the on-screen instructions.
- » A prompt alerts you to search for the system on your phone.
- » Select your vehicle's make and model as it displays on your phone.



- » Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
- The touchscreen indicates when the pairing is successful.
- Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.

PHONE

After pairing your phone, you can access more phone-dependent features:

- » Recent call lists.
- » Contacts: All of your contacts from your phone display alphabetically. Sort and view your contacts by selecting a specific letter.
- » Phone settings: Pair another phone, and set ring tones and alerts.
- » Text messages: View all of your recent text messages.
- » Do not disturb: Send all calls to your voicemail, all ring tones and alerts are set to silent mode and text message notifications are not displayed on the touchscreen.

Refer to the **SYNC 3** chapter in your **Owner's Manual** for complete details.

SMARTPHONE CONNECTIVITY

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone over a USB connection. When you use Apple CarPlay or Android Auto, you can:

- » Make calls.
- » Send and receive messages.

- » Listen to music.
- » Use your phone's voice assistant.

For more information, refer to the **SYNC 3** chapter in your **Owner's Manual** for details.



Select one of two ways to find your destination:

- » Map mode shows advanced viewing of 2-D city maps, 3-D landmarks and 3-D city models (when available).
- » Destination mode lets you key in a specific address or use a variety of search methods to locate where you want to go.

Refer to the **SYNC 3** chapter in your **Owner's Manual** for complete details.

Set a Destination

- Press **Destination** on your touchscreen and then press **Search**.
- 2. Enter a street address, intersection, city or a Point Of Interest (POI).
- After you choose your destination, press Start. The system uses a variety of screens and visible prompts to guide you to your destination.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

Navigation Menu

When you are on your route, you can change your touchscreen view. To change the view, touch *Menu* on the bottom of the screen and then select *Screen View* to choose from any of the following selections:

- » Full Map
- » Highway Exit information displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint.
- Turn List displays all of the available turns on your current route.



*if equipped *if equipped

SYNC® 3* (CONTINUED)





SYNC 3 controls the temperature, airflow direction, fan speed, and activates other climate features. Use the touchscreen to enter into each feature's submenu for additional options.

Set Your Temperature

- » Touch the **Climate** icon on your touchscreen.
- » Set your exact, desired temperature using the ▲ or ▼ buttons.





Press the *Audio* icon on the touchscreen and select *Sources*. Choose from *AM*, *FM*, *SiriusXM**, *CD*, *USB*, *Bluetooth Stereo* or *Apps*.

Set Your Radio Presets

- Tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

Use SYNC 3 to Access Digital Media

Play all of your favorite music from phones, flash drives and other devices.

Plug your device into a USB port, select **Sources** and then choose **USB**.

You can even create random playlists using the **Shuffle** function.



The system supports the use of certain apps through a USB or **Bluetooth**-enabled device. Each app gives you different on-screen options depending on the app's content. Refer to the **SYNC 3** chapter in your **Owner's Manual** for complete details.

For support, visit the website or call the toll-free number. See the inside front cover of this guide for details.

COMFORT

POWER LUMBAR*

The power lumbar control is on the side of the driver seat.

Press one side of the control to increase lower back firmness. Press the other side of the control to decrease lower back firmness.

CLIMATE CONTROLLED FRONT SEATS*

Touch the heated seat symbol w to cycle through the various heat settings and off. More lights indicate warmer settings.

Press the cooled seat symbol of to cycle through the various cooling settings and off. More lights indicate cooler settings.

HEATED STEERING WHEEL*

Your vehicle may come with a heated steering wheel. Press the icon in your touchscreen to turn this feature on and off.

AUTOMATIC TEMPERATURE CONTROL*

To use, touch the **AUTO** control and then select the desired temperature using the control. Set an independent temperature for the front-seat passenger using the passenger-side rotary control.

Touch the **AUTO** control to switch back to a single-zone temperature control.

REAR SEAT ACCESS

Use the seatback release to fold the back of the front seat forward. This release handle is on the upper back of the front seat. The seatback recline feature has memory and locks automatically in the original position.

GLOBAL OPENING*

You can use the remote control to operate the windows with the ignition off.

You can open the windows for a short time after you unlock your vehicle with the remote control. After you unlock your vehicle, press and hold the remote control unlock button to open the windows. Release the button once movement starts. Press the lock or unlock button to stop movement.

Note: You can enable or disable this feature in the information display, or see an authorized dealer. To operate this feature, you must deactivate the accessory delay.



10 *if equippo

CONVERTIBLE TOP*

OPENING THE CONVERTIBLE TOP

- 1. Bring the vehicle to a complete stop. Leave the ignition on while opening the convertible top to prevent draining the battery.
- Move the latch handle above the interior mirror down toward the windshield and rotate the handle clockwise to release the convertible top.
- 3. Press and hold the convertible top control on the overhead console until the windows are down completely and the top is stored fully.

USING THE TONNEAU CAPS

Your convertible top also includes two tonneau caps, one for each side of the vehicle. You can stow these caps inside the luggage compartment.

After opening your convertible top, place the tonneau caps between the top and your vehicle trim molding by doing the following:

- 1. Insert the leading edge under the trim.
- 2. When the leading edge is under the trim slot, angle the side edge down so the edges slide under the surrounding molding. Secure the side edge into place between the trim edges.
- 3. Repeat steps 1 and 2 on the opposite side of the vehicle to install the second tonneau cap.

Note: Remove the tonneau caps before attempting to close the convertible top or a tone sounds and a warning message appears in the instrument panel. If this happens, remove and stow the caps, and then press the convertible top control again.



CLOSING THE CONVERTIBLE TOP

- Bring the vehicle to a complete stop but leave the ignition on while closing the convertible top to prevent draining the battery. Remove the tonneau caps.
- Press and hold the convertible top control as the top unfolds and moves forward toward the windshield header.
- 3. When the top lines up evenly with the windshield header, release the convertible top control.
- 4. Pull down on the latch handle and rotate it counterclockwise to secure the convertible top.
- 5. After securing the convertible top fully, push the latch handle up into the stowed position to lock the latch, and then use the power window controls to close the windows.

Note: If the top has been open for an extended period of time or if the temperature is low, the top material may shrink slightly. If this happens, extra force on the latch handle may be needed to secure the too.

For complete information, refer to the **Convertible Top** chapter of your **Owner's Manual**.

TIPS WHEN USING YOUR CONVERTIBLE TOP

Do not store articles behind the rear seat. Articles stored in the convertible top stowage compartment may break the rear glass window when you open the top.

The windows lower automatically when opening the top.

Do not lower the top when the top material is wet. Remove any leaves or debris from the outer surface of the top.

The convertible top does not operate unless the vehicle is stationary or traveling under 3 mph (5 km/h).

Note: You must switch your ignition on to open or close the convertible top. We recommend that you leave the engine running to prevent draining the battery.



12 *if equipp

*if equipped

CONVENIENCE

AUTOWIPERS*

The feature uses a rain sensor that is in the area around the interior mirror. The rain sensor monitors the amount of moisture on the windshield and automatically turns on the wipers. The sensor also adjusts the wiper speed by the amount of moisture that the sensor detects on the windshield.

You can switch this feature on and off in the information display.

Note: Make sure you switch off the windshield wipers before entering a car wash.

AUTOLAMPS

The headlamps turn on and off automatically in low-light situations or during inclement weather. The headlamps remain on for a period of time after you switch the ignition off.

Use the information display controls to adjust the period of time that the headlamps remain on.

REMOTE START*

Use the remote start to start the engine from outside your vehicle.

- 1. Press the lock button 🖺 to lock all the doors.
- 2. Press the remote start button (2) twice within three seconds. The exterior lamps flash twice.

CAR CLEANING TIPS

Do not use chemical solvents or strong detergents when cleaning the steering wheel, instrument panel or seats. See the **Vehicle Care** chapter in your **Owner's Manual** for details.

INTELLIGENT ACCESS LUGGAGE COMPARTMENT RELEASE

With your keyless remote within 3 feet (1 meter) of your vehicle, press the exterior release button hidden above the license plate.



FUNCTION

SELECTABLE DRIVING* AND STEERING MODES

Through a suite of sophisticated electronic vehicle systems, you can optimize steering, handling and powertrain response. To change the mode settings, use the mode switch on the instrument panel. The first press of the mode button or switch illuminates the selected mode. Subsequent presses change the selected mode. See the **Driving Aids** chapter of your **Owner's Manual** for complete details.

MY MODE*

My Mode can be used to apply your custom settings to a selectable drive mode. To set My Mode, press the pony button on the steering wheel.

DRIVING MODES*

Normal – Delivers a balanced combination of comfort and handling. This mode provides an engaging drive experience and a direct connection to the road without sacrificing any of the composure demanded from your vehicle.

Sport+ – Provides a sportier steering feel and throttle response. Sport+ mode is ideal for use during more spirited driving.

Track – Provides a performance driving experience. The engine responds directly to your inputs and takes on a more powerful tone. Use track mode when you desire pure performance.

Snow/Wet – Provides a confident handling driving experience during poor weather without sacrificing any of the composure demanded from your vehicle.

Drag – Provides a performance driving experience tailored to driving on a drag strip. The engine responds directly to your inputs and takes on a more powerful tone.

STEERING MODES

Normal – Default factory setting.

Sport – Slightly higher effort required for steering with more road force felt through the steering wheel.

Comfort – Slightly less effort required for steering with less road force felt through the steering wheel.

After selecting the desired setting, you may feel a soft feedback bump in the steering wheel when the changeover occurs.

Note: If your vehicle includes the selectable drive modes feature, the steering feel changes when you select a new drive mode. You can override this automatic selection by selecting an alternative steering mode.



14 *if equipped

FUNCTION (CONTINUED)

REAR PARKING AID*

The rear sensors are active only when the transmission is in reverse (R). As your vehicle moves closer to the obstacle, the rate of the audible warning increases. The system detects certain objects when the transmission is in reverse (R) and the vehicle is traveling at a speed of 3 mph (5 km/h) or less.

See the **Parking Aids** chapter of your **Owner's Manual** for details.

BLIND SPOT INFORMATION SYSTEM (BLIS®)*

BLIS aids you in detecting vehicles that may have entered the blind spot zone. The detection area is on both sides of the vehicle, extending rearward from the exterior mirrors to approximately 13 feet (4 meters) beyond the bumper. When the system detects a vehicle, an alert indicator illuminates in the exterior mirror on the side from which the approaching vehicle is coming. If you turn the direction indicator on for that side of your vehicle, the alert indicator flashes. See the **Driving Aids** chapter of your **Owner's Manual** for details.

CROSS TRAFFIC ALERT*

Cross Traffic Alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). The system illuminates an alert indicator in the outside mirror on the side of your vehicle from which the approaching vehicle is coming. Cross Traffic Alert also sounds an audible alert and a message appears in the information display. This system also works with the reverse sensing system that sounds its own series of tones. See the *Driving Aids* chapter of your *Owner's Manual* for details.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to the **Owner's Manual** for safety information, more details and system limitations.



PRE-COLLISION ASSIST*

This system is designed to alert you of certain collision risks. A radar detects if your vehicle is rapidly approaching another vehicle traveling in the same direction as yours. If it is, the system is designed to provide three levels of notification functionality: Alert, Brake Support and Active Emergency Braking.

Alert: When activated, a red warning light flashes, an audible warning chime sounds and a warning message shows in the information display.

Brake Support: The brake support system assists the driver in reducing the collision speed by lightly applying the brakes. If the risk of collision further increases after the warning light illuminates, the brake support prepares the brake system for rapid braking. The system does not automatically activate the brakes, but if you press the brake pedal, the system may apply full force, even if the brake pedal is lightly pressed.

Active Emergency Braking: Active emergency braking may activate if the system determines that a collision is imminent.

Your pre-collision assist may also have the following feature:

Distance Indication: Distance Indication is a function that provides a graphical indication of the time gap to other vehicles traveling in the same direction.

TRACTION CONTROL

The system automatically turns on each time you switch the ignition on. If your vehicle is stuck in mud or snow, switching traction control off may be beneficial as this allows the wheels to spin.

The switch for the stability and traction control system is on the instrument panel.

When you switch the system off, a message and an illuminated icon appear on the instrument cluster.

Use the switch again to return the traction control system to normal operation.

Note: When you switch traction control off, stability control remains fully active.

ELECTRONIC STABILITY CONTROL

The system automatically activates when you start your engine. The electronic stability control portion of the system disables when the transmission is in reverse (R), or on some models, if you press and hold the stability control button for more than five seconds when you apply the brakes and the vehicle is at a stop. You can switch off the traction control portion of the system independently. See the **Stability Control** chapter of your **Owner's Manual** for details.

*if equipped *if equipped



ESSENTIAL

DIGITAL INFORMATION DISPLAY*

Using the 12-inch LCD digital instrument cluster and the Quick Action Menu (QAM) buttons on the right-hand side of the steering wheel, you can control many of the vehicle systems. Your cluster can display various modes and information depending on the menu, your settings and your vehicle's options. Using the QAM buttons, you can select audio, phone, navigation, settings and pony.

Selecting audio, phone and navigation allows you to access the SYNC 3 cluster menus. Refer to the **SYNC 3** chapter in your **Owner's Manual**.

SETTINGS

The settings menu allows you to change the settings for the vehicle, such as the trip/fuel info, driver assist and advanced settings.

From the driver assist menu, you can configure settings for the driver assist technologies such as blindspot, pre-collision assist, and lane keeping system.

The advanced settings menu allows you to access the settings for MyKey, vehicle options, and display settings.

PONY

The pony menu provides access to a suite of exciting features. Through the pony menu, you can view the MyMode screens, exhaust mode settings, track apps, performance shift indicator, launch control, gauges, MyColor and cluster appearance.

Exhaust mode allows you to choose the vehicle's exhaust mode from options such as track exhaust mode or quiet.

Track Apps[™] provides many options to record and optimize your track performances. Please refer to the **Track Use** chapter of your **Owner's Manual**.

Through the performance shift indicator menu you can adjust the shift point, tone and light mode.

The launch control menu contains the launch control and RPM options.

The gauges menu options include show gauges and configure MyGauges.

MyColor lets you select a primary or secondary color, ambient lighting options or create a custom MyColor.

Cluster appearance allows you to select the cluster display you want to see.

FEATURES

TIRE SEALANT AND INFLATOR KIT*

This kit provides a temporary tire repair, allowing you to drive your vehicle up to 120 miles (200 kilometers) at a maximum speed of 50 mph (80 km/h) to reach a tire service location. The kit, under the load floor in the luggage compartment, includes an air compressor to re-inflate the tire and a canister of sealing compound that effectively seals most punctures caused by nails or similar objects. Refer to the **Wheels and Tires** chapter of your **Owner's Manual** for more information.

TIRE PRESSURE MONITORING SYSTEM

Your vehicle illuminates a low tire pressure warning light (!) in your instrument cluster when one or more of your tires are under-inflated.



You can use the left information display to view the *Tire Pressure On-demand* screen. It displays your current individual tire pressures. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

MANUAL TRANSMISSION LOCKOUT*

Your manual transmission features a lockout feature that protects you from accidentally moving the transmission into reverse (R). To shift into reverse (R):



- 1. Press the clutch pedal to the floor to disengage the clutch.
- Raise the collar below the gearshift knob up, then move the lever fully to the left, then forward.

Note: If you have trouble engaging the gear, return the gearshift to neutral (N) and then release the clutch. Repeat steps 1 and 2.



ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.

*if equipped