

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



United States
Lincoln Client Relationship Center
1-800-521-4140
(TDD for the hearing impaired: **1-800-232-5952**)
owner.lincoln.com

Canada
Lincoln Client Relationship Centre
1-800-387-9333
(TDD for the hearing impaired: **1-888-658-6805**)
lincolncanada.com

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



WARRANTY INFORMATION:

Download a FREE electronic copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of **owner.lincoln.com**. (United States)

For Canada, visit **lincolncanada.com/warranty**.

For Limo/Livery/Hearse vehicles: View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, **fleet.ford.com/limo**. (United States only)

December 2018
Second Printing
Litho in USA
KA1J 19G217 AA



2019 NAUTILUS



Quick Reference Guide



THE LINCOLN MOTOR COMPANY

Our unique range of services is designed to make your Lincoln ownership effortless.

Lincoln Pickup & Delivery

Schedule your Pickup & Delivery appointment through the Lincoln Way™ app¹ or by phone, and we've got the rest. We'll pick up your Lincoln and deliver it back to you when service is complete^{2,3}. We'll also leave you with a complimentary Lincoln loaner³ during your service, so your time remains distinctly yours. Your vehicle will even be returned to you washed and ready for your next journey.

Lincoln Way App

Download the Lincoln Way app¹ to your mobile device to enjoy the flexibility and convenience of connecting with Lincoln services and features from wherever life takes you. For more details, visit www.lincoln.com/lincolnway.

Lincoln Concierge

Lincoln Concierge is your 24/7 personal connection for the latest information about Lincoln vehicles, services and ownership benefits. Simply choose how you'd like to connect and a highly trained Lincoln Concierge team member will help you explore Lincoln in the way that suits you best.

You can reach us any time of day or night.

- ▶ Call **800-521-4140**.
- ▶ Chat online at lincoln.com
- ▶ Through the Lincoln Way App¹

Roadside Assistance for Life**

We're here to help you out – no matter where, no matter when.

- ▶ Locked out
- ▶ Flat tire
- ▶ Drained battery
- ▶ Out of gas

Call 24/7 when you need assistance.

Dedicated Support:

owner.lincoln.com

- ▶ How-to and informational videos.
- ▶ Warranty and maintenance information.
- ▶ Make your payment or schedule service online.
- ▶ Shop for accessories.

Join us in Conversation



*Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at lincolncanada.com for more details.

¹Available via a download and compatible with select smartphone platforms. Message and data rates may apply.

²Lincoln Pickup & Delivery is valid for owners of 2017 or newer model-year Lincoln vehicles. Service available for retail and warranty repairs. Mileage limitations may apply. Lincoln reserves the right to change the program at any time without obligation.

³See dealer for details.


**Roadside assistance for life is only available for model-year 2013 and newer for the original owner.



Our caring agents are empowered to handle your call and concerns from beginning to end.

Table of Contents

- Instrument Panel 4 – 5
- Commonly Used Voice Commands 6
- SYNC 3..... 7 – 9
- Lincoln Embrace 10
- Convenience 11 – 12
- Comfort..... 13 – 14
- Technology..... 15 – 18
- Essential Features 19

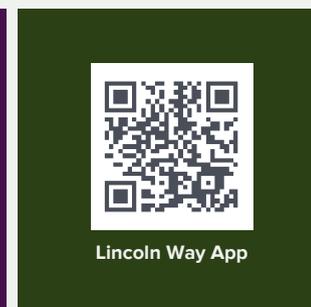

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed), and you can access even more information about your vehicle.



1 Power Adjustable Steering Column*
Use the control on the steering column to adjust the position.

2 Electric Parking Brake
The electric parking brake switch replaces the conventional hand brake. The switch is on the instrument panel. To apply the electric parking brake, pull the switch up. The brake system warning lamp flashes for approximately 2 seconds, and then illuminates to confirm that you applied the parking brake. To release the electric parking brake manually, switch the ignition on, press the brake pedal and then press the switch down. The brake system warning lamp turns off. Your vehicle automatically releases the parking brake when the driver door is closed, the accelerator pedal is pressed and no faults are detected in the parking brake system.

Note: If the electric parking brake warning lamp stays on, then the electric parking brake did not automatically release. You must release the electric parking brake using the switch.

Instrument Panel

2019 NAUTILUS

3 Lane Keeping System
See page 16 for more information.

4 Service Engine Soon Light
Illuminates briefly when you switch the ignition on. If it remains on or blinks after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

5 Information Display
Provides information about various systems in your vehicle. Use the steering wheel controls to choose and confirm settings and messages. Refer to the **Information Displays** chapter of your **Owner's Manual** for more information.

6 Steering Wheel Controls

- VOL +** or **VOL -** Press to increase or decrease volume levels.
- ◀** or **▶** Press to access the previous or next media selection.
- ✕▶** Press to silence the current media.
- ↶** Press to exit a menu.
- 🗣️** Press to access voice recognition.
- 📞** Press to end a phone call.
- 📞** Press to access phone mode or to answer a phone call.

You can also use the steering wheel buttons to control the SYNC 3 screens including the audio, settings, navigation and information display options.

Use the toggle control and the OK button to select and confirm options for SYNC 3.

7 Keyless Starting
You can start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again, without applying the brake, to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine shuts down automatically. Before this happens, a message appears in the information display, allowing you time to override the shutdown feature. If you try to leave the vehicle when it is still on, the horn will sound twice.

Note: A valid key must be inside the vehicle for the ignition to start.

8 Push Button Shift Transmission
Your vehicle includes an electronic transmission. The shift buttons are on the instrument panel.

Putting Your Vehicle in Gear

A. Fully press down on the brake pedal, then press and release one of the **PRNDS** buttons to select your gear.

B. The selected gearshift button lights and the information display shows the selected gear. Release the brake pedal and your transmission remains in the selected gear.

Note: When entering an automatic car wash, **always** put your vehicle in **Stay in Neutral** mode. To put your vehicle in **Stay in Neutral** mode, make sure your vehicle is stationary first, and then:

- A.** Press the neutral (N) button once. The information display prompts you to press the neutral (N) button again to enter **Stay in Neutral** mode.
- B.** Press the neutral (N) button again. The message display confirms when your vehicle enters **Stay in Neutral** mode. The neutral (N) button flashes continuously to confirm your selection.
To exit **Stay in Neutral** mode, select another gear.

9 Hazard Warning Control

10 Auto Hold
See page 17 for more information.

Commonly Used Voice Commands

Press the  button on your steering wheel and then say:

Global

- ▶ Help
- ▶ Cancel
- ▶ Main Menu
- ▶ List of Commands

Audio

- ▶ Sirius Channel <channel number>¹
- ▶ AM <frequency number>
- ▶ FM <frequency number>
- ▶ **Bluetooth** Audio
- ▶ USB

Navigation ²

- ▶ Find an Address
- ▶ Find a ____
- ▶ Find a POI
- ▶ Find an Intersection
- ▶ Find the Nearest ____
- ▶ Show Previous Destinations
- ▶ Drive Home
- ▶ Cancel Route
- ▶ Show Route
- ▶ Where Am I?

Phone

- ▶ Pair Phone
- ▶ Call <contact name>
- ▶ Call <contact name> at <location>
- ▶ Dial <number>
- ▶ Delete
- ▶ Clear

Climate

- ▶ Set Temperature ____

SiriusXM Traffic and Travel Link ^{1,2}


- ▶ Show Traffic
- ▶ Show Weather Map
- ▶ Show Fuel Prices
- ▶ Show 5-Day Forecast

Apps

- ▶ Mobile Apps
- ▶ List Mobile Apps
- ▶ Find Mobile Apps
- ▶ <App Name>

¹ SiriusXM may not be available in all markets. Activation and a subscription are required.

² if equipped

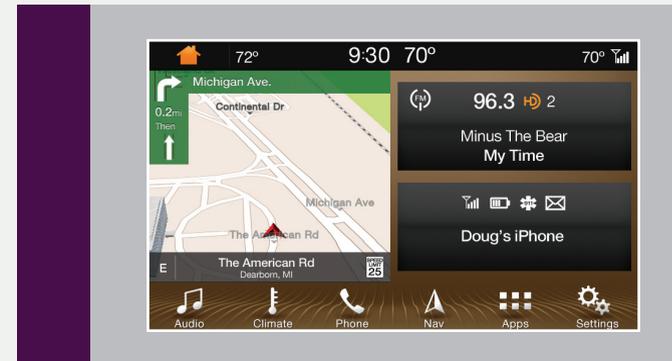

The SYNC 3 system allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your **Bluetooth** wireless technology-enabled phone, the touchscreen provides easy integration with many of your vehicle's features.

Using The Touchscreen

- ▶ To operate the touchscreen, you can simply touch the item or option that you want to select. The button changes color when you select it.
- ▶ The touchscreen allows you quick access to all of your comfort, navigation, communication and audio options. Using the status and feature bar, you can quickly select the feature you want to use.

SYNC Owner Account and Updating Your System

A SYNC owner account is essential for keeping up with the latest software downloads available for SYNC, provides you access to customer support for questions you may have and allows you to maintain your account permissions. To create a SYNC owner account, visit the website:

owner.ford.com (United States)

syncmyride.ca or **syncmaroute.ca** (Canada)

Once you have your SYNC owner account, you can log in to visit the SYNC software update page to update SYNC using a USB. You can also update your SYNC system over Wi-Fi. For information on how to update your system, please see the **SYNC 3** chapter in your **Owner's Manual**.

Some services may not be available in your area. For additional support, refer to your **Owner's Manual**, visit the website or call the toll-free number.

U.S. customers: Visit owner.lincoln.com or call **1-800-392-3673**.

Canadian customers: Visit syncmyride.ca or syncmaroute.ca or call **1-800-565-3673**.

Home Screen

You can reach the home screen by pressing the  button on the main screens. The Home screen displays features such as audio, phone and settings.

Using Voice Recognition

Using voice commands allows you to keep your hands on the wheel and focus on what is in front of you. To activate the SYNC 3 voice commands, press the voice button  on the steering wheel and wait for the prompt. You can find the available voice commands in the **SYNC 3** chapter of your **Owner's Manual** or in the **Commonly Used Voice Commands** in this guide.

Pairing Your Phone for the First Time

Pair your **Bluetooth** wireless technology-enabled phone with SYNC before using the functions in hands-free mode. Switch on **Bluetooth** on your device to begin pairing. See your phone's manual if necessary. To add a phone:

1. Select **Add Phone**.
2. Follow the on-screen instructions.
3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle on your phone.

5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.

To pair subsequent phones, please see the **SYNC 3** chapter in your **Owner's Manual**.

Using your Connected Phone

You can use voice commands to make, receive, accept and reject phone calls. Text messages can also be sent and received through the system. Please refer to the **SYNC 3** chapter in your



Owner's Manual for more information about using your connected phone with the system, including voice commands and screen selections.

Smartphone Connectivity

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone. When you use Apple CarPlay or Android Auto, you can:

- ▶ Use your phone's voice assistant.
- ▶ Send and receive messages.
- ▶ Listen to music.
- ▶ Make calls.

Apple CarPlay and Android Auto disable some SYNC 3 features. Most Apple CarPlay and Android Auto features use mobile data.

Audio



You can select from a variety of entertainment options including AM/FM radio, USB, **Bluetooth** Stereo and Apps.

Presets

To set a new preset, tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station and then returns. There are two preset banks available for AM, three banks for FM and three banks for SiriusXM*. To access additional presets, tap the preset button.

Climate


You can adjust climate control features, including the temperature, airflow direction,

fan speed and other climate features. You can also use voice commands to make climate adjustments.

Apps

AppLink enables voice, steering wheel and touchscreen control of certain smartphone apps. Once an app is running through AppLink, you can control the main features of the app through voice commands and steering wheel controls.

Navigation

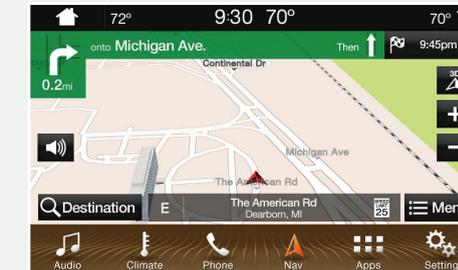

Your navigation system is comprised of two modes. Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available). 2D city maps show detailed outlines of buildings, visible land use

and landscape features. **Destination** allows you to set a destination through search, previous destinations or preset home, work and favorite destinations.

Select **Destination** on the screen, then select **Search**. You can search for a destination using a street address, partial address, city, point of interest, intersection or latitude and longitude. Once you have chosen your destination, press **Start**. The system uses a variety of screens and prompts to guide you to your destination.

Settings

Under the **Settings** menu, you can access and adjust the settings for many of the system features. To access additional settings, swipe the screen left or right.

As you approach or leave your vehicle, key areas of your vehicle automatically adjust, including the following personalization features.

Welcome Lighting

The Lincoln welcome mat projection lights are on the bottom of the exterior mirror housings. They project an image onto the ground a short distance from your vehicle when welcome lighting or lighted entry turns on.

Auto-folding Exterior Mirrors*

Automatically folds the exterior mirrors toward the glass when you place the transmission into park (P), turn off the vehicle, open and close the driver door and lock the vehicle. The exterior mirrors automatically unfold and return to their driving positions after you unlock the vehicle and open and close the driver door. Push the power-folding mirror control on the door to fold your mirrors on demand.

Illuminated Entry

The interior lamps and select exterior lamps will light when you unlock the doors with the remote control.

Easy Entry and Exit

Moves the driver seat rearward up to 2 inches (5 centimeters). Additionally, the power tilt and telescoping steering wheel moves to the full up position when the transmission is in park (P) and you switch off the keyless start ignition. The driver seat and steering column return to their previous positions when you push the keyless start ignition button.

Lincoln Connect with Lincoln Way®

With a Lincoln Connect-equipped vehicle, you can use the Lincoln Way mobile app to track your vehicle's location and remotely access vehicle features such as start, lock and unlock and vehicle status including fuel level and approximate mileage. You can also schedule specific times to remotely start your vehicle so it's ready to hit the road as soon as you are. Your vehicle is capable of providing a Wi-Fi hotspot if you have a vehicle hotspot data plan. Lincoln Connect is an optional feature on select vehicles. Lincoln Way® is available through a complimentary download via the Apple App Store® or Google Play™. Message and data rates may apply. Services may be limited by mobile phone network coverage area.



*if equipped

SecuriCode™ Keyless Entry Keypad

The SecuriCode keypad is near the driver window and illuminates when touched. The keypad allows you to lock or unlock the doors without a key. You can operate the keypad with the factory set, five-digit entry code found on the owner's wallet card in the glove box or by using your personal code. You must press each number within five seconds of each other.



To Unlock the Driver Door

Enter the factory-set code or your personal code. The interior lamps light.

To Unlock All Doors

Enter the factory-set code or your personal code, then press **3-4** within five seconds.

To Lock All Doors

Press and hold **7-8** and **9-0** at the same time (with the driver door closed). You do not need to enter the keypad code first.

See the **Doors and Locks** chapter in your **Owner's Manual** for more information on how to use SecuriCode.

Intelligent Access



You can unlock and lock the vehicle without taking the key out of your pocket or purse when your intelligent access key is within 3 feet (1 meter) of your vehicle.

To unlock, touch the unlock sensor on the back of the door handle for a brief period and then pull on the door handle, being careful to not touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.

Intelligent Access Remote Entry Icons

Press  once to lock all doors.

Press again within three seconds to confirm that you locked all doors.

Press  once to unlock the driver door. Press again within three seconds to unlock all doors.

Press  to activate the panic alarm. Press again or switch the ignition on to deactivate.

Press  twice within three seconds to open the liftgate.

Car finder: Press  twice within three seconds to locate your vehicle.

The horn sounds and the direction indicators flash.

Note: The intelligent access transmitter also contains a mechanical key blade that you can use to unlock the driver door, if necessary.



Power Liftgate*

Your liftgate has an automatic open and close feature.

To open remotely, press  twice on your remote control within three seconds.

You can also operate the liftgate by pressing the  button on the instrument panel. To close the liftgate, press and release the liftgate control button on the liftgate.

To Set the Liftgate Open Height

1. Open the liftgate.
2. Stop the liftgate movement by pressing the control button on the liftgate when it reaches the desired height.
3. Press and hold the control button on the liftgate until you hear a tone, indicating programming is complete.

The system recalls the new open liftgate height when you use the power liftgate feature. To change the programmed height, repeat the procedure.

Note: You cannot program the height if the liftgate position is too low. Once you open the power liftgate, you can manually move it to a different height. When operating the power liftgate after you have programmed a lower height than full-open, you can fully open the liftgate by manually pushing it upward to the maximum open position.

Hands-free Liftgate Operation*

1. Make sure you have your intelligent access transmitter within 3 feet (1 meter) of the liftgate.
2. Move your foot under and back from the rear bumper (between the exhaust tips), similar to a kicking (front-to-back) motion. Do not move your foot sideways or the sensors may not detect the motion.

Note: In vehicles equipped with the towing package, you must kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the trailer hitch.

Wireless Accessory Charging*

This feature supports Qi inductive charging-compatible devices. You can only charge one device if the vehicle is off, in accessory mode or if SYNC is on. Keep the charging area clean and remove foreign objects prior to charging a device.



To begin charging your device, place the device in the port with the charging side down. The charging stops after your device reaches a full charge.

For more information, see the **Auxiliary Power Points** chapter of your

Owner's Manual.

Front Fog Lamps*

 Press to switch the fog lamps on or off.

You can switch the fog lamps on when the lighting control is in any position except off and the high beams are not on.



Climate Controlled Front Seats



For heated front seats, press  repeatedly to cycle through the various heat modes and off. For cooled front seats, press  repeatedly to cycle through the various cooling modes and off.

Note: The ventilated seats function only when the engine is running.

Rear Heated Seats*

The rear heated seat controls are on the rear of the center console. Press  to switch between the high, low and off settings.

EasyFold® Rear Folding Seats



The controls are on the left-hand rear quarter trim panel (accessible from the liftgate area). Press and hold either the left or right control to lower the corresponding seatback. To return the seats to their upright position, manually rotate the seatbacks until they latch with a click into the upright position.


Reclining Rear Seats*

With the seat occupied, pull the lever up to recline the seatback.

Heated Steering Wheel*

Your vehicle may include a heated steering wheel. Press the  icon in your touchscreen to turn this feature on and off.

Power Adjustable Seats*

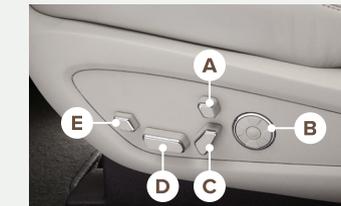

You can adjust your driver seat in a variety of ways:

- ▶ Press **A** to raise, lower and tilt the head restraint.
- ▶ Press **B** to use the multi-contour front seats with active motion functions.
- ▶ Press **C** to change the backrest angle and move the upper back restraint pivot point forward and rearward.
- ▶ Press **D** to raise, lower, move forward or backward or tilt the cushion.
- ▶ Press **E** to adjust the cushion length.

The front seats also include a massaging feature. See the **Seats** chapter of your **Owner's Manual** for more details.

Locking Glove Box*



You can open the glove box by pressing the button located on the instrument panel.

Note: The electronic glove box does not function if the vehicle battery is dead or after you switch the ignition off and lock the vehicle.

Manual Entry

1. Open the passenger door.
2. Remove the end cap from the instrument panel.
3. Insert a pen or pencil into the latch device to release the glove box.

Moonroof

The moonroof controls are on the overhead console and have a one-touch open and close feature. To stop its movement during one-touch operation, press the control a second time.



 Press and release to open the moonroof. The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the control again.

 Press and release to close the moonroof.

 Press and release to vent the moonroof.

 Press to open the sunshade. The sunshade stops short of its fully opened position for the comfort of rear passengers. To open the sunshade fully, press the control again.

 Press to close the sunshade.

Memory Function

The memory function allows a one-touch recall of personalized memory features including the driver seat, power mirrors and power steering column*. Use the memory controls on the driver door to program and then recall memory positions. To program a position, switch the ignition on. Adjust the memory features to your desired positions. Press and hold the desired preset button until you hear a single tone. You can now use these controls to recall the set memory positions. You can also program your memory seat to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved positions.

See the **Seats** chapter in your **Owner's Manual** for more details.

Ambient Lighting*

To access and adjust:

1. Press the **Settings** icon then **Ambient Lighting**.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

Remote Start

Remote start allows you to start the engine from outside your vehicle using your key.

To start, press  and then press  twice within three seconds. Before driving your vehicle, you must press the push button ignition switch on the instrument panel while applying the brake pedal. You can also turn your vehicle off from outside after a remote start by pressing  once. If your vehicle is equipped with remote feedback, an LED on the key provides status feedback of remote start or stop commands. A solid green light means the remote start or extension was successful while a blinking red light means the remote start or stop has failed. A solid red light means that the remote stop was successful and the engine is off. When the system is waiting for a status update from the vehicle, you will see a blinking green light.

Auto-Start-Stop*

The system helps reduce fuel consumption by automatically stopping and restarting the engine when your vehicle has stopped. The engine restarts automatically when you release the brake pedal.

You can switch the system off by pressing the Auto-Start-Stop button located on the center console. The button illuminates. This only deactivates the system for the current ignition cycle. Press the button again to restore Auto-Start-Stop function.

The system automatically enables every time you start your vehicle if all of the necessary conditions are met.

Please see the **Unique Driving Characteristics** chapter of your **Owner's Manual** for more information.

Adaptive Cruise Control*

Adaptive Cruise Control adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the gap controls on the steering wheel. To set a cruise speed: switch cruise control on, accelerate to the desired speed and press the **SET-** button. An indicator light, the current gap setting and your set speed appear in the information display. Press **CAN** to cancel cruise control, press the **RES+** button to return to the set speed and gap setting and press

the **OFF** button or switch off the ignition to turn cruise control off. The system can also bring your vehicle to a complete stop and may resume going forward in stop-and-go traffic.

Lane Centering* is designed to help keep your vehicle in the center of the lane by applying continuous assistance steering torque input toward the lane center on highways. To switch it on press the  button.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary.

Refer to the **Cruise Control** chapter in your **Owner's Manual** for safety information, more details and limitations.

360 Degree Camera*

The  button is on the instrument panel and allows you to toggle through different camera views. The front and rear cameras have multiple screens that include Normal View with 360, Normal View and Split View.

When in park (P), neutral (N) or drive (D), only the front images display when you press the button. When in reverse (R), only the rear images display when you press the button.

Note: The 360 degree camera system turns off when your vehicle is in motion at a low speed, except when in reverse (R).

Note: Keep the star emblem free from snow, ice and large accumulations of dirt. If something is blocking the star emblem from moving, the camera will not deploy.

Rear View Camera

The Rear View Camera system provides a video image of the area behind the vehicle. The image appears when the transmission is in reverse (R) and uses a variety of guidelines to alert you of your proximity to objects. If your vehicle is equipped with the Obstacle Distance Indicator, the system provides an image of your vehicle and the red, yellow and green sensor zones. For more information about the Rear View Camera, please see the **Parking Aids** chapter of your **Owner's Manual**.



Note: Switching on the rear washer also turns on the rear camera washer.

Pre-Collision Assist*

If your vehicle is rapidly approaching another stationary vehicle, a vehicle traveling in the same direction as yours or a pedestrian within your driving path, the system is designed to provide three levels of functionality:

Alert: When activated, a red warning light flashes, an audible warning chime sounds and a warning message shows in the information display.



Brake Support: The brake support system assists the driver in reducing the collision speed by lightly applying the brakes. If the risk of collision further increases after the warning light illuminates, the brake support prepares the brake system for rapid braking. The system does not automatically activate the brakes, but if you press the brake pedal, the system may apply full force, even if the brake pedal is lightly pressed.

Active Braking: Active braking may activate if the system determines that a collision is imminent. The system may help the driver reduce impact damage or avoid the crash completely.

See the **Driving Aids** chapter in your **Owner's Manual** for safety information, more details and limitations.

Evasive Steer Assist*

When your vehicle is rapidly approaching a vehicle that is stationary or traveling in the same direction as you, evasive steering works in conjunction with the

Pre-Collision Assist system to apply additional steering torque to help you steer around the vehicle.

The system only activates when all of the following occur:

- ▶ The Pre-Collision Assist system detects a vehicle ahead and starts to apply Active Braking.
- ▶ You turn the steering wheel in an attempt to steer around the vehicle

After you turn the steering wheel, the system applies additional steering torque to help you steer around the vehicle. After you pass the vehicle, the system applies steering torque in the opposite direction to encourage you to steer back into the lane. The system deactivates after you fully pass the vehicle.

Lane Keeping System*

When you switch the system on and the system detects an unintentional drift out of your lane is likely to occur, the system notifies or assists you to stay in your lane through the steering system and information display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert Mode is selected. You can switch the system on or off by pressing the  button on the direction indicator.

Refer to the **Driving Aids** chapter of your **Owner's Manual** for system operation and limitations.

Auto Hold

Auto Hold can assist you while stopping at traffic lights or while in traffic jams by holding the brakes when you stop the vehicle. Press the **AUTO HOLD** button to switch the system on. The **AUTO HOLD** button illuminates. When the system is on and actively holding the vehicle, **AUTO HOLD** displays in the instrument cluster.

When you press the accelerator pedal, Auto Hold automatically releases the brakes. In certain situations, Auto Hold may apply the electric parking brake and illuminate the brake warning lamp in the instrument cluster.

Auto Hold turns off when you power down your vehicle, or you can switch the feature off manually by pressing the **AUTO HOLD** button. Switch Auto Hold off if you are towing a trailer or having the vehicle towed.

See the **Brakes** chapter of your **Owner's Manual** for more details.

Front, Rear and Side Parking Aids*

The sensing systems warn you of obstacles within a certain range of your vehicle. The systems turn on automatically whenever you switch the ignition on.

The side sensing system is active when the transmission is in any position except park (P). You can switch the rear parking aid system off through the information display menu or from the pop-up message that appears once you shift the transmission into reverse (R). You can switch the front parking aid off through the parking aid switch.

Note: Visibility aids do not replace the need to watch where the vehicle is moving.

Refer to your **Owner's Manual** for safety information, more details and limitations.

Active Park Assist with Parallel Parking, Perpendicular Parking and Parallel Park Out Assist

Active Park Assist detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) when you control the accelerator, gearshift and brakes. The system visually and audibly guides you to park your vehicle. Press the Active Park Assist  button once for parallel parking or twice for perpendicular parking. The system displays a message and a corresponding graphic to indicate that it is searching for a parking space. Use the direction indicator to select from which direction you want to begin searching, either to the left- or right-hand side of your vehicle. Use the park out assist feature when your vehicle is at rest in a parallel parking space. Press the button, and then follow the instructions on the display.

Use your direction indicator to signal from which side of your vehicle you want to exit the parking space. After the system directs your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual**.

Lincoln Drive Control*

Lincoln Drive Control delivers the Lincoln driving experience through a suite of sophisticated electronic vehicle systems.

These systems continuously monitor your driving inputs and the road conditions to optimize ride comfort, steering, handling, powertrain response and sound. You can preset your preferences for these systems within the information display.

These systems have a range of modes from which you can choose in order to customize your ideal driving experience:

- ▶ **Comfort** – Provides a more relaxed driving experience, maximizing comfort. Your steering effort decreases and the suspension movement is more fluid. Comfort mode is ideal when you desire enhanced traveling comfort.
- ▶ **Normal** – Delivers a balanced combination of comfortable, controlled ride and confident handling. This mode provides an engaging drive experience and a direct connection to the road without sacrificing any of the composure demanded from a luxury vehicle.
- ▶ **Sport** – Provides a sportier driving experience. The suspension stiffens with an emphasis on

handling and control. The engine responds more directly to your inputs and takes on a more powerful tone. Sport mode is ideal for use during more spirited driving.

SelectShift® Automatic Transmission

With SelectShift automatic transmission, you can use the paddles on your steering wheel to change gears without a clutch.

Pull the (+) paddle on the steering wheel to activate SelectShift.

To change gears:

- ▶ Pull the right paddle (+) to upshift.
- ▶ Pull the left paddle (–) to downshift.

For more information and system operation, please see the **Transmission** chapter of your **Owner's Manual**.

Tire Pressure Monitoring System

The tire pressure monitoring system allows you to view the tire pressure readings through the information display. When one or more of your tires are under-inflated, your vehicle turns on the low tire pressure warning light  in the instrument cluster. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Wheels and Tires** chapter of your **Owner's Manual** for more information.

Tire Sealant and Inflator Kit*

The kit is located under the load floor in the rear cargo area. The kit consists of an air compressor to re-inflate the tire and a canister of sealing compound that will effectively seal most punctures caused by nails or similar objects. This kit provides a temporary tire repair. For complete details, refer to the **Wheels and Tires** chapter of your **Owner's Manual**.

Fuel Tank Capacity/Fuel Info

For vehicles with front wheel drive, the fuel tank capacity is 18.4 gallons (69.5 liters). For vehicles with all wheel drive, the fuel tank capacity is 18.5 gallons (70 liters). We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87.

Do not use any other fuel because it could damage or impair the emission control system.

Open Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

Refueling

When refueling your vehicle:

1. Make sure the ignition is switched off.
2. Fully open the fuel door.
3. Insert the fuel filler nozzle into the fuel system up to the first notch, and leave the nozzle inserted and resting against the cover of the fuel tank until you are done pumping.
4. Make sure you keep the fuel pump nozzle in a level position when refueling or it may impact the flow of the fuel. Improper positioning can also cause the fuel pump to shut off before the fuel tank is full.
5. When you finish refueling, slowly raise and remove the fuel pump nozzle. Fully close the fuel door.

If you are refilling your tank from a fuel container, make sure you use the fuel filler funnel included with your vehicle. Using an aftermarket funnel may not work with the capless system and could cause damage to your vehicle. For more information and for your fuel filler funnel location, please see the **Fuel and Refueling** chapter of your **Owner's Manual**.

Towing Your Vehicle

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the **Towing the Vehicle on Four Wheels** section in the **Towing** chapter of your **Owner's Manual**.