

2005 aviator

QUICK REFERENCE GUIDE

Lincoln/Mercury Customer Relationship Center
P.O. Box 6248, Dearborn, MI 48121
1-800-521-4140 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)

This Quick Reference Guide is not intended to replace the Owner's Guide that contains more detailed information concerning the features of your vehicle and important safety warnings to help reduce the risk of injury to you and your occupants. Always carefully read your entire Owner's Guide when first learning about your vehicle and consult the appropriate section when questions arise.



L I N C O L N



5C5J-19G217-AA

June 2004
First Printing
Quick Reference Guide

Lincoln Aviator
Litho in U.S.A.

Essential Information

FUEL TANK CAPACITY/FUEL RECOMMENDATIONS: Your Aviator's fuel tank can accommodate 22.5 gallons of fuel. Your vehicle is designed to use "Premium" unleaded fuel with an (R+M)/2 octane rating of 91 or higher for optimum performance. The use of fuel with lower octane ratings may degrade performance.

FUSES: If electrical components in your vehicle stop working, a fuse may have blown. (You'll notice a broken wire within the fuse.) For information on changing fuses, please consult your Owner's Guide.

TIRE PRESSURE: Your tire pressure is properly set at the dealership according to the recommended specifications found on the Tire Pressure Label located on the driver door jamb. Please check your tire pressure during routine maintenance and seasonal changes. If the Tire Pressure Monitoring System light stays illuminated after starting, immediately check your tire pressure. **Warning : Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control.**

CHANGING THE TIRES: Your spare tire is not equipped with a Tire Pressure Monitoring System sensor. The Tire Pressure Monitoring System indicator light will illuminate when the spare is in use. Replace the spare with the road tire as soon as possible. If your vehicle is equipped with AWD, remember that a spare tire of a different size must not be used. It can make your vehicle difficult to control and can result in damage to driveline components. If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road.

- **SPARE TIRE:** Under the vehicle, just in front of the rear bumper.
- **SPARE TIRE WINCH DRIVE NUT:** Rear center of the cargo area, under a lid.
- **JACK, LUG NUT WRENCH, JACK HANDLE AND WHEEL CHECK:** Behind the rear seat under the carpeted floor lid in the cargo door.

ROADSIDE EMERGENCIES: To fully assist you if you should have a vehicle concern, Lincoln offers a complimentary roadside assistance program. This program is separate from the New Vehicle Limited Warranty. The service is available 24 hours a day, seven days a week for the New Vehicle Limited Warranty period of four years or 50,000 miles.

Roadside assistance will cover:	Country:	Phone Number:
• Changing a flat tire	United States	(800) 521-4140
• Lockout assistance	Canada	(800) 665-2006
• Jump-starts		
• Towing of your vehicle		
• Limited fuel delivery		

For complete details on any roadside assistance concerns, see the Roadside Emergencies or Customer Assistance sections of your Owner's Guide.

Additional Features



Heated and Cooled Seats (if equipped)

The controls are located on the front door trim panels. To cool the seats, push the icon on the right side of the button; a blue light will illuminate. Push again to disengage. To heat the seats, push the icon on the left side of the button; a red light will illuminate. Push again to disengage. To adjust the heating or cooling levels, rotate the thumbwheel from 1 (MIN) to 5 (MAX). Allow five minutes for the temperature to stabilize.



Remote Entry System

The remote entry system allows you to lock or unlock all vehicle doors, the liftgate and the liftgate window without a key. This system operates in any ignition position.



Unlocking Doors/Liftgate: Press this control to unlock the driver's door; the interior lamps will illuminate with the ignition OFF. Press the control a second time within three seconds to unlock all doors and the liftgate.



Locking Doors/Liftgate: Press this control to lock all doors and the liftgate; the park/turn signal lamps will flash once. To confirm all doors are closed and locked, press the control a second time within three seconds; the park/turn signal lamps will flash once and the horn will chirp. If any of the doors or the liftgate are ajar, the horn will make two quick chirps, reminding you to properly close all doors.



Tire Pressure Monitoring System

Using radio-frequency pressure sensors, this system monitors tire pressure on all road tires and provides the driver with a yellow warning light when air needs to be added. Message Center equipped vehicles provide additional warning messages. The TPMS warning light will reset itself (turn off) after the tires are set to specification and the vehicle is either parked up to 1 hour or the vehicle is driven above 20 mph (30 km/h) for 10 seconds. Please note: Outside temperature affects tire pressure. See Owner's Guide for more information.



Opening the Liftgate and Liftgate Window

To prevent injury or damage to your vehicle, always make sure the liftgate window is closed before opening the liftgate.

The liftgate on your Aviator is designed to be opened from outside the vehicle. You can unlock the liftgate with the power door locks, the remote entry, or the keyless entry pad. Push the center control button under the license plate lamp shield while pulling the liftgate. To open the liftgate window, press the control on the remote entry key fob or, with the liftgate unlocked, push the right control button under the license plate lamp shield.

Audio System

CAUTION: DO NOT USE CD WITH ADHESIVE LABEL*



Audiophile Satellite Ready In-Dash Six CD Radio (if equipped)

(If your Aviator is equipped with a different audio system, please refer to your Owner's Guide.)

- 1 CD/AUX:** Press to select CD/AUX modes. No CD will display if there is not a CD present in the audio system. If a disc is loaded, there will be a number (1-6) inside the circle on the display.
- 2 SCAN FUNCTION:** In radio mode, press to hear a sampling of all listenable stations. In CD mode, press to hear a brief sampling of all selections on the current CD.
- 3 LOADING CD:** Press to open the CD door, then load a CD into the player. Press LOAD and then a preset number to select a slot. Press and hold LOAD to activate autoload.
- 4 VOLUME/POWER CONTROL:** Press the control to turn the audio system on or off. Turn the control to raise or lower volume. The speed sensitive volume feature automatically adjusts radio volume in accordance with vehicle speed to compensate for road and wind noise. To engage, press and hold the volume control for five seconds (with the radio on), then simultaneously press SEL to choose the compensation level.
- 5 AM/FM SELECT:** In radio mode, press AM/FM to select AM or FM frequency bands. In CD mode, press AM/FM to stop play and begin radio play.
- 6 SATELLITE:** Your Audiophile radio comes equipped with satellite-ready capability. The kit to enable satellite reception is available through your Lincoln dealer. The dealer-installed satellite kit is only available in the continental United States.
- 7 DISC/TUNE CAT:** In radio mode, press to move to the next frequency up or down the band. In CD mode, press to select a disc in the CD player. CAT is only available when equipped with satellite radio. The kit to enable satellite reception is available through your Lincoln dealer. Detailed satellite instructions are included with the dealer-installed kit.
- 8 SEEK FUNCTION:** In radio mode, press to move to the next listenable station up or down the band. In CD mode, press to select the next/previous track on the current disc.
- 9 DIGITAL SIGNAL PROCESSING:** Press DSP to access the Ambiance menu. Press SEL to engage/disengage. Turn the volume control to increase/decrease the level of ambiance.
- 10 SETTING MEMORY PRESET STATIONS:** Select AM, FM1, or FM2 band, then select a station. Next, press and hold a numbered control until the sound returns.
- 11 SETTING THE CLOCK:** Your vehicle is equipped with a separate in-dash mounted clock. See your Owner's Guide for information.

*CDs with adhesive labels and irregularly shaped CDs may get stuck in the CD player. Homemade CDs should be identified with permanent felt tip marker rather than adhesive labels.

Climate Control



Automatic Temperature Control

1 AUTO: Press AUTO and select the temperature you find most comfortable. The system will automatically determine fan speed, airflow location and whether outside or recirculated air is required.

2 OFF: Outside air is shut out and the fan will not operate.

3 DIRECT AIRFLOW: You can personally determine where you'd like air to go by choosing one of these manual override controls.

4 DEFROST: To clear thin ice and fog from the windshield, choose DEFROST; this control will distribute outside air through the windshield defroster ducts and the side window demisters. To return to automatic operation, press AUTO.

5 DEFROST REAR WINDOW: Press this control to manually enable or disable the rear window defroster in all modes. After approximately 10 minutes of operation, the climate control system will automatically disable the rear defrost operation. If more defrosting is needed, press the control again.

6 DRIVER TEMPERATURE CONTROL: Press the up arrow of the driver temperature control for a warmer temperature; press the down arrow for a cooler temperature.

7 FAN SPEED: When your climate control system is in automatic mode, the fan speed will automatically adjust to achieve

the selected temperature. To adjust fan speed manually, press the up arrow to increase the speed; press the down arrow to decrease the speed. To return to automatic fan operation, press AUTO.

8 EXTERIOR TEMPERATURE DISPLAY: Press EXT to display the outside temperature; press again to end exterior temperature display.

9 FAHRENHEIT/CELSIUS: Press the °F °C control to switch between Fahrenheit and Celsius.

10 A/C: You may override automatic operation at any time by pressing the A/C control. To return to automatic air conditioning operation, press AUTO.

11 RECIRCULATED AIR: Press this button to manually control recirculated air; to return to automatic recirculated air, press AUTO.

12 PASSENGER TEMPERATURE CONTROL: Press the up arrow of the passenger temperature control for a warmer temperature; press the down arrow for a cooler temperature.

13 DUAL TEMPERATURE ZONE: Press DUAL to enable or disable the dual zone temperature feature that allows driver and front passenger to select a temperature based on personal preference. Press DUAL again to disable this feature.

2005 aviator

QUICK REFERENCE GUIDE




LINCOLN

2005 aviator

QUICK REFERENCE GUIDE



Congratulations on your new Lincoln Aviator. This exciting vehicle comes equipped with many sophisticated features – some will require no explanation, others may be new to you. This Quick Reference Guide was designed to acquaint you with many of the features you'll use most.

Take a few minutes to use this Quick Reference Guide with the accompanying CD-ROM. Insert the CD into any audio CD player; find the numbered call-outs on the instrument panel portion of this guide, then select the corresponding number on the CD audio track for a fast, convenient introduction to Aviator's most-used features.

When you have more time, place the CD into your computer for an enjoyable interactive introduction to your new vehicle. (The CD jacket will tell you if your computer meets the minimum configuration requirements.)

For detailed information, please consult your Owner's Guide.



This vehicle handles differently from an ordinary passenger car in driving conditions which may occur on streets and highways and off-road. **DRIVE WITH CARE AND WEAR A SAFETY BELT AT ALL TIMES.** Ford urges you to read the Owner's Guide and Driving Your SUV or Truck Supplement for

further information on safe driving precautions and instructions.

Message Center

Your Message Center is located on your instrument cluster. With the ignition in the ON position, it displays important vehicle information while constantly monitoring vehicle systems. The Message Center will also notify you of potential vehicle problems by displaying system warnings followed by a long indicator chime.

SETUP

Setup Menu

Press this control for the following displays:

- System Check
- Units (English/Metric)
- Autolock
- Easy Entry/Exit
- Autolamp Delay
- Oil Change
- Language
- Rear Park Assist (in Reverse)
- AWD locked (if equipped)
- AdvanceTrac™

Selecting the system check function from the SETUP menu causes the Message Center to cycle through each of the systems being monitored. Each system will indicate either an OK message or a warning message for three seconds.

Pressing the RESET control cycles the Message Center through each of the systems being monitored.

The sequence of the systems check report and how it appears in the Message Center is as follows:

- | | |
|-----------------------|------------------------|
| 1 FUEL LEVEL (if low) | 6 ENGINE TEMP |
| 2 WASHER FLUID LEVEL | 7 OIL PRESSURE |
| 3 OIL LIFE IN XX% | 8 TIRE PRESSURE SYSTEM |
| 4 ADVANCETRAC™ | 9 BRAKE FLUID LEVEL |
| 5 PARK ASSIST | 10 CHARGING SYSTEM |

RESET

Reset

Press this control to select and reset functions shown in the INFO menu and SETUP menu.

PRESS RESET
TO CLEAR

INFO

Info Menu

This control displays the following:

- Odometer/Compass
- Trip Odometer/Odometer/Compass
- Distance to Empty
- Average Fuel Economy
- Trip Elapsed Drive Time

System Warnings

System warnings alert you to possible problems or malfunctions in your vehicle's operating systems. In the event of a multiple warning situation, the Message Center will cycle the display to show all warnings by displaying each one for four seconds.

The Message Center will display the last selected feature if there are no more warning messages. This allows you to use the full functionality of the Message Center after you acknowledge the warning by pressing the RESET control and clearing the warning message.

Warning messages that have been reset are divided into three categories that:

- Cannot be cleared until the condition is corrected.
- Will reappear on the display ten minutes from the reset.
- Will not reappear until an ignition OFF-ON cycle has been completed.

Instrument Panel



2

3

4

5

6



7

8

9

10

11

12



2 Headlamps

Rotate the headlamp control clockwise to the second position to turn on the headlamps. Pull the headlamp control towards you to turn on the foglamps. Must be in autolamp mode, parklamp position or headlamp position for foglamps to operate. Rotate the control counterclockwise to initiate the autolamps. (This light-sensitive system turns your exterior lamps on and off automatically. It also keeps the lights on for approximately 20 seconds after the ignition switch is turned to the OFF position.) To turn the system off, rotate the control clockwise to the OFF position.



3 ABS Light

Your anti-lock braking system (ABS) detects the onset of wheel lockup during brake applications and helps prevent wheels from locking during extreme braking situations. The ABS warning light will illuminate when you start your engine; however, if it stays on, continues to flash or fails to illuminate, see your dealership's service department immediately.



4 Service Engine Soon

This light will illuminate briefly when you start your vehicle to ensure that the engine warning system is functional. If it comes on after the engine is started, one of your engine's emission control systems may be malfunctioning. Or, it may stay on because your vehicle is out of fuel, existing fuel quality is poor, or the fuel cap hasn't been properly tightened. If you have added high quality fuel or tightened the fuel cap and the light continues to stay on, remember that it can take three driving cycles for the light to turn off. (A driving cycle consists of a cold engine startup followed by mixed city/highway driving.) No additional vehicle service would be required.



5 Speed Control

You must be traveling at or above 30 miles per hour to use the speed control system. Press ON to enable speed control. Press SET + to set a speed. To set a higher speed, accelerate to the desired speed, press and release SET +. To establish a lower speed, press and hold the SET - control until you get to the desired speed, then release the control or depress the brake pedal or press CNCL until the desired vehicle speed is reached then press the SET + control. To return to a previously set speed, press RES. To disengage speed control and erase the previously programmed set speed, press OFF.

6 Audio System

Please see Audio System on the reverse side of this guide.

7 Climate Control

Please see Climate Control on the reverse side of this guide.



8 Turn Signal/Wiper Washer Controls

For a single swipe with no wash, tap the end of the stalk briefly. The bars of varying length are for intermittent wiper operation. When in this position, rotate the control upward for fast intervals and downward for slow intervals. For three swipes with wash, push and hold the end of the stalk. For a longer wash, push and hold the end of the stalk. The wipers and washer fluid will be activated for up to ten seconds.

For rear wiper operation, rotate the rear window wiper and washer control to the desired position. Select INT 2 for normal speed operation, INT 1 for intermittent operation, or OFF to turn the rear wiper/washer off. For rear wash cycle, rotate (and hold as desired) the rear wiper/washer control to either position. The control will automatically return to the INT 2 or OFF position.



9 Clock

Your clock is mounted on your instrument panel. Press the right control to increase the time displayed, the left control to decrease the time displayed.



10 Defrost Windshield

To clear thin ice and fog from the windshield, choose the defrost mode from the manual override controls; this control will distribute outside or recirculated air through the windshield defroster ducts and the side window demisters. To return to automatic operation, press AUTO.



11 AdvanceTrac™ with Roll Stability Control

By monitoring vehicle speed, lateral acceleration, and intended direction, the AdvanceTrac™ system provides enhanced traction and stability on slippery surfaces, or in emergency maneuvers. The system defaults to on. If your vehicle should become stuck, try switching the system off by pressing the AdvanceTrac™ button on the center console. When the system is functioning, a yellow icon will flash.



12 Parking Brake Release

Pull the release lever to release the parking brake. Driving with the parking brake on will cause the brakes to wear out quickly and reduce fuel economy. The parking brake is not recommended to stop a moving vehicle. However, if the normal brakes fail, the parking brake can be used to stop your vehicle in an emergency. Since the parking brake applies only the rear brakes, the vehicle's stopping distance will increase greatly and the handling of your vehicle will be adversely affected.