

All information contained in this Lincoln Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and / or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information.

For detailed operating and safety information, please see your Owner's Guide.

June 2005
Second Printing
Quick Reference Guide

Lincoln Mark LT

LINCOLN
Litho in U.S.A.



6L3J-19G217-FA

ESSENTIAL INFORMATION

FUEL: Your vehicle is designed to use “Regular” unleaded gasoline with a pump (R+M)/2 octane rating of 87. Note: when “Low Fuel Level” appears in the message center display, you must push the RESET button to clear this warning. Until fuel is added, “Low Fuel Level” will reappear at 10 minute intervals. **TIRE PRESSURE:** Your tire pressure is properly set at the dealership to the recommended specifications found on the Tire Label or Safety Compliance Certification Label located inside on the edge of the driver’s door pillar. Please check your tire pressure during routine maintenance and seasonal changes. **FUSES:** If electrical components in the vehicle are not working, a fuse may have blown. For more information about changing a fuse, please see your Owner’s Guide. **FUEL PUMP SHUT-OFF SWITCH:** After a collision, if the engine cranks but does not start, the fuel pump shut-off switch may have to be reset. The switch is located in the front passenger’s footwell, behind the kick panel access cover, to the left of the fuse box. For complete details on resetting the switch, please see your Owner's Guide. **CHANGING THE TIRES:** For more information on changing the tires, please see your Owner’s Guide. **LOCATION OF THE SPARE TIRE AND TOOLS:** The spare tire is located under the vehicle, just forward of the rear bumper. The jack, jack handle and wheel nut wrench are located under the rear seat on the passenger side of the vehicle. **ROADSIDE EMERGENCIES:** To fully assist you if you should have a vehicle concern, Ford offers a complimentary Roadside Assistance Program. This program is separate from the New Vehicle Limited Warranty. The service is available 24 hours a day, seven days a week for the New Vehicle Limited Warranty period (U.S.) or Basic Warranty period (Canada) of four years or 50,000 miles (80,000 km). Roadside Assistance will cover: Changing a flat tire, jump-starts, limited fuel delivery, lock-out assistance, and towing of your vehicle. Roadside Assistance Centers: **UNITED STATES** (800) 521-4140 **CANADA** (800) 665-2006. For complete details on any roadside assistance concern, see the Roadside Emergencies chapter or the Customer Assistance chapter in your Owner’s Guide.

AUDIOPHILE IN-DASH SIX CD / MP3 / SATELLITE COMPATIBLE SOUND SYSTEM

.1 EJECTING CDS:

Press this to eject a CD. For the In-dash Six CD / MP3 system, press and hold to auto-eject all CDs present in the system.

.2 LOADING CDS:

Press the LOAD button and then a preset number to select a slot. Pressing and holding LOAD will activate the autoloader to load up to 6 CDs.

.3 ON / OFF / VOLUME CONTROL:

Press to turn ON or OFF. Turn to increase or decrease volume.

.4 AM / FM AND CD SELECT:

In radio mode, press to select AM or FM frequency bands. Press CD to begin CD play. In CD mode, press AM / FM to stop play and begin radio play.

.5 SETTING MEMORY PRESETS:

To set a station: Select a frequency band with the AM / FM button, then select a station. Press and hold a numbered preset button until the sound returns.

.6 FOLDERS: Press to access previous or next folder on MP3 discs, if folders are available.

.7 SEEK FUNCTION: Press to access the next listenable station or CD track.

.8 SCAN FUNCTION: Press for a brief sampling of radio stations or CD tracks. Press again to stop.

.9 SHUFFLE FUNCTION: SHUFFLE plays tracks in random order.

.10 MUTE MODE:

Pressing the MUTE button will mute the playing media. Pressing it again will return to the playing media.

.11 SATELLITE RADIO CONTROLS & FEATURES (IF EQUIPPED): Satellite Radio Button (AUX): Press to enter Satellite Radio Mode

Channel Switch & Select Button (SEEK): Use (◀ SEEK/SEEK ▶) to navigate over 120 Sirius Channels.

Category Mode: Restricts channels to a selected category only. See Owner’s Guide for details. To exit Category Mode: press MENU until the current category appears on the display, then press (▲/▼) to select “CATEGORY ALL” and press SEEK to select.

Memory Presets (1-6): Sets and selects preset channels.

.12 TUNE / DISC SELECT:

Press to go up or down the radio frequency or to select a desired disc. Also, use in menu mode to select various settings.

.13 TEXT: In CD mode, this feature reads and displays track, song title, artist name and album title.

SPEED SENSITIVE VOLUME:

This audio system is equipped with speed sensitive volume. The volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Press MENU to access and use SEEK to adjust.



AUTOMATIC TEMPERATURE CONTROL (ATC) SYSTEM WITH HEATED SEATS

.14 TEMPERATURE CONTROL: Increases / decreases the temperature in the cabin.

.15 DRIVER HEATED SEAT CONTROL: Press once to activate high heat; press a second time to activate low heat. Press a third time to deactivate.

.16 AUTO: The system will automatically determine fan speed, airflow location, A/C on or off, and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature.

.17 A/C: Activates / deactivates the air conditioning.

AIRFLOW DIRECTION CONTROLS: These controls allow you to choose the air distribution mode you desire.

.18 Distributes air through the instrument panel and center console registers.

.19 Distributes air through the windshield defroster ducts, demister outlets, and the front and rear seat floor ducts.

.20 Distributes air through the floor and rear seat floor vents.

.21 Recirculates air in the cabin, thereby reducing the amount of time needed to cool down the interior of the vehicle when used with A/C.

.22 Distributes air through the windshield defroster vents, demister outlets, and the front and rear seat floor vents. The system will automatically provide outside air to reduce window fogging.

.23 DEFROST: Use to clear ice or fog from the windshield by distributing air through the windshield defroster and demister vents.

.24 REAR DEFROST / HEATED MIRRORS (IF EQUIPPED): Use to defrost your rear windshield of fog and thin ice. It also operates the heated mirrors to remove snow and thin ice from the side mirrors. If your vehicle is equipped with a power sliding rear window, rear defrost is not available.

.25 PASSENGER HEATED SEAT CONTROL: Press once to activate high heat; press a second time to activate low heat. Press a third time to deactivate.


.26 FAN SPEED CONTROL: Increases / decreases the fan speed.

MAX A/C OVERRIDE OF AUTO FUNCTION: Select panel mode. Then select A/C and recirculated air. Set the temperature setting to 60°F. Adjust fan speed to maintain comfort.



2006 LINCOLN MARK LT
QUICK REFERENCE GUIDE

Welcome to the unparalleled luxury, extraordinary functionality and incredible comfort that is your new Lincoln Mark LT. This Quick Reference Guide was designed to help you get to know your new Lincoln Mark LT. Combined with the accompanying CD-ROM, it will help you quickly get to know many of your new Mark LT's features. For more detailed information, place the CD into your computer, or see your Owner's Guide. Welcome to the perfect balance of elegant design and highly functional engineering. Let's get to know your Lincoln Mark LT better.

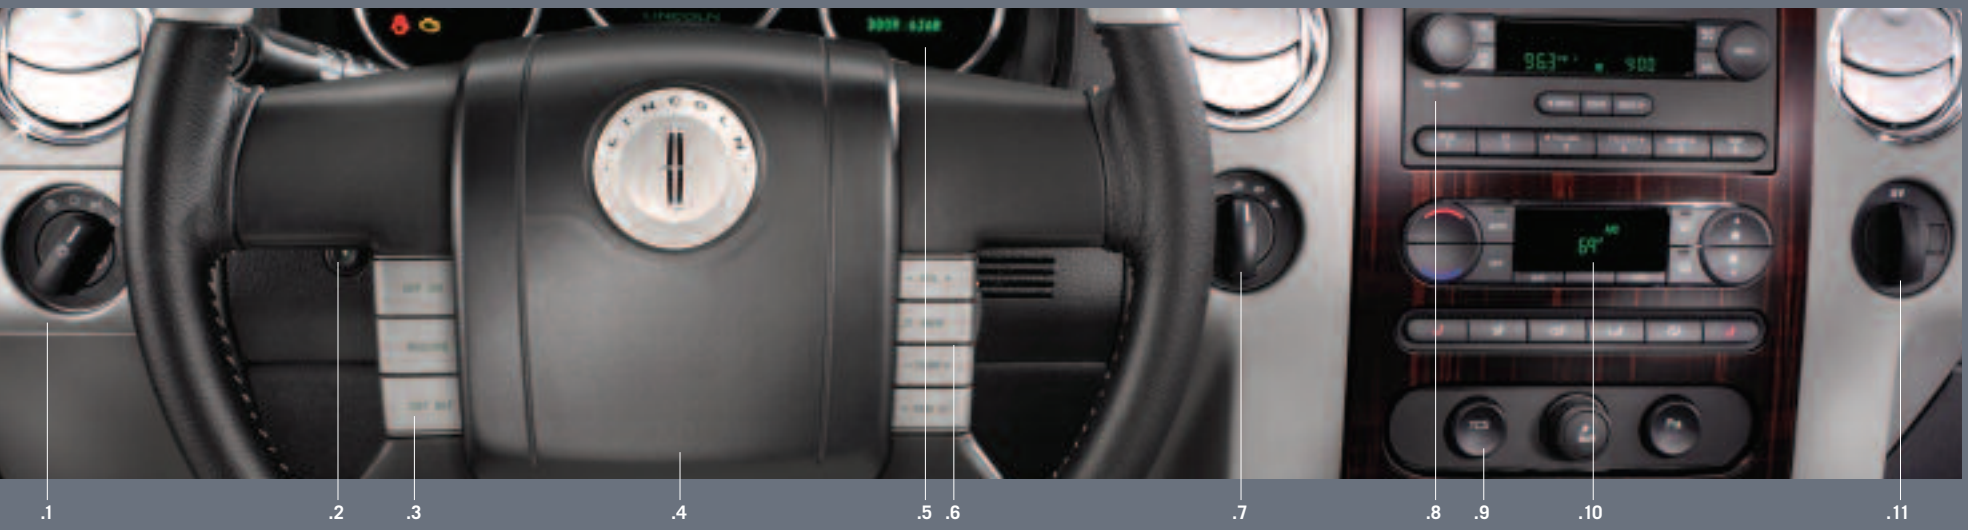

.1 HEADLAMP AND PANEL DIMMER CONTROL: Rotate the control clockwise one position from off to




turn on the parking lamps. Rotate two positions from off to also turn on the headlamps. Rotate counterclockwise from off to activate the autolamp, which

provides light-sensitive automatic on / off control of the exterior lights and keeps them on for a short period of time after the ignition is turned off. When the control is in any position except high beams or off, pull the control toward you to activate the foglamps

.2 POWER ADJUSTABLE PEDALS (IF EQUIPPED): Press and hold the top end of rocker control to

adjust the accelerator and brake pedal away from you. Hold the lower end of the control to move the pedals toward you. Adjust the pedals only when the vehicle is stopped and the gearshift lever is in the P (Park) position.

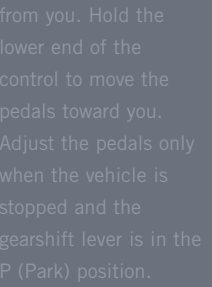


With the memory

function, the adjustable pedals, along with the driver's seat, can be automatically positioned in two programmable positions using the control located on the driver's seat. Please see your Owner's Guide for instructions on how to use this memory feature.

.3 SPEED CONTROL: To set the speed control, press the ON

button and release. Accelerate to the desired speed and press the SET button and release. Once the system is engaged,

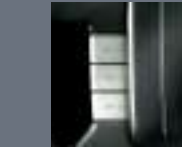

an icon will appear in the instrument cluster. To increase speed, tap the SET button and the speed will increase in small increments each time,

or use the accelerator pedal to reach desired speed and then press SET. To reduce speed, press and hold CST until desired speed is reached. Press and release the CST button and speed will decrease in small increments. Also, you can depress the brake pedal until desired speed is reached and press SET. Press RESUME to return the vehicle to a previously set speed if the

vehicle is traveling more than 30 mph (48 km/h).

.4 TILT STEERING COLUMN: To adjust the steering wheel, push the adjustment lever down to unlock




the steering column. While the lever is in the down position, tilt the steering column to

your desired position. Then, while holding the steering column in place, pull the lever up to its original position to lock the steering column.

.5 MESSAGE CENTER: With the ignition in the ON position, the message center, located on your instrument cluster, displays important vehicle information through a constant monitor of vehicle

systems. You may select display features on the message center for a display of status, preceded by a brief indicator chime. The system will also notify you of potential vehicle problems with a display of system warnings, followed by a long indicator chime. For more detailed information, please see your Owner's Guide.

.6 STEERING WHEEL CONTROLS: Press  to select AM, FM1, FM2 or CD. Press SEEK to select a station or track. Press VOL to adjust volume. Use the TEMP button to adjust the temperature and the FAN button to adjust fan speed.

.7 FOUR-WHEEL DRIVE CONTROL (IF EQUIPPED): 2H (2WD HIGH) delivers power to the rear wheels only and is the optimal position for smoothness and fuel economy.

4H (4WD HIGH) provides mechanically locked four-wheel drive power to all four



wheels. 4L (4WD LOW) provides mechanically locked four-wheel drive when extra power at reduced speeds is required. To shift from 2H to 4H, with the electronic shift 4WD system, move the control at any forward speed up to 55 mph (88 km/h). To shift to or from 4L, bring the vehicle to a stop and keep the brake pedal depressed. Next, place the gearshift in N (Neutral), and then move the control to or from 4L. Some mechanical noise may be heard when the system engages. This is normal and no service is required.

.8 AUDIOPHILE IN-DASH SIX CD / MP3 SOUND SYSTEM: Please see reverse side for more details.

.9 TRACTION ASSIST (IF EQUIPPED): Your vehicle may be equipped with traction assist. The TCS switch has an indicator light that illuminates when the system is off. The system will



automatically turn on every time the ignition is turned off and on. For more information, please see your Owner's Guide.

.10 AUTOMATIC TEMPERATURE CONTROL SYSTEM WITH HEATED SEATS: Please see reverse side for more details.

.11 AUXILIARY POWERPOINT (12V): An auxiliary power point is located on the instrument panel. An additional auxiliary power point is located



on the lower rear side of the center console that is accessible from the rear seats. Do NOT plug optional electrical accessories into the cigarette lighter.



.1 SERVICE ENGINE SOON LAMP: Illuminates briefly when the ignition is turned to the ON position. If the light comes on after the engine is started, please see your Owner's Guide.

.2 BRAKE SYSTEM WARNING: To confirm the brake system warning light is functional, it will momentarily illuminate when the ignition is turned to the ON position when the engine is not running,

or in a position between the ON and START positions, or by applying the parking brake when the ignition has been turned to the ON position. If the brake system warning light does not illuminate at this time, seek service immediately from your dealership. Illumination after releasing the parking brake indicates low brake fluid and the brake system should be inspected immediately by your servicing dealership.

.3 AIR BAG READINESS: If this light fails to illuminate when the ignition is turned ON, continues to flash, or remains on, have the system serviced immediately. A chime will also sound when a malfunction in the supplemental restraint system has been detected.

.4 ABS WARNING LAMP: Illuminates briefly when the ignition is turned to the ON

position. If the light comes on after the engine is started, please see your Owner's Guide.

.5 OVERDRIVE OFF: Illuminates when the overdrive function of the transmission has been turned off; refer to the Driving chapter of your Owner's Guide for additional information. If the light flashes steadily or does not illuminate, have the transmission serviced soon, or damage may occur.

AUTO-DIMMING REAR VIEW MIRROR: The auto-dimming rear view mirror is equipped with a feature that will reduce glare in the rear view mirror when bright lights are detected. It automatically returns to normal / clear when the vehicle is placed in R (Reverse). For more information, please see your Owner's Guide.

instructions on how to activate.

KEYLESS ENTRY SYSTEM: With this control you can lock or unlock all doors without using a key.



Unlock all doors: Enter the five-digit program code and then press 3 * 4

Lock all doors: Press 7 * 8 and 9 * 0 at the same time.

REMOTE ENTRY SYSTEM: Press control A once to lock all doors. The parklamps will flash. Pressing the control a second time will chirp the horn and the parklamps will flash once more to confirm that all doors are



closed and locked. Press control B once to unlock the driver's door and twice to unlock all doors. Press control C to sound the panic alarm. To silence, press the control again, or turn the ignition on. The remote entry system can also control the memory feature. Please see your Owner's Guide for

Securilock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. Your Securilock™ system is armed immediately after switching the ignition to the OFF / LOCK position. The theft indicator will flash every two seconds when the vehicle is armed. Switching the ignition to the ON position with a coded key disarms the system. The theft indicator will illuminate for three seconds and then go out. Your vehicle comes with two coded keys. Additional coded keys can be purchased from your dealer. For more detailed information on your Securilock™ passive anti-theft system, please see your Owner's Guide.

the rear bumper while the vehicle moves in reverse at speeds less than 3 mph (5 km/h). The reverse sensing system defaults to on, but can be disabled by turning the ignition on, placing the gearshift in (R) Reverse and pressing the RSS control. An indicator light on the control, located next to the cigarette lighter, will illuminate when the system is turned off.

POWER SLIDING BACK WINDOW: If your vehicle is equipped with a



power sliding back window, press and hold the bottom part of the rocker switch to open the window all the way. Press and hold the top part of the switch to close the window. The ignition must be in the Run or Accessory position.

REVERSE SENSING SYSTEM (RSS) (IF EQUIPPED): This sonar system sounds a tone to warn the driver of obstacles near the rear bumper when the reverse gear is selected. Obstacles can be detected within approximately 6 feet (2 m) behind