

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.



Ford Motor Company
Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121

1-800-392-3673 (FORD)

(TDD for the hearing impaired:
1-800-232-5952)

October 2007
Second Printing
Quick Reference Guide
Focus
Litho in U.S.A.

ADDITIONAL FEATURES

USB PORT (if equipped) Your vehicle may be equipped with a USB port inside your center console. This feature allows you to plug in media playing devices, memory sticks, and to charge devices. For further information on this feature, refer to your SYNC supplement.

AUXILIARY INPUT JACK The auxiliary input jack provides a way to connect your portable music player to the in-vehicle audio system and allows the audio from a portable music player to be played through the vehicle speakers with high fidelity. Press AUX on the vehicle radio repeatedly until LINE IN appears in the display.

AUXILIARY POWER POINT (12VDC) The auxiliary power points are located on the instrument panel. Do not use the power points for operating the cigarette lighter element (if equipped). To prevent the fuse from being blown, do not use the power point(s) over the vehicle capacity of 12 VDC/180W.

MOON ROOF (if equipped) The moon roof has an automatic, one-touch, express opening and closing feature. To open or close the moon roof, press and release the rear or front portion of the moon roof control. To stop motion at any time during the one-touch operation, press the control a second time.

TILT STEERING To adjust the steering wheel, pull the lever down to unlock the steering column, then move the steering wheel up or down until you find the desired position. While holding the steering wheel in place, pull the lever up to its original position to lock the steering column.

SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. The use of the wrong type of coded key may lead to a “no-start” condition.

REAR SEATS One or both rear seatbacks can be folded down to provide additional cargo space. To lower the seatback(s) from inside the vehicle, pull the strap located on the outboard side of the seatback to release it, and then fold seatback down. When raising the seatback(s), make sure you hear the seat latch into place.

HEATED SEATS (if equipped) The heated seats switch is located on the instrument panel. To operate the heated seats, push the control to activate. Push again to deactivate. The heated seats will activate when the ignition is in the RUN position and the engine is running. The system automatically shuts off after 10 minutes.

HEADLAMP/FOG LAMP CONTROL Turn the headlamp control clockwise to the first position to turn on the parking lamps, instrument panel lamps, license plate lamps and the tail lamps. Continue to turn the headlamp control to the second position to turn on the headlamps. The fog lamps (if equipped) can be turned on when the headlamp control is in the or position and the high beams are not turned on. Pull the headlamp control towards you to turn the fog lamps on. The fog lamp indicator light on the headlamp control will illuminate.

POWER MIRRORS (if equipped) Rotate the control clockwise to adjust the right mirror

or counterclockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Return to the center position to lock the mirrors in place. If your vehicle has both rear defroster and heated mirrors, the mirrors are heated automatically to remove ice, mist and fog when the rear window defrost is activated.

AMBIENT LIGHTING (if equipped) The ambient lighting control switch is located on the instrument panel. Pressing this switch will illuminate 4 footwells and 3 cupholders with a choice of 7 colors. To activate, press and release the control switch to cycle through the 7 color choices and off. The lights come on to the last color choice whenever the headlamps/parklamps are turned on through the headlamp switch.

REMOTE KEYLESS ENTRY (if equipped) This feature allows you to lock or unlock the vehicle's doors without a key. It also allows you to activate a personal alarm, arm or disarm an anti-theft system (if equipped) or open the luggage compartment.

CAR FINDER Press twice within three seconds. The horn will chirp and the turn lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

SMART LOCKS This feature helps to prevent you from locking yourself out of the vehicle if your key is still in the ignition.

When you open one of the front doors and you lock the vehicle with the power door lock control, all the doors will lock, then all doors will automatically unlock reminding you that your key is still in the ignition.

AUDIO SYSTEM AM/FM/IN-DASH CD6/MP3 SATELLITE COMPATIBLE (if equipped)

1 LOAD Press LOAD and a memory preset to load a specific slot. Press and hold to autoloop up to six CDs. Not operational on single CD system.

2 ON/OFF/VOL (Volume) Press to turn on or off. Turn to increase/decrease volume. If the volume is set above a certain level and the ignition is turned off, the volume will come back on at a “nominal” listening level when the ignition switch is turned back on.

3 DIRECT Press to access a desired radio station, track, MP3 folder or SIRIUS satellite channel (if equipped).

4 (Phone) If your vehicle is equipped with SYNC, press to access SYNC PHONE features. For further information, please refer to the SYNC supplement. If your vehicle is not equipped with SYNC, the display will read NO PHONE.

5 SCAN In radio mode, press for a brief sampling of all strong radio stations. In CD/MP3 mode, press for a brief sampling of all tracks on the current disc or folder. In satellite radio mode (if equipped), press SCAN for a brief sampling of all available SIRIUS satellite channels.

6 CAT (Category)/FOLD (Folder) In radio mode, press to select from various music categories. In MP3 mode, press FOLD and then press to access the previous/next folder. In satellite radio mode (if equipped), press to toggle between turning the most recently selected satellite radio category on or off.

7 AM/FM Press repeatedly to select an AM/FM1/FM2 frequency band.

8 MEMORY PRESETS To set a station, select a frequency band AM/FM1/FM2; tune to a station, then press and hold a preset button until sound returns. You can store up to 30 stations, ten in AM, ten in FM1 and ten in FM2. In CD/MP3 mode, press to select tracks or desired folders. In satellite radio mode (if equipped), there are 30 available presets, 10 each for SAT1, SAT2 and SAT3. To save satellite channels in your memory presets, tune to the desired channel then press and hold a preset control until sound returns.

9 SEEK/TRACK Press to access the previous or next strong station, CD track, previous/next channel (if equipped with satellite radio), previous/additional display text or category.

10 CD Press to enter CD/MP3 mode. If a disc is already loaded into the system, a CD/MP3 will begin where it ended last. If no CD is loaded, NO DISC will appear in the display.

11 AUX Press to access LINE IN (auxiliary audio mode) and SYNC (if equipped).

12 SIRIUS (Satellite Radio, if equipped) Press to access satellite radio mode (if equipped). Press repeatedly to cycle through SAT1, SAT2 and SAT3 modes. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information on extended subscription terms, contact SIRIUS at 1-888-539-7474. Satellite radio is available only with a valid SIRIUS radio subscription. Check with your authorized dealer for availability.



13 TEXT Press this button repeatedly to view Album (AL), Folder (FL), Song (SO) and Artist (AR) in the MP3 mode, if available. Press and release to display the artist and song title in satellite mode (if equipped). When the < / > indicator is active while in TEXT mode, there is additional text to be displayed. Press TEXT, then to view the additional text.

14 MENU Press MENU when satellite radio mode is active to access SATELLITE RADIO MENU (if equipped). Press OK to enter into the satellite radio menu. Press / to cycle through the following options: CATEGORY, SAVE SONG, DELETE SONG, DELETE ALL SONGS, ENABLE ALERTS/DISABLE ALERTS.

15 SOUND Press repeatedly to cycle through the following features: BASS, TREBLE, BALANCE, FADE, SPEED COMPENSATED VOLUME, ALL SEATS (Occupancy mode, if equipped).

16 CLOCK To set the time, press CLOCK. The display will read SET TIME. Use the memory preset numbers to enter in the desired time, hours and minutes.

17 TUNE/OK Turn the knob to go up or down the frequency band. In CD/DVD mode (if equipped), press this control to play or pause the current CD/DVD.

OK Your vehicle may be equipped with special phone and media features which will require you to confirm commands by pressing OK. For further information, refer to the SYNC supplement.

18 EJECT Press this button and a memory preset to eject a CD from a specific slot. Press and hold to auto eject all CDs present in the system.

2008 **FOCUS**
QUICK REFERENCE GUIDE



8S4J 19G217 CA

2008 FOCUS

is fun, quick and dependable. It's going to be like hanging out with your new best friend, from spur of the moment errands to 2,000 mile-road trips.

Focus comes equipped with lots of cool features – most are no-brainers, but some may be new to you. So take a few minutes to use this Quick Reference Guide to familiarize yourself with your Focus and enjoy the time you'll spend with your newfound friend.

For more detailed information, including important safety information, please consult your Owner's Guide.

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use the non-essential features and devices when it is safe to do so.



1

2

3

4

5

6

7

8

INSTRUMENT PANEL FEATURES

1 SPEED CONTROL (if equipped)

To set a speed, press the ON button, accelerate to the desired speed and press the SET+ button, then take your foot off the accelerator pedal. You can increase your speed by pressing and releasing the SET+ until you reach the desired speed. You can decrease speed the same way using the SET- button. To disengage the speed control, press the OFF button or depress the brake pedal.



2 MULTI-FUNCTION LEVER

The multi-function lever controls the windshield wiper modes, speeds and the windshield washer. Rotate the end of the control away from you to increase/decrease the speed of the wipers. For windshield washer control, push the end of the stalk briefly to cause a single swipe of the wipers without washer fluid. With a quick push and hold, the wipers will swipe three times with washer fluid. With a long push and hold, the wipers and washer fluid will be activated for up to ten seconds. Push up or down to activate the right turn or left turn signal. Push the lever toward the instrument panel to activate high beams. Pull the lever toward you to deactivate.



3 SERVICE ENGINE SOON LIGHT

The service engine soon indicator light illuminates when the ignition is first turned to the ON position to check the bulb. If the light turns solid or blinks, the On-Board Diagnostics System has detected a malfunction. Drive in a moderate fashion (avoid heavy acceleration or deceleration) and have your vehicle serviced immediately.



4 ANTI-LOCK BRAKES (if equipped)

This system helps you maintain steering control during emergency stops by keeping the brakes from locking. The light will illuminate when you start your engine. If the light does not illuminate during start up, remains on or flashes, there may be a malfunction, see your dealer's service department immediately.



5 STEERING WHEEL AUDIO CONTROLS (if equipped)

Press MEDIA to select AM, FM1, FM2, or CD, SAT1, SAT2 or SAT3 (satellite radio mode, if equipped) or LINE IN (Auxiliary input jack). Press VOL + or VOL - to adjust the volume. Press << >> to access the next/previous strong preset station or track on a CD.



SYNC HANDS FREE CONTROL FEATURE (if equipped)

Press <voice icon> to use the voice command feature. You will hear a tone and LISTENING will appear in the display signaling that the system is ready to accept your command. Press <phone icon> to activate phone mode or answer a call. Press and hold to end a call or exit phone mode. Press OK to confirm your selection. For further information on the SYNC system, refer to the SYNC supplement.

6 AUDIO SYSTEM

Refer to the Audio System section for instructions on this feature.

7 TRACTION CONTROL™ (if equipped)

This system helps you maintain the stability and steerability of your vehicle, especially on slippery road surfaces such as snow or ice-covered roads and gravel roads. The Traction Control™ switch, located on the center console by the gearshift lever, can deactivate the traction control system, but will automatically turn the system back on every time the ignition is turned off and on. For more information, please refer to your owner's guide.



8 CLOCK

Refer to the Audio System section for instructions on this feature.

ESSENTIAL INFORMATION

LOCATION OF SPARE TIRE AND TOOLS (if equipped)

Your vehicle may be equipped with a conventional spare tire that is located in the luggage compartment under the floor cover. Remove the spare tire and jack by turning their tie-down bolts counterclockwise. The lug wrench is located in a bag next to, or on top of the spare tire. Refer to the Roadside Emergencies chapter in the Owner's Guide for further information.

FUEL RECOMMENDATIONS

For optimum performance, use "Regular" unleaded gasoline with a pump (R+M)/2 octane rating of 87. We do not recommend the use of gasolines labeled as "Regular" that are sold with octane ratings of 86 or lower in high altitude areas. Use only UNLEADED or UNLEADED fuel blended with a mixture of 10% ethanol. Your vehicle was not designed to run on E85 fuels that are blended with a maximum of 85% ethanol.

FUEL PUMP SHUT-OFF SWITCH

The fuel pump shut-off switch stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. This switch is located in the front passenger's footwell, behind the kick panel access cover. For more information regarding the fuel pump shut-off switch, refer to the Roadside Emergencies chapter of your Owner's Guide.

FUSES

If the vehicle's electrical components are not working properly, a fuse may have blown. For more information regarding changing fuses, refer to the Roadside Emergencies chapter of your Owner's Guide.

TIRE PRESSURE

Safe operation of your Focus requires that your tires be properly inflated. The recommended inflation pressure is found on the Tire Label or the Safety Compliance Certification Label located near the front door latch on the edge of the driver's door. At least once a month and before long

trips, inspect each tire and check the tire pressure. Don't forget the spare (if equipped). Air pressure should be checked when the tires are cool. Inflate all tires to the inflation pressure recommended by Ford Motor Company. As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure warning light <light icon> when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in the Owner's Guide for further information.

TEMPORARY MOBILITY KIT (if equipped)

Your vehicle may be equipped with a temporary mobility kit located in the spare tire well in the trunk. The temporary mobility kit consists of an air compressor to reinflate the tire and a sealing compound in a canister that will seal most punctures caused by nails or similar objects. This kit will provide a temporary seal allowing you to drive your vehicle up to 120 miles (200 km) at a maximum speed of 50 mph (80 km/h). Do not attempt to repair punctures larger than 1/4 inch (6.4 mm) or damage to the tire's sidewall. The tire may not completely seal. If you use the Tire Mobility Kit (TMK), the sealant compound in the canister is to be used for one tire only. See your Ford authorized dealer for additional replacement sealant canisters.

REAR WINDOW BUFFETING

When one or both of the rear windows are open, the vehicle may demonstrate a wind throb or buffeting noise; this noise is common among a wide range of vehicles and can be eliminated by simply lowering a front window approximately two to three inches.

ROADSIDE ASSISTANCE

During your vehicle's warranty period, the assurance and support of a 24-hour emergency roadside assistance program is included. Roadside assistance includes such services as fuel delivery, tire changes, jump starts, help when you are locked out of your vehicle, and towing. To receive roadside assistance in the United States, call (800) 241-3673. In Canada, call (800) 665-2006.