 


This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

Ford Motor Company | Customer Relationship Center | P.O. Box 6248 | Dearborn, MI 48121
1-800-392-3673 (FORD) | (TDD for the hearing impaired: 1-800-232-5952)

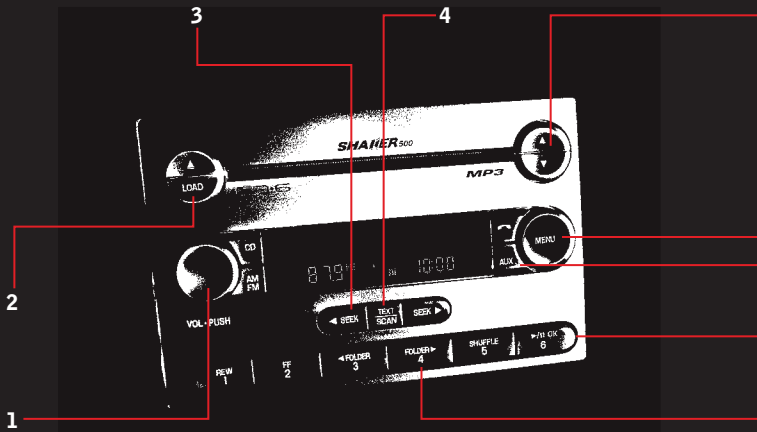

1 POWER / VOLUME

Press to turn ON or OFF. Turn the knob to increase or decrease volume.

2 LOAD BUTTON (IF EQUIPPED)

Press to begin the CD load sequence. When the radio prompts to select a slot, use the preset button to select the desired slot to load the CD. When the radio prompts to load a CD, insert the CD label side up. Press and hold to auto load up to 6 CDs in sequence.

3 SEEK BUTTONS

Press to access the previous or next strong station or track. In satellite radio mode (if equipped), press to seek to the previous / next channel.

4 TEXT / SCAN BUTTON

In radio or CD/MP3 mode, press and hold for a brief sampling of stations or tracks. In CD/MP3 mode, press and release to display track, title, artist name, disc title and filename (if available). In satellite radio mode (if equipped), press and release to display the current song title.

5 TUNE / DISC SELECTOR

Press to manually move up or down the radio frequency or to the desired disc. Press and hold for fast advance.

6 MENU BUTTON

Use the MENU button to cycle through the possible modes (Bass, Treble, Fade, and Balance, among others). Then use SEEK or ▲/▼ to adjust the setting. Fade adjusts audio between the front and rear speakers and Balance adjusts between left and right speakers.

SETTING THE CLOCK: Press MENU until SELECT HOUR or SELECT MINS is displayed. Press SEEK or ▲/▼ to adjust hours / minutes.

SATELLITE RADIO CONTROLS: (if equipped)

7 AUX

Press to cycle through SAT1, SAT2, SAT3 (satellite radio mode if equipped) or LINE IN (auxiliary audio mode). Once Satellite Radio mode is activated you may use the following functions:

Press MENU when satellite radio mode is active to access. Press OK to enter into the SATELLITE RADIO MENU. Press ▲/▼ to cycle through the following options: CATEGORY, SAVE SONG, DELETE SONG, DELETE ALL SONGS, ENABLE ALERTS/ DISABLE ALERTS.

8 SETTING MEMORY PRESETS

To set a station, select the desired radio station or satellite radio channel (if equipped), then press and hold a preset button (1-6) until sound returns.

9 MP3 TRACK / FOLDER MODE

Available only on MP3 discs in CD mode. Press to access previous / next folder.

NAVIGATION SYSTEM (IF EQUIPPED)

Your vehicle may be equipped with a navigation system. Before loading the map DVD, ensure that the vehicle is in neutral, with the parking brake applied and your hands are off the gearshift lever. For further information, refer to your Navigation Supplement.



CONVERTIBLE (IF EQUIPPED)

Do not store articles behind rear seat. Articles stored in the convertible top stowage compartment may break the rear glass window when the top is lowered. The convertible top can be lowered with the windows down. The windows automatically lower when lowering or raising the top. Do not lower the top when the top material is wet. **NOTE** The convertible top will not operate unless the vehicle is traveling under 3.1 mph (5 km/h).

TO LOWER THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when lowering or raising the top to prevent draining the battery. 2 Ensure the convertible top stowage compartment behind the rear seat is empty and ready to receive the top. Ensure the convertible top outer surface is free of leaves and debris. 3 Unclamp the top from the windshield header at both the right and left sides by pulling each handle down and rearward until the handle clears the windshield header. **NOTE** If the top has not been lowered for a while and sticks to the windshield header, push the front of the top up slightly with your hand to loosen it. 4 Push the convertible top switch on the overhead console and hold until the windows are completely down and the top is completely stored.

TO RAISE THE CONVERTIBLE TOP

1 Stop the vehicle completely. Turn the key to the ON position. Recommended: Run the vehicle's engine when raising or lowering the top to prevent draining the battery. 2 Push and hold the convertible top switch until the windows lower completely and the top unfolds and moves forward toward the windshield header. 3 Open both handles before the top meets the windshield header. 4 Continue to use the convertible top switch to raise the top until it has reached the fully closed position flush to the header. The two pins under the forward edge of the top should seat in the matching holes in the header. 5 To fasten both handles securely, rotate the handles into the header on the top until they reach the full forward position and push up on the handle to the stowed position. Pulling down on the header at the center grip while closing the handles may assist in fastening the top. 6 Raise the rear windows first and then raise the front windows.

POWER SIDE VIEW MIRRORS

Rotate the control clockwise to adjust the right mirror or counterclockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Return the control to the center position to lock the mirrors in place.

POWER WINDOWS

Push or pull the rocker switches to open or close your windows. Push down and hold the switch to open. Pull up and hold the switch to close. Express Down and Express Up allows the driver to fully open and close the window without holding the control down. **Express Down:** Push the switch completely down to the second detent and release quickly. The window will open fully. **Express Up:** Pull the switch completely up to the second detent and release quickly. The window will automatically fully close. Momentarily press the switch to any position to stop window operation.

AUTOLOCK (IF EQUIPPED)

On automatic transmission vehicles, this feature automatically locks all vehicle doors when all doors are closed, the ignition is in the ON position, the brake is pressed before reaching 5 mph (8 km/h) and the vehicle speed increases to more than 5 mph (8 km/h). To enable or disable this feature, please refer to your Owner's Guide.

SMART UNLOCKING

When you open the door, lock the vehicle, and then close the door, the driver's door will automatically unlock, reminding you that your key is still in the ignition. For more information, please refer to your Owner's Guide.

SHORT DROP GLASS (FRONT WINDOWS ONLY)

In order to improve door efforts and sealing, your vehicle is equipped with short drop glass. This feature lowers the glass when either door is opened. The glass returns to its closed position when the door is closed. For more detailed information, please refer to your Owner's Guide.

REMOTE ENTRY SYSTEM

This feature allows you to lock or unlock the vehicle's doors without a key. It also allows you to release the trunk lid, activate a personal alarm, and arm or disarm the active anti-theft alarm system (if equipped). Note: The Panic function will only operate when the ignition is in the OFF / LOCK position; the trunk lid release function only operates when the vehicle speed is less than 3 mph (5 km/h). Up to six remote transmitters can be programmed to your vehicle.

CAR FINDER

Press twice within 3 seconds. The horn will chirp and turn lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

AUXILIARY INPUT JACK

 
Your vehicle is equipped with an Auxiliary Input Jack located in the console bin. This allows you to plug and play auxiliary audio devices. Press AUX repeatedly on your audio system to access AIJ mode. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

AUTOMATIC DIMMING INSIDE REAR VIEW MIRROR (IF EQUIPPED)

The auto dimming rear view mirror is equipped with a feature that will reduce glare in the rear view mirror when bright lights are detected. It automatically returns to normal/clear when the vehicle is placed in R (Reverse). For more detailed information, please refer to your Owner's Guide.

COMBINATION LAP AND SHOULDER BELTS

For easier access to the front safety belt for the front seat occupant, rotate the presenter arm toward the front of the vehicle until it locks into place. To access the second row seats, rotate the arm back to its original position against the trim panel.

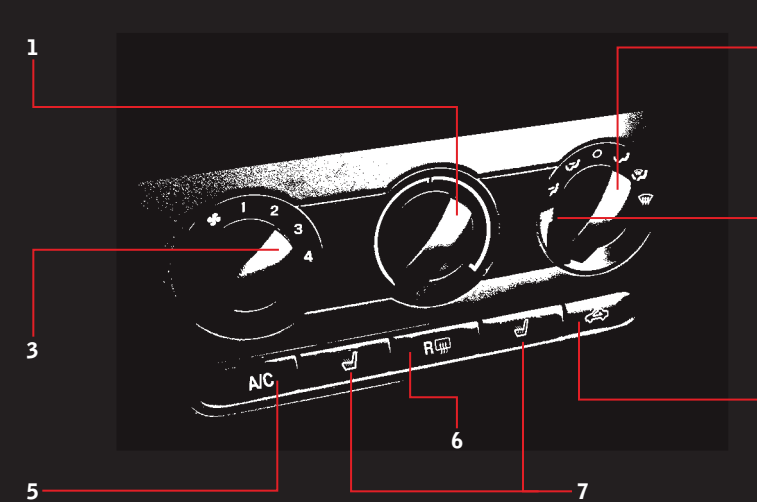

1 TEMPERATURE CONTROL

Rotate the knob to adjust the temperature of the airflow in the vehicle.

2 MODE SELECTOR

Controls the source of airflow into the vehicle. You can choose floor, instrument panel or windshield defroster air vents, or combinations of these.

3 FAN SPEED

Rotate the knob to adjust the volume of air circulated in the vehicle.

4 MAX A/C

Distributes recirculated air through the instrument panel vents to cool the vehicle. This re-cooling of the interior air is more economical and efficient. Set the temperature knob to full cold position. Set to highest fan speed initially, then adjust to maintain comfort.

5 A/C

Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance. Engages automatically in MAX A/C, and .

6 REAR DEFROST AND DEFOGGING

Ensure that the ignition is in the ON position. Press the control to clear the rear window of thin ice and fog.

7 DRIVER & PASSENGER HEATED SEATS (IF EQUIPPED)

Press to activate or deactivate the driver or passenger heated seat. **NOTE:** Heated seats will turn off automatically after 10 minutes of use.

8 RECIRCULATED AIR CONTROL

Press to activate/deactivate recirculated air in the cabin. Recirculated air may reduce the amount of time required to cool down the interior of the vehicle and may also help reduce undesired exterior odors from reaching the interior of the vehicle. Recirculated air engages automatically in MAX A/C or can be engaged manually in any other mode, except defrost.

REDUCING FOG BUILDUP

Place the airflow selector in the or position.

REDUCING HUMIDITY BUILDUP

Do not drive with the airflow selector in the OFF position or with recirculated air engaged.



How does it feel to own an American Classic?

Your 2008 Mustang is the newest member of a

proud family of legendary road machines.

Years of refinement and innovation have made

your new Mustang one of the most exciting,

comfortable, and smartest cars to ever roam

the American road. This Quick Reference Guide

was designed to help you get to know your new

Mustang. It will allow you to familiarize yourself with

many of your new Mustang's features and functions.

For the most detailed information, refer to your

Owner's Guide.

Use extreme caution when using any device or

 
feature that may take your attention off the road.

Your primary responsibility is the safe operation of

the vehicle. Only use non-essential features and

devices when it is safe to do so.

MUSTANG QUICK REFERENCE GUIDE 2008

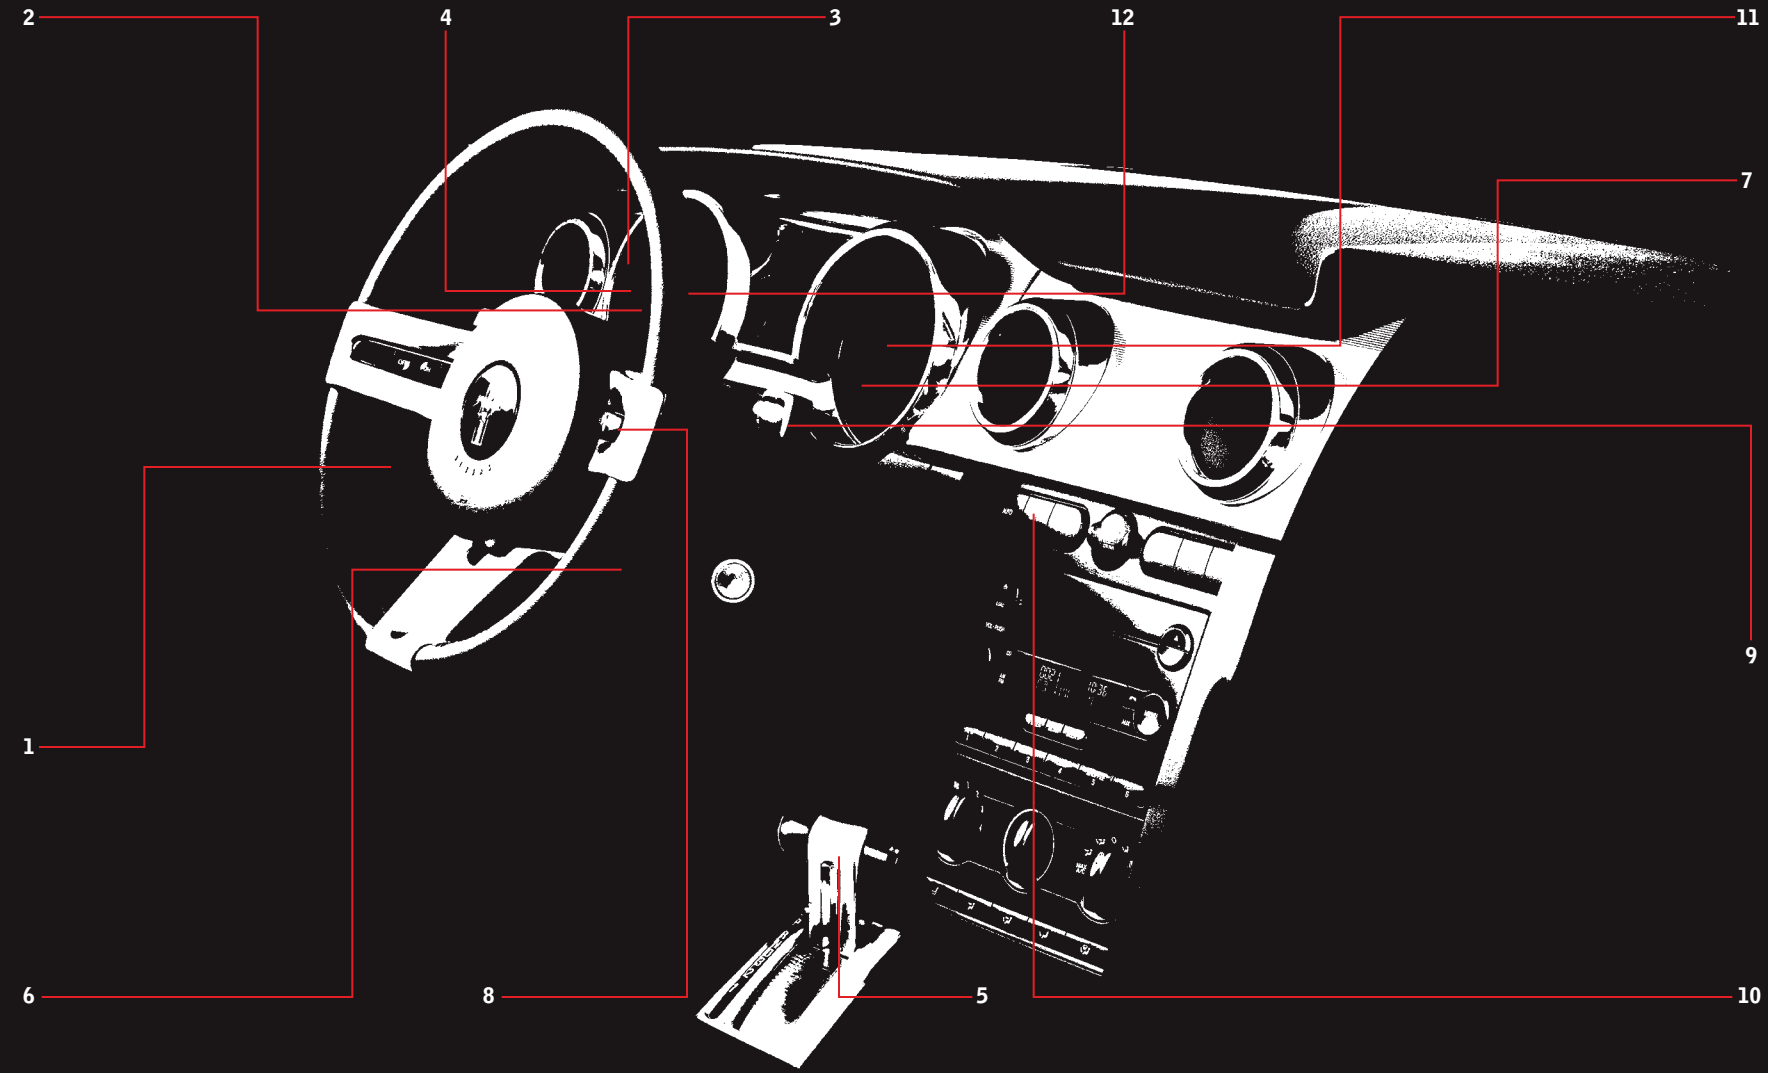

1 HEADLAMP CONTROL AND FOGLAMPS (IF EQUIPPED)

Turning the headlamp control clockwise to the first position turns on the parking lamps, instrument panel lamps, license plate lamps and the tail lamps. Continuing to turn the headlamp control to the second position turns on the headlamps in addition to the previous lamps. To activate the high beams, pull the turn signal lever toward you to the second detent. Pull the lever toward you again to deactivate them. Use the same lever to activate the "Flash to Pass" feature. Pull the lever toward you to the first detent to activate and release quickly to deactivate. The foglamps can be turned on when the headlamp control is in the parking lamp or headlamp position and the high beams are not on. Pull the headlamp control toward you to turn on the foglamps. The foglamp indicator light will illuminate. Remember, the foglamps will not operate when the high beams are activated.



 
2 TIRE PRESSURE MONITORING SYSTEM (TPMS)

When the Tire Pressure Monitoring System (TPMS) warning light is lit, one or more of your tires is significantly under-inflated. You should stop and check the tires as soon as possible and inflate them to the proper pressure, as shown on the Safety Compliance Certification Label (located on the edge of the driver's door jamb or B-pillar). Driving on a significantly under-inflated tire causes the tire to overheat and can eventually lead to tire failure. Note: Outside temperatures affect tire pressure; refer to the Owner's Guide for additional tire information.



3 ANTI-LOCK BRAKE SYSTEM (IF EQUIPPED)

The ABS warning lamp will momentarily illuminate when the ignition is turned on. If the light fails to illuminate when the ignition is turned on, stays on or flashes, have your vehicle serviced. In an emergency, apply continuous force to the brake pedal. Do not pump the brakes. Any pulsation or mechanical noise you may feel or hear is normal.

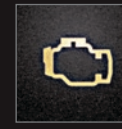

4 SERVICE ENGINE SOON LAMP

The Service Engine Soon indicator lamp illuminates when the ignition is first turned to the ON position. If the lamp stays on or blinks, the On Board Diagnostics System has detected a malfunction. Drive moderately (avoid heavy acceleration or deceleration) and have your vehicle serviced immediately.



 
5 GEARSHIFT / OVERDRIVE CONTROL (IF EQUIPPED)

Use overdrive in the normal D (Drive) position for the best fuel economy. D (Drive) with Overdrive (O/D) can be deactivated by pressing the transmission control switch on the right side of the gearshift. Use this position only when driving conditions cause excessive shifting from O/D to other gears. Examples: city traffic, hilly terrain, heavy loads, etc., or when engine braking is required.*



6 TILT STEERING COLUMN

To adjust the steering wheel, push the adjustment lever down to unlock the steering column. While the lever is in the down position, tilt the steering column to your desired position. Then, while holding the steering column in place, pull the lever up to its original position to lock the steering column.

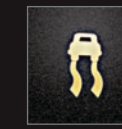

7 TRACTION CONTROL™ (IF EQUIPPED)

This system helps you maintain the stability and steerability of your vehicle on slippery road surfaces such as snow, ice or gravel. The system works closely with many of the elements already present in the Anti-Lock Braking System. The system defaults to on. However, should you become stuck, try switching the Traction Control™ off. Remember to reactivate Traction Control™ once you resume normal driving.



8 SPEED CONTROL (IF EQUIPPED)

Press and release the ON button to engage speed control; press and release the OFF button to disengage it. To set a desired speed, press and hold the SET+ button until you reach that speed. Then take your foot off the accelerator pedal. You can increase speed using speed control by pressing and holding the SET+ button until you reach the desired speed or you can press and release the SET+ button and increase speed by 1 mph (1.6 km/h) with each tap. You can decrease speed the same way using the SET- button. Pressing the RES (resume) button will automatically return the vehicle to the previously set speed. To disengage the speed control, press the OFF button or press the brake or clutch pedal (manual transmission only).



9 WINDSHIELD WIPER / WASHER

The windshield wiper/washer lever controls the windshield wiper modes, speeds and the windshield washer. For intermittent operation, move the control up one position, then rotate the rotary control to the speed you want. For normal or low speed wiper operation, move the control up two positions from OFF. For high-speed operation, move the control up three positions from OFF. For windshield washer control, pull the end of the stalk toward you. A quick pull and hold, and the wipers will swipe three times with washer fluid. A long pull and hold, and the wipers and washer fluid will be activated for up to ten seconds.



10 MYCOLOR™ (IF EQUIPPED)

 
The instrument cluster gauges are backlit with white backlighting when the headlamps are off. When the headlamps are on, you can select one of six preset colors or create your own color (MyColor™) for the nighttime gauge backlighting. Headlamps must be on to set up the nighttime display. Note: A gauge in a warning condition will be lit red when the headlamps are on. Press SETUP to get to the DISPLAY COLOR set-up menu.



Pressing RESET will scroll through the following selectable colors: Green, Purple, Orange, Blue, White, Red, and Adjust (to define MyColor™).




Adjusting MyColor™: The vehicle must be stationary to enter the MyColor™ adjust mode. To enter the MyColor™ adjust mode, hold RESET for three seconds at the Adjust menu, or press SETUP to scroll through the display colors again. When in the MyColor™ adjust mode, pressing RESET will step through the Red, Green, Blue and Exit options. You can create your own color by adjusting the levels of the three primary colors to achieve any of 125 different combinations. Pressing SETUP will increment the proportion of the color (Red, Green, or Blue) being adjusted. Try many combinations and record your favorites. To save and exit MyColor, adjust and hold RESET for three seconds when prompted.*

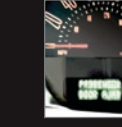

11 MESSAGE CENTER (IF EQUIPPED)

 With the ignition in the ON position, the message center displays important vehicle information by constantly monitoring vehicle systems. You may select display features on the message center for a display of status. The system will also notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime.*

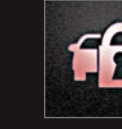

12 SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM

This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. Your Securilock™ system is armed immediately after switching the ignition to the OFF/LOCK position. The THEFT indicator will flash every two seconds when the vehicle is armed. Switching the ignition to the ON position with a coded key disarms the system. Your vehicle comes with two coded keys. You can purchase additional coded keys from your dealer.*



AMBIENT/MOOD LIGHTING (IF EQUIPPED)

The ambient lighting control switch is located on the center console next to the cup holders. Pressing this switch will illuminate the 4 footwells and 2 cupholders with a choice of 7 colors. To activate, press and release the control switch to cycle through the 7 color choices and off. The lights come on whenever the ignition is in the ON or ACCESSORY position.



ADJUSTING THE FRONT POWER SEATS (IF EQUIPPED)

The control is located on the side of the seat. Press the front to raise or lower the front portion of the seat cushion. Press the rear to raise or lower the rear portion of the seat cushion. Press the control to move the seat forward, backward, up or down.*

*For more detailed information, please refer to your Owner's Guide.

INSTRUMENT PANEL