



## SEATING

**FOLD FLAT FRONT PASSENGER SEATBACK (if equipped)**  
The front passenger seatback can be folded to a horizontal position to make room for a long load. To fold the seatback, move the seat as far back as possible. Push the head restraint release button and move the head restraint fully down. Pull up on the recliner handle **A** located on the outboard side of the seat to fold the front passenger seatback. Without releasing the handle, push the seatback forward. Move the seat as far forward as possible.

**2ND ROW SEAT RECLINE**  
To adjust the second row seatback to the desired position, while seated, pull the release lever **B** up and push the seatback rearward.

**2ND ROW FOLD FLAT SEATBACK**  
To fold down the rear seat, pull up on the lever **B** on the outboard side of the seat cushion and let the seatback rotate downward into the load floor position. To return to the upright position, rotate the seatback upward until the seatback latches. The seatback will click when it is locked into position.

**2ND ROW EASYFOLD™ SEATBACK RELEASE (if equipped)**  
The control buttons are located on the left-hand rear quarter trim panel (accessible from the liftgate area). Press and hold the control to lower the seat. The top portion lowers the RIGHT (40%) seatback, and the bottom portion lowers the LEFT (60%) seatback.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.



## CLIMATE CONTROLS DUAL AUTOMATIC TEMPERATURE CONTROL SYSTEM (DATC) WITH HEATED SEATS (if equipped)

**1. DRIVER/PASSENGER TEMPERATURE CONTROLS**  
Press to increase or decrease the temperature on the driver or passenger side of the vehicle. Pressing the passenger side control will activate dual zone where the driver and passenger are able to select their own individual settings. If the passenger side controls are not activated, the driver side controls will determine the temperature


lights), twice for low heat (one light) and a third time to deactivate (no lights).

**5. MANUAL OVERRIDE CONTROLS**  
Allows you to manually determine where airflow is directed (floor vents, instrument panel vents, rear seat floor vents or a combination). To return to fully automatic control, press AUTO.

interior of the vehicle and may also help reduce undesired odors from reaching the interior of the vehicle.

**9. DEFROST**  
Distributes outside air through the windshield defroster and demister vents to clear fog or thin ice from the windshield.

**10. REAR WINDOW DEFROSTER**  
Press to clear the rear window of thin ice and fog. Press again to deactivate.

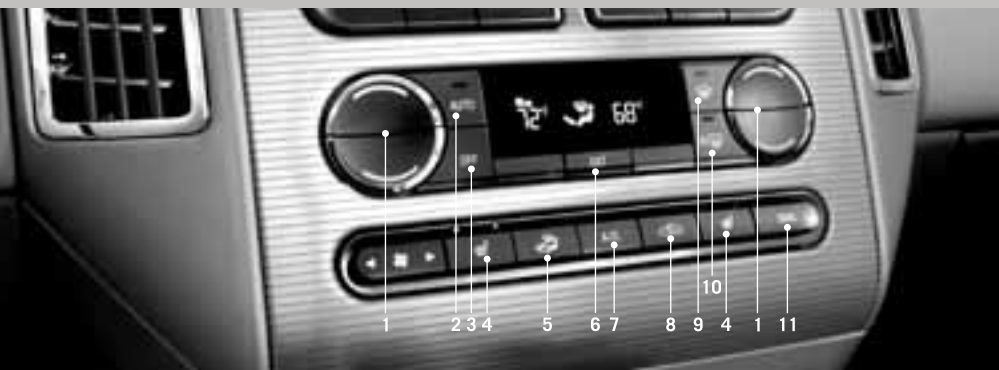

setting for the entire vehicle (single zone).

**2. AUTO**  
Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air based on your temperature selection.

**3. OFF**  
Outside air is shut out and the fan will not operate.

**4. DRIVER/PASSENGER HEATED SEATS**  
Press once for high heat (two

6. **EXT**  
Press to display the outside air temperature. Press again to return to interior temperature.

**7. A/C**  
Press to activate/deactivate air conditioning. For a MAX A/C setting, press A/C, and set the temperature to 60°F (16°C) and the highest blower setting.

**8. RECIRCULATION CONTROL**  
Press to recirculate cabin air. Recirculated air may reduce the amount of time to cool down the

setting for the entire vehicle (single zone).

## ESSENTIAL INFORMATION

### FUEL TYPE AND TANK CAPACITY

Front wheel drive vehicles have a fuel tank capacity of 19.2 gallons (72.7L) while all wheel drive vehicles have a fuel tank capacity of 20.8 gallons (78.7L). Your vehicle is designed to use "Regular" unleaded gasoline with an octane rating of 87. Do not use gasoline labeled as "Regular" in high altitude areas with Octane ratings less than 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

### TIRE PRESSURE

Check your tire pressure at least once a month and before long trips (including spare). The recommended specifications are on the Safety Certification Label or Tire Label located on the B-pillar or the edge of the driver's door. As an added safety feature, your vehicle has a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

### SOS POST-CRASH ALERT SYSTEM™

This system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the

substantial jolt. This switch is located behind a panel on the left side of the cargo area. For more information, refer to the Roadside Emergencies chapter of your Owner's Guide.

### LOCATION OF SPARE TIRE

Your vehicle is equipped with a temporary spare tire and tools which are located in the rear cargo area of the vehicle, under the carpeted floor panel. For complete details on how to change your tire, please refer to the Roadside Emergencies chapter in your Owner's Guide.

### REVERSE SENSING SYSTEM (if equipped)

Your vehicle may be equipped with a reverse sensing system which can warn you if there are objects behind the vehicle. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more details and limitations.

### SOS POST-CRASH ALERT SYSTEM™

This system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the

system, press the hazard flasher control, or you can press on your remote transmitter.

### ROADSIDE ASSISTANCE

Your new Ford Edge comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

### ALL WHEEL DRIVE (AWD, if equipped)

Your vehicle may be equipped with All Wheel Drive (AWD). The AWD system is always active and uses all four wheels to power the vehicle. This increases traction, enabling you to drive over terrain and road conditions that a conventional two-wheel drive vehicle cannot. Refer to your Owner's Guide for more information. **Note:** If your vehicle is equipped with AWD, a spare tire of a different size (other than the tire provided) should never be used. Using a different size could cause the AWD system to stop functioning and default to front wheel drive. Your vehicle is not intended for off-road use.

## ADDITIONAL FEATURES

### PANORAMIC VISTA ROOF™ WITH DUAL POWER SUNSHADES (if equipped)

The panoramic Vista Roof™ and power sunshades are equipped with an automatic one-touch, express opening feature. To open, press and release. The front and rear sunshades will open simultaneously. Press again and the panoramic Vista Roof will open to the 'comfort' position. Press once more for the roof to fully open. To stop the one touch open feature at any time, press the control again. To close, pull down and release. Firmly pull the control again to fully close the Vista Roof™. Pull and hold the control down again to close the front and rear sunshades. To vent from a closed position, press TILT. To close, pull and hold TILT.

### INTEGRATED KEYHEAD TRANSMITTER (IKT) REMOTE ENTRY SYSTEM FEATURES

Press once to lock all doors. Press again to confirm all doors are closed. Press once to unlock the driver's door. Press again within five seconds to unlock all doors.

Press to activate the panic alarm. Press again or turn on the ignition on to deactivate.

Press twice within three seconds to open the power liftgate (if equipped).

### CAR FINDER:

Press twice within three seconds to locate your vehicle. The horn will chirp and the turn lamps will flash.

### POWER LIFTGATE (if equipped)

To open the power liftgate (if equipped), press on the instrument panel, or press twice within three seconds on your remote entry transmitter, or press and release the control button located on the liftgate. To close, press located on the left rear quarter panel in the rear cargo area or press twice on your remote entry transmitter. Keep clear of the liftgate when operating the rear switch. Your power liftgate is equipped with an obstacle detection feature which will either stop or revert to a full open position when it encounters a solid object. For complete information, please refer to your Owner's Guide.

### SYNC® (if equipped)

Your vehicle may be equipped with SYNC® – a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement or to the SYNC® section in the Navigation Supplement. Please also feel free to visit [www.SyncMyRide.com](http://www.SyncMyRide.com).

### USB PORT (if equipped)

If you have SYNC®, your vehicle will be equipped with a USB port inside the center console. This feature allows you to plug in media playing devices, memory sticks, and also to charge devices if they support this feature. For more information, please refer to Accessing and Using your USB port in the SYNC® supplement or the Navigation system supplement.

### AMBIENT LIGHTING (if equipped)

Your vehicle may be equipped with an ambient lighting feature. The control is located on the center console and, when activated, illuminates footwells, storage bins and cupholders with a choice of several colors. Ambient lighting is operational when the ignition is on or in the accessory position. Press the control repeatedly to turn on, cycle through your color choices, and turn off.

### SECURILOCK®

SecuriLock® passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded Integrated Keyhead Transmitter (IKT) programmed to your vehicle is used. Using the wrong type of coded key may lead to a "no start" condition.



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.



Ford Motor Company Customer Relationship Center  
P.O. Box 6248 | Dearborn, MI 48121  
1-800-392-3673 (FORD)  
(TDD for the hearing impaired: 1-800-232-5952)



AT4J 19G217 AA



Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

## INSTRUMENT PANEL FEATURES

### 1. HEADLAMP CONTROLS

○ : Turns the headlamps off.

P : Turns on parking, instrument panel, license plate and tail lamps.

☺ : Turns on low beam headlamps.

☼ : Autolamps: Automatically turns the exterior lamps on/off based on available daylight.

☼ : Turns on fog lamps (if equipped) by pulling the control towards you.

### 2. POWERTRAIN MALFUNCTION/ REDUCED POWER LIGHT

This light illuminates when a powertrain or an AWD malfunction has been detected. Contact an authorized dealer as soon as possible.

### 3. MULTI-FUNCTION LEVER

Rotate the end of the control up/down to increase/decrease the speed of the wipers.

Push the end of the stalk:

- quickly for a single swipe without fluid.
- and hold briefly for three swipes with washer fluid.
- and hold for a longer wash cycle.

**To operate your rear window wiper**, turn the rear wiper control to 1 (intermittent speed), 2 (normal speed) or 0 (off). For a rear wash cycle, rotate and hold the rear wiper control to either 1 position.

**Note:** For optimal wiper performance, clean your blades and glass regularly. Refer to your Owner's Guide for more information.

### 4. SERVICE ENGINE SOON LIGHT

This light illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, contact your authorized dealer as soon as possible. A chime will also sound if a malfunction in the indicator light is detected.

Drive in a moderate fashion and contact your authorized dealer as soon as possible.

### 5. MESSAGE CENTER (if equipped)

The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will also notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime. Refer to your Owner's Guide for more information.

### 6. AIRBAG READINESS LIGHT

The airbag readiness light illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer as soon as possible. A chime will also sound if a malfunction in the indicator light is detected.

### 7. ABS WARNING LIGHT

The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light is also illuminated.

### 8. TILT/TELESCOPIC STEERING WHEEL LEVER

Pull the lever down to unlock the steering column. Move the steering wheel to the desired position. While holding the steering wheel in place, pull the lever up to lock the steering column.

### 9. STEERING WHEEL CONTROLS

To set the speed:

- Press ON.
- Accelerate to the desired speed.

3. Press **SET +** or **SET -** and take your foot off the accelerator.

- To set a higher speed, press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

- To set a lower speed, press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

- To return to a previously set speed, press **RESUME**.

- To turn off, depress the brake pedal or press OFF.

**VOL +/-** : Press to increase/decrease volume levels.

⏮ ⏭ : Press to access the previous/next radio station, CD track or preset satellite radio channel, if equipped.

**MEDIA**: Press repeatedly to access all possible media sources.

☺ : Press to access voice recognition, if equipped.

☺ : Press to access SYNC® phone features, if equipped.

### 10. CHECK FUEL CAP LIGHT

This light illuminates when the fuel cap may not be properly installed. If you continue to drive with this light illuminated, the service engine soon warning light may come on.

### 11. NAVIGATION SYSTEM (if equipped)

The Mobile Media Navigation System allows you to record CDs, listen to your saved music and play DVDs as well as navigate the vehicle. Refer to your Navigation supplement for more information.

### 12. ADVANCETRAC® WITH ROLL STABILITY CONTROL™ STABILITY ENHANCEMENT SYSTEM

Helps you maintain stability and steerability of your vehicle during a variety of road

conditions. If your vehicle becomes stuck, try turning off the AdvanceTrac® system (by pressing the control) to allow wheel spin and help increase momentum to help dig the vehicle out. The system defaults to on and the control will illuminate when turned off. Refer to your Owner's Guide for more information.

### 13. HAZARD FLASHER

Press to activate the front and rear direction signals when your vehicle is disabled and is creating a safety hazard for other motorists. Press again to turn off. The hazard flashers will operate when the ignition is in any position or when the ignition is turned off.

### 14. OVERDRIVE CONTROL/ CANCEL WITH GRADE ASSIST

Drive with the vehicle in Overdrive (D) for the best fuel economy. You can deactivate overdrive by pressing the transmission control switch on the side of the shift handle. Your vehicle is equipped with a special Grade Assist feature which is automatically activated when overdrive is turned off. Grade assist helps to provide optimal gear selection and additional engine braking on hilly terrain. It is recommended that you return to O/D (Overdrive) once you return to flat terrain. To return to overdrive, simply press the transmission control switch again.

### UNIVERSAL GARAGE DOOR OPENER (if equipped)

Depending on your vehicle's option package, you may have a HomeLink® or a Car2U® system. These systems can help you replace hand-held transmitters with a single device. The systems learn the radio frequency codes of most transmitters to operate garage doors, security systems, and home lighting. Refer to your Owner's Guide for more information, including programming instructions.

## AUDIO

PREMIUM SOUND AM/FM IN-DASH SIX CD/MP3 SATELLITE COMPATIBLE SOUND SYSTEM (if equipped)

### 1. ON/OFF/VOLUME

Press to turn on/off. Turn to increase/decrease volume.

### 2. SEEK

Press to access the previous (◀) or next (▶) strong station, track or satellite radio channel (if equipped).

### 3. TEXT/SCAN

Press and hold for a brief sampling of radio stations, CD tracks or satellite radio channels. Press again to stop. In MP3 mode, press TEXT to display track title, artist name and disc title.


**Autoset:** Allows you to set the strongest local radio stations without losing your original stored stations. Use ▲/▼ to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.

**Occupancy mode:** Use ▲/▼ to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.

Category, Save Song, Delete Song, Delete All Songs, and Enable/disable alerts.

### AUXILIARY INPUT JACK

Your vehicle is equipped with an Auxiliary Input Jack located inside the console bin. This allows you to plug and play auxiliary audio devices including MP3 players. Press AUX repeatedly on your audio system to access. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

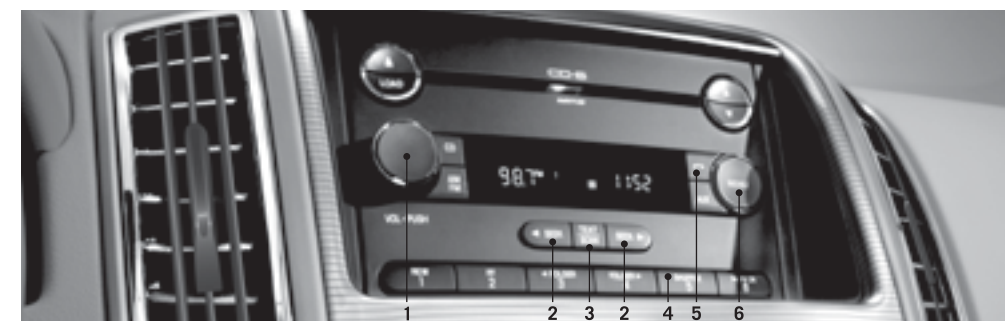

### 4. SHUFFLE

Press to play all tracks on the current disc in random order.

### 5. ☎ (Phone)

If your vehicle is equipped with SYNC®, press to access SYNC® PHONE features. For further information please refer to your SYNC® supplement. If your vehicle is not equipped with SYNC®, the display will read NO PHONE.

### 6. MENU

Press repeatedly to cycle through the following features among others:

**SPEED VOL (Speed sensitive volume):** Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. SPEED OFF turns the feature off and level 7 is the maximum setting.

**Setting the clock:** Press MENU until SET HOURS and SET MINUTES is displayed. Press ▲/▼ to set the time.

**Satellite radio menu (if equipped):** Press OK and then press ▲/▼ to cycle through:

### SIRIUS® SATELLITE RADIO (if equipped)

Your vehicle may be equipped with satellite radio. SIRIUS® Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit [www.sirius.com](http://www.sirius.com) in the United States, [www.sirius-canada.ca](http://www.sirius-canada.ca) in Canada, or call SIRIUS® at 1-888-539-7474.