



INSTRUMENT PANEL

1 HEADLAMPS

○ Turns the headlamps off.
 P☞ Turns on parking, instrument panel, license plate and tail lamps.
 ☞ Turns on headlamps.
 ☞ (if equipped) Automatically turns the exterior lamps on/off based on available daylight.
 ☞ (if equipped) Turns on fog lamps by pulling the control towards you.



2 PANEL DIMMER CONTROL

Press ▲▼ to adjust the instrument panel brightness. Press and hold ▲ to turn on the interior courtesy lights. Press ▼ to turn off.



3 INTERIOR TRUNK RELEASE

4 MULTI-FUNCTION LEVER

Rotate the end of the control up/down to increase/decrease the speed of the wipers. Push the end of the stalk:
 • quickly for a single swipe without fluid.
 • and hold briefly for three swipes with washer fluid.
 • and hold for a longer wash cycle.

Note: For optimal wiper performance, clean blades and glass regularly. Refer to your Owner's Guide for more information.

5 TILT/TELESCOPE STEERING WHEEL

6 MESSAGE CENTER

Displays important vehicle information through a constant monitoring of vehicle systems. The system will notify you of potential problems with a display of warnings followed by a long indicator chime. Use the INFO, SETUP and RESET buttons to access various

7 STEERING WHEEL CONTROLS

To set the speed:
 1. Press ON.
 2. Accelerate to the desired speed.
 • Press SET + and take your foot off the accelerator.
 • To set a higher speed, press and hold SET + or press SET + repeatedly until the desired speed is reached.
 • To set a lower speed, press and hold SET - or press SET - repeatedly until the desired speed is reached.
 • To return to a previously set speed, press RSM.
 • To turn off, depress the brake pedal or press OFF.

Press INFO, RESET and SETUP to make adjustments to the message center.



VOL +/-: Press to increase/decrease volume levels.

◀▶▶▶: Press to access the previous/next radio station, CD track or preset satellite radio channel.

MEDIA: Press repeatedly to access all possible media sources.

☞: Press to access voice recognition, if equipped.

☞: Press to access SYNC® phone features, if equipped.

8 HAZARD FLASHER



9 PASSENGER AIRBAG OFF

Illuminates when the passenger airbag has been turned off due to the system sensing light to medium weight in the front passenger seat. For complete information, refer to the Front Passenger Sensing System in the Seating and Safety Restraints chapter of your Owner's Guide.


10 NAVIGATION SYSTEM (IF EQUIPPED)

The Mobile Media Navigation System allows you to record CDs, listen to your saved music, play DVDs and access climate control options in addition to navigating the vehicle. Refer to your Navigation supplement for more information.



11 HEATED DRIVER/PASSENGER SEATS (IF EQUIPPED)

Push once to activate high heat, twice to activate low heat and a third time to deactivate.

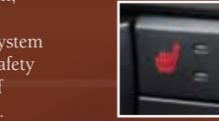

12 ADVANCETRAC® STABILITY ENHANCEMENT SYSTEM

Helps you maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck, try turning off the AdvanceTrac® system (by pressing the control) to allow wheel spin and help increase momentum to help dig the vehicle out. Refer to your Owner's Guide for more information.



INSTRUMENT CLUSTER



TRACTION CONTROL

Illuminates when AdvanceTrac®/Traction Control is active. If the light remains on, contact your authorized dealer as soon as possible.

SERVICE ENGINE SOON

Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

AIRBAG READINESS

Illuminates briefly when the ignition is turned on. If

LOW TIRE PRESSURE WARNING

Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on or begins to flash when the ignition is first turned on or while driving, contact your authorized dealer as soon as possible.

ABS (ANTI-LOCK BRAKE SYSTEM)

Illuminates briefly when the ignition is turned on. If the light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible and have the system serviced. Normal braking (less ABS) is still functional (less the brake warning light ^{OFF} is also illuminated).

VOL

Push to turn the system on/off. Turn to increase/decrease the volume.

CD

Press to enter CD/MP3 mode. If a disc is already present in the system, CD play will begin where it last ended.

AM/FM

Press repeatedly to cycle through AM, FM1 or FM2 frequency bands.

CLOCK

To set the time, press CLOCK. Use the memory preset numbers (0-9) to enter the desired time.

SIRIUS®

satellite radio broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS® at 1-888-539-7474. Satellite radio is only available with a valid SIRIUS® radio subscription.

AUDIO CONTROLS

In-dash CD6/MP3 satellite compatible sound system (if equipped)



The system illustrated here is the navigation based audio system. Please refer to your navigation supplement for complete information on this system.

SIRIUS

Press repeatedly to cycle through SAT1, SAT2 and SAT3 (satellite radio modes, if equipped). Press MENU when active and then OK to enter the satellite radio menu and access more options. Refer to your Owner's Guide for more information.

SOUND

Press repeatedly to access: Bass, Treble, Balance, Fade, Speed compensated volume and All seats (Occupancy mode, if equipped) menu options. Press ◀ SEEK/ TRACK ▶ to make adjustments.

SCAN

Press for a brief sampling of all radio stations, CD tracks or satellite radio channels (if equipped). Press again to stop.

DIRECT

Press DIRECT and then, using the memory presets (0-9), enter in the desired radio station, track number, MP3 folder number (if in MP3 mode), or satellite radio channel.

TUNE

Turn to go to the next/previous satellite radio channel, or to go up/down the radio band frequency in individual increments.

THROTTLE CONTROL/TRANSMISSION

Illuminates when a powertrain or AWD fault is detected. If the light remains on, or continues to come on, contact your authorized dealer for service as soon as possible.

TRACTION CONTROL

Illuminates when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

ABS (ANTI-LOCK BRAKE SYSTEM)

Illuminates briefly when the ignition is turned on. If the light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible and have the system serviced. Normal braking (less ABS) is still functional (less the brake warning light ^{OFF} is also illuminated).

LOW TIRE PRESSURE WARNING

Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on or begins to flash when the ignition is first turned on or while driving, contact your authorized dealer as soon as possible.

VOL

Push to turn the system on/off. Turn to increase/decrease the volume.

CD

Press to enter CD/MP3 mode. If a disc is already present in the system, CD play will begin where it last ended.

AM/FM

Press repeatedly to cycle through AM, FM1 or FM2 frequency bands.

CLOCK

To set the time, press CLOCK. Use the memory preset numbers (0-9) to enter the desired time.

SIRIUS®

satellite radio broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS® at 1-888-539-7474. Satellite radio is only available with a valid SIRIUS® radio subscription.

TRACTION CONTROL

Illuminates when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

ABS (ANTI-LOCK BRAKE SYSTEM)

Illuminates briefly when the ignition is turned on. If the light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible and have the system serviced. Normal braking (less ABS) is still functional (less the brake warning light ^{OFF} is also illuminated).

LOW TIRE PRESSURE WARNING

Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on or begins to flash when the ignition is first turned on or while driving, contact your authorized dealer as soon as possible.

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Use only non-essential features and devices when it is safe to do so.

CLIMATE CONTROL

Dual automatic temperature control (if equipped)



The system illustrated here is the navigation based climate system. Please refer to your Owner's Guide for complete information on this system.

Press to turn on/off.

AUTO/DRIVER SIDE TEMP

Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature. Press again to deactivate. Turn to increase/decrease the temperature on the driver side of the vehicle (when PASS TEMP is active) or for the entire vehicle cabin (when PASS TEMP is not active).

PASSENGER TEMP

Press to activate the passenger side climate control (dual zone). Turn the control to increase/

decrease temperature on the passenger side. Press again to turn off and return to single zone where the driver side temperature control determines the temperature for the entire vehicle.

MAX A/C

Distributes recirculated air through the instrument panel vents to cool the vehicle. This mode is more economical and efficient. May also help reduce undesirable odors from entering the vehicle.

FAN SPEED

Press + to increase or - to decrease fan speed.

Distributes outside air through the windshield defroster and demister vents. Can be used to

clear thin ice or fog from the windshield.

Recirculated air may reduce the amount of time needed to cool down the interior of the vehicle and may also help reduce undesirable odors from reaching the interior of the vehicle.

Press to activate and clear the rear window and side heated mirrors (if equipped) of thin ice and fog. Press again to deactivate.

AIRFLOW MODES

Select if you would like airflow through the panel vents, panel and floor vents, or through the defrost/floor vents.

ADDITIONAL FEATURES

REARVIEW CAMERA (IF EQUIPPED)

This system provides a visual display of the area behind the vehicle. The display automatically appears on the navigation screen (if equipped) or in the rear view mirror when the vehicle is in Reverse (R) and uses colors (green, yellow and red) to alert you of your proximity to objects. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail, and limitations.



SYNC® (IF EQUIPPED)

SYNC® is a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement, the SYNC® section in the Navigation Supplement (if equipped) or visit www.SyncMyRide.com.



BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT (CTA) (IF EQUIPPED)

BLIS® uses radar sensors to help you determine if a vehicle may be in your blind spot zone when driving on roads and freeways. The CTA feature alerts you if a car is coming toward you when you are backing out of a parking space. **Note:** Visibility aids do not replace the need to watch where the vehicle is



moving. Refer to your Owner's Guide for safety information, more detail, and limitations.

INTEGRATED KEYHEAD TRANSMITTER (IKT)

- Press once to lock all doors. Press again to confirm all doors are closed.
- Press once to unlock the driver's door. Press again within five seconds to unlock all doors.
- Press to activate the panic alarm. Press again or turn the ignition on to deactivate.
- Press twice within three seconds to open the trunk.
- Car finder: Press twice within three seconds to locate your vehicle. The horn will chirp and the turn lamps will flash.



REVERSE SENSING SYSTEM (IF EQUIPPED)

The reverse sensing system may warn you if there is an object behind the vehicle. A warning tone will sound which increases in frequency as the object gets closer and then will sound continuously when the object is less than 10 inches away. The system is active when the vehicle is in Reverse (R) and traveling less than 3 mph (5 km/h). **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail, and limitations.

MOON ROOF (IF EQUIPPED)

Your moon roof is equipped with an automatic one-touch express opening, closing and venting feature.

- To open: Press and release the rear portion of the control.
- To close: Press and release the front portion of the control.
- To vent: When the glass panel is closed, press and release the front portion of the control.
- To close from a venting position: Press and hold the rear portion of the control until the glass stops moving.



SECURICODE™ KEYLESS ENTRY SYSTEM (IF EQUIPPED)

Allows you to lock or unlock the doors as well as open the trunk without a key. Ensure that you have your five digit factory code located on your owner's wallet card in the glove box.

- To unlock the driver's door, enter your five digit factory code.
- To unlock all doors, enter your five digit factory code and, within five seconds, press 3-4.
- To open the trunk, enter your five-digit factory code and, within five seconds, press 5-6.
- To lock all vehicle doors, press 7-8 and 9-10 at the same time (you do not need to enter your factory code first).



AMBIENT LIGHTING (IF EQUIPPED)

Press repeatedly to turn the feature on, cycle through your color options and turn the feature off. When activated, the foot well areas, cup holders and center console bin illuminates with the chosen color.



ALL WHEEL DRIVE (AWD, IF EQUIPPED)

AWD is always active and uses all four wheels to power the vehicle, there by increasing traction and enabling you to drive over terrain and in road conditions that a conventional two-wheel drive vehicle cannot. Your vehicle is not intended for off-road use. **Note:** Use only the provided spare tire. Using a different size could cause the AWD system to stop functioning and default to front wheel drive. Your AWD vehicle has special towing instructions. Refer to your Owner's Guide for more information.

IMPROVED FUEL ECONOMY WHILE COASTING OR DECELERATING

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

ESSENTIAL INFORMATION

EASY FUEL™ 'NO CAP' FUEL SYSTEM

With this system, you simply open the fuel filler door, insert the nozzle and begin fueling. Wait five seconds from the time the refueling nozzle is shut-off until the nozzle is pulled back out of the fill pipe to allow residual fuel in the nozzle to drain into the tank. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. To use a portable fuel container, slowly insert the fuel funnel (attached to the underside of the spare tire cover or included with the tire changing tools), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. **Do not** use aftermarket funnels as they will not work with the Easy Fuel™ system and may cause damage.

FUEL TANK CAPACITY/FUEL INFO

All wheel drive vehicles have a fuel tank capacity of 16.5 gallons (62.4L) while Front wheel drive vehicles have a fuel tank capacity of 17.5 gallons (66.2L). Flex Fuel vehicles have a yellow ring around the top of the fuel filler inlet (tube) and can use either Regular unleaded fuel, E85 Ethanol Fuel or any mixture of the two. If you do not have a flex fuel vehicle, then only use "Regular" unleaded gasoline with an octane rating of 87. **Do not** use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are located in the trunk, under the floor panel. The spare tire is designed for emergency use only and

should be replaced as soon as possible. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

TIRE PRESSURE

Check your tire pressure at least once a month and before long trips (including spare, if equipped). The recommended specifications are on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. As an added safety feature, your vehicle has been equipped with a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

ROADSIDE ASSISTANCE

Your new Ford Fusion comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

SOS POST-CRASH ALERT SYSTEM™

This system provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or on your remote transmitter.

2010 FUSION QUICK REFERENCE GUIDE



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

FORD MOTOR COMPANY
Customer Relationship Center | P.O. Box 6248 | Dearborn, MI 48121
1-800-392-3673 (FORD) | (TDD for the hearing impaired: 1-800-232-5952)
www.fordowner.com | www.ford.ca

Fusion
May 2010
Second Printing
Quick Reference Guide



AE5J 19G217 AB

