

# FORD **FIESTA** Quick Reference Guide



Feel the difference

The information contained in this publication was correct at the time of going to print. In the interest of development the right is reserved to change specifications, design or equipment at any time without notice and without incurring any obligations. This publication, or part thereof, may not be reproduced nor translated without our approval. Errors and omissions excepted.

© Ford Motor Company 2011

All rights reserved.

Part Number: CG3559en 04/2011 20111208195627


# ABOUT THIS QUICK REFERENCE GUIDE

Thank you for choosing Ford. We recommend that you take some time to get to know your vehicle better by reading this Quick Reference Guide, which summarises some important aspects of your Owner's Manual. The more that you know about your vehicle, the greater the safety and pleasure you will get from driving it.

## AT A GLANCE

### Instrument panel overview

#### Left-hand drive

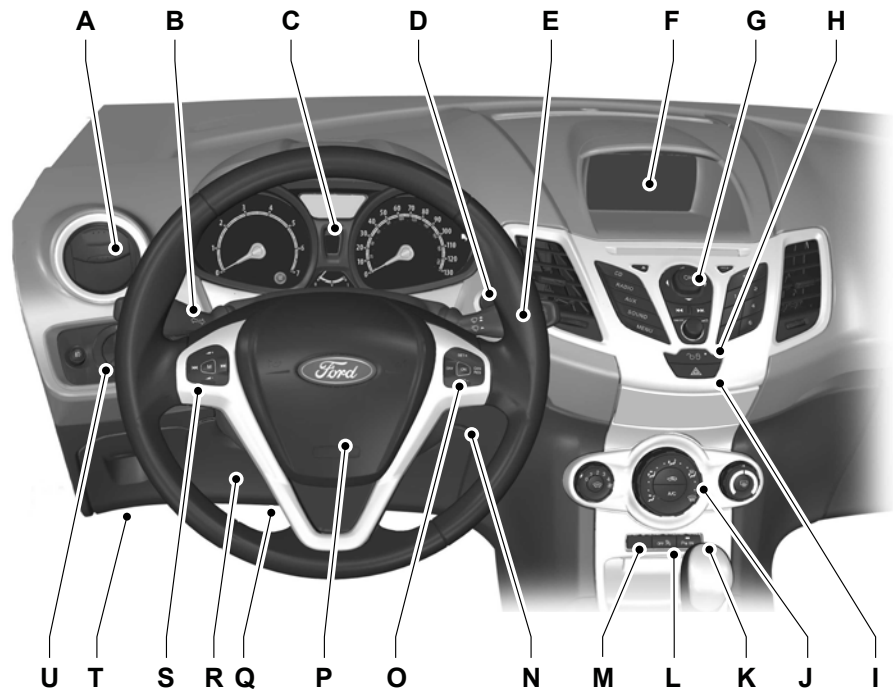

E102562


**This Quick Reference Guide must be read in conjunction with the Owner's Manual.**

### WARNING



Always drive with due care and attention when using and operating the controls and features on your vehicle.

## Right-hand drive

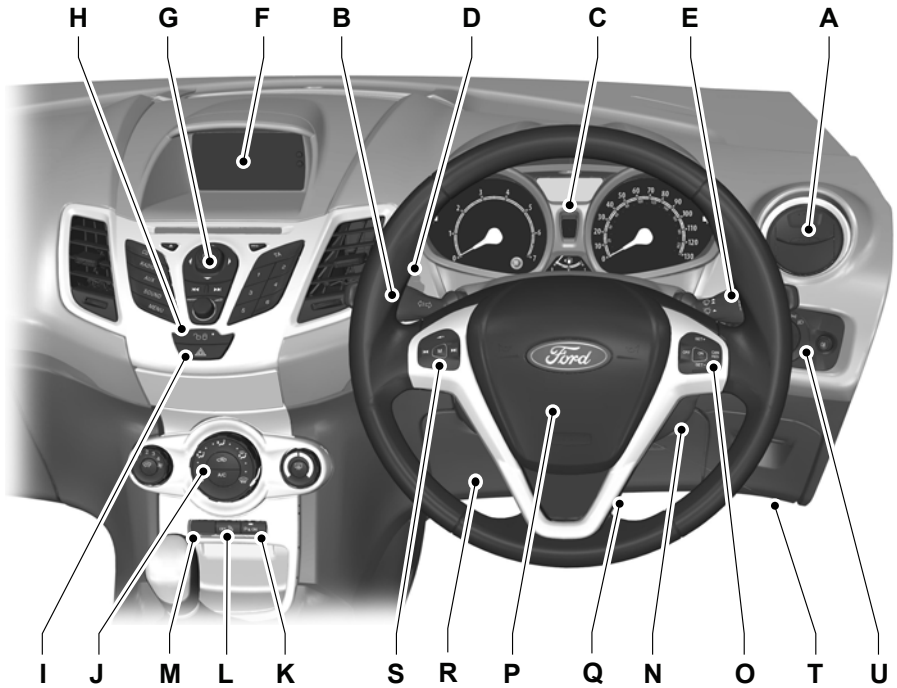

E102559

- A Air vents.
- B Direction indicators.
- C Instrument cluster.
- D Start button.
- E Wiper lever.
- F Multi functional display.
- G Audio unit.
- H Door lock button.
- I Hazard warning flasher switch.
- J Climate controls.
- K Card holder or parking aid warning lamp or switch.
- L Card holder or passenger airbag deactivation warning lamp.
- M Start-Stop switch.

- N Ignition switch.
- O Cruise control.
- P Horn.
- Q Steering wheel adjustment.
- R Driver knee airbag.
- S Audio control.
- T Bonnet release lever.
- U Lighting control. Front fog lamps. Rear fog lamp.

## SEAT BELT REMINDER

Placing objects on the seat may activate the seat belt reminder warning lamp and audible warning.

## DISABLING THE PASSENGER AIRBAG

### WARNING




To avoid the risk of death or serious injury, never use a rearward facing child restraint in the front, unless the air bag is off.



E71313

## LOCKING AND UNLOCKING

**Note:** Do not leave your keys in the vehicle.

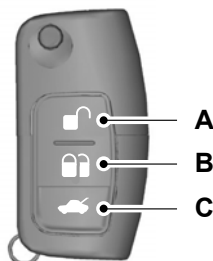

E71963

- A Unlock
- B Lock
- C Luggage compartment lid unlock


Press the unlock button once to unlock the vehicle.

Press the lock button once to activate central locking.

Press the lock button twice within three seconds to activate double locking.

Press the luggage compartment lid unlock button **twice** within three seconds to unlock the luggage compartment.


## KEYLESS ENTRY

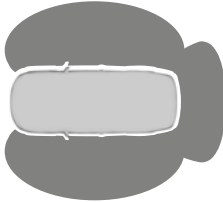

E78276

Passive locking and unlocking requires a valid passive key to be located within one of the three external detection ranges.

### Locking the vehicle

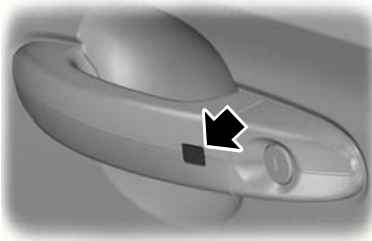


E87384

Locking buttons are located on each of the front doors.

Press a locking button once.

### Unlocking the vehicle

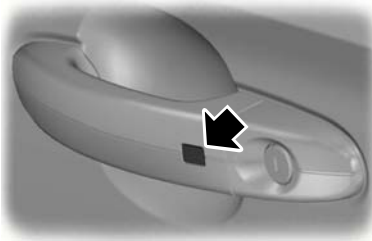

E87384

Press a locking button once.

## Locking and unlocking the doors with the key blade

**Note:** Only the driver's door handle is fitted with a lock cylinder.



E87964

1. Carefully remove the cover.
2. Remove the key blade and insert it into the lock.

## DISARMING THE ALARM

### Vehicles without keyless entry


After unlocking the doors with the key, the alarm will activate after a short period of time if you do not switch the ignition on with a correctly coded key.

## ADJUSTING THE STEERING WHEEL

### WARNING



Never adjust the steering wheel when the vehicle is moving.

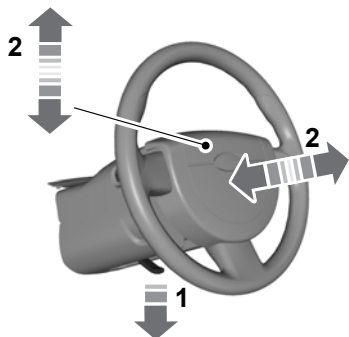

E95178

### WARNING




Make sure that you fully engage the locking lever when returning it to its original position.



E95179

## AUTOWIPERS

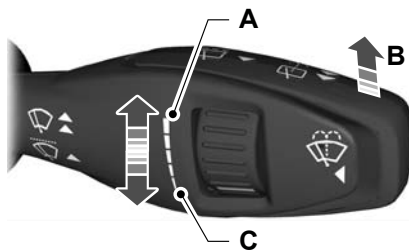

E102033

- A High sensitivity
- B On
- C Low sensitivity

The rain sensor will continuously measure the amount of water on the windscreen and adjust the speed of the front wipers automatically.

Adjust the sensitivity of the rain sensor using the rotary control.

## AUTOLAMPS



E70719

The headlamps will come on and go off automatically depending on the ambient light.

## DIRECTION INDICATORS



E102016

**Note:** Tap the lever up or down to make the direction indicators flash only three times.

## MANUAL CLIMATE CONTROL

### Recommended settings for cooling



E112145

Open the centre and side air vents.

Direct the centre air vents upwards and the side air vents toward the side windows.

### Recommended settings for heating




E112146

Close the centre air vents and open the side air vents.

Direct the side air vents toward the side windows.

## Defrosting and demisting the windscreen

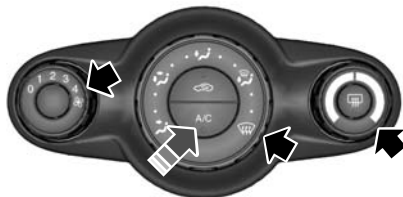

E102397

When the temperature is above 4°C (39°F), the air conditioning will switch on automatically. Make sure that the blower is on. The indicator in the switch will illuminate during defrosting and demisting.

If you move the air distribution control to a position other than windscreen, the **A/C** will remain on.

You can switch the air conditioning and recirculated air on and off while the air distribution control is set to windscreen.

## AUTOMATIC CLIMATE CONTROL

### Recommended settings for cooling



E112147

1. Set the temperature to 22°C (72°F).
2. Open the centre and side air vents.
3. Direct the centre air vents upwards and the side air vents toward the side windows.



## Recommended settings for heating




E112148

1. Set the temperature to 22°C (72°F).
2. Open the centre and side air vents.
3. Direct the centre air vents upwards and the side air vents toward the side windows.

## MANUAL SEATS

### Folding the seatback forwards - 3-door

**Note:** Do not hold on to the locking lever when moving the seat.

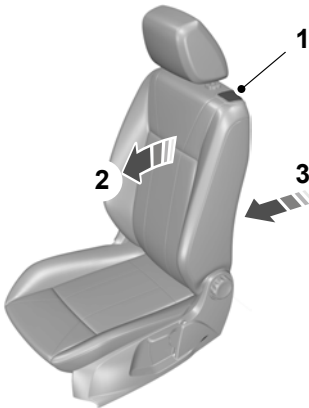

E112675

To move the seat, follow the sequence shown.

## Returning the seatback to the seating position - 3-door



E112676

## CLOCK

To adjust the clock, switch the ignition on and press buttons **H** or **M** as necessary.

## KEYLESS STARTING

### WARNINGS



For all warnings and cautions, refer to your Owner's handbook.



The keyless starting system may not function if the key is close to metal objects or electronic devices such as mobile phones.



E85766

Press the start button once.

### Starting with automatic transmission

**Note:** Releasing the brake pedal during engine start may stop the engine cranking and return to ignition on.

1. Make sure the transmission is in **P** or **N**.
2. Fully depress the brake pedal.
3. Press the start button.

## Starting with manual transmission

**Note:** Releasing the clutch pedal during engine start will stop the engine cranking and return to ignition on.

1. Fully depress the clutch pedal.
2. Press the start button.

## Stopping the engine when the vehicle is moving

### WARNING



Switching off the engine when the vehicle is still moving will result in a loss of brake and steering assistance. The steering will not be locked, but higher effort will be required. When the ignition is switched off some electrical circuits, warning lamps and indicators may also be OFF.

Press and hold the start button for two seconds, or press twice within two seconds.

## SWITCHING OFF THE ENGINE

### WARNINGS




For all warnings and cautions, refer to your Owner's handbook.





When you switch your engine off, the cooling system fans may run on for several minutes, even if the ignition is switched off. The fans may also start running again after some time if the coolant temperature rises due to a build-up of heat. Take care not to get any fingers or clothing such as ties or scarves caught in the fan.

## FUEL FILLER FLAP

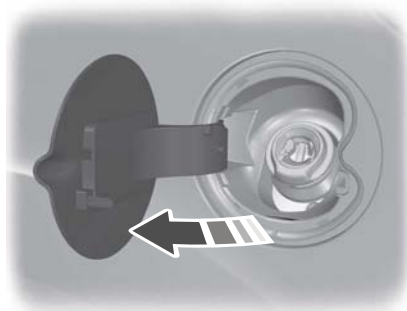

E141561

Press the flap to open it. Open the flap fully until it engages.

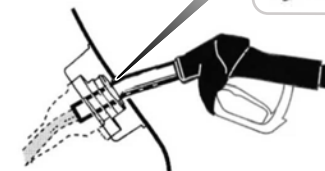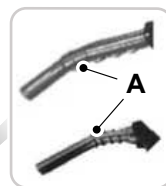


E139202

Insert the fuel nozzle up to and including the first notch on the nozzle. Keep it resting on the cover of the fuel pipe opening.

### WARNING



We recommend that you remove the fuel nozzle slowly to allow any residual fuel to drain into the fuel tank. Alternatively you can wait 10 seconds before removing the fuel nozzle.

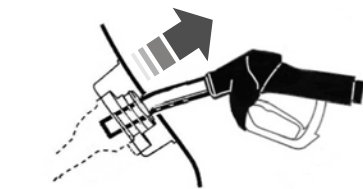

E119081

Slightly raise the fuel nozzle to remove it.

## HINTS ON DRIVING WITH ANTI-LOCK BRAKES

**Note:** *When the system is operating, the brake pedal will pulse and may travel further. Maintain pressure on the brake pedal. You may also hear a noise from the system. This is normal.*

The ABS will not eliminate the risks when:

- you drive too close to the vehicle in front of you
- the vehicle is aquaplaning
- you take corners too fast
- the road surface is poor.

## PARKING AID - VEHICLES WITH: FRONT AND REAR PARKING AID

### WARNING



The parking aid does not relieve you of your responsibility to drive with due care and attention.

The parking aid is per default off. To switch the parking aid on, select reverse gear or press the switch in the instrument panel.

## BLUETOOTH SETUP

The Bluetooth mobile phone part of the system provides interaction with the audio system and your mobile phone. It allows you to use the audio system to make and receive calls without having to hold your mobile phone.

During bonding, if your mobile phone asks you to authorize the automatic connection, select **YES**.

Refer to your Owner's Manual and also [www.ford-mobile-connectivity.com](http://www.ford-mobile-connectivity.com) for details.