

# FORD **TOURNEOCONNECT /** **TRANSITCONNECT** Quick Reference Guide



The information contained in this publication was correct at the time of going to print. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated into any language in any form by any means without our written permission. Errors and omissions excepted.

© Ford Motor Company 2013

All rights reserved.

Part Number: CG3560en 09/2012 20130123115052

## ABOUT THIS QUICK REFERENCE GUIDE

Thank you for choosing Ford. We recommend that you take some time to get to know your vehicle better by reading this Quick Reference Guide, which summarises some important aspects of your Owner's Manual. The more that you know about your vehicle, the greater the safety and

pleasure you will get from driving it.

**This Quick Reference Guide must be read in conjunction with the Owner's Manual.**

### WARNING




Always drive with due care and attention when using and operating the controls and features on your vehicle.

## AT A GLANCE


### Instrument panel overview

#### Left-hand drive

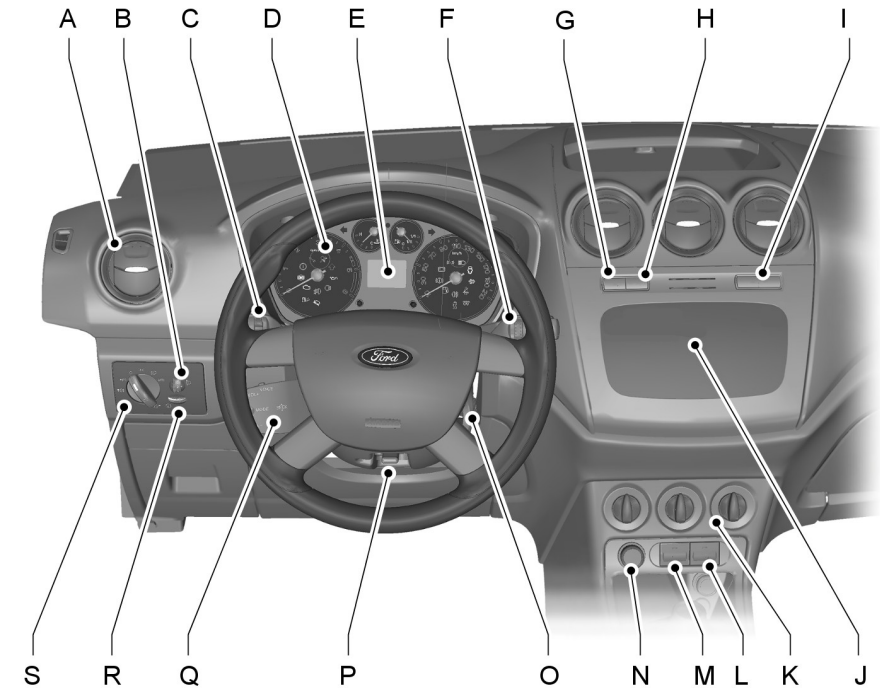

E115781

## Right-hand drive

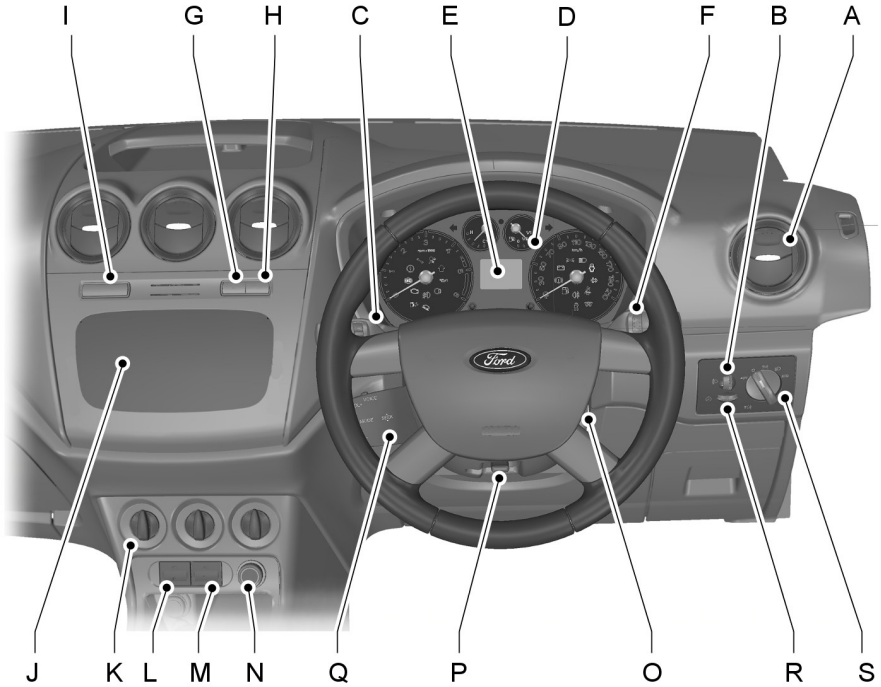

E115782

- A Air vent.
- B Headlamp levelling control.
- C Direction indicators.
- D Instrument cluster.
- E Information display.
- F Wiper lever.
- G Hazard warning flasher switch.
- H Passenger airbag disabled indicator.
- I Heated windscreen and heated rear window switches.
- J Audio or navigation unit.
- K Climate controls.
- L Recirculated air switch.
- M Air conditioning switch.

- N Cigar lighter or auxiliary power socket.
- O Ignition switch.
- p Steering wheel adjustment lever.
- Q Audio control.
- R Instrument lighting dimmer.
- S Lighting controls.

## LOCKING AND UNLOCKING

### Unlocking the doors with the key

#### All vehicles

Turn the top of the key towards the front of the vehicle twice to unlock all doors.

#### Transit Connect


Turn the top of the key towards the front of the vehicle to unlock the front doors.

#### Tourneo Connect

Turn the top of the key towards the front of the vehicle to unlock the front doors and sliding doors.

### Locking and unlocking the doors with the remote control

**Note:** *The anti-theft alarm system can also be armed independently from the double locking system by turning the door key to the lock position.*

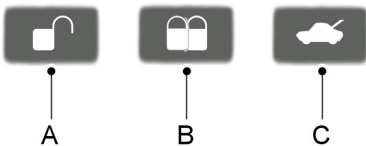

E87379

- A Unlock
- B Lock
- C Luggage compartment lid unlock

### Transit Connect

Press button **A** once to unlock the front doors only.

Press button **A** twice to unlock all doors.

Press button **C** once to unlock the sliding door and luggage compartment lid.

### Tourneo Connect

Press button **A** once to unlock the front doors and sliding doors.

Press button **A** twice to unlock all doors.

Press button **C** once to unlock the luggage compartment lid.

#### All vehicles

Press button **B** once to lock all doors.

Press button **B** twice within three seconds to activate double locking.

## POWER WINDOWS

### WARNING



For all warnings and cautions, refer to your Owner's Manual.

To reduce wind noise or buffeting when just one window is open, open the opposite window slightly.

## WARNING LAMPS AND INDICATORS

The following warning lamps and indicators will come on briefly when you switch the ignition on to confirm that the system is operational:

- ABS
- Airbag
- Brake system
- Engine
- Engine immobiliser
- Ignition
- Low fuel level
- Oil pressure
- Service interval
- Shift
- Stability control (ESP) and traction control
- Water-in-fuel

If a warning or indicator lamp does not illuminate when the ignition is switched on, this indicates a malfunction. Have the system checked by a properly trained technician.

### ABS warning lamp



If a warning or indicator lamp does not illuminate when the ignition is switched on, this indicates a malfunction. Have the system checked by properly trained technician.

### Airbag warning lamp



If it illuminates when driving, this indicates a malfunction. Have the system checked by a properly trained technician.

### Brake system warning lamp



It illuminates when the parking brake is engaged.

#### WARNING



Reduce your speed gradually and stop your vehicle as soon as it is safe to do so. Use your brakes with care.

If it illuminates when you are driving, check that the parking brake is not engaged. If the parking brake is not engaged, this indicates a malfunction. Have the system checked by a properly trained technician immediately.

### Direction indicator



Flashes during operation. A sudden increase in the rate of flashing warns of a failed indicator bulb.

### Door open warning lamp



It will illuminate when you switch the ignition on if you have not closed the doors, the bonnet or tailgate properly.

### Engine warning lamps

#### Malfunction indicator lamp



#### Powertrain warning lamp



#### All vehicles

If either lamp illuminates when the engine is running, this indicates a fault. The engine will continue to run but it may have limited power. If it flashes when you are driving, **reduce the speed of your vehicle immediately.** If it continues to flash, avoid heavy acceleration or deceleration. Have the system checked by a properly trained technician immediately.

#### WARNING



Have this checked immediately.

If **both** lamps illuminate together, **stop your vehicle as soon as it is safe to do so** (continued use may cause reduced power and cause the engine to stop). Turn the ignition off and attempt to restart the engine. If the engine restarts have the system checked by a properly trained technician immediately. If the engine does not restart the vehicle must be checked before continuing your journey.

### Front fog lamp indicator



It will illuminate when you switch the front fog lamps on.

### Glow plug indicator



### Headlamp indicator



It will illuminate when you switch the headlamp dipped beam or the side and tail lamps on.

### Ignition warning lamp

#### WARNING



If the charging system drive belt on the diesel engines is loose, torn or broken, the servo assistance for the braking system also no longer operates.



If it illuminates whilst driving, this indicates a malfunction. Switch off all unnecessary electrical equipment. Have the system checked by a properly trained technician immediately.

### Low fuel level warning lamp



If it illuminates, refuel as soon as possible.

The arrow adjacent to the fuel pump symbol tells you on which side of your vehicle the fuel filler cap is located.

### Main beam indicator



Illuminates when you switch the headlamp main beam on. It will flash when you use the headlamp flasher.

### Message indicator

It will illuminate when a new message is stored in the information display.

### Oil pressure warning lamp

#### CAUTION



Do not resume your journey if the oil pressure warning lamp comes on despite the oil level being correct. Have the system checked by a properly trained technician immediately.



If the lamp stays on after starting or illuminates during a journey, this indicates a malfunction. Stop your vehicle as soon as it is safe to do so and switch the engine off. Check the engine oil level. See **Engine Oil Check** (page 7). Top up straight away if the level is low.

### Rear fog lamp indicator



It will illuminate when you switch the rear fog lamps on.

### Service interval indicator



It will illuminate when a service is due or there is excessive soot or sludge in the oil. Have the engine oil changed as soon as possible.

Your dealer will switch the service interval indicator lamp off for you after completing the service.

## Seat belt reminder



## Shift indicator



It will illuminate for a short period of time to inform you that shifting to a higher gear may give better fuel economy and lower CO2 emissions. It will not illuminate during periods of high acceleration, braking or when the clutch pedal is pressed.

## Stability control (ESP) and traction control warning lamp

**Note:** If either the ESP system or traction control system malfunctions, the respective system will switch off automatically.



It will flash when either system is operating. If it does not flash or it comes on when you are driving, this indicates a malfunction. Have the system checked by a properly trained technician immediately.

If you switch ESP off, the warning lamp will come on. The lamp will go out when you switch the system back on or when you switch the ignition off.

## Water-in-fuel indicator

### Vehicles with a diesel engine



It will illuminate if there is excess water in the fuel filter. Have the system checked by a properly trained technician immediately.

## MANUAL CLIMATE CONTROL

### Recommended settings for cooling



E131239

Switch on the air conditioning.

Open the centre and side air vents.

Direct the centre air vents upwards and the side air vents toward the side windows.

### Recommended settings for heating



E131240

Close the centre air vents and open the side air vents.

Direct the side air vents toward the side windows.

### Defrosting and demisting the windscreen



E74666

When the temperature is above 4°C (39°F), the air conditioning will switch on automatically. Make sure that the blower is on. The indicator in the switch will illuminate during defrosting and demisting.

If you move the air distribution control to a position other than windscreen, the **A/C** will switch off.

You can not switch the air conditioning and recirculated air on and off while the air distribution control is set to windscreen.

## FUEL CONSUMPTION

The CO2 and fuel consumption figures are derived from laboratory tests according to EEC Directive 80/1268/EEC and subsequent amendments and are carried out by all vehicle manufacturers.



They are intended as a comparison between makes and models of vehicles. They are not intended to represent the real world fuel consumption you may get from your vehicle. Real world fuel consumption is governed by many factors including; driving style, high speed driving, stop/start driving, air conditioning usage, the accessories fitted and towing etc.

Your Ford dealer can give you advice on improving your fuel consumption.

## HINTS ON DRIVING WITH ANTI-LOCK BRAKES

**Note:** When the system is operating, the brake pedal will pulse and may travel further. Maintain pressure on the brake pedal. You may also hear a noise from the system. This is normal.

The ABS will not eliminate the risks when:

- you drive too close to the vehicle in front of you
- the vehicle is aquaplaning
- you take corners too fast
- the road surface is poor.

## PARKING AID

### WARNING



The parking aid does not relieve you of your responsibility to drive with due care and attention.

### CAUTIONS



Vehicles fitted with a trailer tow module not approved by us may not correctly detect obstacles.



The sensors may not detect objects in heavy rain or other conditions that cause disruptive reflections.

**Note:** On vehicles fitted with a tow ball arm, the parking aid is deactivated automatically when any trailer lamps (or lighting boards) are connected to the 13-pin socket via a trailer tow module we have approved.

## ROOF RACKS AND LOAD CARRIERS

When roof mounted accessories (e.g. roof rack) are fitted, wind noise may occur.

## ENGINE OIL CHECK

The oil consumption of new engines reaches its normal level after approximately 5 000 kilometres (3 000 miles).

## TYRE CARE



E70415

To make sure the front and rear tyres of your vehicle wear evenly and last longer, we recommend that you swap the tyres from front to rear and vice versa at regular intervals of between 5000 and 10000 kilometres (3000 and 6000 miles).

### CAUTION



Do not scrub the sidewalls of the tyres when you are parking.

If you have to mount a kerb, do so slowly and approach it with the wheels at right-angles to the kerb.

Examine the tyres regularly for cuts, foreign objects and uneven wear of the tread. Uneven wear could mean that the wheel alignment is outside specification.

Check the tyre pressures (including the spare) when cold, every two weeks.

## SETTING THE CLOCK AND DATE ON THE AUDIO UNIT

### Changing the date and time

Press the **CLOCK** button to display the date and time.

**Note:** *If you do not press another button within 30 seconds of pressing the **CLOCK** button, the display will return to its previous setting.*

1. Using the seek up or seek down button select the date or time value that you wish to change. The selected value will flash in the display.
2. Rotate the volume control to change the selected date or time value.
3. Using the seek up or seek down button select additional date or time values that you wish to change.
4. Rotate the volume control to change the selected date or time value.
5. Press the **CLOCK** button to exit and save your settings.

**Note:** *If you do not press the **CLOCK** button within 30 seconds of changing a date or time value, the display will exit and save the new values automatically.*

**Note:** *Press and hold the **CLOCK** button for more than two seconds to automatically select the hour value for winter or summer time adjustment.*

### 12/24 hour format

1. Press the **MENU** button repeatedly until the 12/24 icon is shown in the display.
2. Using the seek up or seek down button select your required setting.
3. Press the **MENU** button repeatedly or allow the system to time out to confirm your selection.

## AUTOMATIC VOLUME CONTROL

When available, automatic volume control (AVC) adjusts the volume level to compensate for engine noise and road speed noise.

1. Press the MENU button repeatedly until an AVC display appears.
2. Use the left or right arrow button to adjust the AVC setting.

## BLUETOOTH SETUP

Before you can use your mobile phone, it must be bonded to your vehicle's telephone system.

The following are required before a Bluetooth connection can be made.

1. The Bluetooth features must be activated on your mobile phone and the audio unit. Make sure the Bluetooth menu option in the audio unit is set to **ON**.

**Note:** *For information on the Bluetooth settings for your mobile phone, refer to the manufacturer's instructions.*

2. In the Bluetooth menu on your mobile phone, search for **Ford Audio** and select it.
3. Enter the code number shown on the vehicle display using your mobile phone keypad. If no code number is shown on the display, enter the Bluetooth PIN number 0000 using the mobile phone keypad. Now enter the Bluetooth PIN number shown on the vehicle display.
4. If your mobile phone asks you to authorize the automatic connection, select **YES**.

For further information on how to use your mobile phone through your vehicle's telephone system, refer to your Owner's Manual.