

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

United States

Ford Customer Relationship Center

1-800-392-3673 (FORD)

(TDD for the hearing impaired:

1-800-232-5952)

fordowner.com



@FordService

Canada

Ford Customer Relationship Centre

1-800-565-3673 (FORD)

ford.ca



@FordServiceCA



January 2015
Second Printing
Quick Reference Guide
Escape
Litho in U.S.A.




Quick Reference Guide

| 2015 **Escape**

F5J19G217 AA



Commonly Used SYNC® Voice Commands

Press the voice button  on the steering wheel and then say:



Basic Commands

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Pair my phone



Phone

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb <On/Off>
- Listen to text messages (phone-dependent feature)



Climate*

- Climate control list of commands
- Climate <On/Off>
- Climate temperature



Entertainment

- Audio list of commands:
You can also get detailed lists of commands for radio, USB, *Bluetooth*® audio, SiriusXM and SD card*
- Radio
 - <On/Off>
 - FM <87.9-107.9>
 - FM preset <#>
- CD
 - Play track <1-512>
 - Shuffle <On/Off>
- USB
 - Play song <name>
 - Play album <name>
- SiriusXM
 - <Channel name>
 - Preset <#>



Navigation**

- Navigation list of commands
- Destination street address <number, name, city>
- Destination home
- Navigation voice <On/Off>
- Navigation voice volume <increase/decrease>
- Repeat instruction
- Show <map/north-up/heading-up/3-D>
- Travel Link list of commands
- Traffic
- Weather
- Movie listings
- Fuel prices
- Sports <headlines/scores/schedule>

Some services may not be available in your area. Refer to your *Owner's Manual*, visit the website or call the toll-free number for more information.

For U.S. customers:

Visit SyncMyRide.com or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

For Canadian customers:

Visit SyncMyRide.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).

*if equipped

**available only with MyFord Touch

Table of Contents

4 – 5	Instrument Panel
6 – 7	SYNC
8 – 10	SYNC with MyFord Touch
11	Convenience
12 – 13	Comfort
14 – 15	Liftgate
16 – 17	Function
18 – 19	Essential Information

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Learn More About Your New Vehicle

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



fordowner.com (U.S.)



ford.ca (Canada)

Instrument Panel




1 Cruise Control

To Set Your Cruise Control Speed

- Press and release **ON**.
- Accelerate to the desired speed.
- Press and release **SET +**, then take your foot off the accelerator.

After you set a speed, you can press **SET +** or **SET -** to adjust cruise speed. To switch cruise control off, pull the **CAN** (Cancel) control toward you or tap the brake pedal.

2 Service Engine Soon Light

 Lights briefly when you switch on the ignition. If it remains on or is flashing after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

3 Information Display



Provides information about various systems on your vehicle. Use the left, 5-way controls located on the steering wheel to choose



and confirm settings and messages. Refer to the *Information Displays* chapter of your *Owner's Manual* for more information.

4 Tilt and Telescope Steering Column


Unlock the steering wheel by pulling the lever down. Adjust the wheel to the desired position (in, out, up and down). Push the lever back up to lock the steering wheel in place.


5 Media Controls*


Press  + to increase or  - to decrease volume levels.


Press   to hear the next or previous saved radio station, CD or MP3 track. Press and hold to seek up or down the frequency band, or through CD or MP3 tracks.


6 Voice Controls*

 Press to access voice recognition.

 Press the phone button to answer an incoming call.

 Press and hold to exit phone mode or end a call.

 Press the home icon at any time to return to your MyFord Touch® home screen.

 Press the information icon to access MyFord Touch, SiriusXM Travel Link®, Alerts, Calender and more.

7 Wiper Controls

Use the rotary control on the lever to adjust the wipe intervals. Pull the lever toward you to wash the windshield.


8 Push Button Start*

Allows you to start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again to switch off the engine.

Note: Your intelligent access transmitter* must be inside the vehicle to start the ignition.

9 Hazard Warning Flasher Control

*if equipped

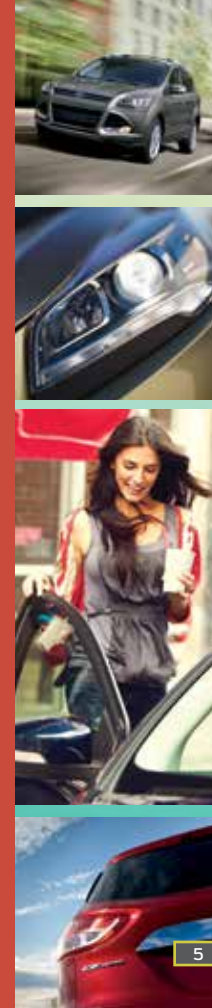

Getting Started with Your SYNC System

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. Say the Word.

Before You Get Started

1. Set up your owner account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering, you can see what available services you are eligible for.
2. SYNC uses a wireless connection called  *Bluetooth*® to communicate with your phone. Switch on *Bluetooth* mode in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada), or your phone manufacturer's website.

Pairing Your Phone with SYNC

In order to use many of the features of SYNC, such as making a phone call or receiving a text, you must first pair and connect your phone with SYNC.

To Pair Your Phone for the First Time

1. Make sure that your vehicle is in park (P), you switch the ignition and radio on, and your cellular phone is in the proper mode. See your phone's manual, if necessary.
2. Press the phone button. When the display indicates **No Phone Found**, press **OK**.
3. When **Find SYNC** appears in the display, press **OK**.

Note: If the system prompts you to enter a PIN on your cellular phone, it does not support *Secure Simple Pairing*. To pair, enter the PIN displayed on the SYNC touchscreen, then skip Steps 4 and 5.

4. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.

5. When prompted from SYNC, confirm that the PIN provided by SYNC matches the PIN that your cellular phone displayed.
6. The display indicates when the pairing is successful.

Note: The system may prompt you to set your phone as primary or favorite (the primary phone receives messages and voicemail); download your phone book (a requirement to use the full set of voice commands); and switch on 911 Assist®.

Tips

- Make sure that you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your Owner's Manual.
- If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC and deleting the SYNC connection from your phone, and then repeat the process.

Why Do You Need a SYNC Owner Account?

 
You need an account if you wish to view your reports online and take advantage of the many personalization features, such as saving your Favorites and Points of Interest (POI). An account also lets you receive the latest software updates that add new places, directions and information; and if you have questions, you'll get free customer support.

Note: Your SYNC system may offer advanced features. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.


Using Your Phone with SYNC

Note: You must download your phone book to make phone calls with voice commands by name.



Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, say a voice command.

For example, you could say "Call Jake Smith at home". When the system confirms the number, say "Dial" again to initiate the call.

Note: You can also make phone calls by pressing the voice button . When prompted, say the voice command "Dial", then verbally say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling displays. Press the phone button  to answer an incoming call. You can hang up at any time by pressing the phone button .


Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command "Do not disturb on" to enable and "Do not disturb off" to disable.

Using SYNC to Access Digital Media

Plug in your USB media devices such as phones and MP3 players, and use SYNC to play all of your favorite music.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say "USB", then follow-up saying a voice command.

SYNC® with MyFord Touch®*

A revolutionary way to connect with your vehicle.



Getting Started, Understanding SYNC with MyFord Touch

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.

Pairing Your Phone with MyFord Touch

Make sure your vehicle is in park (P), your ignition and radio are switched on and your cellular phone is in the proper mode. See your phone's manual, if necessary.

1. Touch **Add Phone** on your touchscreen. **Find SYNC** appears on the screen, and instructs you to begin the pairing process from your device.
2. Select SYNC and a six-digit PIN appears on your device. If prompted to enter a PIN on your device, it does not support Secure Simple Pairing. To pair, enter the PIN displayed on the touchscreen, and then skip the next step.
3. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone. The display indicates when pairing is successful.

Get in Touch Using Your Four-corner Touchscreen

Phone, Navigation*, Climate and Entertainment are the four main operations of SYNC with MyFord Touch. Each feature has its own corner represented by its own color.



Phone

Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.

Your Phone Connects You with Many Other Features*

- Automatically connect to a 911 Operator in the event of an accident (you must switch this feature on prior to the event).
- Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.

Refer to the SYNC with MyFord Touch chapter of your *Owner's Manual* for complete details.



Navigation*

Get started with your navigation system by pressing the upper-right green corner. The available, voice-activated navigation system includes:


- SiriusXM Traffic™
- Sirius Travel Link™
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Some features require activation. Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.



Set a Destination

You can use the touchscreen to set a destination in many ways, like a street address, a city center, a place on the map or a point of interest (POI). The easiest way is by voice.

1. Press the voice button . When prompted, say "Destination street address".
2. The system asks you to say the full address and displays an example on-screen.
3. You can then speak the address naturally, such as: "One two three Main Street, Anytown".

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel efficient route.

SYNC® with MyFord Touch® *continued*

Climate

SYNC with MyFord Touch controls the temperature, airflow direction and fan speed.

To use voice commands to operate the climate controls, say a voice command like “*Climate temperature 72 degrees*” and MyFord Touch makes the adjustment.

Set Your Temperature

- Touch the lower-right blue corner on your touchscreen.
- Set your exact, desired temperature using the + or – buttons.



Entertainment

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM and FM, SiriusXM and other media sources.

Set Your Radio Presets

- Touch the Entertainment corner on the touchscreen.
- Touch **FM**.
- Enter the desired station and touch **Enter**.
- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. The system mutes briefly and the sound returns once it saves the station.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- USB
- Bluetooth® streaming
- SD card*
- Audio in






Refer to the *MyFord Touch* chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



**if equipped*

Convenience

Remote Entry Icons

- Press  once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press  once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press  to activate the panic alarm. Press again or switch on the ignition to deactivate.
- Press  twice within three seconds to open the liftgate.
- **Car finder:** Press  twice within three seconds to locate your vehicle. The horn sounds and the lamps flash.




Intelligent Access*



Note: Your transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock and open the door, pull a front exterior door handle. To lock the doors, press and hold the sensor button on the door handle. To unlock and open the liftgate, press the exterior liftgate release button in the top of the pull cup handle. The intelligent access transmitter also contains a mechanical key blade that you can use to unlock the driver door, if necessary.

Remote Start*

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press  and then press  twice within three seconds. Once inside, apply the brake while pressing the **START STOP** button. Shift into drive (D) and go. To switch off the engine from outside the vehicle after using your remote start, press  once.

Universal Garage Door Opener*



Your driver's side visor has a built-in wireless transmitter that replaces the common hand-held garage door opener. This system can also be programmed to security systems,

entry gates and home or office lighting. Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual* for programming instructions and additional information on how to use this device.

Active Park Assist*

The system detects an available parallel parking space and automatically steers the vehicle into that space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park the vehicle. To initiate active park assist, press the **AUTO |P|** button located on the instrument panel. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, see the *Parking Aids* chapter of your *Owner's Manual*.

Note: The driver is always responsible for controlling the vehicle, supervising the system and intervening, if required.






Comfort



Ambient Lighting*

Light the interior with a choice of several colors by using the ambient lighting feature. The ambient lighting controls are in the overhead console.

-  **Color Palette** – Press to cycle through the various color choices.
-  **Control Knob** – Turn the knob to switch ambient lighting on and adjust the brightness.
-  **Search Mode** – Press to switch on all interior lamps and ambient lighting. Press again to switch off the interior lamps.

The ambient lighting turns on when you switch on the ignition and the headlamps.

The ambient lighting remains on until you switch off the ignition and either lock your vehicle, or allow the accessory delay timer to expire.



Heated Front Seats*

The front heated seat controls are on the center console near the gearshift lever. Rotate the dial to select your preferred heat mode.

Note: After starting your vehicle with remote start* you must switch the seats on manually.

Rear Reclining Seats

Pull the lever up to recline the seatback to the desired position. Pull the lever up to fold the seatback forward. You may need to fold the outboard head restraints and lower the center head restraint first.



Cargo Storage*

You can store additional items in the cargo space located underneath the load floor in the rear of the vehicle. Lift the release handle to open it. Vehicles with the standard sized spare tire can adjust the load floor to two positions: high or low.

Additionally, there are four tie-down anchors in the rear cargo area (one in each corner) to help secure objects.

*if equipped

Comfort *continued*



Panoramic Vista Roof® and Power Sunscreen*

The moonroof and sunscreen controls are on the overhead console. Both features have a “one-touch” opening and closing operation.

Press and release the following controls:

- **Sunscreen:** The rear of the control opens the sunshade, while the front of the control closes it.

Note: If the moonroof is open, it closes automatically before the sunscreen.

- **Moonroof:** The rear of the control opens the sunscreen and moonroof. The front of the control closes the moonroof glass panel.



Memory Function*

This feature automatically recalls the position of the driver seat and power mirrors. The memory control is on the driver door. You can save up to three memory position presets. To use, switch the ignition on. Adjust the seat and exterior mirrors to your desired position. Press and hold the button until you hear a single tone. You can now use these controls to recall the set memory positions.

You can also program your memory seats to your transmitter, and when you unlock your door, your memory features automatically move into your saved position. See the *Seats* chapter in your *Owner's Manual* for more details.

Tilting Front-row Head Restraints

Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more releases it to the upright position.

Note: Do not attempt to force the head restraint backward after it is tilted.



*if equipped

Liftgate

Manual Liftgate



To Open the Liftgate

1. Unlock all the vehicle doors.
2. Press the button located inside the liftgate pull-cup handle to unlatch the liftgate.
3. Pull on the outside handle to raise the liftgate.

Power Liftgate*

Note: If the vehicle is running, the liftgate operates only with the transmission in park (P).

Touch a button to open or close the liftgate:

Press  twice within three seconds on your remote entry transmitter or the  button on the instrument panel. A tone sounds when the liftgate starts to move.



You Can Also Open the Liftgate from the Rear of Your Vehicle

1. Make sure you unlock your liftgate first and then press the button located in the top of the liftgate pull-cup handle.
2. Allow the power system to open the liftgate after pressing the control.
3. To close, press and release the button located on the liftgate (pictured below).

When the liftgate begins to move, a tone sounds.



Setting the Liftgate Open Height

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.

To Program a New Height

1. Open the liftgate.
2. Manually move the liftgate to your desired height.
3. Press and hold the control button on the liftgate until you hear a tone, indicating that your programming of the liftgate height is successful.

The liftgate then opens to its newly programmed height when you use the power feature to open it.

To change the programmed height, repeat the process above.

**if equipped*

Liftgate *continued*

Obstacle Detection

When you use the power open or close feature and the liftgate detects a problem, it sounds a warning tone and the liftgate stops.

The Liftgate Cannot Power Open or Close When

- It detects an object in its opening or closing path.
- The 12-volt battery does not have enough charge to power the liftgate.
- The ignition is on and the transmission is not in park (P).
- You are traveling at speeds at or above 3 mph (5 km/h).

Note: Entering the vehicle while the liftgate is closing could cause the vehicle to bounce and activate obstacle detection.

Hands-Free Liftgate Operation*

To Open Your Liftgate Hands-Free While You Are at the Liftgate

1. Make sure you have an intelligent access transmitter* within 3 feet (1 meter) of the liftgate.
2. Move your foot under and away from the rear bumper similar to a kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

Note: In vehicles equipped with the towing package and the hands-free power liftgate feature, you must kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the hitch.



**if equipped*

Function

Rear View Camera



This system provides a video image of the area behind the vehicle. The display automatically appears when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

MyKey®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like: speed restrictions, limited volume levels and traction control always on. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

SecuriCode™ Keyless Entry Keypad*

Lock or unlock the doors and arm or disarm the anti-theft alarm using the keypad located near the driver's window. It is invisible until touched and then it lights up so you can see and touch the buttons.

To unlock the driver door, enter your 5-digit factory code found on your owner's wallet card (located in the glove box). To unlock all of the doors, enter your 5-digit code and then press **3-4** within five seconds.

To lock all of the doors, press and hold **7-8** and **9-0** at the same time. For complete information, refer to the *Locks* chapter in your *Owner's Manual*.



SelectShift Automatic® Transmission

Your SelectShift automatic transmission gives you the ability to change gears manually, if you like.

To use SelectShift, move the gearshift lever into S (Sport). Use the (+) and (-) buttons on the side of your gearshift lever to manually change gears.

- Press (+) to upshift.
- Press (-) to downshift.
- Move the gearshift lever to drive (D) to return to automatic control.

Blind Spot Information System (BLIS®) with Cross Traffic Alert*

The Blind Spot Information System aids you in detecting vehicles that may have entered the blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R).

Both systems display a yellow indicator light in your exterior mirrors. Cross traffic alert also sounds tones and displays messages to warn you from which direction vehicles are approaching.

Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.



*if equipped

Function *continued*



Wiper Operation

Adjust the wiper lever and its controls to operate the front and rear wipers.

- Single wipe – Pull the lever down.
- Intermittent wipe – Push the lever upward to the first detent.
- Normal wipe – Push the lever upward to the second detent.
- High speed wipe – Push the lever upward to the third detent.

Intermittent Wipe

Putting the wiper lever in intermittent mode allows the driver to set the amount of time between wipes.

Use the rotary control on the wiper lever to adjust the intermittent wipe intervals.

- Rotate the control upward for short wipe intervals.
- Rotate the control downward for long wipe intervals.

Speed Dependent Wipers

When your vehicle speed increases, the interval between wipes decreases.

Autowipers*

To switch this feature on, move the wiper controls to intermittent wipe. The autowiper system turns the wipers on only when moisture is present on the windshield. The wiper speed depends on how much moisture the system detects and the sensitivity setting.

- Low sensitivity — the wipers turn on when the system detects a large amount of moisture on the windshield.

- High sensitivity — the wipers turn on when the rain sensor detects a small amount of moisture on the windshield.

To switch this feature off, use your wiper controls. To change this feature to intermittent wipe every time you use your wipers, use the information display.

To switch intermittent wipe back to autowipers, use the information display.

Note: Make sure you switch off this feature before entering a car wash.

To Reduce Smearing, We Recommend the Following

- Lower the sensitivity of the autowipers.
- Switch to normal or high-speed wipe.
- Switch the autowipers off.

Note: Keep the outside of the windshield clean. Dirt, bugs and road debris can prevent it from detecting rain.

Washing the Windshield

To operate the windshield washer, pull the wiper lever toward you.

- For a short spray, pull and release.
- For a longer spray, pull and hold the wiper lever toward you. Release the lever once the windshield is clear of dirt or debris.

Rear Window Wiper

To operate, press the rocker switch on the end of the lever to change between off, intermittent and low speed. After you shift into reverse (R) and switch the wipers on, the rear wiper automatically turns on to intermittent speed.

Rear Window Washer

To use the rear window washer, push the wiper lever away from you. When you release the lever, the wiper operates for a short time.

*if equipped

Essential Information

Fuel Tank Capacity and Fuel Info

Your vehicle has a 15.5 gallon (58.7L) fuel tank capacity. Use only UNLEADED gasoline blended with a maximum of 15% ethanol and a minimum octane rating of 87.

Do not use fuel ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.



Easy Fuel® System

When fueling:

1. Put your vehicle in park (P) and switch the ignition off, and open the fuel filler door.
2. Slowly insert the fuel filler nozzle fully into the fuel system. Leave the nozzle fully inserted until you are done pumping.
3. Wait at least 10 seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.



Location of Spare Tire and Tools

Your spare tire and tools are beneath the carpeted load floor in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Changing a Road Wheel* section in the *Wheels and Tires* chapter of your *Owner's Manual*.



Running Out of Fuel

When using a portable fuel container, use the fuel funnel (located in the rear of the vehicle, inside the load compartment and underneath the load floor carpet).

Note: Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage. Properly clean the funnel or dispose of it after each use.



Essential Information *continued*

SOS Post-Crash Alert System™

Provides audible and visual alarms when a crash causes the deployment of an airbag or the activation of the safety belt pretensioners. The direction indicators flash and the horn sounds. To deactivate, press the hazard flasher control or the panic button (⏏) on your remote transmitter.

Towing Your Escape

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.



Tire Pressure Monitoring System

Your vehicle shows a low tire pressure warning light (⚠) in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Tire Pressure Monitoring System* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

Rear Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.



Front and Rear Sensing Systems*

The rear sensors are only active when the transmission is in reverse (R) and the object is moving toward the vehicle or the vehicle is approaching the object at 3 mph (5 km/h) or less.

As your vehicle moves closer to the obstacle, the rate of the audible warning increases. You can switch the system off through the information display.

The front sensors are active when the gearshift is in any position other than park (P) or neutral (N) and your vehicle speed is below 6 mph (10 km/h).

The system sounds an audible warning when obstacles are near either bumper.

See the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.