

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

United States
Ford Customer Relationship Center
U.S. • 1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
fordowner.com

 @FordService

Canada
Ford Customer Relationship Centre
Canada • 1-800-565-3673 (FORD)
ford.ca

 @FordServiceCA



FORDOWNER.COM



FORD.CA

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



2015 **FLEX** QUICK REFERENCE GUIDE

FLEX
July 2015
Second Printing
Quick Reference Guide
Litho in U.S.A.



FABJ19G217 AA

COMMONLY USED SYNC® VOICE COMMANDS



SYNC. Say the Word.

Press the voice button  and then say:



Navigation**

- Navigation list of commands
 - Destination address <number, name, city>
 - Destination home
 - Navigation voice <On/Off>
 - Navigation volume <increase/decrease>
 - Repeat instruction
 - Show <map/north-up/heading-up/3-D>
- Travel Link list of commands
 - Traffic
 - Weather
 - Movie listings
 - Fuel prices
 - Sports <headlines/scores/schedule>



Basic Commands

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help



Phone

- Phone list of commands
 - Dial
 - Call <name> on cell/at home/at work
 - Call voicemail
 - Do not disturb <On/Off>
 - Listen to text message (phone-dependent feature)



Climate**

- Climate control list of commands
 - Climate <On/Off>
 - Climate my temperature
 - Climate temperature



Entertainment

- Audio list of commands:
You can also get detailed lists of commands for radio, USB, Bluetooth® audio, SiriusXM and SD card*
- Audio <On/Off>
- Radio
 - FM <87.9-107.9>
 - FM preset <#>
- CD
 - Play track <1-512>
 - Shuffle <On/Off>
- USB
 - Play song <name>
 - Play album <name>
- SiriusXM
 - <Channel name>
 - Preset <#>

*if equipped

**available only with MyFord Touch

Some services may not be available in your area. Refer to your Owner's Manual, visit the website or call the toll-free number.

For U.S. customers: visit SyncMyRide.com or call **1-800-392-3673** (select option 1 or 2 for language, then Option 3).

For Canadian customers: visit SyncMyRide.ca or call **1-800-565-3673** (select option 1 or 2 for language, then Option 3).

TABLE OF CONTENTS



| | |
|---------|--|
| 4 – 5 | INSTRUMENT PANEL |
| 6 – 7 | GETTING STARTED WITH YOUR SYNC SYSTEM |
| 8 – 10 | SYNC WITH MYFORD TOUCH |
| 11 – 13 | COMFORT |
| 14 – 15 | CONVENIENCE |
| 16 – 17 | FUNCTION |
| 18 – 19 | ESSENTIAL INFORMATION |



1 POWER TILT AND TELESCOPE STEERING COLUMN*

Use the controls to adjust the steering wheel to your desired position.

2 CRUISE CONTROL

To set your cruise control speed:

- Press the **ON** control up and release.
- Accelerate to the desired speed.
- Press the **SET** control up and release, then take your foot off the accelerator.

To disable, press the **OFF** control down.

3 LEFT VEHICLE INFORMATION DISPLAY

Provides information about various systems on your vehicle. Use the left, 5-way controls, located on the steering wheel, to choose and confirm settings and messages. Refer to the *Information Displays* chapter of your *Owner's Manual* for more information.

4 SERVICE ENGINE SOON LIGHT

 Illuminates briefly when you switch the ignition on. If it remains on or blinks after you start the engine, the On-Board Diagnostics system (OBD-II) has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

5 RIGHT VEHICLE INFORMATION DISPLAY*

Displays information about Entertainment, Phone and Navigation*. Use the right, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the *MyFord Touch* chapter in your *Owner's Manual* for more information.

6 STEERING WHEEL AUDIO AND MEDIA CONTROLS

Press **VOL+** or **-** to increase or decrease volume levels.

Press **SEEK ▲** or **▼** to access the next or previous radio station preset, CD track or preset satellite radio channel*.

Press  to access voice recognition.

Press  to connect or disconnect a phone call.

7 PUSH BUTTON START*

Allows you to start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine shuts down automatically. Before this happens, a message appears in the information display, allowing you time to override the shutdown feature.

Note: Your intelligent access transmitter* must be inside the vehicle for the ignition to start.

8 HAZARD CONTROL

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.
SYNC. Say the Word.

Before You Get Started

- 1) Visit **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada) to set up your owner account. Register by following the on-screen instructions. After registering, you can see what available services you are eligible for.
- 2) SYNC uses a wireless connection called  **Bluetooth®** to communicate with your phone. Turn *Bluetooth* mode on in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit **SyncMyRide.com** (U.S.) or **SyncMyRide.ca** (Canada), or your phone manufacturer's website.

PAIRING YOUR PHONE WITH SYNC

In order to use many of the features of SYNC, you must first pair and connect your phone with SYNC.

To pair your phone for the first time:

- 1) Make sure that your vehicle is in park (P) and you switch on your ignition and radio.
- 2) Press the phone button . When the display indicates no phone is paired, press **OK**.
- 3) When **Find SYNC** appears in the display, press **OK**.
- 4) Put your phone into *Bluetooth* discovery mode. See your phone's user guide, if necessary.
- 5) When prompted on your phone's display, enter the six-digit PIN provided by SYNC in the radio display.
- 6) The display indicates when the pairing is successful.

Note: The system may prompt you to:

- Set your phone as *primary or favorite* (the primary phone receives messages and voicemail).
- Download your phone book (a requirement to use the full set of voice commands).
- Switch on 911 Assist®.

Tips

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the *SYNC* chapter of your *Owner's Manual*.
- If you experience pairing problems, try performing a clean pairing by deleting your device from SYNC, deleting the SYNC connection from your phone, and then repeating the process.

USING VOICE COMMANDS

Every time you want to give SYNC a voice command, you must first press the voice button . When prompted, speak your voice command. For a list of voice commands, say "What can I say?".

Tips

- Make sure the interior of the vehicle is as quiet as possible.
- After pressing the voice button, wait until after the tone sounds and "Listening" appears in your vehicle's display before saying a command.
- Speak naturally, without long pauses between words.
- At any time, you can interrupt the system while it is speaking by pressing the voice button .

USING YOUR PHONE WITH SYNC

Note: Enter your phone book contacts with both first and last names to increase the ability of SYNC to select the correct contact. Remember to say the contact name exactly as it is listed in your phone book.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, give a voice command.

For example, you could say "Call Jake Smith at home". SYNC repeats the command back to you and dials the number.

Note: You can also make phone calls from outside of your address book by pressing the voice button . When prompted, give the voice command "Dial", then verbally say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

Do Not Disturb Mode

This feature blocks incoming calls and text messages and sends them to your voice mail and saves text messages for later. You still have access to outgoing calls when this feature is active. Say the voice command "Do not disturb on" to enable and "Do not disturb off" to disable.

USING SYNC TO ACCESS DIGITAL MEDIA

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players, and use SYNC to play all of your favorite music.

Note: SYNC indexes your music. The more stored information you have on your USB device, the longer it takes SYNC to index.

Using Voice Commands to Play Music

- 1) Plug your media player into your USB port.
- 2) Press the voice button . When prompted, say "USB", then follow-up saying one of the voice commands.
- 3) The command repeats back to you and the selected item plays.

Why Do You Need a SYNC Owner Account?

A SYNC owner account lets you receive the latest software updates that add new places, directions and information, and if you have questions, you'll get free customer support. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE.



Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way that traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place, and press the home icon  at any time to return to your home screen. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.

*IF EQUIPPED

Before You Get Started

- Pair your phone to SYNC before using MyFord Touch.
- If you have the navigation SD card*, make sure to insert it into the media port or your navigation cannot work.

Pair Your Phone with MyFord Touch

Make sure that your vehicle is in park (P) and you switched on both your ignition and radio.

- 1) Touch **Add Phone** in the upper left corner of the touchscreen.
- 2) Make sure that your cellular phone's **Bluetooth** is set to **On**.
- 3) Select **SYNC** on your cellular phone, and a six-digit PIN appears on your device.
- 4) You may be prompted to enter a PIN on your device. To pair, enter the PIN displayed on the touchscreen.
- 5) Confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.
- 6) The display indicates when the pairing is successful.

PHONE



Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.

Your Phone Connects You with Many Features

- Automatically connects with a 911 Operator in the event of an accident (you must switch this feature on prior to the event).
- Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.

Refer to the *SYNC* chapter of your *Owner's Manual* for complete details.

NAVIGATION*

Get started with your navigation system by pressing the upper-right, green corner. The available voice-activated navigation system includes:

- SiriusXM Traffic™
- Sirius Travel Link™
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Refer to the *MyFord Touch* chapter in your *Owner's Manual* for complete details.


Set a Destination

Set a destination through your touchscreen by using a street address, a city center, a place on the map or a Point of Interest (POI). The easiest way, however, is by voice.

- 1) Press the voice button . When prompted, say "Destination street address".
- 2) The system asks you to say the full address and displays an example on-screen.
- 3) You can then speak the address naturally, such as: "One two three Main Street, Anytown".

When you place your vehicle in park (P), you can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

*IF EQUIPPED

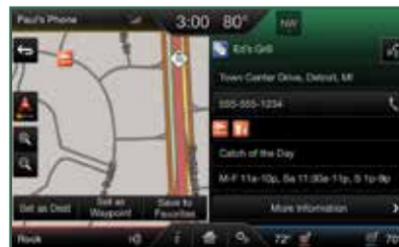

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel efficient route.

Tips

- Save your favorite locations by touching "Save to Favorites".
- Change your map views from Direction Headed, North Up or 3-D.

A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE.

CLIMATE



SYNC with MyFord Touch controls the temperature, airflow direction, fan speed, and activates other climate features like heated and ventilated front seats* for you and your passenger.

To use voice commands to operate climate, say a voice command like "Climate temperature 72 degrees" and MyFord Touch makes that adjustment.

Set Your MyTemp*

- Touch the lower-right, blue Climate corner on the touchscreen.
- Set your exact, desired temperature using the arrows.
- Press and hold the **MyTemp** button until the background color goes solid.

ENTERTAINMENT



No matter how you store your music, SYNC makes it yours to enjoy. Press the lower-left, red corner of the touchscreen. From here, you can easily go between AM and FM, SiriusXM, and other media sources.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- USB
- Bluetooth streaming
- SD card*

Set Your Radio Presets

- Touch the lower-left, red corner on the touchscreen.
- Touch **FM**.
- Touch **Direct Tune**.
- Enter the desired station and touch **Enter**.
- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. The system briefly mutes and then returns the sound once the system saves the station.

For additional support, refer to your *Owner's Manual*, visit the website or call the toll-free number. See the inside front cover of this guide for details.

*IF EQUIPPED

CLIMATE CONTROLLED FRONT SEATS*

To use, press the Climate corner on your touchscreen* or use the hard button controls.

Press the heated or cooled seat icon(s) repeatedly to cycle through the various modes and off.

SECOND-ROW HEATED SEATS*

Press the second-row heated seat controls, located on the rear of the floor console. Press the control repeatedly to cycle through the various modes and off. When you switch this feature on, a light on the control illuminates.

POWER ADJUSTABLE PEDALS*

The control is on the left side of the steering column. Press the arrow to move the pedals closer to you or the arrow to move the pedals further away from you. Adjust the pedals only after you stop your vehicle and place the transmission in park (P).

HEATED STEERING WHEEL*

Using the touchscreen, press the icon to switch the feature on and off.

Note: The wood trim does not heat between the 10 and 2 o'clock positions.

MEMORY FUNCTION*

Use the memory controls located on the driver door to program and then recall memory positions. To program position 1, press and hold until you hear a tone. To set a second position, press and hold until the same tone sounds. You can now use these controls to recall the set positions.

TILTING HEAD RESTRAINTS

You can adjust your vehicle's front-row head restraints. To raise the head restraint, pull up on it. To lower it, press the head restraint down while pressing and holding the guide sleeve adjust or release button. Tilt the head restraint by gently pulling the top of it forward. Once the head restraint is in its forward-most position, tilting it forward once more releases it to the upright position.

Note: Do not attempt to force the head restraint backward after you tilt it. Instead, continue tilting it forward until the head restraint releases to the upright position.

*IF EQUIPPED

MULTI-PANEL VISTA ROOF**

The multi-panel Vista Roof comes with a one-touch, express opening and closing feature. To open the front part of the Vista Roof, press the **SLIDE** control. To close, pull the **SLIDE** control. To stop motion at any time, press the control a second time. To vent the moonroof, press and release the **TILT** control. Pull and hold the **TILT** control to close the moonroof. The sliding shade can be manually opened or closed when the moonroof is closed.

AMBIENT LIGHTING*

When activated, ambient lighting lights select areas of your vehicle with a choice of colors.

To access and make adjustments:

- 1) Press the **Settings** icon > **Vehicle** > **Ambient Lighting**.
- 2) Touch the desired color.
- 3) Use the scroll bar to increase or decrease the intensity.

To switch the feature on or off, press the power button.

FLAT-FOLDING THIRD-ROW SEAT***To Fold and Stow the Third-Row Seat**

Note: Make sure that the area under the seat is free of objects before stowing it.

- 1) Remove all objects from the seat and floor stowage tub area.
- 2) Fold the head restraint by pulling the head restraint release strap.



- 3) From the rear of the vehicle, fold the seatback by pulling and holding the red strap while pushing the seatback forward. Release the strap once the seatback starts rotating forward.



- 4) To fold the seat fully into the floor, release the seat latches by pulling and holding the short black strap and then pulling the headrest release strap. This tumbles the seat all the way into the floor tub.



*IF EQUIPPED

To Unstow the Third-Row Seat

Note: Make sure that the area under the seat is free of objects before unstowing it.

- 1) Unlatch and lift the seat out of the tub in the floor by squeezing and pulling up on the handle. When the seat is in a vertical position, push the seat over, letting it fall onto the latches.
- 2) To return the seatback to the upright position, pull the red strap, then while holding the red strap, pull the long strap located on the seat back to raise the seatback.
- 3) Pull the head restraints up to their normal position.

Note: Push and pull on the seat to make sure it latches to the vehicle floor. An unlatched seat may become dangerous in the event of a sudden stop or crash.

POWERFOLD® THIRD-ROW SEAT*

Note: The powerfold seats work only when the vehicle is in park (P) and the liftgate is open.

The third-row seat features a power one-touch operation that allows you to adjust the seats with the touch of a button. The buttons are behind the third-row seats on the left-side, quarter-trim panel.

To use, press the **RH/BOTH/LH** button to select the right seat, both seats or the left seat that you want to move.

Then select the desired seat position:

- Press the **STOW** button to stow the seat into the tub floor.
- Press the **FOLD** button (the top portion of the button) to fold down the seatback.
- Press the **NORMAL** button to return the seat to the normal seating position.



*IF EQUIPPED

CONVENIENCE

INTEGRATED KEYHEAD TRANSMITTER AND INTELLIGENT ACCESS REMOTE ENTRY ICONS*

- Press  once to lock all doors. Press again within three seconds to confirm that you locked all of the doors.
- Press  once to unlock the driver door. Press again within three seconds to unlock all doors.
- Press  to activate the panic alarm. Press again or switch on the ignition to deactivate.
- Press  twice within three seconds to open the liftgate.
- **Car finder:** Press  twice within three seconds to locate your vehicle. The horn sounds and the lamps flash.

INTELLIGENT ACCESS*

Note: Your intelligent access transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly. Pull a front exterior door handle, and the door unlocks. To lock the doors, press and hold the door handle lock sensor. To unlock and open the liftgate, press the exterior liftgate release button underneath the liftgate handle and near the license plate. The intelligent access transmitter also contains a mechanical key blade that you can use to unlock the driver door, if necessary.

REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press  and then press  twice within three seconds. Once inside, apply the brake while pressing the **START STOP** button. Shift into drive (D) and go. If you have an integrated keyhead transmitter, insert the key into the ignition and switch the ignition on as you normally would before driving. To turn the engine off from outside the vehicle after using your remote start, press  once. You can personalize your climate settings along with other settings within the Information Display. Refer to the *Information Display* chapter in your *Owner's Manual* for details.

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like speed restrictions, limited volume levels and safety belt reminders. Refer to the *MyKey* chapter in your *Owner's Manual* for details.

FLEX



*IF EQUIPPED

CONVENIENCE

RAIN-SENSING WIPERS*



When you switch this feature on, your wipers automatically turn on when moisture is present on the windshield. The wiper speed varies based on the amount of moisture the system detects and on the sensitivity setting. To switch this feature off, move your wiper controls to the off position.

Note: Make sure you switch this feature off before entering a car wash.

110-VOLT POWER OUTLET*

The power point is on the back of the center console. You can use it to power your smaller electrical devices that do not exceed 150 watts. This feature is available to use when you switch on your ignition and the battery voltage is above 11 volts. When the indicator light is on, the power point is working and ready to use.

*IF EQUIPPED

CONSOLE REFRIGERATOR/FREEZER*

Before using, flip the console lid forward and then remove the cover (make sure to reinstall the cover to help maintain the temperature). For the refrigerator, press the **COOL** control. For the freezer, press the **FREEZE** control. Press the selected control again to turn the system off.

Note: We recommend using this feature only when the engine is running.

SECURICODE™ KEYLESS ENTRY KEYPAD

Allows you to lock or unlock the doors, recall memory features* and arm or disarm the anti-theft alarm*. The keypad, located near the driver window, is invisible until you touch it. Then it lights up so you can see and touch the buttons.

To get started, you need your five-digit factory code found on your owner's wallet card, located in the glove box. Entering this code unlocks the driver door.

To lock all the doors, press and hold **7-8** and **9-0** at the same time.

For complete information, refer to the *SecuriCode Keyless Entry Keypad* section in the *Locks* chapter of your *Owner's Manual*.



FUNCTION

ADAPTIVE CRUISE CONTROL*

Allows you to set a 'gap distance' between your vehicle and the vehicle in front of you in the same lane during highway driving. When your cruise control is active, press GAP up or down to select the gap distance. Refer to the *Cruise Control* chapter of your *Owner's Manual* for more information.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.

POWER LIFTGATE*

Your liftgate has an automatic open and close feature. To open remotely, press  twice on your remote within three seconds. Press  twice again to close or reverse the movement. You can also operate the liftgate by pressing the  button on the instrument panel.

ACTIVE PARK ASSIST*

The system detects an available parallel parking space and automatically steers the vehicle into that space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park the vehicle.

- To start active park assist, press the **AUTO |P|** button. Use the direction indicator to indicate which side of the vehicle you want the system to search on. If the direction indicator is not on, the system automatically searches on the vehicle's passenger side.
- To stop the parking procedure, grab the steering wheel or press the **AUTO |P|** button again.

For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

COLLISION WARNING SYSTEM*

This system is designed to alert you of certain collision risks. A radar detects if your vehicle is rapidly approaching another vehicle traveling in the same direction as yours. If it is, a red warning light illuminates on the instrument panel and an audible warning tone sounds.

The brake support system assists the driver in reducing the collision speed by charging the brakes. If the risk of collision further increases after the warning light illuminates, the brake support prepares the brake system for rapid braking.

*IF EQUIPPED

FLEX



FUNCTION

SELECTSHIFT AUTOMATIC® TRANSMISSION*



Use this feature to change gears manually. To use, move the gearshift lever from drive (D) to sport (S). Depending on your vehicle, use the thumb switch on the side of your gearshift lever or paddle shifters on your steering wheel to make shifts.

With the paddle shifters:

- Pull the right paddle (+) to upshift.
- Pull the left paddle (-) to downshift.

With the thumb switch:

- Press (+) to upshift.
- Press (-) to downshift.

REAR VIEW CAMERA*

This system displays what is behind your vehicle when you place the transmission in reverse (R). The system uses fixed guidelines that show your vehicle's actual path when you back up in a straight line. This can be helpful when backing into a parking space or aligning the vehicle with another object directly behind you.

REAR SENSING SYSTEM

This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in reverse (R) and is traveling less than 3 mph (5 km/h). The warning tone increases in frequency as the object gets closer.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, details and limitations.

BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT*

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. Cross traffic alert alerts you if a car is coming toward you as you back out of a parking space. Both features display an amber indicator light in your exterior mirrors. Cross traffic alert also sounds an alarm and displays messages to warn you from which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.



*IF EQUIPPED

ESSENTIAL INFORMATION

EASY FUEL® SYSTEM



With this system, switch the engine off, insert the fuel filler nozzle and begin fueling. Allow approximately 10 seconds after pumping fuel before removing the fuel filler nozzle. This wait time allows residual fuel in the nozzle to drain into the tank. When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment) and pour the fuel into the funnel.

Note: Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage. Properly clean or dispose of the funnel after each use.

FUEL TANK CAPACITY/FUEL INFO

Your vehicle has an 18.6 gallon (70.4L) fuel tank capacity. Use only "Regular" unleaded gasoline with an octane rating of 87 or higher. To provide improved performance, we recommend premium fuel for severe duty usage, such as trailer tow. **Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.**

TIRE PRESSURE MONITORING SYSTEM

Your vehicle displays a low tire pressure warning light (⚠️) in your instrument cluster if one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are beneath the third-row seats under the floor panel. You must unstow the seats to access. We designed the spare tire for emergency use only and strongly advise you to replace it as soon as possible. For complete details on changing your tire, refer to the *Wheels and Tires* chapter of your *Owner's Manual*.

*IF EQUIPPED

FLEX



ESSENTIAL INFORMATION

TRAILER TOW*

Before you tow, refer to your *Owner's Manual* for complete information on weight, details and limitations, as well as safety information and the proper equipment to use while towing.

Note: Do not tow with the mini spare tire installed or exceed the GVWR or the GAWR specified on the Safety Compliance Certification Label.

TRAILER SWAY CONTROL*

This system helps to reduce trailer sway while towing, by applying brake force to individual wheels and, if necessary, reducing engine power. If the trailer does begin to sway, **Trailer Sway Reduce Speed** appears in the information display. Safely pull to the side of the road and check that your equipment is properly secured.

TOWING YOUR FLEX

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* in the *Towing* chapter of your *Owner's Manual*.

REAR WINDOW BUFFETING

When one or both of your rear windows are open, you may hear a wind throb or buffeting noise. To alleviate this, lower a front window until the noise subsides.

SOS POST-CRASH ALERT SYSTEM™

The system flashes the direction indicator lamps and sounds the horn (intermittently) in the event of a serious impact that deploys an airbag equipped on your vehicle.

The horn and lamps turn off when:

- You press the hazard control button.
- You press the panic button (if equipped) on the remote entry transmitter.
- Your vehicle runs out of power.

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

*IF EQUIPPED

