



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

United States

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
fordowner.com

 @FordService

Canada

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
ford.ca

 @FordServiceCA

June 2015
Third Printing
Quick Reference Guide
Taurus
Litho in U.S.A.

FG1J 19G217 AA



2015 Taurus



Quick Reference Guide



COMMONLY USED SYNC® VOICE COMMANDS



BASIC COMMANDS

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Pair my phone



PHONE

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb <On/Off>
- Listen to text messages (phone-dependent feature)



CLIMATE**

- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate temperature



ENTERTAINMENT

- Audio list of commands: You can also get detailed lists of commands for radio, USB, *Bluetooth*® audio, SiriusXM and SD card*
- Radio
 - <On/Off>
 - FM <87.9-107.9>
 - FM preset <#>
- CD
 - Play track <1-512>
 - Shuffle <On/Off>
- USB
 - Play song <name>
 - Play album <name>
- SiriusXM
 - <Channel name>
 - Preset <#>

*if equipped

**available only with MyFord Touch



NAVIGATION**

- Navigation list of commands
- Destination street address <number, name, city>
- Destination home
- Navigation voice <On/Off>
- Navigation voice volume <increase/decrease>
- Repeat instruction
- Show <map/north-up/heading-up/3D>
- Travel Link list of commands
- Traffic
- Weather
- Movie listings
- Fuel prices
- Sports <headlines/scores/schedule>

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



fordowner.com



ford.ca

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

TABLE OF CONTENTS

INSTRUMENT PANEL	4-5
GETTING STARTED WITH YOUR SYNC SYSTEM	6-7
SYNC WITH MYFORD TOUCH	8-10
COMFORT	11-13
CONVENIENCE	14-15
FUNCTION	16-17
ESSENTIAL INFORMATION	18-19

Some features may not be available in your area. Refer to your Owner's Manual, visit the website or call the toll-free number for more information.

For U.S. customers: visit SyncMyRide.com or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit SyncMyRide.ca or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).



INSTRUMENT PANEL

1. CRUISE CONTROL

To set your cruise control speed:

- A. Press the **ON** control up and release.
- B. Accelerate to the desired speed.
- C. Press the **SET** control up and release, then take your foot off the accelerator. After you set your speed, you can press **SET + or -** to adjust cruise speed. To disable, press the **OFF** control down.

ADAPTIVE CRUISE CONTROL*

Allows you to set and maintain a 'gap distance' between you and the vehicle in front of you during highway driving. When your cruise control is active, press the **GAP** control up or down to select the gap distance. Four gap distance settings are available. Refer to the *Cruise Control* chapter in your *Owner's Manual* for more information.

2. POWER TILT AND TELESCOPE STEERING COLUMN* AND ADJUSTABLE PEDALS*

Two separate controls allow you to tilt and telescope the steering column, and adjust the accelerator and brake pedals to the desired position.

3. LEFT VEHICLE INFORMATION DISPLAY*

Use the left-hand, 5-way controls located on your steering wheel to scroll through information such as fuel usage, trip odometer, trip timer and other features. You can also personalize various vehicle settings to match your preferences. Refer to the *Information Displays* chapter in your *Owner's Manual* for more information.

4. SERVICE ENGINE SOON LIGHT

 Lights briefly when you switch on the ignition. If it remains on or is blinking after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion (avoid heavy acceleration and deceleration) and contact your authorized dealer as soon as possible.

5. STEERING WHEEL CONTROLS

Press **VOL + or -** to increase or decrease volume levels. Press **SEEK ▲ or ▼** to access the next or previous radio station preset, CD track or preset satellite radio channel*.

Press  to access SYNC® phone features.

Press  to access voice recognition.

6. RIGHT VEHICLE INFORMATION DISPLAY*

Displays information about Entertainment, Phone and Navigation*. Use the right-hand, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the *MyFord Touch®* chapter in your *Owner's Manual* for more information.

7. PUSH BUTTON START*

Allows you to start your vehicle by pressing the **START STOP** button, while fully pressing down on the brake pedal. Press the button again to switch the engine off.

Note: Your intelligent access transmitter must be inside the vehicle for the engine to start.*

8. HAZARD WARNING CONTROL

GETTING STARTED WITH YOUR SYNC® SYSTEM

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. **SYNC. SAY THE WORD.**

BEFORE YOU GET STARTED

- 1) Set up your owner account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering, you can see what services you are eligible for.
- 2) SYNC uses a wireless connection called  *Bluetooth*® to communicate with your phone. Switch on *Bluetooth* mode in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone to work with SYNC, visit SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada) or your phone manufacturer's website.

Why Do You Need a SYNC Owner Account?

A SYNC owner account gives you the latest software updates that add new places, directions and information; and if you have questions, you'll get free customer support. For additional support, refer to your *Owner's Manual*, visit the website or call the toll-free number. See the inside front cover of this guide for details.

PAIRING YOUR PHONE WITH SYNC

In order to use the many features of SYNC, such as making a phone call or receiving a text, you must first connect or pair your phone with SYNC.

To Pair Your Phone for the First Time

- 1) Make sure that your vehicle is in park (P), then switch on your ignition and radio.
- 2) Press the phone button . When the display indicates no phone is paired, press **OK**.
- 3) When **Find SYNC** appears in the display, press **OK**.
- 4) Put your phone into *Bluetooth* discovery mode. See your device's manual, if necessary.
- 5) When prompted on your phone's display, enter the PIN provided by SYNC into your phone.
- 6) The display indicates when the pairing is successful.

The System May Prompt You to

- Set your phone as *primary* or *favorite* (the primary phone receives messages and voicemail).
- Download your phone book (a requirement to use the full set of voice commands).
- Switch on 911 Assist®.

GETTING STARTED WITH YOUR SYNC® SYSTEM

Tips

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your *Owner's Manual*.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone, and then repeating the *Pairing Your Phone with SYNC* process.

USING YOUR PHONE WITH SYNC

Note: Enter your phone book contacts with both first and last names to increase the ability of SYNC to select the correct contact. Remember to say the contact name exactly as it appears in your phone book.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button  and when prompted, give a voice command. For a list of voice commands, say "*What can I say?*".

For example, you could say "*Call Jake Smith at home*". SYNC repeats the command back to you and dials the number.

Note: You can also make phone calls by giving say voice command "*Dial!*", then verbally say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command "*Do not disturb on*" to enable and "*Do not disturb off*" to disable.

USING SYNC TO ACCESS DIGITAL MEDIA

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices.

Using Voice Commands to Play Music

- 1) Plug your media player into your USB port.
- 2) Press the voice button . When prompted, say "*USB*", then follow-up by saying a voice command. For a list of voice commands, say "*What can I say?*".
- 3) The command repeats back to you and the selected item plays.

Do More

Create your account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada) to get the most out of your SYNC experience. Visit the website or call the toll-free number. See the inside front cover of this guide for more details.

SYNC® WITH MYFORD TOUCH®*

A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE

Phone
Press this corner to access the phone functions.

Navigation
Press this corner to access navigation maps or directions.

Entertainment
Press this corner to access all available music/media sources.

Climate
Press this corner to access all available climate functions, including one-touch access to heated seats (if equipped).

Information
Press this to access SiriusXM Travel Link and Traffic.

Home
Press this to return to the home screen.

Settings
Press this to access personalized system settings.

GETTING STARTED, UNDERSTANDING SYNC WITH MYFORD TOUCH

Use the four corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.

General Tips

- Press the home icon at any time to return to your home screen or use the voice command by saying “Go back”.
- For additional support, refer to your *Owner's Manual*, visit the website or call the toll-free number. See the inside front cover of this guide for details.

Before You Get Started

- Pair your phone to SYNC. To do this, touch **Add Phone** on your touchscreen. When prompted, enter the PIN provided on the display into your phone. The display indicates when pairing is successful. See the *Getting Started with Your SYNC System* section for instructions on how to do this.
- Make sure to insert your navigation SD card* into the media port located in the center console or your navigation features cannot work.

*if equipped

PHONE

Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you do not need to know the phone number. Just say the name of the person you want from your contacts.

Your phone connects you with many other features:

- Automatically connect to a 911 Operator in the event of an accident (you must switch this feature on prior to the event).
- Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.

Refer to the SYNC chapter of your *Owner's Manual* for complete details.

NAVIGATION*

Get started with your navigation system by pressing the upper-right, green corner. The available, voice-activated navigation system includes:

- SiriusXM Traffic
- SiriusXM Travel Link
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Some features require activation. Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.



SYNC® WITH MYFORD TOUCH®*

Set a Destination

Set a destination on your touchscreen by using a street address, a city center, a place on the map or a Point of Interest (POI). The easiest way, however, is by voice.

- 1) Press the voice button . When prompted, say “*Destination street address*”.
- 2) The system asks you to say the full address and displays an example on-screen.
- 3) You can then speak the address naturally, such as: “*One two three Main Street, Anytown*”.

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel-efficient route.

*if equipped

SYNC® WITH MYFORD TOUCH®*

CLIMATE

Control the temperature, airflow direction, fan speed, and activate other climate features, such as climate controlled front seats* for you and your passenger. To use voice commands to operate climate, say a voice command like “Climate temperature 72 degrees” and MyFord Touch makes that adjustment.

Set Your Temperature

- Touch the lower-right, blue Climate corner on the touchscreen.
- Set your exact, desired temperature by using the + or - buttons.



ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM, FM, SiriusXM and other media sources.

Set Your Radio Presets

- Touch the Entertainment corner on the touchscreen.
- Touch **FM**.
- Touch **Direct Tune**.
- Enter the desired station and touch **Enter**.
- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. The sound mutes briefly and returns when the system saves the station.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- USB
- Bluetooth® streaming
- SD card*
- Audio input jack


For additional support, refer to your *Owner's Manual*, visit the website or call the toll-free number. See the inside front cover of this guide for details.



*if equipped

COMFORT

CLIMATE CONTROLLED FRONT SEATS*

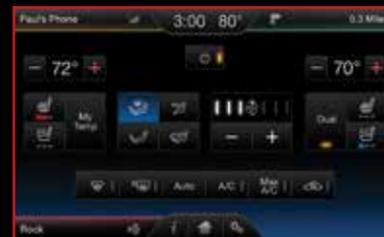

To access, press the Climate corner on the touchscreen. For heated front seats, press repeatedly to cycle through the various heat modes and off.

For cooled front seats, press repeatedly to cycle through the various cooling modes and off. If your vehicle is not equipped with a touchscreen, use the hard button controls (indicated by the same symbols) to cycle through the various heated or cooled modes and off.

Note: The cooled seats function only when the vehicle is running.

HEATED STEERING WHEEL*
Press the Climate corner of the touchscreen. Press to switch on and off.

Note: The wood trim does not heat between the 10 and 2 o'clock positions.

HEATED REAR SEATS*

The controls are on the back of the center console. Press for minimum heat or for maximum heat. The indicator light illuminates when the heated seats are on.

Press the control again to switch the feature off.

MEMORY FUNCTION*

Use the memory controls located on the side seat panel to program and then recall memory positions. Move the features to the desired positions. To program position 1, press and hold until you hear a tone.

To set a second position, press and hold until the same tone sounds.

You can now use these controls to recall the set positions.

TILTING HEAD RESTRAINTS*



Tilt the head restraints to suit your needs. First, adjust the seatback to an upright driving position. Then, tilt the head restraint forward by gently pulling the top of the head restraint.

Once it is in the forward-most position, tilting it forward once more releases it to the original upright position.

Note: Do not attempt to force the head restraint backward after you tilt it. Instead, continue tilting it forward until the head restraint releases to the upright position.

*if equipped

COMFORT

MULTI-CONTOUR ACTIVE MOTION™ FRONT SEAT*



Using the button mounted on the outside of the driver seat, you can adjust the massage and support settings. You can also control the intensity of the massage, increase or decrease the lumbar bolster and cushion support, and adjust the height of the bolster.

Note: The massage system turns off after 20 minutes. The engine must be running or the vehicle must be in accessory mode to use the feature. Allow a few seconds for any selection to respond. The seatback and cushion massage cannot function at the same time.

MOONROOF*

Your moonroof includes an automatic, one-touch, express opening, closing and venting feature.

To open, press and release the **SLIDE** control. Pull and release the **SLIDE** control to close. Vent the moonroof by pressing and releasing the **TILT** control.

To close from a venting position, pull and hold the **TILT** control.



GLOBAL OPENING*

You can use the global opening feature by pressing and holding the unlock button on the transmitter to vent the windows and moonroof*. Release the button once the motion starts. The windows and moonroof continue opening. Press the lock or unlock button on the remote control to stop the motion.

DUAL ZONE AUTOMATIC CLIMATE CONTROL



You can use the automatic setting to set a preferred air temperature inside your vehicle. The system then adjusts temperature, fan speed, air distribution, air conditioning operation and selects outside air or recirculated air to heat or cool the vehicle.

Press the **AUTO** button to set your desired temperature.

You and your front passenger can press independent controls to adjust the air temperature on each side of the vehicle. Press **PASS TEMP** or **DUAL** (depending on your system) and turn the control or press **+** or **-** to increase

or decrease the air temperature on the passenger side of the vehicle.

To return to a single temperature, press **DUAL** or hold down the **AUTO** button for more than two seconds.

Note: Adjusting the settings when your vehicle interior is extremely hot or cold is not necessary. The system automatically adjusts to heat or cool the cabin to your selected temperature as quickly as possible. For the system to function efficiently, the instrument panel and side air vents should be fully open.

If you select **AUTO** during cold outside temperatures, the system directs airflow to the windshield and side window vents. In addition, the fan may run at a slower speed until the engine warms up.

If you select **AUTO** during hot outside temperatures, or when the inside of the vehicle is hot, the system automatically uses recirculated air to maximize interior cooling. When the interior reaches the selected temperature, the system automatically switches to using outside air.

AMBIENT LIGHTING*

When activated, ambient lighting lights footwells and cupholders with a choice of colors. To access and make adjustments:

- 1) Press the Settings icon and then **> Vehicle > Ambient Lighting**.
- 2) Touch the desired color.
- 3) Use the scroll bar to increase or decrease the intensity.

To switch the feature on or off, press the power button.



COMFORT

*if equipped

*if equipped

CONVENIENCE

INTELLIGENT ACCESS*



Note: Your intelligent access transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock a front door, pull a front exterior door handle. Once your vehicle is unlocked, you can press the **exterior trunk release button** near the license plate. To lock the doors, press and hold the door handle lock sensor.



The intelligent access transmitter also contains a mechanical key blade. You can use it to unlock the driver door or lock the glove box (if your vehicle has a locking glove box), if necessary.

See the *Locks* chapter in your *Owner's Manual* for more details.

SECURICODE™ KEYLESS ENTRY KEYPAD*



Allows you to lock or unlock the doors, recall memory features and arm or disarm the anti-theft alarm. The keypad, located near the driver's window, is invisible until touched and then it lights up so you can see and touch the buttons. To get started, you need your 5-digit factory code found on your owner's wallet card (located in the glove box). Entering this code unlocks the driver's door.

To lock all of the doors, press and hold **7-8** and **9-0** at the same time.

To unlock all doors, press and hold **3-4** within five seconds. For complete information, refer to the *SecuriCode Keyless Entry Keypad* section in the *Locks* chapter of your *Owner's Manual*.

REMOTE START*

Remote start allows you to start the engine from outside your vehicle. To start, press  and then press  twice within three seconds. Your vehicle runs for 5, 10, or 15 minutes, depending on the setting. See the *Information Displays* chapter to select the duration of the remote start system.

Once inside, apply the brake while pressing the **START STOP** button.

If you have an integrated keyhead transmitter, insert the key into the ignition and switch on the ignition as you normally would before driving. To switch off the engine from outside the vehicle after using your remote start, press  once.

*if equipped

CONVENIENCE

POWER ADJUSTABLE FOOT PEDALS*



Move the brake and accelerator pedals by using the control   located on the left side of the steering column.

Press and hold the appropriate side of the control to move the pedals.

Press  to move the pedals closer to you.

Press  to move the pedals away from you.

Adjust the pedals only when the vehicle is in park (P).

Note: Never use the controls while your vehicle is moving and with your feet on the accelerator and brake pedals.

*if equipped

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program speed restrictions, limited volume levels, safety belt reminders and more. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

AUTOWIPERS*

If switched on, your wipers automatically turn on when moisture is present on the windshield. The wiper speed varies based on the amount of moisture detected and on the sensitivity setting. To switch off this feature, switch off your wiper controls.

Note: Make sure you switch this feature off before entering a car wash.

AUTOLAMPS

The headlamps switch on and off automatically in low light situations or during inclement weather.

To use, place the lighting control switch into the autolamp position . The headlamps remain on for a period of time after you switch off the ignition.

Use the information display controls to adjust the period of time that the headlamps remain on. See the *Information Displays* chapter in your *Owner's Manual* for details.

Note: Autolamps also includes a windshield wiper rainlamp feature. When you switch the windshield wipers to low- or high-speed wiping during daylight and the headlamp control is in the autolamp position, the exterior lamps turn on after a brief delay and remain on until you switch the wipers off.



*if equipped

FUNCTION

BLIS® (BLIND SPOT INFORMATION SYSTEM) WITH CROSS TRAFFIC ALERT*



BLIS helps determine if a vehicle may be in your blind spot zone. Cross traffic alert warns you if a car is coming from the sides when your vehicle is in reverse (R). Both features display a yellow indicator light in your exterior mirrors. Cross traffic alert also sounds an audible alarm and displays messages to warn you from which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

Note: *Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your Owner's Manual for safety information, more details and limitations.*

LANE KEEPING SYSTEM*

The system detects unintentional drifting toward the outside of the lane and alerts or aids the driver to stay in the lane through the steering system and instrument cluster display. The system automatically detects and tracks the road lane markings using a camera mounted behind the interior mirror.

See the *Driving Aids* section in your *Owner's Manual* for details.

COLLISION WARNING SYSTEM*



This system is designed to alert the driver of certain collision risks. Radar sensors detect if vehicles ahead of you, moving in the same direction, may be a collision risk. The system alerts you with an audible tone and a red warning light

appears above the instrument panel. If the risk of collision increases, the system then increases brake support to help reduce collision speed.

REAR VIEW CAMERA



This system provides a video image of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in reverse (R) and uses lines to alert you of your vehicle's path and proximity to objects behind you.

For non-touchscreen vehicles, the image appears in the 4.2 inch center stack display.

*if equipped

FUNCTION

SELECTSHIFT AUTOMATIC® TRANSMISSION*



The feature gives you the ability to manually change gears if you would like.

To use, move the gearshift lever from drive (D) to sport (S). Then use the paddle shifters on your steering wheel to make shifts quickly.

Pull the right paddle (+) to upshift.

Pull the left paddle (-) to downshift.

If your vehicle is equipped with a +/- thumb switch on your gearshift lever, press (+) to upshift, press (-) to downshift.

*if equipped

ACTIVE PARK ASSIST*

The active park assist system can detect an available parallel parking space and automatically steer the vehicle into that space (hands-free). The system instructs the driver using visual, audible or a combination of both visual and audible instructions with regard to braking, accelerating and shifting gears in order to safely park the vehicle. To initiate active park assist, press the **AUTO [P]** button located on the instrument panel. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

REAR SENSING SYSTEM*



This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in reverse (R) and is traveling less than 3 mph (5 km/h). The warning tone increases in frequency as the object gets closer.

Note: *Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more details and limitations.*

Note: *The driver is always responsible for controlling the vehicle, supervising the system and intervening, if required.*

ESSENTIAL INFORMATION

FUEL TANK CAPACITY AND FUEL INFO

Your vehicle has a 19.0 gallon (71.9L) fuel tank capacity. If your vehicle has a yellow ring around the fuel inlet, you have a flex fuel vehicle. You can use either regular unleaded fuel, E85 ethanol fuel or any mixture of the two.

It is best not to alternate repeatedly between gasoline and E85. If you do switch fuels, it is recommended that you add as much fuel as possible, at least half a tank. Do not add less than 5 gallons (18.9L) when refueling. You should drive the vehicle immediately after refueling for at least 5 miles (8 km) to allow the vehicle to adapt to the change in ethanol concentration. If you exclusively use E85 fuel,

it is recommended to fill the fuel tank with regular unleaded gasoline at each scheduled oil change.

If the fuel inlet includes this symbol , then your vehicle uses only "Regular" unleaded gasoline with an octane rating of 87 or higher. **Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.**

Refer to the *Fuel and Refueling* chapter of your *Owner's Manual* for more details.

EASY FUEL® SYSTEM



When refueling your vehicle:

1. Switch the engine off.
2. Push on the fuel door to open.
3. Slowly insert the fuel filler nozzle and begin fueling.
4. When finished pumping fuel, wait approximately 5-10 seconds before removing the fuel filler nozzle. This allows the residual fuel to drain into the tank.

Note: When using a portable fuel container, use the fuel funnel, located in the spare tire compartment. Slowly insert the fuel funnel into the fuel system and then pour the fuel into the funnel.

Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage. Properly clean or dispose of the funnel after each use.

TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are in your trunk underneath your cargo cover. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Wheels and Tires* chapter of your *Owner's Manual*.

Note: Some Taurus SHO vehicles are equipped with a tire mobility kit and no spare tire. Refer to your Owner's Manual for information on how to use this kit.

TIRE PRESSURE MONITORING SYSTEM

Your vehicle has a tire pressure monitoring system that shows a low tire pressure warning light  in your information display when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

ESSENTIAL INFORMATION

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

REAR WINDOW BUFFETING

When one or both of your rear windows are open, you may hear a pulsing noise. To alleviate this, lower a front window approximately 2 to 5 inches (5 to 8 centimeters).

