

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

LEARN MORE ABOUT YOUR NEW VEHICLE

 
To put QR tags to work for you, use your mobile phone's browser or app store link to download a QR tag reader. Then follow the directions to scan the QR tag and see your vehicle's features come to life.



owner.ford.com (U.S.)



ford.ca (Canada)



GLZ19GZ17AA

2016 QUICK REFERENCE GUIDE EXPLORER



UNITED STATES

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing
impaired: 1-800-232-5952)
owner.ford.com



@FordService

CANADA

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
ford.ca



@FordServiceCA

WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



September 2015
Second Printing
Quick Reference Guide
Explorer
Litho in U.S.A.



COMMONLY USED SYNC[®] VOICE COMMANDS



BASIC COMMANDS

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Pair my phone



PHONE

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb <On/Off>
- Listen to text message (phone-dependent feature)



NAVIGATION**

- Navigation list of commands
- Destination street address <number, name, city>
- Destination home
- Navigation voice <On/Off>
- Navigation voice volume <increase/decrease>
- Repeat instruction
- Show <map/north-up/heading-up/3-D>
- Travel Link* list of commands
- Traffic
- Weather
- Movie listings
- Fuel prices
- Sports <headlines/scores/schedule>



CLIMATE*

- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate temperature



ENTERTAINMENT

- Audio list of commands: You can also get detailed lists of commands for radio, USB, *Bluetooth*[®] audio, SiriusXM and SD card*
- Radio
 - <On/Off>
 - FM <87.9-107.9>
 - FM preset <#>
- CD
 - Play track <1-512>
 - Shuffle <On/Off>
- USB
 - Play song <name>
 - Play album <name>
- SiriusXM
 - <Channel name>
 - Preset <#>

**if equipped*

***available only with MyFord Touch*


TABLE OF CONTENTS

INSTRUMENT PANEL	4-5
SYNC	6-7
SYNC WITH MYFORD TOUCH	8-10
FUNCTION	11-13
COMFORT	14-15
CONVENIENCE	16-17
ESSENTIAL FEATURES	18-19

Some services may not be available in your area. Refer to your **Owner's Manual**, visit the website or call the toll-free number for more information.

For U.S. customers: visit **owner.ford.com** or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit **SyncMyRide.ca** or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).

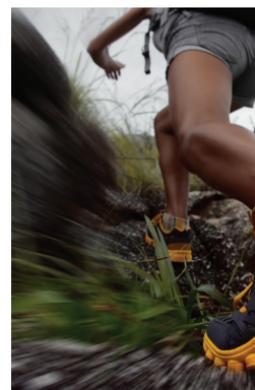



INSTRUMENT PANEL

1. ADAPTIVE CRUISE CONTROL*

With cruise control active, this feature allows you to set and maintain a 'gap distance' between you and the vehicle in front of you in the same lane.

To select a gap distance, press the gap control or . See the *Cruise Control* chapter in your *Owner's Manual* for more details.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your *Owner's Manual* for more details.

*if equipped

2. INFORMATION DISPLAYS*

Provides information about various systems on your vehicle. Use the left-hand, 5-way controls to choose and confirm settings and messages. See the *Information Displays* chapter in your *Owner's Manual* for more information.

Use the right-hand, 5-way controls to choose and confirm Entertainment, Phone and Navigation* settings. See the *MyFord Touch®* chapter in your *Owner's Manual* for more information.

3. SERVICE ENGINE SOON LIGHT

Lights briefly when you switch on the ignition. If the light remains on or is blinking after starting the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact an authorized dealer as soon as possible.

4. AUTOWIPERS*

To switch the feature on, move the wiper controls to intermittent wipe. The autowiper system turns the wipers on only when moisture is present on the windshield. The wiper speed depends on how much moisture the system detects and the sensitivity setting.

- Low sensitivity means the wipers turn on when the system detects a large amount of moisture on the windshield.

*if equipped

- High sensitivity means the wipers turn on when the system detects a small amount of moisture on the windshield.

- To switch this feature off, use your wiper controls. To change this feature to intermittent wipe every time you use your wipers, use the information display.

- To switch intermittent wipe back to autowipers, use the information display.

NOTE: Make sure you switch this feature off before entering a car wash.

5. STEERING WHEEL CONTROLS

AUDIO CONTROL

Press **VOL +** or **-** to increase or decrease volume levels.

Press **|<** or **|>** to access the next or previous radio station preset, CD or MP3 track.

VOICE CONTROL*

Press to access phone mode or answer a call.

Press to access voice recognition.

6. PUSH BUTTON START*

Allows you to start your vehicle by fully pressing the brake pedal and the **START STOP** button. Press the button again to switch the engine off.

7. 180-DEGREE CAMERA*

The system consists of front and rear cameras.

The system:

- Allows you to see what is directly in front or behind your vehicle.
- Provides cross traffic view in front and behind your vehicle.
- Provides visibility during parking maneuvers.

Press the camera button to toggle between different views.

See the *Parking Aids* chapter of your *Owner's Manual* for details.

NOTE: The front view camera switches off if your vehicle speed exceeds 6 mph (10 km/h). You need to switch the system back on by pressing the camera system button once.

8. HAZARD CONTROL

9. CLIMATE CONTROLLED FRONT SEATS*

Press the or repeatedly to cycle through the various modes and off. More lights indicate warmer or cooler settings. See the *Seats* chapter in your *Owner's Manual* for details.

SYNC®

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. Say the Word.

GETTING STARTED WITH YOUR SYNC SYSTEM

Before You Get Started

1. Set up your owner account at owner.ford.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering, you can see what services you may be eligible for.
2. SYNC uses a wireless connection called  *Bluetooth*® to communicate with your phone. Switch on *Bluetooth* mode in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit owner.ford.com (U.S.) or SyncMyRide.ca (Canada), or your phone manufacturer's website.

Pairing Your Cell Phone with SYNC

In order to use the many features of SYNC, such as making a phone call, you must first connect or pair your phone with SYNC.

To Pair Your Cell Phone for the First Time

1. Make sure that your vehicle is in park (P) and you switch your ignition and radio on.
2. Press the phone button . When the display indicates **No Phone Found**, press **OK**.

3. When **Add Bluetooth Device?** appears in the display, press **OK**.
4. When **Find SYNC** appears in the display, press **OK**. When prompted on your phone's display, enter the PIN provided by SYNC into your phone.
5. The display indicates when the pairing is successful.

NOTE: The system may prompt you to —

- Set your phone as the **primary** or **favorite** (the primary phone receives messages and voicemail).
- Download your phone book (required to use the full set of voice commands).
- Switch 911 Assist® on.

Tips

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Cell Phones* in the SYNC chapter of your *Owner's Manual*.
- If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting the SYNC connection from your phone, and then repeating the process.

NOTE: If you have SYNC® with MyFord Touch®, see the pairing instructions on page 8.

Using Your Cell Phone with SYNC

NOTE: You must download your phone book to make phone calls with voice commands by name.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, say any of the following voice commands:

Call <name>	Call <name> at work
Call <name> on cell	Call <name> at home

For example, you could say “Call Jake Smith at home”. SYNC repeats the command and dials the number.

NOTE: You can also make phone calls by pressing the voice button . When prompted, say the voice command “Dial”, then say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command “Do not disturb on” to enable and “Do not disturb off” to disable.

Using SYNC to Access Digital Media

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say “USB”, then follow-up saying one of the following voice commands:

“Play all”	“Play next song”
“Play song <name>”	“Play album <name>”

3. The system repeats the command and then plays your selection.



SYNC® WITH MYFORD TOUCH®*

GET IN TOUCH USING YOUR FOUR-CORNER TOUCHSCREEN

Phone, Navigation*, Climate and Entertainment are the four main features of SYNC with MyFord Touch. Each feature has its own corner represented by its own color.

Phone
Press this corner to access the phone functions.

Navigation
Press this corner to access navigation maps or directions.

Entertainment
Press this corner to access all available music/media sources.

Climate
Press this corner to access all available climate functions, including one-touch access to heated seats (if equipped).

Information
Press this to access SiriusXM Travel Link* and Traffic.

Home
Press this to return to the home screen.

Settings
Press this to access personalized system settings.

A REVOLUTIONARY WAY TO CONNECT WITH YOUR VEHICLE.

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place, and press the home icon at any time to return to your home screen. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.

Pairing Your Cell Phone with MyFord Touch

Pair your phone to SYNC before using MyFord Touch. SYNC uses *Bluetooth* to communicate with your phone. Make sure that your vehicle is in park (P), your ignition is switched on, and your cell phone's *Bluetooth* connection is **ON**. See your device's manual, if necessary.

1. Touch **Add Phone** in the upper left corner of the touchscreen.
2. Select SYNC and a six-digit PIN appears on your device.
3. You may be prompted to enter a PIN on your device. To pair, enter the PIN displayed on the touchscreen.
4. Confirm that the SYNC-provided PIN matches the PIN displayed on your cellular phone. The display indicates when the pairing is successful.



Voice-control your phone for hands-free calling with your phone securely tucked away. With SYNC, you do not need to know the phone number. Just say the name of the person you want from your contacts.

Your cell phone connects you with many other features:

- Automatically connects with a 911 operator in the event of an accident (you must switch this feature on prior to the event).
- Transfer calls seamlessly from SYNC to your phone as you get in or out of your vehicle.

NOTE: Automatically connects with a 911 operator in the event of an accident (you must switch this feature on prior to the event). Refer to the SYNC chapter of your *Owner's Manual* for complete details.

*if equipped



Get started with your navigation system by pressing the upper-right green corner. The available, voice-activated navigation system includes:

- SiriusXM Traffic™
- SiriusXM Travel Link™*
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Some features require activation. Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.

Set a Destination

Set a destination on your touchscreen by using a street address, a city center, a place on the map or a point of interest (POI). The easiest way, however, is by voice.

1. Press the voice button . When prompted, say "Destination street address".
2. The system asks you to say the full address and then displays an example on-screen.
3. You can then speak the address naturally, such as: "One two three Main Street, Anytown".

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel-efficient route.

Tips

- Save your favorite locations by touching **Save to Favorites**.
- Change your map views from Direction Headed, North Up or 3-D.

NOTE: Make sure the navigation SD card* is in the media port or your navigation system will not work.

*if equipped

SYNC® WITH MYFORD TOUCH®* CONTINUED



CLIMATE



SYNC with MyFord Touch controls the temperature, airflow direction, fan speed and other climate features like climate controlled front seats* and rear climate control* for you and your passengers.

To use voice commands to operate climate, say a voice command like “Climate temperature 72 degrees” and MyFord Touch will make that adjustment.

Set Your MyTemp

- Touch the lower-right blue corner on the touchscreen.
- Set your exact, desired temperature using the (+) or (-) buttons.
- Press and hold the **MyTemp** button until the background color goes solid.

Heat Your Steering Wheel*

Press the Climate corner of the touchscreen, and press to switch the feature on and off.

NOTE: Wood-trimmed steering wheels will not heat between the 10 o'clock and 2 o'clock positions.

Access Your Rear Climate Control*

Touch the **Rear** button on the lower-right corner to activate and then adjust temperatures and fan speed, or give second-row passengers access to their independent control.



ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left red corner of the touchscreen. From here, you can easily go between AM/FM, SiriusXM and other media sources.

Set Your Radio Presets

- Touch the lower-left corner on the touchscreen.
- Touch **FM**.
- Touch **Direct Tune**.
- Enter the desired station and touch **Enter**.

- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. The sound mutes briefly and returns when the system saves the station.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- CD
- Smart-charging USB
- **Bluetooth®** streaming

Refer to the *MyFord Touch* chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



*if equipped

FUNCTION

ACTIVE PARK ASSIST WITH ACTIVE PARK OUT ASSIST*



The system detects an available parallel or perpendicular parking space and automatically steers your vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly guides you to park your vehicle.

- Use the direction indicator to select which direction you want to begin searching, either to the left- or right-hand side of your vehicle.
- Then press the button once for parallel parking or twice for perpendicular parking.
- The system displays a message and a corresponding graphic to indicate that it is searching for a parking space.

Park out assist determines the clearance to the front and rear of your vehicle and automatically steers your vehicle out of a parallel parking space

*if equipped

ACTIVE PARK ASSIST WITH ACTIVE PARK OUT ASSIST*

(hands-free) while you control the accelerator, gearshift and brakes.

- While your vehicle is at rest, press the button once.
- The system displays a message requesting a direction. Use the direction indicator to select the left- or right-hand side of your vehicle.

For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.

CONFIGURABLE DAYTIME RUNNING LAMPS*

When you switch the feature on in the information display, daytime running lamps turn on when you are driving, the lighting control is in the position and the headlamps are off. You can switch the configurable daytime running lamps feature ON or OFF using the information display controls.

For more complete information, see the *Lighting* chapter of your *Owner's Manual*.

BLIND SPOT INFORMATION SYSTEM (BLIS®) AND CROSS TRAFFIC ALERT*




The Blind Spot Information System aids you in detecting vehicles that may have entered into your blind spot zone. The detection area is on both sides of your vehicle, extending rearward from the exterior mirrors to approximately 13 feet (4 meters) beyond the bumper. The system alerts you if certain vehicles enter the blind spot zone while driving.

Note: The Blind Spot Information System's alert flashes as an increased warning level when the system is on and you switch on the corresponding direction indicator.

Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R).


Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

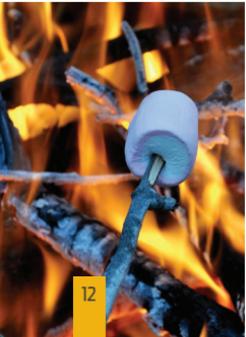

FUNCTION CONTINUED

SECURICODE™ KEYLESS ENTRY SYSTEM*

Invisible until touched, the keypad allows you to lock or unlock the doors. You will need your five-digit factory code located on your owner's wallet card in the glove box. Refer to the *Locks* chapter in your *Owner's Manual* for more information.

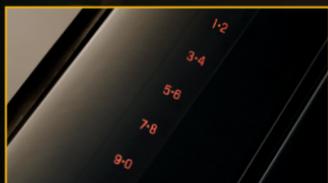

DRIVER ALERT*

The system automatically monitors your driving behavior using various inputs including the front camera sensor. If the system detects that your driving alertness is reduced below a certain threshold, the system alerts you by using a tone and showing a message in the cluster display. Press **OK** on the steering wheel to clear the warning.

FRONT AND REAR PARKING AIDS* AND SIDE SENSING SYSTEM*



These systems warn you of obstacles within a certain range of your vehicle. As you move closer to the detected obstacle, the rate of the warning tone increases in frequency.

The system turns on automatically whenever you switch the ignition on.

The side sensing system uses the front and rear side sensors to detect and map obstacles

that are near to the sides of your vehicle.

The front sensors are active when the transmission is in any position other than park (P).

The rear sensors are active only when the vehicle is in reverse (R).

The side sensors are active when the transmission is in any position other than park (P).

Use the parking aid control to switch the front parking aid system off.

You can switch the rear parking aid system off through the information display menu or from the pop-up message that appears once you shift the transmission into reverse (R).

See the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.



*if equipped

SELECTSHIFT AUTOMATIC® TRANSMISSION*



Gives you the ability to manually change gears. To use, move the gearshift lever from drive (D) to sport (S). Use the control on the gearshift

or the paddles on the steering wheel to change gears manually.

- Press the (+) button to upshift.
- Press the (-) button to downshift.

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like speed restrictions, limited volume levels and seatbelt reminders. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

*if equipped

LANE KEEPING SYSTEM*

The system notifies you to stay in your lane through the steering system and the instrument cluster display when the front camera detects an unintentional drift out of your lane is likely to occur.

The system automatically detects and tracks the road lane markings using a camera mounted behind the interior rear view mirror.

You can set the following modes within the information display:

- Alert:** Provides a steering wheel vibration.
- Aid:** Provides an assistance steering torque input toward the lane center.
- Alert + Aid:** Provides an assistance steering torque input toward the lane center. If the vehicle continues drifting out of the lane, a steering wheel vibration is also provided.



Switch the feature on and off by pressing the control located on the left steering wheel lever.

PRE-COLLISION ASSIST*

The system alerts you of certain collision risks. The system's sensor detects your vehicle's rapid approach to other vehicles traveling in the same direction as your vehicle. When your vehicle rapidly approaches another vehicle, a red warning light flashes and a tone sounds.

If the risk of collision continues to increase, the brake support prepares the brake system for rapid braking. The system does not automatically activate the brakes, but if you press the brake pedal even lightly, the brakes apply full stopping power.

POST-CRASH ALERT SYSTEM™


The system flashes the direction indicators and sounds the horn intermittently in the event of a serious impact that deploys an airbag (front, side, side curtain or Safety Canopy) or the safety belt pretensioners.

The horn and lamps turn off when:

- You press the hazard control or the panic button on your transmitter.
- Your vehicle runs out of power.

COMFORT

TILTING HEAD RESTRAINTS*

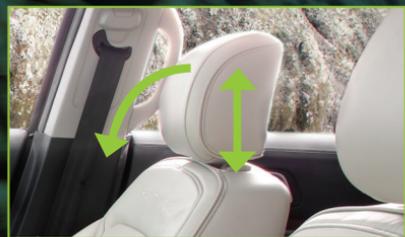

The front head restraints tilt for extra comfort. To tilt the head restraint, do the following:

1. Adjust the seatback to an upright driving or riding position.
2. Pivot the head restraint toward you for the desired position.

After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, un-tilted position.

SECOND-ROW HEATED SEATS*

To operate, press  on the rear of the floor console repeatedly to cycle through the various heat settings and off. More lights indicate warmer settings. See the *Seats* chapter in your *Owner's Manual* for details.

POWER-ADJUSTABLE PEDALS*

Use the  control on the left side of the steering column. Press  to move the pedals further away from you or  to move the pedals closer to you. Adjust the pedals only when the vehicle is in park (P).

POWER TILT AND TELESCOPE STEERING COLUMN*

Use the four-way rocker control to tilt and telescope the steering wheel to your desired position.

MEMORY FUNCTION*

Allows one-touch recall of memory positions for the driver seat, power mirrors, steering column* and power-adjustable pedals*. Use the memory controls on the driver door to program and then recall memory positions. To program position 1, press and hold the 1 button until you hear a tone.

Use this same procedure to set positions 2 and 3 using the respective buttons. Once programmed, you can use these controls to recall the set memory positions.

You can also program your memory seats to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved

position. See the *Seats* chapter in your *Owner's Manual* for details.

SMART-CHARGING USB PORT*

Plug in, charge and listen to your playlists, or just use the smart-charge feature to power up your USB devices.

AMBIENT LIGHTING*



When activated, this feature lights select areas of your vehicle with a choice of colors.

To use:

1. Press the Settings icon, then select Vehicle and Ambient Lighting.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity. Press the power button to switch the feature on and off.

*if equipped

FLAT-FOLDING THIRD-ROW SEAT*

NOTE: Make sure that the area under the seat is free of objects before stowing it.

To fold and stow the third-row seat:



1. Remove all objects from the seat and floor stowage tub area.
2. Fold the head restraint by pressing the head restraint release strap.
3. From the rear of the vehicle, fold the seatback by pulling and holding the red strap while pushing the seatback forward. Release the strap when the seatback starts rotating forward.
4. To fold the seat fully into the floor, release the cushion latches by pulling two straps at the same time: the short black strap (next to the red strap) and the headrest release strap.

*if equipped



To unfold the third-row seat:



NOTE: Make sure that the area is free of objects before unstowing it.

1. Unlatch and lift the seat out of the tub in the floor by squeezing and pulling up on the handle. When the seat is in a vertical position, push the seat over, letting it fall onto the latches.
2. To return the seatback to the upright position, pull the red strap, then while holding the red strap, pull the long strap located on the seat back to raise the seatback.
3. Pull the head restraints up to their normal position.

NOTE: Push and pull on the seat to make sure it latches to the vehicle floor. An unlatched seat may become dangerous in the event of a sudden stop or crash.

POWERFOLD™ THIRD-ROW SEATS*

These seats feature a power, one-touch operation that allows you to fold and stow the seats. See the *Seats* chapter in your *Owner's Manual* for details.

CONVENIENCE

KEYLESS TRANSMITTER ICONS*

- Press  once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press  once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press  to start the panic alarm. Press again or switch on the ignition to stop the alarm.
- Press  twice within three seconds to open the liftgate.
- **Car finder:** Press  twice within three seconds to locate your vehicle. The horn sounds and the direction indicators flash.

INTELLIGENT ACCESS*

NOTE: Your intelligent access transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.



To unlock and open the door, pull the front exterior door handle. The unlock sensor is on the back of the handle. Make sure not to touch the lock sensor area on the front of the handle.

To lock the doors, press and hold the door handle lock sensor for about a second. To avoid unlocking the door inadvertently, make sure you only touch the lock sensor and not other areas of the door handle.

To unlock and open the liftgate, press the exterior release button on top of the liftgate pull-cup handle.

See your *Owner's Manual* for more information.

REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your key. To start, press  and then press  twice within three seconds. Your vehicle will run for 5, 10 or 15 minutes, depending on the setting. See the *Information Displays* chapter in your *Owner's Manual* to select the duration of the remote start system.

Once inside, switch the ignition on as you normally would before driving. To switch the engine off from outside the vehicle after using your remote start, press  once.

REMOTE CONTROL FEEDBACK

An LED on your transmitter provides visual feedback from your remote start or stop commands:

Solid Green: Remote start successful. The light remains on for a short time and then goes out.

Solid Red: Remote stop successful, vehicle off. The light remains on for a short time and then goes out.

Blinking Red: Remote start or stop failed. The light blinks a few times and then stops.

Blinking Green: Waiting for status update. The light blinks a few times and then stops.

110-VOLT AC POWER POINT*



The power point is on the rear of the center console and can be used to power your smaller electrical devices that do not exceed 150 watts. You can use this feature after you switch your ignition on and the battery voltage is above 11 volts. When the indicator light is on, the power point is working and ready to use.

*if equipped

POWER LIFTGATE*

Your liftgate has an automatic open and closing feature. To open remotely, press  twice on your transmitter within three seconds. Press  twice again to close or reverse the movement. To use the power feature from the driver seat, press the  control located on the instrument panel.

You can also program a new liftgate height by opening the liftgate, adjusting the liftgate manually to your desired height and then pressing and holding the liftgate control button. The system sounds a tone once it saves the new liftgate height.



HANDS-FREE LIFTGATE OPERATION*

To Open Your Liftgate Hands-Free While You Are at the Liftgate

1. Make sure you have an intelligent access transmitter* within 3 feet (1 meter) behind the liftgate.
2. Move your foot under and away from the rear bumper using a single kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

DUAL-PANEL MOONROOF AND POWER SUNSCREEN*

Use the one-touch, express-opening and express-closing feature to control various functions. To open, press and release the **SLIDE** control. The sunscreen opens automatically and the moonroof opens to the first position. To open the moonroof fully, press and release the **SLIDE** control again. To close, pull and release the **SLIDE** control. Press and release the **TILT** control to vent the moonroof. Pull and release the **TILT** control to close the moonroof. To open the sunscreen, press and release . Pull and release  to close the sunscreen.

AUTO-FOLDING EXTERIOR MIRRORS*

This feature automatically folds the exterior mirrors toward the glass after you place the transmission into park (P), switch off the vehicle, open and close the driver door and lock the vehicle. The exterior mirrors automatically unfold and return to the driving position after you unlock the vehicle and open and close the driver door. Additionally, you can use the control on the door to fold the mirrors on-demand.

Note: If you use the power-fold control to fold the mirrors on-demand and the auto-fold feature is switched on, you must use the control again to unfold them. See the *Windows and Mirrors* chapter in your *Owner's Manual* for complete details.

*if equipped





ESSENTIAL FEATURES

EASY FUEL® SYSTEM

When fueling your vehicle, put your vehicle in park (P) and switch the ignition off. Open the fuel filler door. Slowly insert the fuel filler nozzle fully into the fuel system. Leave the nozzle fully inserted until you finish pumping. Remove the fuel pump nozzle and fully close the fuel tank filler door.

NOTE: When using a portable fuel container, pour fuel into the fuel funnel (located in the spare wheel storage tray). Do not use aftermarket funnels as they will not work with the Easy Fuel system and may cause damage. Properly clean or dispose of the funnel after each use.

FUEL TANK CAPACITY AND FUEL INFO

Your vehicle has a fuel tank capacity of 18.6 gallons (70L). If your vehicle has a yellow ring around the fuel inlet, you have a flex fuel vehicle and can use either regular unleaded fuel, E85 ethanol fuel or any mixture

of the two. See your *Owner's Manual* for complete flex fuel usage details. Non-flex fuel vehicles use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87. Do not use any other fuel because it could damage or impair the emission control system.

Premium fuel can provide improved performance and is recommended for severe duty usage such as trailer tow.

TRAILER TOW*

Before you tow, refer to your *Owner's Manual* for complete information on weight, details and limitations, as well as safety information and the proper equipment to use while towing.

NOTE: Do not tow with the mini spare tire installed.



TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

TRAILER SWAY CONTROL

This feature helps reduce trailer sway when it begins by applying your vehicle brakes at individual wheels and, if necessary, reducing engine power.

For more complete information, see the *Towing* chapter of your *Owner's Manual*.

*if equipped

TERRAIN MANAGEMENT SYSTEM™*

This system optimizes driveability and comfort as well as maximizing traction. Turn the dial on the center console to select from the following modes:

-  **Grass/Gravel/Snow:** Use this mode where loose or slippery material covers a firm surface.
-  **Sand:** Use this mode on soft, dry sand or deep gravel terrain.
-  **Mud/Ruts:** Use this mode on muddy, rutted, soft or uneven terrain.
-  **Normal:** Use this mode for on-road conditions.



*if equipped

HILL DESCENT CONTROL™*



Hill descent mode allows the driver to set and maintain vehicle speed, while descending steep grades on various surface conditions. To switch the system on, press  located in the center of the terrain management dial. The icon lights up and a tone sounds when the system is on. Use your pedals to increase or decrease your speed as you normally would, until you reach your desired speed. Remove your feet from the pedals to maintain your speed. Press the  control again to switch the system off.

NOTE: This system only operates between the speeds of 3 mph (5 km/h) and 20 mph (32 km/h).

OPEN WINDOW BUFFETING

When one of the windows is open, you may hear a pulsing noise. Lower the opposite window slightly to reduce this noise.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are under the floor panel in the rear of the vehicle. Use the spare tire for emergency use only and replace it as soon as possible.

For complete details on changing your tire, refer to the *Changing a Road Wheel* section in the *Wheels and Tires* chapter of your *Owner's Manual*.

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.