



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

#### United States

Ford Customer Relationship Center

1-800-392-3673 (FORD)

(TDD for the hearing impaired: 1-800-232-5952)

[owner.ford.com](http://owner.ford.com)

 @FordService

#### Canada

Ford Customer Relationship Centre

1-800-565-3673 (FORD)

(TDD for the hearing impaired: 1-888-658-6805)

[ford.ca](http://ford.ca)

 @FordServiceCA



February 2016  
First Printing  
Quick Reference Guide  
**Escape**  
Litho in U.S.A.



2017 **Escape**

Quick Reference Guide



# SYNC® 3

## Commonly Used Voice Commands

Press the voice button  on the steering wheel and then say:



### Basic Commands

- Main menu
- Go back
- Cancel
- List of commands
- Next page
- Previous page
- Help



### Phone

- Phone list of commands
- Pair phone
- Call <name> <on cell/at home/at work>
- Dial <number>
- Listen to message



### Audio

- AM <530-1710>
- FM <87.9-107.9>
- Bluetooth audio
- CD
- USB
- Bluetooth audio
- Sirius <0-233>\*
- <Sirius channel name>\*



### Apps

- List mobile apps
- Find new apps



### Navigation\*

- Navigation list of commands
- Destination <home/previous destination>
- Find <POI/intersection/address>
- Show route
- Where am I?
- SiriusXM Traffic and Travel Link\* list of commands
  - Show <traffic/weather map/5 day forecast/fuel prices>
  - Help



## Table of Contents

Instrument Panel	4 – 5
SYNC	6 – 7
SYNC 3	8 – 10
Convenience	11
Comfort	12 – 13
Liftgate	14 – 15
Function	16 – 17
Essential Information	18 – 23

Some services may not be available in your area. Refer to the SYNC 3 chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information.

**For U.S. customers:** Visit [owner.ford.com](http://owner.ford.com) or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

**For Canadian customers:** Visit [syncmyride.ca](http://syncmyride.ca) or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).



### Learn More About Your New Vehicle

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



[owner.ford.com](http://owner.ford.com) (U.S.)



[ford.ca](http://ford.ca) (Canada)

### WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

## Instrument Panel



### 1 Cruise Control

#### To Set Your Cruise Control Speed

- Press and release **ON**.
- Drive to the desired speed.
- Press and release **SET +**, then take your foot off the accelerator.

After you set a speed, you can press **SET +** or **SET -** to adjust cruise speed. To cancel the set speed, pull the **CAN** (Cancel) control toward you or tap the brake pedal.

### 2 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or is flashing after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

### 3 Information Display

Provides information about various systems on your vehicle. Use the left, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter of your *Owner's Manual* for more information.

### 4 Tilt and Telescope Steering Column

Unlock the steering wheel by pulling the lever down. Adjust the wheel to the desired position (in, out, up and down). Push the lever back up to lock the steering wheel in place.

### 5 Media Controls\*

Press **VOL +** to increase or **VOL -** to decrease volume levels.

Press **|◀▶|** to hear the next or previous saved radio station, CD or MP3 track.

Press and hold to seek up or down the frequency band, or through CD and MP3 tracks.

### 6 Voice Controls\*

Press to access voice recognition.

Press the phone button to answer an incoming call.

Press and hold to exit phone mode or end a call.

### 7 Wiper Controls

Use the rotary control on the lever to adjust the wipe intervals. Pull the lever toward you to wash the windshield.

### 8 Push Button Start\*

Allows you to start your vehicle by pressing the **START STOP** button when fully pressing down on the brake pedal. Press the button again to switch off the engine.

**Note:** Your intelligent access transmitter\* must be inside the vehicle to start the ignition.

### 9 Auto-Start-Stop\*

For more information about Auto-Start-Stop, please see page 18.

\*if equipped

SYNC®

## Getting Started with Your SYNC System

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

**SYNC. Say the Word.**

### Before You Get Started

1. Set up your owner account at: **owner.ford.com** (U.S.) or **syncmyride.ca** (Canada). Follow the on-screen instructions to register, and then see what available services you are eligible for.

2. SYNC uses a wireless connection called **Bluetooth®** to communicate with your phone. Switch on *Bluetooth* mode in your phone's menu options. This allows your phone to find SYNC. If you need more details on setting up your phone with SYNC, visit the SYNC website or your phone manufacturer's website.

### Pairing Your Phone with SYNC

In order to use many of the features of SYNC, first pair your phone with SYNC. Make sure that your vehicle is in park (P) and you switch on your ignition.

#### To Pair Your Phone for the First Time

1. Make sure you switch *Bluetooth* on and that your device is discoverable.
2. Press the  phone button. When the display indicates there is no paired phone, select the option to add.
3. When a message to begin pairing appears, search for SYNC on your phone.

4. If your phone prompts you to enter a PIN, enter the PIN on the touchscreen. Skip the next step.

5. When prompted from SYNC, confirm the PIN provided by SYNC matches the PIN that your phone displays.

6. The display indicates when the pairing is successful.

**Note:** *The system may prompt you to set your phone as primary or favorite (the primary phone receives messages and voicemail), download your phone book (a requirement to use the full set of voice commands) and switch on 911 Assist®.*

#### Tips

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to the SYNC chapter of your *Owner's Manual*.
- If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting your phone pairing from SYNC and then repeating the *Pairing Your Cell Phone with SYNC* process.

### Why Do You Need a SYNC Owner Account?

A SYNC owner account allows you to receive the latest software updates and when you have questions, free customer support. Some services may not be available in your area.

### Create Your Account

Create your account by visiting the website. Call the toll-free number for more information.

**In the United States:**  
**owner.ford.com**  
**1-800-392-3673**

**In Canada:**  
**syncmyride.ca**  
**1-800-565-3673**

### Using Your Cell Phone with SYNC

**Note:** *You must download your phone book to make phone calls with voice commands by name.*

#### Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, say a voice command.

For example, you could say "Call Jake Smith at home". When the system confirms the number, say "Dial" to initiate the call.

**Note:** *You can also make phone calls by pressing the voice button . When prompted, say the voice command "Dial", then verbally say the phone number.*



### Answering Incoming Calls

When you have an incoming call, the name and number of the person calling displays. Press the phone button  to answer an incoming call. You can hang up at any time by pressing the phone button .

### Using SYNC to Access Digital Media

Plug your USB media device, such as a phone or MP3 player, into a USB port and wait for the system to finish indexing your music. When indexing is complete, you can use SYNC to play all of your favorite music.

#### Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say "USB", then follow-up saying a voice command such as "Browse".

SYNC 3®\*



## Using SYNC 3

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

Use the touchscreen to explore and interact with your vehicle.

The touchscreen works the same way traditional controls, knobs and buttons do. The system provides easy interaction with your audio, phone, navigation\*, mobile apps and settings.

Press **Settings** on the feature bar your touchscreen to personalize the many features and settings of your vehicle all in one place.

## Pairing Your Cell Phone with SYNC 3

Pair your phone to SYNC 3 before use. Make sure that your vehicle is in park (P) and you switch on your ignition.

1. Follow the on-screen instructions.
2. A prompt alerts you to search for the system on your phone.
3. Select your vehicle's make and model as it displays on your phone.
4. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
5. The touchscreen indicated when the pairing is successful.
6. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.

## Get in Touch Using Your Touchscreen

Use the feature bar at the bottom of the touchscreen to access the many features of SYNC 3.

### Phone

After pairing your phone, you can access more phone-dependent features:

- Recent call lists.
- Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- Phone settings: Pair another phone, and set ring tones and alerts.
- Text messages.
- Do not disturb: Send all calls to your voicemail, and all ring tones and alerts set to silent mode.

**Note:** Refer to the SYNC 3 chapter in your *Owner's Manual*, [owner.ford.com](http://owner.ford.com) (US) or [syncmyride.ca](http://syncmyride.ca) (Canada) for details.

### Navigation\*

Press the **Navigation\*** icon to set your destination. Select one of two ways to find your destination:

- Destination mode lets you key in a specific address or use a variety of

search methods to locate where you want to go.

- Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).

Refer to the SYNC 3 chapter in your *Owner's Manual* for complete details.

### Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a point of interest (POI).

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.



During your route, you can press the maneuver arrow icon on the map if you want the system to repeat the previous route guidance instructions.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

### Navigation Menu

When you are on your route, you can change your touchscreen view. To change the view, touch **Menu** on the bottom of the screen and then select **Screen View** to choose from any of the following:

- Full Map.
- Highway Exit Info displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint.
- Turn List shows all of the available turns on your current route.
- Traffic List displays SiriusXM Traffic and Travel Link\* information.

## SYNC 3®\* (continued)



### Audio

SYNC 3 gives you a mix of media. Press the **Audio** icon on the touchscreen and select **Sources**. Choose from AM, FM, SiriusXM\*, CD, USB, *Bluetooth* Stereo or Apps.

### Set Your Radio Presets

- Tune to the station and then press and hold one of the memory preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

### Using SYNC 3 to Access Digital Media

Play all of your favorite music from phones, flash drives and other devices.

Plug your device into a USB port, select **Sources** and then choose **USB**. Wait for the system to finish indexing your music to begin listening.

You can even create random playlists by using the **Shuffle** function.



### Settings

Touch the **Settings** icon to customize information within your vehicle.

Adjust the clock, display, some vehicle features and sound settings.



### Apps

#### Voice Control Your Smartphone Apps

The system supports the use of certain apps such as Pandora® or iHeartRadio® (U.S. only), Spotify® and Glympse® through a USB or *Bluetooth*-enabled device.

Each app gives you different onscreen options depending on the app's content. To find new apps, use the voice command, "Find new apps". Refer to the SYNC 3 chapter of your *Owner's Manual* for more information.

#### SYNC Connect

Connect to your vehicle using the app on your smartphone. The embedded modem in your vehicle communicates with the app and allows you to start, lock, unlock and locate your vehicle remotely. The app also connects you with other vehicle resources like a parking locator, roadside assistance, dealer locations and Ford Support.

## Convenience

### Intelligent Access\*

**Note:** Your transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to operate properly.



To unlock and open the door, pull a front exterior door handle. To lock the doors, press and hold the sensor button on the door handle.

To unlock and open the liftgate, press the exterior liftgate release button in the top of the pull cup handle.

The intelligent access transmitter also contains a mechanical key blade that you can use to unlock the driver door, if necessary.

### Adaptive Cruise Control\*

Adjusts your vehicle speed to a set gap between you and the vehicle in front of you in the same lane. You can select from one of four GAP settings. Refer to the *Cruise Control* chapter of your *Owner's Manual* for more information.

**Note:** Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.

### Universal Garage Door Opener\*



Your driver visor has a built-in wireless transmitter that replaces the common hand-held garage door opener.

You can program this system to security systems, entry gates and home or office lighting. Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual* for programming instructions and additional information on how to use this device.

### Remote Entry Icons

- Press once to lock all of the doors. Press it again within a few seconds to confirm all doors are locked.
- Press once to unlock the driver's door. Press again within a few seconds to unlock all of the doors.
- Press to switch on the panic alarm. Press it again to switch it off or switch on the ignition.
- Press twice within a few seconds to open the liftgate.
- **Car finder:** Press twice within a few seconds to locate your vehicle. The horn sounds and the direction indicators flash.

## Comfort



### Ambient Lighting\*

Light your vehicle interior with a choice of several colors with the ambient lighting feature. You can access this feature through the **Settings** menu for SYNC 3.

Tap a color to switch on ambient lighting to set a color. Drag the colors up and down to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

The ambient lighting turns on when you switch on the ignition and the headlamps. Your vehicle interior remains lit until you switch off the ignition and either lock your vehicle or allow the accessory delay timer to expire.

### Rear Reclining Seats

Pull the lever up to recline the seatback to the desired position. Pull the lever up to fold the seatback forward. You may need to fold the outboard head restraints and lower the center head restraint first.



### Heated Front Seats\*

The front heated seat controls are on the center console near the gearshift lever. Adjust the control to your desired heat setting.

### Remote Start\*

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press and then press twice within a few seconds. When inside, apply the brake while pressing the **START STOP** button.

Shift into drive (D) and go. To switch off the engine from outside the vehicle after using your remote start, press once.



### Moonroof and Sunscreen\*


The moonroof and sunscreen have a one-touch open and close feature. To stop them during a one-touch operation, press the control a second time.

Press and release the rear of the control to open the sunscreen. Press and release the front of the control to close the sunscreen.

**Note:** If the moonroof is open, it closes automatically before the sunscreen.

Press and release the rear of the control to open the moonroof. The moonroof stops short of the fully opened position. Press and hold the control again to open the moonroof fully. Press and release the front of the control to close the moonroof.

### Memory Function\*

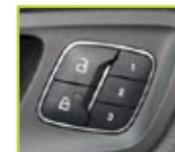

Use this feature to program and recall the positions of the driver seat and power mirrors. The controls are on the driver door. To program position **1**, switch on the ignition, and press and hold the **1** button until you hear a tone.

Use this same procedure to set positions **2** and **3** using the respective buttons. You can now use these controls to recall the set memory positions.

See the *Seats* chapter in your *Owner's Manual* for details.

### Tilting Front-row Head Restraints



Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward again releases it to the upright position.

**Note:** Do not attempt to force the head restraint backward after you tilt it.



# Liftgate

## Manual Liftgate

### To Open the Liftgate

1. Unlock all the vehicle doors.
2. Press the button located inside the liftgate pull cup handle to unlatch the liftgate.
3. Pull on the outside handle to raise the liftgate.

## Power Liftgate\*

**Note:** If the vehicle is running, the liftgate operates only with the transmission in park (P).

### Touch a Button to Open or Close the Liftgate

Press  twice within a few seconds on your remote entry transmitter or the  button on the instrument panel. A tone sounds when the liftgate starts to close.

### You Can Also Open the Liftgate From the Rear of Your Vehicle

1. Unlock your liftgate and then press the button in the top of the liftgate pull cup handle.
2. Allow the power system to open the liftgate after pressing the button.
3. To close the liftgate, press and release the button in the following picture.

When the liftgate begins to close, three tone sounds.

### Setting the Liftgate Open Height

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.

### To Program a New Height

1. Open the liftgate.
2. Stop the liftgate movement by pressing the button on the liftgate when it reaches your desired height. When the liftgate stops moving, you can also move it manually to your desired height.
3. Press and hold the button on the liftgate until you hear a tone indicating that your programming of the liftgate height is successful.



The liftgate then opens to its newly programmed height when you use the power feature to open it.

To change the programmed height, repeat the process.

*\*if equipped*

## Obstacle Detection

When you use the power open or close feature and the liftgate detects a problem, it sounds warning tones and the liftgate stops.

### The Liftgate Cannot Power Open or Close When:

- It detects an object in its opening or closing path.
- The vehicle battery does not have enough charge to power the liftgate.
- The ignition is on and the transmission is not in park (P).
- You are traveling at speeds at or above 1 mph (1 km/h).

**Note:** Entering the vehicle when the liftgate is closing could cause the vehicle to bounce and turn on obstacle detection.

## Hands-Free Liftgate Operation\*

### To Open Your Liftgate Hands-Free While You Are at the Liftgate:

1. Make sure you have an intelligent access transmitter\* behind the liftgate, within 3 feet (1 meter).
2. Move your foot under and away from the rear bumper using a single kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

**Note:** In vehicles that have the towing package and the hands-free power liftgate feature, you must move your foot in a single kicking motion between the trailer hitch and the exhaust system. Do not kick under the hitch.



*\*if equipped*


## Function

### Rear View Camera

This system provides a video image of the area behind the vehicle. The image automatically appears when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

**Note:** If mud, water or debris obstructs the camera's view, clean the lens with a soft, lint-free cloth and non-abrasive cleaner.

### SecuriCode™ Keyless Entry Keypad\*

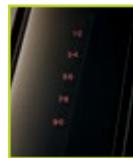

Lock or unlock the doors without using a key. You can operate the keypad with the factory-set, 5-digit entry code. This code is on the owner's wallet card in the glove box.

In addition to the factory-set code, you can also create up to five of your own 5-digit personal entry codes.

To lock all of the doors and the liftgate, press and hold **7•8** and **9•0** at the same time with the driver's door closed. For complete information, refer to the *Locks* chapter in your *Owner's Manual*.

### SelectShift® Automatic Transmission

To enable, move the SelectShift gearshift lever from drive (D) to sport (S). Sport mode selects the optimum gear for best performance. This gear selection is typically lower than that of drive (D) and the shifts are faster.

When the vehicle is in sport mode, it enables a manual gear selection when you use the paddle shifters or the button on the side of the gearshift lever. Press (+) to upshift, press (–) to downshift. Move the gearshift lever to drive (D) to return to automatic control.

### Blind Spot Information System (BLIS®) and Cross Traffic Alert\*



BLIS aids you in detecting vehicles that enter into your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R).

Both systems display an amber indicator light in your exterior mirrors. Cross traffic alert also sounds tones and displays messages to warn you from which direction vehicles are approaching. For more information on Cross Traffic Alert, see page 23.

Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

### MyKey®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

### Wiper Operation



Adjust the wiper lever and its controls to operate the front and rear wipers.

- Single wipe: Pull the lever down.
- Intermittent wipe: Raise the lever upward to position 1 and then rotate the control:
  - upward for short wipe intervals.
  - downward for long wipe intervals.
- Normal wipe: Raise the lever upward to position 2.
- High-speed wipe: Raise the lever to position 3, its highest position.

### Washing the Windshield

To operate the windshield washer, pull the wiper lever toward you.

### Speed Dependent Wipers

When your vehicle speed increases, the interval between wipes decreases.

### Autowipers\*

The wipers operate when the system detects moisture on the windshield, and adjusts the wiper speed automatically. Use the rotary control to adjust the sensitivity of the rain sensor.

- Low sensitivity: The wipers automatically operate when the sensor detects a large amount of moisture on the windshield.
- High sensitivity: The wipers automatically operate when the sensor detects a small amount of moisture on the windshield.

**Note:** Keep the outside of the windshield clean. Dirt, bugs and excessive road debris can prevent it from detecting rain.

To Reduce Smearing, We Recommend the Following:

- Lower the sensitivity of the autowipers.
- Switch to normal or high-speed wipe.
- Switch the autowipers off.

**Note:** Make sure you switch off the windshield wipers before entering a car wash.

### Rear Window Wiper and Washer

To operate the wiper, press the rocker switch on the end of the lever to change between off, intermittent and low speed.

When you switch on the front wipers and move the gearshift lever to reverse (R), the rear intermittent wiper automatically turns on.

To use the rear washer, push the wiper lever away from you. When you release the lever, the rear wiper operates for a short time.



## Essential Information

### Fuel Tank Capacity and Fuel Info

Your vehicle has a 16.2 gallon (61.3 L) fuel tank capacity. We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Do not use fuel ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

### Easy Fuel® System

**When fueling your vehicle:**

1. Put your vehicle in park (P) and switch the ignition off.
2. Open the fuel filler door and slowly insert the fuel filler nozzle fully into the fuel system. Leave the nozzle fully inserted until you are done pumping.
3. Wait at least 10 seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.

When using a portable fuel container, slowly insert the fuel funnel (located in the spare wheel storage tray) and pour the fuel into the funnel.

**Note:** Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage. Properly clean or dispose of the funnel after each use.

### Auto-Start-Stop\*

The system helps reduce fuel consumption by automatically shutting off and restarting the engine when stopped. If conditions are correct, Auto-Start-Stop shuts off the engine when the vehicle is stopped and automatically restarts the engine when you release the brake or the press the accelerator pedal. Press the control to override this feature. It resets at each engine start.

Refer to the *Unique Driving Characteristics* chapter of your *Owner's Manual*.

### Towing Your Escape

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.



### Location of Spare Tire and Tools

Your spare tire and tools are beneath the carpeted load floor in the rear of your vehicle. The spare tire is for emergency use only. Replace it as soon as possible. For complete details on changing your tire, refer to the *Wheels and Tires* chapter of your *Owner's Manual*.

### Tire Pressure Monitoring System

Your vehicle shows a low tire pressure warning light  in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

### Rear Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

### Front and Rear Parking Aids\*

These systems sound audible warning tones if there is an obstacle near the vehicle's front or rear bumpers. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency.

The front sensors automatically turn on when the vehicle transmission is in any position other than park (P) or neutral (N) and the vehicle speed is below 6 mph (10 km/h). The system can detect objects up to 28 in (70 cm) away from the front of the vehicle and decreases at the outer corners.



The rear sensors are active only when the vehicle is in reverse (R), and can detect objects up to 6 feet (1.8 meters) away, with decreased coverage at the outer corners of the bumper.

See the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.

**Note:** *Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more details and limitations.*

## Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

### Pre-Collision Assist Warning System\*

This system alerts you of certain collision risks. The system's sensor detects your vehicle's rapid approach to other vehicles traveling in the same direction as your vehicle. When your vehicle rapidly approaches another vehicle, a red warning light flashes and a tone sounds.

The brake support system assists you in reducing any collision speed by pre-charging the brakes. If the risk of collision continues to increase after the audiovisual warning, the brake support prepares the brake system for rapid braking. The system does not automatically activate the brakes, but if you press the brake pedal lightly, the brakes apply full stopping power. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more details.

You can adjust the warning system's sensitivity through your information display. Refer to the *Information Displays* chapter in your *Owner's Manual* for more details.



### Lane Keeping System\*

Notifies you to stay in your lane through the steering system and the instrument cluster display when the front camera detects an unintentional drift out of your lane is likely to occur. The system automatically detects and tracks the road lane markings using a camera mounted behind the interior rear view mirror.

Press the button on the left steering wheel lever to switch the system on or off.

**Note:** *The system stores the on or off setting until you manually change it, unless the system detects a MyKey. Set your preferred system settings by Mode and Intensity through your information display screen. Refer to the Information Displays chapter in your Owner's Manual for more details on how to change your settings. Refer to the Driving Aids chapter in your Owner's Manual for more information on the Lane Keeping System.*

### 110-Volt Power Outlet\*

The power outlet is on the rear of the center console. You can use it to power electrical devices that require up to 150 watts.





### Active Park Assist and Park Out Assist\*

Detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) when you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle or enter traffic. The button is on the center stack.

To use active park assist for parallel parking, press the button once.

To use the system for perpendicular parking, press the button twice.

Use the park out assist feature when your vehicle is at rest in a parallel parking space. Press the button, and then follow the instructions on the display. Use your direction indicator to signal which side of your vehicle you want to exit the parking space. After the system directs your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot.

To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

### Side Sensing System\*

The side sensing system uses the front and rear side sensors to detect and map obstacles that are near to the sides of your vehicle. The side sensors are active when the transmission is in any position other than park (P). As the object comes closer to the side of your vehicle, the rate of the audible warning increases.

**Note:** *Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more details and limitations.*

### Cross Traffic Alert\*

This system is designed to warn you of vehicles approaching from the sides when the transmission is in reverse (R). It detects vehicles that approach with speeds of up to 37 mph (60 km/h). The system illuminates an amber alert indicator in the outside mirror on the side of your vehicle that the approaching vehicle is coming from. In addition, cross traffic alert also sounds an audible alert and a message appears in the information display indicating a vehicle is coming from the right or left.

**Note:** *Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more details and limitations.*

