



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



owner.ford.com



ford.ca



HLJ1J9G217 AA

UNITED STATES

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
owner.ford.com



@FordService

CANADA

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
1-888-658-6805 (TDD for the
Hearing Impaired)
ford.ca



@FordServiceCA

Expedition
April 2016
First Printing
Quick Reference Guide
Litho in U.S.A.



2017

QUICK REFERENCE GUIDE

EXPEDITION



COMMONLY USED SYNC® 3* VOICE COMMANDS



BASIC COMMANDS

- Main menu
- Go back
- Cancel
- List of commands
- Next page
- Previous page
- Help



PHONE

- Phone list of commands
- Pair phone
- Call <name>
- Call <name> <on cell/at home/at work>
- Dial <number>
- Listen to message



NAVIGATION*

- Navigation list of commands
- Destination
<home/previous destination>
- Find <an address/POI/intersection>
- Show route
- Where am I?
- SiriusXM Traffic and Travel Link* list of commands
 - Show <traffic/weather map/5 day forecast/fuel prices>
 - Help



APPS

- List mobile apps
- Find new apps



CLIMATE

- Climate list of commands
- Climate set temperature
<# degrees>



AUDIO

- AM <530-1710>
- FM <87.9-107.9>
- CD
- USB
- Bluetooth audio
- Sirius <0-233>
- <Sirius channel name>

Some services may not be available in your area. For more complete information on SYNC, refer the SYNC 3 chapter of your Owner's Manual, visit the website or call the toll-free number.

For U.S. customers, visit owner.ford.com or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

For Canadian customers, visit syncmyride.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).



TABLE OF CONTENTS

INSTRUMENT PANEL (4 – 9)

SYNC (10 – 11)

SYNC 3 (12 – 14)

COMFORT (15 – 17)

CONVENIENCE (18)

ESSENTIAL FEATURES (19)



ROADSIDE ASSISTANCE

Your new Ford Expedition comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.



INSTRUMENT PANEL




1| WINDSHIELD WIPERS AND WASHERS

Rotate the end of the control away from you to increase the wiper speed and toward you to decrease the wiper speed.






To use the washer feature, push the end of the lever.

To operate the rear window wiper, rotate the control.

 
For a rear wash cycle, rotate and hold the rear wiper control  to either the top or bottom position.

Note: For optimal wiper performance, clean your blades and glass regularly.



2| LIGHTING CONTROL

-  Switches off the headlamps.
-  Switches the parking lamps on.
-  Switches the headlamps on.
-  Autolamps: Automatically turns the exterior lamps on in low light situations.
-  Pull the control toward you to switch the fog lamps on.

3| INSTRUMENT LIGHTING DIMMER

 Press and hold the top of the control to switch on the interior courtesy lamps. Press and hold the bottom of the control to switch off the interior lamps.

4| POWER-ADJUSTABLE FOOT PEDALS*

Lets you move your brake and accelerator pedals. Press the  arrow to move the pedals closer to you or the  arrow to move the pedals away from you. Adjust the pedals only after you stop the vehicle and place the transmission in park (P).

5| TILT AND TELESCOPING STEERING COLUMN*

Lets you adjust the position of the steering column. Use the 4-way control on the side of the steering column. The column automatically moves to the full up position when you switch

the ignition off. It returns to the previous position when you switch the ignition on. You can switch this feature off in the information display. For more details about how your information display operates, please see your *Owner's Manual*.

6| LEFT VEHICLE INFORMATION DISPLAY

Provides important vehicle information through a constant monitoring of vehicle systems. The system notifies you of potential vehicle problems by displaying system warnings followed by a long indicator tone.

Use the left-hand, 5-way controls on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu.

For more details about your information display functions, refer to your *Owner's Manual*.

7| CRUISE CONTROL


To set the speed

- A. Press and release **ON**.
- B. Accelerate to the speed you desire.
- C. Press **SET+** and take your foot off the accelerator.

To set a higher or lower speed, either press and hold or press **SET+** or **SET-** repeatedly until you reach the speed you desire. To cancel a set speed, tap the brake pedal. This does not erase your set speed.

To return to a previously set speed, press **RSM**. To switch off, press **OFF** or switch the ignition off.

8| SERVICE ENGINE SOON LIGHT

 Lights briefly when you switch the ignition on. If it remains on or blinks after you start the engine, the On-Board Diagnostics (OBD-II) system detects a problem. Drive in a moderate fashion and contact an authorized dealer as soon as possible.



INSTRUMENT PANEL *(continued)*

9| RIGHT VEHICLE INFORMATION DISPLAY*

Provides various information about important vehicle systems. Use the right-hand, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. For more information, see the SYNC 3 chapter of your *Owner's Manual*.

10| STEERING WHEEL CONTROLS

Press VOL+ or VOL– to increase or decrease your volume level. Press ◀◀SEEK▶▶ to access the previous or next radio station, CD track or preset satellite radio channel.

Press OK repeatedly to access all possible media sources.

Press 🗣️ to access voice recognition*.

Press 📶 to access SYNC® phone features.

Note: Some of your steering wheel media controls may vary. See the *Steering Wheel* chapter in your *Owner's Manual* for more details.

11| PUSH BUTTON START*

Allows you to start your vehicle by pressing the START STOP button while fully pressing down on the brake pedal. If you leave your vehicle idling for an extended period of time, it automatically shuts down. Before the engine shuts down, a message appears in the information display,

allowing you to override the shutdown feature. Press the button again to switch the engine off.

Note: Your intelligent access transmitter must be inside the vehicle for the ignition to start. Keyless warning alert sounds the horn twice when you exit the vehicle with the intelligent access transmitter and the keyless vehicle is on.

12| CONTROLS*

A. POWER LIFTGATE CONTROL* lets you open or close your power liftgate from inside your vehicle. To use, press the control.

B. HILL START ASSIST keeps your vehicle stationary long enough to move your foot from the brake pedal to the accelerator pedal when your vehicle is on a slope. Press the control to switch this feature off. It turns back on automatically after you re-start your vehicle.

C. STABILITY CONTROL WITH RSC® (ROLL STABILITY CONTROL™) automatically activates when you start your engine and helps you keep control of your vehicle when on a slippery surface. The electronic stability control portion of the system helps avoid skids and lateral slides, while the roll stability control helps avoid a vehicle rollover. The traction control system helps avoid drive wheel spin and loss of traction.

*if equipped

12| CONTROLS* (CONTINUED)

TRAILER SWAY CONTROL* applies your vehicle brakes at individual wheels and, if necessary, reduces engine power. If the trailer begins to sway, the stability control light flashes and the message TRAILER SWAY REDUCE SPEED appears in the information display. The first thing to do is slow down your vehicle, then pull safely to the side of the road and check for proper tongue load and trailer load distribution. For more information, please refer to the *Towing* chapter in your *Owner's Manual*.

13| INTEGRATED TRAILER BRAKE CONTROLLER*

Assists in smooth and effective trailer braking by powering the trailer's electric or electric over hydraulic brakes with a proportional output based on the towing vehicle's brake pressure.

Use the GAIN adjustment buttons to increase or decrease the braking feature's power output to the trailer.

Adjust the GAIN by pressing the GAIN + or GAIN – buttons to increase or decrease the setting to the starting point you desire.

A GAIN setting of 6.0 is a good starting point for heavier loads.

To test the adjusted GAIN setting:

- In a traffic-free environment, tow the trailer on a dry, level surface at a speed of 20-25 mph (30-40 km/h) and squeeze the manual control lever completely.
- If the trailer wheels lock up (the tires squeal), reduce the GAIN setting. If the trailer wheels turn freely, increase the GAIN setting.

*if equipped

- The proper GAIN setting is at the point just below trailer wheel lock-up. If towing a heavier trailer, trailer wheel lockup may not be attainable even with the maximum GAIN setting of 10.

For more information, please refer to the *Towing* chapter in your *Owner's Manual*.

14| FOUR-WHEEL DRIVE (4WD)*

Operates in four modes for a variety of road conditions:

2H (4X2) mode delivers power to the rear wheels only, that is appropriate for normal, on-road driving on dry pavement and provides the best fuel economy.

4A (4X4 AUTO) mode provides electronic control four-wheel drive with power delivered to all four wheels, as required, for increased traction. This mode is appropriate for all on-road driving conditions, such as dry road surfaces, wet pavement, snow and gravel.

4H (4X4) mode provides electronically locked four-wheel drive power to all four wheels. We do not recommend this mode for use on dry pavement and this is only intended for severe winter or off-road conditions, such as deep snow, ice or shallow sand.

4L (4X4) mode provides electronically locked four-wheel drive when you need extra power at reduced speeds. Use this mode for off-road, low-speed operation, such as climbing steep grades, pulling a boat out of the water and more. Refer to the *Four-Wheel Drive (4WD)* chapter in your *Owner's Manual*.



INSTRUMENT PANEL *(continued)*





15| HAZARD CONTROL

16| AUDIO SYSTEM CONTROLS

- A. EJECT:** Press to eject a CD.
- B. CD SLOT:** Insert a CD.
- C. VOL and SYSTEM POWER:** Press to switch the system on and off. Rotate the control to adjust the volume.
- D. PRESETS:** Store your favorite radio stations. To store a radio station, tune to the station, then press and hold a preset button until sound returns.
- E. SEEK:** Press **◀ SEEK ▶** to access the previous or next radio station, CD track or preset satellite radio channel.
- F. MEDIA:** Press to access different audio modes, such as AM, FM and USB Input.
- G. TUNE:** Turn the control to search through the radio frequency band manually.

17| CLIMATE CONTROLLED SEATS*

Press the heated  or cooled  button repeatedly to cycle through the settings and off. The left bank of buttons are for the driver, while the right bank of buttons are for the front passenger. More indicator lights mean higher settings.

*if equipped

18| CLIMATE CONTROLS

- A. FRONT FAN SPEED CONTROL:** Rotate to increase or decrease air flow.
- B. DEFROST:** Press to distribute air to the windshield vents.
- C. A/C:** Press to switch the air conditioning system on and off.
- D. MAX A/C:** Press for maximum cooling.
- E. HEATED REAR WINDOW:** Press to switch on the rear defrost.
- F. AIR DISTRIBUTION CONTROL:** Press to switch airflow from the windshield, instrument panel, or footwell vents on or off. The system can distribute air through any combination of these vents.
- G. RECIRCULATED AIR CONTROL:** Press to switch between outside air and recirculated air.
- H. FAN SPEED -:** Press to decrease the volume of air circulated in the vehicle.
- I. AUTO:** Press to switch on the automatic temperature control.
- J. FAN SPEED +:** Press to increase the volume of air circulated in the vehicle.
- K. DUAL:** Turn to increase or decrease the air temperature on the passenger side of the vehicle.



SYNC®*

Getting Started with Your SYNC System

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. **SYNC. Say the Word.**

BEFORE YOU GET STARTED


1. Set up your owner account at **owner.ford.com** (U.S.) or **syncmyride.ca** (Canada). Register by following the on-screen instructions. After registering, you can receive the latest system software updates and choose how you want to receive them: via your personal computer or device, or through the SYNC 3 system to deliver automatic updates.
2. SYNC uses a wireless connection called **Bluetooth®** to communicate with your phone. Switch on **Bluetooth** mode in your phone's menu options. This lets your phone find SYNC.
3. You can also enjoy free customer service. For more details on setting up your account, visit **owner.ford.com** (U.S.) or **syncmyride.ca** (Canada).

PAIRING YOUR PHONE WITH SYNC

Note: If you have SYNC 3*, see the pairing instructions on page 12.

In order to use the many features of SYNC, such as making a phone call, you must first connect or pair your phone with SYNC.

TO PAIR YOUR PHONE FOR THE FIRST TIME

1. Make sure that your vehicle is in park (P), then switch on your ignition and radio.
2. Press the phone button . When the display indicates *No Phone Found*, press **OK**.
3. When *Add Bluetooth Device?* appears in the display, press **OK**.
4. When *Find SYNC* appears in the display, press **OK**. When prompted on your phone's display, enter the PIN provided by SYNC into your phone.
5. The display indicates when the pairing is successful.

Note: The system may prompt you to —

- Set your phone as the primary or favorite (the primary phone receives messages and voicemail).
- Download your phone book (required to use the full set of voice commands).
- Switch on 911 Assist®.

TIPS

- Make sure you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your Owner's Manual.

 
*if equipped



USING YOUR PHONE WITH SYNC

 
Note: You must download your phone book to make phone calls with voice commands by name.

MAKING A PHONE CALL

 

Use SYNC to make a phone call to anyone in your phone book by pressing the  button and when prompted, say any of the following voice commands:

Call <name>	Call <name> at work
Call <name> on cell	Call <name> at home

For example, you could say "Call Jake Smith at home". SYNC repeats the command back to you and dials the number.

Note: You can also make phone calls by pressing the  button. When prompted, say the voice command "Dial", then verbally say the phone number.

 
ANSWERING INCOMING CALLS

Whenever you have an incoming call, the name and number of the person calling appears in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

USING SYNC TO ACCESS DIGITAL MEDIA

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music. Wait for the system to finish indexing your music to begin listening.

Using voice commands to play music

1. Plug your media player into your USB port.
2. Press the  button. When prompted, say "USB", then follow-up saying one of the following voice commands:

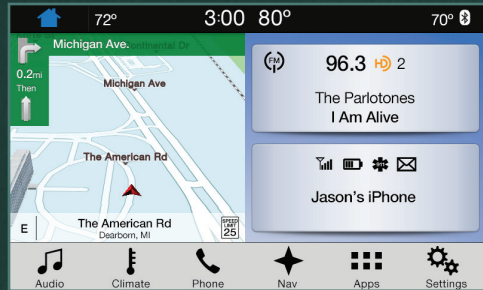 
"Play all"	"Play next <song title>"
"Play <song title>"	"Play <album title>"

3. The system repeats your command and then plays your selection.



SYNC® 3*

Use the touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. The system provides easy interaction with your audio, climate, phone, navigation*, mobile apps and settings. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place.



A Revolutionary Way to Connect with Your Vehicle.

PAIRING YOUR PHONE WITH SYNC 3

Pair your phone to SYNC 3 before use. Make sure that your vehicle is in park (P) and you switch on your ignition.

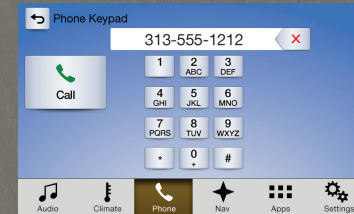 
1. Follow the on-screen instructions.
2. A prompt alerts you to search for the system on your phone.
3. Select your vehicle's make and model as it displays on your phone.
4. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
5. The touchscreen indicated when the pairing is successful.
6. *Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.*

GET IN TOUCH USING YOUR TOUCHSCREEN

Use the feature bar at the bottom of the touchscreen to access the many features of SYNC 3.



PHONE



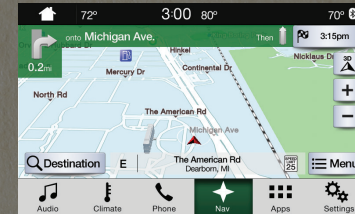 
After pairing your phone, you can access more phone-dependent features:

- Recent call lists.
- Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- Phone settings: Pair another phone, and set ring tones and alerts.
- Text messages.
- Do not disturb: Send all calls to your voice mail, and set all ring tones and alerts to silent mode.

Note: Use the voice commands to make calls. Say "Call James at home" or "Dial 555-1212". You can use the touchscreen to place calls as well. Refer to the SYNC 3 chapter in your Owner's Manual for complete details.



NAVIGATION*



Press the *Navigation** icon to set your destination. Select one of two ways to find your destination:

- Destination mode lets you key in a specific address or use a variety of search methods to locate where you want to go.
- Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).

Refer to the SYNC 3 chapter in your Owner's Manual for complete details.

SET A DESTINATION

Press *Destination* on your touchscreen and then press *Search*. Enter a street address, intersection, city or a point of interest (POI).

After you choose your destination, press *Start*. The system uses a variety of screens and visible prompts to guide you to your destination. After you choose your destination, press *Start*.

During your route, you can press the maneuver arrow icon on the map if you want the system to repeat the previous route guidance instructions.

The navigation map shows your estimated time of arrival, remaining travel time and the distance to your destination.

NAVIGATION MENU

When you are on your route, you can change your touchscreen view. Touch *Menu* and then select *Screen View* to select from these options:

- **Full Map.**
- **Highway Exit Info** displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- **Turn List** shows all of the available turns on your current route.
- **Traffic List** displays SiriusXM Traffic and Travel Link* information.

SYNC® 3* (continued)



CLIMATE



Access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger.

SET YOUR TEMPERATURE

- Touch the *Climate* icon on the touchscreen.
- Use voice commands to change your settings, like “Climate set temperature to 72 degrees” and SYNC 3 makes that adjustment.
- You can also use the ▲ or ▼ buttons on the touchscreen.



AUDIO



SYNC 3 gives you a mix of media. Press the *Audio* icon on the touchscreen and select *Sources*. Choose from AM, FM, SiriusXM*, CD, USB, *Bluetooth* Stereo or Apps.

SET YOUR RADIO PRESETS

- Tune to the station and then press and hold one of the memory preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

USE SYNC 3 TO ACCESS DIGITAL MEDIA

Use SYNC 3 to play all of your favorite music from phones, flash drives and other devices.

Plug your device into a USB port, select *Sources* and then choose *USB*. Wait for the system to finish indexing your music to begin listening. You can even create random playlists by using the *Shuffle* function.



APPS

VOICE CONTROL YOUR SMARTPHONE APPS

The system supports the use of certain types of apps such as Pandora® or iHeartRadio® through a USB or *Bluetooth*-enabled devices. Each app gives you different on-screen options depending on the app's content. To find new apps, use the voice command “Find new apps”.

For more information, refer to the SYNC 3 chapter in your *Owner's Manual* for details.

For support, visit the website or call the toll-free number. See the inside back cover of this guide for details.



COMFORT

SEATING-TO-CARGO VERSATILITY

Note: Before folding the second- or third-row seats, make sure to fold down the head restraints by pulling on the strap, and remove all items from the floor and seats.

TO FOLD THE FLAT-FOLDING SECOND-ROW SEATS TO THE LOAD FLOOR

Pull up on the handle located behind the seatback while pushing the seatback forward and down into the seat cushion.

Note: You may need to exert a moderate force to move the seat forward and down.

TO RETURN THE SEATS TO AN UPRIGHT SEATING POSITION

Lift and pull the seat rearward until the latch engages fully.

E-Z ENTRY INTO THE THIRD-ROW SEATS

The E-Z entry seat allows for easier entry and exit to and from the third-row seat.

To enter the third-row seating area

1. Fold the head restraint forward.
2. Pull up on lever 1.
3. Fold down the second-row seat and release the lever.
4. Pull the lever up again until the seat releases from the floor.
5. Push the seat upward and fold it away from the third row.



Pull Strap



Handle



Lever 1



Position 2



Position 3

To return the seat to an upright seating position

1. Push the seat down and latch it to the floor.
2. Bring the seatback to an upright position. It should lock into position.
3. Lift up on the head restraint until it locks into its original position.



COMFORT *(continued)*

POWERFOLD® THIRD-ROW SEAT*

The 60/40 split-folding bench seat uses a power-activated seatback release. Fold one side or both down for more flexibility. The controls are on the right-hand rear quarter trim panel, accessible from the liftgate area.

Note: Make sure you unfasten all of the seatbelts and fold the head restraints down first.

To lower

1. Press the corresponding control(s) or use the middle control to fold both seats down.
2. To return the seatback(s) to the original position(s), press the corresponding control(s) again.

See the *Seats* chapter in your *Owner's Manual* for more information.

Note: The power-folding seats operate for 10 minutes after you switch the ignition off. The transmission must be in park (P) and the liftgate or liftgate glass must be open.

LEATHER CLEANING

For cleaning and removing spots and stains, use Motorcraft® Premium Leather and Vinyl Cleaner** or a commercially available leather cleaning product for automotive interiors.

Note: Test any cleaning product on an inconspicuous area first.

Do not use the following products as these may damage the leather:

- Oil and petroleum or silicone-based leather conditioners.
- Household cleaners.
- Alcohol solutions.
- Solvents or cleaners intended specifically for rubber, vinyl and plastics.

For complete information, see the *Vehicle Care* chapter of your *Owner's Manual*.

MOONROOF*


The moonroof control is on the overhead console. It has a one-touch open and close feature. To stop its motion during the one-touch operation, press the control a second time.

To open, press and release the *SLIDE* control. It stops short of the fully opened position to help reduce wind noise. Press the *SLIDE* control again to fully open the moonroof. To close, pull and release the *SLIDE* control.

To vent, press and release the *TILT* control. Pull and hold the *TILT* control to close the moonroof.

Once you close the moonroof, you can still open or close the sliding shade manually. Pull the shade toward the front of the vehicle to close it.

REAR HEATED SEATS*

Press the heated seat  control repeatedly to cycle through the settings and off. More lights indicate a higher setting.

AMBIENT LIGHTING*


 
When activated, ambient lighting illuminates key areas of your interior with a choice of colors.

To access and make adjustments, use your touchscreen

1. Press the *Settings* icon > *Ambient Lighting*.
2. Touch the color you desire.

 
3. Move the color up or down to increase or decrease the intensity. To switch the feature on or off, touch the selected color again.

MEMORY FEATURE*

The memory function saves and recalls the positions of the driver seat, power mirrors, tilt and telescoping steering column* and adjustable pedals.* Use the memory controls on the left side of the driver's seat   to program and then recall memory positions.

To program

1. Switch on the ignition.
2. Move the memory features to the position you desire.
3. Press and hold the  button until you hear a tone.

Use this same procedure to set the second position using the  button.

You can now use these controls to recall the set memory positions. You can also program your memory seats to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved position. See the *Seats* chapter in your *Owner's Manual* for more details.

REAR WINDOW BUFFETING

You may hear a pulsing noise when one or both of the rear windows are open. Lower a front window slightly to reduce this noise.

 


CONVENIENCE

POWER LIFTGATE OPERATION*

You can open your power liftgate three different ways:

- Push the control on the instrument panel.
- Press the control on your remote entry transmitter twice within three seconds.
- Press the liftgate control on the inside of the liftgate handle.



 
To close with the rear cargo area button, press and release the control on the left, rear quarter trim panel. To open the liftgate window, press the control near the rear view camera. For more information refer to the *Power Liftgate* information in your *Owner's Manual*.

SECURICODE™ KEYLESS ENTRY KEYPAD*

Lock or unlock the doors without a key by using the keypad. Enter the factory-set, 5-digit entry code or your personal code. This code is on the owner's wallet card in the glove box.

To unlock all doors, enter the factory-set code or your personal code, then press **3-4** within five seconds. With intelligent access, press any button on the keypad once to unlock all doors. You do not need to enter a code first.

To lock all doors, press and hold **7-8** and **9-0** at the same time with the driver door closed. You do not need to enter the keypad code first.



REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your key. To start, press and then press twice within three seconds. Your vehicle runs for 5, 10, or 15 minutes, depending on the setting. See the *Information Displays* chapter in your *Owner's Manual* to select the duration of the remote start system.

Once inside, apply the brake while pressing the START STOP button. Shift into drive (D) and go. If you have an integrated keyhead transmitter, insert the key into the ignition and switch the ignition on as you normally would before driving. To switch the engine off from outside the vehicle after using your remote start, press once.

POWER RUNNING BOARDS*

When active, the running boards extend down and out when you open the doors. They return to the stowed position after a two-second delay when you close the doors.

To enable and disable the power running board feature, refer to the *Information Displays* chapter in your *Owner's Manual*.

Note: Do not use the running boards, front and rear hinge assemblies, running board motors, or the running board under-body mounts to lift the vehicle when jacking. Always use proper jacking points. See your *Owner's Manual* for details.

*if equipped



ESSENTIAL FEATURES

SELECTSHIFT® AUTOMATIC TRANSMISSION*

Gives you the ability to manually change gears if you like. To use, move the gearshift lever from drive (D) to manual (M).

- Press the (+) button to upshift.
- Press the (–) button to downshift.

To return back to automatic shifts, move the gearshift lever from manual (M) to a different gearshift position.

EASY FUEL® SYSTEM

When fueling your vehicle

1. Put your vehicle in park (P) and switch the ignition off.
2. Open the fuel filler door.
3. Slowly insert the fuel filler nozzle fully into the fuel system, and leave the nozzle fully inserted until you are done pumping.
4. Wait at least 10 seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.

When refueling the vehicle fuel tank from a fuel container, use the plastic funnel located in the spare wheel storage tray. Clean the funnel or properly dispose of it.

Note: Do not use aftermarket funnels, as they will not work with the Easy Fuel system and may cause damage. You can purchase extra funnels from an authorized dealer if you choose to dispose of the funnel.

*if equipped

FUEL TYPE AND FUEL TANK CAPACITY

Depending on your vehicle, your fuel tank has a capacity of either 28 gallons (106L) or 33.5 gallons (126.8L).

Use only UNLEADED gasoline blended with a maximum of 15% ethanol and a minimum of an 87 octane rating. Do not use E85 (ethanol), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

TIRE PRESSURE MONITORING SYSTEM

Your vehicle is equipped with a Tire Pressure Monitoring System (TPMS) that displays a low tire pressure warning light when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Tire Pressure Monitoring System* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

LOCATION OF SPARE TIRE AND TOOLS

The temporary spare tire is under the vehicle, just forward of the rear bumper. The temporary spare is for emergency use only and you should replace it as soon as possible. The jack and tools are under the access panel in the floor behind the rear seat. Make sure to switch off the power running boards* prior to jacking, hoisting or towing your vehicle. Refer to the *Wheels and Tires* chapter in your *Owner's Manual*.