 


HE5J 19G217 EA  
October 2016  
Second Printing  
Quick Reference Guide  
Fusion Hybrid  
Litho in U.S.A.

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



#### United States

Ford Customer Relationship Center  
**1-800-392-3673** (FORD)  
(TDD for the hearing impaired: **1-800-232-5952**)

[owner.ford.com](http://owner.ford.com)  [@FordService](https://twitter.com/FordService)

#### Canada

Ford Customer Relationship Centre  
**1-800-565-3673** (FORD)  
(TDD for the hearing impaired: **1-888-658-6805**)

[ford.ca](http://ford.ca)  [@FordServiceCA](https://twitter.com/FordServiceCA)

#### WARNING

Driving while distracted can result in loss of vehicle control, accident and injury. Ford Motor Company strongly recommends that drivers use extreme caution when using any device or feature that may take their focus off the road. Your primary responsibility is the safe operation of the vehicle. We recommend against the use of any hand-held device while driving, encourage the use of voice-operated systems when possible and that you become aware of applicable state and local laws that may affect the use of electronic devices while driving.

# FUSION HYBRID

## TWO THOUSAND SEVENTEEN

### Quick Reference Guide



# COMMONLY USED VOICE COMMANDS

Press the voice button  on your steering wheel and then say:

## Basic Commands

- » Main menu
- » Go back
- » Cancel
- » List of commands
- » Next page
- » Previous page
- » Help

## Phone

- » Phone list of commands
- » Pair phone
- » Call <name> <on cell/at home/ at work>
- » Dial <number>
- » Listen to message

## Climate

- » Climate list of commands
- » Climate set temperature to <# degrees>

## Audio

- » AM <530-1710>
- » FM <87.9-107.9>
- » CD
- » USB
- » Sirius <0-233> \*\*
- » <Sirius channel name>\*\*
- » Bluetooth audio
- » Help

## Navigation\*

- » Navigation list of commands
- » Destination <home/previous destination>
- » Find <POI/an address/ intersection>
- » Show route
- » Where am I?
- » SiriusXM Traffic and Travel Link\*\* list of commands
  - Show <traffic/weather map/ 5 day forecast/fuel prices>
  - Help

## Apps

- » List mobile apps
- » Find new apps

\*available only with SYNC 3  
\*\*if equipped

Some features may not be available in your area. Refer to your Owner's Manual, visit the website or call the toll-free

number for more information. For U.S. customers: visit [owner.ford.com](http://owner.ford.com) or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit [syncmyride.ca](http://syncmyride.ca) or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).

## Learn More About Your New Vehicle

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



[owner.ford.com](http://owner.ford.com)  
(U.S.)



[ford.ca](http://ford.ca)  
(Canada)



4-5	Instrument Panel
6	Quick Tips
7	Energy Saving Tips
8-9	SYNC
10-12	SYNC 3
13	Fusion Hybrid Features
14-15	Comfort
16-17	Function
18-19	Essential Information

## Left Vehicle Info Display

Using the left steering-wheel-mounted controls, press the up and down arrow buttons to scroll through and highlight the options; use the right arrow button to enter a sub-menu.

» The Display/Trip Mode provides hybrid-specific information through the following screens:

• Engage • Empower • MyView • Trip

- MyView lets you choose what information you wish to display.

Select **Change MyView** in the Options menu to scroll through choices.

» The **Brake Coach** appears after the vehicle has come to a stop. It coaches you to brake in a manner that maximizes the amount of energy returned through the regenerative braking system.

The displayed percentage indicates your regenerative braking efficiency, with 100% representing the maximum amount of energy recovery. You can switch this feature ON and OFF in the information display.

## Steering Wheel Controls

### Audio Controls

Press **VOL +** or **-** to increase/decrease volume levels.

Press **⏮** **⏪** to access the next or previous radio station preset, CD track or preset satellite radio channel\*.

### Voice Controls

Press **🗨** to access voice recognition.


Press **☎** to answer call.

Press **📞** to exit phone mode or end a call.

## Service Engine Soon Light

 Lights briefly when you switch the ignition on. If it remains on or blinks after you start your vehicle, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

\*if equipped

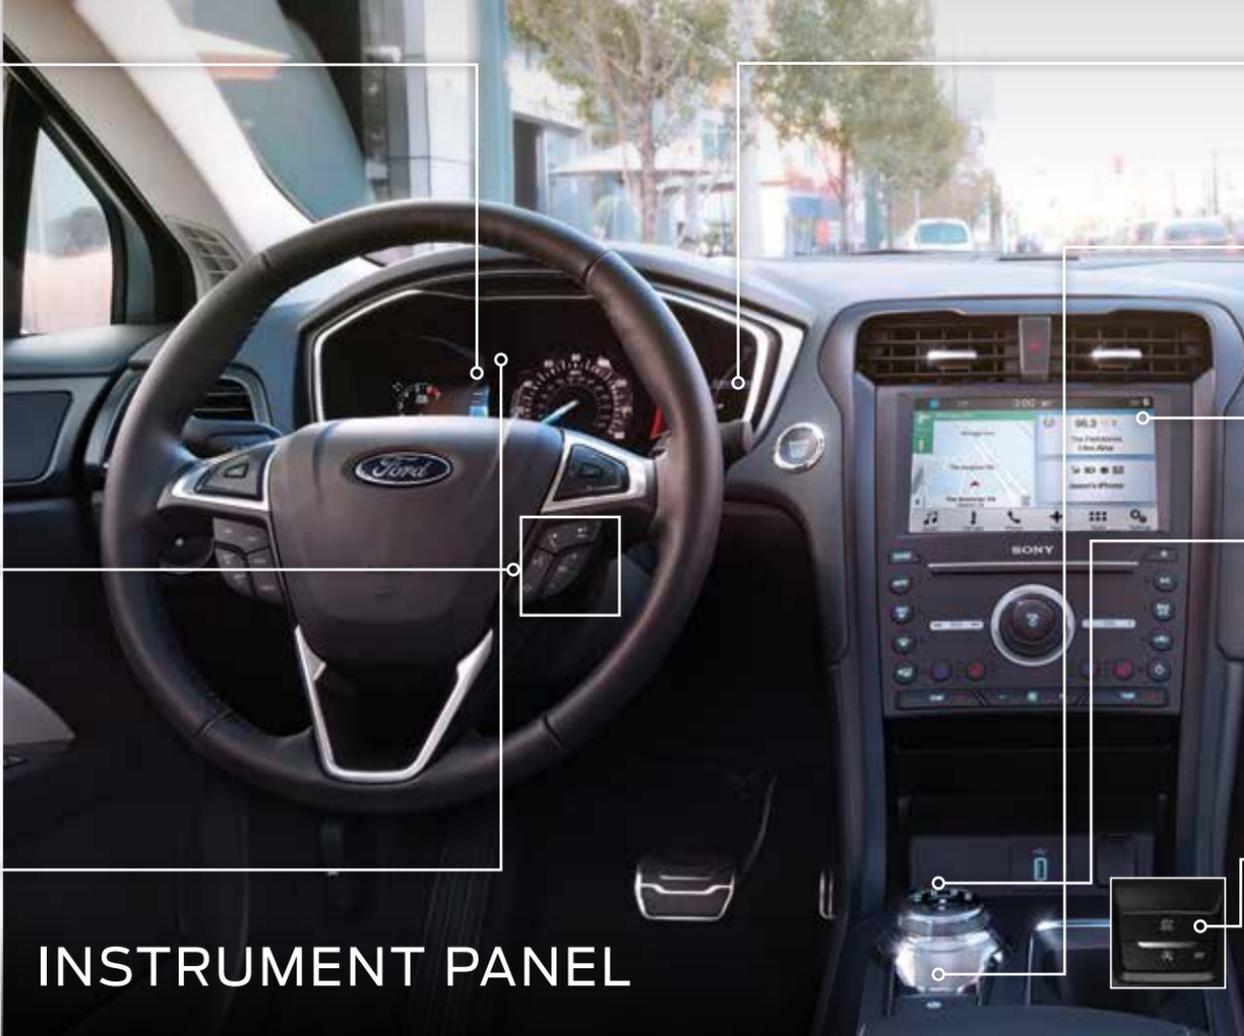

# INSTRUMENT PANEL

## Right Vehicle Info Display

Use the right steering-wheel-mounted controls to access a variety of features:

» **Fuel Economy** provides ways you can monitor your energy use:

• Efficiency Leaves • Fuel History • Coach

» **Entertainment, Phone and Navigation\*** information is also available.

Refer to the SYNC 3 chapter in your *Owner's Manual* for more information.

## Electric Parking Brake

The operating switch replaces the conventional handbrake. To use, pull the switch up. The brake system warning lamp lights to confirm that you applied the electric parking brake. You can release the electric parking brake manually by switching on the ignition, pressing the brake pedal and then pressing the electric parking brake switch. Refer to the *Brakes* chapter of your *Owner's Manual* for more details.

## Rear View Camera

Provides a video image of the area behind the vehicle. The image automatically appears in the screen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

## Rotary Shift Transmission

Your vehicle has an electronic transmission. The shift knob is on the center console, below the climate control system.

**Putting your vehicle in gear:**

**A.** Fully press down the brake pedal.

**B.** Turn the shift knob to select your gear.

**C.** The gear you select lights and the instrument cluster displays the selected gear.

**D.** Release the brake pedal and your transmission remains in the selected gear.

**NOTE** When entering an automatic car wash, always shift to Neutral. Push the "L" button to enable Stay in Neutral Mode if you are exiting the vehicle for the car wash. Please follow the commands on the information display.

## ECOSelect

See page 13 for details.

\*if equipped

# QUICK TIPS

*The Brake Coach appears in the display after the vehicle has come to a stop, and coaches you to maximize the amount of energy that can be returned through the regenerative braking system.*

## SmartGauge® with EcoGuide

Delivers specific information about various systems on your vehicle using menus that build on previous data. Use your left-hand, 5-way steering controls to scroll through your menu choices:

**Engage:** Adds gas and electric power-split information.

**Empower:** Adds an engine on and off threshold to the power demand gauge. See how much power you request based on how far you press the accelerator pedal.

**MyView:** Lets you customize your menu options, allowing you to select key information and combine it into one screen.

**EcoGuide:** Displays leaf graphics within the right-hand cluster, showing you when you're driving efficiently. More leaves equal better driving habits!



# ENERGY SAVING TIPS

## Help Maximize Your Fuel Economy by Utilizing These Few Tips

1. **Use smooth acceleration and braking.** According to the United States Department of Energy, aggressive driving can lower your gas mileage by up to 33 percent at highway speeds and 5 percent in the city.
2. **Carry the bare essentials.** The Department of Energy estimates that an extra 100 pounds (45.4 kilograms) in your vehicle could reduce your fuel economy by up to two percent.
3. **Seasonal fuel makes a difference.** Winter fuel contains slightly less energy than summer fuel, so the fuel blend you fill up with can impact your efficiency.
4. **Idling burns fuel, too.** You can burn up to half a gallon (1.9 liters) of fuel per hour when idling. Minimize your morning warm-up and parking lot waits to get the most out of filling your tank.
5. **Avoid extreme temperatures.** Find a shady or sheltered spot to help keep your lithium-ion battery operating efficiently, and minimize the amount of energy required to heat or cool your cabin.
6. **Use accessories wisely.** Heated seats, the rear defroster, the air conditioner and other power features draw electrical energy. When you operate your accessories, you may notice that the gasoline engine needs to start. Choose "Accessory Power" when configuring your MyView screen to see how much electricity you are using to power your vehicle's accessories.
7. **Check your tires.** Proper tire inflation can help you improve your fuel economy by up to 3.3 percent, according to the Department of Energy, while under-inflation could lower

your fuel economy by 0.3 percent for every 1 psi drop in pressure of all four tires. Check your vehicle's door sticker for recommended cold tire inflation pressure.

## Fuel History and Coach

Within the information displays, you'll be able to see how your driving style directly impacts your fuel economy.

**Fuel history** provides instant fuel economy, plus your recent fuel economy averaged over selectable intervals of 1, 2 or 6 minutes.

**Coach** can teach you how to improve your fuel economy by providing feedback on your recent acceleration, braking and cruising behavior.

**Efficiency Leaves** show your recent driving efficiency measured over the last few minutes. More leaves mean better fuel economy!

## Power Flow

- » Your system has hybrid-specific screens that display your vehicle power settings.
- » Press the **Power Flow** button on the apps menu to see this screen. It shows you where your vehicle power is coming from and where it is being used.



# SYNC®\*

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. Say the Word.

## Before You Get Started

1. Set up your owner account at [owner.ford.com](http://owner.ford.com) (U.S.) or [syncmyride.ca](http://syncmyride.ca) (Canada). Register and you will see which complimentary services you are eligible for.
2. SYNC uses a wireless connection called  *Bluetooth*® to communicate with your phone. Switch *Bluetooth* mode on in your phone's menu options. This lets your phone find SYNC. For more details on setting up your phone with SYNC, visit [owner.ford.com](http://owner.ford.com) (U.S.) or [syncmyride.ca](http://syncmyride.ca) (Canada), or your phone manufacturer's website.

## Pairing Your Cell Phone with SYNC

In order to use many of the features of SYNC, such as making a phone call or receiving a text, you must first connect or pair your phone with SYNC.

### To Pair Your Cell Phone for the First Time

1. Make sure that your vehicle is in park (P), then switch your ignition and radio on.
2. Press the phone button . When the display indicates there is no phone paired, press **OK**.
3. Put your phone into *Bluetooth* discovery mode. See your phone's manual, if necessary.
4. When prompted on your phone's display, enter the six-digit PIN provided by SYNC into your phone.
5. The display indicates when the pairing is successful.

### The System May Prompt You to

- » Set your phone as the *primary* or *favorite* (the primary phone receives messages and voicemail).
- » Download your phone book (a requirement to use the full set of voice commands).
- » Switch on 911 Assist®.

### TIPS

- » Make sure you accept the request from SYNC to access your phone.
- » To pair subsequent phones, please refer to *Pairing Subsequent Cell Phones* in the SYNC 3 chapter of your *Owner's Manual*.
- » If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting your phone pairing from SYNC, and then repeating the *Pairing Your Cell Phone with SYNC* process.

## Why Do You Need a SYNC Owner Account?

A SYNC owner account provides you with the latest software updates and, if you have questions, free customer support.

**NOTE** Your SYNC system may offer advanced features. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

## Using Your Cell Phone with SYNC

**NOTE** You must download your phone book to make phone calls with voice commands by name.

### Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, say a voice command.

For example, you could say **“Call Jake Smith at home”**. When the system confirms the number, say **“Dial”** again to initiate the call.

**NOTE** You can also make phone calls by pressing the voice button  and when prompted, give the voice command **“Dial”**, then verbally say the phone number.

### Answering Incoming Calls

Whenever you have an incoming call, the name and number of the person calling appears in the display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

### Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command **“Do not disturb on”** to switch on and **“Do not disturb off”** to switch off.

## Using SYNC to Access Digital Media

Plug in your USB media devices such as phones and MP3 players, and use SYNC to play all of your favorite music.

### Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say **“USB”**, then follow-up by saying a voice command.

# SYNC® 3\*



## Using SYNC 3

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

Use the touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. The system provides easy interaction with your audio, climate, phone, navigation\*, mobile apps and settings. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place.

## Create Your SYNC Owner Account

Create your account by visiting the website. Call the toll-free number for more information.

### In the United States:

owner.ford.com  
1-800-392-3673

### In Canada:

syncmyride.ca  
1-800-565-3673

## Pairing Your Cell Phone with SYNC 3

Pair your phone to SYNC 3 before use. Make sure that your vehicle is in park (P) and you switch on your ignition.

1. Follow the on-screen instructions.
2. A prompt alerts you to search for the system on your phone.
3. Select your vehicle's make and model as it displays on your phone.
4. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
5. The touchscreen indicates when the pairing is successful.
6. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.



## Phone

After pairing your phone, you can access more phone-dependent features:

- » Recent call lists.
- » Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- » Phone settings: Pair another phone and set ring tones and alerts.
- » Text messages.

**NOTE** Use the voice commands to make calls. Say *"Call James at home"* or *"Dial 555-1212"*. You can use the touchscreen to place calls as well. Refer to the SYNC 3 chapter in your *Owner's Manual* for complete details.

### Do Not Disturb Mode

Touch the **Do Not Disturb** button to send all calls directly to your voicemail. All ringtones and alerts are silent.



## Navigation\*

Press the **Navigation\*** icon to set your destination. Select one of two ways to find your destination:

- » **Destination mode** lets you key in a specific address or use a variety of search methods to locate where you want to go.
- » **Map mode** shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).

### Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a point of interest (POI).

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.

During your route, you can press the maneuver arrow icon on the map if you want the system to repeat the previous route guidance instructions.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

### Navigation Menu



When you are on your route, you can change your touchscreen view. Touch **Menu** and then select **Screen View** to select from these options:

- » **Full Map**.
- » **Highway Exit** displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- » **Turn List** shows all of the available turns on your current route.
- » **Traffic List** displays SiriusXM Traffic and Travel Link\* information.



## Climate



Touch the **Climate** icon on the touchscreen to access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger. Say **“Climate set temperature to 72 degrees”** and SYNC 3 makes the adjustment.

You can also use the ▲ or ▼ buttons to change the temperature setting.



## Audio

SYNC 3 gives you a mix of media. Press the **Audio** icon on the touchscreen and select Sources. Choose from AM, FM, SiriusXM\*, CD, USB, *Bluetooth* Stereo or Apps.

### Set Your Radio Presets

- » Tune to the station and then press and hold one of the memory preset buttons. The audio mutes briefly when the system saves the station and then the audio returns.
- » Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

### Use SYNC 3 to Access Digital Media

Play all of your favorite music from phones, flash drives and other devices.

Plug your device into a **USB** port, select Sources and then choose **USB**. Wait for the system to finish indexing your music to begin listening.

You can even create random playlists by using the **Shuffle** function.



## Apps



### Voice Control Your Smartphone Apps

The system supports the use of certain types of apps such as Pandora® or iHeartRadio® (U.S.), Spotify® or Glympse® through a USB or Bluetooth-enabled device. Each app gives you different on-screen options depending on the app's content. To find new apps, use the voice command, **“Find new apps”**.


For more information, refer to the SYNC 3 chapter in your *Owner's Manual* for details. For support, visit the website or call the toll-free number. See the inside back cover of this guide for details.

\*if equipped

# FUSION HYBRID FEATURES

## Silent Key Start

When starting your vehicle, you may not hear your engine because your hybrid-electric vehicle is equipped with silent key start. This fuel-saving feature allows your vehicle to be ready to drive without requiring your gas engine to be running. Look for the 'ready to drive' indicator light in your information display. When the light displays, your vehicle has started and is ready to drive.

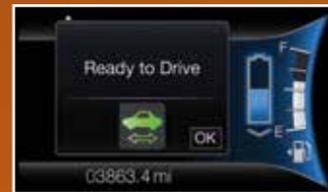

## ECOSelect

This feature offers the best possible fuel economy with only a slight impact to vehicle performance and comfort. To activate ECOSelect, press the  button on the center console and a graphic appears on your information display.

With ECOSelect active, you may notice:

- » Less aggressive heating and cooling.
- » Softer acceleration and changes in engine, braking and cruise control behavior.

See the *Unique Driving Characteristics* chapter in your *Owner's Manual* for more information.

## Unique Driving Characteristics

This hybrid vehicle combines electric and gasoline propulsion to provide breakthrough performance and improved efficiency. Familiarizing yourself with these unique characteristics will provide an optimal driving experience from your new vehicle.

**Conditions that may cause the engine to start up or remain running include:** considerable vehicle acceleration, vehicle speed above 85 mph (137 km/h) (although this may vary during certain climate or road conditions), ascending a hill and the engine is not warm enough to provide a requested cabin temperature.

**Driving:** The gas engine automatically starts and stops to provide power when needed and to save fuel when not needed. When coasting at low speeds, coming to a stop, or standing, the gas engine normally shuts down and the vehicle operates in electric-only mode.

**Braking:** Your hybrid has standard hydraulic braking and regenerative braking. Regenerative braking is performed by your transmission and it captures brake energy and stores it in your high voltage battery.

**Stopping:** The gas engine may shut off to conserve fuel as you come to a stop. Restarting the vehicle is not required. Simply step on the accelerator when you are ready to drive.

## EV+ Mode

Your vehicle recognizes your frequent destinations and allows for more EV driving as you approach them. For example, when nearing your home it should be easier to stay in electric mode. The EV indicator displays **EV+** when this mode is active. You should see this about 1/8 mile (200 m) from a frequent destination.

You can clear your frequent destinations with a Driving History reset through the Settings menu. You can also switch the EV+ feature off through the Driver Assist section of the Settings menu. See the *Information Display* chapter in your *Owner's Manual* for details.

# COMFORT

## Intelligent Access\*

**NOTE** Your intelligent access transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

This system operates the power locks on all four doors.

To unlock a door, pull the exterior door handle. Make sure not to touch the lock sensor on top of the handle. To unlock and open the luggage compartment, press the exterior release button hidden above the license plate.

To lock the doors, touch the lock sensor on top of the door handle.

The transmitter also contains a mechanical key blade to unlock the driver's door, if necessary.

**NOTE** You must have a valid transmitter inside the vehicle to switch on the ignition and start the engine.

## Memory Function\*

Use the memory controls on the driver door to program and then recall memory positions. Move the seats and mirrors to the position you desire. To program up to 2 positions, press and hold the desired preset button until you hear a single tone. You can now use these controls to recall the set positions.

You can also program your memory seats to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move to your saved position. See the *Seats* chapter in your *Owner's Manual* for more details.

## Remote Start\*

Remote start allows you to start the engine from outside your vehicle using your remote transmitter.

To start, press  and then press  twice within three seconds. Once inside, apply the brake while pressing the **START STOP** button. Shift into drive (D) and go.

To switch off the engine from outside the vehicle after using your remote start, press  once.

If your vehicle has this feature, it provides feedback through the LEDs on your key. A solid green light indicates a successful remote start. A solid red light indicates that the remote stop has taken place while a blinking red light means that remote stop or start failed. The key blinks green when it is waiting for a status update.



\*if equipped

## Driver Seat with Easy Entry and Exit\*

With the easy entry and exit feature in the information display, your driver seat automatically moves rearward up to two inches (five centimeters) when you switch the ignition off. The driver seat returns to the previous position when you switch the ignition on. See the *Information Display* chapter in your *Owner's Manual* for more details.

## Adaptive Cruise Control\*

This system, when on or in use, uses radar and camera to scan the road ahead and detect vehicles in front of you. The system automatically brakes or accelerates to maintain a set speed or follows the flow of traffic when speeds are below your set speed. In addition to selecting a set speed, you may also choose between four different gap settings that control the following distance to a slower moving vehicle in front of you. The system can also bring your vehicle to a complete stop in stop-and-go traffic.

The controls for engaging and controlling the adaptive cruise control system are on the lower-left side of your steering wheel.

**NOTE** Please refer to the *Using Adaptive Cruise Control* section of your *Owner's Manual* for system limitations and for detailed instructions on engaging the system.

## Push Button Start

Allows you to start your vehicle by fully pressing the brake pedal and the **START STOP** button. Press the button again to switch the engine off.

## Tilting Head Restraints

Your vehicle's front head restraints have a tilting feature for extra comfort.

### To Tilt the Head Restraint



Adjust the seatback to an upright driving or riding position. Pivot the head restraint forward toward your head to the position you desire. In the forward-most position, tilting it forward once more releases it to the upright position.

**NOTE** Do not attempt to force the head restraint backward after tilting it. Instead, continue tilting it forward until the head restraint releases to the upright position.

## Ambient Lighting\*

Lights various places, such as the footwells, with a choice of colors.

### Access Using Your Touchscreen and Make Your Adjustments

1. Press the **Settings** icon > **Vehicle** > **Ambient Lighting**.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity.

To switch off this feature, press the power button.

\*if equipped

# FUNCTION

## Lane Keeping System\*



Notifies you to stay in your lane through the steering system and the instrument cluster display when the front camera detects that an unintentional drift out of your lane is likely to occur. The system automatically detects and tracks the road lane markings using a camera mounted behind the interior rear view mirror.

Press the button on the steering wheel stalk to switch the system on or off.

**NOTE** The system stores the on or off setting until you manually change it, unless the system detects a MyKey. Set your preferred system settings by Mode and Intensity through your information display screen. Refer to the *Information Displays* chapter in your *Owner's Manual* for more details on how to change your settings. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information on the Lane Keeping System.

## Driver Alert\*

Automatically monitors your driving behavior using various inputs including the front camera sensor. If the system detects that your driving alertness level reduces below a certain threshold, then the system alerts you with a tone and a message in the cluster display. Press OK on the steering wheel to clear the warning.

## Pre-Collision Assist\*

The Pre-Collision Assist system uses a radar sensor and a camera sensor to scan the road ahead to detect stationary vehicles, vehicles moving in the same direction as yours and upright pedestrians in

your driving path. The system provides an audible and visual alert, brake support, and active braking in order to help the driver reduce impact damage or avoid a crash completely. The system provides support at speeds above approximately 3 mph (5 km/h), and support for pedestrians at speeds up to 50 mph (80 km/h)

For specific details on using the system, adjusting the system alert sensitivity and familiarizing yourself with the system limitations and warnings, please refer to the *Pre-Collision Assist* section in your *Owner's Manual*.

**NOTE** You are responsible for controlling your vehicle at all times. The system does not relieve you of your responsibility to drive with due care and attention. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.

## BLIS® (Blind Spot Information System) and Cross Traffic Alert\*

BLIS aids you in detecting vehicles that may have entered into your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and cross traffic turn on an amber indicator light in the exterior mirror on the side of the vehicle the approaching vehicle is coming from. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

**NOTE** NEVER use BLIS or cross traffic alert as a replacement for using the interior and exterior mirrors and looking over your shoulder before changing lanes. The systems are not replacements for careful driving. Use both systems only as an assist.

## Configurable Daytime Running Lamps

When you switch the feature on in the information display, daytime running lamps turn on when you are driving, the lighting control is in the autolamps position  and the headlamps are off. You can switch the configurable daytime running lamps feature On or Off using the information display controls. See the *Lighting* chapter in your *Owner's Manual* for complete information.

## Parking Aids\*

With front, rear and side sensing systems, a warning tone sounds if there is an obstacle near either bumper or near the sides of your vehicle. The warning tone increases in frequency as the object gets closer. The front sensors are active when the gearshift is in any position other than park (P) or neutral (N) and the vehicle speed is below 7 mph (12 km/h), the rear sensors turn on when the vehicle is in reverse (R) and is traveling less than 3 mph (5 km/h). The side sensors turn on when the transmission is in any position other than park (P).

**NOTE** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and system limitations.

## Active Park Assist with Park Out Assist\*

The system detects an available parallel or perpendicular parking space and automatically steers your vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes.

The system visually and audibly guides you to park your vehicle.

- » Use the direction indicator to select which direction you want to begin searching, either to the left or right-hand side of your vehicle.
- » Then press the button once for parallel parking or twice for perpendicular parking.
- » The system displays a message and a corresponding graphic to indicate that it is searching for a parking space. Park out assist determines the clearance to the front and rear of your vehicle and automatically steers your vehicle out of a parallel parking space(hands-free) while you control the accelerator, gearshift and brakes.
- » When your vehicle is at rest, press the button once.
- » The system displays a message requesting a direction. Use the direction indicator to select the left or right-hand side of your vehicle.

For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

**NOTE** Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.





# ESSENTIAL INFORMATION

## Fuel Tank Capacity/Fuel Info

Your vehicle has a fuel tank capacity of 14 gallons (53 liters). Use only **UNLEADED** fuel or **UNLEADED** fuel blended with a maximum of 15% ethanol. **Do not use ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.**

## Low Fuel Reminder

A low fuel reminder triggers when the distance to empty is about 50 miles (80 km) to empty.

## Open Window Buffeting

You may hear a pulsing noise when just one of the windows are open. Lower the opposite window slightly to reduce this noise.

## Refueling

Put your vehicle into park (P) and switch the ignition off. Unlock the fuel door by pressing the fuel button on the driver door to open the fuel filler door. It could take up to 15 seconds for the fuel door to pop open. Insert the fuel filler nozzle fully and begin fueling. Wait five to ten seconds after pumping fuel before removing the fuel filler nozzle. Press the center rear edge of the fuel filler door to close. The fuel door latches closed.

**NOTE** Make sure you close the fuel door securely after refueling. If the fuel door remains open and the vehicle is driven, the check engine light in the instrument cluster may come on. Please see your *Owner's Manual* for complete details.



## Transmission

Your hybrid's transmission is designed to do its work seamlessly, so you may not feel shift changes as you normally would in a gasoline-powered vehicle.

You may feel the transition when the system changes from electric vehicle (EV) mode to gas mode. This is normal. Since your engine speed is controlled by the transmission, it may seem elevated at times. This is also normal hybrid operation as it helps deliver fuel efficiency and performance.



## Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

## Tire Pressure Monitoring System

Your vehicle illuminates a low tire pressure warning light (ⓘ) in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible, then inflate them to the proper pressure. Refer to the *Tire Pressure Monitoring* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

## Tire Sealant and Inflator Kit\*

The kit is in under the load floor of the luggage compartment. It consists of an air compressor to reinflate the tire and a sealing compound in a canister that seals most punctures caused by nails or similar objects. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more details.

## Towing Your Fusion Hybrid

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* in the *Towing* chapter of your *Owner's Manual*.

## Automatic Shutdown\*

In vehicles equipped with intelligent access\*, this feature automatically shuts down the vehicle if it has been idling for an extended period. The ignition also turns off in order to save battery power. Before the engine shuts down, a message appears in the information display, allowing you to override the shutdown feature temporarily.

**NOTE** You cannot permanently switch off the automatic shutdown feature. When you switch it off temporarily, it turns on at the next ignition cycle. See *Starting and Stopping the Engine* chapter of your *Owner's Manual* for more details.