

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

United States

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
owner.ford.com

 @FordService

Canada

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
(TDD for the hearing impaired: 1-888-658-6805)
ford.ca

 @FordServiceCA

March 2018
Third Printing
Quick Reference Guide
Escape
Litho in U.S.A.

1J5119G217 AA



Commonly Used Voice Commands

Press the voice button  on the steering wheel and then say:



Basic Commands

- Main menu
- Go back¹
- Cancel
- List of commands¹
- Next page¹
- Previous page¹
- Help



Phone

- Phone list of commands
- Pair phone
- Call
<name> <on cell/
at home/at work>
- Dial <number>
- Listen to message



Audio

- AM <530-1710>
- FM <87.9-107.9>
- *Bluetooth* audio
- USB
- Sirius <0-233>²
- <Sirius channel name>²



Apps

- List mobile apps
- Find mobile apps



Navigation^{1,2}

- Navigation list of commands
- Drive home
- Find a POI
- Show route
- Where am I?
- SiriusXM Traffic and Travel Link²
list of commands
 - Show
<traffic/weather map/
5-day forecast/fuel prices>

¹only available with SYNC 3

²if equipped



Table of Contents

Instrument Panel	4 – 5
SYNC	6 – 7
SYNC 3	8 – 10
Convenience	11
Comfort	12 – 13
Liftgate	14 – 15
Function	16 – 17
Essential Information	22 – 23

Learn More About Your New Vehicle

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



owner.ford.com (U.S.)



ford.ca (Canada)

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Some services may not be available in your area. Refer to the SYNC 3 chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information.

For U.S. customers: Visit owner.ford.com or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

For Canadian customers: Visit syncmyride.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).

Instrument Panel



1 Cruise Control

To Set Your Cruise Control Speed

- Press and release **ON**.
- Drive to the desired speed.
- Press and release **SET +** or **SET -**, then take your foot off the accelerator.

After you set a speed, you can press **SET +** or **SET -** to adjust the cruise speed. To cancel the set speed, press the **CAN** (Cancel) button or tap the brake pedal.

2 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or is flashing after you start the engine, the On-Board Diagnostics system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

3 Information Display

Provides information about various systems on your vehicle. Use the left steering wheel controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter of your *Owner's Manual* for more information.

4 Adjustable Steering Column

Unlock the steering wheel by pulling the lever down. Adjust the wheel to the desired position (in, out, up and down). Push the lever back up to lock the steering wheel in place.

5 Media Controls*

Press **VOL +** to increase or **VOL -** to decrease volume levels.

Press **⏮** **⏭** to hear the previous or next saved radio station, CD or MP3 track.

Press and hold to seek down or up the frequency band, or through CD and MP3 tracks.

6 Voice Control*

Press the voice button  to access voice recognition.

7 Wiper Controls*

Use the rotary control on the lever to adjust the wipe intervals. Pull the lever toward you to wash the windshield.

8 Keyless Starting*

Allows you to start your vehicle by pressing the **START STOP** button when fully pressing down on the brake pedal. Press the button again to switch off the engine.

Note: Your intelligent access transmitter* must be inside the vehicle to start the ignition.

9 Auto-Start-Stop*

For more information about Auto-Start-Stop, please see page 18.

SYNC®

Getting Started with Your SYNC System

SYNC is an in-vehicle communications system that works with your *Bluetooth* wireless technology-enabled phone and portable media player.

Support

The SYNC support team is available to help you with any questions you cannot answer on your own.

In the United States, call **1-800-392-3673**.

In Canada, call **1-800-565-3673**.

Driving Restrictions

For your safety, certain features are speed-dependent and restricted when your vehicle is traveling over 3 mph (5 km/h).

Pairing Your Phone with SYNC

In order to use many of the features of SYNC, first pair your phone with SYNC. Make sure that your vehicle is in park (P) and switch on your ignition.

To Pair Your Phone for the First Time

1. Make sure that you switch *Bluetooth* on and that your device is discoverable.
2. Press the phone button . When the display indicates there is no paired phone, select the option to add.
3. When a message to begin pairing appears, search for SYNC on your phone.

4. Confirm that the PIN provided by SYNC matches the PIN displayed on your phone.

5. The display indicates when the pairing is successful.

Note: *The system may prompt you to set your phone as primary or favorite (the phone SYNC automatically tries to connect with first upon vehicle start-up), download your phone book (a requirement to use the full set of voice commands) and switch on 911 Assist®.*

Tips

- To pair subsequent phones, please refer to the SYNC chapter of your *Owner's Manual*.
- If you experience pairing problems, try performing a clean pairing by deleting your services from SYNC, deleting your phone pairing from SYNC and then repeating the *Pairing Your Phone with SYNC* process.

Why Do You Need a SYNC Owner Account?

A SYNC owner account allows you to receive the latest software updates and, when you have questions, free customer support. Some services may not be available in your area.

Create Your Account

Create your account by visiting the website. Call the toll-free number for more information.

In the United States:

owner.ford.com
1-800-392-3673

In Canada:

syncmyride.ca
1-800-565-3673

Using Your Phone with SYNC

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, say a voice command.

For example, you could say, "Call Jake Smith at home". When the system confirms the number, say, "Dial" to initiate the call.

Note: *You can also make phone calls by pressing the voice button . When prompted, say the voice command, "Dial", then verbally say the phone number.*



Answering Incoming Calls

When you have an incoming call, the name and number of the person calling displays. Press the phone button  to answer an incoming call. You can hang up at any time by pressing the phone button .

Using SYNC to Access Digital Media

Plug your USB media device, such as a phone or MP3 player, into a USB port and wait for the system to finish indexing your music. When indexing is complete, you can use SYNC to play all of your favorite music.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted, say, "USB", then follow-up by saying a voice command such as "Browse all albums".



Using SYNC 3

The SYNC 3 system allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your *Bluetooth* wireless technology-enabled phone, the touchscreen provides easy interaction with audio, multimedia, navigation and your phone's SYNC 3 compatible apps.

Pairing Your Phone with SYNC 3

Pair your *Bluetooth* wireless technology-enabled phone with the system before using the functions in hands-free mode. Switch on *Bluetooth* on your device to begin pairing. See your phone's manual if necessary.

1. Select **Add a Bluetooth Device**.
2. Follow the on-screen instructions.
3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle's make and model as it displays on your phone.
5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.

Get in Touch Using Your Touchscreen

Use the feature bar at the bottom of the touchscreen to access the many features of SYNC 3.



Phone

After pairing your phone, you can access more phone-dependent features:

- **Recent call lists.**
- **Contacts:** Sort alphabetically and choose a specific letter to begin viewing your entries.
- **Phone settings:** Pair another phone, and set ring tones and alerts.
- **Text messages.**
- **Do not disturb:** Send all calls to your voicemail, and all ring tones and alerts are set to silent mode.

Note: Refer to the SYNC 3 chapter of your *Owner's Manual*, owner.ford.com (U.S.) or syncmyride.ca (Canada) for details.



Navigation*

Select one of two ways to find your destination:

- Destination mode lets you key in a specific address or use a variety of search methods to locate where you want to go.

- Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).


Refer to the SYNC 3 chapter in your *Owner's Manual* for complete details.

Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a Point Of Interest (POI).

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.

During your route, you can press the maneuver arrow icon on the map if you want the system to repeat the previous route guidance instructions.

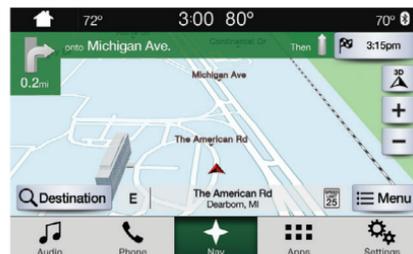

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

Navigation Menu

When you are on your route, you can change your touchscreen view. To change the view, touch **Menu** on the bottom of the screen and then select **Screen View** to choose from any of the following:

- Full Map.
- Highway Exit Info displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint.
- Turn List shows all of the available turns on your current route.

SYNC 3®* (continued)

Audio

Press the **Audio** icon on the touchscreen and select **Sources**. Choose from AM, FM, SiriusXM*, CD, USB, *Bluetooth* Stereo or Apps.

Set Your Radio Presets

- Tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

Using SYNC 3 to Access Digital Media

Play all of your favorite music from phones, flash drives and other devices.

Plug your device into a USB port, select **Sources** and then choose **USB**. Wait for the system to finish indexing your music to begin listening.

You can even create random playlists using the **Shuffle** function.

Settings

Touch the **Settings** icon to customize information within your vehicle.

Adjust the clock, display, some vehicle features and sound settings.

Apps

The system supports the use of certain apps through a USB or *Bluetooth*-enabled device.




Each app gives you different on-screen options depending on the app's content. To find new apps, use the voice command, "*Find mobile apps*". Refer to the SYNC 3 chapter of your *Owner's Manual* for more information.

FordPass™ Connect with FordPass

With a FordPass™ Connect-equipped vehicle, you can use FordPass™ to track your vehicle's location and remotely access vehicle features such as start, lock and unlock and vehicle status including fuel level and approximate mileage. You can also schedule specific times to remotely start your vehicle so it's ready to hit the road as soon as you are. Your vehicle is capable of providing a Wi-Fi hotspot if you have a vehicle hotspot data plan. FordPass™ Connect is an optional feature on select vehicles. FordPass® is available through a free download via the Apple App Store® or Google Play™. Message and data rates may apply. Services may be limited by mobile phone network coverage area.

Convenience

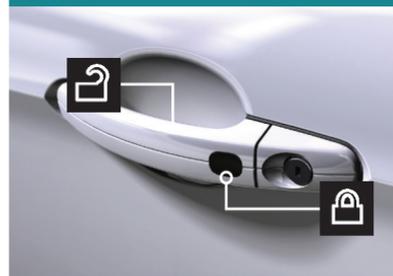

Intelligent Access*

You can unlock and lock the vehicle without taking the key out of your pocket or purse when your intelligent access key is within 3 feet (1 meter) of your vehicle. To unlock, touch the unlock sensor on the back of the front door handle for a brief period and then pull on the door handle, being careful to not touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the front door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.

Remote Entry Icons

- Press  once to lock all of the doors. Press it again within a few seconds to confirm all doors are locked.
- Press  once to unlock the driver door. Press again within a few seconds to unlock all of the doors.
- Press  to switch on the panic alarm. Press it again to switch it off or switch on the ignition.
- Press  twice within a few seconds to open the liftgate.
- **Car finder:** Press  twice within a few seconds to locate your vehicle. The horn sounds and the direction indicators flash.

Universal Garage Door Opener*

Your driver visor has a built-in wireless transmitter that replaces the common hand-held garage door opener.

You can program this system to security systems, entry gates and home or office lighting. Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual* for programming instructions and additional information on how to use this device.

Comfort

Ambient Lighting*

Light your vehicle interior with a choice of several colors with the ambient lighting feature. You can access this feature through the **Settings** menu for SYNC 3.

Tap a color to switch on the ambient lighting. Drag the color up and down to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

Rear Seats

With the seat occupied, pull the lever up to recline the seatback to the desired position. With the seat unoccupied, pull the lever up to fold the seatback forward. You may need to fold the outboard head restraints and lower the center head restraint first.

Dual Automatic Temperature Control

You and your front passenger can adjust independent controls to set the air temperature on each side of the vehicle. To return to one temperature, press and hold the AUTO button for more than two seconds. The passenger setting then switches to the driver set temperature.

Heated Front Seats*



The front heated seat controls are on the center stack. Adjust the control to your desired heat setting.

Remote Start*

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press and then press twice within a few seconds. When inside, apply the brake while pressing the **START STOP** button.

Shift into drive (D) and go. To switch off the engine from outside the vehicle after using your remote start, press once.



Moonroof and Sunscreen*

The moonroof and sunscreen have a one-touch open and close feature. To stop them during a one-touch operation, press the control a second time.

Press and release the rear of the control to open the sunscreen. Press and release the front of the control to close the sunscreen.

Note: If the moonroof is open, it closes automatically before the sunscreen.

Press and release the rear of the control to open the moonroof. The moonroof stops short of the fully opened position. Press and hold the control again to open the moonroof fully. Press and release the front of the control to close the moonroof.

Memory Function*




Use this feature to program and recall the positions of the driver seat and power mirrors. The controls are on the driver door. To program position 1, switch on the ignition, adjust the seat and exterior mirrors to your desired positions and press and hold the 1 button until you hear a tone. Use this same procedure to set positions 2 and 3 using the respective buttons. You can now use these controls to recall the set memory positions.

See the *Seats* chapter in your *Owner's Manual* for details.

Tilting Front-Row Head Restraints

Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward again releases it to the upright position.

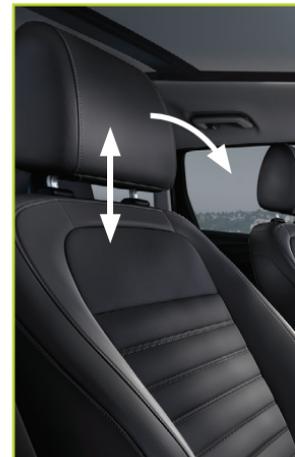

Liftgate

Manual Liftgate

To Open the Liftgate

1. Press the button located inside the liftgate pull cup handle to unlatch the liftgate.
2. Pull on the outside handle to raise the liftgate.

Power Liftgate*

Note: If the vehicle is running, the liftgate operates only with the transmission in park (P).

Touch a Button to Open or Close the Liftgate

Press  on your remote entry transmitter twice within a few seconds or press the  button on the instrument panel. A tone sounds when the liftgate starts to close.

You Can Also Open the Liftgate From the Rear of Your Vehicle

1. Unlock your liftgate and then press the button in the top of the liftgate pull cup handle.
2. Allow the power system to open the liftgate after pressing the button.
3. To close the liftgate, press and release the button on the liftgate.

When the liftgate begins to close, three tones sound.

Setting the Liftgate Open Height

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.

To Program a New Height

1. Open the liftgate.
2. Stop the liftgate movement by pressing the button on the liftgate when it reaches your desired height. When the liftgate stops moving, you can also move it manually to your desired height.
3. Press and hold the button on the liftgate until you hear a tone indicating that your programming of the liftgate height is successful.



The liftgate then opens to its newly programmed height when you use the power feature to open it.

To change the programmed height, repeat the process.

Obstacle Detection

When you use the power open or close feature and the liftgate detects a problem, it sounds warning tones and the liftgate stops.

The Liftgate Cannot Power Open or Close When

- It detects an object in its opening or closing path.
- The vehicle battery does not have enough charge to power the liftgate.
- The ignition is on and the transmission is not in park (P).
- You are traveling at speeds at or above 1 mph (1 km/h).

Note: Entering the vehicle when the liftgate is closing could cause the vehicle to bounce and turn on obstacle detection.

Hands-Free Liftgate Operation*

To Open Your Liftgate Hands-Free While You Are at the Liftgate


1. Make sure you have an intelligent access transmitter* behind the liftgate, within 3 feet (1 meter).
2. Move your foot under and away from the rear bumper using a single kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

Note: In vehicles that have the towing package and the hands-free power liftgate feature, you must move your foot in a single kicking motion between the trailer hitch and the exhaust system. Do not kick under the trailer hitch.



Function

Rear View Camera

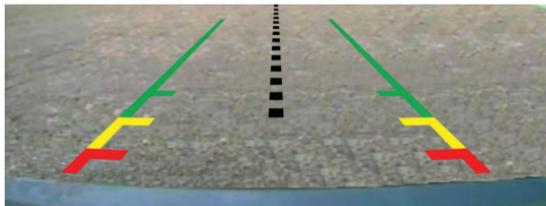

This system provides a video image of the area behind the vehicle. The image appears when the transmission is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

Note: If mud, water or debris obstructs the camera's view, clean the lens with a soft, lint-free cloth and non-abrasive cleaner.

SelectShift® Automatic Transmission

If equipped with the toggle on the transmission selector, press the (+) toggle switch on the side of the transmission selector to activate SelectShift.

- Press the (+) button to upshift.
- Press the (-) button to downshift.

If equipped with steering wheel paddles, pull the (+) paddle on the steering wheel to activate SelectShift.

- Pull the right paddle (+) to upshift.
- Pull the left paddle (-) to downshift.

SelectShift in drive (D):

- Provides a temporary manual mode for performing more demanding maneuvers where extra control of gear selection is required.

SelectShift in sport (S):

- Provides a permanent manual gear selection where full control of gear selection is required.

SecuriCode™ Keyless Entry Keypad*

Lock or unlock the doors without using a key. You can operate the keypad with the factory-set, 5-digit entry code. This code is on the owner's wallet card in the glove box.

In addition to the factory-set code, you can also create up to five of your own 5-digit personal entry codes.

To lock all of the doors and the liftgate, press and hold **7-8** and **9-0** at the same time with the driver door closed. For complete information, refer to the *Locks* chapter in your *Owner's Manual*.



MyKey®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

Wiper Operation



Adjust the wiper lever and its controls to operate the front and rear wipers.

- Single wipe: Pull the lever down.
- Intermittent wipe: Raise the lever upward to position **1** and then rotate the control:
 - Upward for short wipe intervals.
 - Downward for long wipe intervals.

- Normal wipe: Raise the lever upward to position **2**.
- High-speed wipe: Raise the lever to position **3**, its highest position.

Speed Dependent Wipers

When your vehicle speed increases, the interval between wipes decreases.

Rear Window Wiper and Washer

To operate the wiper, press the rocker switch on the end of the lever to change between off, intermittent and low speed.

Depending on your vehicle, when you switch on the front wipers and move the gearshift lever to reverse (R), the rear intermittent wipe may turn on.

To use the rear washer, push the wiper lever away from you. When you release the lever, the rear wiper operates for a short time.

Side Sensing System*

The side sensing system uses the front and rear side sensors to detect and map obstacles that are near the sides of your vehicle. The side sensors are active when the transmission is in any position other than park (P). As the object comes closer to the side of your vehicle, the rate of the audible warning increases.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.



Essential Information

Fuel Tank Capacity and Fuel Info

Your vehicle has a 15.7 gallon (59.4 liter) fuel tank capacity. We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Do not use fuel ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

Refueling

When Fueling Your Vehicle

1. Put your vehicle in park (P) and switch the ignition off.
2. Open the fuel filler door and slowly insert the fuel filler nozzle into the fuel system up to the first notch. Leave the nozzle inserted until you are done pumping.
3. Wait at least five seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.

When using a portable fuel container, slowly insert the fuel funnel (located in the spare wheel storage tray) and pour the fuel into the funnel.

Note: Do not use aftermarket funnels as they do not work with the Easy Fuel system and may cause damage. Properly clean or dispose of the funnel after each use.

Auto-Start-Stop*

The system automatically turns off the engine when you stop your vehicle to help reduce fuel consumption.*

- Automatically turns the engine on when you release the brake pedal.
- Automatically turns the engine on to make sure there is no impact to cabin comfort.

The system turns on automatically each time you start your vehicle, but you can switch it off. Just press the Auto-Start-Stop button on the center console. The button lights when you switch the system off.

Towing Your Escape

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

Location of Spare Tire and Tools

Your spare tire and tools are beneath the carpeted load floor in the rear of your vehicle. The spare tire is for emergency use only. Replace it as soon as possible. For complete details on changing your tire, refer to the *Wheels and Tires* chapter of your *Owner's Manual*.

Tire Pressure Monitoring System

Your vehicle shows a low tire pressure warning light  in your instrument cluster when one or more of your tires are under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

Rear Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

Front and Rear Parking Aids*

These systems sound audible warning tones if there is an obstacle near the vehicle's front or rear bumpers. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency.

The front sensors automatically turn on when the transmission is in any position other than park (P) or neutral (N) and the vehicle is traveling at a low speed. The system can detect objects up to 28 inches (70 centimeters) away from the front of the vehicle. This range decreases at the outer corners.



The rear sensors are active only when the transmission is in reverse (R) and can detect objects up to 6 feet (1.8 meters) away, with decreased coverage at the outer corners of the bumper.

See the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

Essential Information (continued)

Collision Warning System*

This system alerts you of certain collision risks. The system's sensor detects your vehicle's rapid approach to other vehicles traveling in the same direction as your vehicle. When your vehicle rapidly approaches another vehicle, a red warning light flashes and a tone sounds.

The brake support system assists you in reducing any collision speed by pre-charging the brakes. If the risk of collision continues to increase after the audiovisual warning, the brake support prepares the brake system for rapid braking.

The system does not automatically activate the brakes, but if you press the brake pedal lightly, the brakes apply full stopping power. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more details.

You can adjust the warning system's sensitivity through your information display. Refer to the *Information Displays* chapter in your *Owner's Manual* for more details.



Active Park Assist with Parallel Parking, Perpendicular Parking, Parallel Park Out Assist*

Detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) when you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle or enter traffic. The button is on the center stack.

To use active park assist for parallel parking, press the button once.


To use the system for perpendicular parking, press the button twice.

Use the park out assist feature when your vehicle is at rest in a parallel parking space. Press the button, and then follow the instructions on the display. Use your direction indicator to signal from which side of your vehicle you want to exit the parking space. After the system directs your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot.

To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

110-Volt Power Outlet*

The power outlet is on the rear of the center console. You can use it to power electrical devices that require up to 150 watts.

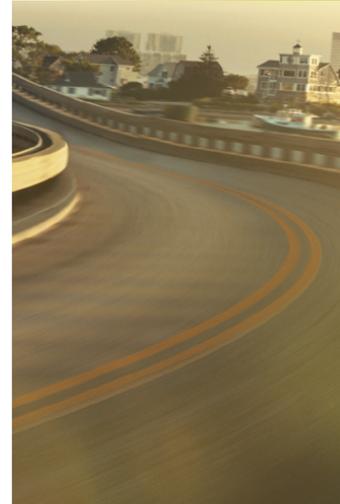

Essential Information (continued)

Lane Keeping System*

Notifies you to stay in your lane through the steering system and the instrument cluster when the front camera detects an unintentional drift out of your lane is likely to occur. The system automatically detects and tracks the road lane markings using a camera mounted behind the interior rear view mirror.

Press the button on the left steering wheel stalk to switch the system on or off.

Note: The system stores the on or off setting until you manually change it, unless the system detects a MyKey. Refer to the *Information Displays* chapter in your *Owner's Manual* for more details on how to change your settings. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information on the Lane Keeping System.

Automatic High Beam Control*

The system turns on high beams if it is dark enough and no other traffic is present. If it detects an approaching vehicle's headlamps or tail lamps, or street lighting ahead, the system turns off high beams before they can distract other road users. Low beams remain on.

Adaptive Cruise Control*

Adjusts your vehicle speed to a set gap between you and the vehicle in front of you in the same lane. You can select from one of four gap settings. Refer to the *Cruise Control* chapter of your *Owner's Manual* for more information.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.

Blind Spot Information System (BLIS®)*

BLIS aids you in detecting vehicles that enter into your blind spot zone. The system displays an amber indicator light in your exterior mirrors. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.



Autowipers*

The wipers operate when the system detects moisture on the windshield.

- Low sensitivity: The wipers automatically operate when the sensor detects a large amount of moisture on the windshield.
- High sensitivity: The wipers automatically operate when the sensor detects a small amount of moisture on the windshield.

Note: Keep the outside of the windshield clean. Dirt, bugs and excessive road debris can prevent it from detecting rain.

To Reduce Smearing, We Recommend the Following

- Lower the sensitivity of the autowipers.
- Switch to normal or high-speed wipe.
- Switch the autowipers off.

Note: Make sure you switch off the windshield wipers before entering a car wash.

Cross Traffic Alert*

This system is designed to warn you of vehicles approaching from the sides when the transmission is in reverse (R). It detects vehicles that approach at speeds of up to 37 mph (60 km/h). The system illuminates an amber alert indicator in the outside mirror on the side of your vehicle from which the approaching vehicle is coming. In addition, cross traffic alert also sounds an audible alert and a message appears in the information display indicating a vehicle is coming from the right or left.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

