

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your *Owner's Manual*.

WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.

UNITED STATES

Ford Customer Relationship Center
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
owner.ford.com



@FordService

CANADA

Ford Customer Relationship Centre
1-800-565-3673 (FORD)
(TDD for the hearing impaired: 1-888-658-6805)
ford.ca



@FordServiceCA




August 2017
First Printing
Quick Reference Guide
Expedition
Litho in U.S.A.
JL1J 19G217 AA



owner.ford.com



 ford.ca

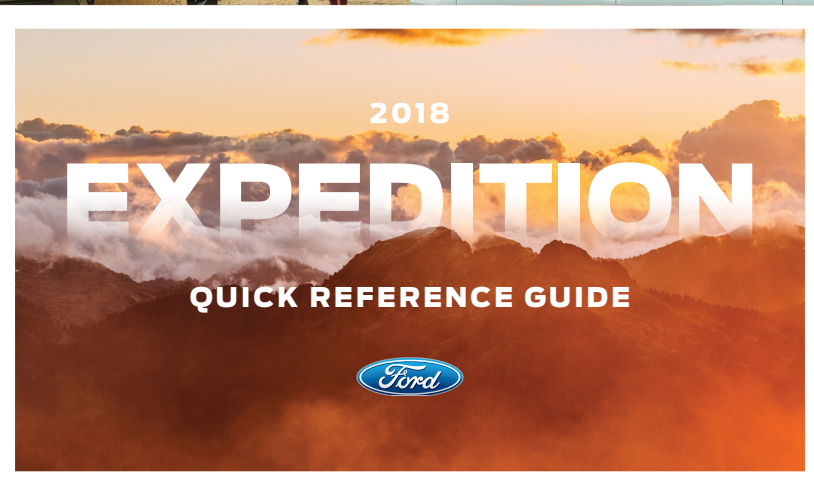



COMMONLY USED VOICE COMMANDS



BASIC COMMANDS

- Main menu¹
- Go back¹
- Cancel
- List of commands¹
- Next page¹
- Previous page¹
- Help



PHONE

- Phone list of commands
- Pair phone
- Call <name>
- Call <name> <on cell/at home/at work>
- Dial <number>
- Listen to message¹



NAVIGATION^{1, 2}

- Navigation list of commands
- Destination
<home/my work/previous destination>
- Find <an address/POI/intersection>
- Show route
- Where am I?
- SiriusXM Traffic and Travel Link³ list of commands
 - Show <traffic/weather map/5-day forecast/fuel prices>
 - Help



APPS

- List mobile apps
- Find new apps
- <App name>
- <App name> help



CLIMATE¹

- Climate list of commands
- Climate set temperature
<# degrees>



AUDIO

- AM <530-1710>
- FM <87.9-107.9>
- USB
- Bluetooth audio
- Sirius <0-233>³
- <Sirius channel name>³

¹ only available with SYNC 3

² if equipped

³ SiriusXM Traffic and Travel Link may not be available in all markets. Activation and a subscription are required.

TABLE OF CONTENTS

INSTRUMENT PANEL (4 – 9)

SYNC (10 – 11)

SYNC 3 (12 – 14)

COMFORT (15 – 17)

CONVENIENCE (18 – 22)

ESSENTIAL INFORMATION (23)

ROADSIDE ASSISTANCE

Your new Ford Expedition comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.

Some services may not be available in your area. For more complete information on SYNC, refer the SYNC 3 chapter of your *Owner's Manual*, visit the website or call the toll-free number.

For U.S. customers, visit owner.ford.com or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3). For Canadian customers, visit syncmyride.ca or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).


INSTRUMENT PANEL

1 | WINDSHIELD WIPERS AND WASHERS

Rotate the end of the control away from you to increase the wiper speed and toward you to decrease the wiper speed.

To use the washer feature, push and briefly hold the end of the lever.

To operate the rear window wiper, rotate the control.

For a rear wash cycle, rotate and hold the rear wiper control  to either the top or bottom position.


 


Note: For optimal wiper performance, clean your blades and glass regularly.

2 | POWER LIFTGATE CONTROL*


You can open or close your power liftgate from inside your vehicle.

To use, press the control. For more information see page 21.


 
3 | LIGHTING CONTROL

-  Switches off the headlamps.
-  Switches on the position lamps, instrument panel lamps, license plate lamps and tail lamps.
-  Switches the headlamps on.
-  Autolamps: Automatically turns the exterior lamps on in low-light situations.

4 | FRONT FOG LAMPS

-  Press to switch the fog lamps on or off. You can switch the fog lamps on when the lighting control is in any position except off and the high beams are not on.

5 | POWER-ADJUSTABLE FOOT PEDALS*

Lets you move your brake and accelerator pedals. Press the  arrow to move the pedals closer to you or the  arrow to move the pedals away from you. Adjust the pedals only after you stop the vehicle and place the transmission in park (P).

*if equipped



6 | TILT AND TELESCOPING STEERING COLUMN*

Lets you adjust the position of the steering column. Use the 4-way control on the side of the steering column. The column automatically moves to the full up position when you switch the ignition off. It returns to the previous position when you switch the ignition on. You can switch this feature off in the information display. For more details about how your information display operates, please see your *Owner's Manual*.

7 | INFORMATION DISPLAY*

Use the 5-way button on the steering wheel to navigate through the additional vehicle features and information.

Depending on your vehicle configuration, this screen features 4 of the following gauges at the top of the screen:

- Oil Pressure
- Engine Coolant Temperature
- Fuel (miles to empty)
- Transmission Fluid Temperature
- Turboboost Gauge

The main menu options may include:

- Trip 1
- Fuel Economy
- MyView
- Vehicle Info
- Off Road
- Trip 2
- Driver Assist
- Trip/Fuel
- Towing
- Setting

For more details about your information display functions, refer to your *Owner's Manual*.

8 | ADAPTIVE CRUISE CONTROL*

In addition to cruise control, your vehicle may also include adaptive cruise control. The system adjusts your speed to maintain a proper distance between you and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the gap controls on the steering wheel. The system can also bring your vehicle to a complete stop and may resume going forward in stop-and-go traffic.

*if equipped

INSTRUMENT PANEL (continued)



9| STEERING WHEEL MEDIA CONTROLS

Press VOL+ or VOL- to increase or decrease your volume level.

Press ◀ or ▶ to access the previous or next radio station, CD track or preset satellite radio channel.

Press M repeatedly to access all possible media sources.

Press to access voice recognition.

Press to answer an incoming call.

Press to disconnect a phone call.

Press for mute.

Note: Some of your steering wheel media controls may vary. See the *Steering Wheel* chapter in your Owner's Manual for more details.

10| KEYLESS STARTING*

Allows you to start your vehicle by pressing the START STOP button while fully pressing down on the brake pedal. If you leave your vehicle idling for an extended period of time, it automatically shuts down. Before the engine shuts down, a message appears in the information display, allowing you to override the shutdown feature. Press the button again to switch the engine off.

Note: Your intelligent access transmitter must be inside the vehicle for the ignition to start. Keyless warning alert sounds the horn twice when you exit the vehicle with the intelligent access transmitter and the vehicle is on.

11| PRO TRAILER BACKUP ASSIST*

The Pro Trailer Backup Assist control knob helps assist you in backing up your trailer. Turn the knob in the direction you want the trailer to go and the system will take over the steering to get it there. This system will not work until you set it up. See the *Pro Trailer Backup Assist Quick Start Guide* in your Owner's Manual portfolio for the complete setup and operation details.

12| INTEGRATED TRAILER BRAKE CONTROLLER*

Assists in smooth and effective trailer braking by powering the trailer's electric or electric-over-hydraulic brakes with a proportional output based on the towing vehicle's brake pressure.

Use the GAIN adjustment buttons to increase or decrease the braking feature's power output to the trailer.

Adjust the GAIN by pressing the GAIN + or GAIN - button to increase or decrease the setting to the starting point you desire.

A GAIN setting of 6.0 is a good starting point for heavier loads.

To test the adjusted GAIN setting:

- In a traffic-free environment, tow the trailer on a dry, level surface at a speed of 20-25 mph (30-40 km/h) and squeeze the manual control lever completely.
- If the trailer wheels lock up (the tires squeal), reduce the GAIN setting. If the trailer wheels turn freely, increase the GAIN setting.
- The proper GAIN setting is at the point just below trailer wheel lockup. If towing a heavier trailer, trailer wheel lockup may not be attainable even with the maximum GAIN setting of 10.

For more information, please refer to the *Towing* chapter in your Owner's Manual.

TRAILER SWAY CONTROL*

Trailer sway control applies your vehicle brakes at individual wheels and, if necessary, reduces engine power.

If the trailer begins to sway, the stability control light flashes and the message TRAILER SWAY REDUCE SPEED appears in the information display. The first thing to do is slow down your vehicle, then pull safely to the side of the road and check for proper tongue load and trailer load distribution. For more information, please refer to the *Towing* chapter in your Owner's Manual.

13| HILL START ASSIST

Hill Start Assist keeps your vehicle stationary long enough to move your foot from the brake pedal to the accelerator pedal when your vehicle is on a slope. The system will activate automatically on any slope that will cause significant vehicle rollback.

14| STABILITY CONTROL WITH RSC® (ROLL STABILITY CONTROL™)

Stability Control with RSC automatically activates when you start your engine and helps you keep control of your vehicle when on a slippery surface. The electronic stability control portion of the system helps avoid skids and lateral slides, while the roll stability control helps avoid a vehicle rollover. The traction control system helps avoid drive wheel spin and loss of traction.



INSTRUMENT PANEL (continued)

15| FOUR-WHEEL DRIVE (4WD)*

Operates in four modes for a variety of road conditions:

2H (4X2) mode delivers power to the rear wheels only. It is appropriate for normal, on-road driving on dry pavement and provides the best fuel economy.

4A (4X4 AUTO) mode provides electronic control four-wheel drive with power delivered to all four wheels, as required, for increased traction. This mode is appropriate for all on-road driving conditions, such as dry road surfaces, wet pavement, snow and gravel.

4H (4X4) mode provides electronically locked four-wheel drive power to all four wheels. We do not recommend this mode for use on dry pavement, and this is only intended for severe winter or off-road conditions, such as deep snow, ice or shallow sand.

4L (4X4) mode provides electronically locked four-wheel drive when you need extra power at reduced speeds. Use this mode for off-road, low-speed operation, such as climbing steep grades, pulling a boat out of the water and more. Refer to the *Four-Wheel Drive (4WD)* chapter in your *Owner's Manual*.

16| ACTIVE PARK ASSIST WITH PARALLEL PARKING, PERPENDICULAR PARKING, PARALLEL PARK OUT ASSIST*

Detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) when you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle or enter traffic. To use active park assist for parallel parking, press the button once. To use the system for perpendicular parking, press the button twice. Use the park out assist feature when your vehicle is at rest in a parallel parking space.

Press the button, and then follow the instructions on the display. Use your direction indicator to signal from which side of your vehicle you want to exit the parking space. After the system directs your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot. To stop the parking procedure, grab the steering wheel or press the button again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

17| SELECTABLE DRIVE MODES

The Selectable Drive Mode System optimizes steering, handling and powertrain response. See page 19 of this guide for more information.

18| AUTO-START-STOP

The system helps reduce fuel consumption by automatically stopping and restarting the engine when your vehicle has stopped. The engine restarts automatically when you release the brake pedal.

You can switch the system off by pressing the Auto-Start-Stop button located on the center console. The button illuminates. This only deactivates the system for the current ignition cycle. Press the button again to restore Auto-Start-Stop function.

The system automatically enables every time you start your vehicle if all of the necessary conditions are met. Please see the *Unique Driving Characteristics* chapter of your *Owner's Manual* for more information.



19| 360 CAMERA*

The 360 degree camera system consists of front, side and rear cameras. The system allows you to see what is directly in front of or behind your vehicle, provides a cross traffic view in front of and behind your vehicle, allows you to see a top-down view of the area outside your vehicle, and gives you visibility around your vehicle during parking maneuvers.

The camera button is located on the instrument panel and allows you to toggle through different camera views.

When in park (P), neutral (N) or drive (D), only images from the front cameras are displayed. Press the camera button to display the front camera image on the display screen.

When in reverse (R), only images from the rear cameras are displayed. When you shift into reverse (R), the rear view camera image automatically shows on the display screen.

Additional camera views may be available for vehicles with specific features. See your *Owner's Manual* for additional information.



SYNC^{®*}

GETTING STARTED WITH YOUR SYNC SYSTEM

SYNC is an in-vehicle communications system that works with your *Bluetooth* enabled phone and portable media player.

SUPPORT

SYNC support is available from your Ford regional website:

www.syncmyride.com (United States)

www.syncmyride.ca (Canada)

DRIVING RESTRICTIONS

For your safety, certain features are speed-dependent and restricted when your vehicle is traveling over 3 mph (5 km/h).

SYNC OWNER ACCOUNT

A SYNC owner account is essential for keeping up with the latest software downloads available for SYNC. It also provides you access to customer support for any questions you may have.

PAIRING YOUR PHONE WITH SYNC

Note: If you have SYNC 3*, see the pairing instructions on page 12.

Wirelessly pairing your phone with SYNC allows you to make and receive hands-free calls.

TO PAIR YOUR PHONE FOR THE FIRST TIME

1. Make sure to switch on your phone's *Bluetooth* feature before starting the search. See your device's manual if necessary.
2. Press the *Settings* button.
3. Select *Bluetooth* from the menu.
4. Press the *OK* button.
5. Select the option to add. This starts the pairing process.
6. When a message to begin pairing appears in the audio display, search for SYNC on your device.
7. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your phone. Your phone is now paired and the display indicates that the pairing was successful. If you are prompted to enter a PIN on your device, enter the PIN displayed on the screen. The display indicates when the pairing is successful.

Depending on your phone's capability and your market, the system may prompt you with questions, such as setting the current phone as the primary phone and downloading your phone book.

PHONE CONTROLS

You can use the phone buttons on your steering wheel to answer, reject or end a call.

HELPFUL HINTS

- When using voice commands, make sure the interior of your vehicle is as quiet as possible. Wind noise from open windows and road vibrations may prevent the system from correctly recognizing spoken commands.
- Before giving a voice command, wait for the system announcement to finish, followed by a single tone. Any command spoken before this does not register with the system.
- Speak naturally, without long pauses between words.
- You can interrupt the system at any time while it is speaking by pressing the voice button. You can cancel a voice session by pressing and holding the voice button.

PHONE MENU

Through your phone menu, you can access your call history, phone book, text messages, phone settings and system settings. Press the phone button to enter the phone menu. Then you can scroll through the menu and select the feature you want to view.

SYNC MOBILE APPS

The system enables voice and steering wheel control of SYNC AppLink-enabled smartphone apps. When an app is enabled through AppLink, you can control the main features of the app through voice commands and steering wheel controls.

Note: You must pair and connect your smartphone to SYNC to access AppLink. iPhone users need to connect the phone to the USB port. Android users need to connect the phone to SYNC using *Bluetooth*.

USING SYNC TO ACCESS DIGITAL MEDIA

 
Using the system, you can access media from your iPod, *Bluetooth* device, and most USB drives. SYNC also supports audio formats, such as MP3, WMA, WAV and ACC.

MEDIA SOURCES

Press the *AUX* button to view your sources. Use the directional arrows and *OK* button to select your source. You can also use the steering wheel audio controls.

SYNC® 3*

SYNC 3 allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your *Bluetooth* enabled phone, the touchscreen provides easy interaction with audio, multimedia, climate control, navigation, and your phone's SYNC 3 compatible apps.

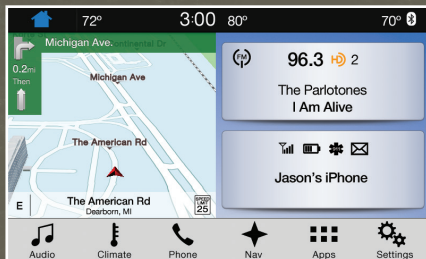

SYNC CONNECT*

With a SYNC® Connect-equipped vehicle, you can use FordPass® to locate your vehicle and remotely access vehicle features such as start, lock and unlock and vehicle status including fuel level and approximate mileage. You can also schedule specific times to remotely start your vehicle so it's ready to hit the road as soon as you are. Your vehicle is capable of providing a Wi-Fi hotspot if you have a vehicle hotspot data plan. SYNC Connect is an optional feature on select vehicles. FordPass® is available through a free download via the Apple App Store® or Google Play™. Message and data rates may apply. Services may be limited by mobile phone network coverage area.



SMARTPHONE CONNECTIVITY

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone over a USB connection.

When you use Apple CarPlay or Android Auto, you can:

- Make calls.
- Send and receive messages.
- Listen to music.
- Use your phone's voice assistant.

For more information, refer to the SYNC 3 chapter in your *Owner's Manual* for details.

PAIRING YOUR PHONE WITH SYNC 3

Hands-free calling is one of the main features of the system. Once you pair your phone, you can access many options using the touchscreen or voice commands. Pair your *Bluetooth* enabled phone with the system before using the functions in hands-free mode.

 
Switch on *Bluetooth* on your device to begin pairing. See your phone's manual if necessary.

1. Select *Add Phone*.
2. Follow the on-screen instructions.
3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle's make and model as it displays on your phone.
5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, visit owner.ford.com.

GET IN TOUCH USING YOUR TOUCHSCREEN

Use the Feature Bar at the bottom of the touchscreen to access the many features of SYNC 3.

PHONE

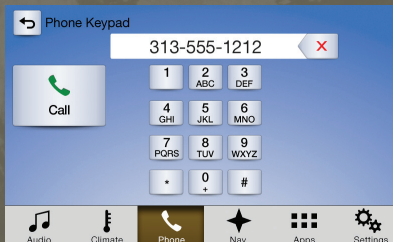


After pairing your phone, you can access more phone-dependent features:

- Recent call lists.
- Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- Phone settings: Pair another phone, and set ring tones and alerts.
- Text messages.
- Do not disturb: Send all calls to your voicemail, and set all ring tones and alerts to silent mode.

Note: Use the voice commands to make calls. Say, "Call James at home" or "Dial 555-1212". You can use the touchscreen to place calls as well. Refer to the SYNC 3 chapter in your *Owner's Manual* for complete details.

*if equipped

 NAVIGATION*

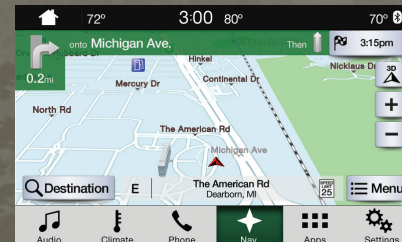

Select one of two ways to find your destination:

- Destination mode lets you key in a specific address or use a variety of search methods to locate where you want to go.
- Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).

Refer to the SYNC 3 chapter in your *Owner's Manual* for complete details.

SET A DESTINATION

Press *Destination* on your touchscreen and then press *Search*. Enter a street address, intersection, city or a Point Of Interest (POI).

After you choose your destination, press *Start*. The system uses a variety of screens and visible prompts to guide you to your destination.

During your route, you can press the maneuver arrow icon on the map if you want the system to repeat the previous route guidance instructions.

The navigation map shows your estimated time of arrival, remaining travel time and the distance to your destination.

NAVIGATION MENU

When you are on your route, you can change your touchscreen view. Touch *Menu* and then select *Screen View* to select from these options:

- Full Map.
- Highway Exit Info displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- Turn List shows all of the available turns on your current route.

SYNC® 3* (continued)

CLIMATE



Access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger.

SET YOUR TEMPERATURE

- Touch the *Climate* icon on the touchscreen.
- Use voice commands to change your settings, like "Climate set temperature 72 degrees" and SYNC 3 makes that adjustment.
- You can also use the ▲ or ▼ buttons on the touchscreen.

AUDIO



Press the *Audio* icon on the touchscreen and select *Sources*. Choose from AM, FM, SiriusXM*, CD, USB, *Bluetooth* Stereo or Apps.

SET YOUR RADIO PRESETS

- Tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

USE SYNC 3 TO ACCESS DIGITAL MEDIA

Bluetooth Stereo and USB allow you to access media that you store on your *Bluetooth* or USB device such as music, audio books or podcasts.

To use a UBS connection, plug your device into a USB port, select *Sources* and then choose *USB*. You can even create random playlists using the *Shuffle* function.

APPS

The system supports the use of certain types of apps such as through a USB or *Bluetooth-enabled* device. iPhone users need to connect the phone to the USB port. Each app gives you different touchscreen options depending on the app's content. To find new apps, use the voice command "Find new apps".

For more information, refer to the SYNC 3 chapter in your *Owner's Manual* or visit owner.ford.com.

For support, visit the website or call the toll-free number. See the inside back cover of this guide for details.

*if equipped



COMFORT

FOLDING THE SECOND-ROW SEATS

Folding the second-row outboard seat

Pull up the handle on the side of the seat cushion (A) by the door to fold the seat backrest. To increase cargo space, the seat backrest also moves forward and the seat cushion moves forward and down.

Folding the second-row center seat

Pull the handle on the upper right of the seat backrest (B) to release the folding seat latch.

To return the second-row seats to an upright seating position

Lift the seat backrest toward the rear of the vehicle. Rotate the seat backrest until you hear a click, locking it in the upright position.

ADJUSTING THE SECOND-ROW SEAT FOR EASY ENTRY*

You can move the outboard seats forward to allow access to the third-row seats. Pull the handle on the upper right of the seat backrest (C) to tilt the seat forward. You can then slide the complete seat forward.

To return the seat to an upright seating position

To return the seat to the seating position, slide the seat rearward while pulling down on the seatback until the latch fully engages.

To move the seat farther back, pull the lever under the front of the seat and slide it backward.



POWER EASY ENTRY*

The E-Z entry seat allows for easier entry and exit to and from the third-row seat. Press the button on the rear quarter trim panel to unlock the rear of the seat. Push the seat forward to access the third-row seat.

*if equipped



COMFORT (continued)

POWER HEAD RESTRAINTS*

You can press the button on the overhead console to fold the third-row outermost head restraints.

POWER SEATS*

You can adjust your seat in a variety of ways to help find the best fit for you. The seat controls are on the side of the seat. Using these controls, you can adjust seat height, recline, lumbar support,* and the head restraint.* See the *Power Seats* chapter in your *Owner's Manual* for more information.

POWER FOLDING SECOND-ROW BENCH SEATS*

The control for the power folding second-row bench seats is located on the quarter trim panel.

Press the top button to fold the left seatback.

Press the middle button to fold the middle seatback.

Press the bottom button to fold the right seatback.

To return the seatback to the original position, rotate the seatback up until the seatback latches in the upright position. The seatback clicks when it is locked into position.

POWER FOLDING THIRD-ROW SEAT*

The 60/40 split-folding bench seat uses a power-activated seatback release. Fold one side or both down for more flexibility. The controls are on the left-hand rear quarter trim panel, accessible from the liftgate area.

Note: Make sure you unfasten all of the seatbelts and fold the head restraints down first.

To lower

1. Press the corresponding control(s) or use the middle control to fold both seats down.
2. To return the seatback(s) to the original position(s), press the corresponding control(s) again.

See the *Seats* chapter in your *Owner's Manual* for more information.



Note: The power folding seats operate for 10 minutes after you switch the ignition off. The transmission must be in park (P) and the liftgate or liftgate glass must be open.

 
POWER RECLINE


The third-row power recline buttons are on the quarter trim panel on each side of the vehicle.


MOONROOF*

The moonroof control is on the overhead console. It has a one-touch open and close feature. To stop its motion during the one-touch operation, press the control a second time.

To open the moonroof, press and release . The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the control again. To close the moonroof, press and release .

To vent the moonroof, press and release .

The sunshade automatically opens with the moonroof. You can also open the sunshade with the moonroof closed. To open the sunshade, press and release . The sunshade stops short of its fully opened position for the comfort of rear passengers. To open the sunshade fully, press the control again.

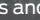To close the sunshade, press and release . The sunshade does not fully close unless the moonroof glass is fully closed.

DRIVER ALERT

The system automatically monitors your driving behavior using various inputs including the front camera sensor. If the system detects that your driving alertness is reduced below a certain threshold, the system will alert you using a chime and a message in the information display. Switch the system on or off using the information display.

BLIS® (BLIND SPOT INFORMATION SYSTEM) AND CROSS TRAFFIC ALERT*

This system is designed to aid you in detecting vehicles that may have entered the detection area zone. The detection area is on both sides of your vehicle and trailer, extending rearward from the exterior mirrors to the end of your trailer. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse(R).

When a trailer is attached and you have set up a Blind Spot Trailer, the system becomes active when driving forward above 6 mph (10 km/h). Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

Note: NEVER use BLIS or cross traffic alert as a replacement for using the interior and exterior mirrors and looking over your shoulder before changing lanes. The systems are not replacements for careful driving. Use both systems only as an assist.



CONVENIENCE

AUTOMATIC TRANSMISSION

Putting your vehicle in or out of gear:

- A. Fully press down the brake pedal.
- B. Move the transmission selector to the desired gear.
- C. When you are finished driving, come to a complete stop.
- D. Move the transmission selector to park (P).

Note: Always put your vehicle in Stay in Neutral mode when entering an automatic car wash. Failure to do this could result in vehicle damage not covered by warranty. For more information, please see the Transmission chapter of your Owner's Manual.

ELECTRONIC LIMITED SLIP DIFFERENTIAL*

The system is used to control slip across the differential to provide added traction during various drive conditions. The system directs torque, enabling you to drive over terrain and road conditions that a conventional axle cannot.

The system is active all the time and requires no input from the driver. Under normal conditions, the Electronic Limited Slip Differential functions like a standard rear axle.

LOCKING FUNCTION*

Engaging the locker system electronically locks the differential, causing both half shafts to turn at the same rate and increasing traction during off-road events. The locker mode may automatically disengage based on certain conditions such as vehicle speed.

LANE KEEPING SYSTEM*

The system notifies you to stay in your lane through the steering system and the display screen when the front camera detects an unintentional drift out of your lane is likely to occur. The system automatically detects and tracks the road lane markings using a camera mounted behind the interior rear view mirror.

The system has optional menu settings available. The system stores the last known selection for each of these settings. Adjust the settings to enable one of the three modes:

Alert: Sends vibration pulses to the steering wheel.

Aid: Provides steering torque to help direct the driver to steer the vehicle back into its lane.

Alert + aid: Provides an assistance steering torque input toward the lane center. If your vehicle continues drifting out of the lane, the system provides a steering wheel vibration.

To switch this system on or off, press the button located on the center console.

SELECTABLE DRIVE MODES

The Selectable Drive Mode System optimizes steering, handling and powertrain response.

Changing the drive mode automatically changes the functionality of the electronically power-assisted steering system, the electronic stability control and traction control, the electronic throttle control and the driveline settings.

The system automatically tailors your vehicle configuration for each mode you select on the column shifter, instrument panel or the DRIVE MODE rotary dial.

Note: Mode changes are not available when the ignition is off or when the transmission is in reverse (R).

On-Road Modes

Normal: For everyday driving.

Sport: For aggressive on-road driving.

Tow Haul: For improved transmission operation when towing a trailer or a heavy load.

Eco: For efficient and responsible driving.

Off-Road Modes

Snow/Wet (4X2) or Grass/Gravel/Snow (AWD): For firm surfaces covered with loose or slippery material such as packed snow, ice, water, grass or a thin layer of gravel or sand.

Sand: For soft, dry sand or deep gravel.

Mud/Rut: For muddy, rutted, soft or uneven terrain.

Note: Certain drive modes are not available based on gear shifter position. If a mode is unavailable due to a system fault, the mode defaults to Normal.

INTELLIGENT ACCESS*

You can unlock and lock the vehicle without taking the key out of your pocket or purse when your intelligent access key is within 3 feet (1 meter) of your vehicle. To unlock, touch the unlock sensor on the back of any door handle for a brief period and then pull on the door handle, being careful to not touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on any door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.





CONVENIENCE (continued)

ADVANCED CARGO MANAGEMENT SYSTEM*

A storage compartment is located in the floor of the rear cargo area. The cover operates on friction hinges. Lift up on the handle to open the cover. To close, lower the cover. With the advanced system, there is an additional cover with an extra storage compartment underneath. This cover also operates on friction hinges. Lift up on the handle to open the cover. To close, lower the cover.

FORWARD DIVIDER*

To move the board into the divider position, lift up on the handle and position the board vertically at a 90° angle. The board can be put in any position between a 0° and a 90° angle.

CARGO SHELF*

Note: Before moving the board into the shelf or rear barrier (bulkhead) position, you may need to flip down the hooks.


 
To move the board into the shelf position, lift the board and move it to the horizontal position. Once the board is horizontal, insert the forward-facing nubs into the hooks on either side.


For the short wheel base system, it is necessary for the second panel located toward the front of the vehicle to be raised up when the seats are folded down. For the long wheel base system, it is necessary for the second panel located toward the front of the vehicle to be raised up.

REAR BARRIER (BULKHEAD POSITION)*

To move the board into the rear barrier or bulkhead position, lift the board and move it to the vertical position. Once the board is vertical, insert the rearward-facing nubs into the hooks on either side.

REMOTE START*

 Remote start allows you to start the engine from outside your vehicle using your key. To start, press  and then press  twice within three seconds.

When inside, you must press the push-button ignition switch on the instrument panel once while applying the brake pedal before driving your vehicle. To switch the engine off from outside the vehicle after using your remote start, press  once.

An LED on the key provides status feedback of remote start or stop commands:

Solid green: The remote start or extension was successful.

Solid red: The remote stop was successful and the engine is off.

Blinking green: Request failed or status not received.

Blinking green: Status incomplete.

AMBIENT LIGHTING*

To access and make adjustments, use your touchscreen.

1. Press the **Settings** icon then select **Ambient Lighting**.
2. Touch the color you desire.
3. Move the color up or down to increase or decrease the intensity.

To switch the feature on or off, touch the selected color again.

POWER LIFTGATE OPERATION*

You can open your power liftgate three different ways:

- Push the control on the instrument panel.
- Press the control on your remote entry transmitter twice within three seconds.
- Press the liftgate control on the inside of the liftgate handle.

To close with the rear cargo area button, press and release the control on the left rear quarter trim panel. To open the liftgate window, press the control near the rear view camera. For more information, refer to the *Power Liftgate* chapter in your *Owner's Manual*.



HANDS-FREE LIFTGATE OPERATION

1. Stand behind your vehicle, facing the liftgate.
2. Move your foot in a single kick motion, without pausing, under and away from the rear bumper detection area.
3. The liftgate opens or closes.

Note: Allow the power system to open the liftgate. Manually pushing or pulling the liftgate may activate the system's obstacle detection feature and stop the power operation, reverse its direction or damage the system.

LIFTGATE WINDOW*

To open the liftgate window, press the release button above the license plate. You can then pull the liftgate glass upward.

MEMORY FEATURE*

The memory function saves and recalls the positions of the driver seat, power mirrors, tilt and telescoping steering column* and adjustable pedals.* Use the memory controls on the driver seat to program and then recall memory positions.

To program

1. Switch on the ignition.
2. Move the memory features to the positions you desire.
3. Press and hold the 1 button until you hear a tone.

Use this same procedure to set the second and third positions using the 2 and 3 buttons.

You can now use these controls to recall the set memory positions.

You can also program your memory seats to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved positions. See the *Seats* chapter in your *Owner's Manual* for more details.



CONVENIENCE (continued)

SECURICODE™ KEYLESS ENTRY KEYPAD

Lock or unlock the doors without a key using the keypad near the driver window. It is invisible until you touch it and then it lights up so you can see and touch the appropriate buttons.

Enter the factory-set, 5-digit entry code or your personal code. This code is on the owner's wallet card in the glove box.

To unlock all doors, enter the factory-set code or your personal code, then press **3•4** within five seconds. With intelligent access, press any button on the keypad once to unlock all doors. You do not need to enter a code first.

To lock all doors, press and hold **7•8** and **9•0** at the same time with the driver door closed. You do not need to enter the keypad code first.

POWER RUNNING BOARDS*

When active, the running boards extend down and out when you open the doors. They return to the stowed position after a two-second delay when you close the doors.

To enable and disable the power running board feature, refer to the *Information Displays* chapter in your *Owner's Manual*.

Note: Do not use the running boards, front and rear hinge assemblies, running board motors, or the running board underbody mounts to lift the vehicle when jacking. Always use proper jacking points. See your *Owner's Manual* for details.

SELECTSHIFT® AUTOMATIC TRANSMISSION*

Gives you the ability to change gears up or down as you desire without a clutch. The SelectShift Automatic transmission feature has Progressive Range Selection (PRS) and Manual (M) mode.

Progressive Range Selection gives you the ability to lockout gears from the automatic shifting range. This may provide you with an improved driving experience. With the transmission selector in drive (D), push the (–) button to active PRS. The available and selected gears display on the instrument cluster. Push the (–) button again to lock out gears beginning with the highest gear. Push the (+) button to unlock gears and allow the transmission to shift to higher gears.

Pushing the (M) button on the selector will allow you to manually select the gear you desire. Press the (+) button to upshift and the (–) button to downshift. Once in Manual mode, press (M) again to deactivate manual control.

SelectShift does not automatically upshift, even if the engine is approaching the RPM limit. It must be shifted manually by pushing the (+) button.

See the *Transmission* chapter of your *Owner's Manual* for more information.

ESSENTIAL INFORMATION

REFUELING

When fueling your vehicle:

1. Put your vehicle in park (P) and switch the ignition off.
2. Open the fuel filler door.
3. Slowly insert the fuel filler nozzle into the fuel system up to the first notch, and leave the nozzle inserted until you are done pumping.
4. Wait at least 10 seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.

When refueling the vehicle fuel tank from a fuel container, use the plastic funnel located in the spare wheel storage tray. Clean the funnel or properly dispose of it.

Note: Do not use aftermarket funnels, as they will not work with the Easy Fuel system and may cause damage. You can purchase extra funnels from an authorized dealer if you choose to dispose of the funnel.

FUEL TYPE AND FUEL TANK CAPACITY

Your Expedition's fuel tank capacity is 23 .2 gallons (87.8 liters). Expedition EL models have a fuel tank capacity of 28 .3 gallons (107.1 liters). We recommend regular unleaded gasoline with a minimum pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Do not use E85 (ethanol), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

TIRE PRESSURE MONITORING SYSTEM

Your vehicle is equipped with a Tire Pressure Monitoring System (TPMS) that displays a low tire pressure warning light when one or more of your tires are under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Tire Pressure Monitoring System* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

LOCATION OF SPARE TIRE AND TOOLS

The temporary spare tire is under the vehicle, just forward of the rear bumper. The temporary spare is for emergency use only and you should replace it as soon as possible. The jack and tools are under the access panel in the floor behind the rear seat. Make sure to switch off the power running boards* prior to jacking, hoisting or towing your vehicle. Refer to the *Wheels and Tires* chapter in your *Owner's Manual*.