

JE5J 19G217 RA

April 2018

Second Printing

Quick Reference Guide

Fusion Energi

Litho in U.S.A.

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



#### United States

Ford Customer Relationship Center

1-800-392-3673 (FORD)

(TDD for the hearing impaired: 1-800-232-5952)

owner.ford.com




#### Canada

Ford Customer Relationship Centre

1-800-565-3673 (FORD)

(TDD for the hearing impaired: 1-888-658-6805)

ford.ca

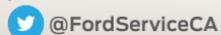

#### WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

# FUSION ENERGI

## Quick Reference Guide

TWO THOUSAND EIGHTEEN



# COMMONLY USED VOICE COMMANDS

Press the voice button  on your steering wheel and then say:



## Basic Commands

- » Main menu
- » Go back
- » Cancel
- » List of commands
- » Next page
- » Previous page
- » Help



## Phone

- » Phone list of commands
- » Pair phone
- » Call <name> <on cell/ at home/at work>
- » Dial <number>
- » Listen to message

<sup>1</sup> SiriusXM may not be available in all markets. Activation and a subscription are required.  
<sup>2</sup> if equipped



## Climate

- » Set temperature to <# degrees>



## Audio

- » AM <530-1710>
- » FM <87.9-107.9>
- » USB
- » Sirius <0-233><sup>1</sup>
- » <Sirius channel name><sup>1</sup>
- » Bluetooth audio



## Navigation<sup>2</sup>

- » Navigation list of commands
- » Drive Home
- » Find <a POI/an address/an intersection>
- » Show route
- » Where am I?
- » SiriusXM Traffic and Travel Link 1 list of commands
  - Show <traffic/weather map/ 5-day forecast/fuel prices>



## Apps

- » List mobile apps
- » Find new apps
- » <App Name>
- » <App Name> Help

## Learn More About Your New Vehicle

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



[owner.ford.com](http://owner.ford.com)  
(U.S.)



[ford.ca](http://ford.ca)  
(Canada)



- 4–5 Instrument Panel
- 6 Quick Tips
- 7–9 Energy Saving Tips
- 10–12 SYNC 3
- 13 Fusion Energi Features
- 14–15 Comfort
- 16–17 Function
- 18–19 Essential Information

Some features may not be available in your area. Refer to your Owner's Manual, visit the website or call the toll-free number for more information.

For U.S. customers: visit [owner.ford.com](http://owner.ford.com) or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit [syncmyride.ca](http://syncmyride.ca) or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).

## Left Vehicle Information Display

Using the left steering wheel-mounted controls, press the up and down arrow buttons to scroll through and highlight the options; use the right arrow button to enter a sub-menu.

» The Display/Trip Mode provides hybrid-specific information through the following screens:

• Engage • Empower • MyView

- MyView lets you choose what information you wish to display. Select **Change MyView** in the **Options** menu to scroll through the choices.

» The **Brake Coach** appears after the vehicle has come to a stop. It coaches you to brake in a manner that maximizes the amount of energy returned through the regenerative braking system. The displayed percentage indicates your regenerative braking efficiency, with 100% representing the maximum amount of energy recovery. You can switch this feature ON and OFF in the information display.

## Steering Wheel Controls

### Audio Controls

Press **VOL +** or **-** to increase or decrease volume levels. Press **⏮** or **⏭** to access the previous or next radio station preset, CD track or preset satellite radio channel\*.

### Voice Controls

Press  to access voice recognition.

Press  to answer a call.

Press  to exit phone mode or end a call.

## Service Engine Soon Light

 Lights briefly when you switch the ignition on. If it remains on or blinks after you start your vehicle, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

# INSTRUMENT PANEL

## Right Vehicle Information Display

Use the right steering wheel-mounted controls to access a variety of features:

» **Fuel Economy** provides ways you can monitor your energy use:

• Efficiency Leaves • Fuel History • Coach

» **Entertainment, Phone and Navigation\*** information is also available. Refer to the **SYNC 3** chapter in your *Owner's Manual* for more information.

## Electric Parking Brake

The electric parking brake switch replaces the conventional hand brake. To use, pull the switch up. The brake system warning lamp lights to confirm that you applied the electric parking brake. You can release the electric parking brake manually by switching on the ignition, pressing the brake pedal and then pressing the electric parking brake switch. Refer to the *Brakes* chapter of your *Owner's Manual* for more details.

## Rear View Camera

Provides a video image of the area behind the vehicle. The image appears in the touchscreen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

## Automatic Transmission

To place your vehicle in gear from park (P):

1. Fully press down and hold the brake pedal through shifts out of park (P).
2. Rotate the outer ring of the transmission selector clockwise from park (P), until the desired gear illuminates on the transmission selector.
3. Release the brake pedal and the transmission remains in the selected gear.

**NOTE** When entering an automatic car wash, always shift to neutral (N). If you are exiting the vehicle before the car wash, Stay in Neutral Mode is available. Push the "L" or "S" button depending on vehicle configuration to enable Stay in Neutral Mode. Please follow the commands on the information display.

When you switch the vehicle off or open the driver door with the driver seatbelt unbuckled, the vehicle automatically shifts in to park.

## EV Button

Choose to drive in electric-only mode for city driving, save your plug-in power for later or let the system adjust your power mode to suit the current driving conditions.

\*if equipped

\*if equipped

5

# QUICK TIPS

## Fusion Energi Cluster

Use your 5-way steering controls to scroll through your menu choices. Select the following screens from the **Display/Trip** and **Fuel Economy** menus to help improve your fuel efficiency.

**Engage:** Provides separate gauges for engine power and high voltage battery power and instantaneous fuel economy gauge.

**Empower:** Provides a power demand gauge with an engine on and off threshold, and an instantaneous fuel economy gauge.

**MyView:** Lets you choose your preferred information to create your own custom display.

**Efficiency Leaves:** Shows your short-term fuel economy. The more leaves you have, the more efficiently you are driving!

**Fuel History:** From left to right, this view includes an instantaneous fuel economy gauge, historical fuel economy data and average fuel economy.

**Coach:** Provides a comparison of your recent acceleration efficiency, braking and cruising behavior. The more blue you see, the better you are driving!

## Charging the High Voltage Battery

The charge port is between the front left side door and front left wheel well.

To charge the high-voltage battery:

1. Put the vehicle in park (P) and power down the vehicle.
2. With your thumb, press in and release the indentation located on the charge port door and the door will rotate open.
3. Plug the charging coupler into the charge port receptacle on your vehicle. Make sure the button clicks confirming that you have completely engaged the coupler.
4. Verify that the cord acknowledgment feature activates. This indicates the beginning of a normal charge cycle.
5. If using a 240-volt charging station, follow the instructions on the charge station to begin the charging process



# ENERGY SAVING TIPS

## HELP MAXIMIZE YOUR FUEL ECONOMY BY UTILIZING THESE FEW TIPS

### 1. Use smooth acceleration and braking.

According to the United States Department of Energy, aggressive driving can lower your gas mileage by up to 33 percent at highway speeds and 5 percent in the city.

### 2. Carry the bare essentials.

The Department of Energy estimates that an extra 100 pounds (45 kilograms) in your vehicle could reduce your fuel economy by up to 2 percent.

### 3. Seasonal fuel makes a difference.

Winter fuel contains slightly less energy than summer fuel, so the fuel blend you fill up with can impact your efficiency.

### 4. Idling burns fuel, too.

You can burn up to half a gallon (1.9 liters) of fuel per hour when idling. Minimize your morning warm-up and parking lot waits to get the most out of filling your tank.

### 5. Avoid extreme temperatures.

Find a shady or sheltered spot to help keep your lithium-ion battery operating efficiently, and minimize the amount of energy required to heat or cool your cabin.

### 6. Use accessories wisely.

Heated seats, the rear defroster, the air conditioner and other power features draw electrical energy. When you operate your accessories, you may notice that the gasoline engine needs to start. Choose **Accessory Power** when configuring your **MyView** screen to see how much electricity you are using to power your vehicle's accessories.

### 7. Check your tires.

Proper tire inflation can help you improve your fuel economy by up to 3.3 percent, according to the Department of Energy, while under-inflation could lower your fuel economy by 0.3 percent for every 1 psi drop in pressure of all four tires. Check your vehicle's door sticker for recommended cold tire inflation pressure.

## ENERGY SAVING TIPS CONTINUED

### MyFord Mobile with Embedded Modem

Download or view on the Web at [MyFordmobile.com](http://MyFordmobile.com), the SYNC Connect app lets you know the status of your charge and upcoming charge schedules at any time, from anywhere.

You can also use the app to:

- » See your charge status.
- » Set charging schedules.
- » Precondition your vehicle.
- » Remote start your Fusion Energi.
- » Find charge points and more.

To register your smartphone, visit [MyFordmobile.com](http://MyFordmobile.com) to download your free app.

### Choose Your Energy Mode

Your vehicle contains driver-selectable EV modes controlled through the EV button on the center console. Choose to drive in electric-only mode for city driving, save your plug-in power for later or let the system adjust your power mode to suit the current driving conditions.

- » **Auto EV:** automatically selects between gasoline and electric motor use, staying in electric mode when possible and running the engine when needed. This mode is the only one available when the vehicle depletes the plug-in power.
- » **EV Now:** puts your vehicle into an all-electric driving experience.
- » **EV Later:** puts the vehicle into hybrid mode, reserving the plug-in power for later.

### Plug-in Power

- » Fusion Energi has a 120-volt convenience cord that is located under the luggage compartment floor covering. This cord allows you to charge the battery using a standard, 120-volt, grounded, three-pronged household outlet. See your *Owner's Manual* for details.

**NOTE** Do not use the 120-volt convenience cord with an extension cord or adapter.

- » For faster charge times, the available 240-volt charging station provides a full charge in approximately 2.5 hours. See your dealer for more information.

### Charge Settings



- » Your system has Energi-specific screens that display your vehicle power settings.
- » Press the **Charge Settings** button on the **settings** menu to see this screen. It displays the charge settings options for your vehicle.

### Cabin Conditioning

Get the most miles out of every charge by conditioning your vehicle while it is plugged in. Set your cabin temperature when you set your planned departure time (GO Time) to use energy from your home (or charging station) instead of your vehicle's battery. The system limits cabin conditioning to 15 minutes before your GO Time.

**NOTE** Cabin conditioning effectiveness may be reduced by extreme outside temperatures or when using 120-volt charging.

### Value Charging

With the Value Charging feature, you can take advantage of off-peak electricity rates. The vehicle optimizes the charge schedule to be complete by the next GO Time. This button illuminates when Value Charge is the charge mode selected for the presently detected charge profile.

### ECO Cruise

This feature saves vehicle energy by relaxing acceleration compared to standard cruise control. For example, your vehicle may temporarily lose speed when going uphill. You can switch it on or off in the information display, through the **Driver Assist** section of the **Settings** menu.

# SYNC® 3\*



## Using SYNC 3

The SYNC 3 system allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your *Bluetooth* wireless technology-enabled phone, the touchscreen provides easy interaction with audio, multimedia, climate control, navigation, and your phone's SYNC 3 compatible apps.

## Create Your SYNC Owner Account

Create your account by visiting the website. Call the toll-free number for more information.

In the United States:  
[owner.ford.com](http://owner.ford.com)  
1-800-392-3673

In Canada:  
[syncmyride.ca](http://syncmyride.ca)  
1-800-565-3673

## Pairing Your Cell Phone with SYNC 3

Pair your *Bluetooth* wireless technology-enabled phone with the system before using the functions in hands-free mode. Switch on *Bluetooth* on your device to begin pairing. See your phone's manual if necessary.

1. Select **Add Phone**.
2. Follow the on-screen instructions.
3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle's make and model as it displays on your phone.
5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, visit [owner.ford.com](http://owner.ford.com).

\*if equipped



## Phone

After pairing your phone, you can access more phone-dependent features:

- » Recent call lists.
- » Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- » Phone settings: Pair another phone, and set ring tones and alerts.
- » Text messages.

**NOTE** Use the voice commands to make calls. Say, "**Call James at home**" or "**Dial 555-1212**". You can use the touchscreen to place calls as well. Refer to the SYNC 3 chapter in your *Owner's Manual* for complete details.

### Do Not Disturb Mode

Touch the **Do Not Disturb** button to send all calls directly to your voicemail. All ringtones and alerts are silent.

\*if equipped



## Navigation\*

Select one of two ways to find your destination:

- » **Destination mode** lets you key in a specific address or use a variety of search methods to locate where you want to go.
- » **Map mode** shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).

### Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a Point Of Interest (POI).

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.

During your route, you can press the maneuver arrow icon on the map if you want the system to repeat the previous route guidance instructions.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

## Navigation Menu



When you are on your route, you can change your touchscreen view. Touch **Menu** and then select **Screen View** to select from these options:

- » **Full Map**.
- » **Highway Exit** displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- » **Turn List** shows all of the available turns on your current route.



## Climate



Touch the **Climate** icon on the touchscreen to access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger. Say, “**Climate Set temperature 72 degrees**” and SYNC 3 makes the adjustment.

You can also use the ▲ or ▼ buttons to change the temperature setting.



## Audio

Press the **Audio** icon on the touchscreen and select **Sources**. Choose from AM, FM, SiriusXM\*, CD, USB, *Bluetooth* Stereo or Apps.

\*if equipped

### Set Your Radio Presets



- » Tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station, and then the audio returns.
- » Two preset banks are available for AM and three banks for FM. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

### Use SYNC 3 to Access Digital Media

Play all of your favorite music from phones, flash drives and other devices.

Plug your device into a USB port, select **Sources** and then choose **USB**. You can even create random playlists using the **Shuffle** function.



## Apps

The system supports the use of certain types of apps through a USB or *Bluetooth*-enabled device. Each app gives you different on-screen options depending on the app's content. To find new apps, use the voice command, “**Find mobile apps**”.

For more information, refer to the SYNC 3 chapter in your *Owner's Manual* for details.

For support, visit the website or call the toll-free number. See the inside back cover of this guide for details.

## Smartphone Connectivity\*

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone over a USB connection. When you use Apple CarPlay or Android Auto, you can:


- » Make calls.
- » Send and receive messages.
- » Listen to music.
- » Use your phone's voice assistant.

For more information, refer to the SYNC 3 chapter in your *Owner's Manual* for details.

# FUSION ENERGI FEATURES

## Silent Key Start

When starting your vehicle, your gas engine may not start because your hybrid-electric vehicle is equipped with silent key start. This fuel-saving feature allows your vehicle to be ready to drive without requiring your gas engine to be running. Look for the **Ready to Drive** indicator light  in your information display. When the light displays, your vehicle has started and is ready to drive.

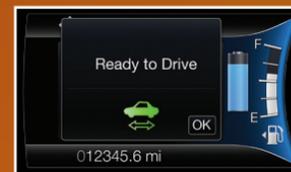

## Unique Driving Characteristics

When you charge your vehicle, you add electrical energy that is then used to propel the vehicle in plug-in power mode. The estimated electric range is shown in blue next to gasoline range at the bottom of the right information display.

The system maximizes the use of electric-only operation in plug-in power mode. System conditions may require engine operation; however, the system uses plug-in power whenever possible.

When your vehicle depletes its plug-in power, the system automatically switches to hybrid mode, using both the gasoline engine and electric motor, to power your vehicle and maximize fuel economy.

**NOTE** It is normal for your electric range estimate to vary from charge to charge, due to changes in average energy usage. Driving style, drive route, extreme temperatures and use of the climate controls can affect your energy usage.

## High-voltage Lithium-ion Battery System

The battery pack does not require regular service maintenance. It is in the rear cargo area. Make sure you keep the vented battery compartment, located on the rear package shelf and between the rear speakers, free of any potential obstructions.

The battery pack should be serviced only by an authorized technician. Improper handling can result in personal injury or death. Refer to your *Owner's Manual* for more details.

# COMFORT

## Intelligent Access Transmitter\*



You can unlock and lock the vehicle without taking the key out of your pocket or purse when your intelligent access key is within 3 feet (1 meter) of your vehicle. To unlock, touch the unlock sensor on the back of the door handle for a brief period and then pull on the door handle, being careful not to touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.

## Memory Function\*

Use the memory controls located on the driver door to program and then recall memory positions. Move the seats, mirrors and power steering column to the positions you desire. Press and hold the **SET** button until you hear a single tone. Then press the desired preset button until you hear a single tone. Repeat this process to set the second memory position.

You can also program your memory seats to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move to your saved positions. See the *Seats* chapter in your *Owner's Manual* for more details.

## Remote Start\*

Remote start allows you to start the engine from outside your vehicle using your remote transmitter.

To start, press and then press twice within three seconds. You must press the push button ignition switch on the instrument panel once while applying the brake pedal before driving your vehicle.

To switch off the engine from outside the vehicle after using your remote start, press once.

If your vehicle is equipped, it provides feedback through the LEDs on your key. A solid green light indicates a successful remote start. A solid red light indicates that the remote stop has taken place while a blinking red light means that remote stop or start has failed. The key blinks green when it is waiting for a status update.

*\*if equipped*

## Driver Seat with Easy Entry and Exit\*

With the easy entry and exit feature on in the information display, your driver seat automatically moves rearward up to two inches (five centimeters) when you switch the ignition off. The driver seat returns to the previous position when you switch the ignition on. See the *Information Display* chapter in your *Owner's Manual* for more details.

## Adaptive Cruise Control\*

This system, when on or in use, uses radar to scan the road ahead and detect vehicles in front of you. The system automatically brakes or accelerates to maintain set speed or follows the flow of traffic when speeds are below your set speed. In addition to selecting a set speed, you may also choose between four different gap settings that control the following distance to a vehicle in front of you. The system can also bring your vehicle to a complete stop in stop-and-go traffic.

The controls for engaging and controlling the adaptive cruise control system are on the lower-left side of your steering wheel.

**NOTE** Please refer to the *Using Adaptive Cruise Control* chapter of your *Owner's Manual* for system limitations and for detailed instructions on engaging the system.

## Keyless Starting

Allows you to start your vehicle by fully pressing the brake pedal or clutch and the **START STOP** button. Press the button again to switch the engine off.

*\*if equipped*

## Tilting Head Restraints



Your vehicle's front head restraints have a tilting feature for extra comfort.

### To Tilt the Head Restraint

Adjust the seatback to an upright driving or riding position. Pivot the head restraint forward toward your head to the position you desire. When you tilt it to the forward-most position, tilt it forward once more to release it to the upright position.

## Ambient Lighting\*

Lights various places, with a choice of colors.

*Access Using Your Touchscreen and Make Your Adjustments*

1. Press the **Settings** icon then select **Ambient Lighting**.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

# FUNCTION

## Lane Keeping System\*



Notifies you to stay in your lane through the steering system and the instrument cluster display when the front camera detects that an unintentional drift out of your lane is likely to occur. The system automatically detects and tracks the road lane markings using a

camera mounted behind the interior rear view mirror.

Press the button on the steering wheel stalk to switch the system on or off.

**NOTE** The system stores the on or off setting until you manually change it, unless the system detects a MyKey. Set your preferred system settings by mode and intensity through your information display screen. Refer to the *Information Displays* chapter in your *Owner's Manual* for more details on how to change your settings. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information on the Lane Keeping System.

## Driver Alert\*

Automatically monitors your driving behavior using various inputs including the front camera sensor. If the system detects that your driving alertness level reduces below a certain threshold, then the system alerts you with a tone and a message in the cluster display. Press **OK** on the steering wheel to clear the warning.

## Pre-Collision Assist\*

The Pre-Collision Assist system uses a radar sensor and a camera sensor to scan the road ahead to detect stationary vehicles,

vehicles moving in the same direction as yours and upright pedestrians in your driving path. The system provides an audible and visual alert, brake support, and active braking in order to help the driver reduce impact damage or avoid a crash completely. The system provides support at speeds above approximately 3 mph (5 km/h) and support for pedestrians at speeds up to 50 mph (80 km/h).

For specific details on using the system, adjusting the system alert sensitivity and familiarizing yourself with the system limitations and warnings, please refer to the *Pre-Collision Assist* chapter in your *Owner's Manual*.

**NOTE** You are responsible for controlling your vehicle at all times. The system does not relieve you of your responsibility to drive with due care and attention. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.

## BLIS® (Blind Spot Information System) and Cross Traffic Alert\*

BLIS aids you in detecting vehicles that may have entered into your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and cross traffic alert turn on an indicator light in the exterior mirror on the side of the vehicle from which the approaching vehicle is coming. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

**NOTE** NEVER use BLIS or cross traffic alert as a replacement for using the interior and exterior mirrors and looking over your shoulder before changing lanes. The systems are not replacements for careful driving. Use both systems only as an assist.

## Configurable Daytime Running Lamps\*

When you switch the feature on in the information display, daytime running lamps turn on when you are driving, the lighting control is in the autolamps position  and the headlamps are off. You can switch the Configurable Daytime Running Lamps feature ON or OFF using the information display controls. See the *Lighting* chapter in your *Owner's Manual* for complete information.

## Parking Aids\*

With front and rear parking aids and side sensing systems, a warning tone sounds if there is an obstacle near either bumper or near the sides of your vehicle. The warning tone increases in frequency as the object gets closer. The front sensors are active when the gearshift is in any position other than park (P) and the vehicle is traveling at a low speed; the rear sensors activate when the vehicle is in reverse (R) and is traveling less than 3 mph (5 km/h). The side sensors are active when the transmission is in any position other than park (P).

**NOTE** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and system limitations.

## Active Park Assist with Parallel Parking, Perpendicular Parking, and Parallel Park Out Assist\*

The system detects an available parallel or perpendicular parking space and automatically steers your vehicle into the space

\*if equipped

(hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly guides you to park your vehicle.

- » Press the button once for parallel parking or twice for perpendicular parking.
- » The system displays a message and a corresponding graphic to indicate that it is searching for a parking space.
- » Use the direction indicator to select which direction you want to begin searching, either to the left- or right-hand side of your vehicle.
- » When the system finds a suitable space, it displays a message and a tone sounds. Stop your vehicle and follow the instructions on the screen.
- » When you believe your vehicle is properly parked, or you hear a solid tone accompanied by a display message, bring your vehicle to a complete stop.

## Parallel Park Out Assist

Press the Active Park Assist button once while your vehicle is at rest in a parallel parking space to use Parallel Park Out Assist. The system displays a message instructing you to use the direction indicator to select which side of your vehicle you want to exit the parking space. The system determines the front and rear clearance of your vehicle and automatically steers your vehicle out of a parallel parking space while you control the accelerator, gearshift and brakes. The system visually and audibly guides you to enter traffic. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.

\*if equipped



# ESSENTIAL INFORMATION

## Fuel Tank Capacity and Fuel Info

Your vehicle has a fuel tank capacity of 14.0 gallons (53 liters). Use only regular UNLEADED fuel with an octane rating of 87 or higher, with no more than 15% ethanol. Do not use ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.

## Transmission Operation

Due to the technologically advanced, electronically-controlled continuously variable transaxle, you may not feel shift changes like those of a non-hybrid vehicle. Since the transmission controls the engine speed, your engine's speed may seem elevated at times. This is normal hybrid operation and helps deliver fuel efficiency and performance.

## Refueling



Put your vehicle into park (P) and switch the ignition off. Unlock the fuel door by pressing the fuel button on the driver door to open the fuel filler door. It could take up to 15 seconds for the fuel door to pop open. Insert the fuel pump nozzle up to the first notch on the nozzle and begin fueling. Wait five to ten seconds after pumping fuel before removing the fuel filler nozzle. Press the center rear edge of the fuel filler door to close. The fuel door latches closed.

**NOTE** Make sure you close the fuel door securely after refueling. If the fuel door remains open and the vehicle is driven, the check engine light  in the instrument cluster may come on. Please see your *Owner's Manual* for complete details.

**NOTE** When using a portable fuel container, only use the funnel that comes with your vehicle. Do not use aftermarket funnels as they will not work with the system and may cause damage. Refer to the *Fuel and Refueling* chapter of your *Owner's Manual* for more information.

## Fuel Freshness Mode

If you mainly operate your vehicle in plug-in power mode using electricity from plugging in without refueling, the gasoline in the fuel tank becomes stale due to aging. Stale gasoline can damage the engine and fuel system. Your vehicle automatically operates in fuel freshness mode if you do not refill your vehicle with fresh fuel within an 18-month period.

Refer to the *Fuel and Refueling* chapter in your *Owner's Manual* for more information.

## Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

## Tire Pressure Monitoring System

Your vehicle displays a low tire pressure warning light  in your instrument cluster when one or more of your tires are under-inflated. If this happens, stop and check your tires as soon as possible, then inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter of your *Owner's Manual* for more information.



## Tire Sealant and Inflator Kit

Your vehicle comes with a temporary mobility kit located under the load floor of the luggage compartment.

It includes an air compressor to reinflate the tire and a sealing compound in a canister that seals most punctures caused by nails or similar objects. Refer to the *Wheels and Tires* chapter in your *Owner's Manual* for more details.

## Towing Your Fusion Energi

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

## Automatic Engine Shutdown\*

With intelligent access\*, this feature automatically shuts down your vehicle if it has been idling for an extended period of time. The ignition also turns off in order to save battery power. Before your vehicle shuts down, a message appears in the information display allowing you to temporarily override the shutdown feature.

**NOTE** You cannot permanently switch off the automatic shutdown feature. When you switch it off temporarily, it turns on at the next ignition cycle. See the *Starting and Stopping the Engine* chapter of your *Owner's Manual* for more details.

\*if equipped

