



This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

#### UNITED STATES WARRANTY CUSTOMERS:

Download a FREE electronic copy of the most up-to-date Warranty Guide by visiting [owner.ford.com](http://owner.ford.com).

Select **Owner / SYNC & Vehicle Features /Owner Manuals**.

Limo/Livery/Hearse vehicles: To view and download your Warranty Guide, visit the Fleet website [fleet.ford.com/limo](http://fleet.ford.com/limo).

Select **Limo/Livery/Hearse Warranty Information**.

#### UNITED STATES

Ford Customer Relationship Center

1-800-392-3673 (FORD)

(TDD for the hearing impaired: 1-800-232-5952)

[owner.ford.com](http://owner.ford.com)

 @FordService

#### CANADA

Ford Customer Relationship Center

1-800-565-3673 (FORD)

(TDD for the hearing impaired: 1-888-658-6805)

[ford.ca](http://ford.ca)

 @FordServiceCA



July 2018  
First Printing  
Litho in U.S.A.  
KG1J19G217 AA



# 2019 TAURUS



QUICK REFERENCE GUIDE

**LEARN MORE ABOUT YOUR NEW VEHICLE**

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



owner.ford.com



ford.ca

**WARNING**

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

## Table of Contents

Commonly Used Voice Commands	<b>3</b>
Instrument Panel	<b>4 - 5</b>
SYNC	<b>6 - 7</b>
SYNC 3	<b>8 - 10</b>
Comfort	<b>11 - 13</b>
Convenience	<b>14 - 15</b>
Function	<b>16 - 17</b>
Essential Information	<b>18 - 19</b>



## Commonly used Voice Commands

**GLOBAL**

- Cancel
- Help
- Main Menu <sup>1</sup>
- List of Commands <sup>1</sup>

**AUDIO**

- Sirius Channel <channel number> <sup>1,2</sup>
- AM <frequency number> <sup>1</sup>
- FM <frequency number> <sup>1</sup>
- Bluetooth Audio
- USB

**NAVIGATION** <sup>1,3</sup>

- Find an Address
- Find a \_\_\_
- Find a POI
- Find an Intersection
- Find the Nearest \_\_\_
- Show Previous Destinations
- Drive Home
- Cancel Route
- Show Route
- Where Am I?

**PHONE**

- Pair Phone <sup>1</sup>
- Call <contact name>
- Call <contact name> at <location>
- Dial <number> <sup>1</sup>
- Delete
- Clear

**CLIMATE** <sup>1</sup>

- Set Temperature \_\_\_

**SIRIUSXM TRAVEL and TRAVEL LINK** <sup>1,2</sup>

- Show Traffic
- Show Weather Map
- Show Fuel Prices
- Show 5-Day Forecast

**APPS**

- Mobile Apps
- List Mobile Apps
- Find Mobile Apps
- <App Name>

Some services may not be available in your area. For more information, refer to the SYNC 3 chapter in your *Owner's Manual*, visit the website or call the toll-free number.

**For U.S. customers:** visit [owner.ford.com](http://owner.ford.com) or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

**For Canadian customers:** visit [syncmyride.ca](http://syncmyride.ca) or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).

<sup>1</sup> only available with SYNC 3    <sup>2</sup> SiriusXM may not be available in all markets. Activation and a subscription are required.

<sup>3</sup> if equipped

# Instrument Panel



## 1 CRUISE CONTROL

To set your cruise control speed:

- A. Press and release **ON**.
- B. Drive to the desired speed.
- C. Press and release **SET** then take your foot off the accelerator pedal.

After you set your speed, you can press the **SET** toggle up or down to adjust the cruise speed incrementally. Release the control when you reach the desired speed. To disable, press down and release **OFF**.

## ADAPTIVE CRUISE CONTROL\*

Adaptive Cruise Control adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the gap controls on the steering wheel. Refer to the *Cruise Control* chapter in your *Owner's Manual* for safety information, more details and limitations.

## 2 LEFT VEHICLE INFORMATION DISPLAY\*

Use the left-hand information display controls located on your steering wheel to scroll through important vehicle information. You can also personalize various vehicle settings to match your preferences. Refer to the *Information Displays* chapter in your *Owner's Manual* for more information.

## 3 SERVICE ENGINE SOON LIGHT

 Lights briefly when you switch on the ignition. If it remains on or is blinking after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion (avoid heavy

acceleration and deceleration) and contact your authorized dealer as soon as possible.

## 4 RIGHT VEHICLE INFORMATION DISPLAY\*

Displays various information about your vehicle systems. Use the right-hand information display controls on your steering wheel to scroll, highlight and make minor adjustments within a selected menu. Refer to the *SYNC 3* chapter in your *Owner's Manual* for more information.

## 5 STEERING WHEEL CONTROLS

Press **VOL +** or **-** to adjust volume levels.

Press **SEEK ▲** or **▼** to access the previous or next media selection.

Press  to access voice recognition.

Press  to connect or disconnect a phone call.

## 6 KEYLESS STARTING\*

You can start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again, without applying the brake, to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine shuts down automatically. Before this happens, a message appears in the information display, allowing you time to override the shutdown feature. If you try to leave the vehicle when it is still on, the horn will sound twice..

## 7 HAZARD WARNING CONTROL

## 8 LANE KEEPING SYSTEM\*

 The button is located on the center console, under a trim door. Please see page 16 for more information.

\*if equipped

## SYNC®

SYNC is an in-vehicle communications system that works with your *Bluetooth* wireless technology-enabled phone and portable media player.

### SUPPORT

The SYNC support team is available to help you with any questions you cannot answer on your own.

In the United States, call 1-800-392-3673.

In Canada, call 1-800-565-3673.

### DRIVING RESTRICTIONS

For your safety, certain features are speed-dependent and restricted when your vehicle is traveling over 3 mph (5 km/h).

### WHY DO YOU NEED A SYNC OWNER ACCOUNT?

A SYNC owner account lets you receive the latest software updates, and if you have questions, you'll get free customer support. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

### PAIRING YOUR PHONE WITH SYNC

Hands-free calling is one of the main features of SYNC. While the system supports a variety of features, many are dependent on your phone's functionality.

#### To Pair Your Phone for the First Time:

- 1) Make sure that your vehicle is in park (P) and switch your ignition and radio on.
- 2) Press the phone button . When the display indicates there is no phone paired, press the OK button.
- 3) When the display shows Find SYNC, select OK. You can then put your phone into *Bluetooth* discovery mode. See your device's manual if necessary.
- 4) When prompted on your phone's display, enter the six-digit PIN provided by SYNC on the radio display. The display indicates when the pairing is successful.

Depending on your phone's capability and your market, the system may prompt you with questions, such as setting the current phone as the primary phone (the phone SYNC automatically tries to connect with first upon vehicle start-up) and downloading your phone book. To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter in your *Owner's Manual*.

### USING VOICE COMMANDS

Every time you want to give SYNC a voice command, you must first press the voice button . When prompted, speak your voice command.

#### Tips

- Make sure the interior of the vehicle is as quiet as possible.
- After pressing the voice button , wait until after the tone sounds and "Listening" appears in your vehicle's display before saying a command.
- Speak naturally, without long pauses between words.
- At any time, you can interrupt the system while it is speaking by pressing the voice button .

#### Using Your Phone with SYNC

Most phones with *Bluetooth* wireless technology support the following functions:

- Answering an incoming call.
- Ending a call.
- Using privacy mode.
- Dialing a number.
- Redialing.
- Call waiting notification.
- Caller ID.

Other features, such as text messaging using *Bluetooth* and automatic phone book download, are phone-dependent features. To check your phone's compatibility, see your phone's manual or visit your regional Ford website.

#### Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button . When prompted, give a voice command.

For example, you could say, "Call Jake Smith at home". You can also make phone calls by saying, "Dial", then verbally saying the phone number. When SYNC confirms the number, say, "Dial" to place the call.

#### Answering Incoming Calls

Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

#### Using SYNC to Access Digital Media

You can access and play music from your digital music player over your vehicle's speaker system using the system's media menu or voice commands. To do so, plug your device into one of the USB ports. Press the voice button  and say, "USB". You can now control the media on your device using voice commands. You can also sort and play your music by specific categories, for example artist and album.

## SYNC® 3\*

The SYNC 3 system allows you to interact with a variety of features using the touchscreen and voice commands. By integrating with your *Bluetooth* wireless technology-enabled phone, the touchscreen provides easy integration with many of your vehicle's features.



### USING THE TOUCHSCREEN

To operate the touchscreen, you can simply touch the item or option that you want to select. The button changes color when you select it.

The touchscreen allows you quick access to all of your comfort, navigation, communication and audio options. Using the status and feature bar, you can quickly select the feature you want to use.

### SYNC OWNER ACCOUNT AND UPDATING YOUR SYSTEM

A SYNC owner account is essential for keeping up with the latest software downloads available for SYNC, provides you access to customer support for questions you may have and allows you to maintain your account permissions.

To create a SYNC owner account, visit the website [owner.ford.com](http://owner.ford.com) (United States) or [syncmyride.ca](http://syncmyride.ca) or [syncmaroute.ca](http://syncmaroute.ca) (Canada).

Once you have your SYNC owner account, you can log in to visit the SYNC software update page to update SYNC using a USB. You can also update your SYNC system over Wi-Fi. For information on how to update your system, please see the SYNC 3 chapter in your *Owner's Manual*.

### HOME SCREEN

You can reach the Home screen by pressing the  button on the main screens. The Home screen displays features such as audio, phone and settings.

### USING VOICE RECOGNITION

Using voice commands allows you to keep your hands on the wheel and focus on what is in front of you. To activate the SYNC 3 voice commands, press the voice button  on the steering wheel and wait for the prompt. You can find the available voice commands in the SYNC 3 chapter in your *Owner's Manual* or in the Commonly Used Voice Commands in this guide.

### PAIRING YOUR PHONE FOR THE FIRST TIME

Pair your *Bluetooth* wireless technology-enabled phone with SYNC before using the functions in hands-free mode. Switch on *Bluetooth* on your device to begin pairing. See your phone's manual if necessary.

To add a phone:

- 1) Select Add a Bluetooth Device.
- 2) Follow the on-screen instructions.

- 3) A prompt alerts you to search for the system on your phone.
- 4) Select your vehicle's make and model as it displays on your phone.
- 5) Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
- 6) The touchscreen indicates when the pairing is successful.
- 7) Your phone may prompt you to give the system permission to access information. To check your phone's compatibility, see your phone's manual or visit the website.

To pair subsequent phones, please see the SYNC 3 chapter in your *Owner's Manual*.

### USING YOUR CONNECTED PHONE

You can use voice commands to make, receive, accept and reject phone calls. Text messages can also be sent and received through the system. Please refer to the SYNC 3 chapter in your *Owner's Manual* for more information

about using your connected phone with the system, including voice commands and screen selections.

### SMARTPHONE CONNECTIVITY

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone. When you use Apple CarPlay or Android Auto, you can:

- » Use your phone's voice assistant.
- » Send and receive messages.
- » Listen to music.
- » Make calls.



Apple CarPlay and Android Auto disable some SYNC 3 features. Most Apple CarPlay and Android Auto features use mobile data.

\*if equipped

## SYNC® 3\* *(continued)*

### AUDIO

You can select from a variety of entertainment options, including AM/FM radio, USB, *Bluetooth* Stereo and Apps.



### Presets

To set a new preset, tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station and then returns. There are two preset banks available for AM, three banks for FM and three banks for SiriusXM\*. To access additional presets, tap the preset button.

### CLIMATE

You can adjust climate control features, including the temperature, airflow direction, fan speed and other climate features. You can also use voice commands to make climate adjustments.

### APPS

AppLink enables voice, steering wheel and touchscreen control of certain smartphone apps. Once an app is running through AppLink, you can control the main features of the app through voice commands and steering wheel controls.

### NAVIGATION\*

Your navigation system is comprised of two modes. Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available). 2D city maps show detailed outlines of buildings, visible land use and landscape features. Destination allows you to set a destination through search, previous destinations or preset home, work and favorite destinations.

Select **Destination** on the screen, then select **Search**. You can search for a destination using a street address, partial address, city, point of interest, intersection or latitude and longitude. Once you have chosen your destination, press **Start**. The system uses a variety of screens and prompts to guide you to your destination.

### SETTINGS

Under the **Settings** menu, you can access and adjust the settings for many of the system features. To access additional settings, swipe the screen left or right.

*\*if equipped*

## Comfort

### CLIMATE CONTROLLED FRONT SEATS\*

Touch the heated seat symbol  to cycle through the various heat settings and off. More indicator lights indicate warmer settings.

Touch the cooled seat symbol  to cycle through the various cooling settings and off. More indicator lights indicate cooler settings.

### HEATED STEERING WHEEL\*

Press the heated steering wheel symbol  to switch the system on and off.

### HEATED REAR SEATS\*

The controls are on the back of the center console. Press the heated seat symbol  to cycle through the various heat settings and off. More indicator lights indicate warmer settings.

**Note:** You must switch the ignition on to use this feature.

*\*if equipped*

### MEMORY FUNCTION\*

The memory function allows a one-touch recall of personalized memory features including the driver seat, power mirrors and adjustable pedals\*. Use the memory controls on the driver seat to program and then recall memory positions. To program a position, switch the ignition on. Adjust the memory features to your desired positions. Press and hold the desired preset button until you hear a single tone. You can now use these controls to recall the set memory positions. You can also program your memory seat to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved positions.

See the *Seats* chapter in your *Owner's Manual* for more details.

### TILTING HEAD RESTRAINTS\*



The front head restraints tilt for extra comfort. To tilt the head restraint, do the following:

- 1) Adjust the seatback to an upright driving or riding position.
- 2) Pivot the head restraint forward toward your head to the desired position.

After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, untilted position.

## Comfort *(continued)*

### UNIVERSAL GARAGE DOOR OPENER\*



Your driver visor has a built-in wireless transmitter that replaces the common handheld garage door opener. You can program this system to security systems, entry gates and home or office lighting.

Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual* for programming instructions and additional information on how to use this device.

### MOONROOF\*



The moonroof controls are on the overhead console and have a one-touch open and close feature. To stop its movement during one-touch operation, press the control a second time. Press and release the **SLIDE** control to open or close the moonroof. Press and release the **TILT** control to vent the moonroof. The sunscreen can be manually opened or closed when the glass panel is closed.

*\*if equipped*

### DUAL ZONE AUTOMATIC CLIMATE CONTROL



Press **AUTO** to switch on automatic operation. Adjust to select your desired temperature. Fan speed, air distribution, air conditioning operation and outside or recirculated air automatically adjust to heat or cool the vehicle, maintaining the desired temperature.

Press **DUAL** to adjust the temperature setting on the passenger side.

To return to a single temperature, hold down **AUTO** for more than two seconds.

### MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can use MyKey to activate speed restrictions, limit volume levels and more. For more information, refer to the *MyKey* chapter in your *Owner's Manual*.

*\*if equipped*

### AMBIENT LIGHTING\*



To access and make adjustments:

- 1) Press the Settings icon then Ambient Lighting.
- 2) Touch the desired color.
- 3) Use the scroll bar to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

## Convenience

### SECURICODE™ KEYLESS ENTRY KEYPAD\*

The SecuriCode keypad is near the driver window and illuminates when touched. The keypad allows you to lock or unlock the doors without a key. You can operate the keypad with the factory set, five-digit entry code found on the owner's wallet card in the glove box or by using your personal code. You must press each number within five seconds of each other.



If your vehicle is equipped with memory positions, you can set unique personal entry codes. Each code recalls the corresponding driver memory positions.

#### To Unlock All Doors

Enter the factory-set code or your personal code, then press 3-4 within five seconds.

#### To Lock All Doors

Press and hold 7-8 and 9-0 at the same time (with the driver door closed). You do not need to enter the keypad code first.

See the *Doors and Locks* chapter in your *Owner's Manual* for more information on how to use SecuriCode.


### REMOTE START\*

Remote start allows you to start the engine from outside your vehicle using your key.

To start, press and then press twice within three seconds. If your vehicle has keyless starting, you must press the push button ignition switch on the instrument panel while applying the brake pedal. If your vehicle has an integrated keyhead transmitter, you must switch the ignition on before driving your vehicle. You can also turn your vehicle off from outside after a remote start by pressing once.



### INTELLIGENT ACCESS\*

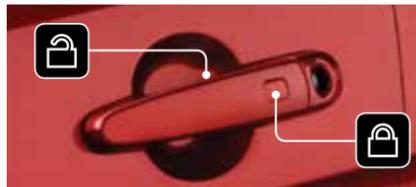

You can unlock and lock the vehicle without taking the key out of your pocket or purse when your intelligent access key is within 3 feet (1 meter) of your vehicle. To unlock, touch the unlock sensor on the back of the door handle for a brief period and then pull on the door handle, being careful to not touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.

\*if equipped

### AUTOWIPERS\*

If switched on, your wipers automatically turn on when moisture is present on the windshield. Use the rotary control to adjust the sensitivity of the autowipers. When you select low sensitivity, the wipers operate when the sensor detects a large amount of water on the windshield. When you select high sensitivity, the wipers operate when the sensor detects a small amount of water on the windshield. See the *Information Displays* chapter in your *Owner's Manual* for details.

**Note:** Make sure you switch this feature off before entering a car wash.

### GLOBAL OPENING\*

Use the remote control to operate the windows with the ignition off. After you unlock your vehicle, press and hold the remote control unlock button to open the windows. Release the button once movement starts. Press the lock or unlock button to stop movement.

**Note:** Only the front windows operate during global opening.

\*if equipped

### AUTOLAMPS



When the lighting control is in the autolamps position the headlamps automatically turn on in low-light situations or during inclement weather. The headlamps remain on for a period of time after you switch the ignition off. Use the information display controls to adjust the period of time that the headlamps remain on. If you switch the autolamps on, you cannot switch the high beams on until the system turns the low beams on. See the *Lighting and Information Displays* chapters in your *Owner's Manual* for details.

### POWER ADJUSTABLE FOOT PEDALS\*



You can find the control on the left side of the steering column. Press and hold the appropriate side of the control to move the pedals farther or closer to you.

Press to move the pedals closer to you.


Press to move the pedals away from you.

Adjust the pedals only when your vehicle is in park (P).

**Note:** Never use the controls while your feet are on the accelerator and brake pedals and the vehicle is moving.

## Function

### BLIND SPOT INFORMATION SYSTEM (BLIS®) AND CROSS TRAFFIC ALERT\*

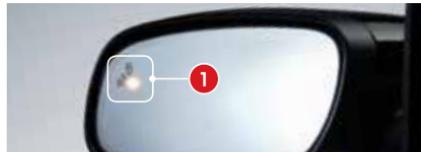

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). Both systems turn on an indicator light **1** in the exterior mirror on the side of the vehicle from which the approaching vehicle is coming. Cross traffic alert also sounds tones and displays messages to warn you from which direction vehicles are approaching.

**Note:** *Visibility aids do not replace the need to watch where the vehicle is moving.*

Refer to the *Owner's Manual* for safety information, more details and system limitations.

### COLLISION WARNING SYSTEM\*



This system alerts the driver of certain collision risks. Radar sensors detect if vehicles ahead of you, moving in the same direction, may be a collision risk. The system alerts you with an audible tone and a red warning light **2** appears above the instrument panel. If the risk of collision increases, the system then increases brake support to help reduce collision speed.

Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

### LANE KEEPING SYSTEM\*



When you switch the system on and the system detects an unintentional drift out of your lane is likely to occur, the system notifies or assists you to stay in your lane through the steering system and information display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert mode is selected.

You can switch the system on or off by pressing the button on the Center Console.

Refer to the *Driving Aids* chapter of your *Owner's Manual* for system operation and limitations.

*\*if equipped*

### ACTIVE PARK ASSIST\*

The active park assist system can detect an available parallel parking space and automatically steer the vehicle into that space (hands-free). The system instructs the driver using visual, audible or a combination of both visual and audible instructions with regard to braking, accelerating and shifting gears in order to park the vehicle safely. To switch the system on and off, press the  button.

To stop the parking procedure, grab the steering wheel or press the button again.

### REAR PARKING AID\*

This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when traveling at less than 3 mph (5 km/h). The warning tone increases in frequency as the object gets closer.

**Note:** *For complete information, refer to the Parking Aids chapter of your Owner's Manual. Visibility aids do not replace the need to watch where the vehicle is moving. The driver is always responsible for controlling the vehicle, supervising the system and intervening, if required. Refer to your Owner's Manual for safety information, more details and limitations.*

*\*if equipped*



### SELECTSHIFT® AUTOMATIC TRANSMISSION\*

With SelectShift automatic transmission, you can use the paddles on your steering wheel or gear shift to change gears without a clutch.

Pull the (+) paddle on the steering wheel or push the (+) button on the gearshift lever to activate SelectShift.

To change gears with gearshift lever controls:

- Push the toggle switch (+) to upshift.
- Push the toggle switch (–) to downshift.

To change gears with steering wheel paddles:

- Pull the right paddle (+) to upshift.
- Pull the left paddle (–) to downshift.

For more information and system operation, please see the *Transmission* chapter in your *Owner's Manual*.



## Essential Information

### FUEL TANK CAPACITY AND FUEL INFO

Your vehicle has a 19.0 gallon (71.9 liter) fuel tank capacity.

If your vehicle has a yellow fuel filler cap, a yellow bezel around the fuel filler inlet, a yellow fuel filler housing or a yellow E85 label on the fuel tank filler door, you have a flex fuel vehicle and can use either regular unleaded fuel, E85 ethanol fuel or any mixture of the two.

Add at least half a tank of fuel when switching between regular unleaded fuel or E85 and drive the vehicle immediately after refueling for at least 5 miles (8 kilometers) to allow the vehicle to adapt to the change in ethanol concentration. If you use E85 fuel exclusively, we recommend filling the fuel tank with regular unleaded gasoline at each scheduled oil change.

See the *Fuel and Refueling* chapter in your *Owner's Manual* for complete flex fuel usage details.

For non-flex fuel vehicles, we recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing.

### REFUELING

When refueling your vehicle:

- 1) Make sure the ignition is switched off.
- 2) Fully open the fuel door.
- 3) Insert the fuel filler nozzle into the fuel system up to the first notch, and leave the nozzle inserted and resting against the cover of the fuel tank until you are done pumping.
- 4) Make sure you keep the fuel pump nozzle in a level position when refueling or it may impact the flow of the fuel. Improper position can also cause the fuel pump to shut off before the fuel tank is full.
- 5) When you finish refueling, slowly raise and remove the fuel pump nozzle. Fully close the fuel door.



If you are refilling your tank from a fuel container, make sure you use the fuel filler funnel included with your vehicle. Using an aftermarket funnel may not work with the capless system and could cause damage to your vehicle. For more information and for your fuel filler funnel location, please see the *Fuel and Refueling* chapter in your *Owner's Manual*.

### TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the *Towing the Vehicle on Four Wheels* section in the *Towing* chapter in your *Owner's Manual*.

### TIRE SEALANT AND INFLATOR KIT\*

The kit is under the load floor of the luggage compartment. It includes an air compressor to inflate the tire and a sealing compound in a canister, which effectively seals most punctures caused by nails or similar objects. This kit provides a temporary tire repair, allowing you to drive your vehicle up to 120 miles (200 kilometers) at a maximum speed of 50 mph (80 km/h) to reach a tire service location.

**Note:** *The temporary mobility kit canister contains enough sealant compound for one tire repair only. See your authorized Ford dealer for additional replacement sealant canisters.*

For vehicles with a spare wheel and tire assembly, refer to the *Wheels and Tires* chapter in your *Owner's Manual*.

### TIRE PRESSURE MONITORING SYSTEM (TPMS)

When one or more of your tires are under-inflated, your vehicle turns on the low tire pressure warning light (ⓘ) in the instrument cluster. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Wheels and Tires* chapter in your *Owner's Manual* for more information.

### ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance.

To receive roadside assistance in the United States, call **1-800-241-3673**. In Canada, call **1-800-665-2006**.

### REAR WINDOW BUFFETING

You may hear a pulsing noise when only one of the windows is open. Lower the opposite window slightly to reduce this noise.



\*if equipped