

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



United States
Lincoln Client Relationship Center
1-800-521-4140
(TDD for the hearing impaired: 1-800-232-5952)
owner.lincoln.com

Canada
Lincoln Client Relationship Centre
1-800-387-9333
(TDD for the hearing impaired: 1-888-658-6805)
lincolncanada.com

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



August 2019
First Printing
Litho in USA
LA1J 19G217 AA

2020 NAUTILUS



Quick Reference Guide



WARRANTY INFORMATION:

Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

Download a FREE electronic copy or order one FREE printed copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of owner.lincoln.com. (United States)

For Canada, visit lincolncanada.com/warranty.

FOR LIMO/LIVERY/HEARSE VEHICLES:

View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, fleet.ford.com/limo. (United States only)

U.S. Roadside Assistance

We're here to help you out no matter where, no matter when.

Call 24/7 when you need assistance.

1-800-521-4140

- Locked out
- Drained battery
- Flat tire
- Out of gas



Canada Roadside Assistance

We're here to help you out no matter where, no matter when.

1-800-387-9333 or download the **Sykes4Lincoln App**

- Towing
- Tire service
- Battery boosting
- Key service
- Fuel (up to 10 litres)
- Other roadside services



U.S. Lincoln Concierge

The Lincoln Concierge is your connection to all things Lincoln.

Empowered to handle your calls from beginning to end.

1-800-521-4140

- Provides owner benefit details
- Talks through features



Canada Roadside Assistance

Owner's Name

Vehicle Identification Number

See Warranty Guide for complete details.

Download the Sykes4Lincoln Roadside Assistance App for access to your roadside assistance services.



For future quick reference, complete the Roadside Assistance Identification Card and place it in your wallet.

UNITED STATES

Lincoln Way App

CANADA

Sykes4Lincoln Roadside App

The Lincoln Way App and the Sykes4Lincoln Roadside App are available via the Apple App Store® or Google Play™

The Lincoln Way*

Our unique range of services is designed to make your Lincoln ownership effortless.

Lincoln Pickup & Delivery

Schedule your Pickup & Delivery appointment through the Lincoln Way™ app¹ or by phone, and we've got the rest. We'll pick up your Lincoln and deliver it back to you when service is complete²³. We'll also leave you with a complimentary Lincoln loaner³ during your service, so your time remains distinctly yours. Your vehicle will even be returned to you washed and ready for your next journey.

Lincoln Way App

Download the Lincoln Way app¹ to your mobile device to enjoy the flexibility and convenience of connecting with Lincoln services and features from wherever life takes you. For more details, visit www.lincoln.com/lincolnway.

Lincoln Concierge

Lincoln Concierge is your 24/7 personal connection for the latest information about Lincoln vehicles, services and ownership benefits. Simply choose how you'd like to connect and a highly trained Lincoln Concierge team member will help you explore Lincoln in the way that suits you best.

You can reach us any time of day or night.

- ▶ Call **800-521-4140**.
- ▶ Chat online at lincoln.com
- ▶ Through the Lincoln Way App¹

Roadside Assistance for Life**

We're here to help you out – no matter where, no matter when.

- ▶ Locked out
- ▶ Flat tire
- ▶ Drained battery
- ▶ Out of gas

Call 24/7 when you need assistance.

Dedicated Support:

owner.lincoln.com

- ▶ How-to and informational videos.
- ▶ Warranty and maintenance information.
- ▶ Make your payment or schedule service online.
- ▶ Shop for accessories.

Join us in Conversation

*Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at lincolncanada.com for more details.

¹Available via a download and compatible with select smartphone platforms. Message and data rates may apply.

²Lincoln Pickup & Delivery is valid for owners of 2017 or newer model-year Lincoln vehicles. Service available for retail and warranty repairs. Mileage limitations may apply. Lincoln reserves the right to change the program at any time without obligation.

³See dealer for details.

**Roadside assistance for life is only available for model-year 2013 and newer for the original owner.



Our caring agents are empowered to handle your call and concerns from beginning to end.

Table of Contents

Instrument Panel 4 – 5

Commonly Used Voice Commands 6

SYNC 3..... 7 – 9

Lincoln Embrace 10

Convenience11 – 12

Comfort.....13 – 14

Technology..... 15 – 18

Essential Features19


owner.lincoln.com

lincolncanada.com

Lincoln Way App

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed), and you can access even more information about your vehicle.

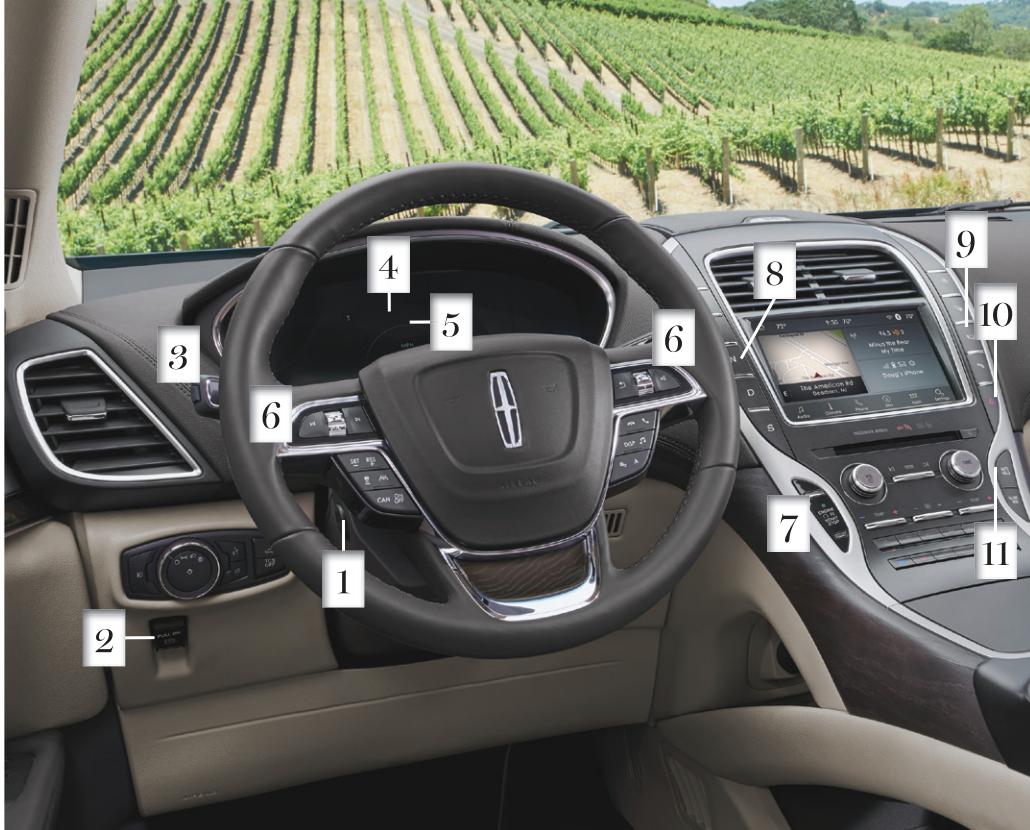

Instrument Panel

1 Power Adjustable Steering Column*

Use the control on the steering column to adjust the position.

2 Electric Parking Brake


The electric parking brake switch replaces the conventional hand brake. The switch is on the instrument panel. To apply the electric parking brake, pull the switch up. The brake system warning lamp flashes for approximately 2 seconds, and then illuminates to confirm that you applied the parking brake. To release the electric parking brake manually, switch the ignition on, press the brake pedal and then press the switch down. The brake system warning lamp turns off. Your vehicle automatically releases the parking brake when the driver door is closed, the accelerator pedal is pressed and no faults are detected in the parking brake system.

Note: If the electric parking brake warning lamp stays on, then the electric parking brake did not automatically release. You must release the electric parking brake using the switch.

3 Lane Keeping System

See page 16 for more information.




4 Service Engine Soon Light

 Illuminates briefly when you switch the ignition on. If it remains on or blinks after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

5 Information Display

Provides information about various systems in your vehicle. Use the steering wheel controls to choose and confirm settings and messages. Refer to the **Information Displays** chapter of your **Owner's Manual** for more information.

6 Steering Wheel Controls

- VOL +** Press to increase or decrease volume levels.
- VOL -** Press to access the previous or next media selection.
- ◀ or ▶** Press to silence the current media.
- ✕▶** Press to exit a menu.
-  Press to access voice recognition.
-  Press to end a phone call.
-  Press to access phone mode or to answer a phone call.

You can also use the steering wheel buttons to control the SYNC 3 screens, including the audio, settings, navigation and information display options.

Use the toggle control and the **OK** button to select and confirm options for SYNC 3.

7 Keyless Starting

You can start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again, without applying the brake, to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine shuts down automatically. Before this happens, a message appears in the information display, allowing you time to override the shutdown feature. If you try to leave the vehicle when it is still on, the horn will sound twice.

Note: A valid key must be inside the vehicle for the ignition to start.

8 Push Button Shift Transmission

Your vehicle includes an electronic transmission. The shift buttons are on the instrument panel.

Putting Your Vehicle in Gear

- A. Fully press down on the brake pedal, then press and release one of the **PRNDS** buttons to select your gear.

- B. The selected gearshift button lights and the information display shows the selected gear. Release the brake pedal and your transmission remains in the selected gear.

Note: When entering an automatic car wash, **always** put your vehicle in **Stay in Neutral** mode. To put your vehicle in **Stay in Neutral** mode, make sure your vehicle is stationary first, and then:

- A. Press the neutral (**N**) button once. The information display prompts you to press the neutral (**N**) button again to enter **Stay in Neutral** mode.
- B. Press the neutral (**N**) button again. The message display confirms when your vehicle enters **Stay in Neutral** mode. The neutral (**N**) button flashes continuously to confirm your selection.
To exit **Stay in Neutral** mode, press the brake pedal and select another gear.

9 360 Degree Camera*


See page 15 for more information.

10 Hazard Warning Control

11 Auto Hold

See page 17 for more information.

*if equipped

Press the  button on your steering wheel and then say:

General

- ▶ Cancel
- ▶ Help
- ▶ Main Menu
- ▶ List of Commands

Audio

- ▶ Radio
- ▶ AM <frequency number>
- ▶ FM <frequency number>
- ▶ **Bluetooth** Stereo
- ▶ USB

Navigation¹

- ▶ Find an Address
- ▶ Find a Place
- ▶ Drive Home
- ▶ Drive to Work
- ▶ Show Previous Destinations
- ▶ Cancel Route
- ▶ Show Route
- ▶ Repeat Instruction
- ▶ Show Map

Phone

- ▶ Pair Phone
- ▶ Call <contact name>
- ▶ Call <contact name> at <location>
- ▶ Dial <number>

Climate

- ▶ Set Temperature ____

SiriusXM Traffic and Travel Link^{1, 2}

- ▶ Show Traffic
- ▶ Show Weather Map
- ▶ Show Fuel Prices
- ▶ Show 5-Day Forecast

Apps

- ▶ Mobile Applications
- ▶ List Applications
- ▶ Find Applications
- ▶ <Application Name> Help

¹ if equipped

² SiriusXM may not be available in all markets. Activation and a subscription are required.



SYNC 3 allows you to interact with a variety of features using the touchscreen and voice commands. The system provides easy use of the system elements like audio, phone, mobile apps and settings.


Using the Touchscreen


Use the touchscreen to navigate the SYNC 3 features. The status bar on the top of the screen contains the home button, clock, outside temperature and status bar icons that inform you about the system. The feature bar allows you to select system features like audio and settings. For your safety, some features are speed-dependent. Their use is limited to when your vehicle speed is less than 3 mph (5 km/h).

Updating Your System

System updates are available through the local Lincoln website using a USB or by connecting your vehicle to a Wi-Fi network connection. With a network connection, you can have your SYNC 3 system update automatically as well. Please see the **SYNC 3** chapter of your **Owner's Manual** for more information on updating your system.

Using Voice Recognition

Using voice commands allows you to keep your hands on the wheel and focus on what is in front of you. To activate the SYNC 3 voice commands, press the voice button  on the steering wheel and wait for the prompt.

- ▶ Press the  button during any system voice prompt to interrupt the prompt and begin your voice command.
- ▶ To adjust the volume of the system voice prompts, turn the volume control when a voice prompt is playing.
- ▶ To use Siri on your iOS device, press and hold the voice control button on the steering wheel.

You can find the available voice commands in the **SYNC 3** chapter of your **Owner's Manual** or in the **Commonly Used Voice Commands** in this guide.

Some services may not be available in your area. For additional support, refer to your **Owner's Manual**, visit the website or call the toll-free number.


U.S. customers: Visit owner.lincoln.com or call **1-800-392-3673**.

Canadian customers: Visit syncmyride.ca or syncmaroute.ca or call **1-800-565-3673**.

Pairing Your Phone for the First Time

Switch on **Bluetooth** on your device to begin pairing. Check the compatibility of your device on the local Ford website.

To add a phone:

- 1. Select the phone  option on the feature bar.
- 2. Select **Add Phone**.
- 3. A prompt alerts you to search for the system on your phone.
- 4. Select your vehicle on your phone.
- 5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
- 6. The touchscreen indicates when the pairing is successful.
- 7. Download the phonebook from your phone when you are prompted.

To pair subsequent phones, please see the **SYNC 3** chapter in your **Owner's Manual**.

Using Your Connected Phone

To make calls, select from your contacts, recent calls or dial the number on the phone keypad. From the phone menu, you can also adjust phone settings, change devices or mute your phone. The do not disturb mode rejects all incoming calls and switches off ring tones and alerts.

Apple CarPlay and Android Auto

To use Apple CarPlay and Android Auto, connect your device to a USB port and follow the instructions on the touchscreen.

Certain SYNC 3 features are not available when you are using Apple CarPlay or Android Auto.

Android Auto may need to be enabled from the settings menu. You can switch Apple CarPlay or Android Auto off through the settings menu. See the **SYNC 3** chapter of your **Owner's Manual** for more information.



Apps

The system allows you to interact with select mobile apps while keeping your eyes on the road. Voice commands, your steering wheel buttons or a quick tap on your touchscreen give you advanced control of compatible mobile apps. You can also stream your favorite music or podcasts, share your time of arrival with friends and keep connected safely. For more information on connecting apps to your system, please see the **SYNC 3** chapter of your **Owner's Manual**.

Audio



You can select from a variety of entertainment options, including AM/FM radio, USB, **Bluetooth** Stereo and Apps.

Presets

To set a new preset, tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station and then returns. To view additional presets, swipe left.


Climate


You can adjust climate control features, including the temperature, airflow direction, fan speed and other climate features. You can also use voice commands to make climate adjustments.

Navigation


You can set your destination using the text entry or map screen. Using text entry, you can search by entering all or part of the destination, such as the address, intersection or city. Using the map screen, you can select a location on the map, then select **Start** to begin the route guidance.

You can adjust the map to display in two-dimensional or three-dimensional mode. You can also zoom in or out on the map by using a pinching gesture.

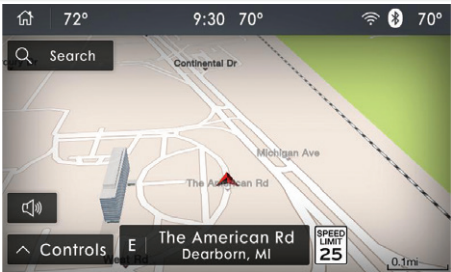

During route guidance, you will see a turn indicator, points of interest on the map, your current road and an option to mute  the guidance prompts. You can press the button in the top right-hand corner of the main map to display estimated time of arrival, remaining travel time or distance to your destination.

Settings

Under the Settings menu, you can access and adjust the settings for many of the system features. Once you select a tile, press the  button to view an explanation of the feature or setting.

Troubleshooting

If you are experiencing issues with your SYNC 3 system, please see the **Troubleshooting** section of the **SYNC 3** chapter in your **Owner's Manual**. For additional information and assistance, contact an authorized dealer or refer to the local Lincoln website.

As you approach or leave your vehicle, key areas of your vehicle automatically adjust, including the following personalization features.

Welcome Lighting

The Lincoln welcome mat projection lights are on the bottom of the exterior mirror housings. They project an image onto the ground a short distance from your vehicle when welcome lighting or lighted entry turns on.

Auto-folding Exterior Mirrors*

Automatically folds the exterior mirrors toward the glass when you place the transmission into park (P), turn off the vehicle, open and close the driver door and lock the vehicle. The exterior mirrors automatically unfold and return to their driving positions after you unlock the vehicle and open and close the driver door. Push the power-folding mirror control on the door to fold your mirrors on demand.

Illuminated Entry

The interior lamps and select exterior lamps will light when you unlock the doors with the remote control.

Easy Entry and Exit

Moves the driver seat rearward up to 2 inches (5 centimeters). Additionally, the power tilt and telescoping steering wheel moves to the full up position when the transmission is in park (P) and you switch off the keyless start ignition. The driver seat and steering column return to their previous positions when you push the keyless start ignition button.

Network Connectivity

The modem allows you to connect your vehicle to the Internet to use when you are on the road. See your **Owner's Manual** to enable the modem using the Lincoln Way App. Once the modem is enabled, you can locate and remotely start, lock and unlock your vehicle. You can also access automatic system updates. More information is available through the Lincoln Way App.

The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive automatic software updates and send vehicle-related information to us, for example diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example cell phone network tower identification. For additional information about our privacy policy, refer to your local Lincoln website.



*if equipped

SecuriCode™ Keyless Entry Keypad

The SecuriCode keypad is near the driver window and illuminates when touched. The keypad allows you to lock or unlock the doors without a key. You can operate the keypad with the factory set, five-digit entry code found on the owner's wallet card in the glove box or by using your personal code. You must press each number within five seconds of each other.



To Unlock the Driver Door

Enter the factory-set code or your personal code. The interior lamps light.

To Unlock All Doors

Enter the factory-set code or your personal code, then press **3-4** within five seconds.

To Lock All Doors

Press and hold **7-8** and **9-0** at the same time (with the driver door closed). You do not need to enter the keypad code first.

See the **Doors and Locks** chapter in your **Owner's Manual** for more information on how to use SecuriCode.

Intelligent Access



You can unlock and lock the vehicle without taking the key out of your pocket or bag when your intelligent access key is within 3 feet (1 meter) of your vehicle.


To unlock, touch the unlock sensor on the back of the door handle for a brief period and then pull on the door handle, being careful to not touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.


Intelligent Access Remote Entry Icons

- Press once to lock all doors. Press again within three seconds to confirm that you locked all doors.
- Press once to unlock the driver door. Press again within three seconds to unlock all doors.
- Press to activate the panic alarm. Press again or switch the ignition on to deactivate.
- Press twice within three seconds to open the liftgate.
- Car finder:** Press twice within three seconds to locate your vehicle. The horn sounds and the direction indicators flash.
- Note:** The intelligent access transmitter also contains a mechanical key blade that you can use to unlock the driver door, if necessary.

Power Liftgate*

Your liftgate has an automatic open and close feature.

To open remotely, press  twice on your remote control within three seconds.

You can also operate the liftgate by pressing the  button on the instrument panel. To close the liftgate, press and release the liftgate control button on the liftgate.



To Set the Liftgate Open Height

1. Open the liftgate.
2. Stop the liftgate movement by pressing the control button on the liftgate when it reaches the desired height.
3. Press and hold the control button on the liftgate until you hear a tone, indicating programming is complete.

The system recalls the new open liftgate height when you use the power liftgate feature. To change the programmed height, repeat the procedure.

Note: You cannot program the height if the liftgate position is too low. Once you open the power liftgate, you can manually move it to a different height. When operating the power liftgate after you have programmed a lower height than full-open, you can fully open the liftgate by manually pushing it upward to the maximum open position.

Hands-free Liftgate Operation*

1. Make sure you have your intelligent access transmitter within 3 feet (1 meter) of the liftgate.
2. Move your foot under and back from the rear bumper (between the exhaust tips), similar to a kicking (front-to-back) motion. Do not move your foot sideways or the sensors may not detect the motion.

Note: In vehicles equipped with the towing package, you must kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the trailer hitch.

Wireless Accessory Charging*

This feature supports Qi wireless charging-compatible devices. You can only charge one device at a time on the charging area. You can charge a device if the vehicle is off, in accessory mode or if SYNC is on. Keep the charging area clean and remove foreign objects prior to charging a device.



To begin charging your device, place the device in the port with the charging side down. The charging stops after your device reaches a full charge.

For more information, see the **Auxiliary Power Points** chapter of your **Owner's Manual**.



Front Fog Lamps*

 Press to switch the fog lamps on or off.

You can switch the fog lamps on when the lighting control is in any position except off and the high beams are not on.


Climate Controlled Front Seats



For heated front seats, press  repeatedly to cycle through the various heat modes and off. For ventilated front seats, press  repeatedly to cycle through the various cooling modes and off.

Note: The ventilated seats function only when the engine is running.

Rear Heated Seats*

The rear heated seat controls are on the rear of the center console. Press  to switch between the high, low and off settings.

Easy Fold® Rear Folding Seats




The controls are on the left-hand rear quarter trim panel (accessible from the liftgate area). Press and hold either the left or right control to lower the corresponding seatback. To return the seats to their upright position, manually rotate the seatbacks until they latch with a click into the upright position.


Reclining Rear Seats*

With the seat occupied, pull the lever up to recline the seatback.

Heated Steering Wheel*

Your vehicle may include a heated steering wheel. Press the  icon in your touchscreen to turn this feature on and off.

Power Adjustable Seats*

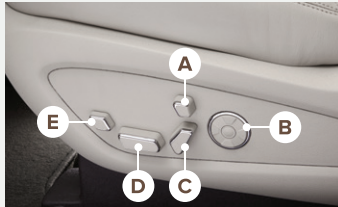

You can adjust your driver seat in a variety of ways:

- ▶ Press **A** to raise, lower and tilt the head restraint.
- ▶ Press **B** to use the multi-contour front seats with active motion functions.
- ▶ Press **C** to change the backrest angle and move the upper back restraint pivot point forward and rearward.
- ▶ Press **D** to raise, lower, move forward or backward or tilt the cushion.
- ▶ Press **E** to adjust the cushion length.

The front seats also include a massaging feature. See the **Seats** chapter of your **Owner's Manual** for more details.

Locking Glove Box*



You can open the glove box by pressing the button located on the instrument panel.

Note: The electronic glove box does not function if the vehicle battery is dead or after you switch the ignition off and lock the vehicle.






Manual Entry

1. Open the passenger door.
2. Remove the end cap from the instrument panel.
3. Insert a pen or pencil into the latch device to release the glove box.

Moonroof

The moonroof controls are on the overhead console and have a one-touch open and close feature. To stop its movement during one-touch operation, press the control a second time.



-  Press and release to open the moonroof. The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the control again.
-  Press and release to close the moonroof.
-  Press and release to vent the moonroof.
-  Press and release to open the sunshade. The sunshade stops short of its fully opened position for the comfort of rear passengers. To open the sunshade fully, press the control again.
-  Press and release to close the sunshade.

Memory Function

The memory function allows a one-touch recall of personalized memory features, including the driver seat, power mirrors and power steering column*. Use the memory controls on the driver door to program and then recall memory positions. To program a position, switch the ignition on. Adjust the memory features to your desired positions. Press and hold the desired preset button until you hear a single tone. You can now use these controls to recall the set memory positions. You can also program your memory seat to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved positions.

See the **Seats** chapter in your **Owner's Manual** for more details.

Ambient Lighting*




To access and adjust:

- Press the **Settings** icon then **Ambient Lighting**.
- Touch the desired color.
- Use the scroll bar to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

Remote Start

Remote start allows you to start the engine from outside your vehicle using your key.

To start, press  and then press  twice within three seconds. Before driving your vehicle, you must press the push button ignition switch on the instrument panel while applying the brake pedal. You can also turn your vehicle off from outside after a remote start by pressing  once. If your vehicle is equipped with remote feedback, an LED on the key provides status feedback of remote start or stop commands. A solid green light means the remote start or extension was successful, while a blinking red light means the remote start or stop has failed. A solid red light means that the remote stop was successful and the engine is off. When the system is waiting for a status update from the vehicle, you will see a blinking green light.

Auto-Start-Stop*

The system helps reduce fuel consumption by automatically stopping and restarting the engine when your vehicle has stopped. The engine restarts automatically when you release the brake pedal.

You can switch the system off by pressing the **Auto-Start-Stop** button located on the center console. The button illuminates. This only deactivates the system for the current ignition cycle. Press the button again to restore Auto-Start-Stop function.


The system automatically enables every time you start your vehicle if all of the necessary conditions are met.

Please see the **Unique Driving Characteristics** chapter of your **Owner's Manual** for more information.

Adaptive Cruise Control*

Adaptive Cruise Control adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the gap controls on the steering wheel. To set a cruise speed: switch cruise control on, accelerate to the desired speed and press the **SET-** button. An indicator light, the current gap setting and your set speed appear in the information display. Press **CAN** to cancel cruise control, press the **RES+** button to return to the set speed and gap setting and press


the **OFF** button or switch off the ignition to turn cruise control off. The system can also bring your vehicle to a complete stop and may resume going forward in stop-and-go traffic.

Lane Centering* is designed to help keep your vehicle in the center of the lane by applying continuous assistance steering torque input toward the lane center on highways. To switch it on, press the  button.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary.

Refer to the **Cruise Control** chapter in your **Owner's Manual** for safety information, more details and limitations.

360 Degree Camera*

The  button is on the instrument panel and allows you to toggle through different camera views. The front and rear cameras have multiple screens that include Normal View with 360, Normal View and Split View.

When in park (P), neutral (N) or drive (D), only the front images display when you press the button. When in reverse (R), only the rear images display when you press the button.

Note: The 360 degree camera system turns off when your vehicle is in motion at a low speed, except when in reverse (R).

Note: Keep the star emblem free from snow, ice and large accumulations of dirt. If something is blocking the star emblem from moving, the camera will not deploy.

Rear View Camera

The Rear View Camera system provides a video image of the area behind the vehicle. The image appears when the transmission is in



reverse (R) and uses a variety of guidelines to alert you of your proximity to objects. If your vehicle is equipped with the Obstacle Distance Indicator, the system provides an image of your vehicle and the red, yellow and green sensor zones. For more information about the Rear View Camera, please see the **Parking Aids** chapter of your **Owner's Manual**.

Note: Switching on the rear window washer also turns on the rear camera washer.

Pre-Collision Assist*

If your vehicle is rapidly approaching another stationary vehicle, a vehicle traveling in the same direction as yours or a pedestrian within your driving path, the system is designed to provide three levels of functionality:

Alert: When activated, a red warning light flashes, an audible warning chime sounds and a warning message shows in the information display.



Brake Support: The brake support system assists the driver in reducing the collision speed by lightly applying the brakes. If the risk of collision further increases after the warning light illuminates, the brake support prepares the brake system for rapid braking. The system does not automatically activate the brakes, but if you press the brake pedal, the system may apply full force, even if the brake pedal is lightly pressed.

Active Braking: Active braking may activate if the system determines that a collision is imminent. The system may help the driver reduce impact damage or avoid the crash completely.

See the **Driving Aids** chapter in your **Owner's Manual** for safety information, more details and limitations.

Evasive Steer Assist*

When your vehicle is rapidly approaching a vehicle that is stationary or traveling in the same direction as you, evasive steering works in conjunction with the


Pre-Collision Assist system to apply additional steering torque to help you steer around the vehicle.

The system only activates when all of the following occur:

- ▶ The Pre-Collision Assist system detects a vehicle ahead and starts to apply Active Braking.
- ▶ You turn the steering wheel in an attempt to steer around the vehicle.

After you turn the steering wheel, the system applies additional steering torque to help you steer around the vehicle. After you pass the vehicle, the system applies steering torque in the opposite direction to encourage you to steer back into the lane. The system deactivates after you fully pass the vehicle.

Lane Keeping System*

When you switch the system on and the system detects an unintentional drift out of your lane is likely to occur, the system notifies or assists you to stay in your lane through the steering system and information display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert Mode is selected. You can switch the system on or off by pressing the  button on the direction indicator.

Refer to the **Driving Aids** chapter of your **Owner's Manual** for system operation and limitations.

Auto Hold

Auto Hold can assist you while stopping at traffic lights or while in traffic jams by holding the brakes when you stop the vehicle. Press the **AUTO HOLD** button to switch the system on. The **AUTO HOLD** button illuminates. When the system is on and actively holding the vehicle, **AUTO HOLD** displays in the instrument cluster.

When you press the accelerator pedal, Auto Hold automatically releases the brakes. In certain situations, Auto Hold may apply the electric parking brake and illuminate the brake warning lamp in the instrument cluster.

Auto Hold turns off when you power down your vehicle, or you can switch the feature off manually by pressing the **AUTO HOLD** button. Switch Auto Hold off if you are towing a trailer or having the vehicle towed.

See the **Brakes** chapter of your **Owner's Manual** for more details.

Front, Rear and Side Parking Aids*

The sensing systems warn you of obstacles within a certain range of your vehicle. The systems turn on automatically whenever you switch the ignition on.

 
The side sensing system is active when the transmission is in any position except park (P). You can switch the rear parking aid system off through the information display menu or from the pop-up message that appears once you shift the transmission into reverse (R). You can switch the front parking aid off through the parking aid switch.

Note: Visibility aids do not replace the need to watch where the vehicle is moving.

Refer to your **Owner's Manual** for safety information, more details and limitations.



Active Park Assist with Parallel Parking, Perpendicular Parking and Parallel Park Out Assist*

Active Park Assist detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) when you control the accelerator, gearshift and brakes. The system visually and audibly guides you to park your vehicle. Press the Active Park Assist  button once for parallel parking or twice for perpendicular parking. The system displays a message and a corresponding graphic to indicate that it is searching for a parking space. Use the direction indicator to select from which direction you want to begin searching, either to the left- or right-hand side of your vehicle.

Use the park out assist feature when your vehicle is at rest in a parallel parking space. Press the button, and then follow the instructions on the display.

Use your direction indicator to signal from which side of your vehicle you want to exit the parking space. After the system directs your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual**.

Blind Spot Information System and Cross Traffic Alert

The blind spot information system uses radar sensors to help you determine if a vehicle may be in your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). Both systems turn on an indicator light in the exterior mirror on the side of the vehicle from which the approaching vehicle is coming. Cross traffic alert also sounds tones and displays messages to warn you from which direction vehicles are approaching.

Note: Visibility aids do not replace the need to watch where the vehicle is moving.

Refer to your **Owner's Manual** for safety information, more details and system limitations.

Driver Alert*

The system automatically monitors your driving behavior using various inputs, including the front camera sensor. If the system detects that driver alertness is below a certain threshold, the system alerts you using a tone and a message in the information display. The warning system works in two stages. At first, the system issues a temporary warning that you need to take a rest. This message will only appear for a short time. If the system detects further reduced driver alertness, the system issues another warning that remains in the information display for a longer time. Press **OK** on the steering wheel to clear the warning. You may switch the system on or off through the information display.

SelectShift® Automatic Transmission

With SelectShift automatic transmission, you can use the paddles on your steering wheel to change gears without a clutch.


Pull the (+) paddle on the steering wheel to activate SelectShift.

To change gears:

- Pull the right paddle (+) to upshift.
- Pull the left paddle (–) to downshift.

For more information and system operation, please see the **Transmission** chapter of your **Owner's Manual**.

Tire Pressure Monitoring System

The tire pressure monitoring system allows you to view the tire pressure readings through the information display. When one or more of your tires are under-inflated, your vehicle turns on the low tire pressure warning light  in the instrument cluster. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Wheels and Tires** chapter of your **Owner's Manual** for more information.

Fuel Tank Capacity/Fuel Info

For vehicles with front wheel drive, the fuel tank capacity is 18.4 gallons (69.7 liters). For vehicles with all wheel drive, the fuel tank capacity is 18.5 gallons (70 liters). We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87.

Do not use any other fuel because it could damage or impair the emission control system.

Open Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

Refueling

When refueling your vehicle:

1. Make sure the ignition is switched off.
2. Fully open the fuel door.
3. Insert the fuel pump nozzle into the fuel system up to the first notch, and leave the nozzle inserted and resting against the cover of the fuel tank until you are done pumping.
4. Make sure you keep the fuel pump nozzle in a level position when refueling or it may impact the flow of the fuel. Improper positioning can also cause the fuel pump to shut off before the fuel tank is full.
5. When you finish refueling, slowly raise and remove the fuel pump nozzle. Fully close the fuel door.

If you are refilling your tank from a fuel container, make sure you use the fuel filler funnel included with your vehicle. Using an aftermarket funnel may not work with the capless system and could cause damage to your vehicle. For more information and for your fuel filler funnel location, please see the **Fuel and Refueling** chapter of your **Owner's Manual**.

Towing Your Vehicle

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the **Towing the Vehicle on Four Wheels** section in the **Towing** chapter of your **Owner's Manual**.