



## WARRANTY INFORMATION:

Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

Download a FREE electronic copy or order one FREE printed copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of [owner.ford.com](http://owner.ford.com). (United States)

For Canada, visit [ford.ca/warranty](http://ford.ca/warranty).

For Limo/Livery/Hearse vehicles: View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, [fleet.ford.com/limo](http://fleet.ford.com/limo). (United States only)

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, consult your Owner's Manual.

## WARNING:

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

### United States

#### Ford Customer Relationship Center

1-800-392-3673 (FORD)

TDD for the hearing impaired:

7-1-1 (where offered by your telephone service provider)

[owner.ford.com](http://owner.ford.com)



@FordService

### Canada

#### Ford Customer Relationship Centre

1-800-565-3673 (FORD)

TDD for the hearing impaired:

7-1-1 (where offered by your telephone service provider)

[ford.ca](http://ford.ca)



@FordServiceCA

# FORD MUSTANG 2024

QUICK REFERENCE GUIDE



# VOICE INTERACTION

The digital assistant allows you to control vehicle features using conversational requests.

## TO BEGIN A VOICE INTERACTION, YOU CAN:

- Press the voice interaction button on the steering wheel.
- Say the selected wake word.

## VOICE COMMAND EXAMPLES

To see examples of what voice commands you can use with different features:

1. Press the  button on the touchscreen.
2. Press **Ford Assistant**.
2. Press **Voice Command Help**.
3. Select a feature.

## FORD ASSISTANT SETTINGS

To access the settings menu:

1. Press the  button on the touchscreen.
2. Press Ford Assistant.

From the settings menu you can do the following:

- Switch listen for wake word on or off.
- Set the preferred wake word.
- Switch advance mode on or off.
- Switch phone confirmation on or off.
- Switch the commands list on or off.
- View the commands help menu.

## ADDITIONALLY:

Some voice commands may require your modem to be enabled. For more information about your vehicle's modem, see the **Connected Vehicle** chapter of your **Owner's Manual**.

## TIPS:

- When using voice commands make sure that you wait for the tone before giving the voice command.
- When saying the name of a contact, track or artist make sure that you say the name exactly as it appears on your device.

Some services may not be available in your area. Refer to your **Owner's Manual**, visit the website or call the toll-free number.

For U.S. customers: Visit [owner.ford.com](http://owner.ford.com) or call 1-800-392-3673.

For Canadian customers: Visit [syncmyride.ca](http://syncmyride.ca) or [syncmaroute.ca](http://syncmaroute.ca) or call 1-800-565-3673.

For more information about using voice interaction and for troubleshooting information, see the **Owner's Manual** in your vehicle's touchscreen.



# TABLE OF CONTENTS

## Center Display Overview 2

**Comfort** ..... 3

**Convertible Top** .... 4

**Function** ..... 5–8

**Convenience** ..... 9

## LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.



[owner.ford.com](https://owner.ford.com) (U.S.)



[ford.ca](https://ford.ca) (Canada)



# CENTER DISPLAY OVERVIEW



The home screen and status bar on your touchscreen allow you to interact with a variety of vehicle features. Voice commands can also be used to access these features.

## SPEED-RESTRICTED FEATURES

For your safety, some functions of the system are speed dependent. Some features of this system may be too difficult to use when your vehicle is moving so they are restricted from use unless your vehicle is stationary. Other features are limited to when your vehicle is traveling at speeds under 5 mph (8 km/h).

## PAIRING YOUR PHONE FOR THE FIRST TIME

Switch on Bluetooth® on your device to begin pairing.

To add a phone:

1. Select the phone  option on the home screen.
2. Select **Add Phone**.
3. A prompt alerts you to search for your vehicle on your phone.

4. Select your vehicle on your phone.
5. Confirm that the PIN on your phone matches the number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Download the phonebook from your phone when you are prompted.

## APPLE CARPLAY® AND ANDROID AUTO™

To use Apple CarPlay and Android Auto, pair your device and follow the instructions on the touchscreen. Certain system features are not available when you are using Apple CarPlay or Android Auto.

You can switch Apple CarPlay or Android Auto off through the Settings menu. See the **Apps** chapter of your *Owner's Manual* for more information.

## INFORMATION ON DEMAND SCREEN\*

The information on demand screen shows cards on the side of the main screen display and allows you to see information from different features.

You can swipe up or down to view a different card.

On select information on demand screens you can swipe toward the main screen to move the current content onto the main screen.

\*if equipped

# COMFORT

## PERSONAL PROFILES

This feature allows you to create multiple personal profiles enabling users to personalize the vehicle's settings such as seats and mirrors, as well as non-positional settings like radio, navigation and the driver assist system.

You can recall a profile using the touchscreen, your selected preset button, a remote control or a mobile device linked to your profile. For more information, see the *Personal Profiles* chapter in your *Owner's Manual*.

## HEATED AND VENTILATED FRONT SEATS\*

For heated seats, press the  symbol on the touchscreen. Select your preferred heat level or off. You can also slide the menu bar up to control the heat intensity. More indicator lights mean warmer seat temperatures.

For ventilated seats, press the  symbol on the touchscreen. Select your preferred fan speed or off. You can also slide the menu bar up to control the fan speed. More indicator lights mean higher fan speeds.

## REAR SEAT ACCESS

Use the seat backrest release to fold the back of the front seat forward. This release handle is on the upper back of the front seat. The front seat backrest returns to its previous position once it is locked back in place.



## CONNECTED VEHICLE

The modem enables access to a range of features built into your vehicle. More information is available through the FordPass app.

The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive automatic software updates and send vehicle-related information to us, for example, diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example, cell phone network tower identification. For additional information about our privacy policy, visit [www.FordConnected.com](http://www.FordConnected.com) or refer to your local Ford website.

\*if equipped

# CONVERTIBLE TOP\*

## OPENING THE CONVERTIBLE TOP

1. Bring the vehicle to a complete stop.
2. Check the convertible top stowage compartment behind the rear seat to be sure it is empty. Also, make sure that the convertible top outer surface is free of debris.
3. Move the latch handle above the interior mirror down toward the windshield and rotate the handle clockwise to release the convertible top.
4. Press and hold the convertible top control on the overhead console until the windows are completely down and the top stores completely.

## CLOSING THE CONVERTIBLE TOP

1. Bring the vehicle to a complete stop.
2. Press and hold the convertible top control as the top unfolds and moves toward the windshield header.
3. When the top lines up evenly with the windshield header, release the convertible top control.
4. Pull down on the latch handle and rotate it counterclockwise to secure the convertible top.
5. After securing the convertible top fully, push the latch handle up into the stowed position to lock the latch.

**Note:** If the top has been open for an extended period of time or if the temperature is low, the top material may shrink slightly. If this happens, extra force on the latch handle may be needed to secure the top.

For complete information, refer to the *Convertible Top* chapter of your *Owner's Manual*.

## TIPS WHEN USING YOUR CONVERTIBLE TOP

Do not store items behind the rear seat. Items stored in the convertible top stowage compartment may break the rear window glass when you open the top.

The windows automatically lower when opening the top.

Do not lower the top when the top material is wet.

The convertible top does not operate unless the vehicle is stationary or traveling under 3 mph (5 km/h).

Ignition must be on to open or close the convertible top. Leave the engine running to prevent draining the battery.



\*if equipped

# FUNCTION

## ELECTRIC PARKING BRAKE SWITCH OR HANDLE\*



The electric parking brake switch or handle replaces the conventional parking brake. The switch or handle is on the center console. To apply the electric parking brake, pull the switch or handle up. The brake system warning lamp flashes, then illuminates to confirm that you applied the parking

brake. To manually release the electric parking brake, switch the ignition on, press the brake pedal and then press the switch or handle down. The brake system warning lamp turns off. Your vehicle automatically releases the parking brake when the driver door is closed, the vehicle is shifted into gear and you press the accelerator.

**Note:** The electric parking brake warning tone sounds when the parking brake is on and your vehicle is moving. If the warning tone continues after you have released the parking brake, this indicates a malfunction. Have your vehicle checked as soon as possible.

## AUTO HOLD

Auto hold can assist you while stopping at traffic lights or while in traffic by holding the brakes when you stop the vehicle. You can switch the system on or off by accessing the menu on the touchscreen.

1. Press **Settings** on the touchscreen.
2. Press **Driver Assistance**.

When the system is on and actively holding the vehicle, the auto hold icon displays in the instrument cluster. When you press the accelerator pedal, auto hold automatically releases the brakes. In certain situations, auto hold may apply the electric parking brake and illuminate the brake warning lamp in the instrument cluster. Auto hold can also be programmed to the favorites button. See **Center Display Overview** in the *Owner's Manual* for more details

See the **Auto Hold** chapter of your *Owner's Manual* for more details.

## REMOTE REV\*

Allows you to use the remote control to command the engine to rev from outside the vehicle.

To enable remote rev, start the engine then press the unlock button on the remote control followed by the lock button within three seconds. The engine RPM quickly increases to confirm that the feature is enabled.

Once remote rev is enabled, press the unlock button on the remote control followed by the lock button within three seconds. The engine revs. Remote rev may not be available if the engine is too cold.

For additional information, see the **Keys and Remote Controls** chapter of your *Owner's Manual* for more details.

\*if equipped

# F U N C T I O N

## MY MUSTANG MENU

Press the  button on the instrument panel to view and access the following features:

- Track apps.
- Auxiliary gauges.
- Custom drive mode.
- My color.
- Cluster theme.
- Exhaust mode.

Utilizing these features allows you to customize several aspects of your vehicle such as lighting color and a personalized drive mode.

## TRACK APPS

Select track apps from the My Mustang menu. These track apps are for track use only. Do not use them under any other driving conditions. The track apps screen displays a variety of information and options that would be useful in a track applications such as an acceleration timer, brake performance information, performance shift indicator\*, a lap timer and drift brake. From this screen you can also access the rev match\*, line lock and launch control\* features.

## DRIFT BRAKE\*

Drift brake is a new feature located in Track Apps that allows you to lock up the rear tires to enable drift maneuvers. Before drifting, make sure you are on a track, and have the necessary safety equipment including a certified helmet and approved neck restraint device. Work up to your limit while drifting, do not expect to be an expert right away.

To switch on the drift brake from the Track Apps menu, press **Drift Brake**. If prompted, press **OK** to enter track mode or **Cancel** to exit the feature.

**Note:** Drift brake cannot be selected if track mode is not enabled.

When the feature is on, the brake handle applies braking to the rear wheels only and locks up the rear wheels. When the feature is off, the brake handle works like the foot brake and applies braking to all four wheels.

## AUXILIARY GAUGES

From the My Mustang menu, press Auxiliary Gauges to view the gauges available in the touchscreen. Press the  button to choose from the following gauges:

- Cylinder head temperature.
- Engine oil temperature.
- Transmission oil temperature.

\*if equipped



- Axle temperature.
- Engine oil pressure.
- Inlet air temperature.
- Manifold charge temperature.
- Intercooler coolant temperature.
- Vacuum or vacuum/boost.
- Voltage.

**Note:** Depending on your vehicle configuration, not all gauges are available.

## CUSTOM DRIVE MODE

You can create your own drive mode experience. Choose a drive mode to use as a starting point and then mix and match settings to tailor the experience to your preferences. You can create up to six custom modes and set one as the active mode. The active mode appears as an available mode when selecting a drive mode.

To create a custom drive mode:

1. From the My Mustang menu, press **Custom Drive Mode**.
2. Press the profile button to select a profile to edit.  
Selecting a profile also sets it as the active mode.
3. Select the base drive mode you prefer.
4. Press each option and select the setting you prefer.

## CLUSTER THEME

You can change the style of the display behind the steering wheel.

1. From the My Mustang menu, press **Cluster Theme**.
2. Select a theme.

**Note:** If you choose **Match Drive Mode**, the instrument cluster style changes according to the drive mode you select.

## MY COLOR\*

Allows you to customize the colors of the instrument cluster and touchscreen.

You can also adjust the ambient lighting\*:

1. From the My Mustang menu, press **MyColor**.
2. Adjust the primary and secondary colors to the setting you prefer.

## EXHAUST MODE\*

Allows you to change how loud your exhaust is. You can choose from one of four settings:

**QUIET MODE:** Lowers the noise of the exhaust.

**NORMAL MODE:** Default factory setting.

**SPORT MODE:** Raises the noise of the exhaust.

**TRACK MODE:** Tunes the exhaust for track performance.

**Note:** The track exhaust mode setting is only for use at tracks and not for use on public roadways.



\*if equipped

# FUNCTION

## SPEED SIGN RECOGNITION\*

Speed sign recognition detects speed limit signs to inform you of the current speed limit. Detected speed signs appear in the instrument cluster display.

Speed sign recognition uses a sensor behind the interior mirror to detect speed signs. When the system detects a speed limit sign, it appears in the instrument cluster display.

## INTELLIGENT SPEED LIMITER\*

The system allows you to limit the vehicle speed to the maximum speed limit detected by the traffic sign recognition system. To switch on the speed limiter press the  button on the steering wheel. With the system in standby mode, use the **SET +** and **SET -** buttons to set the limiter to the current vehicle speed. You can adjust the set speed limit using the **SET +** and **SET-** buttons. The  button can be used to cancel and resume the limiter. Press the accelerator pedal to temporarily turn the system off. The system reactivates once your vehicle speed drops below the set speed.

## DRIVE MODE CONTROL

Through a suite of sophisticated electronic vehicle systems, you can optimize steering, handling and powertrain response. To change the mode settings, use the mode switch on the steering wheel. See the **Drive Mode Control** chapter of your *Owner's Manual* for complete details.

### DRIVE MODES

**Normal** – Delivers a balanced combination of comfort and handling.

**Sport** – Increases throttle and transmission response.

**Track** – Provides a performance driving experience. The engine responds directly to your inputs and takes on a more powerful tone. Use track mode when you desire pure performance. This mode is not intended for public roads.

**Drag Strip** – Provides a performance driving experience tailored to driving on a drag strip. The engine responds directly to your inputs and, if your vehicle is equipped with active exhaust, it takes on a more powerful tone. This mode is not intended for public roads.

**Slippery** – For less than ideal road conditions such as snow or ice covered roads.

**Custom** – Allows you to create your own drive mode experience.

## STEERING MODES

To change the steering mode, press the  button on the steering wheel. The first press displays a pop-up message in the instrument cluster display for the selected mode and subsequent presses changes the selected mode.

**Normal** – Default factory setting.

**Sport** – Slightly higher effort required for steering with more road force felt through the steering wheel.

**Comfort** – Slightly less effort required for steering with less road force felt through the steering wheel.

After selecting the desired setting, you may feel a soft feedback bump in the steering wheel when the changeover occurs.



[owner.ford.com](https://owner.ford.com) (U.S.)



[ford.ca](https://ford.ca) (Canada)

\*if equipped

# C O N V E N I E N C E

## TIRE SEALANT AND INFLATOR KIT\*

This kit provides a temporary tire repair, allowing you to drive your vehicle up to 120 mi (200 km) at a maximum speed of 50 mph (80 km/h) to reach a tire service location. The kit, under the load floor in the luggage compartment, includes an air compressor to reinflate the tire and a canister of sealing compound that effectively seals most punctures caused by nails or similar objects. Refer to the *Tire Sealant and Inflator Kit* chapter of your *Owner's Manual* for more information.

## LOCATION OF SPARE TIRE AND TOOLS\*

Your spare tire and tools are under the access panel in the luggage compartment. A dissimilar spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Changing a Road Wheel* chapter of your *Owner's Manual*.

## VEHICLE SOFTWARE UPDATES

You can update your vehicle system wirelessly by making sure Vehicle Connectivity and Automatic System Updates are switched on. When an update is available, tap the notification icon and follow the on-screen prompts. To make sure you receive all updates, set a recurring schedule and connect to Wi-Fi. Updates may take longer if not connected to Wi-Fi, or may not download at all.

\*if equipped