

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, consult your Owner's Manual.

#### WARRANTY INFORMATION

Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

Download a FREE electronic copy or order one FREE printed copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of [ford.com/support/](https://ford.com/support/). (United States)

For Canada, visit [ford.ca/warranty](https://ford.ca/warranty).

For Limo/Livery/Hearse vehicles: View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, [fleet.ford.com/limo](https://fleet.ford.com/limo). (United States only)

2025 | First Printing | Litho in U.S.A.



#### WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

#### LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.

#### United States

**Ford Customer Relationship Center**  
**1-800-392-3673 (FORD)**

TDD for the hearing impaired:  
7-1-1 (where offered by your telephone service provider)  
[ford.com/support/](https://ford.com/support/)  
[@FordService](https://twitter.com/FordService)

#### Canada

**Ford Customer Relationship Centre**  
**1-800-565-3673 (FORD)**

TDD for the hearing impaired:  
7-1-1 (where offered by your telephone service provider)  
[ford.ca](https://ford.ca)  
[@FordServiceCA](https://twitter.com/FordServiceCA)




**2025 EXPEDITION**  
Quick Reference Guide

**FordPass App**

Download the FordPass app<sup>1</sup> to your mobile device and activate the Ford Connectivity package to enjoy services and features including:

- Complimentary remote features including start/stop, lock/unlock and scheduled starts.<sup>2</sup>
- *Phone as a Key*, which, allows drivers to unlock, start, and operate their vehicle even if they leave the keys behind.<sup>3</sup>
- Remote access to easily monitor your vehicle's health, oil life, tire pressure, and more.
- The ability to select a Preferred Dealer for effortless scheduling of maintenance and service where and when you need it.
- Ford Rewards™, which allows drivers to earn and redeem points toward Ford service, parts, accessories, and more.<sup>4</sup>

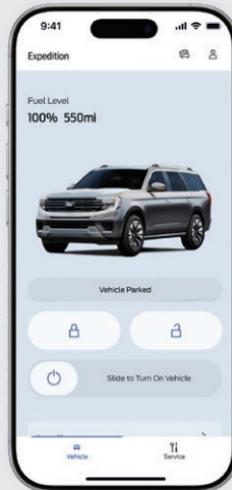

**Digital Owner's Manual**

Access your Digital Owner's Manual and learn more about your vehicle:

- Tap Apps
- Tap Owner's Manual

**Roadside Assistance\*\***

Whether you're locked out of your Ford, have a flat, drained battery, or ran out of gas, we've got you covered 24/7. Use the FordPass App or give us a call and we'll be there. No matter where, no matter when.

**Join us in Conversation**



<sup>1</sup>Available via a download and compatible with select smartphone platforms. Message and data rates may apply.

<sup>2</sup>Ford Connectivity (standard on select vehicles), and complementary connected service are required for remote features (see the FordPass terms for details). Connected services and features depend on compatible network availability. Evolving technology/cellular networks/vehicle capability may limit functionality and prevent the operation of connected features. Connected services excludes Wi-Fi hotspot.

<sup>3</sup>Available on select vehicles. Requires feature activation.

<sup>4</sup>See dealer for details.

\*\*Roadside Assistance is available up to five years or 60,000 miles, whichever comes first.

Cabin Overview ..... 1

Steering Wheel Controls.....3

Seat Controls.....5

Lighting Controls .....7

Doorpad Keycode .....8

Climate Controls .....9

Split Gate .....10

Vehicle Set-up..... 11

Connect Your Vehicle.....14

Widget Display .....15

Voice Assistant.....16

Audio Controls .....17

Driving Modes .....18

Driver Assist.....19

BlueCruise ..... 20



ford.com/support



ford.ca

**Learn More About Your New Vehicle**

Scan the country-appropriate code with your smartphone (make sure you have a scanner app installed), and you can access even more information about your vehicle.



## Cabin Overview

2025 EXPEDITION

### 1 Panoramic Cluster / Display

- Important driver information is displayed on the left.
- Customizable widget and navigation are displayed on the right. See the **Select Widget** section in this guide for more details.

### 2 Steering Wheel Controls

- Activate steering wheel controls by touching the steering wheel control pad on the left or right. The left control pad controls Driver Assistance features, and the right control pad controls Driver Adjustments and phone/media/voice.
- See the **Steering Wheel Controls** section for more details.

### 3 Main Display

- 🏠 Home
- 🚗 Quick Controls
- 📱 Apps
- 🗨️ Select widget
- 👤 Profiles – Tap profile icon to set up, edit, and switch between profiles. See the **Vehicle Setup** section for more details.
- 🌡️ Climate Controls
  - Adjust your comfort settings such as temperature, airflow, fan speed, and more with a simple touch. See the **Climate Controls** section in this guide for more details.
- ⚙️ Lighting Controls
  - Tap the lighting controls icon to adjust exterior, interior, and zone lighting if vehicle is equipped. See the **Lighting** section in this guide for more details.

### Physical Controls

- ⓐ ENGINE | START STOP button – The key must be inside the vehicle to start the engine. Press the Engine Start-Stop button while pressing the brake pedal to turn ignition on. Press the Engine Start-Stop button to turn engine off.
- ⓑ Gear Selection Dial – Press the brake pedal then press the desired gear to shift your vehicle in or out of gear. Selected gears will illuminate on the transmission selector.
- ⓒ Volume Knob – Press the volume knob to turn audio on/off. Rotate the volume knob to increase/decrease volume. Refer to Audio Controls in the Owner's Manual for more information.
- ⓓ Camera Views – Use the camera button to access 360° Camera system. Refer to the 360° Camera section of the Owner's Manual for more information.
- ⓔ Driving Modes – Select Drive Mode or 4x4 Mode in response to driving and road conditions. Refer to the Drive Modes section of the Owner's Manual for more information. NOTE: 4x2 vehicles can easily access drive modes through **Quick Controls** on the main display screen.
- ⓕ Flex Powered Console buttons – Use the Console arrow buttons to slide console forward and backwards.

**Intro and Adjustments – Right Touchpad**

Your vehicle has capacitive steering wheel controls, that allow the driver to adjust/activate various vehicle functions. Running your finger over the left hand or right hand controls will pull up the corresponding box of options on the panoramic display, allowing you to conveniently control the vehicle while keeping your eyes focused on the road.

**Right Steering Wheel Control Pad – Driver Adjustments and Media Control**

The right steering wheel control pad controls driver adjustments, media, calls and other various functions.

**Left Steering Wheel Control Pad – Advanced Driver Assist Features**

The left steering wheel control pad controls advanced driver assist features, such as BlueCruise, Cruise Control and Lane-keeping Assist.

**Steering Wheel Adjustments**

- Place your finger on the right steering wheel control pad.
-  A menu of options will appear in your panoramic display. Press the driver adjustments icon.
-  Press the steering wheel icon to adjust your steering wheel.
  - Use control pad to make adjustments using the guided prompts on the panoramic display.

**Pedals Adjustments (if equipped)**

- Place your finger on the right steering wheel control pad.
-  A menu of options will appear in your panoramic display. Press the driver adjustments icon.
-  Press the pedal
  - Use control pad to make adjustments using the guided prompts on the panoramic display.

**Voice Assistant**

To activate Google Assistant from your steering wheel controls:

- Touch the right side of the steering wheel control pad to bring up the panoramic display menu.

 Press the voice assistant icon.

**Phone and Media Controls**

Touch the right side of the steering wheel control pad to bring up the panoramic display menu.

**Media Controls**

To engage media:

  Press the Play/Pause icon to play and pause media.

  Press the Volume icons to adjust media volume.

  Press the Back or Forward icons to navigate.

**Active Calls**

To operate calls:

 Press the Answer Call icon to accept calls.

 Press the End Call icon to end calls.

  Press the Volume icons to adjust call volume.

### Basic Seat Adjustments (driver and passenger)



Change seat back position to an upright or reclined position.

Slide the seat position forward or back and raise or lower the seat position.

Adjust the lumbar in or out.

### Advanced Seat Functions (if equipped)

The available perfect position seats with multi-contour seats allow you to tailor your seating position for ultimate comfort. Designed with comfort in mind the seats provide a personalized experience for the driver and the front passenger.

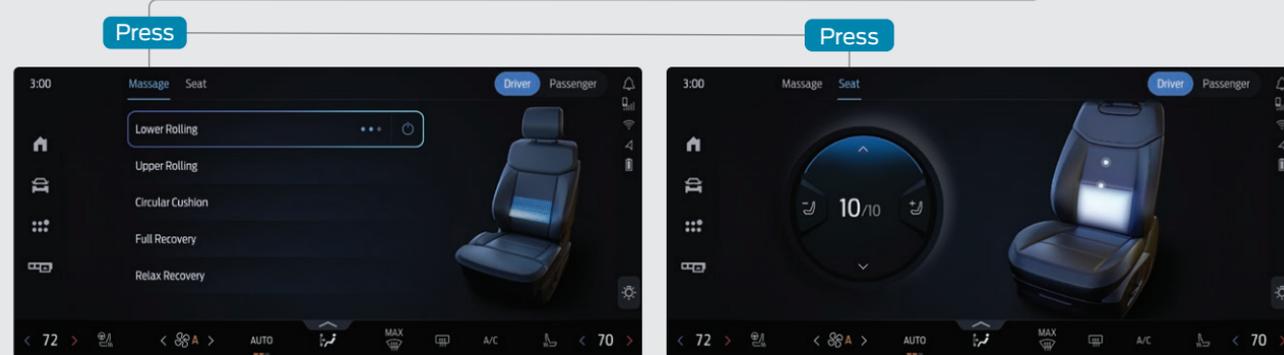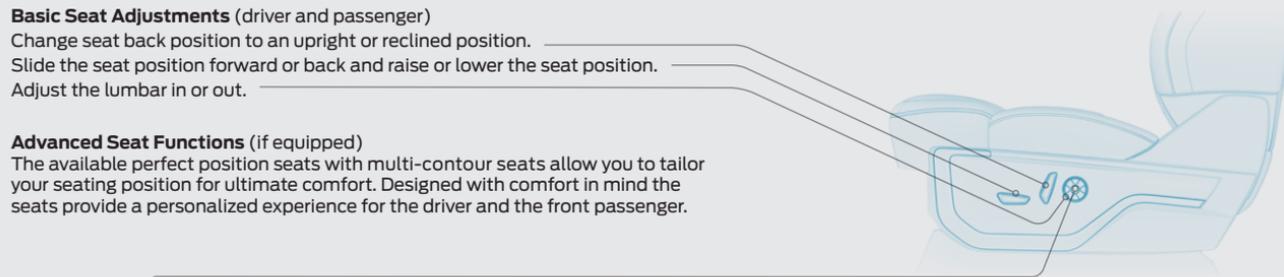

### Message

- To activate Message press the center of the circular button.
- Select a Message by pressing up or down on the circular button.
- Adjust Message intensity by pressing forward and back.

### Seat

- Press the center of the circular button to select the seat view.
- Choose a section by pressing up or down on the circular button.
- Adjust by pressing forward and back on the circular button.

This feature allows for easier entry and exit from the third row seat.

- Press the button on top of the seat backrest and tilt the entire seat forward.
- Tilt the entire seat forward.
- Slide the seat forward until it stops.

To return the seat to the seating position:

- Slide the seat rearward while pulling down on the backrest until the latch fully engages.

To move the seat further back:

- Pull the lever under the front of the seat and slide backward.

NOTE: You can slide the outermost seats forward when using a child restraint.



**Exterior Lighting**

Headlights will automatically adjust to exterior lighting conditions. You can manually control your headlights from the lightning menu if your vehicle is equipped. Tap the tabs along the top of the screen to change between Exterior, Interior, and Zone Lighting.

-  Tap to access lighting controls
-  Tap Autolamps to turn headlamps On/Off based on available daylight.
-  Tap to switch on headlamps.
-  Tap to turn On/Off parking lamps.
-  Tap to turn off headlamps.
-  Tap settings for additional lighting settings.

**Interior Lighting (if equipped)**

Ambient lighting is available when the headlamps are on.



- Select a color or adjust the brightness using the slider bar.
- Adjusting the slider bar to the minimum setting turns off the ambient lights.

**Zone Lighting (if equipped)**

In equipped vehicles, Exterior Zone Lighting divides the exterior lighting into zones that provide lighting around your vehicle's perimeter.

There are individual zone controls for each zone.

Zone lighting illuminates when vehicle is on or off. When off, the lighting will automatically turn off after a set duration.

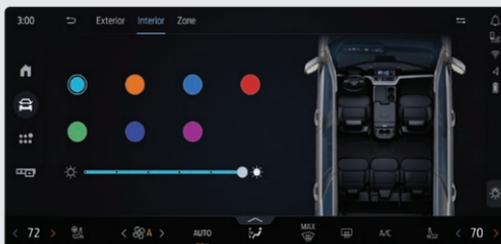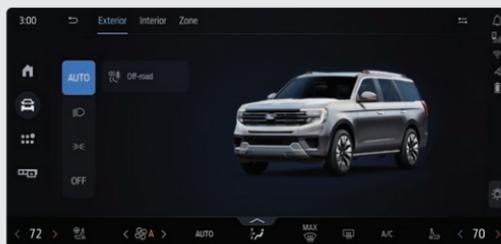**Displaying The Keypad Master Code**

Your vehicle door keypad allows you to lock and unlock your vehicle using a numerical code. The keypad is located on the black applique above the door handle and illuminates when touched. You can view the master access code in the instrument cluster display by carefully following these steps:

- Open the floor console storage compartment lid.
- Locate the Passive Key Backup Position slot. See the "Starting and Stopping the Engine" section of the Owner's Manual for more.

NOTE: All steps from this point forward must be completed within 30 seconds in the exact sequence listed. If a mistake is made, stop and wait at least 60 seconds before starting over.

**Please review these steps before beginning:**

- Place the first of your Intelligent Access key fobs into the backup slot.
- Press the push-button ignition switch once and wait three seconds.
- Press the push-button ignition switch again and remove the first key from the Passive Key Backup Position slot.
- Insert the second Intelligent Access key fob into the Passive Key Backup Position slot.
- Press the push-button ignition switch.

The 5-digit master access code will appear in the panoramic display after other warning messages display. Save the code so you can use it later.

**Programming Your Own Personal Access Code**

Follow these steps to program your a personal access code:

- Enter your master access code on the keypad
- Press 1-2 on the keypad within five seconds.
- Enter your personal access code. You must do this within five seconds of completing the above step

The personal access code must have the same number of digits as your master access code.

To confirm the process was successful, the doors lock then unlock.

Your vehicle will support up to five unique access codes. Refer to the Owner's Manual for more information.

Most climate controls only function when the engine is on. The key must be located inside the vehicle to start the ignition.

### 1 Setting the Temperature

 Dual zone temperature may be adjusted on both sides of vehicle.

### 2 Heated, Ventilated Seats and Heated Steering Wheel (if equipped)


-  Press to reveal the Heated Seat and Steering Wheel Controls.
-  Press to operate the Heated Steering Wheel.
-  Press to operate Auto Climate Seating.
-  Press to operate Heated seating.
-  Press to operate Ventilated seating.

### 3 Adjusting the System Fan Speed

 Use arrows to adjust the fan speed.

### 4 Auto Mode

-  Enable AUTO control to allow the climate system to reach set temperatures as quickly as possible.
  - Controlling AUTO levels prioritizes how quiet the system should be over how quickly a set temperature is reached.

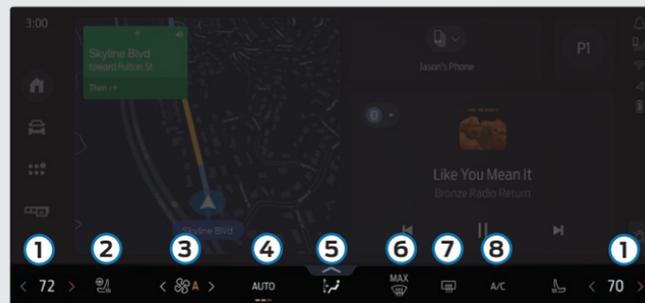

### 5 Climate Control Menu

-  Press for additional climate controls including recirculate, MAX A/C, Air Distribution, and rear passenger controls.

### 6 Maximum Defrost

-  When enabled, allows climate system to maintain visibility by increasing fan speed, directing air to the windshield, and automatically enabling rear defrost.

### 7 Rear Defrost

-  Enable to help clear rear visibility concerns.

### 8 Air Conditioning

-  Cools the vehicle's interior climate manually, or automatically when AUTO is enabled, to reach a set temperature.

The Split Gate consists of an upper liftgate and a lower tailgate that can be opened either together or separately.


### To use the Split Gate

-  Press Split Gate button on remote twice to open the split gate (this can be configured in the touchscreen – see the “Split Gate” section of your Owner’s Manual for details).
  - Press Split Gate button once to close the split gate.
  - You can also press the liftgate button to the right of the camera to access the tailgate control button. Press to open the tailgate.

### While Inside the Vehicle

- Use the buttons on the instrument panel to the left of the steering wheel or tap the buttons on control screen.
  -  Press/tap to open the liftgate only.
  -  Press/tap to open the liftgate and tailgate together.
  -  Press to close both.

See the Split Gate section of your Owner’s Manual for further details.

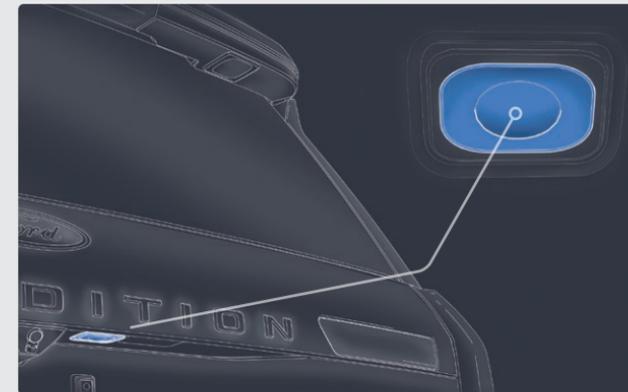

Enjoy next-level personalization and enhance your driving experience by activating your vehicle's modem, connecting your accounts to the FordPass app, and setting up a user profile to enable apps, voice assistant, and more.

#### To Begin Vehicle Set-up

- Download the FordPass app and create an account.
- You'll need your Google Account username and password to access key features and create a personalized Google experience.

#### To Connect

- Activate the vehicle's embedded modem and connect to your Ford Account by scanning the QR code on the center screen with your phone camera, which will open the FordPass app.
  - Wait for the confirmation message, "Your vehicle has been connected."
  - If the QR code does not appear, tap on the Profile tile (P1) to begin your profile setup.
 

NOTE: If the QR code step above is not working, use the steps below to connect the new vehicle to your account via the FordPass app.
- **In the FordPass App:** Follow the steps to add a vehicle and tap "Connect."
- **In the vehicle:** Start the vehicle and tap "Enable" when the pop-up message appears on the center screen. It may take a couple of minutes for the system to complete the process.

#### Profile Set-up

Setting up a Profile with your Google Account will give you access to key features and unlock new levels of personalization and convenience.

#### If you don't sign in with your Google Account, you won't be able to:

- Have access to the Google Play Store to download apps.
- Get personalized Google Maps results including saving locations.
- Get personalized Google Assistant results such as calendar events.

#### To Set Up Your Profile

Make sure to follow all on-screen steps including seat and mirror adjustments.

- Turn the vehicle on, remain in Park, and follow the on-screen profile setup steps. If the prompt does not appear, tap the "Profile" tile (P1) on the home screen to start the process.

NOTE: You must accept the Google Terms of Service to fully utilize your apps, Google Assistant, and Google Maps. Although Google Assistant and Google Maps function without a Google Account, only a Google Account will allow you to enjoy an all-encompassing and tailored experience. Google Assistant, Google Maps, and Google Play require the Ford Connectivity Package.

*Apple CarPlay is a trademark of Apple Inc., registered in the U.S. and other countries and regions.*

#### Pair a Phone for Hands-Free Calling and Media

To pair a phone, ensure the phone's Bluetooth® is turned on, tap the vehicle name on the Bluetooth list, and follow these steps:

- On the home screen, tap the Add Phone tile.
- Ensure device is in Bluetooth pairing mode and tap screen to select the device you wish to pair.
- Confirm the one-time matching PIN on your phone and touchscreen.
- Tap Pair on the phone and again on the vehicle touchscreen.
- Choose to enable or disable 911 Assist.
- See "Use contact names to improve calling and texting" and tap Continue.
- You may now use Apple CarPlay® with your iPhone® or Android Auto™ with your Android™ or return to the Ford Digital Experience.

NOTE: To allow Google Assistant access to your contacts, ensure that you share your contacts from your device with Google/Ford when you connect your device via Bluetooth.

NOTE: Phones may be charged on the wireless charging pad or with a USB cord.

NOTE: Apple CarPlay® will only connect wirelessly to your vehicle. Android Auto™ may connect wirelessly or via USB.

#### FordPass App

The FordPass app lets you manage the features and information you use most, including vehicle health alerts, Preferred Dealer service scheduling, monitoring fuel levels, Phone-As-A-Key, and remote functionality such as lock/unlock and start vehicle if equipped.

To enable Phone-As-A-Key from inside the vehicle if equipped:

- Log in to the FordPass app.
- Go to the Vehicle screen.
- Tap Setup in the "Make this Phone a Key" box.
- Select "Pair Device".
- A prompt for Bluetooth access will appear.
- Tap "OK" to begin download.
- Select "Copy" on the next pop-up.
- Paste your code.
- Select "Pair" or "OK."

**Connectivity Package**

The Ford Connectivity Package allows the Ford Digital Experience to keep you connected, on any device with the FordPass app. Ford's built-in Wi-Fi® Hotspot, offers integrated Google Maps, video streaming, voice assistant, productivity apps, and more.

**Wi-Fi Hotspot**

Ford Connectivity Package includes a Wi-Fi Hotspot, so you can connect up to 10 devices, within a 50-ft radius of your vehicle.

**Enable the hotspot:**

 Tap the apps icon on the touchscreen.

 Press "Hotspot."

- Scan the code or follow instructions on the touchscreen to connect your device.
- Follow the touchscreen instructions to activate your trial or activate from the FordPass app Connected Services page.
- The Connected Services portal allows you to activate your trial, authorize auto renewal, and manage your account. For more information see the Hotspot section of your Owner's Manual.

**Google Play Store**

The Ford Digital Experience allows you to download apps such as entertainment, gaming, and more to your vehicle through the Google Play Store without connecting a device.

NOTE: Play Store apps must be signed into a Google Account and Ford Connectivity Package is required to download apps onto individual driver profiles.

To access the Google Play Store and download apps:

 Tap the app icon on the touchscreen.

 Tap the Play Store icon.

- Search for and select the apps you want to download.

In the Apps Drawer, you can organize the apps by pressing and holding the icon and dragging the apps into your preferred order. Video streaming and gaming apps are Stationary and can only be used while parked.

**Voice Assistant**

The Ford Connectivity Package enables Voice Assistant commands that allow you to control navigation, listen to music, set reminders, check the weather, and more all with your voice.

Depending on your default voice assistant, just say "Alexa" or "Hey Google" to activate the assistant you're looking for and control vehicle functions or compatible smart home devices.

To get started:

- Press "Assistant & Voice" then "Digital Assistant" in the settings menu.
- Press and hold the "Push-To-Talk" button for a moment to activate your Bluetooth device's assistant.

**Google Assistant**

Google Assistant can handle a wide range of requests to help you drive without distraction.

There are three ways to summon Google Assistant:

- Say "Hey Google" or "OK Google" followed by your request.

 Quick press the Push-to-Talk button on your steering wheel.

 Tap the Google Assistant icon on the center screen.

Try saying:

"Play podcast."  
 "Take me home."  
 "Set temp to 68."  
 "Read text."

**Alexa Built-in**

Alexa Built-in allows you to access an ever-evolving menu that helps make your life more productive, entertaining, and connected while using your vehicle.

To get started:

- Tap the App icon on the touchscreen to sign in to your Amazon Account.
- Tap the Alexa icon and follow prompts to sign in.

Once signed in, there are three ways to summon Alexa:

- Say "Alexa" with the wake word.

 Quick press the Push-to-Talk button on your steering wheel.

 Tap the Alexa icon from the Alexa App screen.

NOTE: Vehicle connectivity and vehicle data sharing must be enabled.

*Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.*

*Apple CarPlay is a trademark of Apple Inc., registered in the U.S. and other countries and regions.*

*Google, Android Auto, and Google Maps are trademarks of Google LLC.*

*Compatible Android phone and compatible active data plan required.*

### Software Update Settings

Software updates are sent directly to the vehicle via a cellular or Wi-Fi connection which allows you to receive vehicle updates from anywhere within range of a cellular or Wi-Fi network. Connecting your vehicle to your home Wi-Fi may help provide better coverage.

For a seamless experience, keep automatic updates ON, set a recurring schedule, and connect your vehicle to your personal Wi-Fi. Go to Settings then Software Updates from your vehicle touchscreen to manage update details.

### Switching Automatic Updates On/Off

Your vehicle may come with Automatic Updates switched ON. To make sure your vehicle always has the latest software, security and enhancements, we recommend keeping Automatic Updates ON. If Automatic Updates are turned OFF, approval is required to download or install a software update.

### Scheduling and Installing Software Updates

Some updates may require your vehicle to be switched OFF, so we recommend selecting a time you normally don't use your vehicle, such as overnight.

 **To install an update:** Tap the apps icon and select "Software Updates".

 **To set a schedule:** Tap settings icon and tap Recurring schedule to set a schedule.

If you choose not to set a schedule, you'll be required to install the software updates from the touchscreen. To do so, tap "Software Updates" in the menu followed by "Update Details" and "Update Now."

### Manual update option:

If you prefer to not leave Automatic Update ON, you'll be prompted to "Install Now" every time an update is available. The vehicle may be temporarily unavailable during installation. Most updates complete in less than 30 minutes, although some could take longer. Others happen during normal vehicle usage.

### To Select a Widget for your Panoramic Display:


- 1 Tap the panoramic display icon in your center screen task bar.
- 2 Select the desired widget to display on your panoramic screen.
- 3 The widget will now appear in the panoramic screen.

### Available Widgets

Clock, Fuel economy, Gauges, Media, Off-road status, Tire pressure, Towing status, Trailer trip, Trip 1, Trip 2, and Weather. When changing to the Trailering or Off-road drive mode, the widget will update to show Trailer status and Off-road status.



- 1 **On/Off:** Press the Volume knob or tap the Audio tile on the home screen.
- A **Audio App Screen:** To access advanced audio settings tap Audio tile on the home screen and select from options.
- 2 **Switching Sources:** In the Audio tile, tap the Source menu to show all available audio sources such as AM, FM, SiriusXM, Bluetooth, etc. and select.
- 3 **To Change Station/Song:**
  - B Tap “Forward” or “Backward”
  - C Tap the keypad to enter a station number.
  - D Presets in AM/FM: While listening to a station, tap “Add Preset” to add a new station to the bottom of the screen. There are five presets. Swipe along the preset bar to access other presets.
  - E Radio Settings: Press settings in the top right of the audio screen to access radio and sound settings.

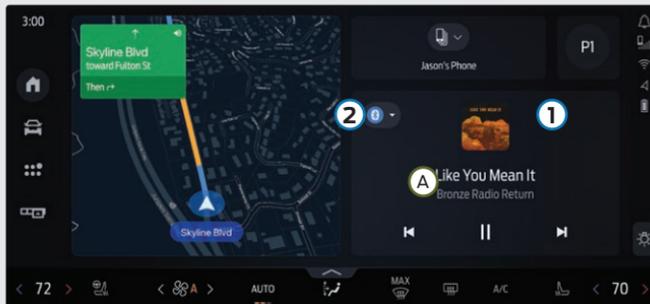

#### 4x4 Modes

Vehicles equipped with 4-Wheel Drive (4WD) provide torque to all four wheels simultaneously for better handling on challenging terrain like snow and ice.

To select a 4WD Mode on equipped vehicles push the 4WD button located on the instrument panel on the left side of the steering wheel.

- **2-Wheel Drive High (2H)** sends power to the rear wheels only for general on-road driving.
- **4-Wheel Drive Auto (4A)** provides electronically controlled 4-wheel drive power to the front and rear wheels, as needed, for increased traction in varying on-road conditions. The 4-wheel drive auto tuning varies based on Drive Mode.
- **4-Wheel Drive High (4H)** provides consistent 4-wheel drive power to all four wheels in off-road or difficult driving conditions such as deep snow, sand, or mud. This mode is not for use on dry pavement.
- **4-Wheel Drive Low (4L)** provides consistent 4-wheel drive power to all four wheels for use on low traction surfaces — with additional gearing for increased torque multiplication. This mode is only for off-road conditions such as deep sand, steep slopes, or pulling heavy objects.



#### Drive Modes

Drive Mode Control provides enhanced vehicle control and driving dynamics for various scenarios, terrains, and road conditions. Drive Modes include:

- **Normal Mode:** Balances vehicle performance for everyday driving.
- **Tow/Haul Mode:** Optimizes engine and transmission performance to accommodate heavier loads or trailer towing.
- **Eco Mode:** Softens throttle response for maximum fuel efficiency and extended driving range.
- **Sport Mode:** Increases throttle response and adjusts system settings for a more responsive and dynamic driving experience.
- **Slippery Mode:** Optimizes traction and stability controls to maintain vehicle control on slick/slippery roads.
- **Off-Road Mode:** Increases control and traction for challenging/off-road environments.
- **Rock Crawl Mode:** Provides precise control and stability during low-speed navigation over rocky/uneven terrains.

The vehicle is equipped with several Driver Assist features that help control speed, vehicle steering, and lane changes. Features activated by the left-hand steering wheel touchpad include:

- ⓘ Cruise control, Adaptive Cruise Control and BlueCruise features can be activated on the left touch pad of the steering wheel.
  - **Cruise control** – Maintains a set speed.
  - **Adaptive Cruise Control** – Adjusts your speed, maintains a set distance between you and the vehicle in front of you, and stops and resumes driving in stop-and-go traffic.
  - **BlueCruise** – Lets you relax when driving in a hands-free Blue Zone.
- ⓘ Lane-Keeping System and Lane Centering Assist features can be activated by the left touch pad of the steering wheel.
  - **Lane-Keeping System** – Provides warnings of lane departure.
  - **Lane Centering Assist** – Ushers the vehicle back into the lane.



BlueCruise\* uses a driver-facing camera, Adaptive Cruise Control, and Lane Centering Assist to control the steering, braking, and acceleration of the vehicle for hands-free driving.

### For BlueCruise to work:

- You must have your eyes on the road as detected by a driver-facing camera that tracks eye gaze.
- Lane lines must be clearly visible by the external sensors on the vehicle.
- The vehicle must be in a “Blue Zone” as determined by the connected maps in the vehicle. Blue Zones make up 97% of controlled-access highways across the U.S. and Canada.

### Enabling BlueCruise:

- Locate and tap “Settings” on the vehicle’s touchscreen.
- Tap on “Driver Assistance.”
- Select “Cruise Control.”
- Select “Adaptive Cruise Control.”
- Select “Lane Centering with Hands-Free.”
- Enable “In-Lane Repositioning” and “Lane Change Assist.”



### To Use BlueCruise on the Road:

- ⓘ Press the Adaptive Cruise Control button on the steering wheel.
  - The instrument panel will turn blue, and the “Hands-Free” icon will appear when you enter a Blue Zone.
  - Drive Hands-free with your eyes on the road when in a Blue Zone.
  - To cancel BlueCruise, hit either the Adaptive Cruise Control or Lane Centering buttons on the steering wheel, or press the brake.

*\*Available Feature. Equipped Ford vehicles come with either a complimentary trial period or an included duration, after which purchase of a BlueCruise subscription is required. Modern activation is required for subscription purchase and for initial activation of BlueCruise (for pre-2024 model year vehicles). See [ford.com/bluecruise](https://ford.com/bluecruise) for details. BlueCruise is a driver-assist feature and does not replace safe driving or driver’s attention, judgment or need to control the vehicle. Only remove hands in a Hands-Free Blue Zone. Always watch the road and be prepared to resume control. See Owner’s Manual for details and limitations*