

Roadside Emergencies


This card supplements information found on page 205 and 206 of your owner guide.

The following steps apply to F350 Chassis Cab and F450/F550 only:


12. Slide the notched end of the jack handle over the release valve and use the handle to slide the jack under the vehicle. Make sure the valve is closed by turning it clockwise.

13. Position the jack according to the following guides:


- Front (4x2) F450/550

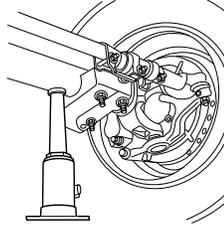



- Front driver side (4x4): F-350 Chassis Cab
- Front driver side (4x4): F450/550 with gray jack

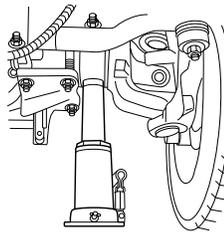

- Front (4x2) F350 Single Rear Wheel (SRW) Chassis Cab only
- Place jack directly under jacking pin.

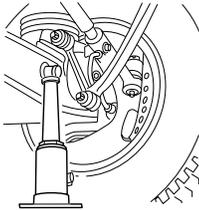

- Front (4x2) F350 Dual Rear Wheel (DRW) Chassis Cab only
- Place jack directly under I-beam.

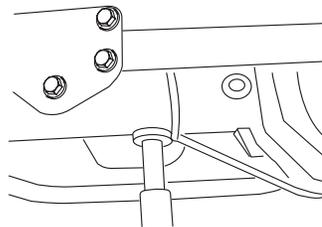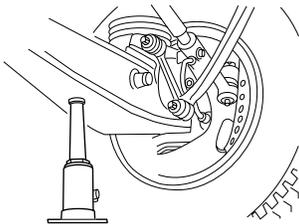

- Front driver side F450/550 (4x4) with red jack

4C3J-19B146-AA