



Your vehicle is equipped with the **TREMOR Edition Audio System**. This powerful system includes an **AM/FM "in dash" MP3/6CD Player**. The **10-inch subwoofer speaker** is floor mounted in a custom enclosure behind the front seats. This enclosure also contains an amplifier to power the subwoofer and all four 6x8 coaxial speakers in each corner. The system is capable of producing up to 510 watts of peak power.

TREMOR Pioneer Audiophile System



CAUTIONS + WARNINGS

The subwoofer enclosure (including speaker and amplifier) is made from strong high-density polyethylene plastic. This enclosure should not come in contact with any type of moisture.

Operating the audio system at high volume levels for approximately two to three hours with the engine off may discharge the battery to a "no-start" condition.

If the volume level becomes erratic while playing the system with the engine off, it means the battery has a low state of charge. Turn off the system and start the vehicle to charge the battery. If the system is erratic when the engine is on, this indicates the amplifiers are overheating. Turn off the system to allow it to cool down. Numerous occurrences of this condition may reduce system life.

Avoid exposing the subwoofer to water, it may damage the system and void your warranty.

Do not attempt to attach additional speakers to your Tremor Edition Audio System, this may result in damage to the system.

Prolonged exposure to excessive sound levels can cause hearing damage. Play the system at a safe level without annoying blaring or distortion and without affecting your sensitive hearing.

Since the amplifier surface (under the subwoofer enclosure) dissipates heat during operation, keep your hands and feet away from under the subwoofer enclosure.

This audio system is covered by the Ford Motor Company NEW VEHICLE LIMITED WARRANTY and can be serviced by any Ford Motor Company dealership. Tampering with any component of this system may invalidate warranty coverage. For complete warranty information, see the Warranty Guide included with your vehicle.

TREMOR



4L5J-19G218-AA

JUNE 2003
First Printing
Quick Reference Guide

Ranger
Litho in U.S.A.

TREMOR >



AUDIO SYSTEMS

TREMOR Pioneer Audiophile System Audiophile System

TREMOR Pioneer Audiophile System



OPERATING INSTRUCTIONS >



01

02

03

04

05

06

07

08

09

10

11

12

13

14

18

17

16

15

04

- 01** **LOAD** — To load a CD / MP3 disc to a specific slot, press LOAD and select slot by pressing desired preset button. Press and hold to autoload up to six discs.
- 02** **AM / FM** — Press to choose frequency band
- 03** **SEEK** — In radio, CD and MP3 flat file mode, press SEEK to access previous / next station or track.
- 04** **MEMORY PRESETS** — Press and hold desired button until sound returns to set a station to a memory preset button.
- 05** **MUTE** — Press to mute system.
- 06** **REW** — Press to manually reverse CD track.
- 07** **FAST FORWARD (FF)** — Press to manually advance a CD track.
- 08** **REPEAT** — Press to repeat current CD / MP3 track.
- 09** **SCAN** — In radio, CD, MP3 flat file mode, press for a sampling of stations or tracks. Press again to stop.
- 10** **ON / OFF / VOLUME** — Press to turn system ON / OFF. Turn to adjust volume.
- 11** **MENU** — Press to toggle through the following modes:
 Autoset - Allows you to set the strongest radio stations. Press MENU to access and TUNE to set.
 Bass - Press TUNE to adjust Bass levels.
 Treble (TREB) - Press TUNE to adjust Treble levels.
 Balance (BAL) - Press TUNE to adjust audio between right and left speakers.
 FAD E - Press TUNE to adjust audio between front and rear speakers.
 Flat File / Directory Mode - In MP3 mode choose between these two modes.
 Track Num / Music Name / File Name - Press TUNE to choose each view
- 12** **COMPRESSION (COMP)** — In CD / MP3 modes, press to make loud and soft passages achieve a more consistent listening level.
- 13** **SHUFFLE (SHUF)** — Press to play MP3s or CD tracks in random order.
- 14** **TEXT** — In MP3 music name / file name mode press to view the next 12 characters of the MP3 track and directory.
- 15** **TUNE** — In radio mode, press to manually go up or down the radio frequency, or to access another CD. Also use in menu mode to select various settings.
- 16** **CLOCK (CLK)** — Press CLK until SELECT HOUR / SELECT MINUTE is displayed. Press TUNE to adjust hours and minutes.
- 17** **CD** — Press to enter CD mode. If a CD is already in the system, it will begin playing.
- 18** **EJECT (EJ)** — To eject a CD, press EJ and select the correct slot number by pressing the Memory Preset buttons. Press and hold to eject all loaded CDs.