

THE 2009 SPORT TRAC

was engineered with your lifestyle in mind – tough enough to take on what the road ahead gives you, yet sophisticated with new and advanced features. Some of these features you will find to be intuitive, while others may be new to you. Please take a few moments to familiarize yourself with your new Sport Trac by reading this Quick Reference Guide, which discusses features, specifications and general information. For more detailed information including important safety information, please refer to your Owner's Guide.

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.



Instrument Panel

1. ABS Warning Light
The ABS light  illuminates briefly when the ignition is turned on. If the light does not turn on or begins to flash, contact your authorized dealer as soon as possible. For more information, please refer to Tire pressure monitoring system (TPMS) in the Tires, Wheels and Loading chapter of your Owner's Guide.

2. Service Engine Soon Light
The Service engine soon light  illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

3. Low Tire Pressure Warning Light
This light  illuminates when the ignition is turned on. If the light does not turn on or begins to flash, contact your authorized dealer as soon as possible. For more information, please refer to Tire pressure monitoring system (TPMS) in the Tires, Wheels and Loading chapter of your Owner's Guide.

4. Message Center (if equipped)
The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime.

Optional Message Center (if equipped)
INFO: Press to scroll through the following displays: Odometer, Trip Odometer A or B, Distance

5. Multi-function Lever
Rotate the end of the control up to increase the speed of the wipers and rotate down to decrease the speed of the wipers. Briefly press the end of the stalk for a single swipe of the wipers without washer fluid. A quick push and hold results in three swipes with washer fluid while a longer push and hold activates the wash pattern for up to five seconds. Pull the lever towards you briefly to activate the 'flash to pass' feature. For better visibility, your

vehicle will also automatically turn on your headlights (during daylight) if your windshield wipers and autolamps  are on. To operate your rear window wiper, turn the rear wiper control to the 1 or 2 speed settings or O (off). For a rear wash cycle, turn the rear wiper control to the  position. To turn on the highbeams, push the lever away from you. Pull the lever toward you to deactivate.

6. Hazard Flasher Control
The hazard flasher is located on the steering column, just behind the steering wheel. Press to activate all front and rear direction signals. Press to deactivate.

7. Speed Control
To set the speed control, press and release ON. Accelerate to the desired speed. Press and release the SET + control. Take your foot off the accelerator pedal. The speed control indicator light  will illuminate in the cluster. To set a higher speed: press and hold SET+ until the desired speed is reached, or briefly press SET+ to increase the speed by small amounts. To set a lower speed: press and hold SET- until the desired speed is reached, or briefly press SET- to decrease the speed by small amounts. Press RES to return to the previously set speed. To turn speed control off, press OFF.

8. Headlamps, Fog Lamps, Panel Dimmer Control
Turn the control one position to the right  to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right  to turn on the headlamps.

9. Parking Brake Release
Pull the lever to release the parking brake. Driving with the parking brake engaged will cause the brakes to wear out prematurely and reduce fuel economy.

10. Four-Wheel Drive (if equipped)
When 4X4 AUTO is selected, power is automatically provided to all four wheels. It is used for normal street and highway driving. 4X4 HIGH is used for extra traction in slippery conditions, such as in snow, on icy roads, or in off-road situations. It should not be operated on dry pavement. 4X4 LOW can be selected to provide extra gearing to deliver maximum power to all four wheels. It is intended only for off-road applications such as deep sand, steep grades or pulling heavy objects.

11. AdvanceTrac® with Roll Stability Control™ (RSC®) Stability Enhancement System
Your vehicle is equipped with an AdvanceTrac® stability system. This system focuses on three main areas: Traction control (which helps avoid wheel spin and loss of traction), Electronic Stability Control (which helps avoid skids or lateral slides), and Roll Stability Control (which helps avoid a vehicle roll-over). These features work together to help you to maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac® system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off.

12. Power Adjustable Pedals (if equipped)
Press the bottom of the control  to move the pedals closer to you or the top of the control  to move the pedals further away from you.

13. Heated Seats (if equipped)
To operate the heated seat function, push the control to activate and push again to deactivate.

Cargo Management System & Pickup Box Storage
The cargo management system consists of 3 storage compartments located in the floor of the pickup box and behind each wheel well. The storage compartments have been designed to be a water resistant system. A small amount of water may drain into the storage compartments with the lid closed.

- To open, turn the latch counterclockwise to unlock and lift the lid.
- To close, lower the lid and turn the latch clockwise to lock.

Interior Tiedown Hooks
Your vehicle is equipped with interior tiedown hooks mounted inside the pickup box. Each tiedown hook can secure loads up to 200 lb. (91 kg). Total pickup box cargo weight is not to exceed overall vehicle payload.

Cargo Cage (if equipped)
Your vehicle may be equipped with a cargo cage designed to extend the pickup box for larger loads. To extend the cargo cage:

- Lower tailgate.
- Pull the lever on each side of the cargo cage to release it from the pickup box.
- Flip the cargo cage over on to the tailgate.
- Evenly push down on the cargo cage and push the lever in on each side locking it in place. The cargo cage can be used to secure a load of up to 100 lb (45kg).

To stow the cargo cage, follow steps one through four in reverse order. For more information, refer to the Driver Controls chapter of your Owner's Guide.


Tonneau Cover (if equipped)
Your vehicle may be equipped with a lockable tonneau cover. The tonneau cover key is separate from the ignition key. The tonneau cover has been designed to maximize fuel economy and should be fully installed whenever possible.

- To open the front panel:
 - Open the front driver side lock cover and unlock the front panel.
 - Lift the panel to access items in the pickup box near the cab.
 - To close, lower the panel down on the pickup box.
- To open the rear panel:
 - Open the lock cover and unlock the rear panel using your ignition key.
 - Lift the rear panel to access items in the pickup box.
 - To close, lower the rear panel on the pickup box.

For a more detailed description on proper usage, refer to the Driver Controls chapter of your Owner's Guide.

Dual Automatic Temperature Control (DATC) (if equipped)
The climate system's display indicates the selected temperature. The passenger side can also be controlled by selecting the passenger temperature control, the temperature will appear in the display.

- EXT:** Press EXT to display outside air temperature. Press again to display cabin temperature settings.
- Driver/Passenger Side Temperature Control:** To control the temperature on the driver's side in single zone mode, press the driver temperature control; the climate system's display indicates the selected temperature. The passenger side can also be controlled by selecting the passenger temperature control, the temperature will appear in the display.
- AUTO:** Press to engage full automatic operation. The system will automatically determine fan speed, airflow distribution, A/C on or off and either outside or recirculated air to heat or cool the vehicle to reach the desired temperature.
- OFF:** Outside air is shut out and the fan will not operate.
- Manual Override Controls:** Allows you to manually determine where airflow is directed. To return to fully automatic control, press AUTO.
- DUAL:** Press to activate dual zone mode where the driver and passenger have control of their individual temperature settings. Press again to return to single zone where the driver's settings will determine the temperature for the entire vehicle.
- MAX A/C:** Press to distribute recirculated air through the instrument panel vents to cool the vehicle. This recooling of the interior air is more economical and efficient.
- Defrost** : Press to clear the windshield of fog and thin ice.

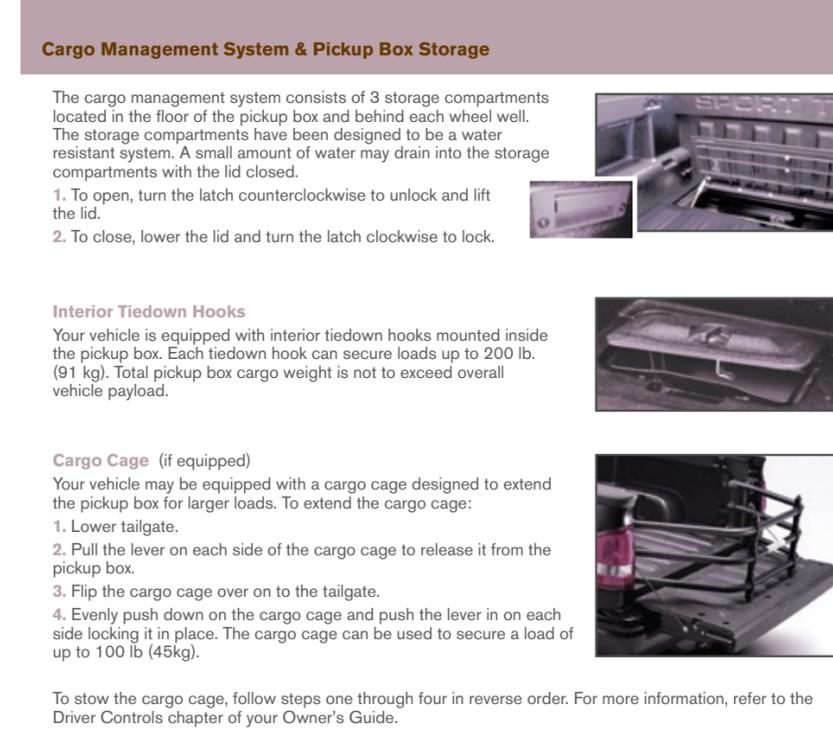

Instrument Panel

1. ABS Warning Light
The ABS light  illuminates briefly when the ignition is turned on. If the light does not turn on or begins to flash, contact your authorized dealer as soon as possible. For more information, please refer to Tire pressure monitoring system (TPMS) in the Tires, Wheels and Loading chapter of your Owner's Guide.

2. Service Engine Soon Light
The Service engine soon light  illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

3. Low Tire Pressure Warning Light
This light  illuminates when the ignition is turned on. If the light does not turn on or begins to flash, contact your authorized dealer as soon as possible. For more information, please refer to Tire pressure monitoring system (TPMS) in the Tires, Wheels and Loading chapter of your Owner's Guide.

4. Message Center (if equipped)
The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will notify you of potential vehicle problems with a display of system warnings followed by a long indicator chime.

Optional Message Center (if equipped)
INFO: Press to scroll through the following displays: Odometer, Trip Odometer A or B, Distance

5. Multi-function Lever
Rotate the end of the control up to increase the speed of the wipers and rotate down to decrease the speed of the wipers. Briefly press the end of the stalk for a single swipe of the wipers without washer fluid. A quick push and hold results in three swipes with washer fluid while a longer push and hold activates the wash pattern for up to five seconds. Pull the lever towards you briefly to activate the 'flash to pass' feature. For better visibility, your

vehicle will also automatically turn on your headlights (during daylight) if your windshield wipers and autolamps  are on. To operate your rear window wiper, turn the rear wiper control to the 1 or 2 speed settings or O (off). For a rear wash cycle, turn the rear wiper control to the  position. To turn on the highbeams, push the lever away from you. Pull the lever toward you to deactivate.

6. Hazard Flasher Control
The hazard flasher is located on the steering column, just behind the steering wheel. Press to activate all front and rear direction signals. Press to deactivate.

7. Speed Control
To set the speed control, press and release ON. Accelerate to the desired speed. Press and release the SET + control. Take your foot off the accelerator pedal. The speed control indicator light  will illuminate in the cluster. To set a higher speed: press and hold SET+ until the desired speed is reached, or briefly press SET+ to increase the speed by small amounts. To set a lower speed: press and hold SET- until the desired speed is reached, or briefly press SET- to decrease the speed by small amounts. Press RES to return to the previously set speed. To turn speed control off, press OFF.

8. Headlamps, Fog Lamps, Panel Dimmer Control
Turn the control one position to the right  to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right  to turn on the headlamps.

9. Parking Brake Release
Pull the lever to release the parking brake. Driving with the parking brake engaged will cause the brakes to wear out prematurely and reduce fuel economy.

10. Four-Wheel Drive (if equipped)
When 4X4 AUTO is selected, power is automatically provided to all four wheels. It is used for normal street and highway driving. 4X4 HIGH is used for extra traction in slippery conditions, such as in snow, on icy roads, or in off-road situations. It should not be operated on dry pavement. 4X4 LOW can be selected to provide extra gearing to deliver maximum power to all four wheels. It is intended only for off-road applications such as deep sand, steep grades or pulling heavy objects.

11. AdvanceTrac® with Roll Stability Control™ (RSC®) Stability Enhancement System
Your vehicle is equipped with an AdvanceTrac® stability system. This system focuses on three main areas: Traction control (which helps avoid wheel spin and loss of traction), Electronic Stability Control (which helps avoid skids or lateral slides), and Roll Stability Control (which helps avoid a vehicle roll-over). These features work together to help you to maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac® system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off.

12. Power Adjustable Pedals (if equipped)
Press the bottom of the control  to move the pedals closer to you or the top of the control  to move the pedals further away from you.

13. Heated Seats (if equipped)
To operate the heated seat function, push the control to activate and push again to deactivate.

Cargo Management System & Pickup Box Storage
The cargo management system consists of 3 storage compartments located in the floor of the pickup box and behind each wheel well. The storage compartments have been designed to be a water resistant system. A small amount of water may drain into the storage compartments with the lid closed.

- To open, turn the latch counterclockwise to unlock and lift the lid.
- To close, lower the lid and turn the latch clockwise to lock.

Interior Tiedown Hooks
Your vehicle is equipped with interior tiedown hooks mounted inside the pickup box. Each tiedown hook can secure loads up to 200 lb. (91 kg). Total pickup box cargo weight is not to exceed overall vehicle payload.

Cargo Cage (if equipped)
Your vehicle may be equipped with a cargo cage designed to extend the pickup box for larger loads. To extend the cargo cage:

- Lower tailgate.
- Pull the lever on each side of the cargo cage to release it from the pickup box.
- Flip the cargo cage over on to the tailgate.
- Evenly push down on the cargo cage and push the lever in on each side locking it in place. The cargo cage can be used to secure a load of up to 100 lb (45kg).

To stow the cargo cage, follow steps one through four in reverse order. For more information, refer to the Driver Controls chapter of your Owner's Guide.

Tonneau Cover (if equipped)
Your vehicle may be equipped with a lockable tonneau cover. The tonneau cover key is separate from the ignition key. The tonneau cover has been designed to maximize fuel economy and should be fully installed whenever possible.

- To open the front panel:
 - Open the front driver side lock cover and unlock the front panel.
 - Lift the panel to access items in the pickup box near the cab.
 - To close, lower the panel down on the pickup box.
- To open the rear panel:
 - Open the lock cover and unlock the rear panel using your ignition key.
 - Lift the rear panel to access items in the pickup box.
 - To close, lower the rear panel on the pickup box.

For a more detailed description on proper usage, refer to the Driver Controls chapter of your Owner's Guide.



1. EXT: Press EXT to display outside air temperature. Press again to display cabin temperature settings.

2. Driver/Passenger Side Temperature Control: To control the temperature on the driver's side in single zone mode, press the driver temperature control; the climate system's display indicates the selected temperature. The passenger side can also be controlled by selecting the passenger temperature control, the temperature will appear in the display.

3. AUTO: Press to engage full automatic operation. The system will automatically determine fan speed, airflow distribution, A/C on or off and either outside or recirculated air to heat or cool the vehicle to reach the desired temperature.

4. OFF: Outside air is shut out and the fan will not operate.

5. Manual Override Controls: Allows you to manually determine where airflow is directed. To return to fully automatic control, press AUTO.

6. DUAL: Press to activate dual zone mode where the driver and passenger have control of their individual temperature settings. Press again to return to single zone where the driver's settings will determine the temperature for the entire vehicle.

7. MAX A/C: Press to distribute recirculated air through the instrument panel vents to cool the vehicle. This recooling of the interior air is more economical and efficient.

8. Defrost : Press to clear the windshield of fog and thin ice.



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please refer to your Owner's Guide.

Ford Motor Company
Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)

August 2008
First Printing
Quick Reference Guide
Sport Trac
Litho in U.S.A.



9L2J 19G217 AA



ESSENTIAL INFORMATION

Location of Spare Tire: If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Your vehicle is equipped with a temporary spare tire located under the vehicle, just forward of the rear bumper. The temporary spare is designed for emergency use only and should be replaced as soon as possible. The jack and tools are located under the carpeted floor panel in the rear cargo area. For complete details on how to change your tire, refer to the *Roadside Emergencies* chapter in your Owner's Guide.

Fuses: If the vehicle's electrical components are not operating, a fuse may have blown. The fuse panel is located below the instrument panel on the driver's side; remove the cover to view the fuses. For more information regarding changing fuses, refer to the *Roadside Emergencies* chapter of your Owner's Guide.

Fuel Type and Tank Capacity: Your fuel tank capacity is 22.5 gallons (85.2L). Your vehicle is designed to use "Regular" unleaded gasoline with an octane rating of 87. Do not use gasoline labeled as "Regular" in high altitude areas that are sold with octane ratings less than 87. Your vehicle was not designed to run on E85 fuels that are blended with a maximum of 85% ethanol.

Tire Pressure: Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety Compliance Certification Label or Tire Label located on the on the B-Pillar or the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including spare). As an added safety feature, your vehicle may be equipped with a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light  when one or more of your tires is significantly under-inflated. Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

Fuel Pump Shut-Off Switch: The fuel pump shut-off switch is a device intended to stop the electric fuel pump when your vehicle has been involved in a substantial jolt. The switch is located in the passenger's footwell, by the kick panel. After a collision, if the engine cranks but does not start, the fuel pump shut-off switch may have been activated. For more information regarding the fuel pump shut-off switch, refer to the *Roadside Emergencies* chapter of your Owner's Guide.

Roadside Assistance: Your new Ford Explorer Sport Trac comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage period and details of service, refer to your Roadside Assistance information card.

S.O.S. Post Crash Alert System: Your vehicle is equipped with the S.O.S. Post Crash Alert system. This system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the system, press the hazard flasher control, or you can press  on your remote transmitter.

Roof Rack Crossbars: If the crossbars are repositioned close to each other, the vehicle may exhibit objectionable noise at highway speeds. This noise can be minimized by positioning the front crossbar just behind the front door, and the rear crossbar in the furthest rearward position. Refer to the Owner's Guide for more information.

Audiophile AM/FM In-Dash Six CD/MP3 Satellite Compatible Sound System (if equipped)



1. (CD Eject): Press and hold to auto eject all CDs present in the system. Press  and a memory preset to eject from a specific slot.

2. LOAD: Press LOAD and a memory preset to load to a specific slot. Press and hold to autoloop up to six CDs.

3. CD: Press to enter CD/MP3 mode. If a CD/MP3 is already loaded into the system, CD play will begin where it ended last. If no CD is loaded, NO DISC will appear in the display.

4. TEXT/SCAN: Press and hold for a brief sampling of radio stations or CD tracks. Press again to stop. In CD/MP3 mode, press to display track title, artist name and disc title.

5. SEEK: Press  to access the previous strong station or track. Press  to access the next strong station or track.

6. FF (Fast Forward): Press to manually advance in a CD or MP3 track.

7. REW (Rewind): Press to manually reverse in a CD or MP3 track.

8. FOLDER: In folder mode, press to access the previous or next folder on MP3 discs, if available.

9.  /  (Tune/Disc Selector): Press and release to manually advance up/down the radio frequency or to select a desired disc. Press and hold for a fast advance through radio frequencies or all loaded discs. Also use in menu mode to select various settings.

10.  (Phone): If your vehicle is equipped with SYNC[®], press to access SYNC[®] PHONE features. For more information, please refer to the SYNC[®] supplement. If your vehicle is not equipped with SYNC[®], the display will read NO PHONE.

11. MENU: Press this button when satellite radio mode is active to access. Press OK to enter into the satellite radio menu. Press  /  to cycle through the following options: Category, Save Song, Delete Song, Delete All Songs and Enable Alerts/Disable Alerts. For more information, please consult your Owner's Guide.

SATELLITE RADIO CONTROLS: (if equipped)
12. AUX: Press repeatedly to cycle through SAT 1, SAT 2, SAT 3 (satellite radio mode if equipped), or LINE IN (auxiliary audio mode). Press AM/FM to return to radio mode.

Satellite radio is available only with a valid SIRIUS radio subscription. Check with your authorized dealer for availability.

13. SHUFFLE: Press to play the tracks on the current disc in random order.

14.  / II OK (PLAY/PAUSE): When a CD is playing press the control to play or pause the current CD. The CD status will display in the radio display.

OK - Your vehicle may be equipped with special phone and media features which will require you to confirm commands by pressing OK. For further information, refer to the SYNC[®] supplement.

15. Memory Presets: To set a station, select frequency band AM/FM1/FM2, tune to a station, press and hold a preset button (1-6) until sound returns.

Navigation System: (if equipped) Your vehicle may be equipped with a navigation system. Refer to the Navigation Supplement for more information.

ADDITIONAL FEATURES

Remote Entry System

Your vehicle is equipped with a remote entry system which allows you to: Press  once to unlock the driver's door. The interior lamps will illuminate. Press  twice to unlock the passenger doors.

Press  once to lock all the doors. The lamps will flash.

Press  twice to confirm all the doors are closed and locked. The doors will lock again, the horn will chirp and the lamps will flash once if all the doors and trunk are closed.

Press  to activate the panic alarm. The horn will sound and the turn lamps will flash. Press  again or turn the ignition on to deactivate the panic alarm.

Car Finder: Press  twice within three seconds. The horn will chirp and the lamps will flash. It is recommended to use this method to locate your vehicle, rather than using the panic alarm.



SecuriCode™ Keyless Entry System (if equipped)

You can use the keyless entry keypad to lock or unlock the doors without a key. To unlock the driver's door, enter your five digit factory code (available on the owner's wallet card in the glove box or from your authorized dealer.) To unlock all doors, enter your five digit factory code and, within five seconds, press 3-4. To lock all doors, simply press 7-8 and 9-0 at the same time (you do not need to enter your factory code first). Refer to your Owner's Guide for more information.



Truck Bed Auxiliary Power Point

An additional 12V auxiliary power point is located in the bed of the truck. Lift the cover to access the auxiliary power point.



SYNC[®] (if equipped)



Your vehicle may be equipped with SYNC[®] – a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC[®] Supplement or to the SYNC[®] section in the Navigation Supplement. Please also feel free to visit www.SyncMyRide.com.

ADDITIONAL FEATURES (Continued)

Auxiliary Input Jack

Your vehicle is equipped with an Auxiliary Input Jack located inside the console bin. This allows you to plug and play auxiliary audio devices. Press AUX repeatedly on your audio system to access. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.



USB Port (if equipped)

Your vehicle may be equipped with a USB port inside your center console. This feature allows you to plug in your media playing devices among other options. For more detailed information, please refer to the SYNC[®] supplement or the SYNC[®] section of the Navigation Supplement.



Power Down Back Window (if equipped)

To lower the back window, the ignition must be turned on or in the accessory position. Press and release the control located in the overhead console to lower the window to the vent position. Press and release the control again to lower the window to the full open position. Press and release the control again to raise the window all the way to the full closed position.

2009 SPORT TRAC Seating

Rear Seats – Folding down the 2nd row 60/40 seats

1. Lower the head restraints by pulling the strap.
2. Locate the handle on the side of the seat cushion by the door.
3. Pull up on the handle and push the seatback forward toward the front of the vehicle.

To return the seat to the upright position make sure there are no objects trapped behind the seatback and then:

1. Lift the seatback toward the rear of the vehicle.
2. Pull up on the handle and rotate the seatback until you hear a click, locking it in the upright position.
3. Lift up on the head restraint until it locks into its original position.



Please refer to the Seating and Safety Restraints chapter in your Owner's Guide for additional seating information.



2009 SPORT TRAC Quick Reference Guide

