

ESSENTIAL INFORMATION

TIRE PRESSURE

Check your tire pressure at least once a month and before long trips (including the spare). The recommended specifications are on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. As an added safety feature, your vehicle has been equipped with a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

LOCATION OF SPARE TIRE AND TOOLS

Your vehicle is equipped with a temporary spare tire which is designed for emergency use only and should be replaced as soon as possible. Due to the different possible cab configurations, please refer to the Roadside Emergencies

chapter in your Owner's Guide for spare tire and tool location in addition to complete details on how to change your tire.

ROADSIDE ASSISTANCE

Your new Ford Super Duty comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

SOS POST-CRASH ALERT SYSTEM™

Your vehicle is equipped with the SOS Post-Crash Alert system. This system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will

sound. To deactivate the system, press the hazard flasher control , or you can press  on your remote transmitter.

IMPROVE YOUR FUEL ECONOMY

Below are several ways to improve fuel economy while driving:

- Drive sensibly
- Keep tires properly inflated
- Use cruise control
- Don't carry more than you need (you will lose up to 1% in fuel economy per 100 lbs [45 kg])
- Observe the speed limit (speeds in excess of 70 mph [112 km/h] decrease overall fuel economy)

MAINTENANCE SCHEDULE

- Make sure your vehicle is properly maintained
- Check and replace air filter regularly
- Use recommended grade of motor oil
- Avoid excessive idling
- Add tonneau cover (available as a Ford accessory)

PREMIUM PLUS IN-DASH SIX CD/MP3/SATELLITE COMPATIBLE SOUND SYSTEM (if equipped)

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

1. SETTING MEMORY PRESETS

To set a station: Select a frequency band with the AM/FM button, then select a station. Press and hold a numbered preset button 1-6 until the sound returns.

2. TEXT/SCAN FUNCTION

Press and hold for a brief sampling of radio stations or satellite radio channels (if equipped). Press again to stop. In CD/MP3 mode, press and release to display track title, artist name, disc title and file name (if available).

3. AM/FM AND CD SELECT

Press AM/FM repeatedly to cycle through AM, FM1 or FM2 frequency bands. Press CD to begin CD play.

4. ON/OFF/VOLUME CONTROL

Press to turn on/off. Turn to increase/decrease the volume.

5. LOADING CDS

To load a CD into the system, press LOAD. When prompted, select the desired slot (1-6) using the memory presets and insert the CD into the system.

Press and hold LOAD to autoloop up to six discs.

6. EJECTING CDS

Press  to eject a CD. Press and hold to auto-eject all CDs present in the system.

7. SEEK FUNCTION

Press to access the next listenable station, CD track, or previous satellite radio station.

8. SYNC

Press to access SYNC® phone features (if equipped). If your vehicle is not equipped with SYNC®, the display will read NO PHONE.

9. TUNE/DISC SELECTOR

Press to go up or down the radio frequency or to select a desired disc.

10. MENU

Press repeatedly to access the following settings, among others:

SPEED VOL (Speed sensitive volume, if equipped):

The volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Use  to adjust.

SETTING THE CLOCK:

Press MENU until SELECT HOUR or SELECT MINS is displayed. Press  to adjust the hours/minutes.

SATELLITE RADIO MENU: (if equipped): Press MENU when

satellite radio mode is active to access. Press OK to enter into the satellite radio menu. Press  to cycle through additional options.

SIRIUS® Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS® at 1-888-539-7474.

11. AUX

Repeatedly press to cycle through FES/DVD (if equipped), SYNC® (if equipped), SAT1, SAT2, SAT3 (satellite radio mode, if equipped) or LINE IN (auxiliary audio mode if equipped).

VOICE-ACTIVATED NAVIGATION SYSTEM (if equipped):

Your vehicle may be equipped with a voice-activated navigation system which integrates several functions including voice recognition, destination entry and SIRIUS® satellite radio (if equipped) in one easy to use system. **Note:** Some features are unavailable while driving. Refer to your Navigation Supplement for more information.

AUDIO + CLIMATE CONTROL



DUAL AUTOMATIC TEMPERATURE CONTROL SYSTEM WITH HEATED SEATS AND HEATED MIRRORS (if equipped)

A. AUTO

Press to engage automatic temperature control, and select the desired temperature using the temperature control. The system will automatically determine fan speed, airflow location, A/C on or off, and outside or recirculated air to heat or cool the vehicle, allowing it to reach the desired temperature.

B. DRIVER/PASSENGER TEMPERATURE CONTROLS

Press to increase or decrease the temperature on the driver or passenger side of the vehicle.

C. EXT

Press to display outside temperature. Press again to display cabin temperature settings.

D. FAN SPEED CONTROL

Press to increase or decrease the fan speed.

E. HEATED SEAT CONTROLS

Press to turn the heated seats on and off. The heated seats turn off when the ignition is turned off.

F. MANUAL OVERRIDE CONTROL

Allows you to manually select where airflow is directed. Press  repeatedly to cycle through all possible options. To return to full automatic control, press AUTO.

G. A/C CONTROL

Press to activate/deactivate air conditioning. Use with  (recirculated air) to improve cooling performance and efficiency. Engages automatically in AUTO, , (defrost) and .

H. RECIRCULATION CONTROL

Recirculates air in the cabin, thereby reducing the amount of time needed to cool down the interior of the vehicle when used with A/C.

I. DUAL

Press to activate dual zone climate control where the passenger and driver can set their own individual climate settings. Press again to deactivate and return to single zone where the driver's climate settings determine the climate settings for the entire vehicle.

J. HEATED MIRRORS

Press to defrost the outside rear view mirrors. The heated mirrors will turn off after 10 minutes or can be shut off by pressing the button again.

K. DEFROST

Use to clear ice or fog from the windshield by distributing air through the windshield defroster and demister vents.

MAX A/C OPERATION

Automatic Operation: Press AUTO for full automatic operation. Do not override A/C or recirculated air. Set the temperature to 60° F (16° C).

Override Operation: Press  repeatedly to select airflow distribution. Press A/C and  (together, these provide a colder airflow). Set temperature to 60° F (16° C). Set to highest front fan speed initially, then adjust to maintain comfort.

RAPID HEAT SUPPLEMENTAL HEATING SYSTEM (if equipped)


If your vehicle is equipped with a diesel engine, it may be equipped with a supplemental heater to assist in heating the inside of your vehicle in cold weather. For maximum effectiveness, mid to lower blower speed is recommended during initial warm-up. When operating in automatic mode (if equipped), the climate control system will determine the appropriate blower speed for existing conditions.

ADDITIONAL FEATURES

MEMORY FEATURE (if equipped)

Your vehicle may be equipped with a memory feature, which allows your vehicle to 'remember' your desired settings for your seats, mirrors and adjustable pedals (if equipped). To set, move your seat, mirrors and adjustable pedals (if equipped) to the desired position. Press and hold either memory button 1 or 2 for five seconds. Continue to hold until two tones are heard. Within three seconds of the second tone, press  on your remote transmitter. Your settings are now saved and will be activated when that remote transmitter is used to unlock your vehicle.


TAILGATE STEP (if equipped)

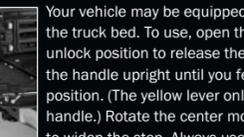

Your vehicle may be equipped with a tailgate step that allows easy entry into the truck bed. To use, open the tailgate. Pull the yellow latch lever to the unlock position to release the grab handle from its stowed position and raise the handle upright until you feel it latch and see the latch lever in the lock position. (The yellow lever only needs to be used when releasing the grab handle.) Rotate the center molding to unlatch the tailgate. Flip open the panel to widen the step. Always use the grab handle when stepping up or down on the tailgate step. Keep the step load (you + load) below 350 lb. (159 kg).


To close the tailgate step, fold the step panel, then lift and fully slide the tailgate step into the tailgate. Slide the latch at the bottom of the handle, then lower the handle. Never drive with the step deployed. Ensure that you fully close and latch the tailgate step before moving the vehicle.

BED EXTENDER (if equipped)

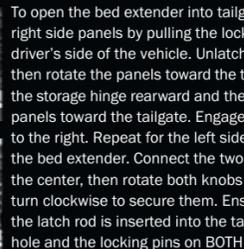

To open the bed extender into tailgate mode, start with the right side panels by pulling the locking pin toward the driver's side of the vehicle. Unlatch the panels and then rotate the panels toward the tailgate. Rotate the storage hinge rearward and then rotate the panels toward the tailgate. Engage locking pin to the right. Repeat for the left side panels of the bed extender. Connect the two panels at the center, then rotate both knobs a quarter turn clockwise to secure them. Ensure that the latch rod is inserted into the tailgate hole and the locking pins on BOTH sides are engaged into their holes in the pick-up box. Please refer to your Owner's Guide for complete details on this feature.

REARVIEW CAMERA (if equipped)

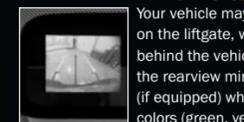

Your vehicle may be equipped with a reverse camera located on the liftgate, which provides a visual display of the area behind the vehicle. The display will automatically appear in the rearview mirror or on the navigation system screen (if equipped) whenever the vehicle is in Reverse (R) and uses colors (green, yellow and red) to alert you of your proximity to objects.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

2010 FORD

SUPER DUTY

QUICK REFERENCE GUIDE



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

 Ford Motor Company Customer Relationship Center | P.O. Box 6248 | Dearborn, MI 48121
1-800-392-3673 (FORD) (TDD for the hearing impaired: 1-800-232-5952)

AC3J 19G217 AA

May 2009
First Printing
Quick Reference Guide
Super Duty
Litho in U.S.A.

YOUR 2010 FORD

SUPER DUTY

SERVICE INTERVALS

It is important to maintain your vehicle to keep it running in peak condition. Engine oil and filter changes along with fuel filter (two fuel filters on diesel vehicles) and engine coolant inspection/replacement are common maintenance items that can be done to prolong the life of your engine. If you drive your vehicle in severe situations, more frequent service will be required on some items. Please refer to the scheduled maintenance information chapter of your diesel Supplement if your vehicle is equipped with a diesel engine or the separate Scheduled Maintenance Guide if your vehicle is equipped with a gasoline engine.

COLD WEATHER STARTING

To ensure optimum cold weather starting performance, and improve cabin heating, the 120 volt engine block heater should be used during any cold weather operation. The engine block heater is required when the vehicle is to be started at temperatures below -10 °F (-23 °C) or colder for diesel engines and below 0 °F (-17 °C) for gas engines. Please refer to Engine Block Heater in the Driving chapter of your Owner's Guide.



Draining the Water Separator

Water will gather in the frame-mounted water separator, called the horizontal fuel conditioning module (HFCM). The water separator should be drained monthly, or sooner if the "WATER IN FUEL" lamp illuminates.


Exhaust System

To control exhaust emissions, your diesel Super Duty is equipped with an exhaust system with clean diesel after-treatment technology which includes a diesel oxidation catalytic converter and a diesel particulate filter (DPF). Do not modify the exhaust after-treatment. See your Owner's Guide and Diesel Supplement for more information.

Checking the Air Filter

Your vehicle has an air filtration system with a restriction indicator gauge that will alert you when you need to change your filter. The gauge has a viewable indicator located underhood on the air filter assembly which should be inspected every oil change.

Engine Oil Specifications for Diesel Engines

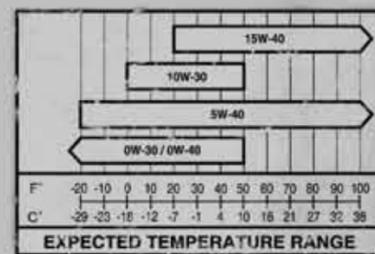

Heavier 15W-40 and 5W-40 engine oils are recommended for temperatures over 50 °F (10 °C) and must be used for heavy duty driving and trailer towing.

Use Motorcraft oil or an equivalent oil conforming to Ford specification WSS-M2C171-E or API service categories CJ-4 or CJ-4/SM. It is important to use these oils because they are compatible with the emission control equipment of your vehicle to meet the more stringent emission standards.

Under normal conditions, the engine oil and filter need to be changed at 10,000 mi (16,093 km) or 6 month intervals (whichever comes first). Under severe conditions, the intervals are sooner; 5,000 mi (8,046 km) or 3 months (whichever comes first). Refer to the scheduled maintenance information chapter of the Diesel Supplement for specific information on normal and severe conditions. Use the same engine oil and filter change intervals when using synthetic engine oil.

Diesel fuel quality is critical for reliable engine operation. Motorcraft® Cetane Booster & Performance Improver can be added to improve fuel economy, starting ability, and reduce engine wear. To avoid cold weather fuel gelling, add Motorcraft® Anti-Gel & Performance Improver to every new tank of fuel.

INSTRUMENT PANEL



1. SERVICE ENGINE SOON LIGHT

The service engine soon light  illuminates briefly when the ignition is turned on. If it remains on after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. If the light is blinking, an engine misfire is occurring which could damage your catalytic converter. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

2. ABS WARNING LIGHT

If the ABS light  stays illuminated or continues to flash, a malfunction has been detected, contact your authorized dealer as soon as possible. Normal braking is still functional unless the brake warning light is also illuminated.

3. AIRBAG READINESS LIGHT

The airbag readiness light  illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer as soon as possible. A chime will also sound if a malfunction in the indicator light is detected.

4. BRAKE SYSTEM WARNING LIGHT

The brake system warning light  illuminates briefly when the ignition is turned on or when the parking brake is applied to confirm that the system is functional. If the light does

not illuminate at this time, contact your authorized dealer as soon as possible. If the light continues to illuminate after the parking brake is released, your brake fluid is low and should be inspected immediately by your authorized dealer.

5. HEADLAMP CONTROLS

 Turns the headlamps off.

 Turns on parking, instrument panel, license plate and tail lamps.

 Turns on the headlamps.

 Autolamps (if equipped)

Automatically turns the exterior lamps on/off based on available daylight.

 Turns on fog lamps (if equipped)

by pulling the control towards you.

6. SPEED CONTROL (if equipped)

To set the speed:

1. Press ON.

2. Accelerate to the desired speed.

3. Press SET + and take your foot off the accelerator.

• To set a higher speed, press and hold SET + or press SET + repeatedly until the desired speed is reached.

• To set a lower speed, press and hold SET - or press SET - repeatedly until the desired speed is reached.

• To return to a previously set speed, press RES (Resume).

• To turn off, press the brake pedal or press OFF.

7. MESSAGE CENTER

The message center displays information on your vehicle's operating functions, as well as warning messages. Pressing the INFO button lets you scroll through general vehicle information such as odometer, trip odometer, compass, average fuel economy, distance to empty (fuel) and engine hours. Engine hours register how many hours the engine has been running. This is especially important if your vehicle is equipped with a diesel engine as important maintenance items (engine oil changes and fuel filter changes) may be based on engine hours. Please refer to the scheduled maintenance information in your Diesel Supplement for more information.

8. POWER REAR SLIDER WINDOW (if equipped)

Push the switch, (located behind the steering wheel)

to open the rear window. Pull to close the rear window.

9. TOW/HAUL SWITCH (if equipped)

To eliminate excessive transmission shifting, activate the Tow/Haul feature. This will reduce frequency of transmission shifting and assist in transmission cooling. This feature also provides engine braking in all forward gears when the transmission is in the D (Overdrive) position; the engine

braking will slow the vehicle and assist the driver in controlling the vehicle when descending a grade.

10. ELECTRONIC SHIFT ON THE FLY 4X4 SYSTEM (if equipped)

The electronic shift on the fly 4x4 system allows you to choose between 2WD, 4x4 HIGH or 4x4 LOW driving modes. Choose 2WD to provide power to the rear wheels only - used mainly for street and highway driving. This mode provides optimal smoothness and fuel economy at high speeds. Choose 4x4 HIGH to send power to the rear and front wheels for extra traction during winter and off-road conditions. (Not intended for use on dry pavement.) Choose 4x4 LOW when you need extra gearing to provide maximum power to all four wheels at reduced speeds. This is intended for use in situations such as deep sand, steep grades or pulling a boat out of the water. This mode is not intended for use on dry pavement. Please refer to the Driving chapter in your Owner's Guide for more information.

11. TRACTION CONTROL™ SYSTEM (if equipped)

Traction control™ helps maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off.

12. POWER ADJUSTABLE FOOT PEDALS (if equipped)

Press the top of the control to move the pedals further away from you or press the bottom of the control to move the pedals closer to you. The pedals should only be adjusted when the vehicle is stopped and in Park (P).

13. REVERSE SENSING (if equipped)

The reverse sensing system can warn you if there is an object behind the vehicle. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

14. TRAILER BRAKE CONTROLLER (if equipped)

The Trailer Brake Controller (TBC) helps ensure smooth and effective trailer braking by powering the trailer's electric brakes with a proportional output based on the towing vehicle's brake pressure. Use the GAIN adjustment buttons (+, -) and the manual control lever to make adjustments. The system will display any necessary messages through your message center. For complete information on using the

TBC, please refer to the Tires, Wheels and Loading chapter of your Owner's Guide for more information.

15. UPFITTER (if equipped)

If your vehicle is equipped with the Upfitter package, these auxiliary switches can be customized to perform additional functions. The switches deliver 10A, 15A or 30A of battery power to whatever accessory is chosen. Refer to the Body Builder's Layout Book or visit www.fleet.ford.com/truckbbas/non-html/Q117R1.pdf for more detailed information.

16. AUXILIARY POWER POINT

Your vehicle is equipped with a 12V auxiliary power point which allows you to power electrical devices that require up to 12V. For more information, please refer to your Owner's Guide.

17. AUXILIARY INPUT JACK (if equipped)

The auxiliary input jack allows you to play music from your portable music player through the vehicle speakers with high fidelity.

18. USB PORT (if equipped)

If your vehicle is equipped with SYNC®, you will have a USB port which allows you to plug in media playing devices, memory sticks

and also to charge devices if they support this feature. SYNC® is a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement or to the SYNC® section in the Navigation Supplement. Please also feel free to visit www.SyncMyRide.com.

FUEL PUMP SHUT-OFF SWITCH

This device stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. After an accident, if the engine cranks but doesn't start, the switch may have been activated. The fuel pump shut-off switch is located on the passenger side of the instrument panel. You have to open the passenger side door and remove the access panel to reset the switch. For switch reset instructions, please refer to your Owner's Guide.

TELESCOPING MIRRORS (if equipped)

Your vehicle may be equipped with manual or power telescoping mirrors which can extend out 2.75 inches (70 mm). These mirrors are especially

useful when you are towing a trailer. Manual mirrors can be pushed out or pulled in to the desired position. If your vehicle is equipped with power telescoping mirrors, you can simultaneously position the mirrors using the control switch on the door trim panel. Press and hold ◀ or ▶ to telescope the mirrors outboard or inboard.

