

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information.

For detailed operating and safety information, please consult your Owner's Guide.



Ford Motor Company
Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121

September 2009
Second Printing
Quick Reference Guide
Ford Focus
Litho in U.S.A.

1-800-392-3673 (FORD)

(TDD for the hearing impaired:
1-800-232-5952)

ADDITIONAL FEATURES

AUXILIARY POWER POINT (12VDC)

The auxiliary power points are located on the instrument panel. Do not use the power points for operating the cigarette lighter element (if equipped). To prevent the fuse from being blown, do not use the power point(s) over the vehicle capacity of 12VDC/180W.

MOON ROOF (if equipped)

The moon roof has an automatic, one-touch, express opening and closing feature. To open or close the moon roof, press and release the rear or front portion of the moon roof control. To stop motion at any time during the one-touch operation, press the control a second time.

SECURILOCK® PASSIVE ANTI-THEFT SYSTEM

SecuriLock® passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. The use of the wrong type of coded key may lead to a "no-start" condition.

REAR SEATS

One or both rear seatbacks can be folded down to provide additional cargo space. To lower the seatback(s) from inside the vehicle, pull the strap located on the outboard side of the seatback, then fold seatback down. When raising the seatback(s), ensure that you hear the seat latch into place.

POWER MIRRORS (if equipped)

Rotate the control clockwise to adjust the right mirror or counterclockwise to adjust the left mirror. Move the control in the direction you wish to tilt the mirror. Return to the center position to lock the mirrors in place. If your vehicle has heated mirrors, the mirrors are heated automatically to remove ice, mist and fog when the rear window defrost is activated.

AMBIENT LIGHTING (if equipped)

The control is located on the instrument panel, and when activated, illuminates the footwells and cup holders with a choice of seven colors. Ambient lighting is operational when the ignition is on or in the accessory position. Press the control repeatedly to turn on, cycle through your color choices, and turn off.

SMART LOCKS This feature helps to prevent you from locking yourself out of the vehicle if your key is still in the ignition.

When you open one of the front doors and you lock the vehicle with the power door lock control, all the doors will lock, then all doors will automatically unlock reminding you that your key is still in the ignition.



REMOTE ENTRY SYSTEM FEATURES

- Press once to lock all doors. Press again to confirm all doors are locked.
- Press once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press to activate the panic alarm. Press again or turn on the ignition to deactivate.
- Press to open the trunk.
- Car finder: Press twice within three seconds to locate your vehicle. The horn will chirp and the turn lamps will flash.

AUDIO SYSTEM AM/FM/IN-DASH SINGLE CD SATELLITE COMPATIBLE AUDIO SYSTEM

1 ON/OFF/VOL (Volume) Press to turn on or off. Turn to increase/decrease volume.

2 DIRECT Press DIRECT and then, using the memory presets (0-9), enter in the numbers of the desired radio station, CD track, MP3 folder (if available) or satellite channel (if equipped).

3 (Phone) If your vehicle is equipped with SYNC®, press to access SYNC PHONE features. If your vehicle is not equipped with SYNC®, the display will read NO PHONE.

4 SCAN Press to hear a brief sampling of all strong radio stations, CD tracks or satellite radio channels (if equipped).

5 AM/FM Press repeatedly to select an AM/FM1/FM2 frequency band.

6 MEMORY PRESETS To save a radio station or satellite radio channel (if equipped), tune to the desired station or channel. Press and hold a memory preset button until sound returns. You can save up to 30 radio stations or satellite radio channels (if equipped). Refer to your Owner's Guide for more information.

7 SEEK/TRACK Press / to access the previous/next strong, station, CD track or satellite radio channel (if equipped).

8 CD Press to enter CD/MP3 mode. If a disc is already loaded into the system, a CD/MP3 will begin where it ended last. If no CD is loaded, NO DISC will appear in the display.

9 SIRIUS (satellite radio, if equipped) Press to access satellite radio mode (if equipped). Press repeatedly to cycle through SAT1, SAT2 and SAT3 modes.

SIRIUS® Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information on extended subscription terms, contact SIRIUS® at 1-888-539-7474. Satellite radio is available only with a valid SIRIUS® radio subscription. Check with your authorized dealer for availability.

10 MENU Press MENU when satellite radio mode is active to access SATELLITE RADIO MENU (if equipped). Press OK to enter into the satellite radio menu. Press / to cycle through: CATEGORY MENU, SONG SEEK MENU, and CHANNEL LOCKOUT MENU. Refer to your Owner Guide for more information.



11 SOUND Press repeatedly to cycle through the following features: BASS, TREBLE, BALANCE, FADE, SPEED COMPENSATED VOLUME, ALL SEATS (Occupancy mode, if equipped).

12 CLOCK To set the time, press CLOCK. The display will read SET TIME. Use the memory preset numbers to enter in the desired time, hours and minutes.

13 TUNE Turn the knob to go up or down the frequency band in individual increments.

14 EJECT Press to eject a CD from the system.

SYNC® (if equipped)

SYNC® is a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement. Please feel free to visit www.SyncMyRide.com.



2010 **FOCUS**
QUICK REFERENCE GUIDE



AS4J 19G217 AA

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.



INSTRUMENT PANEL FEATURES

1 HEADLAMP CONTROLS

☞: Turns the headlamps off.

☞: Turns on parking, instrument panel, license plate and tail lamps.

☞: Turns on headlamps.

☞: Turns on fog lamps (if equipped) by pulling the control towards you.

2 SPEED CONTROL (if equipped)

To set the speed:

1. Press ON.
2. Accelerate to the desired speed.
3. Press SET + and take your foot off the accelerator.

- To set a higher speed, press and hold SET + or press SET + repeatedly until the desired speed is reached.

- To set a lower speed, press and hold SET – or press SET – repeatedly until the desired speed is reached.

- To return to a previously set speed, press RESUME.

- To turn off, press the brake pedal or press OFF.

3 MULTI-FUNCTION LEVER Rotate the end of the control up/down to increase/decrease the speed of the wipers.

Push the end of the stalk:

- quickly for a single swipe without fluid.
- and hold briefly for three swipes with washer fluid.
- and hold for a longer wash cycle.

A courtesy wipe will automatically occur to ensure that any drips have been cleared from your windshield. **Note:** For optimal performance, ensure that you clean your blades regularly.

4 HAZARD FLASHER

5 MESSAGE CENTER Displays important vehicle information through a constant monitoring of vehicle systems. The system will notify you of potential problems with a display of warnings followed by a long indicator chime. Use the INFO, SETUP and RESET buttons to access various menus and settings within the message center. Refer to your Owner's Guide for more information.

6 SERVICE ENGINE SOON LIGHT The service engine soon indicator light ☞ illuminates when the ignition is first turned on. If the light turns solid or blinks, the On-Board Diagnostics System has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer immediately.

7 AIRBAG READINESS LIGHT ☞ Illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer for service as soon as possible. A chime will also sound if a malfunction in the indicator light is detected.

8 STEERING WHEEL AUDIO CONTROLS (if equipped)

VOL +/- : Press to increase/decrease volume levels.

⏮ ⏭: Press to access the previous/next radio station, CD track or preset satellite radio channel (if equipped).

MEDIA: Press repeatedly to access all possible media sources.

☞: Press to access SYNC® voice recognition, if equipped.

☞: Press to access SYNC® phone features, if equipped.

9 REAR DEFROST Press to activate and clear the rear window and side heated mirrors (if equipped) of thin ice and fog. Press again to deactivate.

10 MAX A/C Distributes recirculated air through the instrument panel vents to cool the vehicle. This mode is more economical and efficient. May also help reduce undesirable odors from entering the vehicle.

11 AUXILIARY INPUT JACK Provides a way to connect and play your music from your portable music player to the vehicle speakers with high fidelity. Press AUX on the vehicle radio repeatedly until LINE IN appears in the display.

12 USB PORT (if equipped) The USB port allows you to plug in media playing devices, memory sticks, and to charge devices. For more information, refer to your SYNC® supplement (if equipped).

13 RECIRCULATED AIR MODE Recirculated air may reduce the amount of time needed to cool down the interior of the vehicle and may also help reduce undesirable odors from reaching the interior of the vehicle.

14 ADVANCETRAC® STABILITY ENHANCEMENT SYSTEM The AdvanceTrac® stability enhancement system helps you maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac® system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control ☞ will illuminate when turned off. Refer to your Owner's Guide for safety information and more details.

15 HEATED SEATS (if equipped) To operate the heated seats, push the control to activate. Push again to deactivate.

INTERIOR TRUNK CONTROL To open the trunk, press the ☞ control located on the driver's side kick panel below the instrument panel.

MyKey™ Allows you to program certain driving restrictions on any standard key in order to promote good driving habits. When MyKey™ is programmed:

- Belt-Minder® cannot be disabled and will sound continuously and the audio will be muted until the safety belt is buckled.
- Audible and visual low fuel warnings are provided.
- Audio volume can be limited.
- Vehicle speed can be limited.
- Audible and visual speed warnings can be configured at preselected speeds.
- AdvanceTrac® cannot be programmed off.

For complete information, refer to MyKey™ in the Locks and Security chapter in your Owner's Guide.

PERIMETER ALARM SYSTEM When armed, the system will be triggered if an unauthorized entry is attempted (opening any door, trunk or hood without using a key or the remote entry transmitter). The vehicle will respond by flashing the park/turn lamps and sounding the horn. You can arm the system by pressing ☞ on your remote entry transmitter, or by opening a door, pressing the door lock control and then closing the doors. You can disarm the system by pressing ☞ on your remote entry transmitter or turning the ignition on. For more information, refer to your Owner's Guide.

ESSENTIAL INFORMATION

LOCATION OF SPARE TIRE AND TOOLS

Your vehicle is equipped with a temporary spare tire and jack located in the trunk of your vehicle. The temporary spare is designed for emergency use only and should be replaced as soon as possible. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

FUEL TYPE AND TANK CAPACITY Your vehicle has a fuel tank capacity of 13 gallons (49.2 L). Your vehicle is designed to use "Regular" unleaded gasoline with an octane rating of 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

FUEL PUMP SHUT-OFF SWITCH

The fuel pump shut-off switch stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. This switch is located in the front passenger's footwell, behind the kick panel access cover. For more information, refer to the Roadside Emergencies chapter of your Owner's Guide.

TIRE PRESSURE Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including spare). As an added safety feature, your vehicle has been equipped with a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light ☞ when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

ROADSIDE ASSISTANCE Your new Ford Focus comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

SOS POST-CRASH ALERT™ This system provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or ☞ on your remote transmitter.