

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.



SERVICE ENGINE SOON

Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics system (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

AIRBAG READINESS

Illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer for service as soon as possible. A chime will also sound if there is a malfunction in the indicator light.

LOW TIRE PRESSURE WARNING

Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on at ignition or begins to flash, contact your authorized dealer as soon as possible.

MULTIFUNCTION DISPLAY (if equipped)

The left side of your instrument cluster can display information such as the fuel gauge, tachometer, engine coolant temperature and the odometer, trip meter as well as the Information menu, Settings menu and the System check. Use the OK and arrow buttons on the left side of your steering wheel to scroll through various menu options and make selections. Refer to the Instrument Cluster chapter in your Owner's Guide for more information.

INFOTAINMENT DISPLAY (if equipped)

If your vehicle is equipped with the MyFord Touch™ system, you will have an infotainment display on the right hand side of the instrument cluster. Use the OK and arrow buttons on the right side of your steering wheel to scroll through available modes of Entertainment, Phone, Navigation (if equipped) and Climate. You can also perform other functions such as answering a call, setting the driver side temperature and more. Refer to your MyFord Touch™ supplement for more information.

COLLISION WARNING SYSTEM (if equipped)

Uses a radar sensor to detect if vehicles ahead of you which are moving in the same direction may be a collision risk. The system will alert you with an audible chime and red warning light which will appear above the dash. If the risk of collision increases,

the system will increase brake support to help reduce collision speed. The collision warning system is active at speeds above approximately 5 mph (8 km/h). For more information on activating and deactivating the system, refer to Message center in the Instrument Cluster chapter. For more information on the collision warning system

and limitations, refer to Collision warning system in the Driving chapter of your Owner's Guide.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a 'gap distance' between

yourself and the vehicle in front of you in the same lane when your cruise control is active. Press GAP up or down to select from four available gap distances. The selected gap distance will appear in the message center as a graphic display. Once you select the desired gap distance, the vehicle will then automatically apply the brakes when

PUSH BUTTON START (if equipped)

Allows you to start your vehicle without a key by pressing the ENGINE START/STOP button while pressing the brake pedal, provided your intelligent access key (IA key, if equipped) is inside the vehicle. If necessary, you can also start your car by inserting the IA key into the back-up slot located in your glove box. Simply insert the IA key into the slot with the buttons facing you and the key ring up. Then, press the ENGINE START/STOP button and brake pedal to start your vehicle as usual. You can remove the IA key from the backup slot once the vehicle is started, if desired.

HAZARD CONTROL

AUDIO CONTROLS (if equipped)

VOL: Press up/down to increase/decrease volume levels.

SEEK: Press up/down to access the next/previous radio station preset, CD track or preset satellite radio channel (if equipped).

: Press to access voice recognition, if equipped.

: Press to access SYNC® phone features, if equipped.

SPEED CONTROLS (if equipped)

To set the speed:

1. Press ON.
2. Accelerate to the desired speed.
3. Push the SET button up and take your foot off the accelerator.

- To set a higher speed, press and hold the SET button up or press SET up repeatedly until the desired speed is reached.

- To set a lower speed, press and hold the SET button down or press SET down repeatedly until the desired speed is reached.

- To return to a previously set speed, press RES.

- To turn off, push the OFF button down or turn the ignition off.



Scan here with your smartphone for a video guide to the incredible new features of your Edge.

Use extreme caution when using any device or feature that may take your attention off the road. Ford recommends against the use of any hand-held device while driving and that you comply with all applicable laws. Your primary responsibility is the safe operation of the vehicle.

INSTRUMENT PANEL



2011
EDGE



QUICK
REFERENCE
GUIDE



Ford Motor Company Customer Relationship Center
P.O. Box 6248, Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
www.fordowner.com
www.ford.ca

BT4J 19G217 AA



May 2010
First Printing
Quick Reference Guide
Edge

ESSENTIAL INFORMATION

ROADSIDE ASSISTANCE



Your new Ford Edge comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as:

lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

SOS POST-CRASH ALERT SYSTEM™

Provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners.

The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or on your remote transmitter.

FUEL TANK CAPACITY/FUEL INFO



All wheel drive vehicles have a 20.8 gallon (78.7L) fuel tank capacity and front wheel drive vehicles have a 19.2 gallon (72.7L) fuel tank capacity. Use only "Regular" unleaded gasoline with an octane rating of 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

EASY FUEL™ SYSTEM

With this system, you simply open the fuel filler door, insert the

nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait five seconds from the time the refueling nozzle is shut-off until the nozzle is pulled back out of the fill pipe to allow residual fuel in the nozzle to drain into the tank. To use a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. Do not use aftermarket funnels as they will not work with the Easy Fuel™ system and may cause damage.



CONVENIENCE

MYFORD TOUCH™ (if equipped)



Health Report), SIRIUS® Travel Link™ (if equipped) and Calendar.

7. Press this area to access your media features such as radio, SIRIUS, USB, etc.

Your MyFord Touch™ system uses a four corner strategy and dynamic menu listings to provide quick access to features and settings.

1. Press this area to access SYNC® phone features.
2. Press MENU to access: Clock, Sound, Display, Vehicle, Settings and Help.
3. Press to access navigation features (if equipped). **Note:** If your vehicle is not equipped with navigation, the *i* button will be here instead.

4. Press this area to access your Climate control touchscreen features.

5. Press  to customize your home screen. Select from the three pop up images.

6. Press *i* to access settings for SYNC® Services (Traffic, Directions and Information), SYNC® Apps (911 Assist™ and Vehicle

SETTING THE CLOCK

Press Menu > Clock. Press +/- to increase/decrease the time.

FOR AVAILABLE VOICE COMMANDS

Press Menu > Help > Voice command list.

TO ACCESS YOUR WALLPAPER SETTINGS

Press Menu > Display > Edit Wallpaper.

TO ACCESS YOUR AMBIENT LIGHT SETTINGS (if equipped)

Press Menu > Vehicle > Ambient lighting.

INTELLIGENT ACCESS KEY (if equipped)



To unlock the driver's door, have your intelligent access (IA) Key within three feet and touch the inside of the driver or front passenger exterior door handle.

To lock the doors, have the IA Key within three feet and press the lock area on the door (black button on chrome or the small bump on the painted door handles).

To unlock the liftgate, have the IA Key within three feet and press the exterior liftgate release button hidden under the trim above the license plate.

To start the car, have the IA Key inside the vehicle and press the ENGINE START/STOP button while applying the brake pedal.

The intelligent access key also contains a mechanical key blade which can be used to unlock the driver door if necessary. Simply slide the

release on the back of the transmitter and pull the key blade out.

INTEGRATED KEYHEAD TRANSMITTER (IKT) AND INTELLIGENT ACCESS (IA) REMOTE ENTRY ICONS

Press  once to lock all doors. Press again to confirm all doors are closed.

Press  once to unlock the driver's door. Press again within five seconds to unlock all doors.

Press  to activate the panic alarm. Press again or turn on the ignition on to deactivate.

Press  twice within three seconds to open the power liftgate (if equipped).

Car finder: Press  twice within three seconds to locate your vehicle. The horn will chirp and the turn lamps will flash.

SECURICODE™ KEYLESS ENTRY SYSTEM (if equipped)

Allows you to lock or unlock the doors without using a key. Ensure that you have your five digit factory code located on your owner's wallet card in the glove box.

To unlock the driver's door, enter your five digit factory code and, within five seconds, press 3-4.

To unlock all doors, enter your five digit factory code and, within five seconds, press 3-4.

To lock all vehicle doors, press 7-8 and 9-0 at the same time with the driver's door closed. You do not need to enter your factory code first.

SYNC® VOICE RECOGNITION SYSTEM (if equipped)

Your MyTouch Ford™ system is equipped with an advanced voice recognition system. This system allows you to perform many functions in your vehicle simply by speaking certain commands to the system. Press  to begin a voice session. The system will prompt you for a command. You can say, "Help" or "What can I say?" and the system will audibly give you a list of possible voice commands. You can also press Menu > Help > Voice command list for a visual list on the touchscreen, or you can refer to your MyTouchFord™ system supplement.

Press  to begin a voice session. The system will prompt you for a command. You can say, "Help" or "What can I say?" and the system will audibly give you a list of possible voice commands. You can also press Menu > Help > Voice command list for a visual list on the touchscreen, or you can refer to your MyTouchFord™ system supplement.

Press  to begin a voice session. The system will prompt you for a command. You can say, "Help" or "What can I say?" and the system will audibly give you a list of possible voice commands. You can also press Menu > Help > Voice command list for a visual list on the touchscreen, or you can refer to your MyTouchFord™ system supplement.

Press  to begin a voice session. The system will prompt you for a command. You can say, "Help" or "What can I say?" and the system will audibly give you a list of possible voice commands. You can also press Menu > Help > Voice command list for a visual list on the touchscreen, or you can refer to your MyTouchFord™ system supplement.

SIRIUS® SATELLITE RADIO (if equipped)

Broadcasts music, sports, news and entertainment

programming. For more information and a complete list of SIRIUS® satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS at 1-888-539-7474. To access with a MyFord™ system, press the lower left corner (red area) of your touchscreen and then select the SIRIUS tab. Satellite radio is only available with a valid SIRIUS radio subscription.

HD™ RADIO (if equipped)

is the digital evolution of analog radio. Your MyFord Touch™ system has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts provide a better sound quality than analog broadcasts with free, crystal clear audio and no static or distortion. Press the lower left corner (red area) of your touchscreen to access. Then, press AM/FM > Options > HD Radio > On. For more information, refer to your MyFord Touch™ supplement or visit www.hdradio.com.

COMFORT

SELECTSHIFT AUTOMATIC™ TRANSMISSION (if equipped)

Your SelectShift Automatic™ Transmission gives you the ability to manually change gears. To use, move the gearshift lever from D (Drive) to M (Manual). If your vehicle is equipped with a gearshift toggle, press + to upshift and - to downshift. If your vehicle is equipped with paddle shifters (on the steering wheel), pull the + paddle to upshift and pull the - paddle to downshift.

RAIN-SENSING WIPERS (if equipped)

These wipers automatically activate when moisture is present on the windshield and the control is set to any setting except O (off). The wiper speed will vary based on the amount of moisture detected on the windshield as well as the current interval setting. Ensure that the control is turned to off prior to entering a car wash.

HEATED SEATS (if equipped)

To access, press the lower right corner (blue area) on the touchscreen. Press  repeatedly to cycle through the various settings and off. Depending on your vehicle options, this control may be on your climate control bezel or on the climate touchscreen.

PANORAMIC VISTA ROOF™ AND POWER SUNSHADES (if equipped)

Your panoramic Vista Roof™ and power sunshades are equipped with an automatic one-touch, express opening feature. To stop motion at any time, simply press the control again.

To open, press the  button. The front and rear sunshades will open, then the roof will open to the first position. Press again to fully open the roof.

To close, pull the button  towards you. The glass panel will stop at the first position. Pull again and hold to fully close the glass panel and the sunshades.

To vent, press the TILT button.

To close from a venting position, pull the TILT button towards you.

CLIMATE TOUCHSCREEN CONTROLS (if equipped)

Your vehicle may be equipped with the MyFord Touch™ system which allows you to access and adjust certain climate control features from the touchscreen. Simply press the lower right corner (blue area) of the touchscreen to access. From this screen, you can increase/decrease the temperature, activate heated seats (if equipped), and select your air flow options. You can also press and hold MyTemp for the system to automatically save your current temperature. Then, if someone else adjusts the temperature, you need only press MyTemp again to return to your desired temperature.

REMOTE START (if equipped)

If your remote transmitter has the  icon, you have remote start, which allows you to start the engine from outside the vehicle. To use, press  and then press  twice within three seconds. When you are ready to leave, simply insert the key into the ignition and turn the ignition on as you normally would before driving provided you have an integrated keyhead transmitter (IKT). If you have an intelligent access key, simply push the ENGINE START/STOP button while applying the brake. To turn the engine off using your remote start, press  once. The parking lamps will turn off. Refer to Remote start in your Locks and Security chapter for more information.

GRADE ASSIST

Aids in optimal gear selection in hilly or mountainous areas. This feature helps you by providing additional grade (engine) braking and extends lower gear operation on uphill climbs. To activate/deactivate grade assist, press the transmission control switch on the side of the gearshift lever. **Note:** Grade assist is not recommended for normal driving.

REARVIEW CAMERA (if equipped)

This system provides a visual display of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in R (Reverse) and uses colors (green, yellow and red) to alert you of your proximity to objects. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT (CTA), (if equipped)

BLIS® uses radar sensors to help you determine if a vehicle may be in your blind spot zone when driving on roads and freeways. The CTA feature alerts you if a car is coming towards you when you are backing out of a parking space. BLIS and CTA will display a yellow indicator light  in your exterior mirrors and the CTA system will also sound tones and display messages to warn you which direction vehicles are approaching. Refer to the Driving chapter in your Owner's Guide for more information.

REVERSE SENSING SYSTEM (if equipped)

This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in R (Reverse) and is traveling less than 3 mph (5km/h). The warning tone will increase in frequency as the object gets closer and then will sound continuously when the object is less than 10

inches away. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

MYKEY™

Allows you to program certain driving restrictions on any standard key in order to promote good driving habits. When MyKey™ is programmed:

- Belt-Minder® cannot be disabled and a chime will sound continuously and the audio will be muted until the safety belt is buckled.

- Audible and visual low fuel warnings

- Certain features cannot be turned off such as blind spot information system (BLIS®) with cross traffic alert (CTA).

- Audio volume can be limited

- Vehicle speed can be limited

- Audible and visual speed warnings can be configured at preselected speeds

- AdvanceTrac® cannot be programmed off

For complete information, refer to MyKey™ in the Locks and Security chapter in your Owner's Guide.

BLIND SPOT MIRRORS (if equipped)

Blind spot mirrors have an integrated convex spotter mirror built into the upper corner on the outside mirrors. They are designed to help you see a vehicle that may be in your blind spot. As a vehicle approaches, its image will transition from the large mirror to the smaller convex spotter mirror. For more information, refer to your Owner's Guide.

ADVANCETRAC® WITH ROLL STABILITY CONTROL™ (RSC®) STABILITY ENHANCEMENT SYSTEM

Your AdvanceTrac® system is comprised of three main components: Traction control (which helps to avoid wheel spin and loss of traction), Electronic stability control (which helps avoid skids and lateral slides)

and Roll Stability Control™ which aids in avoiding a vehicle roll-over. These components work together to help you maintain stability and steerability of your vehicle during a variety of road conditions. The system is automatically activated each time your engine is started. You can turn off the feature through the message center. Refer to your Owner's Guide for more information.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are located beneath the carpeted floor panel in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

