




BTIJ 19G217 AA

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

Your vehicle is equipped with a tire pressure monitoring system which alerts you when one or more of your tires is significantly under-inflated. If the low tire pressure warning light  illuminates, stop and check your tires as soon as possible and ensure that they are inflated to the proper recommendations. The recommended specifications can be found on the Tire Label or Safety Compliance Certification Label located on the driver's door jamb or the edge of the driver's door. Each tire including the spare should be checked monthly and inflated to the recommended levels. Refer to your Owner's Guide for more information.

July 2010  
First Printing  
Quick Reference Guide  
Transit Connect  
Litho in U.S.A.

[fordowner.com](http://fordowner.com)  
[www.ford.ca](http://www.ford.ca)  
[www.fleet.ford.com](http://www.fleet.ford.com)  
[www.fordvehicles.com](http://www.fordvehicles.com)



## ROADSIDE ASSISTANCE

Your new Ford Transit Connect comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lock-out assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

 
 
 
 
## FUEL TANK CAPACITY/ FUEL INFORMATION

Your vehicle has a fuel tank capacity of 15.4 gallons (58.3L). Use only "Regular" gasoline with an octane rating of 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.




This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

Ford Motor Company | Customer Relationship Center | P.O. Box 6248 | Dearborn, MI 48121  
1-800-392-3673 (FORD) | (TDD for the hearing impaired: 1-800-232-5952)

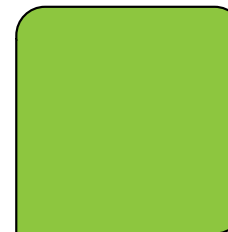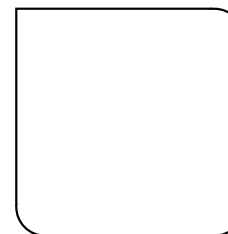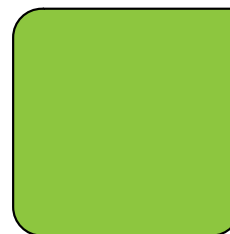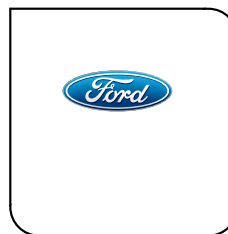

2011

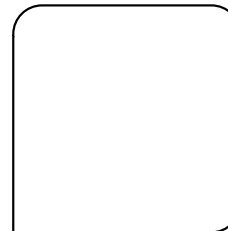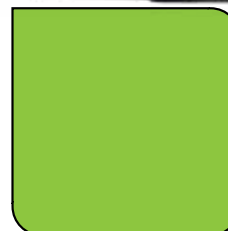   

**TRANSITCONNECT**  
quick reference guide

Use extreme caution with any device or feature that may take your attention off the road. Ford recommends against the use of any hand-held device while driving and that you comply with all applicable laws. Your primary responsibility is the safe operation of the vehicle.

### ① HEADLAMP CONTROLS

- : Turns the headlamps off.
- ☰ : Turns on parking, instrument panel, license plate and tail lamps.
- ☼ : Turns on the headlamps.

**Using your fog lamps:** Turn the control to the headlamp position. ☼ and pull towards you to the first detent to turn on your front fog lamps (if equipped). The ☼ indicator will illuminate. Pull the control out to the second detent to turn on your rear fog lamp. The ☼ indicator will illuminate.

**Note:** Only use the rear fog lamp when visibility is restricted to less than 15 ft (50 m).

### ② MULTI-FUNCTION LEVER

- Move the lever down for a single wipe.
- For intermittent wiping, move the control up one position and adjust the rotary control to the desired speed.
- For normal operation, move the control up two positions.
- For high speed wiping, move the control up three positions.
- To activate the windshield washer, push in the washer control ☼ on the edge of the stalk.

### REAR WINDOW WIPER WASH (if equipped)

- ☼ Pull the lever toward you for intermittent wiping.
- ☼ Pull further toward you to operate the washer.

### ③ MANUAL HEATING AND AIR CONDITIONING SYSTEM

Allows you to manually select and adjust the temperature, airflow direction and fan speed as well as recirculated air and air conditioning. Refer to your Owner's Guide for complete information.

### ④ REAR WINDOW DEFROST (if equipped)

Press ☼ to clear the rear window of thin ice and fog. Press again to deactivate. **Note:** If your vehicle is equipped with exterior heated mirrors, activating the rear defrost will also activate the heated mirrors.

### ⑤ AM/FM STEREO WITH SINGLE CD (if equipped)

Allows you to manually select radio stations, play CDs and make sound adjustments. Refer to your Owner's Guide for more information on this system.

### BLUETOOTH® HANDS-FREE SYSTEM (if equipped)

Your vehicle may be equipped with *Bluetooth* wireless technology which works with your cellular phone to allow you to send and receive calls in a hands-free manner. Your phone must be enabled and connected (bonded or paired) to the vehicle's system. Refer to your Owner's Guide for more information or visit [www.fordvehicles.com/transitconnect](http://www.fordvehicles.com/transitconnect).

### OPENING THE HOOD

Your vehicle is equipped with a locking hood latch located beneath the badge on the hood.



#### To open:

1. Rotate the hood badge counterclockwise and insert the key.
2. Turn the key to the left to release the primary latch, then turn the key to the right to release the secondary latch. Ensure that you remove the key immediately after opening the hood and return the badge to its proper place.
3. Lift the hood and secure it using the prop rod.

### REMOTE ENTRY SYSTEM (if equipped)

- Press ☼ once to unlock the front and sliding doors. Press again within three seconds to unlock all doors.
- Press ☼ to unlock the cargo door.
- Press ☼ to lock all doors.

**Note:** Your keys are electronically coded to your vehicle. Using a non-coded key will not permit your vehicle to start. Replacement keys are available through your authorized dealer. Refer to your Owner's Guide for more information.

### CENTRAL LOCKING

- To unlock the front and sliding doors, insert the key into the driver's door and turn it toward the front of the vehicle.
- To lock all doors, turn the key toward the rear of the vehicle. Refer to your Owner's Guide for more information.

### FUEL FILLER LOCK

Your vehicle is equipped with a lock on the fuel filler door. To unlock, simply insert your key into the lock and turn.

### OPENING THE FRONT WINDOWS

Press or pull the window switches located on the center console to open or close the windows.

