

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

Ford Motor Company  
Customer Relationship Center  
U.S. • 1-800-392-3673 (FORD)  
(TDD for the hearing impaired:  
1-800-232-5952)  
[fordowner.com](http://fordowner.com)

Ford of Canada  
Customer Relationship Centre  
Canada • 1-800-565-3673 (FORD)  
[ford.ca](http://ford.ca)



August 2012  
Second Printing  
Quick Reference Guide  
Escape  
Litho in USA



# Quick Reference Guide

| 2013 **Escape**

DJ5J 19G217 AA





### Basic Commands

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Vehicle health
- Pair my phone



### Entertainment

- Audio list of commands
  - You can also get detailed lists of commands for radio, USB, Bluetooth® audio, Sirius and SD Card
- Audio <On/Off>
- Radio:
  - FM <87.7-107.9>
  - FM preset <#>
- CD:
  - Play track <1-512>
  - Shuffle <On/Off>
- USB:
  - Play song <name>
  - Play album <name>
- SiriusXM:
  - <channel name>
  - Preset <#>



### Phone

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb <On/Off>
- Listen to text messages (phone-dependent feature)



### Navigation\*\*

- Navigation list of commands (if equipped)
  - Destination street address <number, name, city>
  - Destination home
  - Navigation voice <On/Off>
  - Navigation volume <increase/decrease>
  - Repeat instruction
  - Show <map/north-up/heading-up/3D>
- Travel Link list of commands:
  - Traffic
  - Weather
  - Movie Listings
  - Fuel prices
  - Sports <headlines/scores/schedule>



### Climate\*\*

- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate temperature <60-85> degrees



### SYNC® Services

- Must say "Services" first, and then:
- What can I say?
  - Traffic
  - Directions
  - Business search
  - Operator (for direction or business search)
  - Favorites
  - News, sports, weather horoscopes, stock quotes, movies or travel
  - Help

Refer to your Owner's Manual, visit the website or call the toll-free number for more information.

**For U.S. customers:**  
Visit [SyncMyRide.com](http://SyncMyRide.com) or call 1-800-392-3673 (select Option 1 or 2 for language, then Option 3).

**For Canadian customers:**  
Visit [SyncMyRide.ca](http://SyncMyRide.ca) or call 1-800-565-3673 (select Option 1 or 2 for language, then Option 3).

## Table of Contents

4 - 5	Instrument Panel
6 - 7	Getting Started with your SYNC System
8 - 10	SYNC with MyFord Touch
11	Convenience
12 - 13	Essential Information
14 - 15	Function
16 - 17	Liftgate
18 - 19	Comfort

### Warning

Driving while distracted can result in loss of vehicle control, accident and injury. Ford Motor Company strongly recommends that drivers use extreme caution when using any device or feature that may take their focus off the road. Your primary responsibility is the safe operation of the vehicle. We recommend against the use of any hand-held device while driving, encourage the use of voice-operated systems when possible and that you become aware of applicable state and local laws that may affect the use of electronic devices while driving.

### Learn How To Sync Your Ride.

SYNC is a voice-activated technology personalized by you. It is a hands-free, voice recognition system used for entertainment, information and communication. [SyncMyRide.com](http://SyncMyRide.com) (U.S.) / [SyncMyRide.ca](http://SyncMyRide.ca) (Canada)

[fordowner.com](http://fordowner.com) (U.S.) / [ford.ca](http://ford.ca) (Canada)



## Instrument Panel



### 1 Cruise Control\*

To set your cruise control speed:

1. Press the **ON** control and release.
2. Accelerate to the desired speed.
3. Press the **SET +** control and release, then take your foot off the accelerator.

After your speed has been set, you can press **SET +/-** to adjust your cruise speed. To disable, pull the **CAN** (cancel) control toward you.

### 2 Left Vehicle Info Display

Provides information about various systems on your vehicle. Use the left-hand, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter of your *Owner's Manual* for more information.

### 3 Service Engine Soon Light

 Illuminates briefly when the ignition is turned on. If

it remains on or is blinking after the engine is started, the on-board diagnostics system (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

### 4 Tilt/Telescope Steering Column

Unlock the steering wheel by pulling the lever down. Adjust the wheel to the desired position (in/out up/down). Push the lever back up to lock the steering wheel in place.

### 5 Right Vehicle Info Display\*

Use the right-hand, 5-way controls to highlight and make selections in the entertainment screen. Press OK to confirm your selection. If your vehicle is equipped with MyFord Touch, use these controls to adjust entertainment settings such as volume, seek and mode.

### 6 Media Steering Wheel Controls\*

 (Volume): Press to increase (+) or decrease (-) volume levels.

 Pull toward you to access voice recognition.

 Press to answer an incoming phone call.

 Press to exit phone mode or end a call.

### 7 Wiper Controls

Use the rotary control on the stalk to adjust the wipe intervals. Pull the stalk towards you to spray and wash the windshield.


### 8 Push Button Start\*

Allows you to start your vehicle by pressing the **ENGINE START/STOP** button while fully pressing down on the brake pedal. Press the button again to turn the engine off.

**Note:** Your intelligent access key\* must be inside the vehicle to start the ignition.

### 9 Hazard Control

\* if equipped

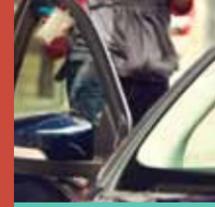

## Getting started with your SYNC system

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC...Say the word.

### Before you get started:

1. Set up your owner account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering you can see what available services you are eligible for.
2. SYNC uses a wireless connection called Bluetooth® to communicate with your phone. Turn Bluetooth mode on in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada), or your phone manufacturer's website.

### Pairing your phone with SYNC:

In order to use many of the features of SYNC, such as making a phone call, receiving a text or using SYNC services, you must first pair and connect your phone with SYNC.

To pair your phone for the first time:

1. Make sure that your vehicle is in (P) park; turn on your Ignition and radio.
2. Press the phone button, when the display indicates **No Phone Found**, press **OK**.
3. Take out your mobile phone and turn on Bluetooth if it is not on already. When **Add Bluetooth Device?** appears in the display press **OK**.
4. Select SYNC in the list of Bluetooth devices on your phone and enter the code shown on the display screen. This code connects your phone to your car.
5. The display will indicate when the pairing is successful.

### Note:

The system may prompt you to:

- Set your phone as primary/favorite (the primary phone will receive messages and voice mails)
- Download your phone book (this is required to use the full set of voice commands)
- Turn on 911 Assist®

### Tips:

- Make sure that you accept SYNC's request to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your Owner's Manual.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC and deleting the SYNC connection from your phone, and then repeat the process

## Why Do I Need a SYNC Owner Account?

A SYNC owner account is required for Vehicle Health Report activation and the ability to view your reports online. You'll also be able to take advantage of all of SYNC's Services and personalization features, such as saving your Favorites and Points of Interest. You'll receive the latest software updates that add new places, directions and information; and if you have questions, you'll get free customer support.

**Note:** Your SYNC system may offer advanced features such as SYNC Services, AppLink™ and Vehicle Health Reports. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

## Using My Phone with SYNC:

**Note:** You must download your phone book to make phone calls with voice commands by name. Contacts listed in all caps will require you to spell them (i.e. JAKE, will be J-A-K-E).

### Making a phone call:

Use SYNC to make a phone call to anyone in your phone book by pressing voice button  and when prompted, say any of the following voice commands:

Call <name>	Call <name> at work
Call <name> on mobile or cell	Call <name> at home

For example, you could say "Call Jake Smith at home". When the system confirms the number, say "Dial" again to initiate the call.

**Note:** You can also make phone calls by pressing the voice button  and when prompted, say the voice command "Dial", then verbally say the phone number.

### Answering incoming calls:

Whenever you have an incoming call, you will be able to see the name and number of the person calling in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

### Do not disturb mode:

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command, "Do not disturb on" to enable and "Do not disturb off" to disable.

## Using SYNC to access digital media

Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

Using voice commands to play music:

1. Plug your media player into your USB port.
2. Press the voice button . When prompted say "USB", then follow-up saying one of the following voice commands.

"Play all"	"Play next song"
"Play song <name>"	"Play album <name>"

3. You will hear the command repeated back to you and the selected item will play.

## SYNC® with MyFord Touch®\*

A revolutionary way to connect with your car.



### Getting started, understanding SYNC with MyFord Touch

Use the four-corner, four-color touch screen to explore and interact with your vehicle. The touch screen works the same way traditional controls, knobs and buttons do. Press the various corners on your touch screen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system.

#### General Tips

- Press the home icon  at any time to return to your home screen.
- For additional support, refer to your Owner's Manual, visit the website or call the toll-free number. See the inside front cover of this guide for details.

#### Before you get started:

- Pair your phone with SYNC. To do this, touch Add Phone on your touch screen. When prompted, enter the PIN provided on the display into your phone. The display will indicate when pairing is successful. See the Getting Started with your SYNC System section for instructions on how to do this.
- If you have the navigation SD card, make sure that it is inserted into the media port or your navigation will not work.

### Get in touch using your four corner touch screen

Phone, Navigation, Climate and Entertainment are the four main operations of SYNC with MyFord Touch. Each feature has its own corner represented by its own color.

#### Phone

Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.

#### Your phone connects with many other features and SYNC services:

- Connect to SYNC Services for traffic, directions, business searches and information favorites.
- Connect to Operator Assist to help locate a listing or destination.
- Call for a Vehicle Health Report.
- Automatically connects to a 911 Operator in the event of an accident (feature needs to be activated prior to the event.)
- Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.

Refer to the SYNC chapter of your Owner's Manual for complete details.

#### Navigation\*

Get started with your navigation system by pressing the upper-right green corner. The available, voice-activated navigation system includes:

- SiriusXM Traffic™
- Sirius Travel Link™
- Global positioning system (GPS) technology
- 3-D mapping
- Turn-by-turn navigation

Refer to the MyFord Touch chapter of your Owner's Manual for complete details.



#### Set a Destination

You can use the touch screen to set a destination in many ways, like a street address, a city center, a place on the map or a point of interest (POI). The easiest way is by voice.

1. Press the voice button , then when prompted say "Destination street address".
2. The system will ask you to say the full address and will display an example on-screen.
3. You can then speak the address naturally, such as: "One two three Main Street, Anytown".

You can also use the touch screen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel efficient route.

## SYNC® with MyFord Touch® *continued*


### Climate

SYNC® with MyFord Touch® controls the temperature, airflow direction, fan speed, and activates other climate features, like heated front seats for you and your passenger.

To use voice commands to operate climate, say a voice command like "Climate temperature 72 degrees" and MyFord Touch will make that adjustment.

#### Set Your Temperature

- Touch the lower-right blue corner on your touch screen.
- Set your exact, desired temperature using the + or - buttons.

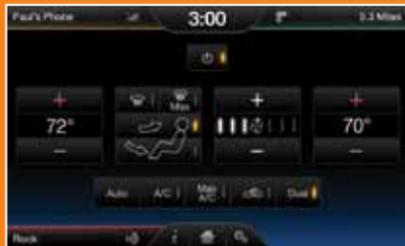

### Entertainment

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left, red corner of the touch screen. From here, you can easily go between AM/FM, Sirius and other media sources.

#### Set Your Radio Presets

- Touch the Entertainment corner on the touch screen.
- Touch FM.
- Enter the desired station and touch Enter.
- Touch Presets and then touch and hold one of the memory preset buttons to save it. You'll hear a brief mute and the sound will return once the station is saved.

### Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- CD
- USB
- Bluetooth® Streaming
- SD Card
- A/V In

Refer to the *MyFord Touch* chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



## Convenience

### Remote Entry Icons\*

- Press once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press to activate the panic alarm. Press again or turn on the ignition to deactivate.
- Press twice within three seconds to open the liftgate.
- Car finder: Press twice within three seconds to locate your vehicle. The horn will chirp and the lamps will flash.

### Intelligent Access Key\*

**Note:** Your intelligent access key must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock the driver's door, pull the front exterior door handle. To lock the doors, touch the sensor button on the door handle. To unlock and open the liftgate, press the exterior liftgate release button underneath the liftgate handle. The intelligent access key

also contains a mechanical key blade, which can be used to unlock the driver door if necessary.

### Remote Start\*

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press and then press twice within three seconds. Once inside, apply the brake while pressing the **ENGINE START/STOP** button. Shift into D (Drive) and go. To turn the engine off from outside the vehicle after using your remote start, press once.

### Universal Garage Door Opener\*

Your driver's side visor has a built-in wireless transmitter that replaces the common handheld garage door opener. This system can also be programmed to security systems, entry gates and home or office lighting. Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual* for programming instructions and additional information on how to use this device.

### Active Park Assist\*

The active park assist system can detect an available parallel parking space and automatically steer the vehicle into that space (hands-free). The system instructs the driver with visual and/or audible instructions with regard to braking, accelerating and shifting gears in order to safely park the vehicle. To initiate active park assist, press the **AUTO P** button located near the center console on the instrument panel. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.



## Essential information

### Fuel Tank Capacity/ Fuel info

Your vehicle has a 15.1 gallon (57L) fuel tank capacity. Use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol. **Do not use fuel ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.**

### Easy Fuel® System

With this system, you simply open the fuel door, insert the nozzle and begin fueling. It is self-sealing and therefore protected

against dust, dirt, water, snow and ice.

Wait 10 seconds from the time the refueling nozzle is shut-off until you remove the nozzle from the vehicle to allow residual fuel in the nozzle to drain into the tank. When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel.

**Note:** Do not use aftermarket funnels as they will not work with the Easy Fuel system and may cause damage. Properly clean the funnel after each use.

### Location of Spare Tire and Tools

Your spare tire and tools are located beneath the carpeted load floor in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Changing a Road Wheel* section in the *Wheels and Tires* chapter of your *Owner's Manual*.

### SOS Post-Crash Alert System™

Provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control or the panic button (⏏) on your remote transmitter.



## Essential information *continued*

### Tire Pressure Monitoring System

Your vehicle illuminates a low tire pressure warning light (⚠) in your instrument cluster when one or more of your tires is significantly underinflated. If this happens stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Inflating Your Tires* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.



### Fuel Efficient Transmission

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

### Rear Window Buffeting

When one or both of your rear windows are open, you may hear a wind throb or buffeting noise. To alleviate this, simply lower a front window until the buffeting subsides.



### Front and Rear Sensing System\*

This system sounds an audible warning tone if there is an obstacle near the vehicle's front or rear bumpers. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency. The front sensors are automatically activated when the vehicle is in D (Drive) and the vehicle speed is below 6 mph (10 km/h). The system will detect objects up to 27 inches (70 cm) away from the front of the vehicle and about 6-14 inches (15-35 cm) to the side of the front end. The rear sensors are activated automatically when the vehicle is in R (Reverse), and will detect objects up to 6 feet (2 m) away, with decreased coverage at the outer corners). See the *Parking Aids* chapter in your *Owner's Manual* for

complete information on your vehicle's sensing systems.

**Note:** *Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more detail and limitations.*

### Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.



## Function

### Rearview Camera\*

This system provides a visual display of the area behind the vehicle. The display automatically appears in the touch screen when the vehicle is in R (Reverse) and uses green, yellow and red guides to alert you of your proximity to objects.

### MyKey®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like: speed restrictions, limited volume levels and traction control always on. For complete information, refer to the MyKey chapter in your Owner's Manual.

### SecuriCode™ Keyless Entry Keypad\*

Allows you to lock or unlock the doors, recall memory features and arm or disarm the anti-theft alarm. The keypad, located near the driver's window, is invisible until touched and then it lights up so you can see and touch the buttons. To get started, you will need your five digit factory code found on your owner's wallet card (located in the glove box). Entering this code unlocks the driver's door. To lock all of the doors, press and hold 7-8 and 9-0 at the same time. For complete information, refer to the SecuriCode Keyless Entry Keypad section in the Locks chapter of your Owner's Manual.



### SelectShift Automatic® Transmission

To enable, move the SelectShift gearshift lever from D (Drive) to S (Sport). In (S) Sport mode, a unique downshift schedule is utilized to keep the transmission in lower gears for enhanced performance and more aggressive engine braking. When the vehicle is in (S) Sport mode, manual gear selection is enabled by using the thumb toggle on the side of the gearshift lever. Press (+) to upshift, press (-) to downshift. Return the gearshift lever to (D) Drive when manual control is no longer desired.

### Blind Spot Information System (BLIS®) with Cross Traffic Alert (CTA)\*

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. The CTA feature alerts you if a car is coming toward you when you are backing out of a parking space. BLIS and CTA will display a yellow indicator light in your exterior mirrors and the CTA will also sound tones and display messages to warn you from which direction vehicles are approaching. Refer to the Driving Aids chapter in your Owner's Manual for more information.



\* if equipped

## Function *continued*



### Wiper Operation

Adjust the wiper stalk and its controls to operate the front and rear wipers.

- Single wipe - Pull the stalk down.
- Intermittent wipe - Raise the stalk upward to position 1.
- Normal wipe - Raise the stalk upward to position 2.
- High speed wipe - Raise the stalk to its highest position.

### Intermittent Wipe

Putting the wiper stalk in intermittent mode allows the driver to set the amount of time between wipes. Use the rotary control on

the wiper stalk to adjust the intermittent wipe intervals.

- Rotate the control upward for short wipe intervals.
- Rotate the control downward for long wipe intervals.

### Speed Dependent Wipers

When your vehicle speed increases, the interval between wipes will decrease.

### Auto Wipers\*

The wipers function when moisture is detected on the windshield, and will adjust the speed of the wipers automatically. Use the rotary control to adjust the sensitivity of the rain-sensor.

- Low sensitivity - the wipers will automatically operate when the sensor detects a large amount of moisture on the windshield.
- High sensitivity - The wipers will automatically operate when the

sensor detects a small amount of moisture on the windshield.

**Note:** In order for the sensors to operate properly, keep the outside of the windshield clean. Dirt, bugs and excessive road debris can cover the sensor and prevent it from detecting rain.

To reduce smearing, we recommend the following:

- Lower the sensitivity of the autowipers.
- Switch to normal or high speed wipes.
- Switch the autowipers off.

### Washing the Windshield

To operate the windshield washer, pull the wiper lever toward you.

- For a short spray, pull and release.
- For a longer spray, pull and hold the wiper lever toward you. Release the

lever once the windshield is clear of dirt or debris.

A wipe will occur a few seconds after washing to clear any remaining washer fluid.

### Rear Window Wiper

#### Rear Wiper Operation

Press the rocker switch on the end of the lever to change between off, intermittent and low speed. Press it upward once for intermittent, press again for low speed. Press it down to return to intermittent from low speed, press it down once more to turn off.

### Rear Window Washer

To use the rear window washer, push the wiper lever away from you. The washer will spray for as long as you push the lever away from you. When you release the lever, the wiper will continue to operate for a short time.

\* if equipped

# Liftgate

## Manual Liftgate

**Note:** The liftgate will only operate with the vehicle in P (Park).

To open the liftgate:

1. Unlock all the vehicle doors.
2. Press the button located inside the liftgate pull cup handle to unlatch the liftgate.
3. Pull on the outside handle to raise the liftgate.

## Power Liftgate\*

Open or close the liftgate with your keyfob by pressing the  button twice within three seconds. A chime will sound when the liftgate is activated. You can also open the liftgate from inside the vehicle by pressing the  button on the instrument panel.



To open with the outside liftgate button:

1. Unlock the liftgate with the keyfob or power door control. If the intelligent access key\* is within 3 feet (1 meter) of the liftgate, the liftgate will unlock when you press the liftgate release button.
2. Press the button located in the top of the liftgate pull-cup handle.
3. Allow the power system to open the liftgate after pressing the control.
4. To close with the control on the liftgate, press and release the button.

## Obstacle Detection

If the liftgate detects a problem at any point during the open or close request, indicator chimes will sound and the liftgate will stop.

The liftgate will not power open/close when:

- An object has been detected in the opening/closing path.
- The 12 volt battery does not have enough charge to power the liftgate.
- The vehicle is traveling over 3 mph/ 5 (km/h).

**Note:** Entering the vehicle while the liftgate is closing could cause the vehicle to bounce and activate obstacle detection.

# Liftgate *continued*



## Setting the Liftgate Open Height

Once the power liftgate is opened, it can be manually moved to a desired height. If a lower height than the fully-opened position has been programmed, the liftgate can be fully opened by manually pushing it upward.

The liftgate can be programmed to open to a desired height. To program the liftgate open height:

1. Open the liftgate.
2. Manually move the liftgate to the desired height.
3. Press and hold the control button on the liftgate until a chime is heard, indicating the new height has been programmed.

The new open liftgate height will now be recalled every time the liftgate is opened. To change the programmed height, repeat the process above.



## “Hands-Free” Liftgate Operation\*

**Note:** Your intelligent access key must be within 3 feet (1 meter) of the liftgate for the “hands-free” feature to work.

**Note:** Vehicles with towing packages **DO NOT** have the “hands-free” liftgate feature.

To open your liftgate hands-free while you are at the liftgate:

1. Move your leg toward and under, then away from the rear bumper (similar to a kicking motion). The liftgate will power open or close.

## Comfort



### Ambient Lighting\*

Illuminate the interior with a choice of several colors by using the ambient lighting feature. The ambient lighting controls are located on the overhead console.

-  Color Palette - Press to cycle through the various color choices and off.
-  Control Knob - Turn the knob past the first detent to switch ambient lighting on and adjust the brightness.
-  Search Mode - Press to switch on all interior lamps and ambient lighting. Press again to turn the interior lamps off.

The ambient lighting will remain on until you switch the ignition off and either lock your vehicle, or allow the accessory delay timer to expire.



### Heated Front Seats\*

The front heated seat controls are located on the center console near the gearshift lever. Rotate the dial to select the desired heat. There are 5 heat modes to choose from 0-5 (off-high).

### Rear Reclining Seats\*

Pull the lever up to recline the seatback to the desired position. Pull the lever up to fold the seatback forward. You may need to fold the outboard head restraints and lower the center head restraint first.



### Cargo Storage\*

A cargo storage compartment is located underneath the load floor in the rear of the vehicle. Lift the release handle to open it. In vehicles packaged with 17 inch wheels, the load floor can be adjusted to two positions; high or low.

There are four tie-down anchors in the rear cargo area (one in each corner) to help secure objects.

Additional cargo space is available underneath the front passenger seat and is accessible from the second row seats.

## Comfort *continued*



### Panoramic Vista Roof® and Power Sunshades\*

The moonroof and sunshade controls are located on the overhead console. Both controls have a "one touch" opening and closing operation. Press and release the rear of the sunshade control to open the sunshade. Press and release the front of the sunshade control to close the sunshade (if the moonroof is open it will close automatically prior to the sunshade). Press and release the rear of the moonroof control to open the sunshade and glass panel. Press and release the front of the moonroof control to close the glass panel.

### Memory Function\*

The memory function allows a "one-touch" recall of personalized memory features like, the positions of the driver seat and power mirrors\*. Use the memory controls located on the driver's door to program and then recall memory positions.

To program position 1, press and hold the 1 button until you hear a chime. Use this same procedure to set positions 2 and 3 using the respective buttons. You can now use these controls to recall the set memory positions.

### Tilted Head Restraints

Your vehicle's front row head restraints can be adjusted. Pull up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust/release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more will release it to the upright position.

**Note:** Do not attempt to force the headrest backward after it is tilted. Instead, continue tilting it forward until the headrest releases to the upright position.

### Rear Seats/Head Restraints

Your vehicle is equipped with second row outboard non-adjustable head restraints. The head restraints can be folded forward to improve rear vision when there are no rear occupants.

