

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



LEARN MORE ABOUT YOUR NEW FORD EDGE.

To put QR tags to work for you, use your mobile phone's browser or App store link to download a QR tag reader. Then follow the directions to scan the QR tag and see your vehicle's features come to life.

fordowner.com

LEARN HOW TO SYNC YOUR RIDE

SYNC is a voice-activated technology personalized by you. It is a hands-free, voice recognition system used for entertainment, information and communication.

SyncMyRide.com

WARNING: Driving while distracted can result in loss of vehicle control, accident and injury. Ford Motor Company strongly recommends that drivers use extreme caution when using any device or feature that may take their focus off the road. Your primary responsibility is the safe operation of the vehicle. We recommend against the use of any hand-held device while driving, encourage the use of voice-operated systems when possible and that you become aware of applicable state and local laws that may affect use of electronic devices while driving.



April 2012
Second Printing
Quick Reference Guide
Edge



Ford Motor Company Customer
Relationship Center

U.S. • 1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)
fordowner.com

Ford of Canada's Customer Relationship Centre

Canada • 1-800-565-3673 (FORD)
ford.ca

DT4J 19G217 AA



 
2013
EDGE



QUICK
REFERENCE
GUIDE

COMMONLY USED SYNC VOICE COMMANDS

SYNC®. Say the Word.

Touch the  voice button on the steering wheel, and then say:



Basic Commands

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Vehicle health
- Pair my phone



Phone

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb <On/Off>
- Listen to text message (phone-dependent feature)



Climate**

- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate temperature <60-85> degrees



Entertainment

- Audio list of commands:
 - You can also get detailed lists of commands for radio, USB, Bluetooth® audio, Sirius and SD Card.
- Audio <On/Off>
- Radio:
 - FM <87.7-107.9>
 - FM preset <#>
- CD:
 - Play track <1-512>
 - Shuffle <On/Off>
- USB:
 - Play song <name>
 - Play album <name>
- SiriusXM:
 - <channel name>
 - Preset <#>



Navigation**

- Navigation list of commands (if equipped)
 - Destination street address <number, name, city>
 - Destination home
 - Navigation voice <On/Off>
 - Navigation volume <increase/decrease>
 - Repeat instruction
 - Show <map/north-up/heading-up/3D>
- Travel Link list of commands
 - Traffic
 - Weather
 - Movie Listings
 - Fuel prices
 - Sports <headlines/scores/schedule>



SYNC® Services

- Must say "Services" first, and then
- What can I say?
 - Traffic
 - Directions
 - Business search
 - Operator (for direction or business search)
 - Favorites
 - News, sports, weather, horoscopes, stock quotes, movies or travel
 - Help

Refer to your *Owner's Manual*, SyncMyRide.com or call 1-800-392-3673 (option 3 Support) for more complete information on SYNC with *MyFord Touch*.

**Available only with MyFord Touch

TABLE OF CONTENTS

4-5 INSTRUMENT PANEL

6-7 GETTING STARTED WITH YOUR SYNC SYSTEM

8-10 SYNC WITH MYFORD TOUCH

11 CONVENIENCE

12 - 13 ESSENTIAL INFORMATION

14 FUNCTION

15 COMFORT

INSTRUMENT PANEL



1. CRUISE CONTROL

To set your cruise control speed:

1. Press the **ON** control up and release.
2. Accelerate to the desired speed.
3. Press the **SET** control up and release, then take your foot off the accelerator.

After your speed has been set you can press **SET +/-** to adjust cruise speed. To disable, press the **OFF** control down.

ADAPTIVE CRUISE CONTROL*


Allows you to set a 'gap distance' between yourself and the vehicle in front of you during highway driving. When your cruise control is active, press **GAP** up or down to select the gap distance. Refer to the *Cruise Control* chapter of your *Owner's Manual* for more information.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your Owner's Manual for safety information, more detail and limitations.

2. INFORMATION DISPLAYS*

Displays information about various systems on your vehicle. Use the left-hand side, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter in your *Owner's Manual* for more information.

3. SERVICE ENGINE SOON LIGHT

 Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics system (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

4. TILT/TELESCOPE STEERING COLUMN



Unlock the steering wheel by pulling the lever down. Adjust the steering wheel to the desired position. Push the lever back up to lock the steering wheel in place.

5. INFOTAINMENT DISPLAY*

Displays information about Entertainment, Phone, Navigation and Climate. Use the right-hand side, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the *MyFord Touch*® chapter in your *Owner's Manual* for more information.

6. STEERING WHEEL AUDIO CONTROLS

Press **VOL +/-** to increase/decrease volume levels. Press **SEEK ▲/▼** to access the next/previous radio station preset, CD track or preset satellite radio channel*.

-  Press to access voice recognition.
-  Press to connect/disconnect a phone call.

7. PUSH BUTTON START *

Allows you to start your vehicle by pressing the **ENGINE START/STOP** button, while fully pressing down on the brake pedal. Press the button again to turn the engine off.

Note: Your intelligent access key* must be inside the vehicle for keyless starting to work.

8. HAZARD CONTROL

* (if equipped)

Getting Started with SYNC®*

* (if equipped)

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC...Say the word.


BEFORE YOU GET STARTED:

- 1) Set up your owner account at SyncMyRide.com. Register by following the on-screen instructions. After registering you can see what complimentary services you are eligible for.
- 2) SYNC uses a wireless connection called Bluetooth® to communicate with your phone. Turn Bluetooth mode on in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit syncmyride.com, or your phone manufacturer's website.

PAIRING YOUR PHONE WITH SYNC:

In order to use many of the features of SYNC such as making a phone call, receiving a text or using SYNC services, you must first connect or pair your phone with SYNC.

To pair your phone for the first time:

- 1) Make sure that your vehicle is in (P) park and that both your ignition and radio are turned on.
- 2) Press the phone button , when the display indicates **No Phone Found** press **OK**.
- 3) When **Add Bluetooth Device?** appears in the SYNC display, press **OK**.
- 4) When **Find SYNC** appears in the display, press **OK**. When prompted on your phone's display, enter the PIN provided by SYNC into your phone.
- 5) The display will indicate when the pairing is successful.


Note: The system may prompt you to set your phone as the primary/favorite (the primary phone will receive messages and voice mails); download your phone book (this is required to use the full set of voice commands); and/or turn on 911 Assist®.

Tips:

- Make sure you accept SYNC's request to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your *Owner's Manual*.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC and deleting the SYNC connection from your phone, and then repeat the process.

COMMONLY USED VOICE COMMANDS:

SYNC say the word:


Every time you want to give SYNC a voice command, you must first press the voice button  and when prompted, speak your voice command. For a list of voice commands say **"What can I say?"**

Why do I need a SYNC owner account?

A SYNC owner account is required for Vehicle Health Report activation and the ability to view your reports online. You'll also be able to take advantage of all of SYNC's Services and personalization features, such as saving your Favorites and Points of Interest. You'll receive the latest software updates that add new places, directions and information; and if you have questions, you'll get free customer support.


USING MY PHONE WITH SYNC®:

Making a phone call:



Use SYNC to make a phone call to anyone in your phone book by pressing the voice button  and when prompted, giving any of the following voice commands:

Call <name>	Call <name> at work
Call <name> on cell	Call <name> at home

For example, you could say "Call Jake Smith at home". SYNC repeats the command back to you and dials the number.

Note: You can also make phone calls by pressing the voice button  and when prompted, giving the voice command "Dial", then verbally saying the phone number.

Answering incoming calls:

Whenever you have an incoming call, you will be able to see the name and number of the person calling in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

Do not disturb mode:

This feature blocks incoming calls and text messages and diverts them to your voicemail and saves text messages for later. You still have access to outgoing calls when this feature is active. Say the voice command, "Do not disturb on" to enable and "Do not disturb off" to disable.


USING SYNC TO ACCESS DIGITAL MEDIA:

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

Note: SYNC indexes your music; the more information that is stored on your USB device, the longer it takes SYNC to index.

Using voice commands to play music:

You can use voice commands to access and play music on your digital media player when it is plugged into your media hub.

- 1) Plug your media player into your USB port.
- 2) Press the voice button . When prompted say "USB", then follow-up saying one of the following voice commands.

"Play all"	"Play next song"
"Play song <name>"	"Play album <name>"

- 3) You will hear the command repeated back to you and the selected item will play.

Do More

After creating your account at syncmyride.com use SYNC Services to get the most out of your SYNC experience. This includes voice activated turn-by-turn directions, the latest traffic reports, business searches, sports scores, and more. Say the voice command, "Services", and SYNC will guide you through to your available services. More features may be available. Visit SyncMyRide.com for more information.

SYNC® with MyFord TOUCH®* (if equipped)

* (if equipped)




SYNC with MyFord Touch. A revolutionary way to connect with your car.

GETTING STARTED, UNDERSTANDING SYNC WITH MYFORD TOUCH:

Use the four-corner, four-color touch screen to explore and interact with your vehicle. The touch screen works the same way traditional


controls, knobs and buttons do. Simply press the various corners on your touch screen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system.

General Tips:

Press the home icon  at any time to return to your home screen.

For additional support, refer to your *Owner's Manual*, SyncMyRide.com or call 1-800-392-4040 for more complete information on SYNC with MyFord Touch.

Before you get started:

- Pair your phone to SYNC before using MyFord Touch (see the *Getting started with your SYNC system* section for instructions on how to do this).
- If you have the navigation SD card, make sure that it is inserted into the media port or your navigation will not work.
- The touch screen is sensitive, so make sure you press the desired icon accurately and firmly.
- If you accidentally press the wrong icon and enter the wrong screen you can always press the home icon  to return to your home screen. You can also use SYNC to go back by saying the voice command "Go back".

PHONE

Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.

Your phone connects you with many other features and SYNC services:

- Connect to SYNC Services for traffic, directions, business searches and information favorites.
- Connect to Operator Assist to help locate a listing or destination.
- Call for a Vehicle Health Report.
- Automatically connects with a 911 Operator in the event of an accident.
- Transfer calls seamlessly from SYNC to your phone as you get in or out of your vehicle.

Refer to the *SYNC* chapter of your *Owner's Manual* for complete details.

NAVIGATION*

Get started with your navigation system by pressing the upper-right, green corner. The available voice-activated navigation system includes:


- SiriusXM Traffic™
- SiriusXM Travel Link™
- Global positioning system (GPS) technology
- 3-D mapping
- Turn-by-turn navigation

Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.

Set a Destination



Set a destination on your touch screen by using a street address, a city center, a place on the map or a Point of Interest (POI). The easiest way, however, is by voice.

- 1) Press the voice button , then when prompted say "Destination street address".
- 2) The system will ask you to say the full address and will display an example on-screen.
- 3) You can then speak the address naturally, such as: "One two three Main Street, Anytown"

You can also use the touch screen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- Fastest: Uses the fastest moving roads possible.
- Shortest: Uses the shortest distance possible.
- Eco (EcoRoute): Uses the most fuel efficient route.

Tips:

- Save your favorite locations by touching "Save to Favorites".
- Change your map views from Direction Headed, North Up or 3D.

SYNC® with MyFord TOUCH®

CONVENIENCE

* (if equipped)

CLIMATE

SYNC with MyFord Touch controls the temperature, airflow direction, fan speed, and activates other climate features like heated front seats for you and your passenger.

To use voice commands to operate climate, say a voice command like "Climate temperature 72 degrees" and MyFord Touch will make that adjustment.



Set Your MyTemp*

- Touch the lower-right, blue Climate corner on the touch screen.
- Set your exact, desired temperature using the arrows.
- Press and hold the MyTemp button until the background color goes solid.

ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left, red corner of the touch screen. From here, you can easily go between AM/FM, Sirius and other media sources.

Set Your Radio Presets

- Touch the Entertainment corner on the touch screen.
- Touch FM.
- Touch Direct Tune.
- Enter the desired station and touch Enter.
- Touch Presets and then touch and hold one of the memory preset buttons to save it. You'll hear a brief mute and the sound will return once the station is saved.



Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- CD
- USB
- Bluetooth Streaming
- SD Card
- A/V In

Refer to the *MyFord Touch* chapter in your *Owner's Manual*, SyncMyRide.com or call 1-800-392-4040 for more complete information on SYNC with MyFord Touch.



RAIN-SENSING WIPERS*

If activated, your wipers will automatically turn on when moisture is present on the windshield. The wiper speed will vary based on the amount of moisture detected and on the sensitivity setting. To deactivate, turn your wiper controls off.

Note: Make sure that this feature is turned off before entering a car wash.

REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your remote transmitter. To start, press and then press twice within three seconds. Once inside, apply the brake while pressing the **ENGINE START/STOP** button. Shift into D (Drive) and go. If you have an integrated keyhead transmitter, simply insert the key into the ignition and turn the ignition on as you normally would before driving. To turn the engine off from outside the vehicle after using your remote start, press once.

You can personalize your settings within the Information Display. For complete information, refer to the Information Display chapter in your Owner's Manual.

POWER LIFTGATE

Your liftgate has an automatic open and closing feature. To open remotely, press twice on your keyhead within three seconds. Press twice again to close or reverse the movement. You can also operate the liftgate by pressing the button on the instrument panel.

INTELLIGENT ACCESS (IA) KEY*

Note: Your intelligent access key must be within three feet of the vehicle to operate properly.

To unlock the driver's door, pull the front exterior door handle. To unlock and open the liftgate, press the exterior liftgate release button underneath the liftgate handle. The intelligent access key also contains a mechanical key blade, which can be used to unlock the driver door if necessary.



INTEGRATED KEYHEAD TRANSMITTER (IKT) AND INTELLIGENT ACCESS (IA) REMOTE ENTRY ICONS*

- Press once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press to activate the panic alarm. Press again or turn on the ignition to deactivate.
- Press twice within three seconds to open the liftgate.
- Car finder: Press twice within three seconds to locate your vehicle. The horn will chirp and the lamps will flash.

CARGO STORAGE*

The cargo storage compartment is located in the floor of the rear hatch. Lift the release handle to open the floor panel upward. You may also have a cargo net that secures lightweight objects in the cargo area. Attach the net to the anchors provided on both sides of the vehicle's interior.

ESSENTIAL INFORMATION ^{*} (If equipped)

EASY FUEL® SYSTEM

With this system, you simply open the fuel door, insert the nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait five seconds from the time the refueling nozzle is shut-off until you remove the nozzle from the vehicle to allow residual fuel in the nozzle to drain into the tank.



FUEL TANK CAPACITY/ FUEL INFO

All-wheel drive vehicles have a 19.2 gallon (72.7L) fuel tank capacity and front-wheel drive vehicles have a 18.3 gallon (69.3L) fuel tank capacity. Use only "Regular" unleaded gasoline with an octane rating of 87 or higher. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.

REAR WINDOW BUFFETING

 
When one or both of your rear windows are open, you may hear a wind throb or buffeting noise. To alleviate this, simply lower a front window until buffeting subsides.

COLLISION WARNING SYSTEM*

This system is designed to alert the driver of certain collision risks. Radar sensors detect if vehicles ahead of you, which are moving in the same direction, may be a collision risk. The system will alert you with an audible chime and red warning light which will appear above the dash. If the risk of collision increases, the system will increase brake support to help reduce collision speed.



SOS POST-CRASH ALERT SYSTEM™

Provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or the panic button  on your remote transmitter.

LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are located beneath the carpeted floor panel in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Changing a Road Wheel* in the *Wheels and Tires* chapter in your *Owner's Manual*.



FUEL-EFFICIENT TRANSMISSION

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

RUNNING OUT OF FUEL


When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment) and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. Do not use aftermarket funnels as they will not work with the Easy Fuel® system and may cause damage.

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.



TIRE PRESSURE MONITORING SYSTEM

Your vehicle has a tire pressure monitoring system that illuminates a low tire pressure warning light  in your instrument cluster when one or more of your tires is significantly underinflated. If this happens stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Inflating Your Tires* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.



FUNCTION

* (if equipped)

REARVIEW CAMERA*

This system provides a visual display of the area behind the vehicle. The display automatically appears in the touch screen when the vehicle is in R (Reverse) and uses green, yellow and red guides to alert you of your proximity to objects. For non-touch screen vehicles, the image will appear in the 4.2-inch center stack display.



REVERSE SENSING SYSTEM*

This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in R (Reverse) and is traveling less than 3 mph (5 km/h). The warning tone will increase in frequency as the object gets closer.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more detail and limitations.

BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT (CTA)*

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. The CTA feature alerts you if a car is coming toward you when you are backing out of a parking space. BLIS and CTA will display a yellow indicator light in your exterior mirrors and the CTA will also sound tones and display messages to warn you which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

SELECTSHIFT AUTOMATIC™ TRANSMISSION*

Gives you the ability to manually change gears if you'd like, along with a more aggressive shift schedule. To use, move the gearshift lever from D (Drive) to S (Sport). Then, simply press + or – buttons on the gearshift lever to make shifts. If equipped with steering wheel paddles, pull the right paddle (+) to upshift, pull the left paddle (–) to downshift.

MYKEY®*

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like; speed restrictions, limited volume levels and safety belt reminders. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

SECURICODE™ KEYLESS ENTRY SYSTEM*

 
 
Allows you to lock or unlock the doors using the touchpad. You will need your five digit factory code located on your owner's wallet card in the glove box. Refer to the *Locks* chapter in your *Owner's Manual* for more information on how to use SecuriCode.



COMFORT

* (if equipped)

HEATED FRONT SEATS*

To access heated seats, press the Climate corner on your touch screen. Press  repeatedly to cycle through the various heat modes and off. If your vehicle is not equipped with a touch screen, press the hard button .

EASYFOLD® REAR FOLDING SEATS*

The controls are located near the left side of the liftgate interior opening. Press the top control to lower the right seat, or the bottom control to lower the left seat. To return the seats to their upright position, rotate the seatbacks upward until you hear a click and the seat latches.



Note: This feature is operational when the vehicle is in park and the liftgate has been open for less than 10 minutes.

TILTING HEAD RESTRAINTS*




Your vehicle's front row head restraints can be adjusted. Pull up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust/release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more will release it to the upright position.

Note: Do not attempt to force the headrest backward after its tilted. Instead, continue tilting it forward until the headrest releases to the upright position.

MEMORY FUNCTION*

The memory function allows a "one touch" recall of personalized memory features such as; driver seat positions and power mirrors. Use the memory controls located on the instrument panel to program and then recall memory positions. To Program position 1, press and hold  until you hear a chime. To set a second position, press and hold  until the same chime sounds. You can now use these controls to recall the set positions.

PANORAMIC VISTA ROOF® AND POWER SUNSHADES*

To open, press and release the overhead moonroof switch . The front and rear sunshades will open entirely, and the glass panel will open to the first position. Press  again to fully open. To close, pull the switch  down. The glass panel will stop at the first position. Pull again and hold to fully close the glass panel and the sunshades.

To vent from a closed position, press the TILT button. To close from a venting position, pull the TILT button.

