

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

Lincoln Customer Relationship Center,
U.S. 1-800-521-4140
(TDD for the hearing impaired:
1-800-232-5952)
lincolnowner.com
Canada 1-800-665-2006
lincolncanada.com



Lincoln MKX
January 2012
First Printing
Quick Reference Guide
Litho in USA

DAIJ 19G217 AA



2013 QUICK REFERENCE GUIDE



{ LINCOLN MKX



LEARN MORE ABOUT
YOUR NEW LINCOLN MKX
lincolnowner.com

LEARN HOW TO SYNC
YOUR RIDE: SYNC is a
voice-activated technology
personalized by you. It
is a hands-free, voice
recognition system used for
entertainment, information
and communication.
syncmyride.com

LINCOLN MKX

SMARTER THAN LUXURY

WARNING

Driving while distracted can result in loss of vehicle control, accident and injury. Ford Motor Company strongly recommends that drivers use extreme caution when using any device or feature that may take their focus off the road. Your primary responsibility is the safe operation of the vehicle. We recommend against the use of any hand held device while driving, encourage the use of voice-operated systems when possible and that you become aware of applicable state and local laws that may affect use of electronic devices while driving.

TABLE OF CONTENTS

{ LINCOLN MKX

INSTRUMENT PANEL	4-5
SYNC WITH MYLINCOLN TOUCH™	6-9
CONVENIENCE	10
COMFORT	11
ESSENTIAL INFORMATION	12-13
FUNCTION	14-15





1 POWER TILT/TELESCOPE STEERING COLUMN*:

Your power tilt steering column has a four-way rocker control which allows you to adjust the steering wheel to the desired position.

2 CRUISE CONTROL:

To set your cruise control speed:

1. Press the **ON** control up and release.
2. Accelerate to the desired speed.
3. Press the **SET** control up and release, then take your foot off the accelerator.

► After your speed has been set you can press **SET +/-** to adjust cruise speed up or down. To disable, press the **OFF** control down.

ADAPTIVE CRUISE CONTROL*:

Allows you to set a 'gap distance' between yourself and the vehicle in front of you during highway driving. When your cruise control is active, press **GAP** up or down to select the gap distance. Refer to the *Cruise Control* chapter of your *Owner's Manual* for more information.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your *Owner's Manual* for safety information, more detail and limitations.

3 INFORMATION DISPLAYS:

Provides information about

various systems on your vehicle. Use the left-hand side, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter in your *Owner's Manual* for more information.

4 SERVICE ENGINE SOON LIGHT:

☾ Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics system (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

5 INFOTAINMENT DISPLAY:

Displays information about Entertainment, Phone, Navigation and Climate. Use the right-hand side 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the *MyLincoln Touch™* chapter in your *Owner's Manual* for more information.

6 STEERING WHEEL AUDIO CONTROLS:

Press **VOL +/-** to increase/decrease volume levels. Press **SEEK ▲ / ▼** to access the next/previous radio station preset, CD track or preset satellite radio channel*.

☎ : Press to access voice recognition.

☎ : Press to access SYNC® phone features.

7 PUSH BUTTON START:

Allows you to start your vehicle by pressing the **ENGINE START/STOP** button while fully pressing down on the brake pedal. Press the button again to turn the engine off.

Note: Your intelligent access key* must be inside the vehicle for keyless starting to work.

8 HAZARD CONTROL

9 AUDIO VOLUME AND FAN SPEED SWIPE CONTROLS:

Simply swipe your finger to adjust audio volume or fan speed with the touch sensitive slide bars.

* IF EQUIPPED


GETTING STARTED WITH YOUR SYNC® SYSTEM

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC...Say the word.

BEFORE YOU GET STARTED:

1. Set up your owner account at syncmyride.com. Register by following the on-screen instructions. After registering you can see what complimentary services you are eligible for.
2. SYNC uses a wireless connection called Bluetooth® to communicate with your phone. Turn Bluetooth mode on in your phone's menu options. This lets your phone find SYNC. For more details on setting up your phone with SYNC, visit syncmyride.com, or your phone manufacturer's website.

PAIRING YOUR PHONE WITH SYNC®:

1. Make sure that your vehicle is in (P) park and turn your ignition and radio on.
2. Press the phone button , when the display indicates **No Phone Found** press **OK**.
3. When **Add Bluetooth Device?** appears, press **OK**.
4. When Find SYNC appears in the display, press **OK**. When prompted, enter the PIN provided by SYNC into your phone.
5. The display will indicate when the pairing is successful.


Note: The system may prompt you to:

- Set your phone as the primary/favorite (the

primary phone will receive messages and voice mails).

- Download your phone book (this is recommended to use voice commands).
- Turn on 911 Assist™.

COMMONLY USED VOICE COMMANDS - SYNC®


SAY THE WORD: Every time you want to give SYNC a voice command, you must first press the voice button  and when prompted, speak your voice command. For a list of voice commands say "What can I say?"

Tips:

- Make sure the interior of the vehicle is as quiet as possible. Wind noise from open windows and road vibrations may prevent the system from correctly recognizing spoken commands.

- After pressing the voice button, wait until after the tone sounds and "Listening" appears in your vehicle's display before saying a command. Any command spoken prior to this does not register with the system.


- Speak naturally, without long pauses between words.

- At any time, you can interrupt the system while it is speaking by pressing the voice button .

USING MY PHONE WITH SYNC®:


 
Note: You must download your phone book to make phone calls with voice commands by name. *Contacts listed in all caps will require you to spell them (i.e. JAKE, will be J-A-K-E).*

MAKING A PHONE CALL:

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button  and when prompted, giving any of the following voice commands:

Call <name>	Call <name> at work
Call <name> on mobile or cell	Call <name> at home


For example, you could say "Call Mom at home". SYNC repeats the command back to you and dials the number.

Answering incoming calls: Whenever you have an incoming call, you will be able to see the name and number of the person calling in your display. Press the phone button  to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

Using SYNC® to Access Digital Media: SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Use your media inputs to:

- charge or play USB devices such as phones and MP3 players.
- play gaming systems using Audio/Video inputs.
- view navigation data or import photos with the SD card slot.

Using voice commands to play music:


1. Plug your media player into your USB port.
2. Press the voice button . When prompted say "USB", then follow-up saying one of the following voice commands.

Play all	Play next song
Play song <name>	Play album <name>

3. You will hear the command repeated back to you and the selected item will play.

*Say "What can I say?" to hear a list of more voice commands available in this mode.

DO MORE: After creating your account at syncmyride.com, use SYNC® Services to get the most out of your SYNC experience. This includes; voice activated turn-by-turn directions, the latest traffic reports, business searches, sports scores, stock market reports and more.

You can access your available services by pressing the voice button  and when prompted, say "Services". The portal will guide you, but you can say any of the following voice commands:

Traffic	Sports
Directions	Weather
News	Business search

*Say "What can I say?" to hear a list of more voice commands available in this mode.

Your SYNC system also offers advanced features such as internet connectivity, SYNC AppLink™, and vehicle health report all available at syncmyride.com.

HELP!: At any time, you can give the voice command "Help". The system will provide an audible list of voice commands available in your current mode.

SYNC WITH MYLINCOLN TOUCH™ (continued)

LINCOLN MKX

GETTING STARTED, UNDERSTANDING SYNC WITH MYLINCOLN TOUCH™



Use the four corner, four color touch screen to explore and interact with your vehicle. The touch screen works the same way traditional controls, knobs and buttons do. Simply press the various corners on your touch screen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system.

BEFORE YOU GET STARTED:

- Pair your phone to SYNC before using MyLincoln Touch™ (see *Getting started with your SYNC® system* in this guide for instructions how to do this).
- If you have the navigation SD card, make sure that it is inserted into the media port or your navigation will not work.
- The touch screen is sensitive, so make sure you press the desired icon accurately and firmly.
- If you accidentally press the wrong icon and enter the wrong screen you can always press the back icon to return to the previous screen. You can also use SYNC to go back by saying the voice command “Go back”.

PHONE WITH SYNC®

Make phone calls, send text messages, view your phone book and call history by pressing the yellow corner of your touch screen. You can also do things like change the ring tone in your car and program images to your phone book contacts so you can see who is calling on your touch screen.

Your phone connects you with many other features and SYNC services:

 
- Connect to SYNC Services for traffic, directions, business searches and information favorites.
- Connect to Operator Assist to help locate a listing or destination.
- Call for a Vehicle Health Report.
- Connect directly to a 911 Operator.
- Transfer calls seamlessly from SYNC® to phone as you get in or out of your vehicle.

Refer to the *SYNC* chapter of your *Owner's Manual* for complete details.

AVAILABLE VOICE ACTIVATED NAVIGATION*

The available voice-activated navigation system with SiriusXM Traffic™ and SiriusXM Travel Link™ combines global positioning system (GPS) technology with 3-D mapping and provides turn-by-turn navigation. You get continuously updated directions, information on weather, traffic delays and alternate route suggestions, local gas prices, movie listings, sports scores and more. Refer to the *MyLincoln Touch* chapter of your *Owner's Manual* for complete details.

SET A DESTINATION: You can use the touch screen to set a destination in many ways, like a street address, a city center, a place on the map or a POI. The easiest way is by voice.

- Press the voice button , then when prompted say “Destination street address”.
- The system will ask you to say the full address and will display an example on-screen.
- You can then speak the address naturally, such as: “One two three Main Street, Anytown”

You can also use the touch screen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- Fastest:** Uses the fastest moving roads possible.
- Shortest:** Uses the shortest distance possible.
- Eco (EcoRoute):** Uses the most fuel efficient route.


CLIMATE

No knobs or dials needed. Just touch the lower right-hand, blue corner of the touch screen. SYNC® with MyLincoln Touch™ controls the temperature, airflow direction, fan speed, and activates other climate features like heated/cooled front seats for you and your passenger. To use voice commands to operate climate, say a voice command like “Climate temperature 72 degrees” and MyLincoln Touch™ will make that adjustment.

ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower, left-hand red corner of the touch screen. From here, you can easily go between AM/FM, CD, USB and other media sources. You use your touch screen or the audio controls on the left side of your steering wheel to interact with your digital media.

GENERAL TIPS:

- Press the home icon  at any time to return to your home screen.
- Many of your SYNC with MyLincoln Touch™ features can also be accessed through your infotainment display by using the right hand, 5-way steering wheel controls.



CONVENIENCE

RAIN-SENSING WIPERS*:






If activated, your wipers will automatically turn on when moisture is present on the windshield. The wiper speed will vary based on the amount of moisture detected and the sensitivity setting. To deactivate, turn your wiper control off.

Note: Make sure that this feature is turned off before entering a car wash.

MEMORY FUNCTION*:

Allows one-touch recall of memory positions for the driver seat, power mirrors and steering column. Use the memory controls located on the driver's door to program and then recall memory positions. To Program position 1, press and hold  until you hear a chime. To set a second position, press and hold  until the same chime sounds. You can now use these controls to recall the set positions.

INTELLIGENT ACCESS (IA) REMOTE ENTRY ICONS:




- Press  once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press  once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press  to activate the panic alarm. Press again or turn on the ignition to deactivate.
- Press  twice within three seconds to open the liftgate.
- Car finder: Press  twice within three seconds to locate your vehicle. The horn will chirp and the lamps will flash.

INTELLIGENT ACCESS (IA) KEY:

Note: Your intelligent access key must be within three feet of the vehicle for intelligent access to function properly.





To unlock and open the driver's door, pull the front exterior door handle. To lock the doors, touch the sensor button on the door handle. To unlock and open the liftgate, press the exterior liftgate release button underneath the liftgate handle. The intelligent access key also contains a mechanical key blade, which can be used to unlock the driver door if necessary.

 
 
REMOTE START: Remote start allows you to start the engine from outside your vehicle using your transmitter. To start press  and then press  twice within three seconds. Once inside, apply the brake while pressing the **ENGINE START/STOP** button. Shift into D (Drive) and go. If you have an integrated keyhead transmitter, simply insert the key into the ignition and turn the ignition on as you normally would before driving. To turn the engine off from outside the vehicle after using your remote start, press  once.

COMFORT



HEATED AND COOLED FRONT SEATS*:


To access, press the Climate corner on the touch screen. For heated front seats, press  repeatedly to cycle through the various heat modes and off. For cooled front seats, press  repeatedly to cycle through the various cooling modes and off.

REAR HEATED SEATS*: The rear heated seat controls are located on the rear passenger door panels. Press  to select high or  to select low heat. Press the selected button again to turn off.



EASYFOLD® REAR FOLDING SEATS*:

The controls are located near the left side of the liftgate interior opening. Press the top control to lower the right seat, or the bottom control to lower the left seat. To return the seats to their upright position, rotate the seatbacks upward until you hear a click and the seat latches.

HEATED STEERING WHEEL*: Your vehicle may be equipped with a heated steering wheel. To access, press the Climate corner of the touch screen. Press  to turn on and off.

Note: The wood trim will not heat between the 10 and 2 o'clock positions.




 

TILTING HEAD RESTRAINTS:

Your vehicle's front row head restraints can be adjusted. Pull up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust/release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more will release it to the upright position.

Note: Do not attempt to force the headrest backward after it's tilted. Instead, continue tilting it forward until the headrest releases to the upright position.



PANORAMIC VISTA ROOF™ AND POWER SUNSHADES*:

To open, press and release the overhead moonroof switch . The front and rear sunshades will open entirely, and the glass panel will open to the first position. Press  again to fully open. To close, pull the switch  down. The glass panel will stop at the first position. Pull again and hold to fully close the glass panel and the sunshades. To vent from a closed position, press the **TILT** button. To close from a venting position, pull the **TILT** button.

ESSENTIAL INFORMATION

LINCOLN MKX

CARGO STORAGE:

The cargo storage compartment is located in the floor of the rear hatch. Lift the release handle to open the floor panel upward. You may also have a cargo net that secures lightweight objects in the cargo area. Attach the net to the anchors provided on both sides of the vehicle's interior.

IMPROVED FUEL ECONOMY WHILE COASTING OR DECELERATING: Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

ROADSIDE ASSISTANCE: Your new Lincoln vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1 (800) 521-4140. In Canada, call 1 (800) 665-2006.



THX II® CERTIFIED AUDIO SYSTEM*: Fourteen strategically positioned, high performance speakers deliver a home theater sound right in your vehicle. The system will automatically make adjustments to volume and sound distribution, based on vehicle speed and external road noise.

FUEL TANK CAPACITY/ FUEL INFO: All-wheel drive vehicles have a 19.2 gallon (72.7L) fuel tank capacity and front-wheel drive vehicles have a 18.3 gallon (69.3L) fuel tank capacity. Use only "Regular" unleaded gasoline with an octane rating of 87 or higher. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.

RUNNING OUT OF FUEL: When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. Do not use aftermarket funnels as they will not work with the Easy Fuel® system and may cause damage.



COLLISION WARNING SYSTEM*: This system is designed to alert the driver of certain collision risks. Radar sensors detect if vehicles ahead of you, which are moving in the same direction, may be a collision risk. The system will alert you with an audible chime and red warning light which will appear above the dash. If the risk of collision increases, the system will increase brake support to help reduce collision speed.

SOS POST-CRASH ALERT SYSTEM™: Provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or the panic button (🔊) on your remote transmitter.




LOCATION OF SPARE TIRE AND TOOLS: Your spare tire and tools are located beneath the carpeted floor panel in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Changing a Road Wheel* in the *Wheels and Tires* chapter of your *Owner's Manual*.

TIRE PRESSURE MONITORING SYSTEM: Your vehicle has a tire pressure monitoring system that illuminates a (🚗) low tire pressure warning light in your instrument cluster when one or more of your tires is significantly underinflated. If this happens stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the *Inflating Your Tires* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

REAR WINDOW BUFFETING: When one or both of your rear windows are open, you may hear a wind throb or buffeting noise. To alleviate this, simply lower a front window approximately 2-3 inches (5-8 cm).



REARVIEW CAMERA*: This system provides a visual display of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in R (Reverse) and uses green, yellow and red guides to alert you of your proximity to objects.

POWER LIFTGATE: Your liftgate has an automatic open and closing feature. To open remotely, press  twice on your remote control within three seconds. Press  twice again to close or reverse the movement. You can also operate the liftgate by pressing the  button on the instrument panel.



REVERSE SENSING SYSTEM: This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in R (Reverse) and is traveling less than 3 mph (5 km/h). The warning tone will increase in frequency as the object gets closer.

***Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Manual for safety information, more detail and limitations.*



SELECTSHIFT AUTOMATIC™ TRANSMISSION WITH PADDLE ACTIVATION*: Gives you the ability to manually change gears if you'd like. To use, move the gearshift lever from D (Drive) to S (Sport). Pull the right paddle (+) to upshift, pull the left paddle (-) to downshift.



BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT (CTA)*: BLIS® uses radar sensors to help you determine if a vehicle may be in your blind spot zone. The CTA feature alerts you if a car is coming toward you when you are backing out of a parking space. BLIS® and CTA will display a yellow indicator light in your exterior mirrors and the CTA will also sound tones and display messages to warn you which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

HOMELINK® WIRELESS CONTROL SYSTEM: Your driver's side visor has a built-in wireless transmitter that replaces the common handheld garage door opener. This system can also be programmed to security systems, entry gates and home or office lighting. Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual*, or visit www.homelink.com for programming instructions.



EASY FUEL® SYSTEM: With this system, you simply open the fuel door, insert the nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait five seconds from the time the refueling nozzle is shut-off until you remove the nozzle from the vehicle to allow residual fuel in the nozzle to drain into the tank. When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel.



SECURICODE™ KEYLESS ENTRY SYSTEM: Allows you to lock or unlock the doors, recall memory features and arm or disarm the anti-theft alarm. To get started, you will need your five digit factory code found on your owner's wallet card (located in the glove box). Entering this code unlocks the driver's door. To lock all doors, press and hold 7•8 and 9•0 at the same time. For complete information, refer to the *SecuriCode™ Keyless Entry Keypad* section in the *Locks* chapter of your *Owner's Manual*.