

 


This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.



Ford Motor Company
Customer Relationship Center
 U.S. • 1-800-392-3673 (FORD)
 (TDD for the hearing impaired: 1-800-232-5952)
fordowner.com

Ford of Canada's
Customer Relationship Centre
 Canada • 1-800-565-3673 (FORD)
ford.ca



EL2J19G217 AA



Explorer
 April 2013
 First Printing
 Quick Reference Guide
 Litho in U.S.A.

**LEARN MORE ABOUT
 YOUR NEW FORD EXPLORER**

To put QR tags to work for you, use your mobile phone's browser or app store link to download a QR tag reader. Then follow the directions to scan the QR tag and see your vehicle's features come to life.



fordowner.com



ford.ca

SYNC is a voice-activated technology personalized by you. It is a hands-free, voice recognition system used for entertainment, information and communication.

SyncMyRide.com (U.S.)
SyncMyRide.ca (Canada)

WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

**QUICK
 REFERENCE
 GUIDE**

++++ 2014 EXPLORER



COMMONLY USED SYNC® VOICE COMMANDS



Basic Commands

- What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Vehicle health
- Pair my phone



Entertainment

- Audio list of commands
 - You can also get detailed lists of commands for radio, USB, *Bluetooth*® audio, Sirius and SD Card
- Audio <On/Off>
- Radio:
 - FM <87.7-107.9>
 - FM preset <#>
- CD:
 - Play track <1-512>
 - Shuffle <On/Off>
- USB:
 - Play song <name>
 - Play album <name>
- SiriusXM:
 - <channel name>
 - Preset <#>



Phone

- Phone list of commands
- Dial
- Call <name> on cell/at home/at work
- Call voicemail
- Do not disturb <On/Off>
- Listen to text messages (phone-dependent feature)



Navigation**

- Navigation list of commands (if equipped)
 - Destination street address <number, name, city>
 - Destination home
 - Navigation voice <On/Off>
 - Navigation volume <increase/decrease>
 - Repeat instruction
 - Show <map/north-up/heading-up/3D>
- Travel Link list of commands:
 - Traffic
 - Weather
 - Movie listings
 - Fuel prices
 - Sports <headlines/scores/schedule>



Climate**

- Climate control list of commands
- Climate <On/Off>
- Climate my temperature
- Climate temperature <60-85> degrees



SYNC® Services

- If equipped, must say "Services" first, and then:
- What can I say?
 - Traffic
 - Directions
 - Business search
 - Operator (for direction or business search)
 - Favorites
 - News, sports, weather horoscopes, stock quotes, movies or travel
 - Help

**Available only with MyFord Touch

Some services may not be available in your area. Refer to your Owner's Manual, visit the website or call the toll-free number for

more information. For U.S. customers: visit SyncMyRide.com or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

For Canadian customers: visit SyncMyRide.ca or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).

TABLE OF CONTENTS

INSTRUMENT PANEL 4-5

SYNC 6-7

SYNC WITH MYFORD TOUCH 8-10

CONVENIENCE 11

ESSENTIAL INFORMATION 12-13

FUNCTION 14-16

COMFORT 17-19



INSTRUMENT PANEL



1. POWER TILT/TELESCOPE STEERING COLUMN*

Your power-tilt steering column has a four-way rocker control which allows you to adjust the steering wheel to your desired position.

2. CRUISE CONTROL

To set a cruise control speed:

1. Press the **ON** control up and release.
2. Accelerate to the desired speed.
3. Press the **SET** control up and release, then take your foot off the accelerator.

After your speed has been set, you can press **SET +/-** to adjust cruise speed. To disable, press the **OFF** control down.

* (if equipped)

ADAPTIVE CRUISE CONTROL*

Allows you to set a 'gap distance' between your vehicle and the vehicle in front of you during highway driving. When your cruise control is active, press **GAP** up or down to select the gap distance. Refer to the *Cruise Control* chapter of your *Owner's Manual* for more information.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your *Owner's Manual* for safety information, more details and limitations.

3. INFORMATION DISPLAY CONTROL*

Provides information about various systems on your vehicle. Use the left-hand, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter in your *Owner's Manual* for more information.

+
+

4. SERVICE ENGINE SOON LIGHT

 Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On-Board Diagnostics (OBD-II) system has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

5. CLUSTER DISPLAY CONTROL

Displays information about Entertainment, Phone and Navigation*. Use the right-hand, 5-way controls located on your steering wheel to scroll through, highlight and make minor adjustments within a selected menu. Refer to the *MyFord Touch* chapter in your *Owner's Manual* for more information.

6. STEERING WHEEL-MOUNTED CONTROLS AUDIO CONTROL

Press **VOL +/-** to increase/decrease volume levels. Press **SEEK +/-** to access the next/previous radio

station preset, CD track or preset satellite radio channel*.

VOICE CONTROL*

-  Press to access SYNC® phone features.
-  Press to access voice recognition.

7. PUSH BUTTON START*

Allows you to start your vehicle by pressing the **ENGINE START/STOP** button while fully pressing down on the brake pedal. Press the button again to turn the engine off. If your vehicle has been idling for an extended period of time, it will automatically shut down. Before the engine shuts down, a message appears in the information display, allowing the driver to override the shutdown feature.

NOTE: Your intelligent access key* must be inside the vehicle for the ignition to start.

8. HAZARD CONTROL

* (if equipped)



SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. Say the Word.

GETTING STARTED WITH YOUR SYNC SYSTEM

Before You Get Started

1. Set up your owner account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering, you can see what services you may be eligible for.
2. SYNC uses a wireless connection called Bluetooth® to communicate with your phone. Turn Bluetooth mode on in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada), or your phone manufacturer's website.

Pairing Your Phone with SYNC

In order to use many of the features of SYNC, such as making a phone call, you must first connect or pair your phone with SYNC.

To Pair Your Phone for the First Time

1. Make sure that your vehicle is in **P** (Park) and your ignition and radio are turned on.
2. Press the phone button . When the display indicates **No Phone Found**, press **OK**.
3. When **Add Bluetooth Device?** appears in the display, press **OK**.
4. When **Find SYNC** appears in the display, press **OK**. When prompted on your phone's display, enter the PIN provided by SYNC into your phone.
5. The display will indicate when the pairing is successful.

NOTE: The system may prompt you to —

- Set your phone as the primary/favorite (the primary phone will receive messages and voicemails).
- Download your phone book (this is required to use the full set of voice commands).
- Turn on 911 Assist®.

Tips

- Make sure you accept SYNC's request to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your *Owner's Manual*.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC and deleting the SYNC connection from your phone, and then repeat the process.

NOTE: If you have SYNC with MyFord Touch®, see the pairing instructions on page 8.

USING MY PHONE WITH SYNC

NOTE: You must download your phone book to make phone calls with voice commands by name.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pressing the voice button and when prompted, say any of the following voice commands:

Call <name>	Call <name> at work
Call <name> on cell	Call <name> at home

For example, you could say "Call Jake Smith at home". SYNC repeats the command back to you and dials the number.

NOTE: You can also make phone calls by pressing the voice button . When prompted, say the voice command "Dial", then verbally say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, you will be able to see the name and number of the person calling in your display. Press the phone button to answer an incoming call. You can hang up at any time by pressing and holding the phone button .

Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command, "Do not disturb on" to enable and "Do not disturb off" to disable.

USING SYNC TO ACCESS DIGITAL MEDIA

SYNC has a media hub with multiple inputs allowing you to access personal media from your digital devices. Plug in your USB media devices such as phones and MP3 players and use SYNC to play all of your favorite music.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Press the voice button . When prompted say "USB", then follow-up saying one of the following voice commands:


"Play all"	"Play next song"
"Play song <name>"	"Play album <name>"

3. You will hear the command repeated back to you and the selected item will play.

SYNC® WITH MYFORD TOUCH®*

GET IN TOUCH USING YOUR FOUR-CORNER TOUCHSCREEN

Phone, Navigation*, Climate and Entertainment are the four main features of SYNC with MyFord Touch. Each feature has its own corner represented by its own color.

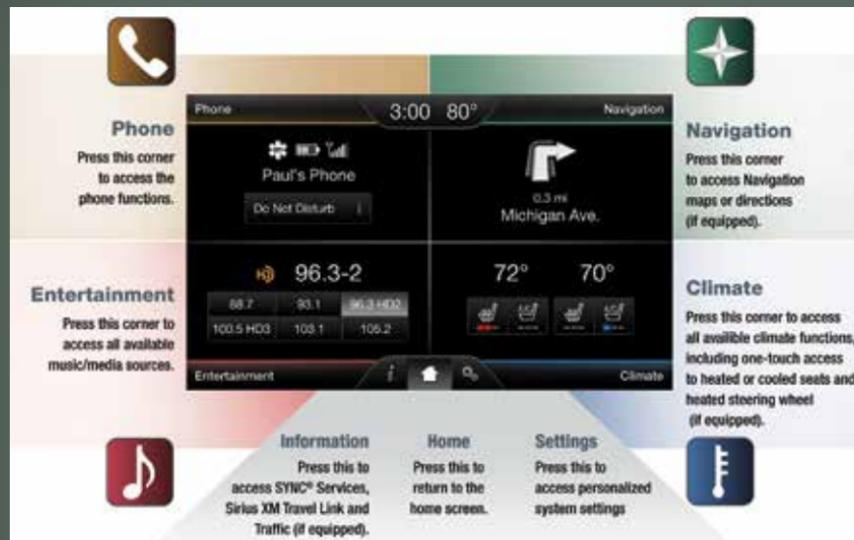

A Revolutionary Way To Connect with Your Vehicle.

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place, and press the home icon  at any time to return to your home screen. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.

Before You Get Started

- Pair your phone to SYNC before using MyFord Touch.
- If you have the navigation SD card, make sure that it is inserted into the media port or your navigation will not work.

Pairing Your Phone with MyFord Touch

Make sure that your vehicle is in P (Park) and both your ignition and radio are turned on.

1. Touch **Add Phone** in the upper left corner of the touchscreen.
2. Make sure that your cellular phone's Bluetooth is set to **ON**.
3. Select SYNC on your cellular phone and a six-digit PIN appears on your device.
4. You may be prompted to enter a PIN on your device. To pair, enter the PIN displayed on the touchscreen.
5. Confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.
6. The display will indicate when the pairing is successful.

* (if equipped)



PHONE



Voice-control your phone for hands-free calling with your phone securely tucked away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.

Your phone connects you with many other features and SYNC services:

- Connect to SYNC Services for traffic, directions, business searches and information favorites.
- Connect to Operator Assist to help locate a listing or destination.
- Call for a Vehicle Health Report.
- Automatically connects with a 911 operator in the event of an accident (feature must be turned on prior to the event).
- Transfer calls seamlessly from SYNC to your phone as you get in or out of your vehicle.

Refer to the SYNC chapter of your Owner's Manual for complete details.



NAVIGATION*

Get started with your navigation system by pressing the upper-right green corner. The available, voice-activated navigation system includes:

- SiriusXM Traffic™
- SiriusXM Travel Link™
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Refer to the *MyFord Touch* chapter of your *Owner's Manual* for complete details.



Set a Destination

Set a destination on your touchscreen by using a street address, a city center, a place on the map or a point of interest (POI). The easiest way, however, is by voice.

1. Press the voice button . When prompted, say "**Destination street address**".
2. The system will ask you to say the full address and will display an example on-screen.
3. You can then speak the address naturally, such as: "One two three Main Street, Anytown".

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel-efficient route.

Tips

- Save your favorite locations by touching "Save to Favorites".
- Change your map views from Direction Headed, North Up or 3D.

* (if equipped)

SYNC® WITH MYFORD TOUCH®*



CLIMATE

SYNC with MyFord Touch controls the temperature, airflow direction, fan speed, and activates other climate features like heated/cooled front seats* and rear climate control* for you and your passengers.

To use voice commands to operate climate, say a voice command like “Climate temperature 72 degrees” and MyFord Touch will make that adjustment.



Set Your MyTemp

- Touch the lower-right blue corner on the touchscreen.
- Set your exact, desired temperature using the (+) or (-) buttons.
- Press and hold the MyTemp button until the background color goes solid.

Heat Your Steering Wheel*

Press the Climate corner of the touchscreen, and press to turn the feature on and off.

Access Your Rear Climate Control*

Press the Climate corner of the touchscreen and then touch the **Rear** button on the lower-right corner to activate the rear climate control. Adjust rear temperature and fan speed from the touchscreen or give second-row passengers access from their independent control.



ENTERTAINMENT

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left red corner of the touchscreen. From here, you can easily go between AM/FM, Sirius and other media sources.

Set Your Radio Presets

- Touch the lower-left corner on the touchscreen.
- Touch FM.
- Touch Direct Tune.
- Enter the desired station and touch Enter.

- Touch Presets and then touch and hold one of the memory preset buttons to save it. You'll hear a brief mute and the sound will return once the station is saved.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- CD
- USB
- Bluetooth® Streaming
- Audio line in

Refer to the MyFord Touch chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



* (if equipped)

CONVENIENCE

EASY FUEL® SYSTEM

With this system, push the fuel door to open, insert the nozzle and begin fueling. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait 10 seconds from the time the refueling nozzle is shut-off until you remove the nozzle from the vehicle to allow residual fuel in the nozzle to drain into the tank.

NOTE: When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel. Do not use aftermarket funnels as they will not work with the Easy Fuel system and may cause damage. Properly clean the funnel after each use.

INTELLIGENT ACCESS KEY*



NOTE: Your intelligent access key must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock the driver's door, pull the front exterior door handle. To lock the doors, press and hold the door handle lock sensor. To unlock and open the liftgate, press the exterior liftgate release button underneath the liftgate handle. The intelligent access key also contains a mechanical key blade, which can be used to unlock the driver's door or secure the locking* glovebox if necessary. See your *Owner's Manual* for more information.

REMOTE START*

Remote start allows you to start the engine from outside your vehicle using your key. To start, press and then press twice within three seconds. Your vehicle will run for 5, 10, or 15 minutes, depending on the setting. See the *Information Displays* chapter in your *Owner's Manual* to select the duration of the remote start system. Once inside, apply the brake while pressing the **ENGINE START/STOP** button. Shift into **D** (Drive) and go. If you have an integrated keyhead transmitter, simply insert the key into the ignition and turn the ignition on as you normally

would before driving. To turn the engine off from outside the vehicle after using your remote start, press once.

MYKEY®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like speed restrictions, limited volume levels and safety belt reminders. For complete information, refer to the MyKey chapter in your *Owner's Manual*.

INTEGRATED KEYHEAD TRANSMITTER REMOTE ENTRY ICONS*

- Press once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press to activate the panic alarm. Press again or turn on the ignition to deactivate.
- Press twice within three seconds to open the liftgate.
- Car finder: Press twice within three seconds to locate your vehicle. The horn will chirp and the lamps will flash.

* (if equipped) 11

ESSENTIAL INFORMATION

FUEL TANK CAPACITY/FUEL INFO

Your vehicle has a 18.6 gallon (70.4L) fuel tank capacity. If your vehicle has a yellow ring around the fuel inlet, you have a flex fuel vehicle and should use only unleaded fuel, fuel ethanol (E85), or any mixture of the two fuels. For optimal performance, there are specific requirements for flex fuel vehicles. Refer to the *Fuel and Refueling* chapter of your *Owner's Manual*.



Non-flex fuel vehicles use only "Regular" unleaded gasoline with an octane rating of 87 or higher. **Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 15% ethanol.**

TRAILER TOW*

Before you tow, refer to your *Owner's Manual* for complete information on weight, details and limitations, as well as safety information and the proper equipment to use while towing.



NOTE: Do not tow with the mini spare tire installed.

TRAILER SWAY CONTROL*

This feature helps reduce trailer sway once it begins by applying your vehicle brakes at individual wheels and, if necessary, reducing engine power. For more complete information, see the *Towing* chapter of your *Owner's Manual*.

TOWING YOUR VEHICLE

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.

POWER LIFTGATE*

Your liftgate has an automatic open and closing feature. To open remotely, press  twice on your keyhead within three seconds. Press  twice again to close or reverse the movement. You can also operate the liftgate by pressing the  control located on the instrument panel.



HILL DESCENT CONTROL™*

Hill descent mode allows the driver to set and maintain vehicle speed, while descending steep grades on various surface conditions. To enable, press the  control located in the center of the Terrain management dial. The icon will light up and a chime will sound when it is active. Use your pedals to increase or decrease your speed as you normally would, until your desired speed is reached. Remove your feet from the pedals and your speed will be maintained. Press the  control again to deactivate the system.

NOTE: This system only operates between the speeds of 3 mph (5 km/h) and 20 mph (32 km/h).

TERRAIN MANAGEMENT SYSTEM™*

This system optimizes driveability and comfort as well as maximizing traction. Turn the control dial on the center console to select from the following modes:

-  **Grass/Gravel/Snow:** Use this mode where a firm surface is covered with loose or slippery material.
-  **Sand:** Use this mode on soft dry sand or deep gravel terrain.
-  **Mud/Ruts:** Use this mode on muddy, rutted, soft or uneven terrain.
-  **Normal:** Use this mode for on-road conditions.



LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are located beneath the third row seats under the floor panel (you will need to unstick the seats to access). The spare tire is designed for emergency use only and should be replaced as soon as possible.

For complete details on changing your tire, refer to the *Changing a Road Wheel* section in the *Wheels and Tires* chapter of your *Owner's Manual*.

ROADSIDE ASSISTANCE

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

FUNCTION



REAR VIEW CAMERA*

This system provides a video image of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in **R** (Reverse) and uses green, yellow and red guides to alert you of your proximity to objects. For non-touchscreen vehicles, the image will appear in the 4.2-inch display.



REVERSE SENSING SYSTEM*

This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in **R** (Reverse) and is traveling less than 3 mph (5 km/h). The warning tone will increase in frequency as the object gets closer.

NOTE: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

* (if equipped)

BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT (CTA)*



BLIS uses sensors to help you determine if a vehicle may be in your blind spot zone. The CTA feature alerts you if a car is coming toward you while you back out of a parking space. BLIS and CTA display a yellow indicator light in your exterior mirrors and the CTA also sounds an audible alarm and displays messages to warn you which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.

ACTIVE PARK ASSIST*

The system detects an available parallel parking space and automatically steers the vehicle into the space, hands-free, while you control the accelerator, gearshift and brakes. The system visually and/or audibly instructs the driver to park the vehicle. To use, press the **AUTO |P|** button; the touchscreen displays a message and a corresponding graphic to indicate the system is searching for a parking space.

Use the turn signal to indicate which side of the vehicle you want the system to search on.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake when necessary. Refer to your *Owner's Manual* for safety information, more detail and limitations.

DRIVER ALERT*



This system monitors your driving behavior and determines when the driver's alertness is reduced or insufficient. When driving ability is determined to be at risk, a tone will sound and a message will appear in the information screen. If no correction is made, warnings will continue to alert the driver. Press **OK** on the steering wheel to clear the warning.

SECURICODE™ KEYLESS ENTRY SYSTEM*

Allows you to lock or unlock the doors using the touchpad. You will need your five-digit factory code located on your owner's wallet card in the glove box. Refer to the *Locks* chapter in your *Owner's Manual* for more information on how to use SecuriCode.



* (if equipped)

SELECTSHIFT AUTOMATIC™ TRANSMISSION*



Gives you the ability to manually change gears, if you'd like. To use, move the gearshift lever from **D** (Drive) to **M** (Manual). Then use the toggle on your gear shift lever to make shifts manually. Press the **(+)** button to upshift, press the **(-)** button to downshift.

FUEL-EFFICIENT TRANSMISSION

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

LANE KEEPING SYSTEM*

This system is designed to notify you to stay in your lane through the steering system and the instrument cluster in instances when the front view camera detects an unintentional drifting out of your lane is likely to happen. Select system settings as desired by choosing one of three notification Modes from your information display.

- Alert:** Provides a steering wheel vibration.
- Aid:** Provides an assistance steering torque input toward the lane center.
- Alert + Aid:** Provides an assistance steering torque input toward the lane center. If the vehicle continues drifting out of the lane, a steering wheel vibration is also provided.



Turn the feature on and off by pressing the button on your headlamp/turn indicator stalk.

NOTE: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Make sure you read your *Owner's Manual* for safety information, details and limitations before using these systems.

COLLISION WARNING SYSTEM*

This system is designed to alert the driver of certain collision risks. Sensors detect if vehicles ahead of you, which are moving in the same direction, may be a collision risk. The system will alert you with an audible chime and red warning light which will appear above the dash. If the risk of collision increases, the system will increase brake support to help reduce collision speed.

SOS POST-CRASH ALERT SYSTEM™

Provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or the panic button on your remote transmitter.

DUAL-PANEL MOONROOF AND POWER SUNSCREEN*

Your moonroof is equipped with a one-touch, express-opening and -closing feature. To open, press and release the **SLIDE** control. The sunscreen will open automatically and the moonroof will open to the first position. To fully open the moonroof, press and release the **SLIDE** control again. To close, pull and release the **SLIDE** control. Press and release the **TILT** control to vent the moonroof. Pull and release the **TILT** control to close the moonroof. To open the sunscreen, press and release . Pull and release  to close the sunscreen.

RAIN-SENSING WIPERS*



If activated, your wipers will automatically turn on when moisture is present on the windshield. The wiper speed will

vary based on the amount of moisture detected and on the sensitivity setting. To deactivate, turn your wiper controls off.

NOTE: Make sure that this feature is turned off before entering a car wash.

110-VOLT AC POWER POINT



The power point is located on the rear of the center console and can be used to power your smaller electrical devices that do not exceed 150 watts. This feature is available to use when your ignition is turned on and the battery voltage is above 11 volts. When the indicator light is on, the power point is working and ready to use.

POWER-ADJUSTABLE PEDALS*

The control is located on the left side of the steering column. Press the **▲** arrow

to move the pedals closer to you or the **▼** arrow to move the pedals further away from you. The pedals should only be adjusted when the vehicle is stopped and in **P** (Park).

AMBIENT LIGHTING*




When activated, ambient lighting illuminates your vehicle's footwells and cupholders with a choice of colors. To access and make adjustments:

1. Press the **Settings** icon, then select **Vehicle and Ambient Lighting**.
2. Touch the desired color.
3. Use the scroll bar to increase or decrease the intensity.

To turn the feature on or off, press the power button.

COMFORT CONTINUED

HEATED AND COOLED FRONT SEATS*

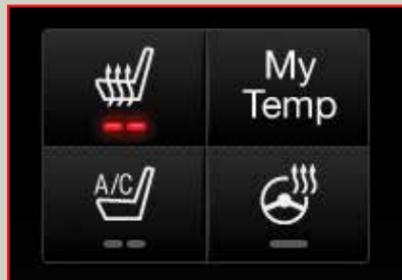

To access heated seats and cooled seats on touchscreen-equipped vehicles, press the Climate corner on your touchscreen. Press the heated  or cooled  seat icon repeatedly to cycle through the various heat or cool modes and off. For non-touchscreen vehicles, use the hard button controls (indicated by the same symbols). Press the controls repeatedly to cycle through the various heat or cool modes and off. Indicator lights on the control will show what settings you have selected.

MEMORY FUNCTION*

Allows one-touch recall of memory positions for the driver seat, power mirrors, steering column and power-adjustable foot pedals. Use the memory controls located on the driver's door to program and then recall memory positions. To program position 1, press and hold the 1 button until you hear a chime. Use this same procedure to set positions 2 and 3 using the respective buttons. You can now use these controls to recall the set memory positions.

TILTING HEAD RESTRAINTS



Your vehicle's front-row head restraints can be adjusted. Pull up to raise the head restraint. To lower, press the head

restraint down while pressing and holding the guide sleeve adjust/release button. Tilt the head restraint for additional comfort by gently pulling the top of the head restraint forward. Once it is in the forward-most position, tilting it forward once more will release it to the upright position.

NOTE: Do not attempt to force the head restraint backward after it is tilted. Instead, continue tilting it forward until the head restraint releases to the upright position.

SECOND-ROW HEATED SEATS*

To operate, press the button located on the rear of the floor console to cycle through the various heat settings and off. Warmer settings are indicated by more indicator lights.

NOTE: The heated seats operate only when the ignition is on. If activated, they will turn off automatically when the engine is turned off.

POWERFOLD® THIRD-ROW SEAT*

NOTE: The PowerFold seats work only when the vehicle is in P (Park) and the liftgate is open.

The third-row seat features a power one-touch operation that allows you to fold and stow the seats. The buttons are located behind the third-row seats on the left-side quarter trim panel. To use, press the **RH/BOTH/LH** button to select the right-side seat, the left-side seat or both seats you want to move. Then, select the desired seat position:

- Press the **STOW** button to stow the seat into the tub floor.
- Press the **FOLD** button (the top portion of the button) to fold down the seatback.
- Press the **NORMAL** button to return the seat to the normal seating position.

