
General Information

Vehicle Identification Number (VIN):

Owner Name: _____

Address: _____

Phone: _____

Selling Dealer Name: _____

Address: _____

Phone: _____

If you live in the U.S. and have questions or concerns that the dealership cannot answer, contact:

Ford Motor Company
Customer Assistance Center
300 Renaissance Center
P.O. Box 43360
Detroit, MI 48243
1-800-392-3673 (FORD)
TDD for the hearing impaired: 1-800-232-5952

If you live in Canada, contact:

Customer Assistance Centre
Ford Motor Company of Canada, Limited
P.O. Box 2000
Oakville, Ontario L6J 5E4
1-800-565-3673 (FORD)

If you live outside the U.S. or Canada, contact:

FORD MOTOR COMPANY
WORLDWIDE EXPORT OPERATIONS
1555 Fairlane Drive
Fairlane Business Park #3
Allen Park, Michigan 48101 U.S.A.
Telephone: (313) 594-4857
Fax: (313) 390-0804

Table of Contents

Maintenance Schedule and Record	3
General Maintenance Information	3
Maintenance: An investment	3
No Cost PCV Valve Replacement	4
Wheel Lug Nuts	4
What Maintenance Schedule Do You Follow?	6
Normal Schedule	7
Severe Duty Schedule	26
Owner Maintenance Checks	54

All rights reserved. Reproduction by any means, electronic or mechanical, including photocopying, recording, or by any information storage or retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company.

Copyright © 1996 Ford Motor Company

Maintenance Schedule and Record

Maximum Oil Change Interval. . .

Normal Schedule: 5,000 miles (8,000 km) or 6 months, whichever occurs first.

Severe Duty Schedule: 3,000 miles (5,000 km) or 3 months

See appropriate Schedule.

General Maintenance Information

The required Scheduled Maintenance Services listed in this booklet are considered essential to the proper operation, safety and performance of your Ford Motor Company vehicle. We recommend that you also perform the Owner Maintenance Checks listed. These services are matters of day-to-day care that are also important to the proper operation of your vehicle. The recommended lubricants, fluids and service parts conforming to Ford Specifications are available from your dealer.

This booklet gives you a place to record the services that are performed on your vehicle so that you can keep a record of when parts should be checked or replaced. Give your *Maintenance Schedule* booklet to the dealer service manager.

Maintenance: An investment

An investment which will pay dividends in the form of improved reliability, durability, and resale value.

To assure the durability of your vehicle and its emission control systems, it is necessary that scheduled maintenance be performed at the designated intervals.

Ford strongly recommends the use of genuine Ford replacement parts. If other than Ford or Motorcraft parts or Ford authorized remanufactured parts are used for maintenance replacements or for the service of components affecting emission control, such non-Ford parts should be equivalent to genuine Ford Motor Company parts in performance and durability. It is the owner's responsibility to determine the equivalency of such parts. Please consult your warranty booklet for complete warranty information.

No Cost PCV Valve Replacement

THE PCV VALVE IS A CRITICAL EMISSION COMPONENT. YOUR DEALER WILL REPLACE THE VALVE AT NO COST AT 60,000 MILES/96,000 KILOMETERS (EXCEPT CANADA AND CALIFORNIA VEHICLES).

Wheel Lug Nuts

Wheel lug nuts must be retightened to proper torque specifications at 500 miles/800 km of new vehicle operation. Proper torque specifications are provided in your Owner Guide. Also retighten to proper torque specification at 500 miles/800 km after (1) any wheel change or (2) any other time the wheel lug nuts have been loosened.

PRE-DELIVERY CHECK

Pre-Delivery Service Inspection Completed

DEALER AUTHORIZATION

Date: _____

Mileage: _____

What Maintenance Schedule Do You Follow?

Normal Schedule

Follow the Normal Schedule for most normal everyday driving conditions.

Severe Duty Schedule

Follow the Severe Duty Schedule if your driving habits **FREQUENTLY** include one or more of the following conditions:

- Towing a trailer or carrying a heavy load.
- Operating in severe dust conditions.
- Extensive idling, such as police, taxi or door-to-door delivery service.
- Off-Road operation
- Short trips of **less** than 10 miles (16 km) when outside temperatures remain below 0°F (-18°C).

Normal Schedule

NOTE: Items for Emission Control Service are shown in this type and style.

For items marked with number in parentheses such as (1), see footnote at end of this section.

Rear axles filled with non-synthetic rear axle lubricant must be changed every 100,000 miles (160,000 km), otherwise, the lubricant is not to be checked or changed unless a leak is suspected, service required or the axle assembly submerged in water.

Regular Maintenance Intervals for the Normal Schedule

5,000 MILES (8,000 Kilometers)

- Change engine oil and replace oil filter.
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).

- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

10,000 MILES (16,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

15,000 MILES (24,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).

8 Normal Schedule

- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect disc brake system, lubricate caliper slide rails.
- Inspect drum brake systems, hoses and lines.
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

20,000 MILES (32,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

25,000 MILES (40,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

30,000 MILES (48,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Replace air cleaner filter. (3)*

10 Normal Schedule

- Replace fuel filter (Recommended but not required for California vehicles).*
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect disc brake system, lubricate caliper slide rails.
- Inspect drum brake systems, hoses and lines.
- Inspect and lubricate front wheel bearings.
- Inspect parking brake system for damage and operation.
- Lubricate front axle R.H. axle shaft slip yoke (4x4).
- Inspect and lubricate spindle needle bearings (4x4).
- Change transfer case oil (4x4).
- Inspect and lubricate hub locks (4x4).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

35,000 MILES (56,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).

- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

40,000 MILES (64,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

45,000 MILES (72,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).

12 Normal Schedule

- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect disc brake system, lubricate caliper slide rails.
- Inspect drum brake systems, hoses and lines.
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

50,000 MILES (80,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant initially at 50,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (48,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

55,000 MILES (88,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (1)*
- Check clutch reservoir fluid level.*
- Inspect and lubricate automatic transmission shift linkage.*
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).*
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).*
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.*

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

60,000 MILES (96,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Inspect accessory drive belt(s).*
- Replace air cleaner filter. (3)*

- Replace PCV valve. (2)*
- Replace fuel filter (Recommended but not required for California vehicles).*
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect disc brake system, lubricate caliper slide rails.
- Inspect drum brake systems, hoses and lines.
- Inspect and lubricate front wheel bearings.
- Inspect parking brake system for damage and operation.
- Lubricate front axle R.H. axle shaft slip yoke (4x4).
- Inspect and lubricate spindle needle bearings (4x4).
- Inspect and lubricate hub locks (4x4).
- Change transfer case oil (4x4).
- Change manual transmission oil.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

65,000 MILES (104,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.

- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

70,000 MILES (112,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

75,000 MILES (120,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.

- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

- Inspect disc brake system, lubricate caliper slide rails.
- Inspect drum brake systems, hoses and lines.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

80,000 MILES (128,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (48,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

85,000 MILES (136,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (1)*
- Check clutch reservoir fluid level.*
- Inspect and lubricate automatic transmission shift linkage.*
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).*
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).*
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.*

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

90,000 MILES (144,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Replace air cleaner filter. (3)*
- Inspect accessory drive belt(s).*
- Replace fuel filter (Recommended but not required for California vehicles).*
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).*
- Inspect disc brake system, lubricate caliper slide rails.*
- Inspect drum brake systems, hoses and lines.*
- Inspect and lubricate front wheel bearings.*
- Change transfer case oil (4x4).*
- Inspect parking brake system for damage and operation.*

- Lubricate front axle R.H. axle shaft slip yoke (4x4).
- Inspect and lubricate spindle needle bearings (4x4).
- Inspect and lubricate hub locks (4x4).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

95,000 MILES (152,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

100,000 MILES (160,000 Kilometers)

- Change engine oil and replace oil filter.*
- Replace spark plugs.*
- All rear axle lube quantities must be replaced every 100,000 miles (160,000 km) or if the axle has been submerged in water.
Otherwise, the lube should not be checked or changed unless a leak is suspected or repair required.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

105,000 MILES (168,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Rotate tires and adjust air pressure. (1)
- Check clutch reservoir fluid level.

- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- Inspect disc brake system, lubricate caliper slide rails.
- Inspect drum brake systems, hoses and lines.
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

110,000 MILES (176,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (48,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

115,000 MILES (184,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (1)*
- Check clutch reservoir fluid level.*
- Inspect and lubricate automatic transmission shift linkage.*
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).*
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).*
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.*

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

120,000 MILES (192,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect accessory drive belt(s).*
- Replace air cleaner filter. (3)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- Replace PCV valve.*
- Inspect camshaft drive belt (2.3L only).*
- Replace fuel filter (Recommended but not required for California vehicles).*
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).*
- Inspect disc brake system, lubricate caliper slide rails.*
- Inspect drum brake systems, hoses and lines.*
- Inspect and lubricate front wheel bearings.*

- Inspect parking brake system for damage and operation.
- Inspect and lubricate hub locks (4x4).
- Inspect and lubricate spindle needle bearings (4x4).
- Change transfer case oil (4x4).
- Lubricate front axle R.H. axle shaft slip yoke (4x4).
- Change manual transmission oil.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

- (1) Wheel lug nuts must be retightened to proper torque specifications at 500 miles/800 km of new vehicle operation (100 miles/160 km and 500 miles/800 km for vehicles equipped with dual rear wheels or equipped for snowplowing). Proper torque specifications are provided in your Owner Guide. Also retighten to proper torque specification at 500 miles/800 km after (1) any wheel change or (2) any other time the wheel lug nuts have been loosened.
- (2) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.
- (3) If operating in severe dust, more frequent intervals may be required. Consult your dealer.

Severe Duty Schedule

NOTE: Items for Emission Control Service are shown in this type and style.

For items marked with a number in parentheses such as (1), see footnote at the end of this section.

Non-synthetic rear axle lubricants should be replaced every 3,000 miles (5,000 km) or 3 months, whichever occurs first, during extended trailer tow operation above 70°F (21° C) ambient and wide open throttle for extended periods above 45 mph (72 km/h). The 3,000 mile lube change interval may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, Part Number F1TZ-19580-B or equivalent. Add 4 ounces of additive friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill of traction-lok rear axles. The axle lubricant should be changed anytime the axle has been submerged in water.

Rear axles containing synthetic lubricant are lubricated for life. These lubricants are not to be checked or changed unless a leak is suspected, service required, or the axle assembly has been submerged in water. The axle lubricant should be changed anytime the axle has been submerged in water.

Maintenance Intervals for Severe Duty Schedule

3,000 MILES (5,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

6,000 MILES (10,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (3)(4)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

9,000 MILES (15,000 Kilometers)

Change engine oil and replace oil filter.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

12,000 MILES (20,000 Kilometers)

Change engine oil and replace oil filter.

Check clutch reservoir fluid level.

Inspect and lubricate automatic transmission shift linkage.

Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
(2)

Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

15,000 MILES (25,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Rotate tires and adjust air pressure. (3)(4)
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect disc brake system and lubricate caliper slide rails. (2)
- Inspect drum brake systems, hoses and lines.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

18,000 MILES (30,000 Kilometers)

- Change engine oil and replace oil filter.*
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.

- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

21,000 MILES (35,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

24,000 MILES (40,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (3)(4)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.

30 Severe Duty Schedule

- Lubricate steering linkage suspension, driveshaft U-joint if equipped, with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

27,000 MILES (45,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

30,000 MILES (50,000 Kilometers)

- Change engine oil and replace oil filter.*
- Replace air cleaner filter. (1)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*

- Replace fuel filter (Recommended but not required for California vehicles).*
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

- Inspect disc brake system and lubricate caliper slide rails. (2)
- Inspect drum brake systems, hoses and lines.
- Inspect and lubricate front wheel bearings. (2)
- Inspect parking brake system for damage and operation.
- Inspect and lubricate spindle needle bearings (4x4).
- Inspect and lubricate hub locks (4x4).
- Change transfer case oil (4x4).

Lubricate front axle R.H. axle shaft slip yoke (4x4).

Change manual transmission oil.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

33,000 MILES (55,000 Kilometers)

Change engine oil and replace oil filter.

Rotate tires and adjust air pressure. (3)(4)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

36,000 MILES (60,000 Kilometers)

Change engine oil and replace oil filter.

Check clutch reservoir fluid level.

Inspect and lubricate automatic transmission shift linkage.

Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)

Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

39,000 MILES (65,000 Kilometers)

Change engine oil and replace oil filter.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

42,000 MILES (70,000 Kilometers)

Change engine oil and replace oil filter.

Rotate tires and adjust air pressure. (3)(4)

Check clutch reservoir fluid level.

Inspect and lubricate automatic transmission shift linkage.

Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)

Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

45,000 MILES (75,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).*
- Inspect disc brake system and lubricate caliper slide rails. (2)*
- Inspect drum brake systems, hoses and lines.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

48,000 MILES (80,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant initially at 48,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Check clutch reservoir fluid level.*

- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

51,000 MILES (85,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (3)(4)
- Change automatic transmission fluid.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

54,000 MILES (90,000 Kilometers)

- Change engine oil and replace oil filter.*
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

57,000 MILES (95,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

60,000 MILES (100,000 Kilometers)

- Change engine oil and replace oil filter.*
- Replace spark plugs.*
- Inspect accessory drive belt(s).*
- Replace air cleaner filter. (1)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Replace PCV valve. (5)*
- Replace fuel filter (Recommended but not required for California vehicles).*
- Rotate tires and adjust air pressure. (3)(4)*
- Check clutch reservoir fluid level.*
- Inspect and lubricate automatic transmission shift linkage.*
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)*
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)*
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).*
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.*

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

- Inspect disc brake system and lubricate caliper slide rails. (2)
- Inspect drum brake systems, hoses and lines.
- Inspect and lubricate front wheel bearings. (2)
- Inspect parking brake system for damage and operation.
- Inspect and lubricate spindle needle bearings (4x4).
- Change transfer case oil (4x4).
- Inspect and lubricate hub locks (4x4).
- Lubricate front axle R.H. axle shaft slip yoke (4x4).
- Change transfer case oil (4x4).
- Change manual transmission oil.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

63,000 MILES (105,000 Kilometers)

Change engine oil and replace oil filter.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

66,000 MILES (110,000 Kilometers)

Change engine oil and replace oil filter.

Check clutch reservoir fluid level.

Inspect and lubricate automatic transmission shift linkage.

Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
(2)

Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

69,000 MILES (115,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (3)(4)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

72,000 MILES (120,000 Kilometers)

- Change engine oil and replace oil filter.*
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

75,000 MILES (125,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect disc brake system and lubricate caliper slide rails. (2)
- Inspect drum brake systems, hoses and lines.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

78,000 MILES (130,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Rotate tires and adjust air pressure. (3)(4)
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

81,000 MILES (135,000 Kilometers)

- Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

84,000 MILES (140,000 Kilometers)

- Change engine oil and replace oil filter.*
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

87,000 MILES (145,000 Kilometers)

- Change engine oil and replace oil filter.*
- Rotate tires and adjust air pressure. (3)(4)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

90,000 MILES (150,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect accessory drive belt(s).*
- Replace air cleaner filter. (1)*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Replace fuel filter (Recommended but not required for California vehicles).*
- Check clutch reservoir fluid level.*

- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

- Inspect disc brake system and lubricate caliper slide rails. (2)
- Inspect drum brake systems, hoses and lines.
- Inspect and lubricate front wheel bearings. (2)
- Inspect parking brake system for damage and operation.
- Lubricate front axle R.H. axle shaft slip yoke (4x4).
- Inspect and lubricate spindle needle bearings (4x4).
- Change transfer case oil (4x4).

Inspect and lubricate hub locks (4x4).

Change manual transmission oil.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

93,000 MILES (155,000 Kilometers)

Change engine oil and replace oil filter.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

96,000 MILES (160,000 Kilometers)

Change engine oil and replace oil filter.

Rotate tires and adjust air pressure. (3)(4)

Check clutch reservoir fluid level.

Inspect and lubricate automatic transmission shift linkage.

Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)

Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

99,000 MILES (165,000 Kilometers)

- Change engine oil and replace oil filter.*
- Replace rear axle lube.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

102,000 MILES (170,000 Kilometers)

- Change engine oil and replace oil filter.*
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

105,000 MILES (175,000 Kilometers)

- Change engine oil and replace oil filter.*
- Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- Rotate tires and adjust air pressure. (3)(4)
- Lubricate transfer case shift lever pivot bolt and control rod connecting pins (4x4).
- Inspect disc brake system and lubricate caliper slide rails. (2)
- Inspect drum brake systems, hoses and lines.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

108,000 MILES (180,000 Kilometers)

- Change engine oil and replace oil filter.*
- Change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- Check clutch reservoir fluid level.
- Inspect and lubricate automatic transmission shift linkage.
- Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)
- Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)
- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

111,000 MILES (185,000 Kilometers)

Change engine oil and replace oil filter.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

114,000 MILES (190,000 Kilometers)

Change engine oil and replace oil filter.

Rotate tires and adjust air pressure. (3)(4)

Check clutch reservoir fluid level.

Inspect and lubricate automatic transmission shift linkage.

Lubricate steering linkage suspension, driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped). (2)

Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4). (2)

Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

117,000 MILES (195,000 Kilometers)

Change engine oil and replace oil filter.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

120,000 MILES (200,000 Kilometers)

Change engine oil and replace oil filter.

Replace spark plugs.

Inspect accessory drive belt(s).

Replace air cleaner filter. (1)

*Inspect engine cooling system, hoses, and clamps;
and check coolant strength every 15,000 miles
(25,000 km) or 12 months.*

Replace PCV valve.

Inspect camshaft drive belt (2.3L only).

*Replace fuel filter (Recommended but not required
for California vehicles).*

Check clutch reservoir fluid level.

*Inspect and lubricate automatic transmission
shift linkage.*

*Lubricate steering linkage suspension,
driveshaft U-joint if equipped with grease
fittings and lubricate slip yoke (if equipped).
(2)*

*Lubricate rear driveshaft double cardan joint
centering ball (SWB 4x4). (2)*

*Lubricate transfer case shift lever pivot bolt
and control rod connecting pins (4x4).*

- Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

- Inspect disc brake system and lubricate caliper slide rails. (2)
- Inspect drum brake systems, hoses and lines.
- Inspect and lubricate front wheel bearings. (2)
- Inspect parking brake system for damage and operation.
- Lubricate front axle R.H. axle shaft slip yoke (4x4).
- Inspect and lubricate spindle needle bearings (4x4).
- Inspect and lubricate hub locks (4x4).
- Change transfer case oil (4x4).
- Change manual transmission oil.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

- (1) Extremely dusty conditions will require more frequent replacement of your air filter. Check your air filter at 3,000 miles (5,000 km). If it is dirty replace it and then keep replacing it at the same interval (every 3,000 miles [5,000 km]). If it's not dirty, check it again at 6,000 miles (10,000 km) and again at 9,000 miles (15,000 km) until you determine your unique maintenance interval. Do not go beyond 30,000 miles (50,000 km) as described in the chart. If in doubt, see your dealer.
- (2) If you operate your vehicle "off road" in water that is deeper than the hubs (1/2 wheel height) then these items must be serviced daily.
- (3) City delivery vehicles and other unique applications that require constant turning may need more frequent tire rotation. You may need to develop your own tire rotation interval based on your own observations of tire wear. If in doubt, see your dealer.
- (4) Wheel lug nuts must be retightened to proper torque specifications at 500 miles/800 km of new vehicle operation (100 miles/160 km and 500 miles/800 km for vehicles equipped with dual rear wheels or equipped for snowplowing). Proper torque specifications are provided in your Owner Guide. Also retighten to proper torque specification at 500 miles/800 km after (1) any wheel change or (2) any other time the wheel lug nuts have been loosened.
- (5) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

Owner Maintenance Checks

The following lists are vehicle checks and inspections that should be performed by the owner or qualified service technician at the frequencies indicated to help ensure safe, dependable operation of your vehicle.

Any adverse conditions should be brought to the attention of your dealer or qualified service technician for service advice as soon as possible.

These Owner Maintenance Checks are generally not covered by warranties and you may be charged for labor, parts and lubricants used.

When You Stop for Fuel:

- Check the engine oil level.
- Check the windshield washer fluid level.
- Look for low or under-inflated tires.

While Operating Your Vehicle:

- Note any changes in the sound of the exhaust or any smell of exhaust fumes in the vehicle.
- Check for vibrations in the steering wheel. Notice any increased steering effort or looseness in the steering wheel, or change in its straight ahead position.
- Notice if your vehicle **constantly turns slightly** or “pulls” to one side when traveling on smooth, level road.
- When stopping, listen and check for strange sounds, **pulling to one side**, increased brake pedal travel or “hard to push” brake pedal.

- If any slipping or changes in the operation of your transmission occur, check the transmission fluid level.
- Check automatic transmission P (Park) function.
- Check parking brake.

At least monthly:

- Check coolant level in the coolant recovery reservoir.
- Check operation of lamps, horn, turn signals, windshield wipers and washers, and hazard warning flasher.
- Check for fluid leaks by inspecting the surface beneath your vehicle for oil, coolant, or other fluid drips. Clean water from the air conditioning system is normal.

**At least twice a year:
(i.e., every Spring and Fall)**

- Check power steering fluid level.
- Check windshield washer spray and wiper operation. Clean wiper blades with clean cloth dampened with washer fluid.
- Check fluid level in clutch master cylinder.
- Check radiator, heater and air-conditioning hoses for leaks or damage.
- Check for worn tires and loose wheel lug nuts.
- Clean body and door drain holes.
- Flush complete underside of vehicle.
- Inspect underbody components for damage.

- Check parking brake system.
- Check headlamp alignment.
- Check lap and shoulder belts for wear and function.
- Inspect seatback latches for proper operation.
- Check air pressure in spare tire.

At least once a year:

- Lubricate door hinges and checks, and hood hinges.
- Lubricate door and hood locks and latches.
- Lubricate door rubber weatherstrips.
- Clean battery and terminals, check electrolyte level on low maintenance (auxiliary and replacement) batteries.

If any of these conditions are noted, bring them to the attention of your dealer or qualified service technician as soon as possible.