
General Information

Vehicle Identification Number (VIN):

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Owner Name: _____

Address: _____

Phone: _____

Selling Dealer Name: _____

Address: _____

Phone: _____

If you live in the U.S. and have questions or concerns that the dealership cannot answer, contact:

Ford Motor Company Customer Assistance Center 300 Renaissance Center P.O. Box 43360 Detroit, MI 48243 1-800-392-3673 (FORD) TDD for the hearing impaired: 1-800-232-5952
--

If you live in Canada, contact:

Customer Assistance Centre Ford Motor Company of Canada, Limited P.O. Box 2000 Oakville, Ontario L6J 5E4 1-800-565-3673 (FORD)
--

If you live outside the U.S. or Canada, contact:

FORD MOTOR COMPANY WORLDWIDE EXPORT OPERATIONS 1555 Fairlane Drive Fairlane Business Park #3 Allen Park, Michigan 48101 U.S.A. Telephone: (313) 594-4857 Fax: (313) 390-0804
--

Table of Contents

Maintenance Schedule and Record	3
General Maintenance Information	3
PCV Valve Replacement	4
Maintenance: An investment	4
Wheel Lug Nuts	5
What Maintenance Schedule Do You Follow?	6
Normal Schedule	7
Severe Duty Schedule	16
Owner Maintenance Checks	30

All rights reserved. Reproduction by any means, electronic or mechanical, including photocopying, recording, or by any information storage or retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company.

Copyright © 1996 Ford Motor Company

Maintenance Schedule and Record

Maximum Oil Change Interval. . .

Normal Schedule: 5,000 miles (8,000 km) or 6 months, whichever occurs first.

Severe Duty Schedule: 3,000 miles (5,000 km) or 3 months

See appropriate Schedule.

General Maintenance Information

The required Scheduled Maintenance Services listed in this booklet are considered essential to the proper operation, safety and performance of your Ford Motor Company vehicle. We recommend that you also perform the Owner Maintenance Checks listed. These services are matters of day-to-day care that are also important to the proper operation of your vehicle. The recommended lubricants, fluids and service parts conforming to Ford Specifications are available from your dealer.

This booklet gives you a place to record the services that are performed on your vehicle so that you can keep a record of when parts should be checked or replaced. Give your *Maintenance Schedule* booklet to the dealer service manager.

PCV Valve Replacement

The PCV valve on your vehicle is a critical emissions component. Your dealer will replace the valve at no cost at 60,000 miles (96,000 kilometers) on 3.0L engines and 100,000 miles (160,000 km) on 3.8L engines except on Canada and California vehicles.

Maintenance: An investment

An investment which will pay dividends in the form of improved reliability, durability, and resale value.

To assure the durability of your vehicle and its emission control systems, it is necessary that scheduled maintenance be performed at the designated intervals.

Ford strongly recommends the use of genuine Ford replacement parts. If other than Ford or Motorcraft parts or Ford authorized remanufactured parts are used for maintenance replacements or for the service of components affecting emission control, such non-Ford parts should be equivalent to genuine Ford Motor Company parts in performance and durability. It is the owner's responsibility to determine the equivalency of such parts. Please consult your warranty booklet for complete warranty information.

Wheel Lug Nuts

Wheel lug nuts must be retightened to proper torque specifications at 500 miles/800 km of new vehicle operation. Proper torque specifications are provided in your Owner Guide. Also retighten to proper torque specification at 500 miles/800 km after (1) any wheel change or (2) any other time the wheel lug nuts have been loosened.

PRE-DELIVERY CHECK

☐ Pre-Delivery Service Inspection Completed

DEALER AUTHORIZATION

Date: _____

Mileage: _____

What Maintenance Schedule Do You Follow?

Normal Schedule

Follow the Normal Schedule for most everyday driving conditions.

Severe Duty Schedule

Follow the Severe Duty Schedule if your driving habits **FREQUENTLY** include one or more of the following conditions:

- ☐ Towing a trailer.
- ☐ Operating in severe dust conditions.
- ☐ Extensive idling, such as police, taxi or door-to-door delivery service.
- ☐ Short trips of **less** than 10 miles (16 km) when outside temperatures remain below 0°F (-18°C).

Normal Schedule

NOTE: Items for Emission Control Service are shown in this type and style.

For items marked with a number in parentheses such as (1), see footnote at the end of this section.

Regular Maintenance Intervals for the Normal Schedule

5,000 MILES (8,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

10,000 MILES (16,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

15,000 MILES (24,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

20,000 MILES (32,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

25,000 MILES (40,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

30,000 MILES (48,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace air cleaner filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*

- ☐ Change automatic transaxle fluid with no filter change.
- ☐ Inspect exhaust heat shields.
- ☐ Inspect front and rear brakes. (1)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

35,000 MILES (56,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

40,000 MILES (64,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

45,000 MILES (72,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*

- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

50,000 MILES (80,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 50,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (48,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

55,000 MILES (88,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

60,000 MILES (96,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect accessory drive belt(s).*
- ☐ *Replace air cleaner filter.*
- ☐ *Replace PCV valve (3.0L Only). (2)*

☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*

☐ Inspect exhaust heat shields.

☐ Inspect front and rear brakes. (1)

☐ Change automatic transaxle fluid with no filter change.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

65,000 MILES (104,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

70,000 MILES (112,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

75,000 MILES (120,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*

☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

80,000 MILES (128,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ *Change engine coolant every 30,000 miles
(48,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

85,000 MILES (136,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

90,000 MILES (144,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ *Inspect accessory drive belt(s).*

☐ *Replace air cleaner filter.*

☐ *Inspect engine cooling system, hoses, and clamps;
and check coolant strength every 15,000 miles
(24,000 km) or 12 months.*

☐ Inspect exhaust heat shields.

- ☐ Inspect front and rear brakes. (1)
- ☐ Change automatic transaxle fluid with no filter change.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

95,000 MILES (152,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

100,000 MILES (160,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change spark plugs.*
- ☐ Replace PCV valve (3.8L Only). (4)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

105,000 MILES (168,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

110,000 MILES (176,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant every 30,000 miles (48,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

115,000 MILES (184,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

120,000 MILES (192,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect accessory drive belt(s).*
- ☐ *Replace air cleaner filter.*
- ☐ *Replace PCV valve (3.0L Only).*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (24,000 km) or 12 months.*
- ☐ *Change automatic transaxle fluid.*
- ☐ *Inspect exhaust heat shields.*
- ☐ *Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

- (1) If your driving habits include continuous stop-and-go driving or driving in hilly areas, more frequent intervals may be required.
- (2) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.
- (3) Wheel lug nuts must be retightened to proper torque specifications at 500 miles/800 km of new vehicle operation. Proper torque specifications are provided in your Owner Guide. Also retighten to proper torque specification at 500 miles/800 km after (1) any wheel change or (2) any other time the wheel lug nuts have been loosened.
- (4) At 100,000 miles (160,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

Severe Duty Schedule

NOTE: Items for Emission Control Service are shown in this type and style.

For items marked with a number in parentheses such as (1), see footnote at the end of this section.

NOTE: The Severe Duty Schedule provides maintenance intervals for replacing your air cleaner filter if you drive in severe dust conditions. However, the conditions you drive in may require even more frequent air cleaner replacement intervals than those shown. Check with your dealer.

Maintenance Intervals for the Severe Duty Schedule

3,000 MILES (5,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

6,000 MILES (10,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

9,000 MILES (15,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

12,000 MILES (20,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

15,000 MILES (25,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

18,000 MILES (30,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

21,000 MILES (35,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ Change automatic transaxle fluid with no filter change.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

24,000 MILES (40,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

27,000 MILES (45,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

30,000 MILES (50,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace air cleaner filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- ☐ *Inspect exhaust heat shields.*
- ☐ *Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

33,000 MILES (55,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Rotate tires and adjust air pressure. (3)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

36,000 MILES (60,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

39,000 MILES (65,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

42,000 MILES (70,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ Rotate tires and adjust air pressure. (3)

☐ Change automatic transaxle fluid with no filter change.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

45,000 MILES (75,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

48,000 MILES (80,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 48,000 miles (80,000 km) or 48 months. Thereafter, change engine coolant every 30,000 miles (50,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

51,000 MILES (85,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Rotate tires and adjust air pressure. (3)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

54,000 MILES (90,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

57,000 MILES (95,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

60,000 MILES (100,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace spark plugs.*
- ☐ *Inspect accessory drive belt(s).*
- ☐ *Replace air cleaner filter.*
- ☐ *Replace PCV valve (3.0L Only). (2)*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- ☐ *Inspect exhaust heat shields.*
- ☐ *Inspect front and rear brakes. (1)*
- ☐ *Rotate tires and adjust air pressure. (3)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

63,000 MILES (105,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change automatic transaxle fluid with no filter change.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

66,000 MILES (110,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

69,000 MILES (115,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ *Rotate tires and adjust air pressure. (3)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

72,000 MILES (120,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

75,000 MILES (125,000 Kilometers)

☐ *Change engine oil and replace oil filter.*

☐ *Inspect engine cooling system, hoses, and clamps;
and check coolant strength every 15,000 miles
(25,000 km) or 12 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

78,000 MILES (130,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant every 30,000 miles (50,000 km) or 36 months.*
- ☐ *Rotate tires and adjust air pressure. (3)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

81,000 MILES (135,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

84,000 MILES (140,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change automatic transaxle fluid with no filter change.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

87,000 MILES (145,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

90,000 MILES (150,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect accessory drive belt(s).*
- ☐ *Replace air cleaner filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps;
and check coolant strength every 15,000 miles
(25,000 km) or 12 months.*
- ☐ *Inspect exhaust heat shields.*
- ☐ *Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

93,000 MILES (155,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

96,000 MILES (160,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure. (3)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

99,000 MILES (165,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Replace PCV valve (3.8L Only). (4)

DEALER AUTHORIZATION

Date: _____

Mileage: _____

102,000 MILES (170,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

105,000 MILES (175,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- ☐ *Rotate tires and adjust air pressure. (3)*
- ☐ *Change automatic transaxle fluid with no filter change.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

108,000 MILES (180,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant every 30,000 miles (50,000 km) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

111,000 MILES (185,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

114,000 MILES (190,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Rotate tires and adjust air pressure. (3)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

117,000 MILES (195,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

120,000 MILES (200,000 Kilometers)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace spark plugs.*
- ☐ *Replace air cleaner filter.*
- ☐ *Replace PCV valve (3.0L Only).*
- ☐ *Inspect engine cooling system, hoses, and clamps; and check coolant strength every 15,000 miles (25,000 km) or 12 months.*
- ☐ *Inspect accessory drive belt(s).*
- ☐ *Inspect exhaust heat shields.*
- ☐ *Inspect front and rear brakes. (1)*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

- (1) If your driving habits include continuous stop-and-go driving or driving in hilly areas, more frequent intervals may be required.
- (2) At 60,000 miles (96,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.
- (3) Wheel lug nuts must be retightened to proper torque specifications at 500 miles/800 km of new vehicle operation. Proper torque specifications are provided in your Owner Guide. Also retighten to proper torque specification at 500 miles/800 km after (1) any wheel change or (2) any other time the wheel lug nuts have been loosened.
- (4) At 100,000 miles (160,000 km) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

Owner Maintenance Checks

The following lists are vehicle checks and inspections that should be performed by the owner or qualified service technician at the frequencies indicated to help ensure safe, dependable operation of your vehicle.

Any adverse conditions should be brought to the attention of your dealer or qualified service technician for service advice as soon as possible.

These Owner Maintenance Checks are generally not covered by warranties and you may be charged for labor, parts and lubricants used.

When You Stop for Fuel:

- ☐ Check the engine oil level.
- ☐ Check coolant level in coolant recovery bottle.
- ☐ Check the windshield washer fluid level.
- ☐ Look for low or under-inflated tires.

While Operating Your Vehicle:

- ☐ Note any changes in the sound of the exhaust or any smell of exhaust fumes in the vehicle.
- ☐ Check for vibrations in the steering wheel.
Notice any increased steering effort or looseness in the steering wheel, or change in its straight-ahead position.
- ☐ Notice if your vehicle constantly turns slightly or “pulls” to one side when traveling on smooth, level road.

- ☐ When stopping, listen and check for strange sounds, pulling to one side, increased brake pedal travel or “hard-to-push” brake pedal.
- ☐ If any slipping or changes in the operation of your transaxle occurs, check the transaxle fluid level.
- ☐ Check automatic transaxle P (Park) function.
- ☐ Check parking brake.
- ☐ Check for fluid leaks under your vehicle (water dripping from the air conditioning system after use is normal).

At Least Monthly:

- ☐ Check coolant level in the coolant recovery reservoir.
- ☐ Check the operation of all exterior lamps, including the brakelamps, turn signals and hazard warning flashers.

At least twice a year: (i.e., every Spring and Fall)

- ☐ Check radiator, heater and air conditioning hoses for leaks or damage.
- ☐ Check windshield washer spray and wiper operation. Clean wiper blades with clean cloth dampened with washer fluid.
- ☐ Check headlamp alignment.
- ☐ Inspect halfshaft dust boots.
- ☐ Check muffler, exhaust pipes, shields and clamps.

- ☐ Check the lap-shoulder belts for wear and function.
- ☐ Check air pressure in spare tire.
- ☐ Check for worn tires and loose wheel lug nuts.

At Least Once a Year:

- ☐ Clean body and door drain holes.
- ☐ Lubricate door hinges and checks, and hood hinges.
- ☐ Lubricate door and hood locks and latches.
- ☐ Lubricate door rubber weatherstrips.
- ☐ Check the air conditioning system before the warm weather season.
- ☐ Check the power steering fluid level.
- ☐ Inspect and lubricate automatic transaxle linkage and controls.
- ☐ Clean battery and terminals, check electrolyte level on low maintenance (auxiliary and replacement) batteries.
- ☐ Check the brake fluid level.