

General maintenance information

Vehicle Identification Number:

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Owner name: _____

Address: _____

Phone: _____

Selling dealer name: _____

Address: _____

Phone: _____

Your satisfaction is our #1 goal. If you have questions or concerns about your vehicle, we suggest you follow these steps:

1. Contact your Sales Representative or Service Advisor at your selling/servicing dealership.
2. If the inquiry or concern remains unresolved, contact the Sales Manager or Service Manager at the dealership.
3. If the inquiry or concern cannot be resolved at the dealership level, please contact the Ford Customer Assistance Center.

In the US, contact:

Ford Motor Company
Customer Assistance Center
300 Renaissance Center
P.O. Box 43360
Detroit, Michigan 48243
1-800-392-3673 (FORD)
TDD for the hearing impaired: 1-800-232-5952

In Canada, contact:

Customer Assistance Center
Ford Motor Company of Canada, Limited
P.O. Box 2000
Oakville, Ontario L6J 5E4
1-800-565-3673 (FORD)

Outside the US or Canada, contact:

Ford Motor Company
Worldwide Direct Market Operations
1555 Fairlane Drive
Allen Park, Michigan 48101 U.S.A.
Telephone: (313) 594-4857
Fax: (313) 390-0804

Table of contents

General maintenance information	3
Normal schedule	5
Severe duty schedule	18
Owner maintenance checks	38

All rights reserved. Reproduction by any means, electronic or mechanical including photocopying, recording or by any information storage and retrieval system or translation in whole or part is not permitted without written authorization from Ford Motor Company.

Copyright © 1997 Ford Motor Company



General maintenance information

GENERAL MAINTENANCE INFORMATION

This Service Guide indicates the scheduled maintenance required for your vehicle. Proper maintenance guards against major repair expenses resulting from neglect or inadequate maintenance, and may help increase the value you receive when you sell or trade your vehicle.

It is your responsibility to make sure that all of the scheduled maintenance is performed and that the materials used meet Ford engineering specifications. Failure to perform scheduled maintenance, as specified in the Service Guide, will invalidate warranty coverage on parts affected by the lack of maintenance. Make sure that receipts for completed maintenance work are retained with the vehicle and confirmation of maintenance work is always entered in your Service Guide.

Your Ford or Lincoln-Mercury dealership, or Ford or Lincoln-Mercury Auto Care service center, has factory-trained technicians who can perform the required maintenance using genuine Ford parts. The dealership looks forward to meeting your every service need to maximize your satisfaction with your vehicle.

MAINTENANCE: AN INVESTMENT

Maintenance is an investment that will pay dividends in the form of improved reliability, durability and resale value.

To assure the durability of your vehicle and its emission control systems, it is necessary that scheduled maintenance be performed at the designated intervals.

Ford strongly recommends the use of genuine Ford replacement parts. If other than Ford or Motorcraft parts or Ford authorized remanufactured parts are used for maintenance replacements or for the service of components affecting emission control, the non-Ford parts should be equivalent to genuine Ford Motor Company parts in performance and durability. It is the owner's responsibility to determine the equivalency of such parts. Please consult your "Warranty Information Booklet" for complete warranty information.

NO COST PCV VALVE REPLACEMENT

The PCV valve is a critical emission component. Your dealer will replace the valve at no cost at 96,000 kilometers (60,000 miles), except in Canada and California.

General maintenance information

PRE-DELIVERY SERVICE CHECK

☐ Pre-Delivery Service Inspection Completed

DEALER AUTHORIZATION

Date: _____

Mileage: _____

WHAT MAINTENANCE SCHEDULE DO YOU FOLLOW?

Normal Schedule

Follow the Normal Schedule for most normal everyday driving conditions.

Severe Duty Schedule

Follow the Severe Duty Schedule if your driving habits **FREQUENTLY** include one or more of the following conditions:

- ☐ Driving at top speeds for long distances during hot conditions.
- ☐ Short trips in areas of high humidity or freezing conditions.
- ☐ Towing and/or carrying heavy loads.
- ☐ Police, taxi or delivery usage.
- ☐ Driving in dusty/sandy environments for long periods.

Normal schedule

Electric Vehicle Owners:

This Service Guide does not include information for electric vehicles. Refer to the *Electric Vehicle Owner's Guide Supplement* for scheduled maintenance information.

Items for Emission Control Service are shown in italics.

Rear axles containing synthetic lubricant are lubricated for life. These lubricants are not to be checked or changed unless a leak is suspected, service required, or the axle has been submerged in water. The axle lubricant should be changed anytime the axle has been submerged in water.

Light truck rear axles filled with non-synthetic rear axle lubricant must be changed every 160,000 kilometers (100,000 miles), otherwise, the lubricant is not to be checked or changed unless a leak is suspected, service required or the axle assembly submerged in water.

Police and Taxi vehicles:

Replace rear axle lubricant every 160,000 kilometers (100,000 miles). Rear axle lubricant change may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number F1TZ-19580-B or equivalent. Add four ounces of additive friction modifier C8A2-19B546-A (EST-M2C118-A) or equivalent for complete refill of Traction-Lok rear axles. The rear axle lubricant should be changed anytime the axle has been submerged in water.

(1) Wheel lug nuts must be retightened to proper torque specifications at 800 km (500 miles) of new vehicle operation (160 kilometers [100 miles] and 800 kilometers [500 miles] for vehicles equipped with dual rear wheels or equipped for snowplowing. Proper torque specifications are provided in your Owners Guide. Also retighten to proper torque specifications at 800 km (500 miles) after (A) any wheel change or (B) any other time the wheel lug nuts have been replaced.

(2) At 96,000 kilometers (60,000 miles) your dealer will replace the PCV valve at no cost except on Canada and California vehicles.

(3) If operating in severe dust, more frequent intervals may be required. Consult your dealer.

Normal schedule

8,000 KILOMETERS (5,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

16,000 KILOMETERS (10,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

24,000 KILOMETERS (15,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).

Normal schedule

- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect disc brake system and lubricate caliper slide rails.
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

32,000 KILOMETERS (20,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

40,000 KILOMETERS (25,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

Normal schedule

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

48,000 KILOMETERS (30,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*
- ☐ *Replace air cleaner filter (3).*
- ☐ Inspect disc brake system and lubricate caliper slide rails.
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Inspect and lubricate front wheel bearings (4x2 only).
- ☐ Inspect parking brake system for damage and operation.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

56,000 KILOMETERS (35,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

Normal schedule

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

64,000 KILOMETERS (40,000 MILES)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

72,000 KILOMETERS (45,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect disc brake system and lubricate caliper slide rails.
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

Normal schedule

DEALER AUTHORIZATION

Date: _____
Mileage: _____

80,000 KILOMETERS (50,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 80,000 km (50,000 miles) or 48 months. Thereafter, change engine coolant every 48,000 km (30,000 miles) or 36 months.*
- ☐ Replace fuel filter (Recommended but not required for California vehicles).

DEALER AUTHORIZATION

Date: _____
Mileage: _____

88,000 KILOMETERS (55,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Normal schedule

96,000 KILOMETERS (60,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*
- ☐ *Replace air cleaner filter (3).*
- ☐ *Replace PCV valve (2).*
- ☐ *Inspect disc brake system and lubricate caliper slide rails.*
- ☐ *Inspect drum brake systems, hoses and lines.*
- ☐ *Inspect and lubricate front wheel bearings (4x2 only).*
- ☐ *Inspect accessory drive belts (2.5 & 4.0L engines)*
- ☐ *Replace spark plugs (2.5 engine).*
- ☐ *Inspect parking brake system for damage and operation.*
- ☐ *Change transfer case oil (4x4).*
- ☐ *Change manual transmission oil.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

104,000 KILOMETERS (65,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Rotate tires and adjust air pressure (1).*
- ☐ *Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).*
- ☐ *Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).*
- ☐ *Check clutch reservoir fluid level.*
- ☐ *Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.*

Normal schedule

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

112,000 KILOMETERS (70,000 MILES)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

120,000 KILOMETERS (75,000 MILES)

☐ *Change engine oil and replace oil filter.*

☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*

☐ Rotate tires and adjust air pressure (1).

☐ Inspect disc brake system and lubricate caliper slide rails.

☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).

☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).

☐ Inspect drum brake systems, hoses and lines.

☐ Check clutch reservoir fluid level.

☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

Normal schedule

DEALER AUTHORIZATION

Date: _____
Mileage: _____

128,000 KILOMETERS (80,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 80,000 km (50,000 miles) or 48 months. Thereafter, change engine coolant every 48,000 km (30,000 miles) or 36 months.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

136,000 KILOMETERS (85,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Normal schedule

144,000 KILOMETERS (90,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*
- ☐ *Replace air cleaner filter (3).*
- ☐ Inspect accessory drive belt(s) (2.5L and 4.0L engines).
- ☐ Inspect parking brake system for damage and operation.
- ☐ Inspect disc brake system and lubricate caliper slide rails.
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Inspect and lubricate front wheel bearings (4x2 only).

DEALER AUTHORIZATION

Date: _____
Mileage: _____

152,000 KILOMETERS (95,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Normal schedule

160,000 KILOMETERS (100,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace spark plugs (3.0L & 4.0L engines)*
- ☐ *Inspect accessory drive belt (3.0L engine).*
- ☐ All front and rear (non-synthetic) axle lube quantities (4x4) must be replaced every 160,000 kilometers (100,000 miles) or if the axle has been submerged in water. Otherwise the lube should not be checked or changed unless a leak is suspected or repair required.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

168,000 KILOMETERS (105,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Inspect disc brake system and lubricate caliper slide rails.
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

Normal schedule

176,000 KILOMETERS (110,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 80,000 km (50,000 miles) or 48 months. Thereafter, change engine coolant every 48,000 km (30,000 miles) or 36 months.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

184,000 KILOMETERS (115,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (1).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).
- ☐ Lubricate driveshaft U-joint if equipped with grease fittings and lubricate slip yoke (if equipped).
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

200,000 KILOMETERS (120,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*

Normal schedule

- ☐ *Inspect accessory drive belts (2.5L, 3.0L & 4.0L engines).*
- ☐ *Replace air cleaner filter (3).*
- ☐ *Replace PCV valve (2).*
- ☐ Inspect parking brake system for damage and operation.
- ☐ Inspect disc brake system and lubricate caliper slide rails.
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Inspect and lubricate front wheel bearings (4x2 only).
- ☐ Replace spark plugs (2.5L, 3.0L and 4.0L engines)
- ☐ Inspect camshaft drive belt (2.5L engine)
- ☐ Change manual transmission oil.
- ☐ Change transfer case oil (4x4).

DEALER AUTHORIZATION

Date: _____

Mileage: _____

Severe duty schedule

Electric Vehicle Owners:

This Service Guide does not include information for electric vehicles. Refer to the *Electric Vehicle Owner's Guide Supplement* for scheduled maintenance information.

Items for Emission Control Service are shown in italics.

The Severe Duty Schedule provides maintenance intervals for replacing your air cleaner filter if you drive in severe dust conditions. However, the conditions you drive in may require even more frequent air cleaner replacement intervals than those shown. Check with your dealer.

Non-synthetic rear axle lubricants should be replaced every 3,000 miles or 3 months whichever occurs first, during extended trailer tow operation above 21 degrees Celsius (70 degrees Fahrenheit) ambient and wide open throttle for extended periods above 45 m.p.h. The 3,000 mile lube change interval may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number F1TZ-19580-B or equivalent. Add 4 ounces of additive friction modifier C8AZ-19B54-A (EST-M2C118-A) or equivalent for complete refill of traction-lok rear axles. The axle lubricant should be changed anytime the axle has been submerged in water.

Rear axles containing synthetic lubricant are lubricated for life. These lubricants are not to be checked or changed unless a leak is suspected, service required, or the axle assembly has been submerged in water. The axle lubricant should be changed anytime the axle has been submerged in water.

Police and Taxi Vehicles:

Replace rear axle lubricant every 160,000 kilometers (100,000 miles). Rear axle lubricant change may be waived if the axle was filled with 75W140 synthetic gear lubricant meeting Ford specification WSL-M2C192-A, part number F1TZ-19580-B or equivalent add four ounces of additive friction modifier C8AZ-19B546-A (EST-M2C118-A) or equivalent for complete refill or Traction-Lok rear axles. The rear axle lubricant should be change anytime the axle has been submerged in water.

(1) Extremely dusty conditions will require more frequent replacement of your air filter. Check your air filter at 5,000 km (3,000 miles). If it is dirty, replace it and then keep replacing it at the same interval (every 5,000 km [3,000 miles]). If it is not dirty, check it again at 10,000 km (6,000 miles) and again at 15,000 km (9,000 miles) until you determine

Severe duty schedule

your unique maintenance interval. Do not go beyond 50,000 km (30,000 miles) as described in the chart. If in doubt, see your dealer.

(2) If you operate your vehicle “off-road” in water that is deeper than the hubs (1/2 wheel height) than these items must be serviced daily.

(3) City delivery vehicles and other unique applications that require constant turning may need more frequent tire rotation. You may need to develop your own tire rotation interval based on your own observations of tire wear. If in doubt, see your dealer.

(4) Wheel lug nuts must be retightened to proper torque specifications at 800 km (500 miles) of new vehicle operation. See your dealer for proper torque specifications. Also retighten to proper torque specifications at 800 km (500 miles) after (A) any wheel change or (B) any other time the wheel lug nuts have been loosened.

(5) At 96,000 km (60,000 miles) your dealer will replace the PCV valve at no cost except on Canadian and California vehicles.

5,000 KILOMETERS (3,000 MILES)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

10,000 KILOMETERS (6,000 MILES)

☐ *Change engine oil and replace oil filter.*

☐ Rotate tires and adjust air pressure (3)(4).

☐ Check clutch reservoir fluid level.

☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).

☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).

☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

Severe duty schedule

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

15,000 KILOMETERS (9,000 MILES)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

20,000 KILOMETERS (12,000 MILES)

☐ *Change engine oil and replace oil filter.*

☐ Check clutch reservoir fluid level.

☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).

☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).

☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Severe duty schedule

25,000 KILOMETERS (15,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 24,000 km (15,000 miles) or 12 months.*
- ☐ Rotate tires and adjust air pressure (3) (4).
- ☐ Inspect disc brake system and lubricate caliper slide rails (2).
- ☐ Inspect drum brake systems, hoses and lines.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

30,000 KILOMETERS (18,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Severe duty schedule

35,000 KILOMETERS (21,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

40,000 KILOMETERS (24,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (3) (4).
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Check clutch reservoir fluid level.
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

45,000 KILOMETERS (27,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

Severe duty schedule

50,000 KILOMETERS (30,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace air cleaner filter (1)*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 25,000 km (15,000 miles) or 12 months.*
- ☐ *Inspect disc brake system and lubricate caliper slide rails (2).*
- ☐ *Inspect drum brake systems, hoses and lines.*
- ☐ *Change manual transmission oil.*
- ☐ *Check clutch reservoir fluid level.*
- ☐ *Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped)(2).*
- ☐ *Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).*
- ☐ *Inspect and lubricate front wheel bearings (4x2 only) (2).*
- ☐ *Inspect parking brake system for damage and operation.*
- ☐ *Change transfer case oil (4x4).*
- ☐ *Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.*

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

55,000 KILOMETERS (33,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Rotate tires and adjust air pressure (3) (4).*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Severe duty schedule

60,000 KILOMETERS (36,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped)(2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

65,000 KILOMETERS (39,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

70,000 KILOMETERS (42,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Check clutch reservoir fluid level.
- ☐ Rotate tires and adjust air pressure (3) (4).
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).

Severe duty schedule

- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

75,000 KILOMETERS (45,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 25,000 km (15,000 miles) or 12 months.*
- ☐ Inspect disc brake system and lubricate caliper slide rails (2).
- ☐ Inspect drum brake systems, hoses and lines.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

80,000 KILOMETERS (48,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 80,000 km (48,000 miles) or 48 months. Thereafter, change engine coolant every 50,000 km (30,000 miles) or 36 months.*
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

Severe duty schedule

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

85,000 KILOMETERS (51,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Replace fuel filter (Recommended but not required for California vehicles).
- ☐ Change automatic transmission fluid.
- ☐ Rotate tires and adjust air pressure (3) (4).

DEALER AUTHORIZATION

Date: _____
Mileage: _____

90,000 KILOMETERS (54,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Severe duty schedule

95,000 KILOMETERS (57,000 MILES)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

100,000 KILOMETERS (60,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 25,000 km (15,000 miles) or 12 months.*
- ☐ *Replace air cleaner filter (1).*
- ☐ *Replace PCV valve (5).*
- ☐ *Inspect accessory drive belts (2.5L and 4.0L engines).*
- ☐ *Replace spark plugs.*
- ☐ Rotate tires and adjust air pressure (3) (4).
- ☐ Inspect disc brake system and lubricate caliper slide rails (2).
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Inspect and lubricate front wheel bearings (4x2) (2).
- ☐ Change manual transmission oil.
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect parking brake system for damage and operation.
- ☐ Change transfer case oil (4x4).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

Severe duty schedule

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

105,000 KILOMETERS (63,000 MILES)

☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

110,000 KILOMETERS (66,000 MILES)

☐ *Change engine oil and replace oil filter.*

☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).

☐ Check clutch reservoir fluid level.

☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).

☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Severe duty schedule

115,000 KILOMETERS (69,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (3) (4).

DEALER AUTHORIZATION

Date: _____
Mileage: _____

120,000 KILOMETERS (72,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

125,000 KILOMETERS (75,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 25,000 km (15,000 miles) or 12 months.*
- ☐ Inspect disc brake system and lubricate caliper slide rails (2).
- ☐ Inspect drum brake systems, hoses and lines.

Severe duty schedule

DEALER AUTHORIZATION

Date: _____
Mileage: _____

130,000 KILOMETERS (78,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 80,000 km (48,000 miles) or 48 months. Thereafter, change engine coolant every 50,000 km (30,000 miles) or 36 months.*
- ☐ Rotate tires and adjust air pressure (3) (4).
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

135,000 KILOMETERS (81,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

Severe duty schedule

140,000 KILOMETERS (84,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

145,000 KILOMETERS (87,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (3)(4).

DEALER AUTHORIZATION

Date: _____
Mileage: _____

150,000 KILOMETERS (90,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace air cleaner filter (1).*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 25,000 km (15,000 miles) or 12 months.*
- ☐ *Inspect accessory drive belt(s) (2.5L, 3.0L and 4.0L engines).*

Severe duty schedule

- ☐ Inspect disc brake system and lubricate caliper slide rails (2).
- ☐ Inspect drum brake systems, hoses and lines.
- ☐ Inspect and lubricate front wheel bearings (4x2 only).
- ☐ Change manual transmission oil.
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect parking brake system for damage and operation.
- ☐ Change transfer case oil (4x4).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

155,000 KILOMETERS (93,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

160,000 KILOMETERS (96,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (3) (4).

Severe duty schedule

- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

165,000 KILOMETERS (99,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____

Mileage: _____

170,000 KILOMETERS (102,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Replace fuel filter (recommended but not required for California vehicles).*
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Change automatic transmission fluid.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).

Severe duty schedule

- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.
- ☐ All front and rear (non-synthetic) axle lube quantities (4x4) must be replaced every 160,000 km (100,000 miles) or if the axle has been submerged in water. Otherwise the lubricant should not be checked or changed unless a leak is suspected, service required or the axle has been submerged in water.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

175,000 KILOMETERS (105,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 25,000 km (15,000 miles) or 12 months.*
- ☐ Rotate tires and adjust air pressure (3) (4).
- ☐ Inspect disc brake system and lubricate caliper slide rails (2).
- ☐ Inspect drum brake systems, hoses and lines.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

180,000 KILOMETERS (108,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Change engine coolant initially at 80,000 km (48,000 miles) or 48 months. Thereafter, change coolant every 48,000 km (30,000 miles) or 36 months.*
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).

Severe duty schedule

- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____
Mileage: _____

185,000 KILOMETERS (111,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION

Date: _____
Mileage: _____

190,000 KILOMETERS (114,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ Rotate tires and adjust air pressure (3) (4).
- ☐ Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).
- ☐ Check clutch reservoir fluid level.
- ☐ Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4)(2).
- ☐ Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

Severe duty schedule

DEALER AUTHORIZATION _____

Date: _____
Mileage: _____

195,000 KILOMETERS (117,000 MILES)

- ☐ *Change engine oil and replace oil filter.*

DEALER AUTHORIZATION _____

Date: _____
Mileage: _____

200,000 KILOMETERS (120,000 MILES)

- ☐ *Change engine oil and replace oil filter.*
- ☐ *Inspect engine cooling system, hoses, and clamps; check coolant strength every 25,000 km (15,000 miles) or 12 months.*
- ☐ *Replace air cleaner filter (1).*
- ☐ *Replace PCV valve (5).*
- ☐ *Inspect accessory drive belt(s) (2.5L, 3.0L and 4.0L engines).*
- ☐ *Replace spark plugs.*
- ☐ *Inspect disc brake system and lubricate caliper slide rails (2).*
- ☐ *Inspect drum brake systems, hoses and lines.*
- ☐ *Inspect and lubricate front wheel bearings (4x2 only) (2).*
- ☐ *Lubricate driveshaft u-joint if equipped with grease fittings and lubricate slip yoke (if equipped) (2).*
- ☐ *Check clutch reservoir fluid level.*
- ☐ *Lubricate rear driveshaft double cardan joint centering ball (SWB 4x4).*
- ☐ *Inspect parking brake system for damage and operation.*
- ☐ *Change transfer case oil (4x4).*
- ☐ *Inspect exhaust system for leaks, damage or loose parts. Remove any foreign material trapped by exhaust system shielding.*

Severe duty schedule

NOTE: It is normal for a certain amount of moisture and staining to be present around the muffler seams. The presence of soot, light surface rust or moisture does not indicate a faulty muffler.

DEALER AUTHORIZATION

Date: _____

Mileage: _____

Owner maintenance checks

OWNER MAINTENANCE CHECKS

Listed below are maintenance checks and inspections that should be performed by the owner or qualified service technician at the indicated intervals. Service information and supporting specifications are provided in the Owner's Guide.

Any adverse conditions should be brought to the attention of your dealer or qualified service technician for service advice as soon as possible.

The Owner Maintenance checks are generally not covered by warranties and you may be charged for labor, parts and lubricants used.

WHEN YOU STOP FOR FUEL:

- ☐ Check the engine oil level.
- ☐ Check the windshield washer fluid level.
- ☐ Look for low or under-inflated tires.

WHILE OPERATING YOUR VEHICLE:

- ☐ Note any changes in the sound of the exhaust or any smell of exhaust fumes in the vehicle.
- ☐ Check for vibrations in the steering wheel. Notice any increased steering effort or looseness in the steering wheel, or a change in its straight ahead position.
- ☐ Notice if the vehicle *constantly turns slightly* or “pulls” to one side when travelling on smooth, level road.
- ☐ When stopping, listen and check for strange sounds, *pulling to one side*, increased brake pedal travel or “hard to push” brake pedal.
- ☐ If any slipping or changes in the operation of your transmission occurs, check the transmission fluid level.
- ☐ Check automatic transmission P(Park) function.
- ☐ Check parking brake.

Owner maintenance checks

AT LEAST MONTHLY:

- ☐ Check coolant level in the coolant recovery reservoir.
- ☐ Check operation of lamps, horn, turn signals, windshield wipers and washers and hazard warning flasher.
- ☐ Check for fluid leaks by inspecting the surface beneath your vehicle for oil, coolant or other fluid drips. Clean water from the air conditioning system is normal.

AT LEAST TWICE A YEAR: (I.E., EVERY SPRING AND FALL)

- ☐ Check power steering fluid
- ☐ Check fluid level in clutch master cylinder.
- ☐ Check radiator, heater and air conditioning hoses for leaks or damage.
- ☐ Check for worn tires.
- ☐ Clean body and door drain holes.
- ☐ Flush complete underside of vehicle.
- ☐ Inspect underbody components for damage.
- ☐ Check parking brake system.
- ☐ Check headlamp alignment.
- ☐ Check seat and shoulder belt webbing, buckles, height adjusters and release mechanisms.
- ☐ Inspect seatback latches for proper operation.
- ☐ Check air pressure in spare tire.
- ☐ Check windshield washer spray and wiper operation. Clean wiper blades with clean cloth dampened with washer fluid.

AT LEAST ONCE A YEAR:

- ☐ Lubricate door, hood and tailgate hinges and checks.
- ☐ Lubricate door, hood and tailgate hinge locks and latches.
- ☐ Lubricate door rubber weatherstrips.