

FORD TOURNEOCONNECT / TRANSITCONNECT Owner's Manual



The information contained in this publication was correct at the time of going to print. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated into any language in any form by any means without our written permission. Errors and omissions excepted.

© Ford Motor Company 2013

All rights reserved.

Part Number: CG3526en 07/2012 20130122124713

Table of Contents

Introduction

About This Manual.....	5
Symbols Glossary.....	5
Replacement Parts Recommendation.....	6

At a Glance

At a Glance.....	7
------------------	---

Child Safety

Child Seats.....	11
Booster Seats.....	12
Child Seat Positioning.....	13
ISOFIX Anchor Points.....	16
Child Safety Locks.....	16

Occupant protection

Principle of Operation.....	18
Fastening the seat belts.....	19
Seat belt height adjustment.....	20
Seat belt reminder.....	20
Using seat belts during pregnancy.....	20
Disabling the passenger airbag.....	21

Keys and Remote Controls

General Information on Radio Frequencies.....	22
Programming the remote control.....	22
Changing the remote control battery.....	22

Locks

Locking and Unlocking.....	24
----------------------------	----

Engine immobiliser

Principle of Operation.....	29
Coded keys.....	29
Arming the engine immobiliser.....	29
Disarming the engine immobiliser.....	29

Alarm

Principle of Operation.....	30
Arming the alarm.....	30
Disarming the alarm.....	30

Steering Wheel

Adjusting the Steering Wheel.....	31
Audio Control.....	31
Voice Control.....	32

Wipers and Washers

Windscreen Wipers.....	34
Autowipers.....	34
Windscreen Washers.....	35
Rear Window Wiper and Washers.....	35
Checking the Wiper Blades.....	36
Changing the Wiper Blades.....	36

Lighting

Lighting Control.....	38
Autolamps.....	39
Front Fog Lamps.....	39
Rear Fog Lamps.....	39
Hazard Warning Flashers.....	40
Headlamp Levelling.....	40
Direction Indicators.....	41
Interior Lamps.....	41
Changing a Bulb.....	42
Bulb Specification Chart.....	47

Windows and Mirrors

Power Windows.....	48
Exterior Mirrors.....	48
Electric exterior mirrors.....	48
Rear Quarter Windows.....	49
Auto-Dimming Mirror.....	49

Instrument Cluster

Gauges.....	50
-------------	----

Table of Contents

Warning Lamps and Indicators.....	52	Diesel Particulate Filter.....	82
Audible Warnings and Indicators.....	54		
Information Displays		Fuel and Refuelling	
General Information.....	56	Safety Precautions.....	83
Trip Computer.....	58	Fuel Quality - Diesel.....	83
Personalised Settings.....	59	Catalytic Converter.....	83
Information Messages.....	60	Fuel filler flap.....	84
		Refuelling.....	84
Climate Control		Fuel Consumption.....	84
Principle of Operation.....	63	Technical Specifications.....	84
Air Vents.....	63		
Heated Windows and Mirrors.....	63	Transmission	
Manual Climate Control.....	64	Manual Transmission.....	86
Auxiliary Heater.....	67		
		Brakes	
Seats		Principle of Operation.....	87
Sitting in the Correct Position.....	71	Hints on Driving With Anti-Lock Brakes.....	87
Front Seats.....	71	Parking Brake.....	87
Head Restraints.....	74		
Rear Seats.....	74	Stability Control	
Heated Seats.....	77	Principle of Operation.....	88
		Using Stability Control.....	88
Convenience features			
Instrument Lighting Dimmer.....	78	Traction Control	
Cigar Lighter.....	78	Principle of Operation.....	89
Auxiliary Power Points.....	78	Using Traction Control.....	89
Cup Holders.....	79		
Storage compartments.....	79	Hill Start Assist	
Map Pockets.....	79	Principle of Operation.....	90
Auxiliary Input Socket.....	80	Using hill start assist.....	90
Floor Mats.....	80		
		Parking Aids	
Starting and Stopping the Engine		Principle of Operation.....	92
General Information.....	81	Parking Aid.....	92
Ignition Switch.....	81		
Starting a Diesel Engine.....	81	Load Carrying	
Switching Off the Engine.....	81	General Information.....	93
		Roof Racks and Load Carriers.....	93
		Cargo Nets.....	93

Table of Contents

Towing

Towing a Trailer.....95

Driving Hints

Running-In.....96

Cold Weather Precautions.....96

Roadside Emergencies

First Aid Kit.....97

Warning Triangle.....97

Fuses

Fuse Box Locations.....98

Changing a Fuse.....99

Fuse Labels.....99

Fuse Specification Chart.....100

Vehicle recovery

Towing Points.....104

Towing the Vehicle on Four Wheels.....104

Maintenance

General Information.....106

Opening and Closing the Bonnet.....106

Under Bonnet Overview - 1.8L
Duratorq-TDCi (Lynx) Diesel/1.8L
Duratorq-TDDi (Lynx) Diesel.....108

Engine Oil Dipstick - 1.8L Duratorq-TDCi
(Lynx) Diesel/1.8L Duratorq-TDDi
(Lynx) Diesel.....109

Engine Oil Check.....109

Engine Coolant Check.....110

Brake and Clutch Fluid Check.....110

Power Steering Fluid Check.....111

Washer Fluid Check.....111

Technical Specifications.....112

Vehicle Care

Cleaning the Exterior.....114

Cleaning the Interior.....115

Repairing Minor Paint Damage.....115

Vehicle battery

Jump-Starting the Vehicle.....116

Wheels and Tyres

General Information.....117

Changing a Road Wheel.....117

Tyre Care.....121

Using Winter Tyres.....122

Using Snow Chains.....122

Technical Specifications.....122

Vehicle identification

Vehicle Identification Plate.....125

Vehicle Identification Number.....125

Load apportioning valve (LAV)
plate.....125

Capacities and Specific- ations

Technical Specifications.....126

Audio introduction

Important audio information.....132

Audio unit overview

Audio unit overview.....133

Audio System Security

Security code.....134

Lost security code.....134

Entering a security code.....134

Incorrect security code.....134

Audio Unit Clock and Date Displays

Setting the clock and date on the audio
unit.....135

Table of Contents

Audio unit operation

On/off control.....	136
Bass/treble control.....	136
Balance/fade control.....	136
Audio menu control.....	136
Station preset buttons.....	138
Waveband button.....	138
Autostore control.....	138
Traffic information control.....	138
Station tuning control.....	139

Audio unit menus

Automatic volume control.....	140
Audio distortion reduction (CLIP).....	140
Alternative frequencies.....	140
Regional mode (REG).....	141
News broadcasts.....	141

Compact Disc Player

Loading compact discs.....	142
Track selection.....	142
Compact disc playback.....	142
Fast forward/reverse.....	142
Shuffle/random.....	142
Compact disc track compression.....	142
Compact disc track scanning.....	142
Ejecting compact discs.....	143
Repeat compact disc tracks.....	143
Ending compact disc playback.....	143

Auxiliary input (AUX IN) socket

Auxiliary input (AUX IN) socket.....	144
--------------------------------------	-----

Audio Troubleshooting

Audio troubleshooting.....	145
----------------------------	-----

Telephone

General Information.....	146
--------------------------	-----

Telephone setup.....	146
Bluetooth setup.....	147
Telephone controls.....	147
Using the telephone - Vehicles Without: Navigation System.....	148
Using the telephone - Vehicles With: Navigation System.....	149

Voice control

Principle of Operation.....	152
Using voice control.....	152
Audio unit commands.....	153
Telephone commands.....	159
Navigation system commands.....	163

Appendices

Type approvals.....	164
Electromagnetic compatibility.....	164

Introduction

ABOUT THIS MANUAL

Thank you for choosing Ford. We recommend that you take some time to get to know your vehicle by reading this manual. The more that you know about it, the greater the safety and pleasure you will get from driving it.

WARNING



Always drive with due care and attention when using and operating the controls and features on your vehicle.


Note: This manual describes product features and options available throughout the range, sometimes even before they are generally available. It may describe options not fitted to your vehicle.

Note: Some of the illustrations in this manual may be used for different models, so may appear different to your vehicle. However, the essential information in the illustrations is always correct.

Note: Always use and operate your vehicle in line with all applicable laws and regulations.

Note: Pass on this manual when selling your vehicle. It is an integral part of the vehicle.

This manual may qualify the location of a component as left-hand side or right-hand side. The side is determined when facing forward in the seat.

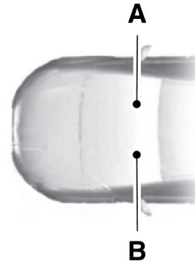

E154903

- A Right-hand side
- B Left-hand side

Protecting the Environment

You must play your part in protecting the environment. Correct vehicle usage and the authorised disposal of waste, cleaning and lubrication materials are significant steps toward this aim.

SYMBOLS GLOSSARY

Symbols in this handbook

WARNING



You risk death or serious injury to yourself and others if you do not follow the instructions highlighted by the warning symbol.

CAUTION



You risk damaging your vehicle if you do not follow the instructions highlighted by the caution symbol.

Symbols on your vehicle



Introduction



When you see these symbols, read and follow the relevant instructions in this handbook before touching or attempting adjustment of any kind.

REPLACEMENT PARTS RECOMMENDATION

Your vehicle has been built to the highest standards using quality parts. We recommend that you demand the use of genuine Ford and Motorcraft parts whenever your vehicle requires scheduled maintenance or repair. You can clearly identify genuine Ford and Motorcraft parts by looking for the Ford, FoMoCo or Motorcraft branding on the parts or their packaging.

Scheduled Maintenance and Mechanical Repairs

One of the best ways for you to make sure that your vehicle provides years of service is to have it maintained in line with our recommendations using parts that conform to the specifications detailed in this Owner's Manual. Genuine Ford and Motorcraft parts meet or exceed these specifications.

Collision Repairs

We hope that you never experience a collision, but accidents do happen. Genuine Ford replacement collision parts meet our stringent requirements for fit, finish, structural integrity, corrosion protection and dent resistance. During vehicle

development we validate these parts deliver the intended level of protection as a whole system. A great way to know for sure you are getting this level of protection is to use genuine Ford replacement collision parts.


Warranty on Replacement Parts

Genuine Ford and Motorcraft replacement parts are the only replacement parts that benefit from a Ford Warranty. Damage caused to your vehicle as a result of the failure of non-Ford parts may not be covered by the Ford Warranty. For additional information, refer to the terms and conditions of the Ford Warranty.

At a Glance


Instrument panel overview

Left-hand drive

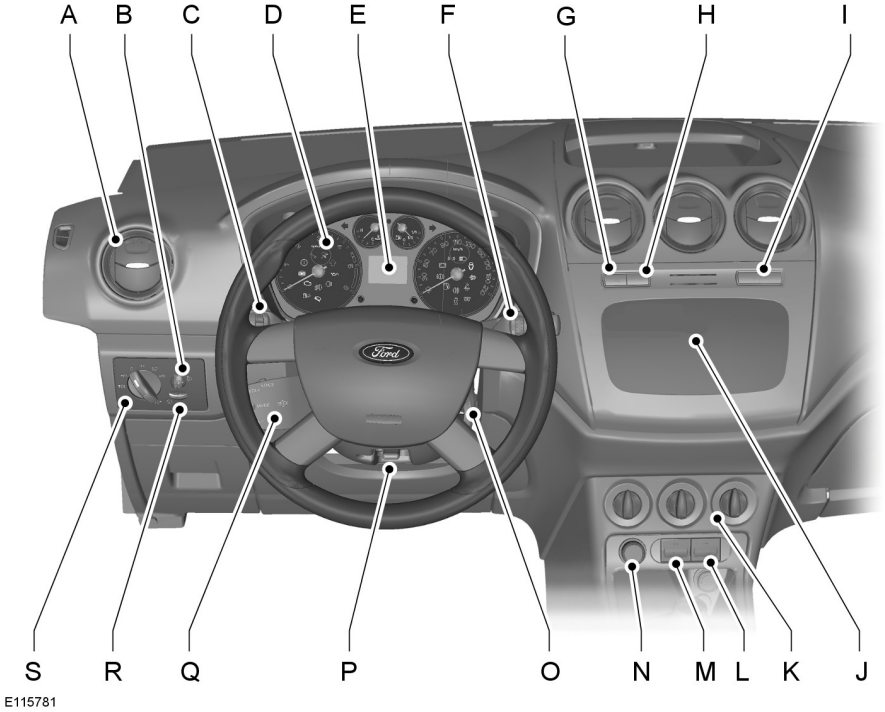

At a Glance

Right-hand drive

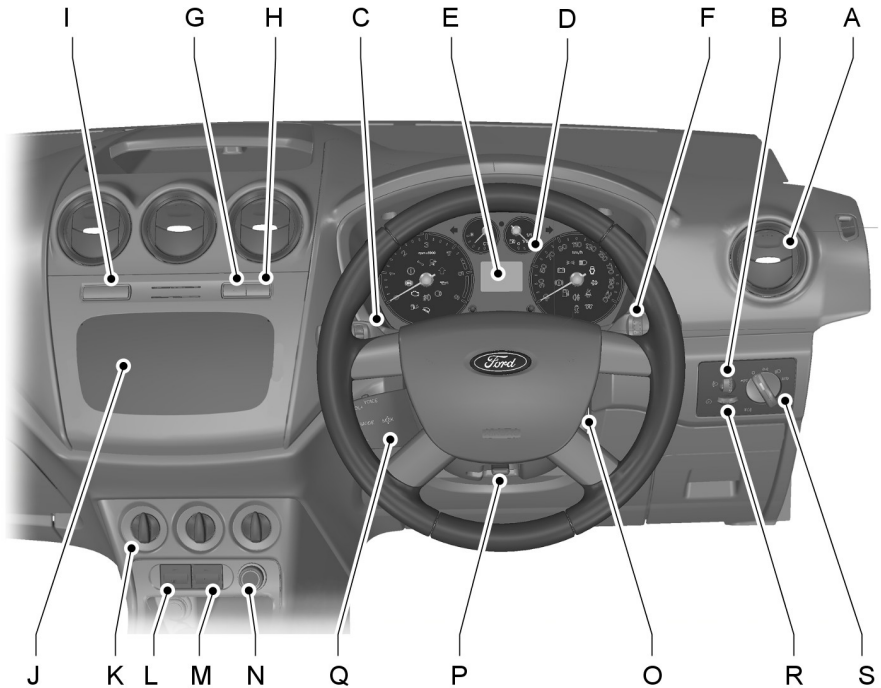

E115782

- A Air vent. See **Climate Control** (page 63).
- B Headlamp levelling control. See **Headlamp Levelling** (page 40).
- C Direction indicators. See **Lighting** (page 38).
- D Instrument cluster. See **Gauges** (page 50).
- E Information display. See (page 56).
- F Wiper lever. See **Wipers and Washers** (page 34).
- G Hazard warning flasher switch. See **Lighting** (page 38).
- H Passenger airbag disabled indicator. See **Disabling the passenger airbag** (page 21).

At a Glance

- I Heated windscreen and heated rear window switches. See **Climate Control** (page 63).
- J Audio or navigation unit. See separate handbook.
- K Climate controls. See **Climate Control** (page 63).
- L Recirculated air switch. See **Climate Control** (page 63).
- M Air conditioning switch. See **Climate Control** (page 63).
- N Cigar lighter or auxiliary power socket. See **Convenience features** (page 78).
- O Ignition switch.
- p Steering wheel adjustment lever. See **Steering Wheel** (page 31).
- Q Audio control. See **Audio Control** (page 31).
- R Instrument lighting dimmer. See **Instrument Lighting Dimmer** (page 78).
- S Lighting controls. See **Lighting** (page 38).

Locking and unlocking the doors with the key

Allvehicles

Turn the top of the key towards the front of the vehicle twice to unlock all doors.

Transit Connect


Turn the top of the key towards the front of the vehicle to unlock the front doors.

Tourneo Connect

Turn the top of the key towards the front of the vehicle to unlock the front and sliding doors.

See **Locking and Unlocking** (page 24).

Locking and unlocking the doors with the remote control

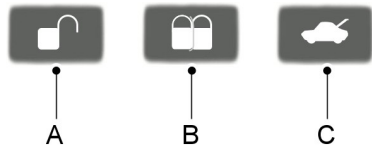

E87379

- A Unlock
- B Lock
- C Luggage compartment lid unlock

Transit Connect

Press button **A** once to unlock the front doors only.

Press button **A** twice to unlock all doors.

Press button **C** once to unlock the sliding door and the luggage compartment lid.

Tourneo Connect

Press button **A** once to unlock the front and sliding doors.

Press button **A** twice to unlock all doors.

At a Glance

Press button **C** once to unlock the luggage compartment lid.

All vehicles

Press button **B** once to lock all doors and the luggage compartment lid.

Press button **B** twice within three seconds to activate double locking.

Note: The anti-theft alarm system can also be armed independently from the double locking system by turning the door key to the lock position.


See **Locking and Unlocking** (page 24).

Adjusting the steering wheel

WARNING



Never adjust the steering wheel when the vehicle is moving.

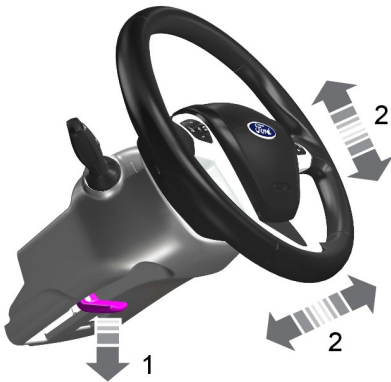

E95178



E95179

WARNING



Make sure that you fully engage the locking lever when returning it to its original position.

See **Adjusting the Steering Wheel** (page 31).

Engine idle speed after starting

The engine may idle at a higher speed than normal immediately after starting from cold.

See **Starting and Stopping the Engine** (page 81).

Child Safety

CHILD SEATS








E133140





E68916

WARNINGS

-  Secure children that are less than 150 centimetres (59 inches) tall in a suitable, approved child restraint, in the rear seat.
-  **Extreme Hazard!** Do not use a rearward facing child restraint on a seat protected by an air bag in front of it!
-  Read and follow the manufacturer's instructions when you are fitting a child restraint.
-  Do not modify child restraints in any way.
-  Do not hold a child on your lap when the vehicle is moving.

WARNINGS

-  Do not leave unattended children in your vehicle.
-  If your vehicle has been involved in an accident, have the child restraints checked by properly trained technicians.

Note: *Mandatory use of child restraints varies from country to country.*

Only child restraints certified to ECE-R44.03 (or later) have been tested and approved for use in your vehicle. A choice of these are available from your Dealer.

Child restraints for different mass groups

Use the correct child restraint as follows:

Baby safety seat



E68918

Secure children that weigh less than 13 kilograms (29 pounds) in a rearward facing baby safety seat (Group 0+) in the rear seat.

Child Safety

Child safety seat



E68920


Secure children that weigh between 13 and 18 kilograms (29 and 40 pounds) in a child safety seat (Group 1) in the rear seat.

BOOSTER SEATS

WARNINGS

-  Do not install a booster seat or a booster cushion with only the lap strap of the seat belt.
-  Do not install a booster seat or a booster cushion with a seat belt that is slack or twisted.
-  Do not put the seat belt under your child's arm or behind its back.
-  Do not use pillows, books or towels to boost your child's height.
-  Make sure that your children sit in an upright position.
-  Secure children that weigh more than 15 kilograms (33 pounds) but are less than 150 centimetres (59 inches) tall in a booster seat or a booster cushion.

CAUTION

-  When using a child seat on a rear seat, make sure that the child seat rests tightly against the vehicle seat. It may be necessary to lift or remove the head restraint. See **Head Restraints** (page 74).

Booster seat (Group 2)



E70710

We recommend that you use a booster seat that combines a cushion with a backrest instead of a booster cushion only. The raised seating position will allow you to position the shoulder strap of the adult seat belt over the centre of your child's shoulder and the lap strap tightly across its hips.

Child Safety




Booster cushion (Group 3)



E68924

CHILD SEAT POSITIONING

WARNINGS

-  Please consult your Dealer for the latest details relating to Ford recommended child seats.
-  When using a forward facing child seat on a rear seat, always remove the head restraint from that seat. See **Head Restraints** (page 74).
-  When using a child seat with a seat belt, make sure that the seat belt is not slack or twisted.

Note: *When using a child seat on a front seat, always adjust the front passenger seat to its fully rearwards position. If it proves difficult to tighten the lap section of the seat belt without slack remaining, adjust the seatback to the fully upright position and raise the height of the seat. See **Front Seats** (page 71).*

Child Safety

Seating positions	Mass group categories				
	0	0+	1	2	3
	Up to 10 kg	Up to 13 kg	9 to 18 kg	15 to 25 kg	22 to 36 kg
Front passenger seat with airbag ON	X	X	UF ¹	UF ¹	UF ¹
Front passenger seat with airbag OFF	U ¹	U ¹	U ¹	U ¹	U ¹
Second row rear seats	U	U	U	U	U
Third row rear seats	U	U	U	U	U

X Not suitable for children in this mass group.

U Suitable for universal category child restraints approved for use in this mass group.

U¹ Suitable for universal category child seats approved for use in this mass group. However, we recommend that you secure children in a government approved child seat, in the rear seat.

UF¹ Suitable for universal category forward facing child seats approved for use in this mass group. However, we recommend that you secure children in a government approved child seat, in the rear seat.

ISOFIX child seats

Seating positions		Mass group categories	
		0+	1
		Rear facing	Forward facing
		Up to 13 kg	9 - 18 kg
Front seat	Size class	Not ISOFIX equipped	
	Seat type		
Rear outboard seat ISOFIX	Size class	C, D, E*	A, B, B1, C, D*
	Seat type	IL**	IL, IUF***
Rear centre seat	Size class	Not ISOFIX equipped	
	Seat type		

Child Safety

Seating positions		Mass group categories	
		O+	1
		Rear facing	Forward facing
		Up to 13 kg	9 - 18 kg
Third row rear seats	Size class	Not ISOFIX equipped	
	Seat type		

IL Suitable for particular ISOFIX child restraints systems of the **semi-universal** category. Please consult child restraints systems suppliers' vehicle recommendation lists.

IUF Suitable for ISOFIX forward facing child restraints systems of **universal** category approved for use in this mass group and ISOFIX size class.

*The ISOFIX size class for both **universal** and **semi-universal** child restraints systems is defined by the capital letters **A** to **G**. These identification letters are displayed on ISOFIX child restraints.


**At time of publishing the recommended Group O+ ISOFIX baby safety seat is the Britax Romer Baby Safe. Please consult your Dealer for the latest details relating to Ford recommended child seats.

***At time of publishing the recommended Group 1 ISOFIX child seat is the Britax Romer Duo. Please consult your Dealer for the latest details relating to Ford recommended child seats.

Child Safety

ISOFIX ANCHOR POINTS

Tourneo Connect

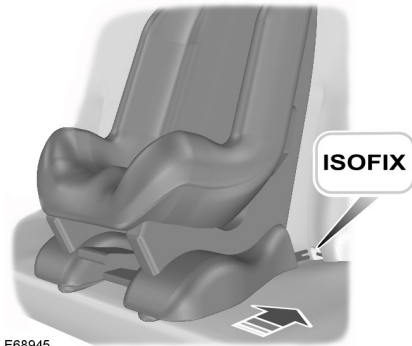

E68945

WARNING


 Use only ISOFIX child seats we recommend.


You can fit ISOFIX child restraints using the ISOFIX anchor points.


The ISOFIX system comprises of two rigid attachment arms on the child restraint that attach to anchor points on the rear seats, where the cushion and backrest meet. Tether anchor points may also be fitted.

Attaching a child restraint with a top tether


WARNINGS

 Use an anti-rotation device when using the ISOFIX system. We recommend that you use a top tether or a support leg.

 For ISOFIX child seats fitted with a top tether, always use a top tether anchor point.

 Do not attach a tether strap to anything other than the correct tether anchor point.

WARNINGS

 Always use the top tether anchor point at the base of the second row seatback when the third row is occupied.

1. Remove the head restraint. See **Head Restraints** (page 74).




E75771

2. Route the tether strap to the anchor point.
3. Push the child seat back firmly to engage the ISOFIX lower anchor points.
4. Tighten the tether strap in line with the child seat manufacturer's instructions.

CHILD SAFETY LOCKS


Tourneo Connect

WARNING

 You cannot open the doors from inside if you have put the child safety locks on.

Note: *Child safety locks are only fitted to sliding doors.*

Child Safety

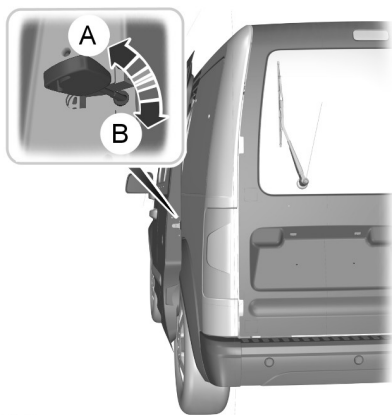

E75766

- A Lock
- B Unlock

Occupant protection

PRINCIPLE OF OPERATION

Airbags

WARNINGS



Do not modify the front of your vehicle in any way. This could adversely affect deployment of the airbags.



Original text according to ECE R94.01: Extreme Hazard! Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!



Wear a seat belt and keep sufficient distance between yourself and the steering wheel. Only when you use the seat belt properly, can it hold you in a position that allows the airbag to achieve its optimum effect. See **Sitting in the Correct Position** (page 71).



Have repairs to the steering wheel, steering column, seats, airbags and seat belts carried out by properly trained technicians.



Keep the areas in front of the airbags free from obstruction. Do not affix anything to or over the airbag covers.



Do not poke sharp objects into areas where airbags are fitted. This could damage and adversely affect deployment of the airbags.




Use seat covers designed for seats with side airbags. Have these fitted by properly trained technicians.

Note: You will hear a loud bang and see a cloud of harmless powdery residue if an airbag deploys. This is normal.

Note: Only wipe airbag covers with a damp cloth.

Driver and front passenger airbags

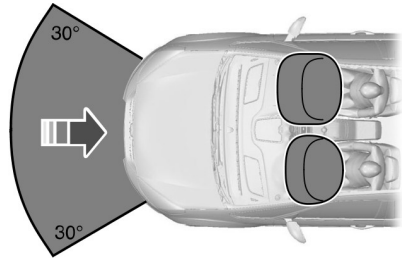

E74302

The driver and front passenger airbags will deploy during significant frontal collisions or collisions that are up to 30 degrees from the left or the right. The airbags will inflate within a few thousandths of a second and deflate on contact with the occupants, thus cushioning forward body movement. During minor frontal collisions, overturns, rear collisions and side collisions, the driver and front passenger airbags will not deploy.

Side airbags



E72658


Side airbags are fitted inside the seatback of the front seats. A label indicates that side airbags are fitted to your vehicle.


Occupant protection


The side airbags will deploy during significant lateral collisions. Only the airbag on the side affected by the collision will deploy. The airbags will inflate within a few thousandths of a second and deflate on contact with the occupants, thus providing protection for the chest and shoulder areas. During minor lateral collisions, overturns, front collisions and rear collisions, the side airbags will not deploy.


Seat belts


WARNINGS


 Wear a seat belt and keep sufficient distance between yourself and the steering wheel. Only when you use the seat belt properly, can it hold you in a position to achieve its optimum effect. See **Sitting in the Correct Position** (page 71).

 Never use a seat belt for more than one person.

 Use the correct buckle for each seat belt.

 Do not use a seat belt that is slack or twisted.


 Do not wear thick clothing. The seat belt must fit tightly around your body to achieve its optimum effect.

 Position the shoulder strap of the seat belt over the centre of your shoulder and position the lap strap tightly across your hips.

The drivers seat belt retractor is fitted with a seat belt pretensioner. Seat belt pretensioners have a slightly lower deployment threshold than the airbags. During significant frontal collisions, it is possible that only the seat belt pretensioners will deploy.

Status after a collision

WARNING


 Seat belts subjected to strain, as a result of an accident, should be renewed and the anchorages checked by a properly trained technician.

FASTENING THE SEAT BELTS



E66541

WARNING

 Insert the tongue into the buckle until a distinct click is heard, otherwise the seat belt will not be locked correctly.

Pull the belt out steadily. It may lock if pulled sharply or if the vehicle is on a slope.

To release the belt, press the red button on the buckle and let the belt rewind completely and smoothly.

Occupant protection

Rear seat belts



E75564


WARNING



In order to ensure that the centre belt works properly, the rear seatback must be correctly engaged.

Make sure that each seat belt uses the correct buckle.

SEAT BELT HEIGHT ADJUSTMENT

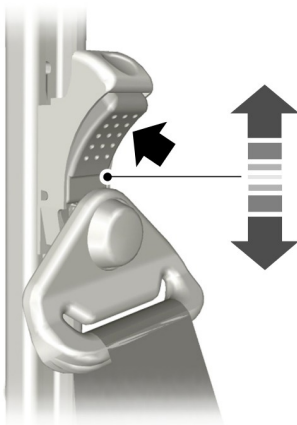

E68901

SEAT BELT REMINDER

WARNING



The occupant protection system will only provide optimum protection when you use the seat belt properly.




The seat belt reminder warning lamp illuminates and an audible warning will sound if the driver's seat belt has not been fastened and the vehicle exceeds a relatively low speed. It will also illuminate if the driver's seat belt is unfastened when the vehicle is moving. The audible warning will go off after five minutes but the seat belt reminder warning lamp will remain on until the driver's seat belt is fastened.

Deactivating the seat belt reminder

See your dealer.

USING SEAT BELTS DURING PREGNANCY

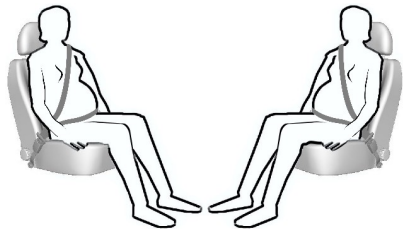

E68587

WARNING



Position the seat belt correctly for your safety and that of your unborn child. Do not use only the lap strap or the shoulder strap.

Occupant protection

Position the lap strap comfortably across your hips and low beneath your pregnant abdomen. Position the shoulder strap between your breasts, above and to the side of your pregnant abdomen.

DISABLING THE PASSENGER AIRBAG

WARNING



To avoid the risk of death or serious injury, **NEVER** use a rearward facing child restraint in the front, unless the airbag is **OFF**.




E71313

The key switch and the airbag deactivation lamp are located in the instrument panel.

If the airbag warning lamp in the instrument cluster illuminates intermittently, it means that there is a malfunction. Remove the child restraint from the front. Have the system checked by a suitably trained technician for your own safety. See **Warning Lamps and Indicators** (page 52).

Disabling the passenger airbag

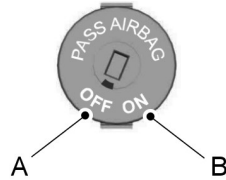

E71312

To use a child restraint in the front, make sure that the key switch is turned to position **A**.

When you switch the ignition on, check that the passenger airbag deactivation warning lamp comes on. See **At a Glance** (page 7).

Enabling the passenger airbag

WARNING




For the adult restraint system to perform as intended, make sure that the airbag is **ON**.


After removing the child restraint from the front, make sure that you turn the key switch to position **B**.

Keys and Remote Controls

GENERAL INFORMATION ON RADIO FREQUENCIES

CAUTIONS

 The radio frequency used by your remote control can also be used by other short distance radio transmissions (e.g. amateur radios, medical equipment, wireless headphones, remote controls and alarm systems). If the frequencies are jammed, you will not be able to use your remote control. You can lock and unlock the doors with the key.

 Check your vehicle is locked before leaving it unattended. This will safeguard against any potential malicious frequency blocking.

Note: *You could unlock the doors if you press the buttons on the remote control unintentionally.*

The operating range between your remote control and your vehicle varies depending on the environment.

PROGRAMMING THE REMOTE CONTROL

A maximum of four remote controls (including any supplied with your vehicle) can be programmed. The remote controls must remain inside the vehicle during the programming procedure. Fasten the front seat belts and close all doors to ensure that conflicting chimes do not sound during programming.

Programming a new remote control

1. To programme new remote controls turn the ignition key to position **II** four times within six seconds.

2. Turn the ignition to position **0**. A tone sounds to indicate that it is now possible to programme the remote controls for ten seconds.
3. Press any button on a new remote control. A tone will sound as confirmation.
4. Repeat this last step for all your remote controls, including your original. Do not remove the key from the ignition when pressing the button on this remote control.
5. Switch the ignition back on (position **II**) or wait for ten seconds without programming another remote control to end the key programming. Only the remote controls which you have just programmed are now able to lock and unlock the vehicle.

Reprogramming the unlocking function

Note: *When you press the unlock button either all the doors are unlocked or depending on the locking configuration, specific doors are unlocked. Pressing the unlock button again unlocks all the doors.*

Press and hold the unlock and lock buttons on the remote key simultaneously for at least four seconds with the ignition off. The direction indicators will flash twice to confirm the change.


To return to the original unlocking function, repeat the process.

CHANGING THE REMOTE CONTROL BATTERY



Make sure that you dispose of old batteries in an environmentally friendly way. Seek advice from your local authority regarding recycling.


Keys and Remote Controls

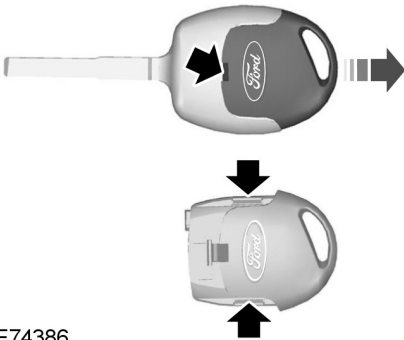

E74386

1. Insert a screwdriver into the recess on the back of the key and remove the key blade.
2. Release the retaining clips with the screwdriver and separate the two halves of the remote control.

CAUTION

 Do not touch the battery contacts or the printed circuit board with the screwdriver.

3. Carefully prise out the battery with the screwdriver.
4. Install a new battery (3V CR 2032) with the **+** facing upwards.
5. Assemble the two halves of the remote control.
6. Install the key blade.

Locks

LOCKING AND UNLOCKING

Central locking

Note: You can unlock all the doors and luggage compartment lid with the key from the front doors. This needs to be used if the remote control system is not functioning. If single stage unlocking is disabled turn the key twice to the unlock position.

Note: Unlocking the luggage compartment lid with a key will only unlock that door.

Note: You can only centrally lock the doors if they are all closed.

Double locking

WARNING



Do not activate double locking when persons or animals are inside the vehicle. You will not be able to unlock the doors from the inside if you have double locked them.

Double locking is a theft protection feature that prevents someone from opening the doors from the inside. You can only double lock the doors if they are all closed.

Locking and unlocking confirmation

When you unlock the doors, the direction indicators will flash once.

On vehicles without double locking, the direction indicators will flash twice when you lock the doors.

On vehicles with double locking, the direction indicators will flash twice when you double lock the doors.

Unlocking the doors with the key

Note: If single stage unlocking is enabled all doors will be unlocked with one turn of the key or one press of button **A** on the remote.

All vehicles

Turn the top of the key towards the front of the vehicle twice to unlock all doors.

Transit Connect

Turn the top of the key towards the front of the vehicle to unlock the front doors.

Tourneo Connect

Turn the top of the key towards the front of the vehicle to unlock the front doors and sliding doors.

Locking the doors with the key

Turn the top of the key towards the rear of the vehicle to lock all doors.

Locking and unlocking the luggage compartment lid


You can lock or double lock the whole vehicle or unlock the luggage compartment lid with the key at the luggage compartment lid.

Double locking the doors with the key

Turn the key to the unlock position and then the lock position within three seconds to double lock the doors.

Locks

Locking and unlocking the doors with the remote control

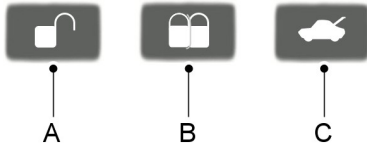

E87379

- A Unlock
- B Lock
- C Luggage compartment lid unlock

Note: *The alarm system is armed when the vehicle is locked with either the key or by pressing button **B** on the remote control.*

Note: *Depending on the vehicle configuration, the doors unlocked with one turn of the key or press of button **A** on the remote control may vary.*

Note: *Button **C** will remain functional when the ignition is on if the vehicle is stationary or moving very slowly.*

Transit Connect

Press button **A** once to unlock the front doors only.

Press button **A** twice to unlock all doors.

Press button **C** once to unlock the sliding door and luggage compartment lid.

Tourneo Connect

Press button **A** once to unlock the front doors and sliding doors.

Press button **A** twice to unlock all doors.

Press button **C** once to unlock the luggage compartment lid.

All vehicles

Press button **B** once to lock all doors.

Press button **B** twice within three seconds to activate double locking.

One-stage unlocking

You can programme the locking system so that all doors are unlocked with one key turn in a front door or a press of button **A** on the remote control.

Type 1 See **Personalised Settings** (page 59).

Type 2 See **Programming the remote control** (page 22).

Two-stage unlocking

Two stage unlocking is the default unlock setting if one stage unlocking is not enabled.

One key turn or a press of button **A** on the remote control will unlock the first stage. Two key turns or two presses of button **A** on the remote control will unlock all the doors.

One press of button **C** on the remote control will unlock the luggage compartment lid. Two presses of button **C** on the remote control will unlock all the doors.

Automatic relocking

The doors will relock automatically if you do not open a door within 45 seconds of unlocking the doors with the remote control. The door locks and the alarm will return to their previous state.


Sliding door memory locking

If the vehicle is locked when a sliding door is open, the sliding door will become locked when it is closed. It is not possible to double lock the vehicle with a sliding door open.

Locks

Locking and unlocking the doors from inside

Front doors

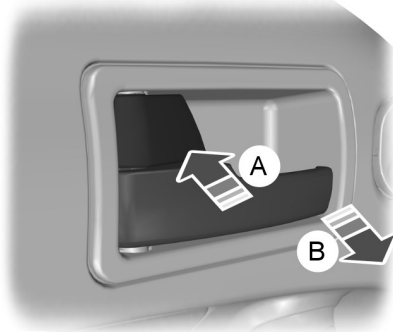


E74704

- A Lock all doors
- B Unlock

Note: *Dependent on vehicle lock configuration different doors will open using B. If single stage unlocking is enabled all doors will be unlocked.*

Sliding door

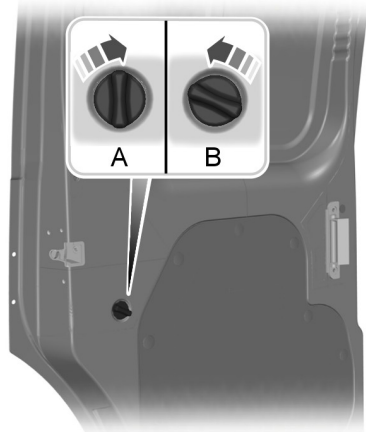

E74706


- A Lock
- B Unlock

Opening the doors

Sliding door

Note: *On Tourneo Connect, the right-hand sliding door is inhibited from opening fully when the fuel filler flap is unlocked and open.*

Locks

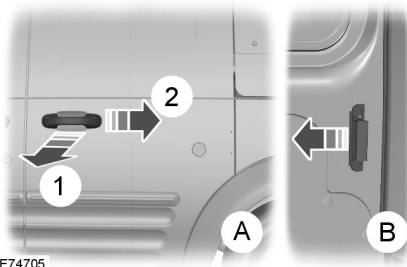

E74705

- A Outside
- B Inside


Double rear doors

WARNING



Close the rear doors properly to prevent them from opening while you are driving. Driving with the rear doors open is extremely dangerous as exhaust fumes can be drawn into the vehicle's interior.


Right-hand rear door

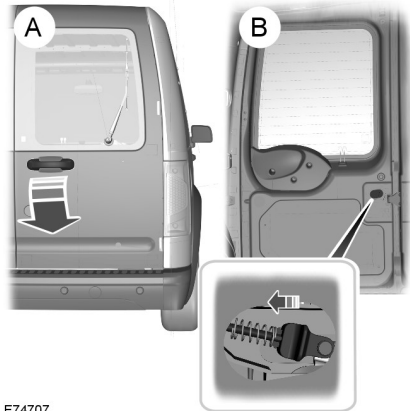

E74707

- A Outside
- B Inside


Left-hand rear door

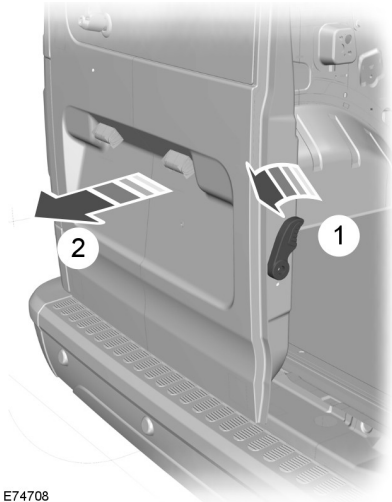

E74708

Locks

Opening the doors through 180 and 250 degrees

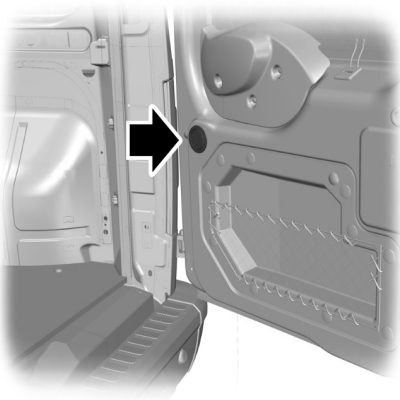

E74709

Push the yellow button located on the door. The check arms will automatically re-engage when the doors are closed.


Luggage compartment lid

WARNING



Close the luggage compartment lid properly to prevent it opening while you are driving. Driving with it open is extremely dangerous as exhaust fumes can be drawn into the vehicle's interior.

Note: To open the luggage compartment lid from inside, you can access the release button through an aperture at the bottom of the luggage compartment lid.

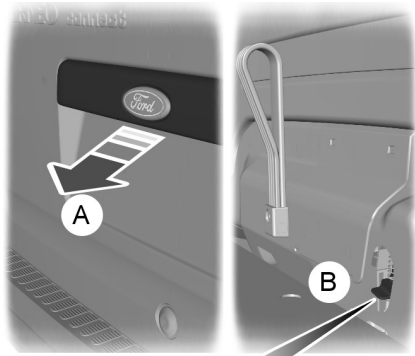

E66517

- A Outside
- B Inside

Engine immobiliser

PRINCIPLE OF OPERATION

The engine immobiliser is a theft protection system that prevents someone from starting the engine with an incorrectly coded key.

CODED KEYS

Note: *Do not shield your keys with metal objects. This may prevent the receiver from recognising your key as a valid one.*

Note: *Have all of your remaining keys erased and recoded if you lose a key. Ask your dealer for further information. Have replacement keys recoded together with your existing keys.*

If you lose a key, you can obtain a replacement from your Ford Dealer. If possible, provide them with the key number from the tag provided with the original keys. You can also obtain additional keys from your Ford Dealer.

ARMING THE ENGINE IMMOBILISER

The engine immobiliser is armed automatically a short time after you have switched the ignition off.

The indicator in the instrument cluster will flash to confirm that the system is operating.

DISARMING THE ENGINE IMMOBILISER

The engine immobiliser is disarmed automatically when you switch the ignition on with a correctly coded key.

The indicator in the instrument cluster will come on for approximately three seconds and then go out. If the indicator stays on for one minute or flashes for approximately one minute and then repeatedly at irregular intervals, your key has not been recognised. Remove the key and try again.

If you are unable to start the engine with a correctly coded key, this indicates a malfunction. Have the immobiliser checked immediately.

Alarm

PRINCIPLE OF OPERATION

The perimeter alarm is a deterrent against unauthorised access to your vehicle through the doors and the bonnet. It also protects the audio unit.

Note: *False alarms can also be triggered by the auxiliary heater. See **Auxiliary Heater** (page 67). If you are using the auxiliary heater, direct the air towards the footwell.*

Triggering the alarm

Once armed, the alarm is triggered in any of the following ways:

- If someone opens a door, the luggage compartment or the bonnet without a valid key or remote control.
- If the bonnet is opened with a valid key.
- If someone removes the audio or navigation system.

If the alarm is triggered, the alarm horn will sound for 30 seconds and the hazard warning flasher will flash for five minutes.

Any further attempts to perform one of the above will trigger the alarm again.

ARMING THE ALARM

To arm the alarm, lock the vehicle. See **Locks** (page 24).


DISARMING THE ALARM

Disarm and silence the alarm by unlocking either of the front doors or luggage compartment with the key.


Steering Wheel

ADJUSTING THE STEERING WHEEL

WARNING

 Never adjust the steering wheel when the vehicle is moving.

Note: Make sure that you are sitting in the correct position. See **Sitting in the Correct Position** (page 71).

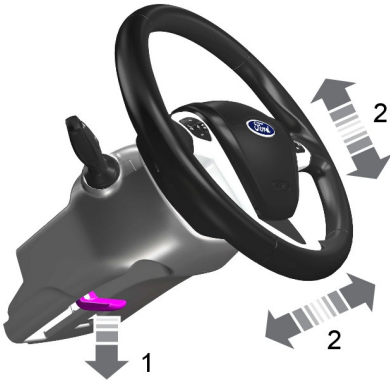


E95178



E95179



WARNING

 Make sure that you fully engage the locking lever when returning it to its original position.

AUDIO CONTROL

Select radio or CD mode on the audio unit. The following functions can be operated with the remote control:

Volume

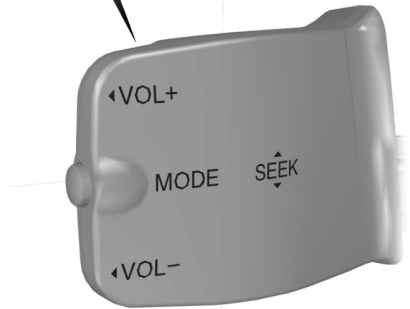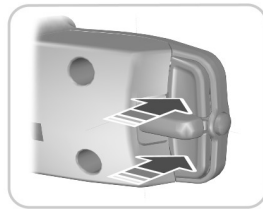


E116379

Volume up: Press the top button on the back of the remote control.

Volume down: Press the bottom button on the back of the remote control.

Steering Wheel

Seek

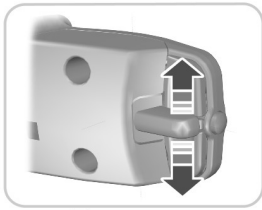


E116380

Move the lever up or down:

- In **radio mode**, this will locate the next radio station up or down the frequency band.
- In **CD mode**, it will select the next or previous track.

Mode

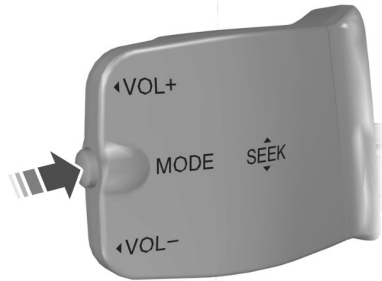

E116297

Briefly press the button on the side:

- In **radio mode**, this will locate the next pre-set radio station.
- In **CD mode**, this will select the next CD if a CD changer is fitted.
- In **all modes** to abort a traffic message during broadcasting.

Press and hold the button on the side:


- In **radio mode** to change the waveband.

VOICE CONTROL

For further information See **Voice control** (page 152).

To select or deselect voice control:


Steering Wheel

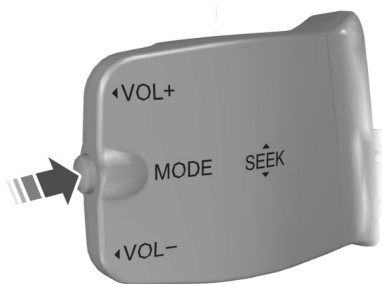

E116297

Wipers and Washers


WINDSCREEN WIPERS

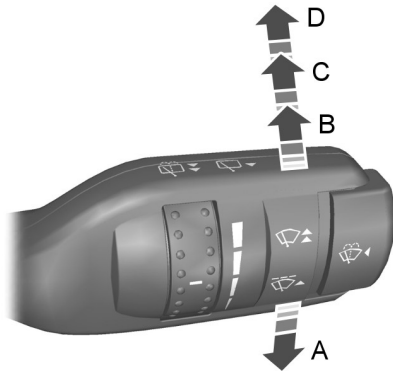

E71012

- A Single wipe
- B Intermittent wipe or autowipers
- C Normal wipe
- D High speed wipe

Intermittent wipe

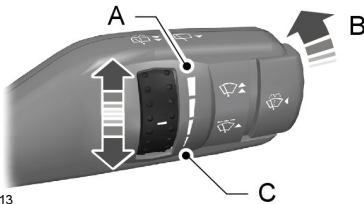


E71013

- A Long wipe interval
- B Intermittent wipe
- C Short wipe interval

AUTOWIPERS

CAUTIONS

- ! Do not switch autowipers on in dry weather conditions. The rain sensor is very sensitive and the wipers may operate if dirt, mist or flies hit the windscreen.
- ! Replace the wiper blades as soon as they begin to leave bands of water and smears. If you do not replace them, the rain sensor will continue to detect water on the windscreen and the wipers will operate, even though the majority of the windscreen is dry.
- ! Fully defrost the windscreen in icy conditions before you switch autowipers on.
- ! Switch autowipers off before you enter a car wash.

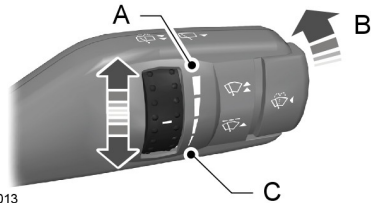

E71013

- A Low sensitivity
- B On
- C High sensitivity

If you switch autowipers on, the wipers will not cycle until water is detected on the windscreen. The rain sensor will then continuously measure the amount of water on the windscreen and adjust the speed of the wipers automatically.

Wipers and Washers

Adjust the sensitivity of the rain sensor using the rotary control. With low sensitivity, the wipers will operate when the sensor detects a lot of water on the windshield. With high sensitivity, the wipers will operate if the sensor detects a small amount of water on the windshield.

WINDSCREEN WASHERS



E71016

WARNING




Do not operate the washer for more than 10 seconds at a time, and never when the reservoir is empty.

While the button at the end of the lever is pressed the washer will work in conjunction with the wipers.

After releasing the button, the wipers operate for a short time.

REAR WINDOW WIPER AND WASHERS

Intermittent wipe

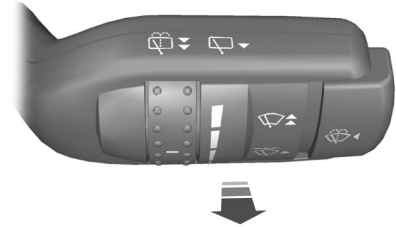

E71017

Pull the lever towards the steering wheel.

Reverse gear wipe


The rear wiper will be activated automatically when selecting reverse gear if:

- the rear wiper is not already switched on,
- the wiper lever is in position **A**, **B**, **C** or **D** and
- the front wiper is operating (when set to position **B**).

The rear wiper will follow the front wiper interval (at intermittent or normal speed).

Wipers and Washers

Rear window washer

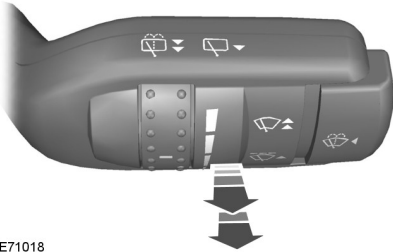

E71018

WARNING




Do not operate the washer for more than 10 seconds at a time, and never when the reservoir is empty.

While the lever is pulled towards the steering wheel the washer will work in conjunction with the wipers.

Once the wash and wipe cycle is completed, the wipers will pause and then perform one more wipe to clear the windscreen.

After releasing the lever, the wipers operate for a short time.

CHECKING THE WIPER BLADES

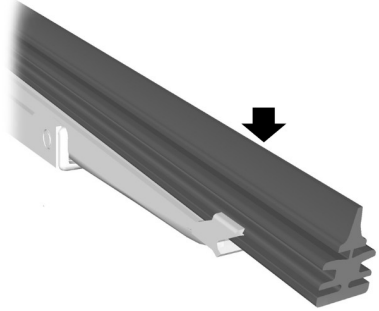


E66644

Run the tip of your fingers over the edge of the blade to check for roughness.




Clean the wiper blade lips with water applied with a soft sponge.

CHANGING THE WIPER BLADES

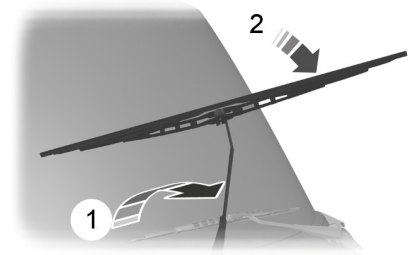

E93783

Wipers and Washers

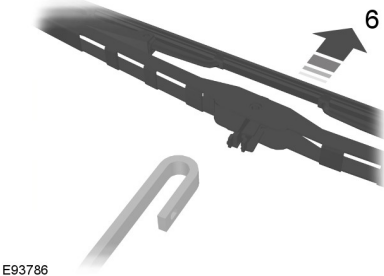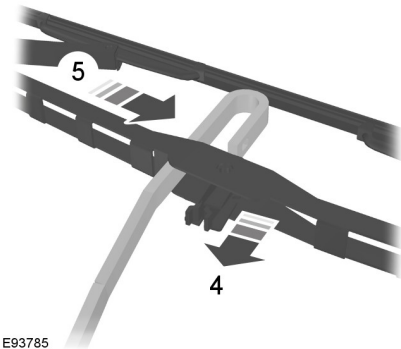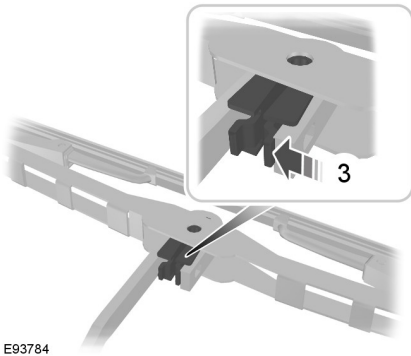


Install in the reverse order.

Lighting

LIGHTING CONTROL

Lighting control positions

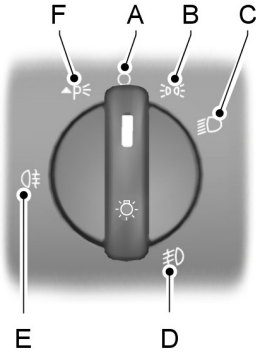

E71094


- A Off
- B Side and tail lamps
- C Headlamps
- D Front fog lamps
- E Rear fog lamps
- F Parking lamps

Parking lamps

First, switch off the ignition.

Push the lighting control inwards and turn it to position **F**.

Main and dipped beam

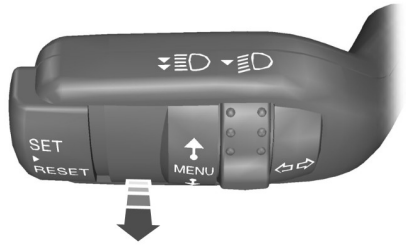

E71095

Pull the lever fully towards the steering wheel to switch between main and dipped beam.

Headlamp flasher

Pull the lever slightly towards the steering wheel.

Home safe lighting

You can switch home safe lighting on up to 10 minutes after you have switched the ignition off.

Vehicles without autolamps

Switch the headlamps on and then switch them off within two seconds.

Vehicles with autolamps

1. Switch autolamps **on** and then switch them **off** within two seconds.
2. Switch autolamps **off** and then switch them **on** within two seconds

All vehicles

The headlamps will go off automatically after 3 minutes with any door open, or 30 seconds after the last door has been closed.

Lighting

With all doors closed, but within the 30 second delay, opening any door will result in the 3 minute timer starting again.

The home safe lights can be cancelled by either turning the headlamp switch ON or by turning the ignition switch ON.

AUTOLAMPS

WARNING



In severe weather conditions, it may be necessary to switch your headlamps on manually.

Note: If you have switched autolamps on, you can only switch the main beam on when autolamps has switched the headlamps on.



E73840

The headlamps will come on and go off automatically depending on the ambient light.

FRONT FOG LAMPS



E71096

WARNING



Only use the front fog lamps when visibility is considerably restricted by fog, snow or rain.

Note: You cannot switch the front fog lamps on if you have switched autolamps on.

REAR FOG LAMPS



E71097

WARNING



Do not use the rear fog lamps when it is raining or snowing and visibility is more than 50 metres.

Note: You cannot switch the rear fog lamps on if you have switched autolamps on.

Lighting

HAZARD WARNING FLASHERS


Note: Depending on applicable laws and regulations in the country for which your vehicle was originally built, the hazard warning flashers may flash if you brake heavily.



For item location: See **At a Glance** (page 7).

HEADLAMP LEVELLING

All vehicles

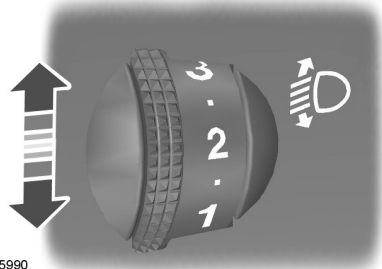

E65990

You can adjust the level of the headlamp beams according to the vehicle load.

Recommended headlamp levelling switch positions

Note: Higher control positions (+1) may be necessary when towing a trailer.

Transit Connect

Load		Control position
Persons	Load in luggage compartment ¹	
1	-	0
1	max. ²	2

¹When the vehicle is fitted with the attitude or ride height pack, headlamp levelling may need to be adjusted.

² See **Vehicle identification** (page 125).


Lighting

Tourneo Connect

Load			Control position		
Persons		Load in luggage compartment ¹	SWB 5 seats	LWB 5 seats	LWB 8 seats
Front	Rear				
1-2	-	-	0	0	0
2	3-6	-	1	1	1
2	3-6	max. ¹	1.5	1.5	1.5
1	-	max. ¹	2.5	2	1.5

¹ See **Vehicle identification** (page 125).


DIRECTION INDICATORS

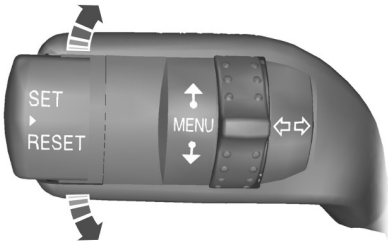

E71098

Note: Tap the lever up or down to make the direction indicators flash only three times.

INTERIOR LAMPS

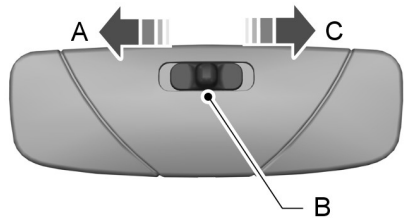

E72170

- A Off
- B Door contact
- C On


If you set the switch to position **B**, the courtesy lamp will come on when you unlock or open a door or the tailgate. If you leave a door open with the ignition switch off, the courtesy lamp will go off automatically after some time to prevent the vehicle battery from discharging. To switch it back on, switch on the ignition for a short time.

Lighting

The courtesy lamp will also come on when you switch off the ignition. It will go off automatically after a short time or when you start or restart the engine.

If you set the switch to position **C** with the ignition switch off, the courtesy lamp will come on. It will go off automatically after a short time to prevent the vehicle battery from discharging. To switch it back on, switch on the ignition for a short time.

Reading lamps

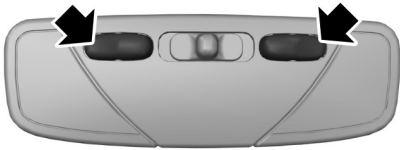

E72171

CHANGING A BULB

WARNINGS



Switch the lights and the ignition off.



Let the bulb cool down before removing it.

CAUTIONS



Do not touch the glass of the bulb.





Only fit bulbs of the correct specification. See **Bulb Specification Chart** (page 47).

Note: When replacing a bulb, clean the headlamp lens with a damp cloth to avoid any electrostatic charging, which attracts dust to the plastic lens.

Note: The following instructions describe how to remove the bulbs. Fit replacements in the reverse order unless otherwise stated.

Headlamp

Direction indicator

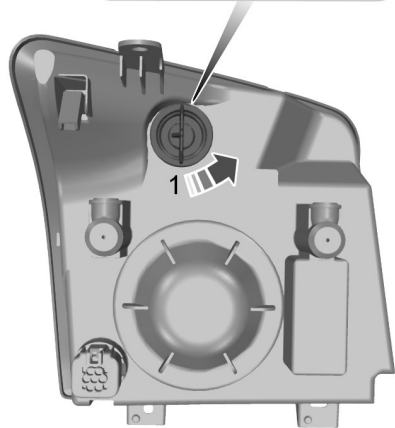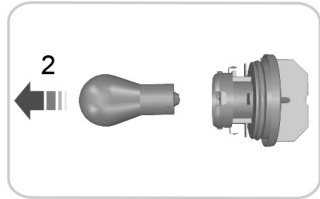


E76059

1. Turn the bulb holder anti-clockwise and remove it.
2. Gently press the bulb into the bulb holder, turn it anti-clockwise and remove it.

Lighting

Headlamp main and dipped beam

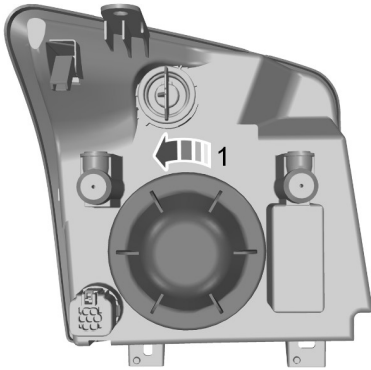


E76060

Note: When installing the cover, make sure the arrow faces up.

1. Turn the cover anti-clockwise and remove it.


Side lamp

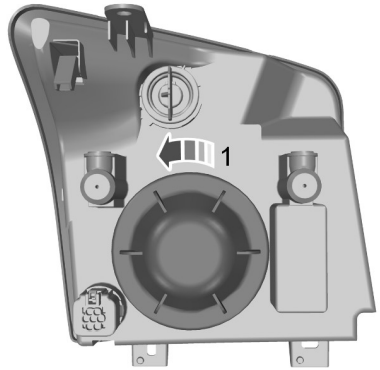

E76060



Note: When installing the cover, make sure the arrow faces up.

1. Turn the cover anti-clockwise and remove it.

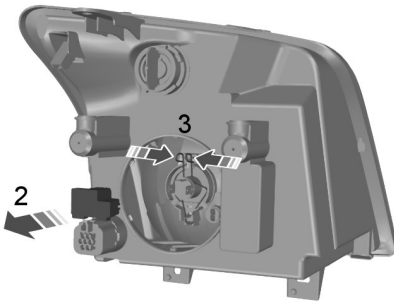

E76062

 2. Disconnect the electrical connector.
3. Release the clip and remove the bulb.

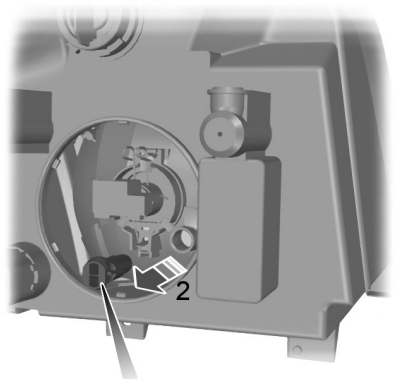


E76061

2. Remove the bulb and the bulb holder.

Lighting

3. Remove the bulb.


Side repeaters

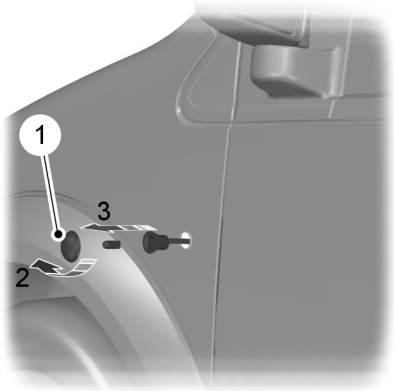

E76063

1. Carefully remove the side repeater.
2. Hold the bulb holder, turn the housing anti-clockwise and remove it.
3. Remove the bulb.

Front fog lamps

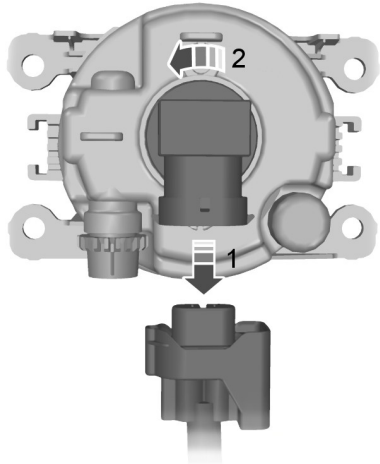

E76064


Note: You cannot separate the fog lamp bulb from the bulb holder.

Note: You can access the lamp from behind the front bumper.


1. Disconnect the electrical connector.
2. Turn the bulb holder anti-clockwise and remove it.

Lighting

Rear lamps

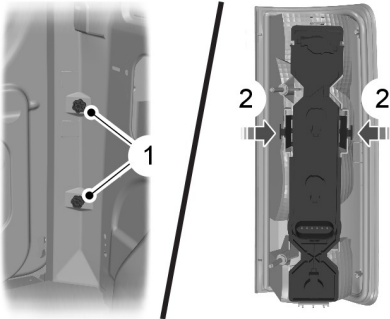

E76065

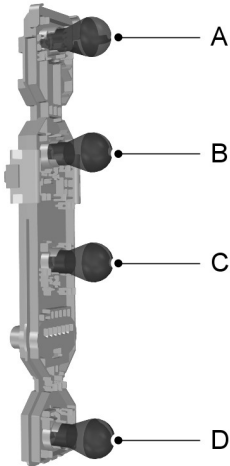



E76066

- A Tail and brake lamp
- B Direction indicator
- C Reversing lamp
- D Fog lamp

1. Remove the wing nuts.

2. Remove the rear lamp and unclip the bulb holder.
3. Gently press the bulb into the bulb holder, turn it anti-clockwise and remove it.

Central high mounted brake lamp

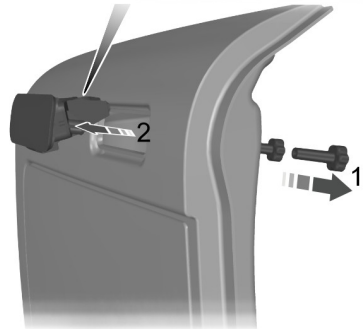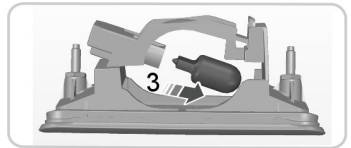


E76067

1. Remove the screws.
2. Remove the lamp.
3. Remove the bulb.

Lighting

Number plate lamp


Vehicles with double rear doors

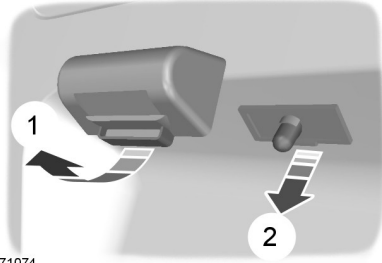

E71074

1. Remove the lens.
2. Remove the bulb.

Vehicles with a tailgate

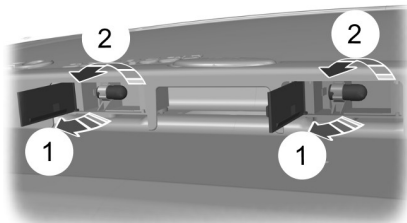


E71075

1. Open the lens.
2. Gently press the bulb into the bulb holder, turn it anti-clockwise and remove it.


Interior lamp

Front

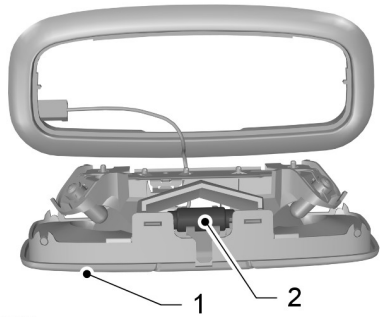

E76068


Rear

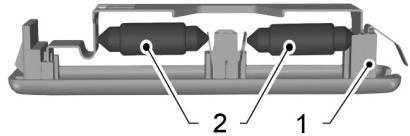

E76070

1. Carefully prise out the lamp.
2. Remove the bulb.

Reading lamps

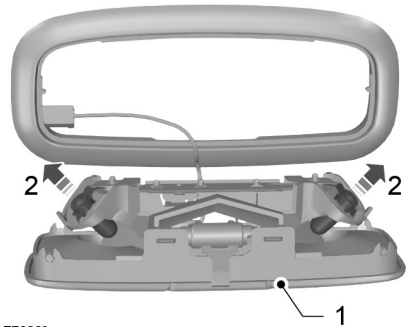

E76069

Lighting

1. Carefully prise out the lamp.
2. Remove the bulb.

BULB SPECIFICATION CHART

Lamp	Specification	Power (watt)
Headlamp main and dipped beam	H4	55/60
Front fog lamp	H11	55
Front direction indicator	PY21W	21
Side lamp	W5W	5
Side repeater	WY5W	5
Brake and tail lamp	P21/5W	21/5
Central high mounted brake lamp	W16W	16
Rear direction indicator	PY21W LL	21
Rear fog lamp	P21W	21
Number plate lamp (vehicles with a tailgate)	R10W	10
Number plate lamp (vehicles with double rear doors)	W5W	5
Reversing lamp	P21W	21
Interior lamp	Festoon	10
Reading lamp	H6W	6

Windows and Mirrors


POWER WINDOWS

WARNING



Do not operate the electric windows unless they are free from obstruction.

Note: *If you operate the switches often during a short period of time, the system might become inoperable for a certain time to prevent damage due to overheating.*

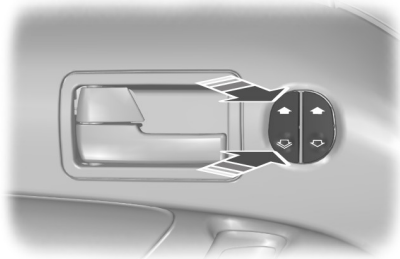

E93505

Switch on the ignition to operate the electric windows.

To open the driver's window automatically

Press the switch to the second action point and release it. Press it again to stop the window.

EXTERIOR MIRRORS

WARNING



Do not overestimate the distance of the objects that you see in the convex mirror. Objects seen in convex mirrors will appear smaller and further away than they actually are.

Manual folding mirrors


Folding

Push the mirror towards the door window glass.

Unfolding


Make sure that you fully engage the mirror in its support when returning it to its original position.

ELECTRIC EXTERIOR MIRRORS

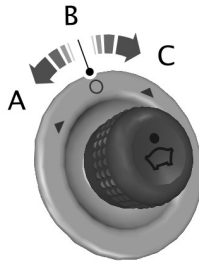

E71280

- A Left-hand mirror
- B Off
- C Right-hand mirror

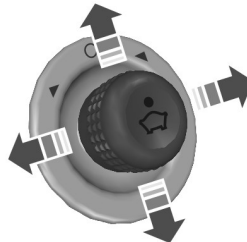

E71281

Windows and Mirrors

The electric exterior mirrors are fitted with a heating element that will defrost or demist the mirror glass. See **Climate Control** (page 63).

The auto-dimming mirror will adjust automatically when hit by glaring light from behind. It will not work when you have selected reverse gear.


REAR QUARTER WINDOWS



E66498

Pull the lever outwards to open the window. Press the lever in the middle to engage it in its catch. Pull the lever in the middle to close the window. Push it backwards until it engages in its catch.

AUTO-DIMMING MIRROR

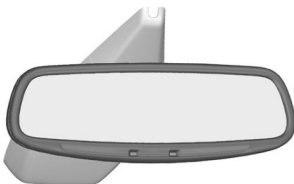


E71028

Instrument Cluster

GAUGES

Type 1

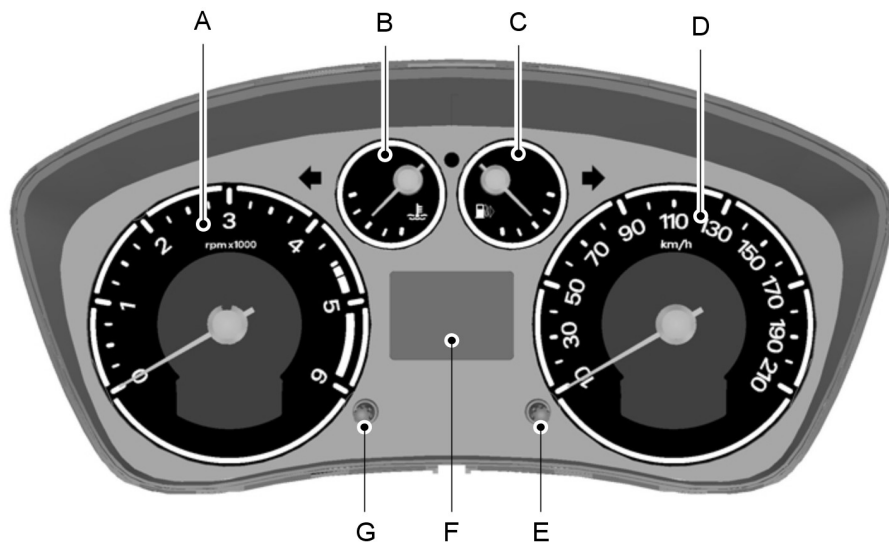


E74268

- A Tachometer
- B Engine coolant temperature gauge
- C Fuel gauge
- D Speedometer
- E Clock set button
- F Information display
- G Tripmeter reset button

Instrument Cluster

Type 2

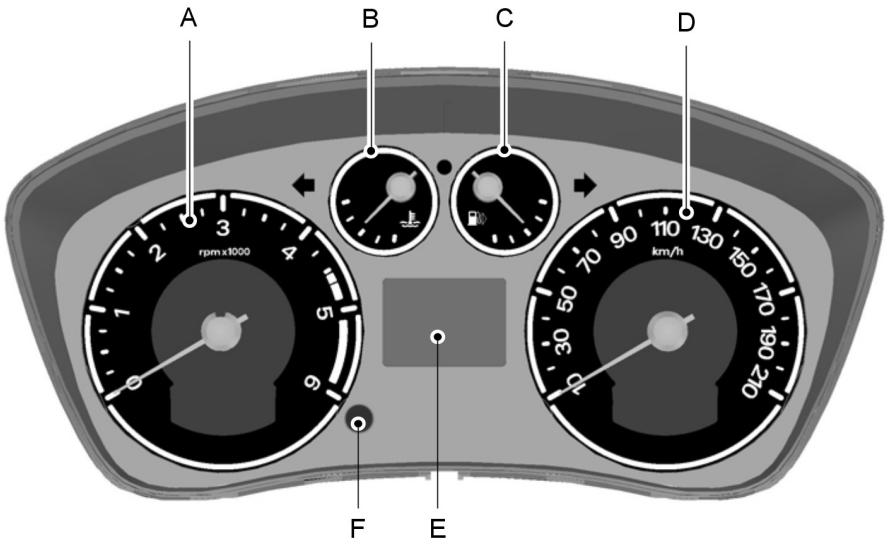

E115885

- A Tachometer
- B Engine coolant temperature gauge
- C Fuel gauge
- D Speedometer
- E Information display
- F Message indicator

Engine coolant temperature gauge

All vehicles

Shows the temperature of the engine coolant. At normal operating temperature, the needle will remain in the centre section.

CAUTION

- ! Do not restart the engine until the cause of overheating has been resolved.

Instrument Cluster

If the needle enters the red section, the engine is overheating. Stop the engine, switch the ignition off and determine the cause **once the engine has cooled down**.

Vehicles with an information display

In addition, a warning message will appear in the display.

Fuel gauge

The arrow adjacent to the fuel pump symbol tells you on which side of your vehicle the fuel filler cap is located.

WARNING LAMPS AND INDICATORS

The following warning lamps and indicators will come on briefly when you switch the ignition on to confirm that the system is operational:

- ABS
- Airbag
- Brake system
- Engine
- Engine immobiliser
- Ignition
- Low fuel level
- Oil pressure
- Service interval
- Shift
- Stability control (ESP) and traction control
- Water-in-fuel

If a warning or indicator lamp does not illuminate when the ignition is switched on, this indicates a malfunction. Have the system checked by a properly trained technician.

ABS warning lamp



If a warning or indicator lamp does not illuminate when the ignition is switched on, this indicates a malfunction. Have the system checked by properly trained technician.

Airbag warning lamp



If it illuminates when driving, this indicates a malfunction. Have the system checked by a properly trained technician.

Brake system warning lamp



It illuminates when the parking brake is engaged.

WARNING



Reduce your speed gradually and stop your vehicle as soon as it is safe to do so. Use your brakes with care.

If it illuminates when you are driving, check that the parking brake is not engaged. If the parking brake is not engaged, this indicates a malfunction. Have the system checked by a properly trained technician immediately.

Direction indicator



Flashes during operation. A sudden increase in the rate of flashing warns of a failed

indicator bulb. See **Changing a Bulb** (page 42).

Door open warning lamp



It will illuminate when you switch the ignition on if you have not closed the doors, the bonnet or tailgate properly.

Instrument Cluster

Engine warning lamps

Malfunction indicator lamp



Powertrain warning lamp



All vehicles

If either lamp illuminates when the engine is running, this indicates a fault. The engine will continue to run but it may have limited power. If it flashes when you are driving, **reduce the speed of your vehicle immediately**. If it continues to flash, avoid heavy acceleration or deceleration. Have the system checked by a properly trained technician immediately.

WARNING



Have this checked immediately.

If **both** lamps illuminate together, **stop your vehicle as soon as it is safe to do so** (continued use may cause reduced power and cause the engine to stop). Turn the ignition off and attempt to restart the engine. If the engine restarts have the system checked by a properly trained technician immediately. If the engine does not restart the vehicle must be checked before continuing your journey.

Front fog lamp indicator



It will illuminate when you switch the front fog lamps on.

Glow plug indicator



See **Starting a Diesel Engine** (page 81).

Headlamp indicator



It will illuminate when you switch the headlamp dipped beam or the side and tail lamps on.

Ignition warning lamp

WARNING



If the charging system drive belt on the diesel engines is loose, torn or broken, the servo assistance for the braking system also no longer operates.



If it illuminates whilst driving, this indicates a malfunction. Switch off all unnecessary electrical equipment. Have the system checked by a properly trained technician immediately.

Low fuel level warning lamp



If it illuminates, refuel as soon as possible.

The arrow adjacent to the fuel pump symbol tells you on which side of your vehicle the fuel filler cap is located.

Main beam indicator



Illuminates when you switch the headlamp main beam on. It will flash when you use the headlamp flasher.

Message indicator

It will illuminate when a new message is stored in the information display. See **Information Messages** (page 60).

Instrument Cluster

Oil pressure warning lamp

CAUTION



Do not resume your journey if the oil pressure warning lamp comes on despite the oil level being correct.

Have the system checked by a properly trained technician immediately.



If the lamp stays on after starting or illuminates during a journey, this indicates a malfunction.

Stop your vehicle as soon as it is safe to do so and switch the engine off. Check the engine oil level. See **Engine Oil Check** (page 109). Top up straight away if the level is low.

Rear fog lamp indicator



It will illuminate when you switch the rear fog lamps on.

Service interval indicator



It will illuminate when a service is due or there is excessive soot or sludge in the oil. Have the engine oil changed as soon as possible.

Your dealer will switch the service interval indicator lamp off for you after completing the service.

Seat belt reminder



See **Seat belt reminder** (page 20).

Shift indicator



It will illuminate for a short period of time to inform you that shifting to a higher gear may give better fuel economy and lower CO₂ emissions. It will not illuminate during periods of high acceleration, braking or when the clutch pedal is pressed.

Stability control (ESP) and traction control warning lamp

Note: *If either the ESP system or traction control system malfunctions, the respective system will switch off automatically.*



It will flash when either system is operating. If it does not flash or it comes on when you are driving, this indicates a malfunction. Have the system checked by a properly trained technician immediately.

If you switch ESP off, the warning lamp will come on. The lamp will go out when you switch the system back on or when you switch the ignition off.

Water-in-fuel indicator

Vehicles with a diesel engine



It will illuminate if there is excess water in the fuel filter. Have the system checked by a properly trained technician immediately.

AUDIBLE WARNINGS AND INDICATORS

Door open

A warning tone will sound if the vehicle exceeds a relatively low speed and you have not closed the doors or the bonnet properly.

Instrument Cluster

Frost

WARNING



Even if the temperature rises to above +4°C there is no guarantee that the road is free of hazards caused by inclement weather.

A warning chime will sound in the following conditions:

- +4°C or lower: frost warning
- 0°C or lower: danger of icy roads

Lights on

A warning tone will sound if the driver's door is opened when the lights are on and the ignition is switched off.

Low fuel

A warning chime will sound at the following ranges: 80 km (50 miles), 40 km (25 miles), 20 km (12 miles), 0 km (0 miles).

Information Displays

GENERAL INFORMATION

WARNING




Do not operate the information display controls when the vehicle is moving.

Note: *The information display will remain on for several minutes after you switch off the ignition.*


Various systems on your vehicle can be controlled using the multi-function lever on the steering column. Corresponding information is displayed in the information display.

Controls

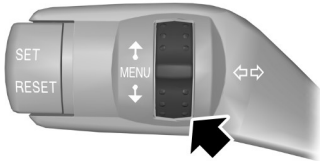

E73265

Use the rotary control:

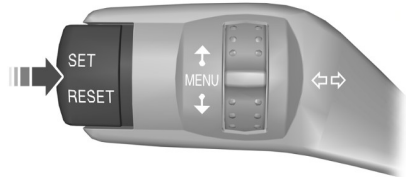

E73266


Press the **SET/RESET** button to:

- enter the main menu from the trip computer displays
- enter a sub-menu
- exit a menu
- choose and confirm a setting
- reset trip computer function.

Note: *If the chimes are activated, a short tone will sound each time the button is pressed.*

Information Displays

Menu structure

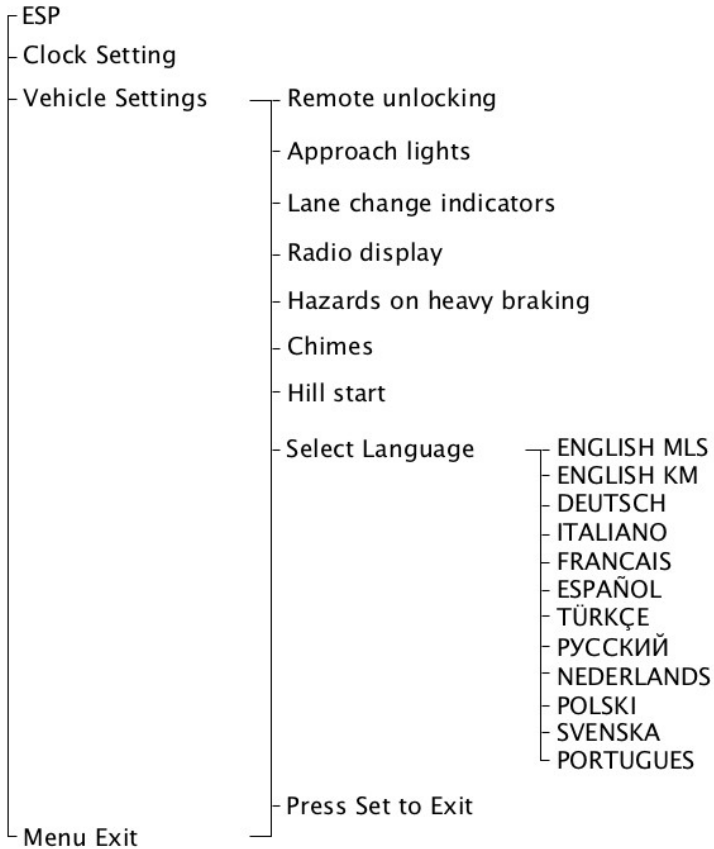

E116081

Information Displays

TRIP COMPUTER

Type 1 information display



E91003

- A Distance to empty or clock
- B Tripmeter
- C Odometer
- D Clock set button
- E Trip meter reset button

Setting the time



E91004

Note: You can only set the time through the audio unit on some vehicles. See separate handbook.

1. Press the clock set button until the time flashes in the display.
2. Press the clock set button to set the time.

Type 2 information display



E115886

- A Clock, radio station or CD track
- B Outside air temperature
- C Tripmeter
- D Odometer
- E Message indicator

You can change the settings of various functions through the information display. The information display also provides information messages. See **Information Messages** (page 60).

Odometer

Registers the total mileage of the vehicle.

Tripmeter

Registers the mileage of individual journeys.

Information Displays

Distance to empty

Indicates the approximate distance the vehicle will travel on the fuel remaining in the tank. Changes in driving pattern may cause the value to vary.

Average fuel consumption

Indicates the average fuel consumption since the function was last reset.

Average speed

Indicates the average speed calculated since the function was last reset.


Outside air temperature

Shows the outside air temperature.

Menu

Enters the main menu. See **General Information** (page 56).

The trip computer includes the following information displays:

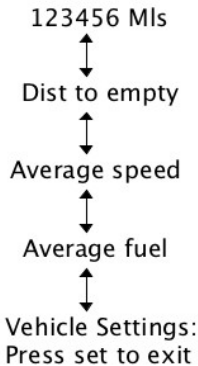

E116080

Use the rotary control to scroll through the trip computer displays.

Note: The position of the trip computer display may vary depending on the information shown in the display.

PERSONALISED SETTINGS

1. Use the rotary control to enter the main menu.
2. Press the **SET/RESET** button to choose a sub-menu and adjust the settings.

ESP

Select this option to activate or deactivate ESP.

1. Use the rotary control to enter the main menu.
2. Highlight **ESP** and press the **SET/RESET** button.
3. Use the **SET/RESET** button to highlight the desired setting.
4. Use the rotary control to return to **Menu Exit**.
5. Press the **SET/RESET** button to exit the menu.

Clock setting

1. Use the rotary control to enter the main menu.
2. Highlight **Clock setting** and press the **SET/RESET** button.
3. Highlight **Clock setting** and press the **SET/RESET** button. The hours start to flash.
4. Use the rotary control to adjust the hours to the desired setting.
5. Press the **SET/RESET** button to confirm the setting. The minutes start to flash.
6. Proceed in the same way to set the minutes and the date.

Information Displays


7. Press the **SET/RESET** button to confirm the setting.
8. Press the **SET/RESET** button to exit the menu.

Vehicle settings


Language settings, chimes, approach lights, lane change indicators, radio display, hazards on heavy braking, remote unlocking, hill start.

1. Use the rotary control to enter the main menu.
2. Highlight **Vehicle Settings** and press the **SET/RESET** button.
3. Highlight the desired menu and press the **SET/RESET** button.
4. Highlight the desired setting and press the **SET/RESET** button to confirm the setting.
5. Use the rotary control to return to **Vehicle Settings**.
6. Press the **SET/RESET** button twice to exit the menus.

INFORMATION MESSAGES

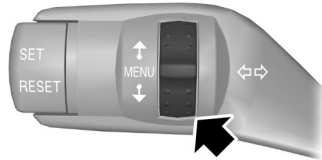

E73265

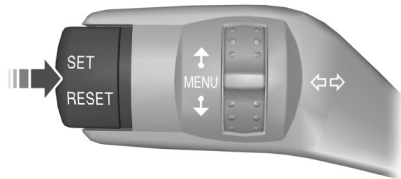

E73266

Press the **SET/RESET** button to acknowledge and remove some messages from the information display. Other messages will be removed automatically after a short time.

Certain messages need to be confirmed before you can access the menus.

Message indicator

The message indicator illuminates to supplement some messages. It will be red or amber depending on the severity of the message and will remain on until the cause of the message has been rectified.

Information Displays

Doors open

Message	Warning lamp	System
Driver door open	Red	Locks. Vehicle is moving. Stop the vehicle as soon as safely possible and close.
Passenger door open	Red	Locks. Vehicle is moving. Stop the vehicle as soon as safely possible and close.
Bonnet open	Red	Locks. Vehicle is moving. Stop the vehicle as soon as safely possible and close.
Sliding doors open	Red	Locks. Vehicle is moving. Stop the vehicle as soon as safely possible and close.
Rear door open	Red	Locks. Vehicle is moving. Stop the vehicle as soon as safely possible and close.

Hill start assist

Message	Warning lamp	System
Please use parkbrake	red	Apply the parking brake.
Hill start assist active	amber	Hill start assist active. See Hill Start Assist (page 90).
Hill start assist off	amber	Hill start assist disabled. See Hill Start Assist (page 90).
Hill start assist not available	amber	Hill start assist not available. See Hill Start Assist (page 90).

Information Displays

Lighting

Message	Warning lamp	System
Left indicator bulb failure	amber	A left-hand side indicator bulb has failed. See Changing a Bulb (page 42).
Right indicator bulb failure	amber	A right-hand side indicator bulb has failed. See Changing a Bulb (page 42).
Auto lamp / wiper failure	amber	Autolamps or autowipers have malfunctioned. Have the system checked by a properly trained technician as soon as possible.

Maintenance

Message	Warning lamp	System
High engine temperature	red	Cooling system.
Engine malfunction	red	Engine. Stop the vehicle as soon as safely possible and switch off the engine immediately. Have the system checked by a properly trained technician immediately.
Remote key battery low	amber	The remote control battery is low. Have this checked as soon as possible.

Stability control (ESP)

Message	Warning lamp	System
ESP malfunction	amber	Stability control (ESP). Have your vehicle checked by a properly trained technician.

Climate Control


PRINCIPLE OF OPERATION

Outside air

Keep the air intakes forward of the windscreen free from obstruction (snow, leaves etc.) to allow the climate control system to function effectively.

Recirculated air

CAUTION

 Prolonged use of recirculated air may cause the windows to mist up. If the windows mist up, follow the settings for defrosting and demisting the windscreen.

The air currently in the passenger compartment will be recirculated. Outside air will not enter the vehicle.

Heating

Heating performance depends on the temperature of the engine coolant.

Air conditioning


Note: The air conditioning operates only when the temperature is above 4°C.

Note: If you use the air conditioning, the fuel consumption of your vehicle will be higher.

Air is directed through the evaporator where it is cooled. Humidity is extracted from the air to help keep the windows free of mist. The resulting condensation is directed to the outside of the vehicle and it is therefore normal if you see a small pool of water under your vehicle.

Fresh air filter

CAUTION

 Switch off the blower when using an automatic car wash.

The fresh air filter removes most potentially harmful particles such as pollen, industrial fallout and road dust from the air entering the vehicle's interior.

AIR VENTS



E71942

HEATED WINDOWS AND MIRRORS

Heated windows

Use the heated windows to defrost or demist the windscreen or rear window.

Note: The heated windscreen operates only when the engine is running.

Heated windscreen



Heated rear window



The indicator in the switch will illuminate when the system is on.

Press the switch again to switch off. It will switch off automatically after a short time.

Climate Control


Heated exterior mirrors

Electric exterior mirrors are fitted with a heating element that will defrost or demist the mirror glass. They will switch on automatically when you switch the heated rear window on.

MANUAL CLIMATE CONTROL

Blower

Note: If you switch the blower off, the windscreen may mist up.

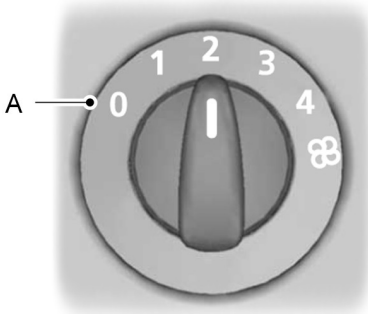

E75470

A Off

Temperature control




E74658

Air distribution control

Note: A small amount of air is always directed towards the windscreen.

Climate Control

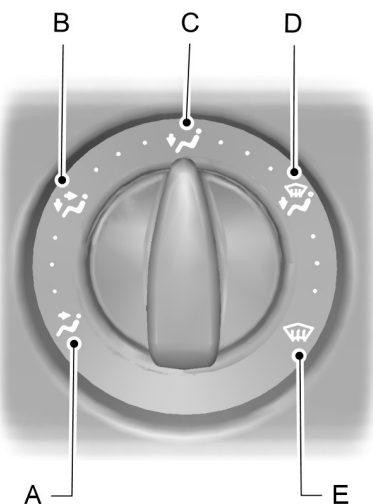

E74660

- A Face level
- B Face level and footwell
- C Footwell
- D Footwell and windscreen
- E Windscreen

Recirculated air



Press the button to toggle between outside air and recirculated air.

Rapid heating of vehicle interior



E74662

Ventilation



E74663

Set the air distribution control to position **A** or **B**. Set the blower to any position. Open the air vents to suit individual requirements.

Defrosting and demisting the windscreen

Note: *Recirculated air is switched off automatically.*



E74664

If necessary, switch the heated windows on. See **Heated Windows and Mirrors** (page 63).

Climate Control

Air conditioning

Switching the air conditioning on and off

Note: For the air conditioning to operate the engine must be running.

A/C

Press the **A/C** switch to turn the air conditioning on and off. The indicator in the switch will come on when the air conditioning is operating.

If you turn the blower off, the air conditioning will turn off. When you turn the blower on again, the air conditioning will come on automatically.

Cooling with outside air



E74667

Switch the air conditioning on.


Cooling the interior quickly



E74668

Switch on the air conditioning and recirculated air.

Defrosting and demisting the windscreen

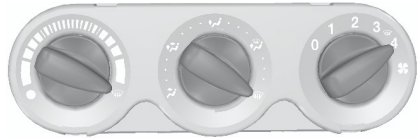

E74666

Set the air distribution control to position **E** and select outside air.

When the temperature is above 4 °C, the air conditioning will switch on automatically. Make sure the blower is on.

If you move the air distribution control to a position other than **E**, the **A/C** will return to its previous setting.

You can not switch the air conditioning and recirculated air on and off while the air distribution control is set to position **E**.

If necessary, switch the heated windows on. See **Heated Windows and Mirrors** (page 63).

Reducing interior air humidity



E74669

Set the air distribution control to position **D** and switch on the air conditioning.

Climate Control

AUXILIARY HEATER

General information

WARNINGS



Do not operate the programmable fuel fired heater at filling stations, near sources of combustible vapours or dust or in enclosed spaces.



Do not refuel when the programmable fuel fired heater display is on.

Note: *The programmable fuel fired heater will switch off automatically when the battery voltage is low.*

Note: *All symbols on the display will flash if the power to the programmable fuel fired heater has been interrupted. The heater will not operate under these circumstances. Re-set the clock time.*

Note: *The programmable fuel fired heater will shut down in the event of a malfunction. Have the system checked by an expert.*

Observe the following information:

- Switch the programmable fuel fired heater on for approximately 10 minutes at least once a month, all year round. This prevents the water pump and heater motor from seizing.
- To avoid corrosion, make sure the coolant in your vehicle contains at least 10 % antifreeze all year round.
- Make sure the coolant level is between the **MAX** and **MIN** marks on the reservoir to prevent air locks. See **Engine Coolant Check** (page 110).

- Programmable blower operation begins when the coolant reaches a certain temperature. In this mode, ambient temperature has no effect.
- In continuous heater operation, the unit senses the ambient temperature. If this is above 5°C (41°F) the programmable fuel fired heater will not activate.

The programmable fuel fired heater operates independently of the vehicle heater by heating the engine's coolant circuit. It is fed from the vehicle fuel tank. It may also be used while the vehicle is in motion to help the vehicle heater warm up the interior more quickly.

It is possible that when the programmable fuel fired heater is activated, exhaust fumes may come from under the sides of the vehicle. This is normal.

Principle of operation

Before operation

CAUTION




Turning the blower switch to a position other than position one will reduce battery life or even flatten the battery.

Before activating or programming the heater, prepare the following settings:

- Set the vehicle heater temperature control to maximum.
- Turn the blower switch to position one.
- Switch on the recirculated air before turning the ignition off. Wait at least five seconds for the ventilation system to close the outside air vents.
- Open all the cabin air vents.

Climate Control


Setting the clock time

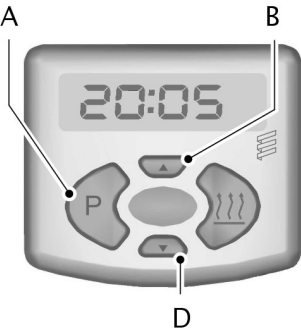

E71347


Press and hold button **A** for more than three seconds, until the time flashes in the display. Within five seconds, press buttons **B** and **D** to set the time. To adjust the time rapidly, press and hold the respective button.

Setting the heating duration

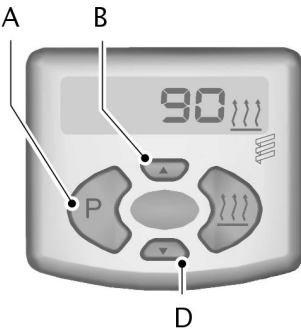

E71348

CAUTION

 The recommended setting is 30 minutes. Longer durations will reduce battery life or even flatten the battery.

Note: The heating duration for pre-set times and the timed heating mode can be set between 10 and 120 minutes.

Press and hold button **A** for more than three seconds, until the time flashes in the display. Wait for five seconds until the heating symbol appears and the heating time flashes.


Press buttons **B** and **D** to adjust the heating duration.

After setting the heating duration, press button **A**. The display will show the clock time with the colon flashing.

Switching off the heater

Press the heating symbol button. The heater will operate for an additional three minutes, and then stop. The display will then show the clock time.

Timed heating mode

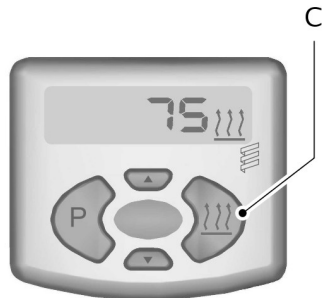


E71349

The heater may be switched on to heat for the pre-set duration at any time. Press button **C**. The display will light up and show the remaining heating time and the heating symbol.

Climate Control

Continuous heater operation

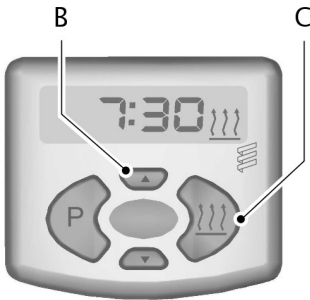

E71350

WARNING



The heater will continue to operate after the ignition is switched off. Switch the heater off to avoid unnecessary heating.


Press and hold button **B**. Press button **C**. The heater will now operate until button **C** is pressed again. The display will light up and show the clock time and the heating symbol.

Programmable heating mode

The heater will come on automatically at the activated pre-set start time, and will stay on for the programmed duration. The display will light up and show the remaining heating duration and the heating symbol.

You can program up to three different pre-set start times.

Programming the pre-set heating start times

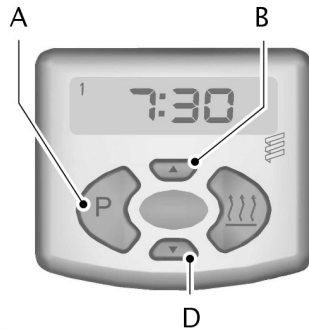

E71351

Press button **A** repeatedly, until the symbol (**1**, **2** or **3**) for the desired pre-set time is displayed. Press buttons **B** and **D** to set the time. To adjust the time rapidly, press and hold the respective button.

After programming the pre-set start times press button **A**. The display will show the clock time with the colon flashing.

Activating and deactivating pre-set start times




E71352

Climate Control

Press button **A** repeatedly, until the symbol (**1**, **2** or **3**) for the desired pre-set time is displayed. Press button **C**. The **ON** symbol will appear in the display. To deactivate a pre-set time, press button **C** again.

Seats

SITTING IN THE CORRECT POSITION

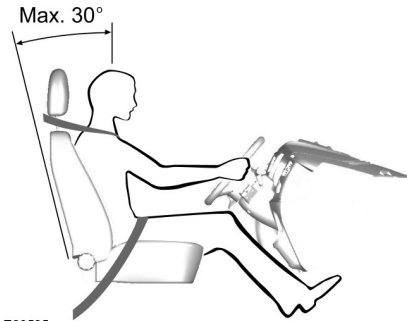

E68595

WARNINGS



Do not adjust the seats when the vehicle is moving.



Only when you use the seat belt properly, can it hold you in a position that allows the airbag to achieve its optimum effect.

When you use them properly, the seat, head restraint, seat belt and airbags will provide optimum protection in the event of a collision. We recommend that you:

- sit in an upright position with the base of your spine as far back as possible.
- do not recline the seatback more than 30 degrees.
- adjust the head restraint so that the top of it is level with the top of your head and as far forwards as possible, remaining comfortable.
- keep sufficient distance between yourself and the steering wheel. We recommend a minimum of 250 millimetres (10 inches) between your breastbone and the airbag cover.
- hold the steering wheel with your arms slightly bent.

- bend your legs slightly so that you can press the pedals fully.
- position the shoulder strap of the seat belt over the centre of your shoulder and position the lap strap tightly across your hips.

Make sure that your driving position is comfortable and that you can maintain full control of your vehicle.

FRONT SEATS

WARNING



Do not adjust the seats while the vehicle is moving.

Moving the seats backwards and forwards



E74816

WARNING



Rock the seat backwards and forwards after releasing the lever to make sure that it is fully engaged in its catch.

Seats

Adjusting the lumbar support



E74817



E80778

Adjusting the height of the seat

Adjusting the angle of the seatback



E74818



E74819

Seats

Adjusting the armrest



E74820

Transit Connect



E74821

Folding the front passenger seat


WARNINGS



Make sure that the seats and the seatbacks are secure and fully engaged in their catches.




Do not place objects on the seatback when the vehicle is moving.

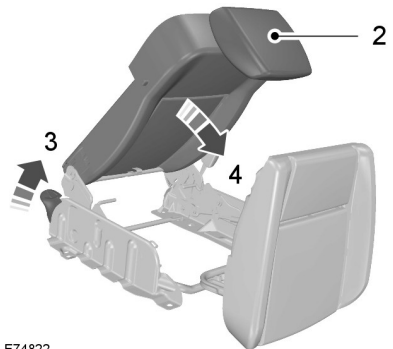

E74822

Seats

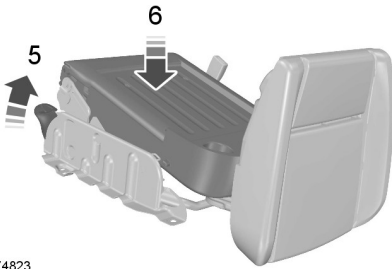

E74823

1. Pull the release strap and fold the seat cushion forwards.
2. Fold the head restraint forwards.
3. Pull the release lever.
4. Fold the seatback forwards.
5. Pull the release lever.
6. Push the seatback down.

HEAD RESTRAINTS



E75767



E81584

Adjusting the head restraint

WARNING



Raise rear head restraint when the rear seat is occupied by a passenger or a child restraint.

Adjust the head restraint so that the top of it is level with the top of your head.

Removing the head restraint

Press the locking buttons and remove the head restraint.

REAR SEATS

WARNINGS






Do not use the bench seats as a bed when the vehicle is moving.



Make sure that the seats and the seatbacks are secure and fully engaged in their catches.


Seats

WARNINGS

-  Make sure the red indicator is not showing when you engage the seat rear legs and the third row seatback catches.
-  Do not place objects on a folded seat.
-  Do not pull on the second row seat when the entire seat is folded forwards.


Folding a single seatback forwards

Second row

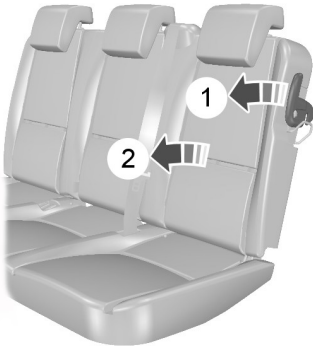

E74829


Third row

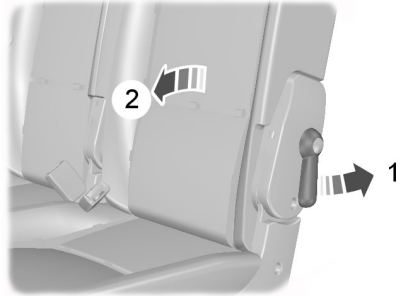

E74830


Folding the entire seat forwards

Second row

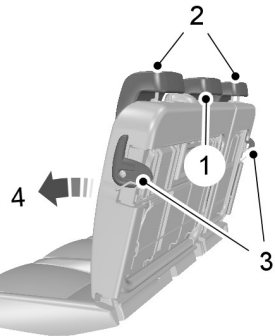

E74832


Seats

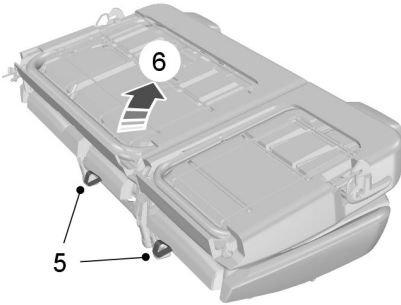


E74833

1. Remove the centre head restraint.
2. Fully lower the outer head restraints.
3. Pull the levers on the side of the seatback.
4. Fold the seatback forwards.
5. Pull the release straps down.
6. Fold the seat forwards.

Third row

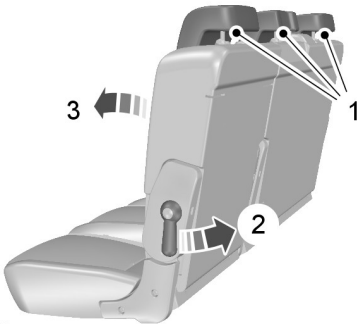

E74845

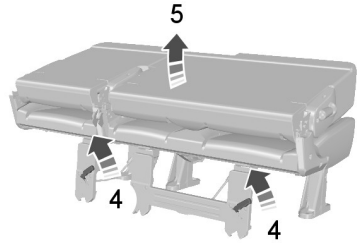


E74846


1. Fully lower the head restraints.
2. Pull the levers on the side of the seatback.
3. Fold the seatback forwards.
4. Pull the locking levers up.
5. Fold the seat forwards.

Returning the seat to the upright position

WARNING

 When folding the seatbacks up, make sure that the belts are visible to an occupant and not caught behind the seat.

Second row

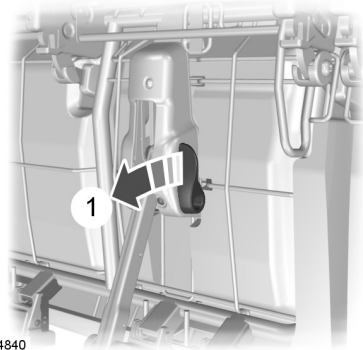


E74840

Seats

1. Pull the locking levers down.
2. Fold the seat down.
3. Raise the seatback.
4. Install the centre head restraint.

Third row

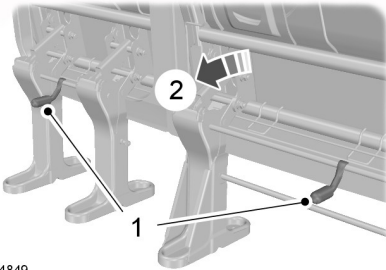


E74849

1. Push the release levers down.
2. Fold the seat down.
3. Raise the seatback.

HEATED SEATS

CAUTION

 Operating this function with the engine off will drain the battery.



E75768


The seat heating will operate only when the ignition is switched on.

The maximum temperature is reached after five or six minutes. It is regulated thermostatically.

The seat heating will remain on until either the heated seat switch or the ignition is turned off.


Convenience features

INSTRUMENT LIGHTING DIMMER

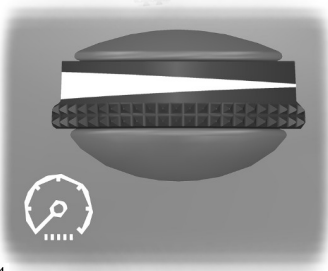


E70454

CIGAR LIGHTER

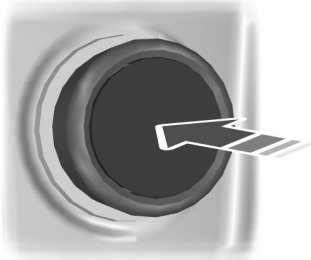

E78055

WARNING

 Never hold the lighter in as this will result in damage. Always remove the lighter as a precaution when children are left alone in the vehicle.


To use the lighter, press it in and wait until it pops out automatically. The lighter will also operate when the ignition is switched off.

Other appliances can be connected to the cigar lighter power point.


When connecting appliances, use only specified connectors from the Ford Accessory range or connectors for use with SAE standard sockets.

AUXILIARY POWER POINTS


CAUTION

 If you use the socket when the engine is not running, the battery may discharge.

Note: You can use the socket to power 12 volt appliances that have a maximum current rating of 10 Amperes. Use only Ford accessory connectors or connectors specified for use with SAE standard sockets.

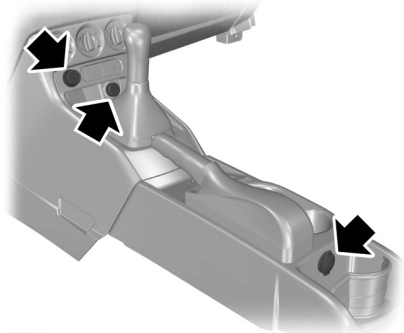

E116341

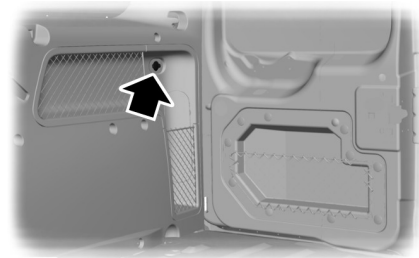


E74677

Convenience features


CUP HOLDERS


WARNING

 Do not place hot drinks in the cup holders when the vehicle is moving.

Seat back trays

WARNING

 Do not use the trays when the vehicle is moving. Make sure that you secure the trays in the lowered position before setting off.

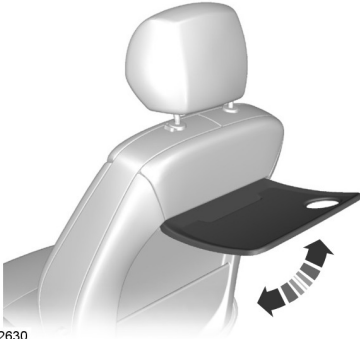


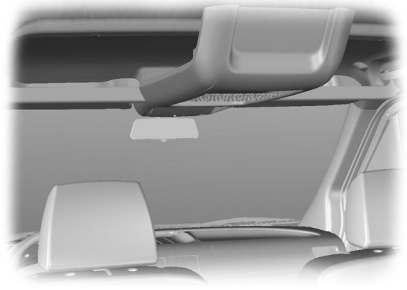
E72630

STORAGE COMPARTMENTS

Overhead storage compartment


WARNING

 Do not place heavy objects in the overhead storage compartment.




E74681

Seat storage

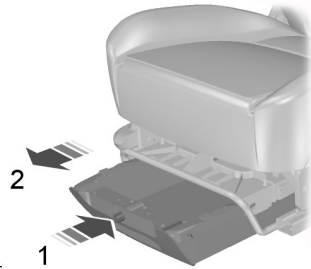


E74685

MAP POCKETS

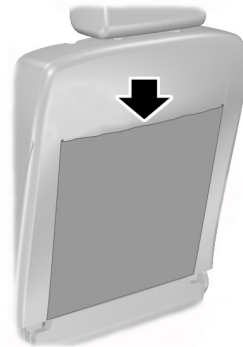

E74686

Convenience features

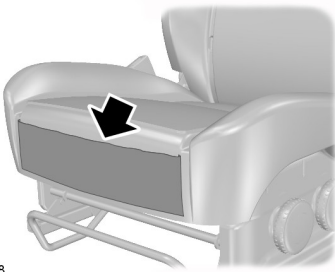

E80718

AUXILIARY INPUT SOCKET



E115675

See separate audio instructions.

FLOOR MATS

WARNING



When using the floor mats, always make sure the floor mat is properly secured using the appropriate fixings and positioned so that it does not interfere with the operation of the pedals.

Starting and Stopping the Engine

GENERAL INFORMATION

General points on starting

If the battery has been disconnected the vehicle may exhibit some unusual driving characteristics for approx. 8 kilometres (5 miles) after reconnecting the battery.

This is because the engine management system must realign itself with the engine. Any unusual driving characteristics during this period may be disregarded.

Starting the engine by towing or pushing

WARNING



To prevent damage you must not push or tow start your vehicle. Use booster cables and a booster battery.

See **Jump-Starting the Vehicle** (page 116).

IGNITION SWITCH

WARNING



Never return the key to position **0** or **I** when the vehicle is in motion.



E72128

0 The ignition is off.

I The ignition and all main electrical circuits are disabled.

Note: Do not leave the ignition key in this position for too long to avoid discharging the battery.

II The ignition is switched on. All electrical circuits are operational. Warning lamps and indicators illuminate. This is the key position when driving. You must also select it when being towed.

III The starter motor is activated. Release the key as soon as the engine starts.

STARTING A DIESEL ENGINE

Cold or hot engine

Note: When the temperature is below -15°C (5°F), you may need to crank the engine for up to 25 seconds. If you consistently operate the vehicle in such temperatures, we recommend that you have an engine block heater fitted.

Note: Continue cranking the engine until it starts.

Note: You can only operate the starter for a maximum of 30 seconds at a time.



Switch the ignition on and wait until the glow plug indicator goes off.

Note: Do not touch the accelerator pedal.

1. Fully depress the clutch pedal.
2. Start the engine.

SWITCHING OFF THE ENGINE

Vehicles with a turbocharger

CAUTION



Do not switch the engine off when it is running at high speed. If you do, the turbocharger will continue running after the engine oil pressure has dropped to zero. This will lead to premature turbocharger bearing wear.

Starting and Stopping the Engine

Release the accelerator pedal. Wait until the engine has reached idle speed and then switch it off.

DIESEL PARTICULATE FILTER

The DPF forms part of the emissions reduction systems fitted to your vehicle. It filters harmful diesel particulates (soot) from the exhaust gas.

Regeneration

WARNING



Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The DPF regeneration process creates very high exhaust gas temperatures and the exhaust will radiate a considerable amount of heat during and after DPF regeneration, and after you have switched the engine off. This is a potential fire hazard.

CAUTION



Avoid running out of fuel.

Note: *During regeneration at low speed or engine idle, you may smell a hot metallic odour and could notice a clicking metallic sound. This is due to the high temperatures reached during regeneration and is normal.*

Note: *After you have switched your engine off the fans may continue to run for a short period of time.*

Unlike a normal filter which requires periodic replacement, the DPF has been designed to regenerate, or clean itself to maintain operating efficiency. The regeneration process takes place automatically. However, some driving conditions mean that you may need to support the regeneration process.


If you drive only short distances or your journeys contain frequent stopping and starting, where there is increased acceleration and deceleration, occasional trips with the following conditions will assist the regeneration process:


- Drive your vehicle at a constant speed, preferably on a main road or motorway, for up to 20 minutes.
- Avoid prolonged idling and always observe speed limits and road conditions.
- Do not switch off the ignition.
- Use a lower gear than normal to maintain a higher engine speed during this journey, where appropriate.

Fuel and Refuelling

SAFETY PRECAUTIONS


WARNINGS

 Stop refuelling after the fuel nozzle stops the second time. Additional fuel will fill the expansion space in the fuel tank which could lead to fuel overflowing. Fuel spillage could be hazardous to other road users.



 Do not use any kind of flames or heat near the fuel system. The fuel system is under pressure. There is a risk of injury if the fuel system is leaking.

FUEL QUALITY - DIESEL

WARNING

 Do not mix diesel with oil, petrol or other liquids. This could cause a chemical reaction.

CAUTIONS

-  Do not add kerosene, paraffin or petrol to diesel. This could cause damage to the fuel system.
 -  Use diesel that meets the specification defined by **EN 590**, or the relevant national specification.
-

Note: We recommend that you use only high quality fuel.

Note: The use of additives or other engine treatments not approved by Ford is not recommended.


Note: We do not recommend the prolonged use of additives intended to prevent fuel waxing.

Long-term storage

Most diesel fuels contain bio-diesel, it is recommended to fill the tank with purely mineral diesel (where available) or add an anti-oxidant prior to long-term storage of your vehicle exceeding two months. Your dealer can help you with a suitable anti-oxidant.






CATALYTIC CONVERTER

WARNING

 Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The exhaust will radiate a considerable amount of heat during use, and after you have switched the engine off. This is a potential fire hazard.

Driving with a catalytic converter

CAUTIONS


-  Avoid running out of fuel.
 -  Do not crank the engine for long periods.
 -  Do not run the engine when a spark plug lead is disconnected.
 -  Do not push-start or tow-start your vehicle. Use booster cables. See **Jump-Starting the Vehicle** (page 116).
 -  Do not switch the ignition off when driving.
-


Fuel and Refuelling

FUEL FILLER FLAP


All vehicles

WARNINGS

 Take care when refuelling to avoid spilling any residual fuel from the fuel pipe nozzle.

 We recommend that you wait at least 10 seconds before removing the fuel pipe nozzle to allow any residual fuel to drain into the fuel tank.

Note: When you remove the filler cap, a hissing noise may be heard. This is normal and should be disregarded.

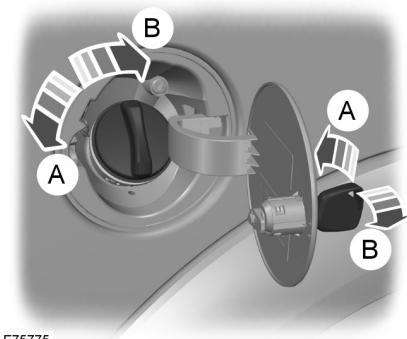

E75775

- A Open
- B Close


TECHNICAL SPECIFICATIONS

Tourneo Connect

Note: The sliding door is inhibited from opening fully when the fuel filler flap is unlocked and open.

REFUELLING

CAUTION

 Do not attempt to start the engine if you have filled the fuel tank with the incorrect fuel. This could damage the engine. Have the system checked by a properly trained technician immediately.

FUEL CONSUMPTION

The CO₂ and fuel consumption figures are derived from laboratory tests according to EEC Directive 80/1268/EEC and subsequent amendments and are carried out by all vehicle manufacturers.

They are intended as a comparison between makes and models of vehicles. They are not intended to represent the real world fuel consumption you may get from your vehicle. Real world fuel consumption is governed by many factors including; driving style, high speed driving, stop/start driving, air conditioning usage, the accessories fitted and towing etc.

Your Ford dealer can give you advice on improving your fuel consumption.

Fuel and Refuelling

Tourneo and Kombi Connect


Fuel Consumption Figures

Variant	Urban	Extra-Urban	Combined	CO2 Emissions
	l/100 km (mpg)	l/100 km (mpg)	l/100 km (mpg)	g/km
1.8 l Duratorq-TDCi Turbo diesel (75 PS), Stage IV, Axle ratio: 4.06	7.8 (36.2)	5.5 (51.4)	6.3 (44.8)	167
1.8 l Duratorq-TDCi Turbo diesel (90 PS), Stage IV, Axle ratio: 4.06	7.9 (35.8)	5.5 (51.4)	6.4 (44.1)	168
1.8 l Duratorq-TDCi Turbo diesel (110 PS), Stage IV, Axle ratio: 3.80	7.6 (37.2)	5.2 (54.3)	6.0 (47.1)	159

Transmission


MANUAL TRANSMISSION

CAUTION

 Do not engage reverse gear when the vehicle is moving. This can cause damage to the transmission.

Note: *Fully depress the clutch pedal and wait for three seconds before you select first gear.*

Selecting reverse gear

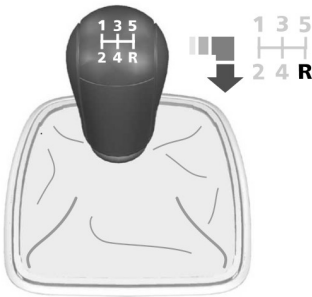

E72455

Brakes

PRINCIPLE OF OPERATION

Disc brakes

Wet brake discs result in reduced braking efficiency. Dab the brake pedal when driving from a car wash to remove the film of water.

ABS

WARNING



The ABS does not relieve you of your responsibility to drive with due care and attention.

The ABS helps you to maintain full steering and directional stability when you brake heavily in an emergency, by preventing the road wheels from locking.

HINTS ON DRIVING WITH ANTI-LOCK BRAKES


Note: *When the system is operating, the brake pedal will pulse and may travel further. Maintain pressure on the brake pedal. You may also hear a noise from the system. This is normal.*

The ABS will not eliminate the risks when:

- you drive too close to the vehicle in front of you
- the vehicle is aquaplaning
- you take corners too fast
- the road surface is poor.

PARKING BRAKE

Applying the parking brake

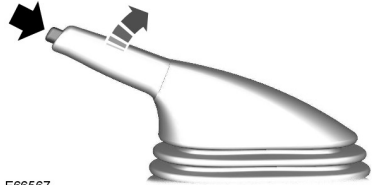

E66567

WARNING



Make sure that the parking brake is applied before you release the lever.

Note: *Do not press the release button when you apply the parking brake.*

1. Press the brake pedal firmly.
2. Pull the parking brake lever upwards to its fullest extent.

Parking on a hill

If you have to park facing uphill, select first gear and turn the front wheels away from the kerb. If you have to park facing downhill, select reverse gear and turn the front wheels towards the kerb.

Releasing the parking brake

1. Press the brake pedal firmly.
2. Pull the parking brake lever upwards slightly, press the release button and push the lever downwards.

Stability Control

PRINCIPLE OF OPERATION

Electronic stability programme (ESP)

WARNING



The system does not relieve you of your responsibility to drive with due care and attention.

Stability control (ESP) warning lamp

While driving, it flashes during activation of the system. See **Warning Lamps and Indicators** (page 52).

Emergency brake assist

WARNING




The system does not relieve you of your responsibility to drive with due care and attention.

The system will detect when you brake heavily by measuring the rate at which you press the brake pedal. It will provide maximum braking efficiency as long as you press the pedal. The system can reduce stopping distances in critical situations.

USING STABILITY CONTROL

Note: *The system will be switched on automatically every time you switch the ignition on.*

To turn the system off and on. See **Personalised Settings** (page 59).

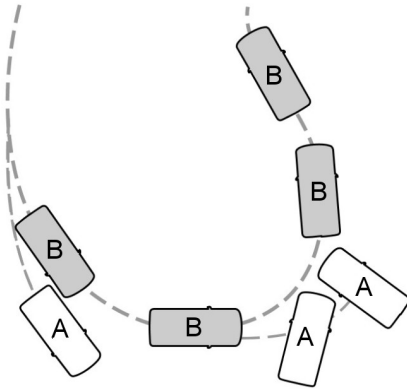

E72903

- A Without ESP
- B With ESP

The system supports stability when the vehicle starts to slide away from your intended path. This is performed by braking individual wheels and reducing engine torque as needed.

The system also provides an enhanced traction control function by reducing engine torque if the wheels spin when you accelerate. This improves your ability to pull away on slippery roads or loose surfaces, and improves comfort by limiting wheel spin in hairpin bends.

Traction Control

PRINCIPLE OF OPERATION

The traction control system improves traction when one wheel starts to spin at vehicle speeds up to 40 km/h (25 mph). If a wheel starts to spin, the traction control system varies the pressure to the brake of that wheel until it stops spinning.

USING TRACTION CONTROL

The traction control system is operational when you switch the ignition on.

The traction control indicator will flash when the system is operating. Slowly accelerate until the spinning wheel regains its traction.

The traction control system will stop working temporarily if used excessively within a short period of time. This is normal and has no effect on the brake system.

Hill Start Assist

PRINCIPLE OF OPERATION

The system makes it easier to pull away when the vehicle is on a slope without the need to use the parking brake.

When the system is active, the vehicle will remain stationary on the slope for a short time after you release the brake pedal. During this time, you have time to move your foot from the brake to the accelerator pedal and pull away. The brakes are released automatically once the engine has developed sufficient drive to prevent the vehicle from rolling down the slope. This is an advantage when pulling away on a slope, for example from a car park ramp, traffic lights or when reversing uphill into a parking space.

WARNING



The system does not replace the parking brake. When you leave the vehicle, always apply the parking brake and select first or reverse gear.

USING HILL START ASSIST

The system is activated automatically when the vehicle is stopped on a slope greater than 3%. The system operates with the vehicle facing downhill if reverse gear is selected and with the vehicle facing uphill if any forward gear is selected.

Activating the system

WARNINGS



You must remain in the vehicle once you have activated the system.



The system is active only if the green lamp illuminates in the instrument cluster. During all times you are responsible for controlling the vehicle, supervising the system and intervening, if required.

You can activate the system only if the following conditions have been met:

- The engine is running.
- The parking brake is fully disengaged.
- No failure mode is present.

To activate the system:

Make sure the system is enabled via the trip control menu. See **Information Displays** (page 56).

1. Press the brake and clutch pedals to bring the vehicle to a complete standstill. Keep the brake and clutch pedals depressed.
2. If the sensors detect that the vehicle is on a slope the system will be activated automatically and the green lamp will illuminate in the instrument cluster.
3. When you remove your foot from the brake pedal, the vehicle will remain on the slope without rolling away for approximately two to three seconds. This hold time will automatically be extended if you are in the process of driving off.
4. Drive off in the normal manner. The brakes will be released automatically.

WARNING



If the engine is revved excessively, or if a malfunction is detected when the system is active, the system will be deactivated and the green lamp will go out.

Deactivating the system

To deactivate the system, perform **one** of the following:

- Apply the parking brake.
- Drive off uphill without re-applying the brake.
- Wait for two to three seconds until the system deactivates automatically.

Hill Start Assist

- If the system is active in a forward gear, select reverse gear.
- If the system is active in neutral, release the clutch pedal.
- If the system is active in reverse gear, select neutral.

The green lamp will go out.

Disabling the system

See **Information Displays** (page 56).

Parking Aids

PRINCIPLE OF OPERATION

WARNING

- ⚠ The parking aid does not relieve you of your responsibility to drive with due care and attention.

CAUTIONS

- ⚠ Vehicles fitted with a trailer tow module not approved by us may not correctly detect obstacles.
- ⚠ The sensors may not detect objects in heavy rain or other conditions that cause disruptive reflections.
- ⚠ The sensors may not detect objects with surfaces that absorb ultrasonic waves.
- ⚠ The parking aid does not detect obstacles moving away from the vehicle. They will only be detected shortly after they start to move towards the vehicle again.
- ⚠ Take particular care when reversing with a tow ball arm or rear fitted accessories e.g. a bicycle carrier, as the rear parking aid will only indicate the distance from the bumper to the obstacle.
- ⚠ If you use a high pressure spray to wash your vehicle, only spray the sensors briefly from a distance not less than 20 centimetres (8 inches).

Note: On vehicles fitted with a tow ball arm, the parking aid is deactivated automatically when any trailer lamps (or lighting boards) are connected to the 13-pin socket via a trailer tow module we have approved.

Note: Keep the sensors free from dirt, ice and snow. Do not clean with sharp objects.


Note: The parking aid may emit false tones if it detects a signal using the same frequency as the sensors or if the vehicle is fully laden.

Note: The outer sensors may detect the side walls of a garage. If the distance between the outer sensor and the side wall remains constant for three seconds, the tone will switch off. As you continue, the inner sensors will detect rearward objects.

PARKING AID

WARNING

- ⚠ The parking aid does not relieve you of your responsibility to drive with due care and attention.

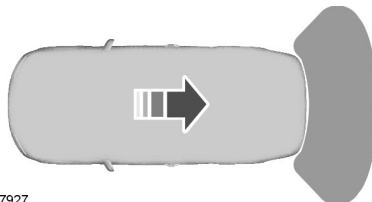

E77927

The parking aid is automatically activated when you select reverse gear with the ignition switched on.






You will hear an intermittent tone at a distance of approximately 150 centimetres (59 inches) between the obstacle and rear bumper and approximately 50 centimetres (20 inches) to the side. Decreasing the distance accelerates the intermittent tone. A continuous tone will start at a distance of less than 30 centimetres (11 inches) to the rear bumper.

Note: If a high pitch tone is heard for three seconds, this indicates a malfunction. The system will be disabled. Have the system checked by a properly trained technician.




Load Carrying

GENERAL INFORMATION

WARNINGS

-  Use load securing straps to an approved standard, e.g. DIN.
-  Make sure that you secure all loose items properly.
-  Place luggage and other loads as low and as far forward as possible within the luggage or loadspace.
-  Do not drive with the tailgate or rear door open. Exhaust fumes may enter the vehicle.
-  Do not exceed the maximum front and rear axle loads for your vehicle. See **Vehicle identification** (page 125).


 
CAUTIONS

-  Do not allow items to contact the rear windows.
-  Do not use any abrasive materials to clean the interior of the rear windows.
-  Do not install stickers or labels to the interior of the rear windows.


ROOF RACKS AND LOAD CARRIERS


Roof rack

WARNINGS

-  If you use a roof rack, the fuel consumption of your vehicle will be higher and you may experience different driving characteristics.
-  Read and follow the manufacturer's instructions when you are fitting a roof rack.

CAUTION

-  Do not exceed the maximum permissible roof load of 100 kilogrammes (220 pounds) (including the roof rack).

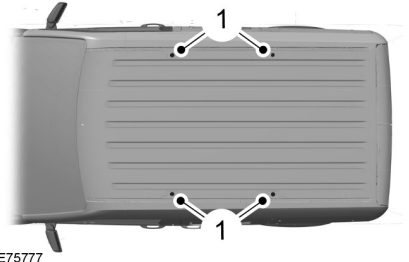

E75777



- 1 Attachment points

Check the security of the roof rack and tighten its fittings as follows:

- before starting
- after driving 50 kilometres (30 miles)
- at 1 000 kilometres (600 miles) intervals.

CARGO NETS

CAUTIONS

-  Do not exceed the maximum permissible cargo net load of 9.5 kilogrammes.
-  Make sure that the telescopic bars are securely positioned in the trim panels.

Load Carrying



E81954

The 3 telescopic bars can be moved to allow up to 5 cargo net positions.

TOWING A TRAILER

WARNING



Do not exceed the maximum gross train weight stated on the vehicle identification plate. See **Vehicle identification** (page 125).

CAUTION



Do not exceed the maximum permissible nose weight, i.e. vertical weight on the tow ball, of 75 kilogrammes (165 pounds).

Note: *Not all vehicles are suitable or approved to have tow bars fitted. Check with your dealer first.*

Place loads as low and central to the axle(s) of the trailer as possible. If you are towing with an unladen vehicle, the load in the trailer should be placed toward the nose, within the maximum nose load, as this gives the best stability.

The stability of the vehicle to trailer combination is very much dependant on the quality of the trailer.

In high altitude regions above 1 000 metres (3 281 feet), the stipulated maximum permitted gross train weight must be reduced by 10% for every additional 1 000 metres (3 281 feet).

Steep gradients

WARNING



The overrun brake on a trailer is not controlled by ABS.

Change down a gear before you reach a steep downhill gradient.

Driving Hints

RUNNING-IN

Tyres

WARNING



New tyres need to be run-in for approximately 500 kilometres (300 miles). During this time, you may experience different driving characteristics.

Brakes and clutch

WARNING



Avoid heavy use of the brakes and clutch if possible for the first 150 kilometres (100 miles) in town and for the first 1500 kilometres (1000 miles) on motorways.

Engine

CAUTION



Avoid driving too fast during the first 1500 kilometres (1000 miles). Vary your speed frequently and change up through the gears early. Do not labour the engine.

COLD WEATHER PRECAUTIONS

The functional operation of some components and systems can be affected at temperatures below -30°C (-22°F).

Roadside Emergencies

FIRST AID KIT


Space is provided under the driver's seat.

WARNING TRIANGLE

Space is provided in the left-hand side wall of the load area.

Fuses


FUSE BOX LOCATIONS

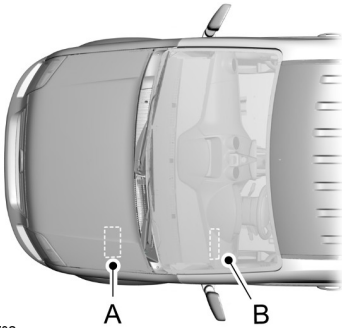

E75782

- A Engine compartment fuse box
- B Central fuse box

Engine compartment fuse box

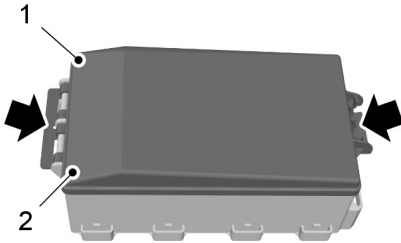

E75785

WARNING



Have MAXI fuses (Fuses 1–9 in the auxiliary fuse box) replaced by a properly trained technician.


To remove the lid, release the clip and the hinge on the sides and lift the lid off. When replacing the lid, press down on both sides of the hinge (positions **1** and **2**) to ensure it is closed properly.

Central fuse box

Left-hand drive



E75783

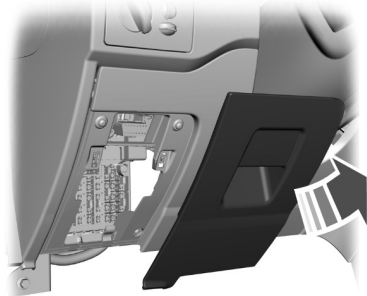

E75784


Right-hand drive



E75786

Fuses

1. Press the sides inwards and allow the glove box to pivot downwards.

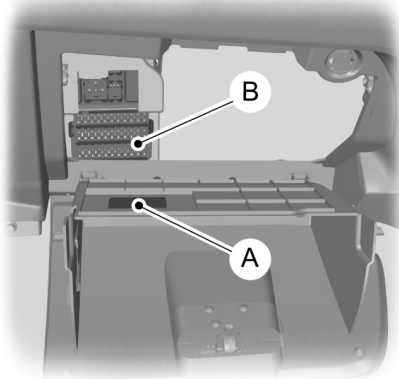



E75787

- A Fuse chart label
- B Fuses


CHANGING A FUSE

WARNINGS

 Do not modify the electrical system of your vehicle in any way. Have repairs to the electrical system and the replacement of relays and high current fuses carried out by a properly trained technician.

 Switch the ignition and all electrical equipment off before touching or attempting to change a fuse.

CAUTION

 Fit a replacement fuse with the same rating as the one you have removed.

Note: You can identify a blown fuse by a break in the filament.


Note: All fuses, except high current fuses, are a push fit.

Note: A fuse puller is located in the engine compartment fuse box.

FUSE LABELS

The fuse chart label located on the rear side of the panel trim will help you identify the fuses. Depending on the vehicle variant the necessary fuses and relays may vary.

The fuse chart label shows rectangles representing a fuse or relay. The following information is shown in the rectangles:

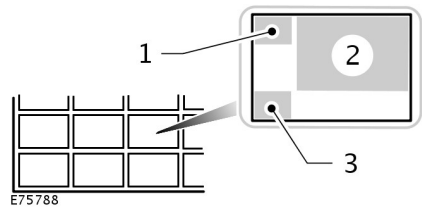

- 1 Number of the fuse
- 2 Symbol of the function
- 3 Ampere rating of the fuse

Fuses

FUSE SPECIFICATION CHART

Engine compartment fuse box

Fuse	Ampere rating	Circuits protected
1	40	Central fuse box
2	30	Double cooling fan - secondary fuse
3	30	Central fuse box
4	60	Heated windscreen
5	40	Single cooling fan - primary fuse
5_A	50	Double cooling fan - primary fuse
6	60	Glow plugs
7	40	Central fuse box
8	20	Ignition switch
9	20	Engine control module
10	10	Battery voltage sense, data link connector
11	20	Fuel fired heater
12	20	Starter solenoid
13	30	ABS pump
14	10	PCV Valve, VCV Valve
15	10	Main beam left-hand side
16	10	Dipped beam left-hand side
17	10	Dipped beam right-hand side
18	10	PCM Power, Vehicle speed sensor
19	20	Daytime running lamps (side lights)
20	1	PCM
21	20	Vaporizer pump
22	20	Daytime running lamps (dipped beams)
23	20	ABS valves

Fuses

Fuse	Ampere rating	Circuits protected
24	10	Glow plug monitoring (diesel engines)
25	10	Main beam right-hand side
26	10	Air conditioning clutch solenoid
27	10	Sensors, Actuators, Relay coils
28	20	Foglamps
29	20	Dipped beam (via main beam relay)
64	30	Heater blower motor
65	7.5	Heated windscreen

Central fuse box

Fuse	Ampere rating	Circuits protected
130	15	GEM flasher power
131	5	Power mirror
132	10	Light switch (30), GEM VBAT Ext. lighting
133	-	Not used
134	-	Not used
135	10	Light switch, daytime running lamps
136	15	Horn
137	7.5	Radio, instrument cluster
138	-	Not used
139	-	Not used
140	-	Not used
141	10	Back up lamps, heated front washer jets
142	15	Stop lamps
143	20	Cigar lighter, Auxiliary power point front

Fuses

Fuse	Ampere rating	Circuits protected
144	-	Not used
145	-	Not used
146	20	Front wiper motor
147	10	Heated front seats
148	7.5	GEM VBAT, Recirc / ICL (30-)
149	-	Not used
150	-	Not used
151	15	Radio (memory and power), BTVC module
152	7.5	A/C, parking aid
153	7.5	Interior lamps and battery saver
154	-	Not used
155	-	Not used
156	7.5	Side lamps right-hand side
157	7.5	Number plate lamp
158	7.5	Light switch, Rain sensor
159	-	Not used
160	-	Not used
161	7.5	ABS, ESP, steering angle sensor
162	7.5	Airbag module, PADI indicator
163	20	GEM VBATT locking
164	-	Not used
165	-	Not used
166	25	Power windows front
167	7.5	Heated mirrors, heated rear window
168	10	Daytime running lamps, parking lamps, number plate lamp
169	20	Second power point

Fuses

Fuse	Ampere rating	Circuits protected
170	-	Not used
171	-	Not used
172	-	Not used
173	-	Not used
174	20	Rear power point, Transco hand wash
175	7.5	Side lamps left-hand side
176	-	Not used
177	-	Not used
178	25	Heated rear window
179	7.5	Cluster, PATS, accelerator pedal
180	20	Wiper front and rear
181	-	Not used
182	-	Not used

Vehicle recovery

TOWING POINTS


CAUTION

! The screw-in towing eye has a **left-hand thread**. Turn it **anti-clockwise** to install it. Make sure that the towing eye is fully tightened.

The towing eye must **always** be carried in the vehicle.


Insert your finger into the hole on the underside of the cover and prise off the cover. Install the towing eye.

Front towing eye

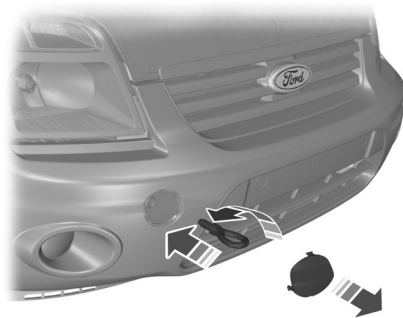

E76186

Rear towing eye

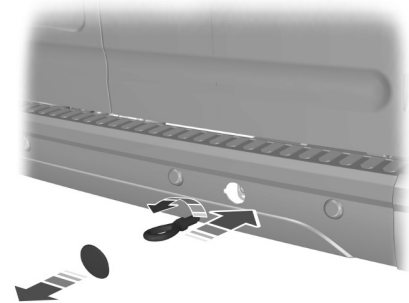

E93106

Transit Connect

Your towing eye is located in the bag behind the driver's seat.

Tourneo Connect

Your towing eye is located in the left-hand sidewall of the load area.

TOWING THE VEHICLE ON FOUR WHEELS



WARNINGS

! Switch the ignition on when your vehicle is being towed. The steering lock will engage and the direction indicators and brake lamps will not work if you do not.

! The brake servo and the power steering pump do not operate unless the engine is running. Press the brake pedal harder and allow for increased stopping distances and heavier steering.

Vehicle recovery

CAUTIONS

-  Too much tension in the tow rope could cause damage to your vehicle or the vehicle that is towing.
-  Do not use a rigid tow bar on the front towing eye.

Drive off slowly and smoothly without jerking the vehicle that is towing.

Maintenance

GENERAL INFORMATION

Have your vehicle serviced regularly to help maintain its roadworthiness and resale value. There is a large network of Ford Authorised Repairers that are there to help you with their professional servicing expertise. We believe that their specially trained technicians are best qualified to service your vehicle properly and expertly. They are supported by a wide range of highly specialised tools developed specifically for servicing your vehicle.

In addition to regular servicing, we recommend that you carry out the following additional checks.

WARNINGS



Switch the ignition off before touching or attempting adjustment of any kind.



Do not touch the electronic ignition system parts after you have switched the ignition on or when the engine is running. The system operates at high voltage.



Keep your hands and clothing clear of the engine cooling fan. Under certain conditions, the fan may continue to run for several minutes after you have switched the engine off.

CAUTION



When carrying out maintenance checks, make sure that filler caps are fitted securely.

Daily checks

- Exterior lamps.
- Interior lamps.
- Warning lamps and indicators.

Check when refuelling

- Engine oil level. See **Engine Oil Check** (page 109).
- Brake fluid level. See **Brake and Clutch Fluid Check** (page 110).
- Washer fluid level. See **Washer Fluid Check** (page 111).
- Tyre pressures (when cold). See **Technical Specifications** (page 122).
- Tyre condition. See **Tyre Care** (page 121).

Monthly checks

- Engine coolant level (engine cold). See **Engine Coolant Check** (page 110).
- Pipes, hoses and reservoirs for leaks.
- Power steering fluid level. See **Power Steering Fluid Check** (page 111).
- Air conditioning operation.
- Parking brake operation.
- Horn operation.
- Tightness of wheel nuts. See **Technical Specifications** (page 122).

OPENING AND CLOSING THE BONNET


Opening the bonnet

WARNING




To prevent damage to, or loss of the key, remove the key immediately after opening and swivel the Ford badge back.


Maintenance

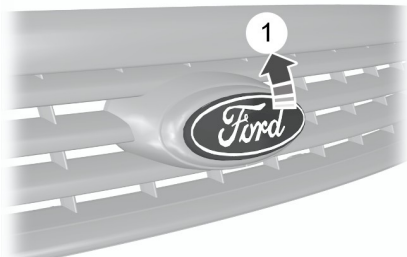

E78141

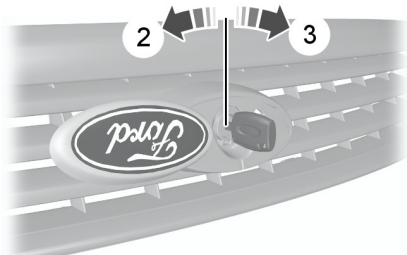

E78142

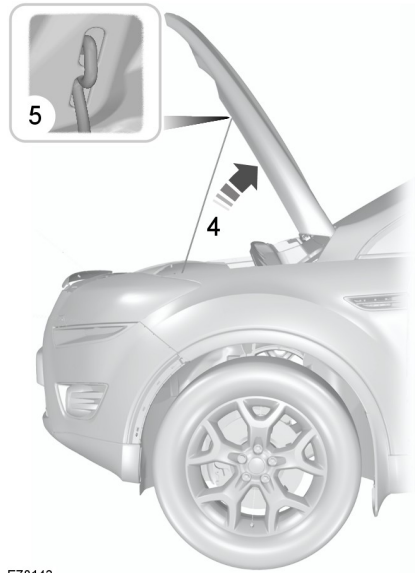

E78143


Closing the bonnet

Note: Make sure that the bonnet is closed properly.

Lower the bonnet and allow it to drop from under its own weight for the last 20 – 30 centimetres (8 - 12 inches).

Maintenance

UNDER BONNET OVERVIEW - 1.8L DURATORQ-TDCI (LYNX) DIESEL/1.8L DURATORQ-TDDI (LYNX) DIESEL

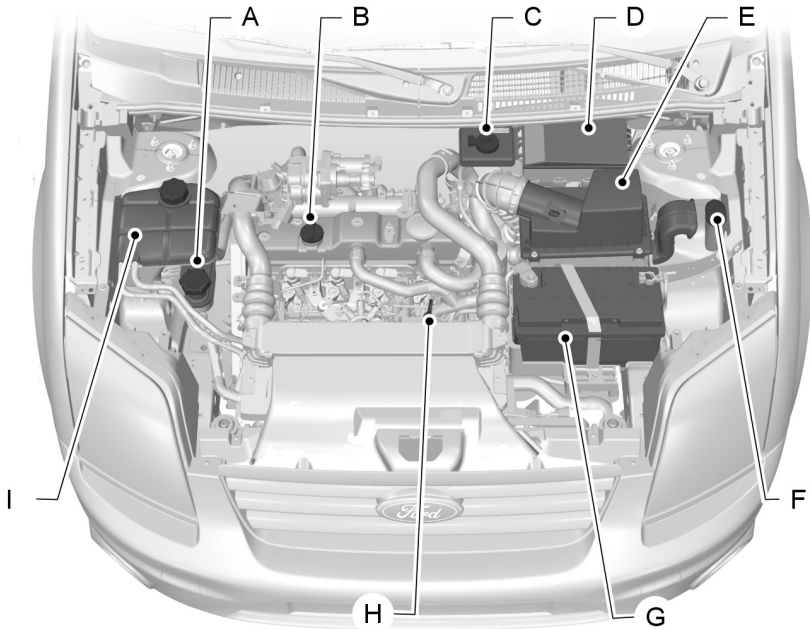

E75516

- A Power steering fluid reservoir¹: See **Power Steering Fluid Check** (page 111).
- B Engine oil filler cap¹: See **Engine Oil Check** (page 109).
- C Brake and clutch fluid reservoir¹: See **Brake and Clutch Fluid Check** (page 110).
- D Engine compartment fuse box: See **Fuses** (page 98).
- E Air cleaner.
- F Washer fluid reservoir¹: See **Washer Fluid Check** (page 111).
- G Battery: See **Vehicle battery** (page 116).


Maintenance

H Engine oil dipstick¹: See **Engine Oil Check** (page 109).

I Engine coolant reservoir¹: See **Engine Coolant Check** (page 110).

¹The filler caps and the engine oil dipstick are coloured for easy identification.

ENGINE OIL DIPSTICK - 1.8L DURATORQ-TDCI (LYNX) DIESEL/1.8L DURATORQ-TDDI (LYNX) DIESEL

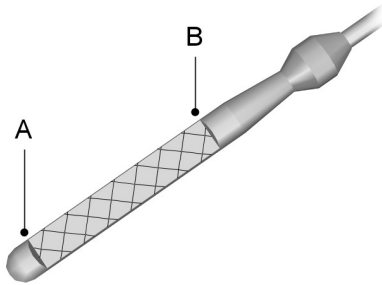


E95527

- A MIN
- B MAX

ENGINE OIL CHECK


CAUTION

 Do not use oil additives or other engine treatments. Under certain conditions, they could damage the engine.

Note: *The oil consumption of new engines reaches its normal level after approximately 5000 kilometres (3000 miles).*

Checking the oil level

CAUTION

 Make sure that the level is between the **MIN** and the **MAX** marks.

Note: *Check the level before starting the engine.*

Note: *Make sure that your vehicle is on level ground.*


Note: *Oil expands when it is hot. The level may therefore extend a few millimetres beyond the **MAX** mark.*


Remove the dipstick and wipe it with a clean, lint free cloth. Replace the dipstick and remove it again to check the oil level.

If the level is at the **MIN** mark, top up immediately.

Topping up


WARNINGS

 Only top up when the engine is cold. If the engine is hot, wait 10 minutes for the engine to cool down.

 Do not remove the filler cap when the engine is running.

Remove the filler cap.

WARNING

 Do not top up further than the **MAX** mark.

Note: *Soak up any spillage with an absorbent cloth immediately.*

Maintenance

Top up with fluid that meets the Ford specification. See **Technical Specifications** (page 112).

Replace the filler cap. Turn it until you feel a strong resistance.

ENGINE COOLANT CHECK

Checking the coolant level

WARNING



Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your doctor.

CAUTION



Make sure that the level is between the **MIN** and the **MAX** marks.

Note: *Coolant expands when it is hot. The level may therefore extend beyond the **MAX** mark.*

If the level is at the **MIN** mark, top up immediately.

Topping up

WARNINGS



Only top up when the engine is cold. If the engine is hot, wait 10 minutes for the engine to cool down.



Do not remove the filler cap when the engine is running.



Do not remove the filler cap when the engine is hot. Wait for the engine to cool down.



Undiluted coolant is flammable and may ignite if spilt on a hot exhaust.

CAUTIONS



In an emergency, you can add just water to the cooling system to reach a vehicle service station. Have the system checked by a properly trained technician as soon as possible.



Prolonged use of incorrect dilution of the coolant can cause engine damage from corrosion, overheating or freezing.

Unscrew the cap **slowly**. Any pressure will escape slowly as you unscrew the cap.

CAUTION



Do not top up further than the **MAX** mark.

Top up with a 50/50 mixture of coolant and water using fluid that meets the Ford specification. See **Technical Specifications** (page 112).

BRAKE AND CLUTCH FLUID CHECK

WARNINGS



Use of any fluid other than the recommended brake fluid may reduce brake efficiency and not meet Ford's performance standards.



Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your doctor.



If the level is at the **MIN** mark, have the system checked by a properly trained technician as soon as possible.

Note: *Keep brake fluid clean and dry. Contamination with dirt, water, petroleum products or other materials may result in brake system damage and possible failure.*

Maintenance

Note: *The brake and the clutch systems are supplied from the same reservoir.*

Top up with fluid that meets the Ford specification. See **Technical Specifications** (page 112).

POWER STEERING FLUID CHECK

WARNING



Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your doctor.

CAUTION



Make sure that the level is between the **MIN** and the **MAX** marks.

If the level is at the **MIN** mark, top up immediately.

Topping up

Remove the filler cap.

CAUTION



Do not top up further than the **MAX** mark.

Top up with fluid that meets the Ford specification. See **Technical Specifications** (page 112).

WASHER FLUID CHECK

Note: *The front and rear washer systems are supplied from the same reservoir.*

When topping up, use a mixture of washer fluid and water to help prevent freezing in cold weather and improve the cleaning capability. We recommend that you use only high quality washer fluid.

For information on fluid dilution, refer to the product instructions.

Maintenance

TECHNICAL SPECIFICATIONS

Vehicle fluids

Item	Specification	Recommended fluid
Engine oil	WSS-M2C913-C	Castrol Engine Oil*
Power assisted steering	WSA-M2C-195-A	Ford or Motorcraft Power Steering Fluid
Coolant	WSS-M97B44-D	Motorcraft SuperPlus Anti-freeze
Brake fluid	WSS-M6C57-A2	Ford or Motorcraft Super DOT 4 Brake Fluid

* Providing it meets the specification defined by **WSS-M2C913-C**, you can also use Ford Engine Oil or an alternative engine oil.

Topping up the oil: If you are unable to find an oil that meets the specification defined by **WSS-M2C913-C**, you must use **SAE5W-30** (preferred), **SAE5W-40** or **SAE10W-40** that meets the specification defined by either **ACEA A5/B5** (preferred) or **ACEA A3/B3**. Using these oils can result in longer engine cranking periods, reduced engine performance, reduced fuel economy and increased emission levels.

Castrol engine oil recommended.



Capacities

Variant	Item	Capacity in Litres (gallons)
All	Power assisted steering fluid	MAX-mark
All	Windscreen washer system	4.3 (1.0)
All	Fuel tank	60 (13.2)

Maintenance

Variant	Item	Capacity in Litres (gallons)
1.8 l Duratorq-TDdi/ Duratorq-TDCi	Cooling system incl. heating	7.0 (1.5)
1.8 l Duratorq-TDdi/ Duratorq-TDCi	Engine oil - with filter	5.6 (1.2)
1.8 l Duratorq-TDdi/ Duratorq-TDCi	Engine oil - without filter	5.0 (1.1)

Vehicle Care

CLEANING THE EXTERIOR

WARNING



If you use a car wash with a waxing cycle, make sure that you remove the wax from the windscreen.

CAUTIONS



Prior to using a car wash facility check the suitability of it for your vehicle.



Some car wash installations use water at high pressure. This could damage certain parts of your vehicle.



Remove the aerial before using an automatic car wash.



Switch the heater blower off to prevent contamination of the fresh air filter.

We recommend that you wash your vehicle with a sponge and lukewarm water containing a car shampoo.

Cleaning the headlamps

CAUTIONS



Do not scrape the headlamp lenses or use abrasives, alcoholic solvents or chemical solvents to clean them.



Do not wipe the headlamps when they are dry.

Cleaning the rear window

CAUTION



Do not scrape the inside of the rear window or use abrasives or chemical solvents to clean it.

Use a clean, lint free cloth or a damp chamois leather to clean the inside of the rear window.

Cleaning the chrome trim

CAUTION



Do not use abrasives or chemical solvents. Use soapy water.

Cleaning the alloy wheels

Note: Do not apply a cleaning chemical to warm or hot wheel rims and covers.

Note: Industrial-strength (heavy-duty) cleaners, or cleaning chemicals, in combination with brush agitation to remove brake dust and dirt, could wear away the clear coat finish over a period time.

Note: Do not use hydrofluoric acid-based or high caustic-based wheel cleaners, steel wool, fuels or strong household detergent.

Note: If you intend parking your vehicle for an extended period after cleaning the wheels with a wheel cleaner, drive your vehicle for a few minutes before doing so. This will reduce the risk of increased corrosion of the brake discs, brake pads and linings.

Note: Some automatic car washes may cause damage to the finish on your wheel rims and covers.

Alloy wheels and wheel covers are coated with a clear coat paint finish. To maintain their condition we recommend that you:

- Clean them weekly with the recommended wheel and tyre cleaner.
- Use a sponge to remove heavy deposits of dirt and brake dust accumulation.
- Rinse them thoroughly with a pressurised stream of water when you have completed the cleaning process.




We recommend that you use Ford service wheel cleaner. Make sure that you read and follow the manufacturer's instructions.

Vehicle Care

Using other non-recommended cleaning products can result in severe and permanent cosmetic damage.

Body paintwork preservation

CAUTIONS



-  Do not polish your vehicle in strong sunshine.
-  Do not allow polish to touch plastic surfaces. It could be difficult to remove.
-  Do not apply polish to the windscreen or rear window. This could cause the wipers to become noisy and they may not clear the window properly.

We recommend that you wax the paintwork once or twice a year.

CLEANING THE INTERIOR

Seat belts


WARNINGS

-  Do not use abrasives, or chemical solvents to clean them.
-  Do not allow moisture to penetrate the seat belt retractor mechanism.

Clean the seat belts with interior cleaner or water applied with a soft sponge. Let the seat belts dry naturally, away from artificial heat.



Instrument cluster screens, LCD screens, radio screens

WARNING

-  Do not use abrasives, alcoholic solvents or chemical solvents to clean them.
-


Rear windows

CAUTIONS

-  Do not use any abrasive materials to clean the interior of the rear windows.
 -  Do not install stickers or labels to the interior of the rear windows.
-

REPAIRING MINOR PAINT DAMAGE

CAUTION

-  Remove apparently harmless looking substances from the paintwork immediately (e.g. bird droppings, tree resins, insect remains, tar spots, road salt and industrial fall out).
-

You should repair paintwork damage caused by stones from the road or minor scratches as soon as possible. A choice of products is available from your Ford Dealer. Read and follow the manufacturer's instructions.


Vehicle battery

JUMP-STARTING THE VEHICLE

CAUTIONS

- ⚠ Connect batteries with only the same nominal voltage.
- ⚠ Always use booster cables with insulated clamps and adequate size cable.
- ⚠ Do not disconnect the battery from the vehicle's electrical system.

To connect the booster cables

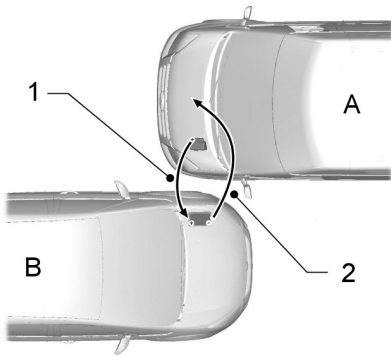

E75524

- A Flat battery vehicle
- B Booster battery vehicle
- 1 Positive connection cable
- 2 Negative connection cable

1. Position the vehicles so that they do not touch one another.
2. Switch off the engine and any electrical equipment.
3. Connect the positive (+) terminal of vehicle **A** with the positive (+) terminal of vehicle **B** (cable **1**).

4. Connect the negative (-) terminal of vehicle **B** to the engine block or the engine mount of vehicle **A** (cable **2**).

CAUTIONS

- ⚠ **Do not connect to the negative (-) terminal of the flat battery.**
- ⚠ Make sure that the cables are clear of any moving parts.

To start the engine

1. Run the engine of vehicle **B** at moderately high speed.
2. Start the engine of vehicle **A**.
3. Run both vehicles for a minimum of three minutes before disconnecting the cables.

CAUTION

- ⚠ Do not switch on the headlamps when disconnecting the cables. The peak voltage could blow the bulbs.

Disconnect the cables in the reverse order.

Wheels and Tyres

GENERAL INFORMATION

CAUTIONS

- ⚠ Use only approved wheel and tyre sizes. Using other sizes could damage the vehicle and will make the National Type Approval invalid.
- ⚠ If you change the diameter of the tyres from that fitted at the factory, the speedometer may not display the correct speed. Take the vehicle to your dealer to have the engine management system reprogrammed.
- ⚠ If you intend to change the size of the wheels from that fitted at the factory, check the suitability with your dealer.

Note: Check your tyre pressures regularly to optimise fuel economy.

A decal with tyre pressure data is located in the driver's door opening at the B-pillar.

Check and set the tyre pressure at the ambient temperature in which you are intending to drive the vehicle and when the tyres are cold.

CHANGING A ROAD WHEEL

Locking wheel nuts

You can obtain a replacement locking wheel nut key and replacement locking wheel nuts from your dealer using the reference number certificate.

Vehicle jack

WARNINGS

- ⚠ The vehicle jack supplied with your vehicle should only be used when changing a wheel in emergency situations.

WARNINGS

- ⚠ Before using the vehicle jack, check that it is not damaged or deformed and that the thread is lubricated and free from foreign matter.
- ⚠ Never place anything between the jack and the ground, or the jack and the vehicle.

It is recommended to use a workshop type hydraulic jack for changing between summer and winter tyres.

Note: Use a jack with a minimum lifting capacity of 1.5 tonnes and a lifting plate with a minimum diameter of 80 millimetres (3.1 inches).

Transit Connect

Your jack and wheelbrace are located in the bag behind the driver's seat.

1. Move the driver's seat fully forwards. See **Front Seats** (page 71).
2. Fold the seatback fully forwards.
3. Open the retaining straps on the bag and remove the wheelbrace.
4. Using the wheelbrace, remove the retaining screw.



E134540

5. Remove the jack.
6. Install in the reverse order.

Wheels and Tyres


Tourneo Connect

Your jack and wheelbrace are located in the left-hand sidewall of the load area.

Jacking and lifting points

CAUTION


! Use only the specified jacking points. If you use other positions, you may damage the body, steering, suspension, engine, braking system or the fuel lines.

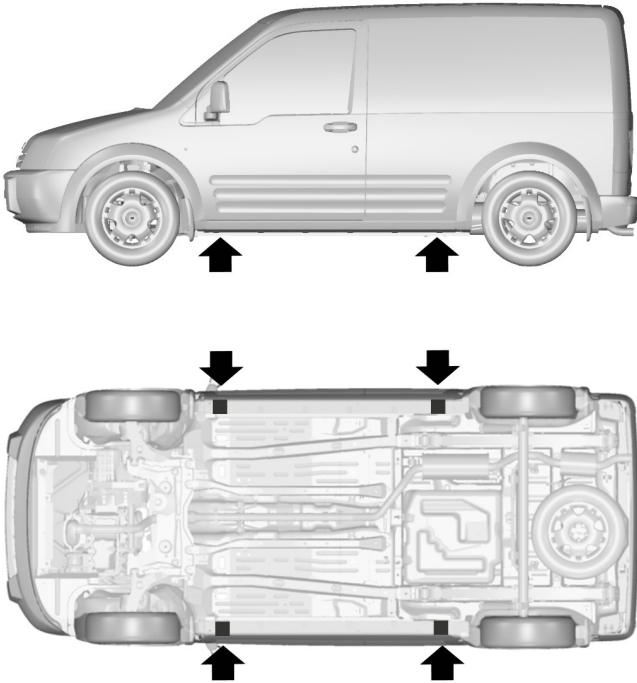

E93301

- A Emergency use only
- B Maintenance


Wheels and Tyres

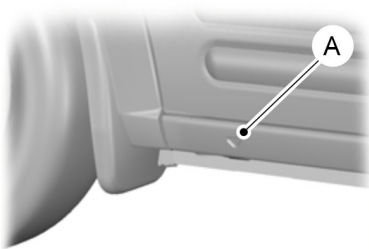

E93302



Small arrow-shaped marks on the sills **A** show the location of the jacking points.

Spare wheel

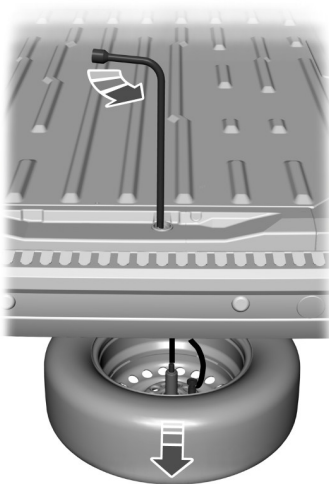

E76071

Lower the spare wheel by inserting the hexagonal end of the wheelbrace into the guide hole. Turn the wheelbrace anticlockwise until the wheel rests on the ground and there is slack in the cable.

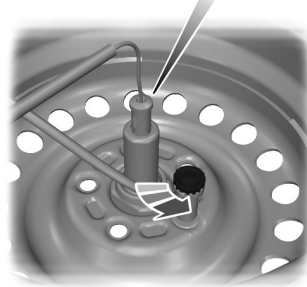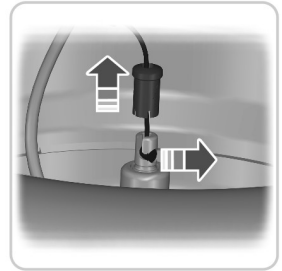





E76072

Detach the first cable by unscrewing and sliding back the cap. Turn the nipple at the end of the cable through 90 degrees.

Detach the second cable by unscrewing the nut.







Removing a road wheel

WARNINGS


-  Park your vehicle in such a position that neither the traffic nor you are hindered or endangered.
-  Set up a warning triangle.
-  Make sure that the vehicle is on firm, level ground with the wheels pointing straight ahead.
-  Switch off the ignition and apply the parking brake.

Wheels and Tyres

WARNINGS

-  If your vehicle has a manual transmission, select first or reverse gear. If it has an automatic transmission, select park.
-  Have the passengers leave the vehicle.
-  Secure the diagonally opposite wheel with an appropriate block or wheel chock.
-  Make sure that the arrows on directional tyres point in the direction of rotation when the vehicle is moving forwards. If you have to fit a spare wheel with the arrows pointing in the opposite direction, have the tyre refitted in the correct direction by a properly trained technician.
-  Do not work underneath the vehicle when it is supported only by a jack.
-  Make sure that the jack is vertical to the jacking point and the base is flat on the ground.


CAUTION

-  Do not lay alloy wheels face down on the ground, this will damage the paint.



E133965

1. Insert the wheelbrace and carefully remove the wheel trim.

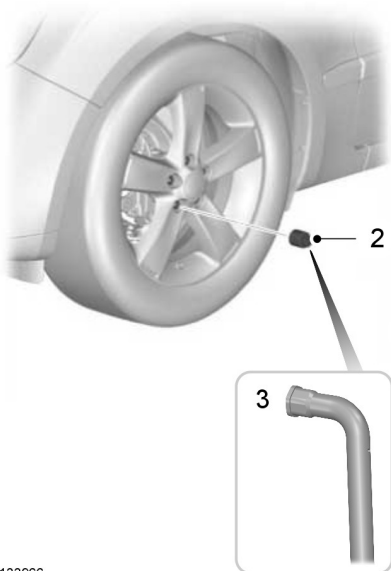



E133966

2. Install the locking wheel nut key.
3. Slacken the wheel nuts.
4. Jack up the vehicle until the tyre is clear of the ground.
5. Remove the wheel nuts and the wheel.


Installing a road wheel

WARNINGS

-  Use only approved wheel and tyre sizes. Using other sizes could damage the vehicle and will make the National Type Approval invalid. See **Technical Specifications** (page 122).
-  Do not fit run flat tyres on vehicles that were not originally fitted with them. Please contact your dealer for more details regarding compatibility.

Wheels and Tyres

CAUTION


-  Do not install alloy wheels using wheel nuts designed for use with steel wheels.

Note: The wheel nuts of alloy wheels and spoked steel wheels can also be used for the steel spare wheel for a short time (maximum two weeks).

Note: Make sure the wheel and hub contact surfaces are free from foreign matter.

Note: Make sure that the cones on the wheel nuts are against the wheel.


1. Install the wheel.
2. Install the wheel nuts finger tight.
3. Install the locking wheel nut key.

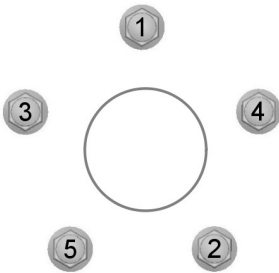

E75442

4. Partially tighten the wheel nuts in the sequence shown.
5. Lower the vehicle and remove the jack.
6. Fully tighten the wheel nuts in the sequence shown.
7. Install the wheel trim using the ball of your hand.


WARNING

-  Have the wheel nuts checked for tightness and the tyre pressure checked as soon as possible.

Note: If the spare wheel is different in size or construction to the road wheels, have this replaced as soon as possible.

Stowing the wheel

CAUTION

-  Do not raise the spare wheel carrier without the wheel attached. Damage can occur to the winch mechanism if lowered without a wheel attached.


TYRE CARE



E70415

To make sure the front and rear tyres of your vehicle wear evenly and last longer, we recommend that you swap the tyres from front to rear and vice versa at regular intervals of between 5000 and 10000 kilometres (3000 and 6000 miles).

CAUTION

-  Do not scrub the sidewalls of the tyres when you are parking.

If you have to mount a kerb, do so slowly and approach it with the wheels at right-angles to the kerb.


Wheels and Tyres

Examine the tyres regularly for cuts, foreign objects and uneven wear of the tread. Uneven wear could mean that the wheel alignment is outside specification.

Check the tyre pressures (including the spare) when cold, every two weeks.

USING WINTER TYRES

CAUTION

 Make sure that you use the correct wheel nuts for the type of wheel the winter tyres are fitted to.

If winter tyres are used, make sure that the tyre pressures are correct. See **Technical Specifications** (page 122).

USING SNOW CHAINS

WARNINGS



Do not exceed 50 km/h (30 mph).



Do not use snow chains on snow-free roads.



Do not fit snow chains to 205/55 R 16 tyres.

CAUTION



If your vehicle is fitted with wheel trims, remove them before fitting snow chains.

Note: *The ABS will continue to operate normally.*

Only use small link snow chains.

Only use snow chains on the front wheels.

TECHNICAL SPECIFICATIONS


Transit Connect

Wheel nut torque

Wheel type	Nm (lb-ft)
Steel - type 1	90 (66.4)
Steel - type 2	135 (99.6)
Alloy	120 (88.5)

Wheels and Tyres

Type 1 - Closed end, two piece wheel nut

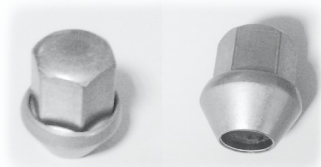

E131503

Type 2 - Open end, one piece wheel nut



E131504

Short wheelbase

Tyre Pressures

Variant	Tyre Size	Normal Load		Full Load	
		Front	Rear	Front	Rear
		bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)
T200	195/65 R 15	2.2 (32)	2.5 (36)	2.3 (33)	3.0 (44)
T220	195/65 R 15	2.2 (32)	2.5 (36)	2.4 (35)	3.4 (49)

Long wheelbase

Tyre Pressures

Variant	Tyre Size	Normal Load		Full Load	
		Front	Rear	Front	Rear
		bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)
T210	195/65 R 15	2.3 (33)	2.7 (39)	2.3 (33)	3.4 (49)
T220	195/65 R 15	2.3 (33)	2.7 (39)	2.5 (36)	3.4 (49)
T230	195/65 R 15	2.3 (33)	2.7 (39)	2.5 (36)	3.4 (49)

Tourneo Connect

Wheels and Tyres

Short wheelbase

Tyre Pressures

Variant	Tyre Size	Normal Load		Full Load	
		Front	Rear	Front	Rear
		bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)
K210	205/55 R 16	2.2 (32)	2.2 (32)	2.2 (32)	2.8 (41)
K200	195/65 R 15	2.2 (32)	2.5 (36)	2.2 (32)	3.0 (44)
K210 (500 Kg)	195/65 R 15	2.2 (32)	2.2 (32)	2.2 (32)	2.8 (41)
K210 (625 Kg)	195/65 R 15	2.2 (32)	2.5 (36)	2.2 (32)	3.0 (44)
K220	195/65 R 15	2.2 (32)	2.5 (36)	2.4 (35)	3.4 (49)
K230	195/65 R 15	2.2 (32)	2.5 (36)	2.4 (35)	3.4 (49)

Long wheelbase

Tyre Pressures


Variant	Tyre Size	Normal Load		Full Load	
		Front	Rear	Front	Rear
		bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)	bar (lbf/in ²)
K220	195/65 R 15	2.3 (33)	2.7 (39)	2.3 (33)	3.4 (49)
K230	195/65 R 15	2.3 (33)	2.7 (39)	2.3 (33)	3.4 (49)

Vehicle identification

VEHICLE IDENTIFICATION PLATE

Note: The vehicle identification plate design may vary to that shown.

Note: The information shown on the vehicle identification plate is dependant upon market requirements.

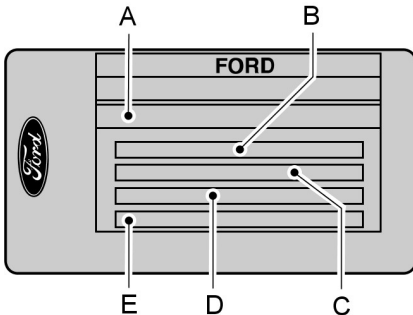


E85610

- A Vehicle identification number
- B Gross vehicle weight
- C Gross train weight
- D Maximum front axle weight
- E Maximum rear axle weight

The vehicle identification number and maximum weights are shown on a plate located on the lock side of the right-hand front door aperture at the bottom.

VEHICLE IDENTIFICATION NUMBER

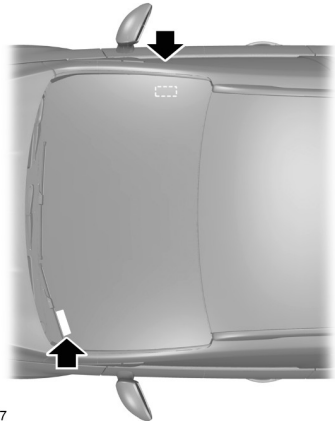

E93897

The vehicle identification number is stamped into the floor panel in front of the right-hand seat. It is also shown on the left-hand side of the instrument panel.

LOAD APPORTIONING VALVE (LAV) PLATE




Certain vehicles are fitted with a load apportioning valve (LAV) plate on the left-hand rear door pillar, quoting the settings for this valve. These settings should only be made by an expert.

Capacities and Specifications

TECHNICAL SPECIFICATIONS

Vehicle dimensions

Short wheelbase

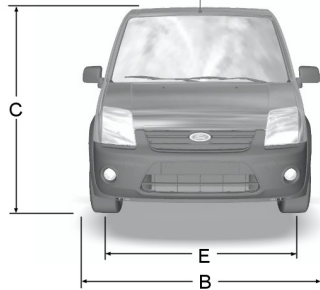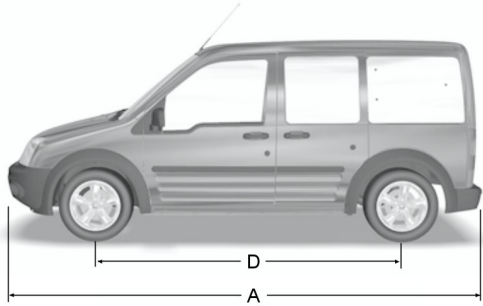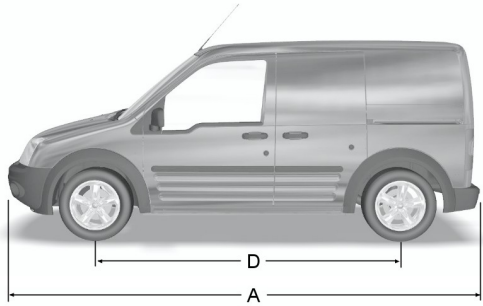




E76188

Capacities and Specifications

Item	Dimension Description	Dimension in mm (inches)
A	Overall length	4324 (170.2)
B	Overall width including exterior mirrors	2113 (83.2)
C	Overall height	1804-1837 (71.0-72.3)
D	Wheelbase	2665 (104.9)
E	Track - Front	1505 (59.3)
E	Track - Rear	1552 (61.1)

Capacities and Specifications

Long wheelbase

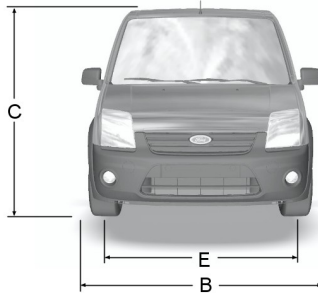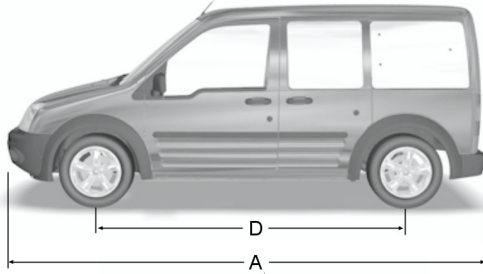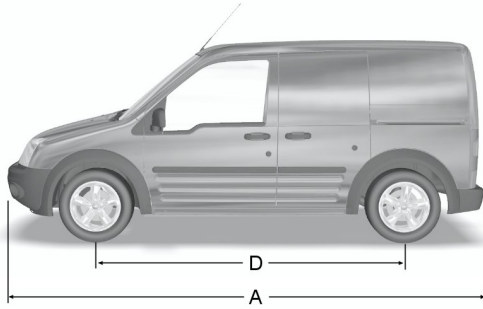


E76189

Capacities and Specifications

Item	Dimension Description	Dimension in mm (inches)
A	Overall length	4571 (180.0)
B	Overall width including exterior mirrors	2113 (83.2)
C	Overall height	1970-1982 (77.5-78.0)
D	Wheelbase	2912 (114.6)
E	Track - Front	1505 (59.3)
E	Track - Rear	1552 (61.1)

Capacities and Specifications

Towing equipment dimensions

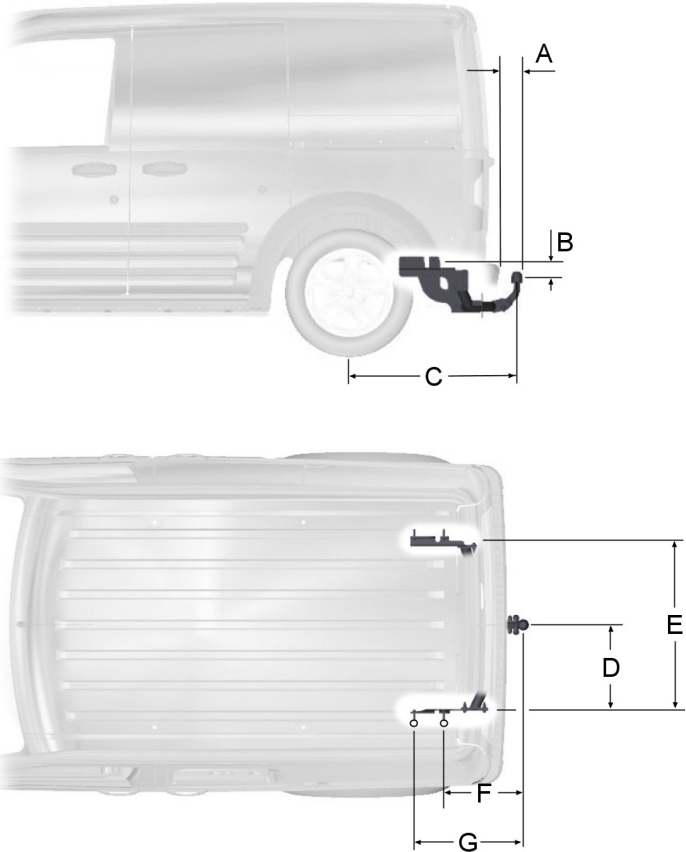

E76190

Item	Dimension Description	Dimension in mm (inches)
A	Bumper – end of towball	Min 90 (3.5)
B	Attachment point – centre of towball	91.1 (3.6)
C	Wheel centre – centre of towball	834 (32.8)

Capacities and Specifications


Item	Dimension Description	Dimension in mm (inches)
D	Centre of towball – side member	460 (18.1)
E	Outer side of side member	920 (36.2)
F	Centre of towball – centre 1. attachment point	413.3 (16.3)
G	Centre of towball – centre 2. attachment point	566.3 (22.3)


All measurements refer to towing equipment officially released by Ford.


Audio introduction


IMPORTANT AUDIO INFORMATION


WARNINGS

 Due to technical incompatibility, recordable (CD-R) and rewritable (CD-RW) discs may not function correctly.

 These units will play compact discs that conform to the International Red Book standard audio specification. Copy protected CDs from some manufacturers do not conform to this standard and playback cannot be guaranteed.

 Dual format, dual sided discs (DVD Plus, CD-DVD format), adopted by the music industry, are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming could occur. Irregular shaped CDs and CDs with a scratch protection film or self adhesive labels attached should not be used. Warranty claims, where this type of disc is found to be inside an audio unit returned for repair, will not be accepted.

 All units except Sony CD (but not the 6CD) are designed to play commercially pressed 12 cm audio compact discs only. The Sony CD unit will play 8 cm discs with a Sony approved adaptor fitted (CSA-8).

 The audio unit may be damaged if unsuitable items like credit cards or coins are pushed inside the CD aperture.

Audio unit labels

CLASS 1
LASER PRODUCT

CAUTION—INVISIBLE LASER RADIATION WHEN OPEN
DO NOT STARE INTO BEAM OR
VIEW DIRECTLY WITH OPTICAL INSTRUMENTS

Disc labels


Audio CD



MP3



Audio unit overview

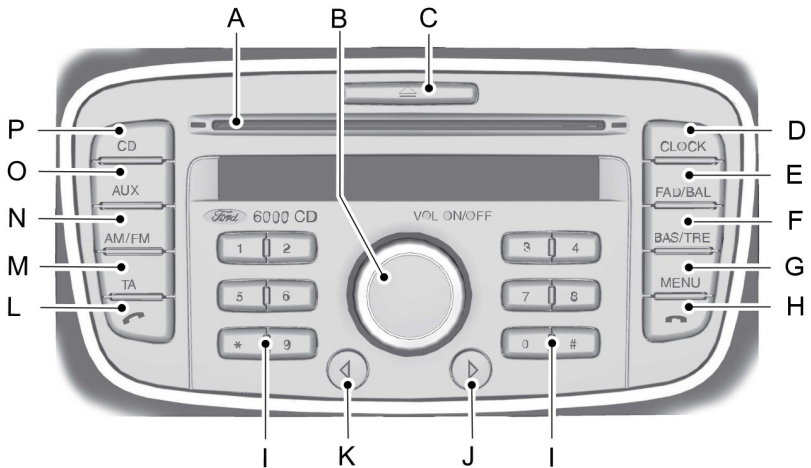

E138368

- A CD aperture. See **Loading compact discs** (page 142).
- B On, off and volume control. See **On/off control** (page 136).
- C CD eject. See **Ejecting compact discs** (page 143).
- D Clock. See **Setting the clock and date on the audio unit** (page 135).
- E Balance and fade control. See **Balance/fade control** (page 136).
- F Bass and treble control. See **Bass/treble control** (page 136).
- G Menu. See **Audio menu control** (page 136).
- H End call. See **Telephone** (page 146).
- I Station presets. See **Station preset buttons** (page 138).
- J Seek up. See **Station tuning control** (page 139).
- K Seek down. See **Station tuning control** (page 139).
- L Accept call. See **Telephone** (page 146).
- M Traffic announcement. See **Traffic information control** (page 138).
- N Waveband select. See **Waveband button** (page 138).
- O Auxiliary select. See **Auxiliary input (AUX IN) socket** (page 144).
- P CD select. See **Compact Disc Player** (page 142).

Audio System Security

SECURITY CODE

Each unit incorporates a unique code that must be entered before the unit will operate.

If the battery is disconnected or if the unit has been removed from the vehicle, the code must be re-entered before the unit will operate.

If the display shows **WAIT 30**, the unit will be locked for 30 minutes. Wait until the timer counts down to zero. When **CODE** is shown in the display, enter the correct code.

Note: *After 10 incorrect attempts the unit will be permanently inoperative and **LOCKED** will be shown in the display. See your dealer.*

LOST SECURITY CODE

If you lose the unique code, contact your dealer and supply details of your audio unit along with some proof of identity.

ENTERING A SECURITY CODE

If **CODE ----**, **CODE 0000** or **ENTER KEYCODE** appears in the display when you switch on the audio unit, you must enter the unique code using the station preset buttons.

1. Using the station present buttons enter the unique code.
2. If you make a mistake entering the code, re-enter the digits by continuing to select buttons 0-9. The display will advance from digit position 1 to 4 and then back again.
3. Make sure that the complete code is correct before pressing the # button.

INCORRECT SECURITY CODE

Up to a maximum of 10 unique code entry attempts are allowed with various consequences if you get it wrong.

The number of attempts will be shown in the display.

If the display reverts to **CODE** another entry attempt may be made immediately.

Audio Unit Clock and Date Displays

SETTING THE CLOCK AND DATE ON THE AUDIO UNIT

Changing the date and time

Press the **CLOCK** button to display the date and time.

Note: *If you do not press another button within 30 seconds of pressing the **CLOCK** button, the display will return to its previous setting.*

1. Using the seek up or seek down button select the date or time value that you wish to change. The selected value will flash in the display.
2. Rotate the volume control to change the selected date or time value.
3. Using the seek up or seek down button select additional date or time values that you wish to change.
4. Rotate the volume control to change the selected date or time value.
5. Press the **CLOCK** button to exit and save your settings.

Note: *If you do not press the **CLOCK** button within 30 seconds of changing a date or time value, the display will exit and save the new values automatically.*

Note: *Press and hold the **CLOCK** button for more than two seconds to automatically select the hour value for winter or summer time adjustment.*

12/24 hour format

1. Press the **MENU** button repeatedly until the 12/24 icon is shown in the display.
2. Using the seek up or seek down button select your required setting.
3. Press the **MENU** button repeatedly or allow the system to time out to confirm your selection.

Audio unit operation

ON/OFF CONTROL

Press the on/off control. This will also operate the unit for up to one hour with the ignition turned off.

The radio will switch off automatically after one hour.

BASS/TREBLE CONTROL

The bass function is used to adjust the low-frequency response of the audio unit.

The treble function is used to adjust the high-frequency response of the audio unit.

Note: *The selected level will be shown in the display.*

1. Press the **BASS/TRE** button once for bass or twice for treble.
2. Use the volume control or on some units the seek up or seek down button to make the necessary adjustment.

BALANCE/FADE CONTROL

The balance function is used to adjust the sound distribution between the left and right speakers.

The fade function is used to adjust the sound distribution from front to rear in vehicles fitted with rear speakers.

1. Press the **FADE/BAL** button once for fade or twice for balance.
2. Use the volume control or on some units the seek up or seek down button to make the necessary adjustment.

AUDIO MENU CONTROL

Use the **MENU** button to access functions that cannot be selected directly via one of the control buttons. Press the **MENU** button for first level functions, or press and hold the **MENU** button for other second level functions.

Menu functions			
First level			Second level
During radio reception	During tape playback	During CD playback	During all functions
Manual tuning	12/24 hour	Scan	Traffic local or distant
Scan tuning	AVC*	Shuffle	AF**
12/24 hour	ADV menu	Repeat	REG
AVC*	-	Comp	News
ADV menu	-	12/24 hour	CLIP

Audio unit operation

Menu functions			
First level			Second level
During radio reception	During tape playback	During CD playback	During all functions
-	-	AVC*	VID
-	-	ADV menu	Bluetooth enable/ disable

Note: The sequence in which functions appear may vary for different audio units and vehicles.

Note: Second level functions (advanced) can also be entered by selecting ADV menu from the first level menu.

*Automatic volume control.

** Alternative frequencies.

Audio unit operation

STATION PRESET BUTTONS

This feature allows you to store your favourite stations so that they can be recalled by selecting the appropriate waveband and pressing one of the preset buttons.

1. Select a waveband.
2. Tune to the station required.
3. Press and hold one of the preset buttons. The audio unit will mute. When sound returns the station has been stored.

This can be repeated on each waveband and for each preset button.

Note: *When you drive to another part of the country, FM RDS (Radio Data System) stations that broadcast on alternative frequencies are stored on the preset buttons.*

WAVEBAND BUTTON

Note: *The **AM/FM** or **RADIO** button can also be used to return to radio reception when you have been listening to another source.*

Press the **AM/FM** button to select from the wavebands available.

AUTOSTORE CONTROL

Note: *This function will overwrite the previously stored autostore preset stations.*

Note: *This function can also be used to store stations manually in the same way as other wavebands.*

Note: *The strongest signals available on the selected waveband will be stored.*

The sound is muted and AUTOSTORE will be shown in the display while the unit searches through the frequencies.

When the search is complete, sound is restored and the strongest signals are stored on the autostore presets.

Press and hold the **AM/FM** button.

TRAFFIC INFORMATION CONTROL

Many stations that broadcast on the FM waveband have a TP code to signify that they carry traffic programme information.

Activating traffic announcements

Before you can receive traffic announcements, you must press the **TA** button. Either TA-D or TA-L will be shown in the display to indicate that the feature is switched on.

If you are already tuned to a station that broadcasts traffic information, TP will also be shown in the display. Otherwise the unit will search for a traffic programme and display TP SEEK while doing so. If it cannot locate such a station, NOT FOUND will be shown in the display.

TP will be shown within a box in the display when you are tuned to a station providing traffic information from a linked RDS (radio data system) or EON (enhanced other network) station.

When traffic information is broadcast, it will automatically interrupt normal radio, tape or CD playback and TRAFFIC or NEWS will be shown in the display.

If the traffic signal weakens, TP will flash in the display. Press the seek up or seek down button to find another station.

Note: *If this happens during CD or AUX playback or, on certain models, with the radio volume set to zero, the unit will retune automatically if the station is not available.*

Audio unit operation

If a non-traffic station is selected or recalled using a preset button, the audio unit will remain on that station unless **TA** is turned off, then on again.

Note: *If TA is on and you select a preset or manual tune to a non TA station no traffic announcement will be heard.*

Local or distant traffic

The number of RDS or EON traffic announcements may become excessive in some areas so there is an option to select between local traffic information and all available information.

1. Press and hold the **MENU** button until the display changes.
2. Press the **MENU** button repeatedly until TA is shown in the display.
3. Press the seek up or seek down button to select either local (TA LOCAL) or distant (TA DIST) traffic announcements.
4. Press the **MENU** button or allow the menu to time out to confirm your selection.

Note: *Either TA-L or TA-D will be shown in the display.*

Traffic announcement volume

Traffic announcements interrupt normal broadcasts at a preset minimum level that is usually louder than normal listening volumes.

To adjust the preset volume

1. Press and hold the **TA** button.
2. Rotate the volume control to make the necessary adjustment.

Note: *The selected level will be shown in the display.*

Ending traffic announcements

The audio unit will return to normal operation at the end of each traffic announcement. To end the announcement prematurely, press **TA** during the announcement.

Note: *If you press TA at any other time it will switch all announcements off.*

STATION TUNING CONTROL

Seek tuning

Select a waveband and briefly press the seek up or seek down button. The unit will stop at the first station it finds in the direction you have chosen.

Manual tuning

1. Select a waveband and press the **MENU** button until MAN is shown in the display.
2. Press the seek up or seek down button to tune up or down the waveband in small increments or press and hold to increment quickly, until you find a station you want to listen to.

Scan tuning

The scan function allows you to listen to 10 seconds of each station detected.

1. Press the **MENU** button repeatedly until SCAN is shown in the display.
2. Press the seek up or seek down button to scan up or down the selected waveband.
3. Press the seek up or seek down button or the **MENU** button to continue listening to a station.

Audio unit menus

AUTOMATIC VOLUME CONTROL

This function adjusts the volume level to compensate for engine and road speed noise.

1. Press the **MENU** button repeatedly until AVC is shown in the display.
2. Use the seek up or seek down button to adjust the setting.
3. Press the **MENU** button or allow the system to time out to confirm your selection.

AUDIO DISTORTION REDUCTION (CLIP)

This function automatically detects sound distortion and reduces the volume level until the distortion has been eliminated. This means that whilst the display might change numerically when you raise the volume manually with the control, there may be no actual increase in sound.

1. Press and hold the **MENU** button until the display changes.
2. Press the **MENU** button repeatedly until CLIP is shown in the display.
3. Using the seek up or seek down button turn the function on or off.
4. Press the **MENU** button or allow the system to time out to confirm your selection.

ALTERNATIVE FREQUENCIES

Many programmes broadcast on the FM waveband have a PI (programme identification) code, which can be recognised by audio units.

If your radio has AF (alternative frequencies) tuning switched on and you move from one transmission area to another, this function will search for and switch to a stronger station signal, if one can be found.

Under certain conditions, however, AF tuning may temporarily disrupt normal reception.

When selected, the unit continually evaluates signal strength and, if a better signal becomes available, the unit will switch to that alternative. It mutes while it checks a list of alternative frequencies and, if necessary, it will search once across the selected waveband for a genuine alternative frequency.

It will restore radio reception when it finds one or, if one is not found, the unit will return to the original stored frequency. On certain units, NOT FOUND will be shown in the display.

With AF-MAN selected, the unit operates in a similar way to AF-AUTO or AF-ON, but only searches for an alternative frequency when prompted by pressing a preset button.

With AF-OFF selected, the original stored frequency remains selected. In this mode, AF-OFF will be displayed every time the unit is turned on.

1. Press and hold the **MENU** button until the display changes.
2. Press the **MENU** button repeatedly until AF is shown in the display.
3. Using the seek up or seek down button select the required setting.
4. Press the **MENU** button or allow the system to time out to confirm your selection.

Audio unit menus

REGIONAL MODE (REG)

The function REG (regional mode) controls the behaviour of AF switching between regionally related networks of a parent broadcaster. A broadcaster may run a fairly large network across a large part of the country. At various times of the day this large network may be broken down into a number of smaller regional networks, typically centred on major towns or cities. When the network is not split into regional variants, the whole network carries the same programming.

Regional mode ON: This prevents random AF switches when neighbouring regional networks are not carrying the same programming.

Regional mode OFF: This allows a larger coverage area if neighbouring regional networks are carrying the same programming, but can cause random AF switches if they are not.

1. Press and hold the **MENU** button until the display changes.
2. Press the **MENU** button repeatedly until REG is shown in the display.
3. Using the seek up or seek down button turn the function on or off.
4. Press the **MENU** button or allow the system to time out to confirm your selection.

NEWS BROADCASTS

Some audio units interrupt normal reception to broadcast news bulletins from stations on the FM waveband linked stations, in the same way as traffic information is provided.

During news broadcasts, the display alternates between the station name and NEWS. News interrupts are broadcast at the same preset volume level as traffic announcements.

1. Press and hold the **MENU** button until NEWS is shown in the display.
2. Using the seek up or seek down button turn the function on or off.
3. Press the **MENU** button to confirm your selection.

Compact Disc Player

LOADING COMPACT DISCS

Always check that the CD aperture is empty before inserting a CD.

Insert a CD, label side up, into the audio unit.

TRACK SELECTION

Press the seek up button once to move to the next track or press it repeatedly to access later tracks.

Press the seek down button once to replay the current track. If pressed within two seconds of the start of a track, the previous track will be selected.

Press the seek down button repeatedly to select previous tracks.

COMPACT DISC PLAYBACK

Note: During playback, the display indicates the disc, track and time that has elapsed since the start of the track.

Note: On CD changer audio units, if two or more CD's are loaded one after the other, playback will start with the last CD loaded.

During radio reception, press the **CD** button once to start CD playback.

Playback will start immediately after a disc is loaded.

FAST FORWARD/REVERSE

Press and hold the seek up or the seek down button to search forwards or backwards within the tracks on the disc.

SHUFFLE/RANDOM

Random track playback, also known as shuffle, plays all tracks on a CD in random order.

Note: When *SHUFF CD* is selected only the tracks on the current CD will be shuffled. When *SHUF ALL* is selected the tracks on all the CD's will be shuffled.

1. Press the **MENU** button repeatedly until SHUF is shown in the display.
2. Using the seek up or seek down button scroll through the display until SHUF ALL or SHUFF CD is shown in the display.
3. Using the seek up or seek down button select the next track to shuffle if required.

Note: With the function on, *SHUFFLE* will be shown in the display as each new track is selected.

COMPACT DISC TRACK COMPRESSION

1. Press **MENU** repeatedly until COMP is shown in the display.
2. Using the seek up or seek down button turn the function on or off.
3. Press the **MENU** button to confirm your selection.

COMPACT DISC TRACK SCANNING

The SCAN function allows you to preview each track for approximately 10 seconds.

Note: When selected, *SCAN* will be shown briefly in the display at the start of each track.

Compact Disc Player

1. Press the **MENU** button repeatedly until **SCAN** is shown in the display.
2. Using the seek up or seek down button select either **SCAN CD** or **SCAN ALL**.
3. Press the seek up or seek down button again to continue listening to a track.

EJECTING COMPACT DISCS

Note: *Radio reception is restored automatically when the **EJECT** button is pressed.*

Note: *If the **EJECT** button is pressed in error, press the button again to cancel.*

Note: *If the CD is not removed it will be pulled back into the audio unit.*

Press the **EJECT** button at any time and remove the CD.

REPEAT COMPACT DISC TRACKS

1. Press the **MENU** button repeatedly until **REPEAT** is shown in the display.
2. Using the seek up or seek down button choose between **OFF** and **TRK**.

ENDING COMPACT DISC PLAYBACK

Press the **AM/FM** or **AUX** button.

Note: *This will not eject the CD; the disc will merely pause at the point where radio reception was restored.*

To resume CD playback, press the **CD** button again.

Auxiliary input (AUX IN) socket

Note: *For optimum performance when using any auxiliary device set the volume on the device high. This will reduce audio interference when charging the device via the vehicle power supply socket.*

When fitted the Auxiliary input (AUX IN) socket permits an auxiliary device, such as an MP3 player, to be linked into the vehicle audio system. Output can be played through the vehicle speakers.

To connect an auxiliary device, plug it into the AUX IN socket using a 3.5 mm conventional audio jack connector.

Select the auxiliary input via the **AUX** button and playback will be heard through the vehicle speakers. AUX will be shown in the display. Volume, treble and bass can be adjusted on the audio unit as normal.

The audio unit buttons can also be used to restore playback from the audio unit, while the auxiliary device remains connected.

Audio Troubleshooting

AUDIO TROUBLESHOOTING

Audio unit display	Rectification
CD ERROR PLEASE CHECK CD CDC ERROR	General error message for CD fault conditions, for example cannot read the CD, data-CD inserted. May also indicate a audio unit malfunction. Make sure that the disc is correctly loaded, clean and re- load the CD or replace the CD with a known music CD. See Ejecting compact discs (page 143). See Loading compact discs (page 142). If error continues. See your dealer.
NO CD NO CDS NO CD #	Message to indicate that the audio unit or CD changer is empty. Insert a CD. See Loading compact discs (page 142).
HIGH TEMP CD DRIVE HIGH TEMP	Ambient temperature too hot – unit will not work until it has cooled down.
SLOT FULL	Message to indicate that the CD slot is already loaded. Eject the CD from selected slot before attempting load operation or select another slot location. See Loading compact discs (page 142).
CDC FULL	Message to indicate that the audio unit is full. See Ejecting compact discs (page 143).
DATA CD	An incompatible CD has been inserted, for example not an audio CD. See Ejecting compact discs (page 143).
CODE ----	Message to prompt you for the Keycode. See Entering a security code (page 134).
WAIT	Message to inform you to wait until the next keycode entry attempt can be made. See Incorrect security code (page 134).
TRIES	Message indicates the number of incorrect input attempts. See Incorrect security code (page 134).
LOCKED	Message to inform you that audio unit security system has locked the unit after repeated incorrect keycode entries. See your dealer.
KEYCODE.... ENTER KEYCODE....	Message to prompt you for the Keycode. See Entering a security code (page 134).
INCORRECT	Message to inform you that the entered keycode is incorrect. See Incorrect security code (page 134).

Telephone

GENERAL INFORMATION

CAUTION


 Using the system with the engine off will drain the battery.

This section describes the functions and features of the Bluetooth mobile phone hands free system.

The Bluetooth mobile phone part of the system provides interaction with the audio or navigation system and your mobile phone. It allows you to use the audio or navigation system to make and receive calls without having to hold your mobile phone.

Compatibility of phones

CAUTION

 As no common agreement exists, mobile phone manufacturers are able to implement a variety of profiles in their Bluetooth devices. Because of this, an incompatibility can occur between the phone and hands-free system, which in some cases may significantly degrade the system performance. To avoid this situation, only recommended phones should be used.

Please visit the website www.ford-mobile-connectivity.com for full details.

TELEPHONE SETUP

Phonebook

After start up access to the phonebook list can be delayed for several minutes, depending upon the size.

Phonebook categories

Depending on your phonebook entry, different categories can be displayed in the audio unit.

For example:

M	Mobile
O	Office
H	Home
F	Fax

Note: *Entries may be displayed without a category attachment.*

The category can also be indicated as an icon:



Phone



Mobile



Home



Office



Fax

Making a phone an active phone

When using the system for the first time, no phone is connected to the system.

Bluetooth phone

After bonding a Bluetooth phone to the system, this becomes the active phone. For further information refer to the phone menu.

Telephone

Select the phone from the active phone menu.

Turning the ignition and radio or navigation unit back on again, the last active phone is picked up by the system.

Note: *In some cases the Bluetooth connection must also be confirmed on the phone.*

Bond another Bluetooth phone

Bond a new Bluetooth phone as described in the requirements for a Bluetooth connection.

Phones stored in the system are accessible by using the phone list on the audio unit.

Note: *A maximum of six devices may be bonded. If six Bluetooth devices have already been bonded, one of these has to be debonded in order to bond a new device.*

BLUETOOTH SETUP

Before you can use your telephone with your vehicle it must be bonded to the vehicle telephone system.

Handling of phones

Up to six Bluetooth devices can be bonded to the vehicle system.

Note: *If there is an ongoing call when the phone in use is selected as the new active phone, the call is transferred to the vehicle audio system.*

Note: *Even if connected to the car system, your phone can still be used in the usual way.*

Requirements for Bluetooth connection


The following are required before a Bluetooth phone connection can be made.

1. The Bluetooth feature must be activated on the phone and on the audio unit. Make sure the Bluetooth menu option in the audio unit is set to **ON**. For information on phone settings, refer to your phone user guide.
2. In the Bluetooth menu on your phone, search for **Ford Audio** and select it.
3. Enter the code number shown on the vehicle display using the phone keypad. If no code number is shown on the display, enter the Bluetooth PIN number 0000 using the phone keypad. Now enter the Bluetooth PIN number shown on the vehicle display.
4. If your mobile phone asks you to authorize the automatic connection, select **YES**.

Note: *A phone call will be disconnected if the audio unit is switched off. If the ignition key is turned to the off position the phone call will remain in progress.*

TELEPHONE CONTROLS

Remote control

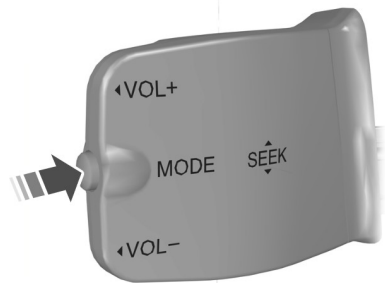

E116297

Incoming calls can be accepted by pressing the **MODE** button once. Press the button again to end the call.

Telephone

USING THE TELEPHONE - VEHICLES WITHOUT: NAVIGATION SYSTEM

This chapter describes the phone functions of the audio unit.

Note: Refer to your audio guide for details of the controls.

An active phone must be present.

Even if connected to the audio unit, your phone can still be used in the usual way.

Note: You can exit the phone menu by pressing any source button **CD**, **AM/FM** or **AUX**.

Making a call

Dialling a number using voice control

Phone numbers can be dialled using voice control. See **Telephone commands** (page 159).

Dialling a number using the address book

You can access your phone address book via Bluetooth. The entries will appear in the unit display.

1. Press the **PHONE** or the call accept button.
2. Press the **MENU** button.
3. Keep pressing the **MENU** button until **PHONEBOOK** appears.
4. Press the seek buttons to select the desired phone number.

Note: Press and hold the seek button to skip to the next letter in the alphabet.

5. Press the **PHONE** or the call accept button to dial the selected phone number.

Ending a call

Calls can be ended by pressing the call reject button.

Audio units without a telephone keypad can also end a call by pressing either **PHONE**, **CD**, **AM/FM** or **ON/OFF**, or by pressing the **MODE** button on the remote control

Redialling a number

1. Press the **PHONE** or the call accept button.
2. Press the **MENU** button.
3. Select the **CALL OUT** list or the **CALL IN** list. On some audio units, select the **MISSED**, **INCOMING** or **OUTGOING** calls list.

Note: If the active phone does not provide a call out list, the last outgoing call number/entry can be redialled.

4. Press the seek button on the audio unit.
5. Press the **PHONE** or the call accept button to dial the desired phone number.

Receiving an incoming call

Accepting an incoming call

Incoming calls can be accepted by pressing either the call accept button, the **PHONE** button or the **MODE** button on the remote control.

Rejecting an incoming call

Incoming calls can be rejected by pressing the call reject button.

Audio units without a telephone keypad can also reject a call by pressing either **PHONE**, **CD**, **AM/FM** or **ON/OFF**.

Receiving a second incoming call

Note: The second incoming call function must be activated in your phone.

Telephone

If there is an incoming call whilst there is an ongoing call, a beep will be heard and you will have the option to end the active call and to accept the incoming call.

Accepting a second incoming call

Second incoming calls can be accepted by pressing either the call accept button, the **PHONE** button, or the **MODE** button on the remote control.

Rejecting a second incoming call

Second incoming calls can be rejected by pressing the call reject button. Units without a telephone keypad can also reject a second incoming call by pressing the **CD** button, or the **AM/FM** button.

Muting the microphone

During a call, it is possible to mute the microphone. Whilst muted, confirmation will appear in the display.

Audio units with green call accept button

Press the call accept button. Press the button once again to turn this function off.

Audio units without green call accept button

Press the seek up or down button. Press the button once again to turn this function off.

Changing the active phone

Note: *Phones must be bonded to the system before they can be made active.*

Using the station storage button

Note: *This process is only for audio units without a telephone keypad.*

1. Press the **PHONE** button on the audio unit.

2. Press the preset number required (using the station preset buttons 1 - 6).

Using the audio unit menu

Note: *After bonding a phone to the system, this becomes the active phone.*

1. Press the **PHONE** or call accept button.
2. Press the **MENU** button on the audio unit.
3. Select the **ACTIVE PHONE** option on the audio unit.
4. Scroll through the different stored phones by using the seek buttons to display the bonded phones.
5. Press the **MENU** button to select the phone which is to be the active phone.

Debonding a bonded phone

A bonded phone can be deleted from the system at any time, unless a phone call is in progress.

1. Press the **PHONE** or call accept button.
2. Press the **MENU** button on the audio unit.
3. Select the **DEBOND** option on the audio unit.
4. Scroll through the different phones by using the seek buttons and display the phone to be debonded.
5. Press the **MENU** button to select the phone which is to be debonded.

USING THE TELEPHONE - VEHICLES WITH: NAVIGATION SYSTEM

This chapter describes the phone functions of the Navigation System.

Telephone

Note: Refer to your Navigation System guide for details of the controls.

An active phone must be present.

Even if connected to the Navigation System, your phone can still be used in the usual way.

Making a call

Dialling a number

Phone numbers can be dialled using voice control. See **Voice control** (page 152).

Ending a call

Calls can be ended by pressing either the **END** button, the **MODE** button on the remote switch or the **ON/OFF** button on the navigation system.

Redialling a number

1. Press the **PHONE** button on the unit.
2. Select **REDIAL**.

Receiving an incoming call

Accepting an incoming call

Incoming calls can be accepted by pressing either the call accept button, the **MODE** button on the remote control, the **PHONE** button on the unit or by using the **ACCEPT** option in the menu.

Rejecting an incoming call

Incoming calls can be rejected by pressing either the call reject button, the **CD** or **AM/FM** buttons on the unit, or by using the **REJECT** option in the menu.

Receiving a second incoming call

Note: The second incoming call function must be activated in your phone.

If there is an incoming call, whilst there is an ongoing call, a beep will be heard and you will have the option to end the active call and to accept the incoming call.

Accepting a second incoming call

Second incoming calls can be accepted by pressing either the call accept button, the **MODE** button on the remote control, the **PHONE** button on the unit or by using the **ACCEPT** option in the menu.

Note: This will cancel the ongoing call.

Rejecting a second incoming call

Second incoming calls can be rejected by pressing either the call reject button, or one of the following buttons on the unit: **CD**, **AM/FM**.

Muting the microphone

During a call, it is possible to mute the microphone. Whilst muted, confirmation will appear in the display.

SD navigation units

Press the mute button (symbol of a microphone with a line through it). Press the button once again to turn this function off.

CD navigation units

Press the microphone mute button. Press the button once again to turn this function off.

Changing the active phone

Note: Phones must be bonded to the system before they can be made active.

Note: After bonding a phone to the system, this becomes the active phone.

1. Press the **PHONE** button on the unit.

Telephone

2. Using the **BT SETTINGS** option in the menu, select the active phone from the list.

Debonding a bonded phone


A bonded phone can be deleted from the system at any time, unless a phone call is in progress.

1. Press the **PHONE** button on the unit.
2. Select the **BT SETTINGS** option in the menu.
3. Select the **DEBOND** option in the menu.
4. Select the phone from the list.

Voice control

PRINCIPLE OF OPERATION

CAUTION

 Using the system with the engine off will drain the battery.

Voice recognition enables operation of the system without the need to divert your attention from the road ahead in order to change settings, or receive feedback from the system.

Whenever you issue one of the defined commands with the system active, the voice recognition system converts your command into a control signal for the system. Your inputs take the form of dialogues or commands. You are guided through these dialogues by announcements or questions.

Please familiarise yourself with the functions of the system before using voice recognition.

Supported commands

The voice control system allows you to control the following vehicle functions:

- Bluetooth phone
- radio
- CD Player/CD Changer
- SD card
- navigation system (DVD units only - refer to separate DVD navigation handbook).

Note: *The voice control system is language specific. If you require the system to operate in another language please consult your dealer.*

System response

As you work through a voice session the system will prompt you with a beep tone each time the system is ready to proceed.

Do not try to give any commands until the beep tone has been heard. The voice control system will repeat each spoken command back to you.

If you are not sure how to continue say "HELP" for assistance or "CANCEL" if you do not wish to continue.

The "HELP" function provides only a subset of the available voice commands. Detailed explanations of all possible voice commands can be found on the following pages.

Voice commands

All voice commands should be given using a natural speaking voice, as if speaking to a passenger or on the phone. Your voice level should be dependant on the surrounding noise level inside or outside the vehicle but do not shout.

USING VOICE CONTROL

System operation

The order and content of the voice controls are given in the following lists. The tables show the sequence of user voice commands and system responses for each available function.

<> indicates a number or stored name tag to be inserted by the user.

Short cuts

There are a number of voice command short cuts available, which allow you to control some vehicle features without having to follow the complete command menu. These are:

- phone: "MOBILE NAME", "DIAL NUMBER", "DIAL NAME", and "REDIAL"
- CD player/CD changer: "DISC" and "TRACK"

Voice control

- radio: "TUNE NAME"
- SD card: "TRACK".

Start communicating with the system

Before you can start talking to the system you first have to press the **VOICE** or **MODE** button for each operation and wait until the system answers with a beep. See **Voice Control** (page 32).

Press the button again to cancel the voice session.

Name tag

The name tag functionality can support the phone, audio and navigation features by using the "STORE NAME" function. You can assign name tags to items such as favourite radio stations and personal phone contacts. See **Audio unit commands** (page 153). See **Telephone commands** (page 159). See **Navigation system commands** (page 163).

- Store up to 20 name tags per function.
- The average recording time for each name tag is approximately 2-3 seconds.

AUDIO UNIT COMMANDS

CD Player

You can control playback directly by voice control.

Overview

The overview below shows the available voice commands. The following lists will give further information about the complete command menu in selected examples.

"CD PLAYER"
"HELP"
"PLAY"
"TRACK"
"SHUFFLE ALL"
"SHUFFLE FOLDER"
"SHUFFLE OFF"
"REPEAT FOLDER"
"REPEAT TRACK"
"REPEAT OFF"

* Can be used as a shortcut.

** Only available if the CD contains audio data files like MP3 or WMA.

Voice control

Track

You can choose a track on your CD directly.

Steps	User says	System answer
1	"CD PLAYER"	"CD PLAYER"
2	"TRACK"	"TRACK NUMBER PLEASE"
3	"<a number between 1 and 99>"**	"TRACK <number>"

* Can be used as a shortcut.

** Additionally, numbers can be spoken as up to four single digits (for example "2", "4", "5" for track 245)

Shuffle all

To set random playback.

Steps	User says	System answer
1	"CD PLAYER"	"CD PLAYER"
2	"SHUFFLE ALL"	

Radio

The radio voice commands support the functionality of the radio and allow you to tune radio stations by voice control.

Overview

The overview below shows the available voice commands. The following lists will give further information about the complete command menu.

"RADIO"
"HELP"
"AM"
"FM"
"TUNE NAME"*
"DELETE NAME"
"DELETE DIRECTORY"
"PLAY DIRECTORY"

Voice control

"RADIO"
"STORE NAME"
"PLAY"

* Can be used as a shortcut.

Tune frequency

This function allows you to tune your radio by voice commands.

Steps	User says	System answer
1	"RADIO"	"RADIO"
2	"AM"	"AM FREQUENCY PLEASE"
	"FM"	"FM FREQUENCY PLEASE"
3	"<frequency>"*	"TUNE <frequency>"

* The frequency may be entered in a variety of ways. Refer below for representative examples.

FM band: 87.5 - 108.0 in increments of 0.1

- "Eighty nine point nine" (89.9)
- "Ninety" (90.0)
- "One hundred point five" (100.5)
- "One zero one point one" (101.1)
- "One zero eight" (108.0)

- "Five thirty one" (531)
- "Nine hundred" (900)
- "Fourteen forty" (1440)
- "Fifteen zero three" (1503)
- "Ten eighty" (1080)

Store name

AM/MW band: 531 - 1602 in increments of 9

If you have tuned a radio station, you can store it with a name in the directory.

AM/LW band: 153 - 281 in increments of 1

Steps	User says	System answer
1	"RADIO"	"RADIO"
2	"STORE NAME"	"STORE NAME" "NAME PLEASE"
3	"<name>"	"REPEAT NAME PLEASE"
4	"<name>"	"STORING NAME"

Voice control

Steps	User says	System answer
		"<name> STORED"

Tune name

This function allows you to call up a stored radio station.

Steps	User says	System answer
1	"RADIO"	"RADIO"
2	"TUNE NAME"*	"NAME PLEASE"
3	"<name>"	"TUNE <name>"

* Can be used as a shortcut.

Delete name

This function allows you to delete a stored radio station.

Steps	User says	System answer
1	"RADIO"	"RADIO"
2	"DELETE NAME"	"NAME PLEASE"
3	"<name>"	"DELETE <name>" "CONFIRM YES OR NO"
4	"YES"	"DELETED"
	"NO"	"COMMAND CANCELLED"

Play directory

This function allows you to let the system tell you all of the stored radio stations.

Steps	User says	System answer
1	"RADIO"	"RADIO"
2	"PLAY DIRECTORY"	"PLAY <DIRECTORY>"

Voice control

Delete directory

This function allows you to delete all stored radio stations at once.

Steps	User says	System answer
1	"RADIO"	"RADIO"
2	"DELETE DIRECTORY"	"DELETE DIRECTORY" "CONFIRM YES OR NO"
3	"YES"	"RADIO DIRECTORY DELETED"
	"NO"	"COMMAND CANCELLED"

Play

This function switches the audio source to the radio mode.

Steps	User says	System answer
1	"RADIO"	"RADIO"
2	"PLAY"	

Auxiliary input

This function allows you to switch the audio source to the attached auxiliary input device.

Steps	User says	System answer
1	"EXTERNAL DEVICE"	"EXTERNAL DEVICE"
2	"LINE IN"	"LINE IN"

SD Card

These voice commands support the functionality of an SD card which has suitable audio files written to it.

Overview

The overview below shows the available voice commands. The following lists will give further information about the complete command menu in selected examples.

Voice control

"SD CARD"
"HELP"
"PLAY"
"TRACK"
"SHUFFLE ALL"
"SHUFFLE FOLDER"
"SHUFFLE OFF"
"REPEAT TRACK"
"REPEAT FOLDER"
"REPEAT OFF"

* Can be used as a shortcut.

SD card play

This function allows you to switch the audio source to the SD card audio files.

Steps	User says	System answer
1	"SD CARD"	"SD CARD"
2	"PLAY"	

SD card track

You can choose a track on your SD card directly.

Voice control

Steps	User says	System answer
1	"SD CARD"	"SD CARD"
2	"TRACK"*	"TRACK NUMBER PLEASE"
3	"<a number between 1 and 99>""	"TRACK <number>"

* Can be used as a shortcut.

** Additionally, numbers can be spoken as up to four single digits (for example "2", "4", "5" for track 245).

TELEPHONE COMMANDS

Phone

Your phone system allows you to create an additional phonebook. The stored entries can be dialled by voice control. Phone numbers stored by using voice control are stored on the vehicle system and not in your phone.

Overview

The overview below shows the available voice commands. The following lists will give further information about the complete command menu in selected examples.

"PHONE"
"HELP"
"MOBILE NAME"*
"DIAL NUMBER"*
"DIAL NAME"*
"DELETE NAME"
"DELETE DIRECTORY"
"PLAY DIRECTORY"
"STORE NAME"
"REDIAL"*

Voice control

"PHONE"
"ACCEPT CALLS"
"REJECT CALLS"

* Can be used as a shortcut.

Phone functions

Dial number

Phone numbers can be dialled after giving the name tag voice command.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"DIAL NUMBER"*	"NUMBER PLEASE"
3	"<phone number>"	"<phone number> CONTINUE?"
4	"DIAL"	"DIALLING"
	"CORRECTION"	"<repeat last part of number> CONTINUE?"

* Can be used as a shortcut.

Dial name

Phone numbers can be dialled after giving the name tag voice command.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"DIAL NAME"*	"NAME PLEASE"
3	"<name>"	"DIAL <name>" "CONFIRM YES OR NO"
4	"YES"	"DIALLING"
	"NO"	"COMMAND CANCELLED"

* Can be used as a shortcut.

Voice control

Redial

This function allows you to redial the last dialled phone number.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"REDIAL"*	"REDIAL" "CONFIRM YES OR NO"
3	"YES"	"DIALLING"
	"NO"	"COMMAND CANCELLED"

* Can be used as a shortcut.

Mobile name

This function allows you to access phone numbers stored with a name tag in your mobile phone.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"MOBILE NAME"*	"MOBILE NAME" "<phone dependent dialogue>"

* Can be used as a shortcut.

DTMF (Tone dialling)

This function transfers spoken numbers into DTMF tones. For example, to make a remote enquiry to your home answering machine or to enter a PIN number etc.

Note: DTMF can only be used during an ongoing call. Operate the VOICE button and wait for the system prompt.

Can only be used with vehicles installed with a dedicated VOICE button.

Steps	User says	System answer
1		"NUMBER PLEASE"
2	"<numbers 1 to 9, zero, hash, star>"	

Voice control

Create a phonebook

Store name

New entries can be stored with the "STORE NAME" command. This feature can be used to dial a number by calling up the name instead of the full phone number.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"STORE NAME"	"STORE NAME" "NAME PLEASE"
3	"<name>"	"REPEAT NAME PLEASE"
4	"<name>"	"STORING NAME" "<name> STORED" "NUMBER PLEASE"
5	"<phone number>"	"<phone number>"
6	"STORE"	"STORING NUMBER" "<phone number>" "NUMBER STORED"

Delete name

Stored names can also be deleted from the directory.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"DELETE NAME"	"NAME PLEASE"
3	"<name>"	"DELETE <name>" "CONFIRM YES OR NO"
4	"YES"	"<name> DELETED"
	"NO"	"COMMAND CANCELLED"

Play directory

Use this function to let the system tell you all stored entries.

Voice control

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"PLAY DIRECTORY"	"PLAY DIRECTORY"

Delete directory

This function allows you to delete all entries in one go.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"DELETE DIRECTORY"	"DELETE DIRECTORY" "CONFIRM YES OR NO"
3	"YES"	"DIRECTORY DELETED"
	"NO"	"COMMAND CANCELLED"

Main settings

Reject calls

Calls can be set to be automatically rejected using voice control.

Steps	User says	System answer
1	"PHONE"	"PHONE"
2	"REJECT CALLS"	"REJECT CALLS"
	"ACCEPT CALLS"*	"ACCEPT CALLS"

* use this command to turn the reject mode off

NAVIGATION SYSTEM COMMANDS

Please refer to your separate Navigation manual for details of the command menus.

Appendices

TYPE APPROVALS

FCC/INDUSTRY CANADA NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: WJLRX-42

IC: 7847A-RX42

Changes or modifications to your device not expressly approved by the party responsible for compliance can void the user's authority to operate the equipment.

RX-42 - declaration of conformity

We, the party responsible for compliance, declare under our sole responsibility that the Handset Integration product RX-42 is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at:

www.novero.com/declaration_of_conformity

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Ford Motor Company is under license. Other trademarks and trade names are those of their respective owners.

ELECTROMAGNETIC COMPATIBILITY

WARNINGS



Your vehicle has been tested and certified to legislations relating to electromagnetic compatibility (72/245/EEC, UN ECE Regulation 10 or other applicable local requirements). It is your responsibility to ensure that any equipment you have fitted complies with applicable local legislations. Have any equipment fitted by properly trained technicians.



Radio frequency (RF) transmitter equipment (e.g. cellular telephones, amateur radio transmitters etc.) may only be fitted to your vehicle if they comply with the parameters shown in the table below. There are no special provisions or conditions for installations or use.



Do not mount any transceiver, microphones, speakers, or any other item in the deployment path of the airbag system.




Do not fasten antenna cables to original vehicle wiring, fuel pipes and brake pipes.



Keep antenna and power cables at least 100mm from any electronic modules and airbags.

Note: *Only fit antennas in the positions shown to the roof of your vehicle.*

Appendices

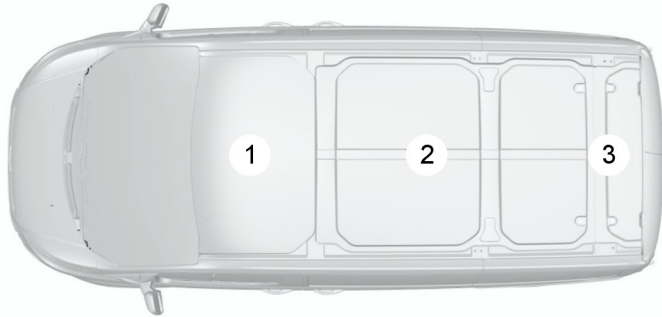

E100566

Frequency Band MHz	Maximum output power Watt (Peak RMS)	Antenna Positions
1 – 30	50 W	1, 2, 3
30 – 54	50 W	1, 2, 3
68 – 87.5	50 W	1, 2, 3
142 – 176	50 W	1, 2, 3
380 – 512	50 W	1, 2, 3
806 – 940	10 W	1, 2, 3
1200 – 1400	10 W	1, 2, 3
1710 – 1885	10 W	1, 2, 3
1885 – 2025	10 W	1, 2, 3

Note: After the installation of RF transmitters, check for disturbances from and to all electrical equipment in the vehicle, both in the standby and transmit modes.

Check all electrical equipment:

- with the ignition **ON**
- with the engine running
- during a road test at various speeds.

Check that electromagnetic fields generated inside the vehicle cabin by the transmitter installed do not exceed applicable human exposure requirements.

Index

A

A/C	
See: Climate Control.....	63
About This Manual.....	5
Protecting the Environment.....	5
ABS	
See: Brakes.....	87
ABS driving hints	
See: Hints on Driving With Anti-Lock Brakes.....	87
Accessories	
See: Replacement Parts Recommendation.....	6
Adjusting the Steering Wheel.....	31
Air Conditioning	
See: Climate Control.....	63
Air Vents.....	33
Alarm.....	30
Principle of Operation.....	30
Alternative frequencies.....	140
Appendices.....	164
Arming the alarm.....	30
Arming the engine immobiliser.....	29
At a Glance.....	7
Adjusting the steering wheel.....	10
Engine idle speed after starting.....	10
Instrument panel overview.....	7
Locking and unlocking the doors with the key.....	9
Locking and unlocking the doors with the remote control.....	9
Audible Warnings and Indicators.....	54
Door open.....	54
Frost.....	55
Lights on.....	55
Low fuel.....	55
Audio Control.....	31
Mode.....	32
Seek.....	32
Volume.....	31
Audio distortion reduction (CLIP).....	140
Audio introduction.....	132
Audio menu control.....	136
Audio System Security.....	134
Audio troubleshooting.....	145
Audio Troubleshooting.....	145

Audio Unit Clock and Date	
Displays.....	135
Audio unit commands.....	153
Auxiliary input.....	157
CD Player.....	153
Radio.....	154
SD Card.....	157
Audio unit menus.....	140
Audio unit operation.....	136
Audio unit overview.....	133
Auto-Dimming Mirror.....	49
Autolamps.....	39
Automatic volume control.....	140
Autostore control.....	138
Autowipers.....	34
Auxiliary Heater.....	67
General information.....	67
Principle of operation.....	67
Auxiliary input (AUX IN) socket.....	144
Auxiliary Input Socket.....	80
Auxiliary Power Points.....	78

B

Balance/fade control.....	136
Bass/treble control.....	136
Bluetooth setup.....	147
Handling of phones.....	147
Requirements for Bluetooth connection.....	147
Bonnet Lock	
See: Opening and Closing the Bonnet.....	106
Booster cables	
See: Jump-Starting the Vehicle.....	116
Booster Seats.....	12
Booster cushion (Group 3).....	13
Booster seat (Group 2).....	12
Brake and Clutch Fluid Check.....	110
Brakes.....	87
Principle of Operation.....	87
Breaking-In	
See: Running-In.....	96
Bulb changing	
See: Changing a Bulb.....	42
Bulb Specification Chart.....	47

Index

C

Capacities and Specifications.....	126
Technical Specifications.....	126
Cargo Nets.....	93
Car Wash	
See: Cleaning the Exterior.....	114
Catalytic Converter.....	83
Driving with a catalytic converter.....	83
Changing a Bulb.....	42
Central high mounted brake lamp.....	45
Front fog lamps.....	44
Headlamp.....	42
Interior lamp.....	46
Number plate lamp.....	46
Reading lamps.....	46
Rear lamps.....	45
Side repeaters.....	44
Changing a Fuse.....	99
Changing a Road Wheel.....	117
Installing a road wheel.....	120
Jacking and lifting points.....	118
Locking wheel nuts.....	117
Removing a road wheel.....	119
Spare wheel.....	119
Stowing the wheel.....	121
Vehicle jack.....	117
Changing the remote control	
battery.....	22
Changing the Wiper Blades.....	36
Checking the Wiper Blades.....	36
Child Safety.....	11
Child Safety Locks.....	16
Tourneo Connect.....	16
Child Seat Positioning.....	13
Child Seats.....	11
Child restraints for different mass	
groups.....	11
Cigar Lighter.....	78
Cleaning the Exterior.....	114
Body paintwork preservation.....	115
Cleaning the alloy wheels.....	114
Cleaning the chrome trim.....	114
Cleaning the headlamps.....	114
Cleaning the rear window.....	114

Cleaning the Interior.....	115
Instrument cluster screens, LCD screens,	
radio screens.....	115
Rear windows.....	115
Seat belts.....	115
Climate Control.....	63
Principle of Operation.....	63
Coded keys.....	29
Cold Weather Precautions.....	96
Compact disc playback.....	142
Compact Disc Player.....	142
Compact disc track compression.....	142
Compact disc track scanning.....	142
Convenience features.....	78
Coolant Check	
See: Engine Coolant Check.....	110
Cup Holders.....	79
Seat back trays.....	79

D

Diesel Particulate Filter.....	82
Regeneration.....	82
Direction Indicators.....	41
Disabling the passenger airbag.....	21
Disabling the passenger airbag.....	21
Enabling the passenger airbag.....	21
Disarming the alarm.....	30
Disarming the engine immobiliser.....	29
DPF	
See: Diesel Particulate Filter.....	82
Driving Hints.....	96

E

Ejecting compact discs.....	143
Electric exterior mirrors.....	48
Electromagnetic compatibility.....	164
Ending compact disc playback.....	143
Engine Coolant Check.....	110
Checking the coolant level.....	110
Topping up.....	110
Engine immobiliser.....	29
Principle of Operation.....	29
Engine Oil Check.....	109
Checking the oil level.....	109
Topping up.....	109

Index

Engine Oil Dipstick - 1.8L Duratorq-TDCi (Lynx) Diesel/1.8L Duratorq-TDDI (Lynx) Diesel.....	109
Entering a security code.....	134
Exterior Mirrors.....	48
Manual folding mirrors.....	48
F	
Fastening the seat belts.....	19
Rear seat belts.....	20
Fast forward/reverse.....	142
First Aid Kit.....	97
Floor Mats.....	80
Fog Lamps - Front	
See: Front Fog Lamps.....	39
Fog Lamps - Rear	
See: Rear Fog Lamps.....	39
Front Fog Lamps.....	39
Front Seats.....	71
Adjusting the angle of the seatback.....	72
Adjusting the armrest.....	73
Adjusting the height of the seat.....	72
Adjusting the lumbar support.....	72
Folding the front passenger seat.....	73
Moving the seats backwards and forwards.....	71
Fuel and Refuelling.....	83
Technical Specifications.....	84
Fuel Burning Heater	
See: Auxiliary Heater.....	67
Fuel Consumption.....	84
Fuel Consumption	
See: Technical Specifications.....	84
Fuel filler flap.....	84
All vehicles.....	84
Tourneo Connect.....	84
Fuel Quality - Diesel.....	83
Long-term storage.....	83
Fuse Box Locations.....	98
Central fuse box.....	98
Engine compartment fuse box.....	98
Fuse Labels.....	99
Fuses.....	98
Fuse Specification Chart.....	100
Central fuse box.....	101
Engine compartment fuse box.....	100
G	
Gauges.....	50
Engine coolant temperature gauge.....	51
Fuel gauge.....	52
Gearbox	
See: Transmission.....	86
General Information on Radio Frequencies.....	22
H	
Handbrake	
See: Parking Brake.....	87
Hazard Warning Flashers.....	40
Headlamp Levelling.....	40
All vehicles.....	40
Recommended headlamp levelling switch positions.....	40
Head Restraints.....	74
Adjusting the head restraint.....	74
Removing the head restraint.....	74
Heated Seats.....	77
Heated Windows and Mirrors.....	63
Heated exterior mirrors.....	64
Heated windows.....	63
Heating	
See: Climate Control.....	63
Hill launch assist (HLA)	
See: Using hill start assist.....	90
Hill Start Assist.....	90
Principle of Operation.....	90
Hints on Driving With Anti-Lock Brakes.....	87
HLA	
See: Hill Start Assist.....	90
See: Using hill start assist.....	90
Hood Lock	
See: Opening and Closing the Bonnet.....	106
I	
Ignition Switch.....	81
Immobiliser	
See: Engine immobiliser.....	29
Important audio information.....	132
Audio unit labels.....	132
Disc labels.....	132

Index

Incorrect security code.....	134
Information Displays.....	56
General Information.....	56
Information Messages.....	60
Doors open.....	61
Hill start assist.....	61
Lighting.....	62
Maintenance.....	62
Message indicator.....	60
Stability control (ESP).....	62
Instrument Cluster.....	50
Instrument Lighting Dimmer.....	78
Interior Lamps.....	41
Reading lamps.....	42
Introduction.....	5
ISOFIX Anchor Points.....	16
Torneo Connect.....	16

J

Jump starting	
See: Jump-Starting the Vehicle.....	116
Jump-Starting the Vehicle.....	116
To connect the booster cables.....	116
To start the engine.....	116

K

Keys and Remote Controls.....	22
-------------------------------	----

L

Lighting Control.....	38
Headlamp flasher.....	38
Home safe lighting.....	38
Lighting control positions.....	38
Main and dipped beam.....	38
Parking lamps.....	38
Lighting.....	38
Load apportioning valve (LAV)	
plate.....	125
Load Carriers	
See: Roof Racks and Load Carriers.....	93
Load Carrying.....	93
General Information.....	93
Loading compact discs.....	142

Locking and Unlocking.....	24
Automatic relocking.....	25
Central locking.....	24
Double locking.....	24
Double locking the doors with the key.....	24
Locking and unlocking confirmation.....	24
Locking and unlocking the doors from	
inside.....	26
Locking and unlocking the doors with the	
remote control.....	25
Locking and unlocking the luggage	
compartment lid.....	24
Locking the doors with the key.....	24
One-stage unlocking.....	25
Opening the doors.....	26
Sliding door memory locking.....	25
Two-stage unlocking.....	25
Unlocking the doors with the key.....	24
Locks.....	24
Lost security code.....	134
Lug Nuts	
See: Changing a Road Wheel.....	117

M

Maintenance.....	106
General Information.....	106
Technical Specifications.....	112
Manual Climate Control.....	64
Air conditioning.....	66
Air distribution control.....	64
Blower.....	64
Defrosting and demisting the	
windscreen.....	65
Rapid heating of vehicle interior.....	65
Recirculated air.....	65
Temperature control.....	64
Ventilation.....	65
Manual Transmission.....	86
Selecting reverse gear.....	86
Map Pockets.....	79
Message Centre	
See: Information Displays.....	56
Mirrors	
See: Heated Windows and Mirrors.....	63
See: Windows and Mirrors.....	48

Index

N

Navigation system commands.....	163
News broadcasts.....	141

O

Occupant protection.....	18
Principle of Operation.....	18
Oil Check	
See: Engine Oil Check.....	109
On/off control.....	136
Opening and Closing the Bonnet.....	106
Closing the bonnet.....	107
Opening the bonnet.....	106

P

Parking Aid.....	92
Parking Aids.....	92
Principle of Operation.....	92
Parking Brake.....	87
Applying the parking brake.....	87
Parking on a hill.....	87
Releasing the parking brake.....	87
Personalised Settings.....	59
Clock setting.....	59
ESP.....	59
Vehicle settings.....	60
Power Door Locks	
See: Locking and Unlocking.....	24
Power Steering Fluid Check.....	111
Topping up.....	111
Power Windows.....	48
To open the driver's window	
automatically.....	48
Programming the remote control.....	22
Programming a new remote control.....	22
Reprogramming the unlocking	
function.....	22

R

Rear Fog Lamps.....	39
Rear Quarter Windows.....	49

Rear Seats.....	74
Folding a single seatback forwards.....	75
Folding the entire seat forwards.....	75
Returning the seat to the upright	
position.....	76
Rear Window Wiper and Washers.....	35
Intermittent wipe.....	35
Rear window washer.....	36
Reverse gear wipe.....	35
Refuelling.....	84
Regional mode (REG).....	141
Repairing Minor Paint Damage.....	115
Repeat compact disc tracks.....	143
Replacement Parts	
Recommendation.....	6
Collision Repairs.....	6
Scheduled Maintenance and Mechanical	
Repairs.....	6
Warranty on Replacement Parts.....	6
Roadside Emergencies.....	97
Roof Racks and Load Carriers.....	93
Roof rack.....	93
Running-In.....	96
Brakes and clutch.....	96
Engine.....	96
Tyres.....	96

S

Safety Precautions.....	83
Seat belt height adjustment.....	20
Seat belt reminder.....	20
Deactivating the seat belt reminder.....	20
Seats.....	71
Security code.....	134
Setting the clock and date on the audio	
unit.....	135
12/24 hour format.....	135
Changing the date and time.....	135
Shuffle/random.....	142
Sitting in the Correct Position.....	71
Snow Chains	
See: Using Snow Chains.....	122
Stability Control.....	88
Principle of Operation.....	88
Starter Switch	
See: Ignition Switch.....	81

Index

Starting a Diesel Engine.....	81	Traction Control.....	89
Cold or hot engine.....	81	Principle of Operation.....	89
Starting and Stopping the Engine.....	81	Traffic information control.....	138
General Information.....	81	Activating traffic announcements.....	138
Station preset buttons.....	138	Ending traffic announcements.....	139
Station tuning control.....	139	Local or distant traffic.....	139
Manual tuning.....	139	To adjust the preset volume.....	139
Scan tuning.....	139	Traffic announcement volume.....	139
Seek tuning.....	139	Transmission.....	86
Steering Wheel.....	31	Trip Computer.....	58
Storage compartments.....	79	Average fuel consumption.....	59
Overhead storage compartment.....	79	Average speed.....	59
Seat storage.....	79	Distance to empty.....	59
Switching Off the Engine.....	81	Menu.....	59
Vehicles with a turbocharger.....	81	Odometer.....	58
Symbols Glossary.....	5	Outside air temperature.....	59
Symbols in this handbook.....	5	Tripmeter.....	58
Symbols on your vehicle.....	5	Type 1 information display.....	58
		Type 2 information display.....	58
T		Type approvals.....	164
Technical Specifications		FCC/INDUSTRY CANADA NOTICE.....	164
See: Capacities and Specifications.....	126	RX-42 - declaration of conformity.....	164
Telephone commands.....	159	Tyre Care.....	121
Create a phonebook.....	162	Tyres	
Main settings.....	163	See: Wheels and Tyres.....	117
Phone.....	159		
Phone functions.....	160	U	
Telephone controls.....	147	Under Bonnet Overview - 1.8L	
Remote control.....	147	Duratorq-TDCi (Lynx) Diesel/1.8L	
Telephone setup.....	146	Duratorq-TDDi (Lynx) Diesel.....	108
Bond another Bluetooth phone.....	147	Using hill start assist.....	90
Making a phone an active phone.....	146	Activating the system.....	90
Phonebook.....	146	Deactivating the system.....	90
Phonebook categories.....	146	Disabling the system.....	91
Telephone.....	146	Using seat belts during pregnancy.....	20
General Information.....	146	Using Snow Chains.....	122
Towing a Trailer.....	95	Using Stability Control.....	88
Steep gradients.....	95	Using the telephone - Vehicles With:	
Towing Points.....	104	Navigation System.....	149
Front towing eye.....	104	Changing the active phone.....	150
Rear towing eye.....	104	Debonding a bonded phone.....	151
Toureno Connect.....	104	Making a call.....	150
Transit Connect.....	104	Muting the microphone.....	150
Towing the Vehicle on Four		Receiving an incoming call.....	150
Wheels.....	104	Receiving a second incoming call.....	150
Towing.....	95		
Track selection.....	142		

Index

Using the telephone - Vehicles Without:	
Navigation System.....	148
Changing the active phone.....	149
Debonding a bonded phone.....	149
Making a call.....	148
Muting the microphone.....	149
Receiving an incoming call.....	148
Receiving a second incoming call.....	148
Using Traction Control.....	89
Using voice control.....	152
Name tag.....	153
System operation.....	152
Using Winter Tyres.....	122

V

Vehicle battery.....	116
Vehicle Care.....	114
Vehicle Identification Number.....	125
Vehicle Identification Plate.....	125
Vehicle identification.....	125
Vehicle recovery.....	104
Ventilation	
See: Climate Control.....	63
Vents	
See: Air Vents.....	63
VIN	
See: Vehicle Identification Number.....	125
Voice control.....	152
Principle of Operation.....	152
Voice Control.....	32

W

Warning Lamps and Indicators.....	52
ABS warning lamp.....	52
Airbag warning lamp.....	52
Brake system warning lamp.....	52
Direction indicator.....	52
Door open warning lamp.....	52
Engine warning lamps.....	53
Front fog lamp indicator.....	53
Glow plug indicator.....	53
Headlamp indicator.....	53
Ignition warning lamp.....	53
Low fuel level warning lamp.....	53
Main beam indicator.....	53
Message indicator.....	53
Oil pressure warning lamp.....	54
Rear fog lamp indicator.....	54
Seat belt reminder.....	54
Service interval indicator.....	54
Shift indicator.....	54
Stability control (ESP) and traction control warning lamp.....	54
Water-in-fuel indicator.....	54
Warning Triangle.....	97
Washer Fluid Check.....	111
Washers	
See: Wipers and Washers.....	34
Washing	
See: Cleaning the Exterior.....	114
Waveband button.....	138
Wheel Nuts	
See: Changing a Road Wheel.....	117
Wheels and Tyres.....	117
General Information.....	117
Technical Specifications.....	122
Windows and Mirrors.....	48
Windscreen Washers.....	35
Windscreen Wipers.....	34
Intermittent wipe.....	34
Winter Tyres	
See: Using Winter Tyres.....	122
Wipers and Washers.....	34

