WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



United States
Lincoln Client Relationship Center
1-800-521-4140
(TDD for the hearing impaired 1-800-232-5952)
owner.lincoln.com

Canada
Lincoln Client Relationship Centre
1-800-387-9333
(TDD for the hearing impaired 1-888-658-6805)
lincolncanada.com

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

FSC MIX Paper FSC® C102270

Lincoln MKZ
August 2016
Second Printing
Quick Reference Guide
Litho in USA
HH6J 19G217 AA

2017 MKZ







Quick Reference Guide

THE LINCOLN MOTOR COMPANY

The Lincoln Pledge[1]

A Collective Promise to be There for You and Your Lincoln
From our trusted service advisors to expert technicians to the voice on the other end of the line should you call – we'll be there for you and your Lincoln wherever, whenever, if ever you need us.

Our Promise Includes:

Pickup and Delivery
We'll pick up your Lincoln when it's time for service and drop it off when we're finished. We'll even provide you with a Lincoln to use while we have yours.[2]

Lincoln Concierge
Our caring agents are empowered to handle your call and concerns from beginning to end. Contact us at **800-521-4140** or TDD Hearing Impaired **800-232-5952**.

Roadside Assistance for Life
We'll be there for you for as long as you own your Lincoln – with 24-hour/seven-days-a-week assistance nationwide.[3]

Complimentary Car Wash
After each service visit we're happy to return your Lincoln back to you washed and ready for the road ahead.[3]

Complimentary Lincoln Loaner
Should your Lincoln require warranty service, we'll be there for you with a complimentary loaner vehicle.[†]

Lincoln Complimentary Maintenance
New owners of 2014-2016 model year vehicles enjoy a two-year maintenance plan. New owners of 2017 model year vehicles will receive their first oil change free of charge.[††]

Bumper-to-Bumper Limited Warranty
Be assured your Lincoln is covered for four years/50,000 miles.[†]

Dedicated Support:

Lincoln Client Relationship Center and Roadside Assistance

1-800-521-4140

TDD for the Hearing Impaired

1-800-232-5952

owner.lincoln.com

- How-to and informational videos.
- Warranty and maintenance information.
- Make your payment or schedule service online.
- Shop for accessories.

Join us in Conversation



Our caring agents are empowered to handle your call and concerns from beginning to end.

[1] Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at **LincolnCanada.com** for more details.

[2] Pick-up and delivery is valid for new Lincoln Owners of 2017 model year vehicles or newer. Service is available for retail and warranty repairs. Mileage limitations may apply. See dealer for complete details. Lincoln reserves the right to change program details at any time without obligation.

[3] Complimentary Car Wash available at select dealers. Roadside Assistance for Life only available for model-year 2013 and newer for the original owner. See dealer for complete details. Lincoln reserves the right to change program details at any time without obligation.

[†] Valid for Lincoln owners of 2010 model-year vehicles to present. See dealer for complete details. Lincoln reserves the right to program details at any time without obligation.

[††] See dealer for complete details. Lincoln reserves the right to change program details at any time without obligation.

Table of Contents

Instrument Panel ..... 4 – 5
SYNC 3 ..... 6 – 9
Convenience ..... 10 – 11
Comfort ..... 12 – 13
Function ..... 14 – 15
Essential Information ..... 16 – 18
Commonly Used Voice Commands 19

owner.lincoln.com

lincolncanada.com

MyLincoln Mobile

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you install a scanner app) and you can access even more information about your vehicle.

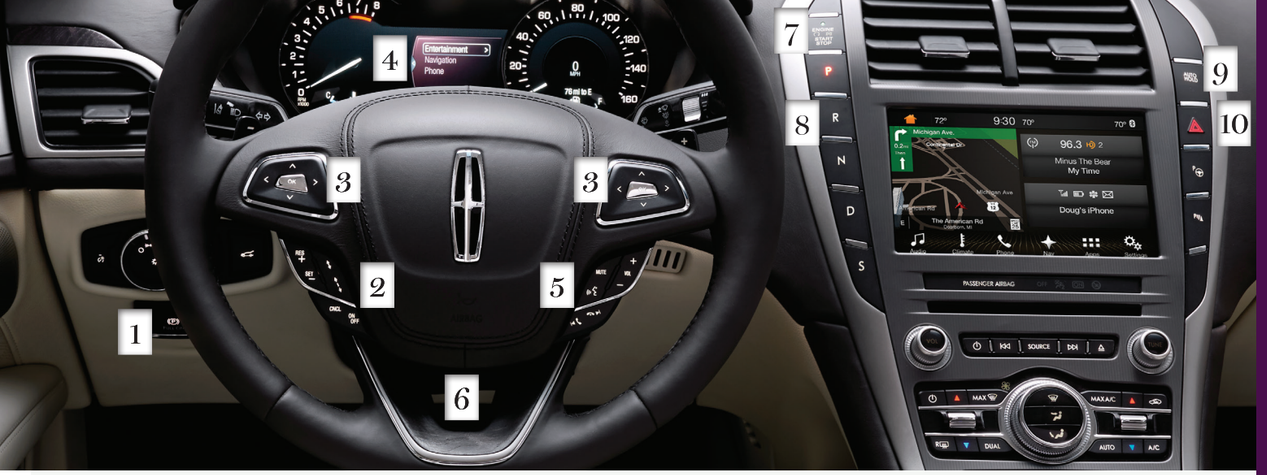

1 Electric Parking Brake

The operating switch Ⓟ replaces the conventional handbrake. It is on the instrument panel, to the left of the steering wheel. To use, pull the switch. The brake system warning lamp lights to confirm that you applied the electric parking brake. You can release the electric parking brake manually by switching on the ignition, pressing the brake pedal and then pressing the electric parking brake switch.

The parking brake automatically releases when:

- The driver door is closed.
- You are accelerating.
- There are no faults detected in the parking brake system.

Refer to the **Brakes** chapter of your **Owner's Manual** for more details.

2 Adaptive Cruise Control*

In addition to cruise control, your vehicle may also include adaptive cruise control.

The system adjusts your speed to maintain a set distance between you and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the ↕ and ↕ controls on the steering wheel. See page 15 of this guide for more details.

Note: Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to the **Cruise Control** chapter of your **Owner's Manual** for safety information, more details and limitations.

*if equipped

Instrument Panel

3 Information Displays

Provide information about various systems on your vehicle. Use the 5-way controls located on the steering wheel to choose and confirm settings and messages.

Refer to the **Information Displays** chapter in your **Owner's Manual** for more information.

4 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or is blinking after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

5 Steering Wheel Audio and Media Controls

Press **VOL** + or **–** to increase or decrease volume levels.

Press ⏮ or ⏭ to access the next or previous radio station preset, CD track or preset satellite radio channel*.

Press 📞 to answer an incoming call or switch between calls.

Press 📵 and hold to exit phone mode or end a call.

Press 🎤 to access voice recognition.

6 Power Tilt and Telescoping Steering Column*

Your power tilt steering column has a 4-way rocker control that allows you to adjust the steering wheel to your desired position.

7 Push Button Start System

Allows you to start your vehicle by pressing the **START STOP** button when fully pressing down on the brake pedal. Press the button again to switch off the engine.

Note: Your intelligent access transmitter must be inside the vehicle for the ignition to start.

8 Push Button Shift Transmission

The transmission shift buttons are on the instrument panel, next to the touchscreen. Press the brake pedal down and press one of the **PRNDS** buttons to select a gear. The button you select illuminates and the instrument cluster shows the selected gear.

Note: When entering an automatic car wash, **always** put your vehicle into **Stay in Neutral** mode. To put your vehicle in **Stay in Neutral** mode, make sure your vehicle is stationary first, and then:

A. Press the neutral (N) control on the shifter assembly once. The information display screen reads **"Press N Again to Enter Stay in Neutral mode"**.

B. Press neutral (N) on the shifter assembly again. The message **"Stay in Neutral mode engaged"** appears in the information display and the neutral (N) control flashes continuously to confirm your selection.

To exit **Stay in Neutral** mode, press another gear.

9 Auto Hold

Auto Hold uses your vehicle's brakes to hold the vehicle stationary and prevent it from rolling after you come to a stop. See page 18 for more information.

10 Hazard Warning Control

*if equipped



Using SYNC 3

SYNC is a hands-free, voice recognition system used for entertainment, information and communication.

Use the touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. The system provides easy interaction with your audio, climate, phone, navigation,* mobile apps and settings.

Press **Settings** on the feature bar on your touchscreen to personalize the many features and settings of your vehicle all in one place..

General Tips

- Press the home icon at any time to return to the home screen.
- For additional support, refer to your **Owner's Manual**, visit **owner.lincoln.com** or call the toll-free number. See the inside back cover of this guide for more details.
- The touchscreen is sensitive, so make sure you press the desired icon accurately.

Why Do You Need a SYNC Owner Account?

A SYNC owner account allows you to receive the latest software updates, and when you have questions, free client support. Some services may not be available in your area.

Create Your Account

Create your account by visiting **owner.lincoln.com**.
Call the toll-free number for more information.

In the United States:
owner.lincoln.com
1-800-521-4140

In Canada:
syncmyride.ca
1-800-387-9333

Pairing Your Phone with SYNC 3

Pair your phone to SYNC 3 before use. Make sure your vehicle is in park (P) and you switch on your ignition.

- Make sure you switch Bluetooth on and your device is discoverable. See your phone's manual, if necessary.
- Touch **Add Phone** on the touchscreen. Follow the on-screen instructions.
- You will hear a prompt telling you to search for SYNC on your device. Select your vehicle make and model as it displays on your device.
- Confirm the six-digit PIN appearing on your device matches the six-digit PIN displayed on the SYNC 3 touchscreen.
- When the PIN is confirmed, the display indicates when the pairing is successful.

Note: SYNC 3 prompts you to choose your settings for certain features. Your cell phone may also prompt you to give SYNC 3 permission to access information. For more information on your cell phone's capability, see your cell phone's manual and visit the website.

Phone

After pairing your phone, you can access more phone-dependent features:

- Recent call lists.
- Contacts: Sort alphabetically and choose a specific letter to begin viewing your entries.
- Phone settings: Pair another phone, and set ring tones and alerts.
- Text messages.
- Do not disturb: Send all calls to your voice mail, all ring tones and alerts set to silent mode and text message notifications are not displayed on the touchscreen.

Making a Phone Call

Use SYNC 3 to make a phone call to anyone in your phone book through the touchscreen:

- Press **Contacts**, and then select the name of the contact you want to call.
- To call using a number from your recent calls, press **Recent Call List** and then select an entry you want to call.
- To call a number that is not stored in your **Contacts** list, use the **Keypad** feature to manually dial the number. Press **Call** to initiate the call.

Note: Pressing the backspace button deletes the last typed digit.

Note: Use the voice commands to make calls. Say **"Call James at home"** or **"Dial 555-1212"**. You can use the touchscreen to place calls as well. Refer to the **SYNC 3** chapter in your **Owner's Manual** for complete details.

Receiving Calls

Whenever you have an incoming call, an audible tone sounds. Caller information also appears in the display, if the information is available.

- Press **Accept** on the touchscreen or the phone button on the steering wheel to answer an incoming call.
- Do nothing to ignore an incoming call, and SYNC 3 logs it as a missed call.
- Reject any incoming call by pressing **Reject** on the touchscreen.

Ending the Call

Press and hold the phone button on your steering wheel.

Do Not Disturb Mode

Touch the **Do Not Disturb** button to send all calls directly to your voicemail. All ringtones and alerts are silent.

Navigation*

Press the **Navigation*** icon to set your destination. Select one of two ways to find your destination:

- Destination mode lets you key in a specific address or use a variety of search methods to locate where you want to go.
- Map mode shows advanced viewing of 2D city maps, 3D landmarks and 3D city models (when available).

Set a Destination

Press **Destination** on your touchscreen and then press **Search**. Enter a street address, intersection, city or a point of interest (POI).

After you choose your destination, press **Start**. The system uses a variety of screens and visible prompts to guide you to your destination.

The navigation map shows your estimated time of arrival, remaining travel time or the distance to your destination.

Navigation Menu

When you are on your route, you can change your touchscreen view. Touch **Menu** and then select **Screen View** to select from these options:

- **Full Map.**
- **Highway Exit** displays on the right side of the touchscreen. View POI icons (restaurants, ATMs, etc.) as they pertain to each exit. You can select a POI as a waypoint, if you wish.
- **Turn List** shows all of the available turns on your current route.
- **Traffic List** displays SiriusXM Traffic and Travel Link* information.

Refer to the **SYNC 3** chapter in your **Owner's Manual** for more details.

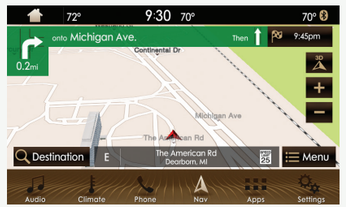

Climate

Touch the **Climate** icon on the touchscreen to access climate control features, including the temperature, airflow direction, fan speed and other climate features for you and your front passenger. Say **"Climate set temperature to 72 degrees"** and SYNC 3 makes the adjustment.

You can also use the ▲ or ▼ buttons to change the temperature setting.

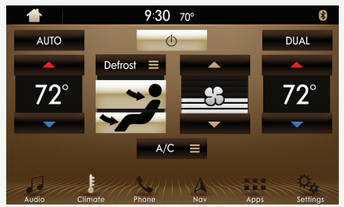

*if equipped

Audio

SYNC 3 gives you a mix of media. Press the **Audio** icon on the touchscreen and select **Sources**. Choose from AM, FM, SiriusXM*, CD, USB, **Bluetooth** Stereo or Apps.

Set Your Radio Presets

- Tune to the station and then press and hold one of the memory preset buttons. The audio mutes briefly when the system saves the station, and then the audio returns.
- Two preset banks are available for AM, three for FM, and three for SiriusXM*. To access additional presets, tap the preset button. The indicator on the preset button shows which bank of presets you are currently viewing.

Using SYNC 3 to Access Digital Media

Play all of your favorite music from phones, flash drives and other devices.

Plug your device into a USB port, select **Sources** and then choose **USB**. Wait for the system to finish indexing your music to begin listening.

You can even create random playlists by using the **Shuffle** feature.



*if equipped

Apps

Voice Control Your Smartphone Apps

The system supports the use of certain types of apps such as Pandora® or iHeartRadio® (U.S.), Spotify® or Glympse® through a USB or **Bluetooth**-enabled device. Each app gives you different on-screen options depending on the app's content. To find new apps, use the voice command, **"Find new apps"**.

Refer to the **SYNC 3** chapter in your **Owner's Manual** for details. For support, visit **owner.lincoln.com** or call the toll-free number.

Smartphone Connectivity

SYNC 3 allows you to use Apple CarPlay and Android Auto to access your phone over a USB connection.

When you use Apple CarPlay or Android Auto, you can:

- Make calls.
- Send and receive messages.
- Listen to music.
- Use your phone's voice assistant.

For more information, refer to the **SYNC 3** chapter in your **Owner's Manual** for details.



Universal Garage Door Opener

The universal garage door opener replaces the common hand-held garage door opener with a three-button transmitter located on the driver's sun visor.

The system includes two primary features, a garage door opener and a platform for remote activation of devices within the home. This functionality allows you to program garage doors, as well as entry gates, security systems, entry door locks and home or office lighting.

Remote Start

Remote start allows you to start your vehicle from the outside using your intelligent access key. To start, press and then press twice within three seconds. When inside, apply the brake and press the **START STOP** button. Shift into drive (D) and go. To switch off your vehicle after using remote start, press once.



An LED on the intelligent access key provides status feedback of remote start or stop commands:

Solid green: The remote start was successful.

Solid red: The remote stop was successful and the engine is off.

Blinking red: The remote start or stop failed.

Blinking green: The system is waiting for a status update.

Intelligent Access



Note: Your intelligent access key must be within 3 feet (1 meter) of your vehicle for intelligent access to operate properly.

- To unlock and open a door, pull an exterior door handle. Make sure not to touch the lock sensor on top of the handle.
- To lock your vehicle, touch the top of the door handle. To unlock and open the luggage compartment, press the exterior release button to the right of the high-mount brake lamp.

The intelligent access key also contains a mechanical key blade that you can use to unlock your vehicle, if necessary.

- Press once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press to switch on the panic alarm. Press the button again or switch on the ignition to switch the panic alarm off.
- Press twice within three seconds to open the luggage compartment.

Car finder: Press twice within three seconds to locate your vehicle. A tone sounds and the lamps flash.

Luggage Compartment Release



When your intelligent access transmitter is within 3 feet (1 meter) of the vehicle, you can open your luggage compartment by pressing the release button.



Power Decklid Close

Press the button in the luggage compartment to use the power-close feature.

Autowipers*

To switch this feature on, move the wiper controls to intermittent wipe. The autowiper system turns the wipers on **only** when moisture is present on the windshield. The wiper speed depends on how much moisture the system detects and the sensitivity setting.

- A low sensitivity means the wipers turn on when the system detects a large amount of moisture on the windshield. A high sensitivity means the wipers turn on when the rain sensor detects a small amount of moisture on the windshield.
- To switch this feature off, use your wiper controls. To change this feature to intermittent wipe every time you use your wipers, use the information display.
- To switch intermittent wipe back to autowipers, use the information display.

Note: Make sure that you switch off this feature before entering a car wash.

Power Windows: Global Opening and Closing

For a short time after you unlock your vehicle with the transmitter, you can open the windows and vent the moonroof* with the ignition off.

After you unlock your vehicle, press and hold the transmitter unlock button to open the windows and vent the moonroof*. Release the unlock button once movement starts. Press the lock or unlock button to stop movement.

To close the windows and moonroof*, press and hold the transmitter lock button. Release the lock button once movement starts. Press the lock or unlock button to stop movement.

Note: You can switch this feature on or off in the information display. See the **Information Display** section in your **Owner's Manual** for more details.

Note: To operate this feature, accessory delay must not be active.

Rear Seat Pass-Through



Fold the armrest down, release the latch, then pull down on the door in the back of the armrest. You can store longer cargo such as skis or lumber.

Note: Do not exceed 80 pounds (36 kilograms) of weight on the pass-through door.

*if equipped

Climate Controlled* Front Seats

Press the heated seat symbol or the cooled seat symbol to cycle through the various settings and off. More indicator lights indicate warmer or cooler settings.

The cooled seats only operate when the engine is running.

Heated Steering Wheel*

Press the button on the climate control panel to switch this feature on and off.

Rear Heated Seats*

The rear heated seat controls are on the rear of the center console. To use, press the heated seat button to cycle through the various heat settings and off. More lights indicate warmer settings. The rear heated seats only operate when the ignition is on.

Memory Function

Use the memory buttons on the driver door to program and recall the positions of the driver seat, power mirrors and power tilt and telescopic steering column*.

To program position **1**, press and hold the **SET** button until you hear a single tone, then press and hold the **1** button until you hear another single tone. Use this same procedure to set position **2**. You can recall the set memory positions by pressing the preset button.

You can also program your memory seats to your intelligent access key. That way, when you unlock your door with the intelligent access key, your memory features automatically move into your saved position. See the **Seats** chapter in your **Owner's Manual** for more details.

Tilting Head Restraints



You can adjust your front-row head restraints. Pull up to raise the head restraint. To lower, press the head restraint down when pressing and holding the guide sleeve adjust and release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, untilted position.

Note: Do not attempt to force the head restraint backward after tilting it.

Multi-Contour Front Seats with Active Motion*

Using the button mounted on the outside of the front seats, or through the touchscreen, you and a front-seat passenger can adjust the massage and support settings. You can also control the intensity of the massage, increase or decrease the lumbar bolster and cushion support, and adjust the height of the bolster.

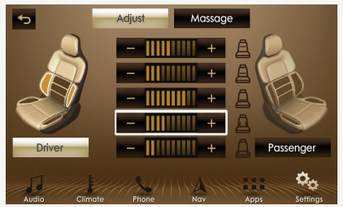

*if equipped

Retractable Sunshade and Moonroof*



Located on the overhead console, your controls have a one-touch open and close feature.

To open the moonroof, press and release . The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the control again. To close the moonroof, press and release .

To vent the moonroof, press and release .

The sunshade automatically opens with the moonroof. You can also open the sunshade with the moonroof closed. To open the sunshade, press and release . The sunshade stops short of its fully opened position for the comfort of rear passengers. To open the sunshade fully, press the control again.

To close the sunshade, press and release . The sunshade stops short of its fully closed position. To close the sunshade fully, press the control again.

Ambient Lighting*



When you switch on this feature, you light key areas of your vehicle interior with a choice of colors.

To access and make adjustments:

1. Press the **Settings** icon > **Vehicle** > **Ambient Lighting**.
2. Tap the color you desire.
3. Drag the scroll bar up or down to increase or decrease the intensity.

To switch ambient lighting off, tap the active color once or drag the scroll bar for the active color all the way down to zero intensity.

Welcome Lighting

The Lincoln welcome mat projection lights are on the bottom of the exterior mirror housings. They project an image onto the ground a short distance from your vehicle when welcome lighting or lighted entry turns on.

*if equipped



Rear View Camera*

This system provides a video image of the area behind your vehicle. The display automatically appears in the touchscreen when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

Note: Mud, water or debris obstructs the camera's view. Clean the lens with a soft, lint-free cloth and non-abrasive cleaner.



Front and Rear Parking Aids*

Sounds a warning tone if there is an obstacle near the front or rear bumper. The front sensors are active when the transmission is in any position other than park (P) and your vehicle is traveling at low speed. The rear sensors are active when the transmission is in reverse (R) and your vehicle speed is below 3 mph (5 km/h). The warning tone increases in frequency as the object gets closer.

See the **Parking Aids** chapter in your **Owner's Manual** for complete information on your vehicle's sensing systems.

Adaptive Headlamps*

The headlamp beams move in the same direction as the steering wheel, providing more visibility when driving around curves. Active at speeds above 3 mph (5 km/h), it has a power-up movement check feature. When you start your vehicle, the lamps track to a predetermined position, then back to center to let you know the system is working properly. To use, place the lighting control into the autolamps* position.

*if equipped



Active Park Assist*



Detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) when you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle.

- To use active park assist, press the button on the right side of the instrument panel or on the center console, depending on your vehicle. Press once for parallel parking, or twice for perpendicular parking.
- To stop the parking procedure, grab the steering wheel or press the button again. For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual**.

Note: The driver is always responsible for controlling the vehicle, supervising the system, and intervening, if required.

*if equipped

Configurable Daytime Running Lamps*



When you switch this feature **ON** in the information display, daytime running lamps turn on when you are driving, the lighting control is in the autolamps* position and the headlamps are off. You can switch the Configurable Daytime Running Lamps feature ON or OFF using the information display controls. See the **Lighting** chapter in your **Owner's Manual** for complete information.

MyKey™

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things such as speed restrictions and limited volume levels. For complete information, refer to the **MyKey** chapter in your **Owner's Manual**.

Lincoln Drive Control

This feature integrates chassis and steering controls to optimize ride comfort, steering and handling.

There are a range of modes you can choose from to customize your ideal driving experience. Use the information display to set your preference:

- **Normal:** Delivers a balanced combination of comfortable, controlled ride and confident handling.
- **Comfort:** Provides a more relaxed driving experience, maximizing comfort.
- **Sport:** Provides a sportier driving experience with an emphasis on handling and control.

Refer to the **Driving Aids** chapter of your **Owner's Manual** for more details.

Adaptive Cruise Control*

The system adjusts your speed to maintain a set distance between you and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the and buttons on the steering wheel.

To set a cruise speed, accelerate to the desired speed, switch cruise control on, select a gap setting, and press the **SET-** button. An indicator light, the current gap setting and your set speed appear in the information display.

Press **CNCL** to cancel cruise control. To resume your set speed, press the **RES+** button and your vehicle returns to the set speed and gap setting.

To resume your set speed from a complete stop:

- If your vehicle stops for less than three seconds, it automatically accelerates to follow the vehicle ahead when you release the brake pedal.
- If your vehicle stops for more than three seconds, you must press the **RES+** button or the accelerator pedal to resume following the vehicle ahead.

Press the **OFF** button or switch off the ignition to turn off cruise control. See the **Cruise Control** chapter in your **Owner's Manual** for complete details.

Refueling



When refueling your vehicle:

1. Put your vehicle in park (P) and switch the ignition off.
2. Open the fuel filler door and slowly insert the fuel filler nozzle fully into the fuel system.
3. Leave the nozzle fully inserted until you stop pumping fuel. Stop refueling when the fuel pump nozzle automatically shuts off for the first time. Allow at least 10 seconds after pumping fuel before removing the fuel filler nozzle. This allows residual fuel to drain back into the fuel tank and not spill onto the vehicle.
4. Slowly remove the fuel filler nozzle and close the fuel filler door.

Note: When using a portable fuel container, do not use aftermarket funnels, as they do not work with the Easy Fuel system and may cause damage. Always use the plastic funnel that comes with your vehicle. Clean the funnel after each use or dispose of it properly.

Fuel Tank Capacity and Fuel Info

Fuel tank capacity varies on your MKZ, depending on your drive type: 16.5 gallons (62.5 liters) for front-wheel drive models and 18.0 gallons (68.1 liters) for all-wheel drive models. Use only UNLEADED gasoline blended with a maximum of 15% ethanol and a minimum of 87 octane rating. **Do not use E85 (ethanol), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.**

Automatic Engine Shutdown

Your vehicle includes a feature that automatically shuts down the engine if it has been idling for an extended period of time. The ignition also turns off in order to save battery power. You can override this feature temporarily by pressing the brake or accelerator pedal, or by pressing **OK** or the **RESET** button in your information display. Refer to the **Information Displays** chapter of your **Owner's Manual** for more details.

Towing

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the **Towing the Vehicle on Four Wheels** section in the **Towing** chapter of your **Owner's Manual** for more information.

Open Window Buffeting

You may hear a pulsing noise when just one of the windows is open. Lower the opposite window slightly to reduce this noise.

Lane Keeping System*

This system uses a camera mounted behind the interior mirror to detect unintentional drifting toward the outside of the lane. If drifting is detected, the system either vibrates the steering wheel (Alert mode) or assists the driver by gently steering back toward the center of the lane (Aid mode). The activation button is on the end of the direction indicator lever. See the **Driving Aids** chapter in your **Owner's Manual** for complete information.

Blind Spot Information System (BLIS) and Cross Traffic Alert*

BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. Cross Traffic Alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). BLIS and Cross Traffic Alert displays a yellow indicator light in your exterior mirrors, and Cross Traffic Alert also sounds tones and displays messages to warn you from which direction vehicles are approaching.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to the **Driving Aids** chapter in your **Owner's Manual** for safety information and system limitations.



Tire Pressure Monitoring System

Your vehicle displays a low tire pressure warning light in your information display when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate tires to the proper pressure. Refer to the **Tire Pressure Monitoring System** section in the **Wheels and Tires** chapter of your **Owner's Manual** for more information.

Tire Sealant and Inflator Kit*

The kit is under the load floor of the luggage. The kit consists of an air compressor to reinflate the tire and a sealing compound in a canister that effectively seals most punctures caused by nails or similar objects. The canister contains only enough sealant compound for one tire. See an authorized dealer for a replacement sealant canister after each use.

This kit provides a temporary tire repair seal, allowing you to drive your vehicle up to 120 miles (200 kilometers) at a maximum speed of 50 mph (80 km/h) to reach a tire service location.



Note: After sealant use, the tire pressure monitoring system sensor and valve stem on the wheel must be replaced by an authorized dealer. For more details, refer to the **Wheels and Tires** chapter of your **Owner's Manual**.

Location of Spare Tire and Tools*

Your spare tire and tools are under the load floor of the luggage compartment of your vehicle. The spare tire is designed for emergency use only. Replace it as soon as possible. For complete details, refer to the **Wheels and Tires** chapter of your **Owner's Manual**.

*if equipped

*if equipped

Auto Hold

Auto Hold can assist you when stopping at traffic lights or when in traffic jams by holding the brakes when you stop the vehicle. Press the **AUTO HOLD** button on the right-hand side of the center console to switch the system on. The **AUTO HOLD** button lights. When the system is on and actively holding the vehicle, **AUTO HOLD** displays in the instrument cluster. When you press the accelerator pedal, Auto Hold automatically releases the brakes. In some situations, Auto Hold may apply the electric parking brake and illuminate the brake warning lamp in the instrument cluster.

Auto Hold turns off when you power down your vehicle, or you can switch the feature off manually by pressing the **AUTO HOLD** button. Switch Auto Hold off if you are towing a trailer or having the vehicle towed.

See the **Brakes** chapter in your **Owner's Manual** for safety information, more details and limitations.

All-Wheel Drive*

All-wheel drive (AWD) uses all four wheels to power the vehicle. This increases traction, allowing you to drive over terrain and road conditions that a conventional two-wheel drive vehicle cannot. The AWD system is on all the time and requires no input from the driver.

Note: Your AWD vehicle is not for off-road use. The AWD feature gives your vehicle some limited off-road capabilities. See the **All-Wheel Drive** chapter in your **Owner's Manual** for complete details.

Pre-Collision Alert*

This system is designed to detect your vehicle's rapid approach to a stationary vehicle, another vehicle traveling in the same direction as yours or a pedestrian within your driving path. When the system turns on, a red light flashes and a tone sounds.



The system has three types of functionality:

- **Alert**: A red light flashes, a warning tone sounds and a message shows in the information display.
- **Brake Support**: Lightly applies the brakes to reduce collision speed. If the collision risk increases after the warning light illuminates, brake support prepares the brakes for rapid braking. The brakes do not automatically turn on, but if you press the brake pedal, the system may apply full force, even if you press the brake pedal lightly.
- **Active Braking**: Turns on if the system determines a collision is imminent. The system may help the driver reduce impact damage or avoid the crash completely.

Note: The system does not detect cyclists, animals, pedestrians at night or vehicles traveling in a different direction. Adverse weather conditions, extreme outside temperatures and debris on the camera lens can affect system operation. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.

See your **Owner's Manual** for safety information, complete details and system limitations.

*if equipped

Press the voice button on the right-hand side of your steering wheel and then say:

Basic Commands

- Main menu
- Go back
- Cancel
- List of commands
- Next page
- Previous page
- Help

Apps

- List mobile apps
- Find new apps

Phone

- Phone list of commands
- Pair phone
- Call <name> <on cell/at home/ at work>
- Dial <number>
- Listen to message

Climate

- Climate list of commands
- Climate set temperature to <# degrees>

Audio

- AM <530-1710>
- FM <87.9-107.9>
- CD
- USB
- Sirius <0-233>
- <Sirius channel name>
- **Bluetooth** audio
- Help

Navigation*

- Navigation list of commands
- Destination <home/previous destination>
- Find <POI/an address/ intersection>
- Show route
- Where am I?
- SiriusXM Traffic and Travel Link* list of commands
  - Show <traffic/weather map/ 5 day forecast/fuel prices>
  - Help

Some services may not be available in your area. For additional support, refer to your Owner's Manual, visit the website or call the toll-free number.

U.S. clients: Visit **owner.lincoln.com** or call **1-800-521-4140** (select Option 1 or 2 for language, then press 3).

Canadian customers: Visit **syncmyride.ca** or call **1-800-387-9333** (select Option 1 or 2 for language, then press 3).

*if equipped