WARNING
Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.



United States
Lincoln Client Relationship Center
1-800-521-4140
(TDD for the hearing impaired: 1-800-232-5952)
owner.lincoln.com

Canada
Lincoln Client Relationship Centre
1-800-387-9333
(TDD for the hearing impaired: 1-888-658-6805)
lincolncanada.com

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual, which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

FSC MIX Paper FSC® C102270

June 2019
First Printing
Litho in USA
LH6J 19G217 AA

2020 MKZ







Quick Reference Guide

THE LINCOLN MOTOR COMPANY



WARRANTY INFORMATION:
Your vehicle comes with a New Vehicle Limited Warranty. The express warranties of the New Vehicle Limited Warranty are in substitution for and exclude all other liabilities of any kind whether arising under statute, in tort, by implication of law or otherwise including, to the full extent as may be allowed by law, liability for any other representations respecting the vehicle, statutory warranties or implied warranties or conditions as to its merchantability or fitness.

Download a FREE electronic copy or order one FREE printed copy of the most up-to-date Warranty Guide by visiting the Owner Manuals section of **owner.lincoln.com**. (United States)
For Canada, visit **lincolncanada.com/warranty**.

FOR LIMO/LIVERY/HEARSE VEHICLES:
View and download your Warranty Guide by visiting the Warranty Information section of the Fleet website, **fleet.ford.com/limo**. (United States only)

U.S. Roadside Assistance

We're here to help you out no matter where, no matter when.

Call 24/7 when you need assistance.
1-800-521-4140

- Locked out
- Flat tire
- Drained battery
- Out of gas

THE LINCOLN MOTOR COMPANY

Canada Roadside Assistance

We're here to help you out no matter where, no matter when.

1-800-387-9333 or download the **Sykes4Lincoln App**

- Towing
- Battery boosting
- Fuel (up to 10 litres)
- Tire service
- Key service
- Other roadside services

THE LINCOLN MOTOR COMPANY

U.S. Lincoln Concierge

The Lincoln Concierge is your connection to all things Lincoln.

Empowered to handle your calls from beginning to end.

1-800-521-4140

- Provides owner benefit details
- Talks through features

THE LINCOLN MOTOR COMPANY

Canada Roadside Assistance

Owner's Name

Vehicle Identification Number

See Warranty Guide for complete details.

Download the Sykes4Lincoln Roadside Assistance App for access to your roadside assistance services.

THE LINCOLN MOTOR COMPANY

For future quick reference, complete the Roadside Assistance Identification Card and place it in your wallet.

UNITED STATES

Lincoln Way App

CANADA

Sykes4Lincoln Roadside App

The Lincoln Way App and the Sykes4Lincoln Roadside App are available via the Apple App Store® or Google Play™

The Lincoln Way®

Our unique range of services is designed to make your Lincoln ownership effortless.

Lincoln Pickup & Delivery

Schedule your Pickup & Delivery appointment through the Lincoln Way℠ app[1] or by phone, and we've got the rest. We'll pick up your Lincoln and deliver it back to you when service is complete[2,3]. We'll also leave you with a complimentary Lincoln loaner[3] during your service, so your time remains distinctly yours. Your vehicle will even be returned to you washed and ready for your next journey.

Lincoln Way App

Download the Lincoln Way app[1] to your mobile device to enjoy the flexibility and convenience of connecting with Lincoln services and features from wherever life takes you. For more details, visit **www.lincoln.com/lincolnway**.

Lincoln Concierge

Lincoln Concierge is your 24/7 personal connection for the latest information about Lincoln vehicles, services and ownership benefits. Simply choose how you'd like to connect and a highly trained Lincoln Concierge team member will help you explore Lincoln in the way that suits you best.

You can reach us any time of day or night.

- Call **800-521-4140.**
- Chat online at **lincoln.com**
- Through the Lincoln Way App[1]

Roadside Assistance for Life**

We're here to help you out – no matter where, no matter when.

- Locked out
- Flat tire
- Drained battery
- Out of gas

Call 24/7 when you need assistance.



Our caring agents are empowered to handle your call and concerns from beginning to end.

Dedicated Support:

owner.lincoln.com

- How-to and informational videos.
- Warranty and maintenance information.
- Make your payment or schedule service online.
- Shop for accessories.

Join us in Conversation

*Canadian Roadside coverage and benefits may differ from the United States coverage. Canadian clients should refer to the Lincoln Roadside Assistance section of the Warranty Guide, call **1-800-387-9333** or visit the website at **lincolncanada.com** for more details.

[1] Available via a download and compatible with select smartphone platforms. Message and data rates may apply.

[2] Lincoln Pickup & Delivery is valid for owners of 2017 or newer model-year Lincoln vehicles. Service available for retail and warranty repairs. Mileage limitations may apply. Lincoln reserves the right to change the program at any time without obligation.

[3] See dealer for details.

**Roadside assistance for life is only available for model-year 2013 and newer for the original owner.

Refueling

When refueling your vehicle:

1. Make sure the ignition is switched off.
2. Fully open the fuel door.
3. Insert the fuel pump nozzle into the fuel system up to the first notch, and leave the nozzle inserted and resting against the cover of the fuel tank until you are done pumping.
4. Make sure you keep the fuel pump nozzle in a level position when refueling or it may impact the flow of the fuel. Improper positioning can also cause the fuel pump to shut off before the fuel tank is full.
5. When you finish refueling, slowly raise and remove the fuel pump nozzle. Fully close the fuel door.

If you are refilling your tank from a fuel container, make sure you use the fuel filler funnel included with your vehicle. Using an aftermarket funnel may not work with the capless system and could cause damage to your vehicle. For more information and for your fuel filler funnel location, please see the **Fuel and Refueling** chapter of your **Owner's Manual.**

Fuel Tank Capacity and Fuel Info

For Front Wheel Drive (FWD) vehicles with a 2.0 liter engine, the fuel tank capacity is 16.5 gallons (62.5 liters). For All Wheel Drive (AWD) vehicles with a 2.0 liter or 3.0 liter engine, the fuel tank capacity is 18.0 gallons (68.1 liters). We recommend regular unleaded gasoline with a pump (R+M)/2 octane rating of 87. To provide improved performance, we recommend premium fuel for severe duty usage such as trailer towing. Use only UNLEADED fuel or UNLEADED fuel blended with a maximum of 15% ethanol and a minimum octane rating of 87. Do not use any other fuel because it could damage or impair the emission control system.

Towing

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to the **Towing the Vehicle on Four Wheels** section in the **Towing** chapter of your **Owner's Manual** for more information.

Tire Pressure Monitoring System

The tire pressure monitoring system allows you to view the tire pressure readings through the information display. When one or more of your tires are under-inflated, your vehicle turns on the low tire pressure warning light in the instrument cluster. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure. Refer to the **Tire Pressure Monitoring System** section in the **Wheels and Tires** chapter of your **Owner's Manual** for more information.

Location of Spare Tire and Tools*

Your spare tire and tools are under the carpeted wheel cover. A dissimilar spare tire is designed for emergency use only and should be replaced as soon as possible.

Table of Contents

Instrument Panel ..... 4 – 5
Commonly Used Voice Commands 6
SYNC 3..... 7 – 10
Lincoln Embrace 11
Convenience ..... 12 – 13
Comfort..... 14 – 15
Technology..... 16 – 18
Essential Information 19

owner.lincoln.com

lincolncanada.com

Lincoln Way

LEARN MORE ABOUT YOUR NEW VEHICLE

Scan the country-appropriate QR code with your smartphone (make sure you install a scanner app) and you can access even more information about your vehicle.



1 Electric Parking Brake

The electric parking brake switch replaces the conventional hand brake. The switch is on the instrument panel. To apply the electric parking brake, pull the switch up. The brake system warning lamp flashes then illuminates to confirm that you applied the parking brake. To release the electric parking brake manually, switch the ignition on, press the brake pedal and then press the switch down. The brake system warning lamp turns off. Your vehicle automatically releases the parking brake when the driver door is closed, the accelerator pedal is pressed and no faults are detected in the parking brake system.

Note: If the electric parking brake warning lamp stays on, then the electric parking brake did not automatically release. You must release the electric parking brake manually using the switch.

2 Adaptive Cruise Control

Adaptive cruise control adjusts your speed to maintain a set distance between your vehicle and the vehicle in front of you in the same lane. You can select from one of four gap settings by pressing the gap controls on the steering wheel. The system can also bring your vehicle to a complete stop and may resume going forward in stop-and-go traffic.

Refer to the **Cruise Control** chapter in your **Owner's Manual** for safety information, more details and limitations.

*if equipped

Instrument Panel

3 Information Displays

Provides information about various systems on your vehicle. Use the controls located on the steering wheel to choose and confirm settings and messages.

Refer to the **Information Displays** chapter of your **Owner's Manual** for more information.

4 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or is blinking after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a problem. Drive in a moderate fashion and have your vehicle checked as soon as possible.

5 Steering Wheel Audio and Media Controls

VOL + or **–** Press to increase or decrease volume levels.

⏮ or ⏭ Press to access the previous or next media selection.

MUTE Press to silence the current media.

Press to access voice recognition. See page 6 for available voice commands.

Press to end a phone call.

Press to access phone mode or to answer a phone call.

6 Power Adjustable Steering Column*

Your power tilt and telescoping steering column has a rocker control that allows you to adjust the steering wheel to your desired position.

7 Keyless Starting

You can start your vehicle by pressing the **START STOP** button while fully pressing down on the brake pedal. Press the button again, without applying the brake, to switch the engine off. If you leave your vehicle idling for an extended period of time, the engine shuts down automatically. Before this happens, a message appears in the information display, allowing you time to override the shutdown feature. If you try to leave the vehicle when it is still on, the horn will sound twice.

Note: A valid key must be inside the vehicle for the ignition to start.

8 Push Button Shift Transmission

The transmission shift buttons are on the instrument panel, next to the touchscreen. Press the brake pedal down and press one of the **PRNDS** buttons to select a gear. The button you select illuminates and the instrument cluster shows the selected gear.

Note: When entering an automatic car wash, **always** put your vehicle in **Stay in Neutral** mode. To put your vehicle in **Stay in Neutral** mode, make sure your vehicle is stationary first, and then:

A. Press the neutral (N) button on the shifter assembly once. A message will appear in your information display screen prompting you to press the neutral (N) button.

B. Press the neutral (N) button on the shifter assembly again. A message appears in the information display and the neutral (N) button flashes continuously to confirm your selection.

To exit **Stay in Neutral** mode, select another gear.

9 Auto Hold

Auto Hold uses your vehicle's brakes to hold the vehicle stationary and prevent it from rolling after you come to a stop. See page 17 for more information.

10 Hazard Warning Control

Commonly Used Voice Commands

Press the voice button on the right-hand side of your steering wheel and then say:

General
- Cancel
- Help
- Main Menu
- List of Commands

Audio
- Radio
- AM <frequency number>
- FM <frequency number>
- **Bluetooth** Audio
- USB

Navigation [2]
- Find an Address
- Find a Place
- Drive Home
- Drive to Work
- Show Previous Destinations
- Cancel Route
- Show Route
- Repeat Instruction
- Show Map

Phone
- Pair Phone
- Call <contact name>
- Call <contact name> at <location>
- Dial <number>

Climate
- Set Temperature ___

SiriusXM Traffic and Travel Link [1,2]
- Show Traffic
- Show Weather Map
- Show Fuel Prices
- Show 5-Day Forecast

Apps
- Mobile Applications
- List Applications
- Find Applications
- <Application Name> Help

[1] SiriusXM may not be available in all markets. Activation and a subscription are required.
[2] if equipped

Some services may not be available in your area. For additional support, refer to your **Owner's Manual**, visit the website or call the toll-free number.
U.S. clients: Visit **owner.lincoln.com** or call **1-800-521-4140**.
Canadian clients: Visit **syncmyride.ca** or call **1-800-387-9333**.



SYNC 3 allows you to interact with a variety of features using the touchscreen and voice commands. The system provides easy use of the system elements like audio, phone, mobile apps and settings.

Using the Touchscreen

Use the touchscreen to navigate the SYNC 3 features. The status bar on the top of the screen contains the home button, clock, outside temperature and status bar icons that inform you about the system. The feature bar allows you to select system features like audio and settings. For your safety, some features are speed-dependent. Their use is limited to when your vehicle speed is less than 3 mph (5 km/h).

Updating Your System

System updates are available through the local Ford website using a USB or by connecting your vehicle to a Wi-Fi network connection. With a network connection, you can have your SYNC 3 system update automatically as well. Please see the **SYNC 3** section of your **Owner's Manual** for more information on updating your system.

Using Voice Recognition

Using voice commands allows you to keep your hands on the wheel and focus on what is in front of you. To activate the SYNC 3 voice commands, press the voice button on the steering wheel and wait for the prompt.

- Press the button during any system voice prompt to interrupt the prompt and begin your voice command.
- To adjust the volume of the system voice prompts, turn the volume control when a voice prompt is playing.
- To use Siri on your iOS device, press and hold the voice control button on the steering wheel.

You can find the available voice commands in the **SYNC 3** chapter of your **Owner's Manual** or in the **Commonly Used Voice Commands** in this guide.

Pairing Your Phone for the First Time

Switch on **Bluetooth** on your device to begin pairing. Check the compatibility of your device on the local Ford website.

To add a phone:

1. Select the phone option on the feature bar.
2. Select **Add Phone**.
3. A prompt alerts you to search for the system on your phone.
4. Select your vehicle on your phone.
5. Confirm that the six-digit number appearing on your phone matches the six-digit number on the touchscreen.
6. The touchscreen indicates when the pairing is successful.
7. Download the phonebook from your phone when you are prompted.

To pair subsequent phones, please see the **SYNC 3** chapter in your **Owner's Manual.**

Using Your Connected Phone

To make calls, select from your contacts, recent calls or dial the number on the phone keypad. From the phone menu you can also adjust phone settings, change devices or mute your phone. The do not disturb mode rejects all incoming calls and switches off ring tones and alerts.



Apple CarPlay and Android Auto

To use Apple CarPlay and Android Auto, connect your device to a USB port and follow the instructions on the touchscreen. Certain SYNC 3 features are not available when you are using Apple CarPlay or Android Auto. Android Auto may need to be enabled from the settings menu. You can switch Apple CarPlay or Android Auto off through the settings menu. See the **SYNC 3** chapter of your **Owner's Manual** for more information.



Audio

You can select from a variety of entertainment options, including AM/FM radio, USB, **Bluetooth** Stereo and Apps.

Presets

To set a new preset, tune to the station and then press and hold one of the preset buttons. The audio mutes briefly while the system saves the station and then returns. There are two preset banks available for AM, three banks for FM and three banks for SiriusXM*. To access additional presets, tap the preset button.

*if equipped

Climate

You can adjust climate control features, including the temperature, airflow direction, fan speed and other climate features. You can also use voice commands to make climate adjustments.

Apps

The system allows you to interact with select mobile apps while keeping your eyes on the road. Voice commands, your steering wheel buttons or a quick tap on your touchscreen gives you advanced control of compatible mobile apps. You can also stream your favorite music or podcasts, share your time of arrival with friends and keep connected safely. For more information on connecting apps to your system, please see the **SYNC 3** chapter of your **Owner's Manual.**

Navigation

You can set your destination using the text entry or map screen. Using text entry, you can search by entering all or part of the destination, such as the address, intersection or city. Using the map screen, you can select a location on the map, then select **Start** to begin the route guidance.

You can adjust the map to display in two dimensional or three dimensional mode. You can also zoom in or out on the map by using a pinching gesture. During route guidance you will see a turn indicator, points of interest on the map, your current road and an option to mute the guidance prompts. You can press the button in the top right-hand corner of the main map to display estimated time of arrival, remaining travel time or distance to your destination.



Settings

Under the Settings menu, you can access and adjust the settings for many of the system features. Once you select a tile, press the ℹ to view an explanation of the feature or setting.



As you approach or leave your vehicle, key areas of your vehicle automatically adjust, including the following personalization features.

Welcome Lighting

The Lincoln welcome mat projection lights are on the bottom of the exterior mirror housings. They project an image onto the ground a short distance from your vehicle when welcome lighting or lighted entry turns on.

Auto-folding Mirrors*

Automatically folds the exterior mirrors toward the glass when you place the transmission into park (P), switch off the ignition, exit and lock the driver door. Auto-folding mirrors unfold and return to their original positions automatically after you unlock your vehicle, and then open and close the driver door.

You can fold the mirrors on demand by pressing the power-folding mirror control located on the door. The control will light and the mirrors will fold in toward the glass. Press the control again to unfold the mirrors. The control light will turn off.

Illuminated Entry

The interior lamps and select exterior lamps will light when you unlock the doors with the remote control.

Easy Entry and Exit

Moves the driver seat rearward up to 2 inches (5 centimeters). Additionally, the power tilt and telescoping steering wheel moves to the full up position when the transmission is in park (P) and you switch off the keyless start ignition. The driver seat and steering column return to their previous positions when you push the keyless start ignition button.

Note: You must have your intelligent access key with you for these features to work.

Network Connectivity

The modem allows you to connect your vehicle to the Internet to use when you are on the road. See your **Owner's Manual** to enable the modem using the Lincoln Way App. Once the modem is enabled, you can locate and remotely start, lock and unlock your vehicle. You can also access automatic system updates. More information is available through the Lincoln Way App.

The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive automatic software updates and send vehicle-related information to us, for example diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example cell phone network tower identification. For additional information about our privacy policy, refer to your local Lincoln website.

*if equipped

Universal Garage Door Opener

The universal garage door opener replaces the common hand-held garage door opener with a three-button transmitter located on the driver sun visor.

The system includes two primary features, a garage door opener and a platform for remote activation of devices within the home. This functionality allows you to program garage doors, as well as entry gates, security systems, entry door locks and home or office lighting.

Remote Start

Remote start allows you to start the engine from outside your vehicle using your key.

To start, press and then press twice within three seconds. Before driving your vehicle, you must press the push button ignition switch on the instrument panel while applying the brake pedal. You can also turn your vehicle off from outside after a remote start by pressing once. If your vehicle is equipped with remote feedback, an LED on the key provides status feedback of remote start or stop commands. A solid green light means the remote start or extension was successful, while a blinking red light means the remote start or stop has failed. A solid red light means that the remote stop was successful and the engine is off. When the system is waiting for a status update from the vehicle, you will see a blinking green light.

Remote Control Icons

Press once to lock all doors.

Press again within three seconds to confirm that you locked all doors.

Press once to unlock the driver door. Press again within three seconds to unlock all doors.

Press to activate the panic alarm. Press again or switch the ignition on to deactivate.

Press twice within three seconds to open the luggage compartment.

Car finder: Press twice within three seconds to locate your vehicle. The horn sounds and the direction indicators flash.

Note: The intelligent access transmitter also contains a mechanical key blade that you can use to unlock the driver door, if necessary.

Adaptive Headlamps*

The headlamp beams move in the same direction as the steering wheel, providing more visibility when driving around curves. Active at speeds above 3 mph (5 km/h), it has a power-up movement check feature. When you start your vehicle, the lamps track to a predetermined position, then back to center to let you know the system is working properly. To use, place the lighting control into the autolamps* position .

Luggage Compartment Release

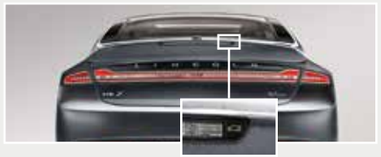

When your intelligent access transmitter is within 3 feet (1 meter) of the vehicle, you can open your luggage compartment by pressing the release button.

Power Decklid Close



Press the button in the luggage compartment to use the power-close feature.

Autowipers*

Use the rotary control to adjust the sensitivity of the autowipers. The autowiper system turns the wipers on **only** when moisture is present on the windshield.

- A low sensitivity means the wipers turn on when the system detects a large amount of moisture on the windshield. A high sensitivity means the wipers turn on when the rain sensor detects a small amount of moisture on the windshield.
- Autowipers default to on and remain on until you switch them off in the information display.

Note: Make sure that you switch off this feature before entering a car wash.

Global Opening and Closing

For a short time after you unlock your vehicle with the remote control, you can open the windows and vent the moonroof* with the ignition off.

After you unlock your vehicle, press and hold the button to open the windows and vent the moonroof*. Release the button once movement starts. Press the or button to stop movement.

To close the windows and moonroof*, press and hold the button. Release the button once movement starts. Press the or button to stop movement.

Note: You can switch this feature on or off in the information display. See the **Information Displays** chapter in your **Owner's Manual** for more details.

Note: To operate this feature, accessory delay must not be active.

Window Buffeting

You may hear a pulsing noise when one of the windows is open. Lower the opposite window slightly to reduce this noise.

*if equipped

Climate Controlled* Front Seats

Press the heated seat symbol or the cooled seat symbol to cycle through the various settings and off. More lights indicate warmer or cooler settings.

The cooled seats only operate when the engine is running.

Heated Steering Wheel*

Press the button on the climate control panel to switch this feature on and off.

Rear Heated Seats*

The rear heated seat controls are on the rear of the center console. To use, press the heated seat button to cycle through the various heat settings and off. More lights indicate warmer settings. The rear heated seats only operate when the ignition is on.

Memory Function

The memory function allows a one-touch recall of personalized memory features including the driver seat, power mirrors and power steering column. Use the memory controls on the driver door to program and then recall memory positions. Move the seats and steering column to the desired positions. Press and hold the **SET** button until you hear a single tone. Then press the desired preset button until you hear a single tone. Repeat this process to set subsequent memory positions. You can now use these controls to recall the set positions. You can also program your memory seat to your transmitter. That way, when you unlock your door with the transmitter, your memory features automatically move into your saved positions.

See the **Seats** chapter in your **Owner's Manual** for more details.

Head Restraints

You can adjust your front-row head restraints.
Pull up to raise the head restraint. To lower, press the head restraint down while pressing and holding the guide sleeve adjust and release button. Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. After the head restraint reaches the forward-most tilt position, pivoting it forward again releases it to the rearward, untilted position.

MyKey™

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things such as speed restrictions and limited volume levels. For complete information, refer to the **MyKey** chapter in your **Owner's Manual**.

Multi-Contour Front Seats with Active Motion*

Using the button mounted on the outside of the front seats or through the touchscreen menu, you and a front-seat passenger can adjust the massage and support settings. You can also control the intensity of the massage, increase or decrease the lumbar bolster and cushion support, and adjust the height of the bolster.

Moonroof*



The moonroof controls are on the overhead console and have a one-touch open and close feature. To stop its movement during one-touch operation, press the control a second time.

- Press and release to open the moonroof. The moonroof stops short of the fully opened position. To open the moonroof fully, press and release the control again.
- Press and release to close the moonroof.
- Press and release to vent the moonroof.
- Press and release to open the sunshade. The sunshade stops short of its fully opened position for the comfort of rear passengers. To open the sunshade fully, press the control again.
- Press and release to close the sunshade.

Ambient Lighting*

To access and adjust:

1. Press the **Settings** icon then **Ambient Lighting**.
2. Touch the desired color.
3. Drag the selected color up or down to increase or decrease the intensity.

To switch ambient lighting off, press the active color once or drag the active color all the way down to zero intensity.

Configurable Daytime Running Lamps*

When you switch this feature on in the information display, daytime running lamps turn on when you are driving, the lighting control is in the autolamps* position and the headlamps are off.

You can switch the configurable daytime running lamps feature on or off using the information display controls. See the **Lighting** chapter in your **Owner's Manual** for complete information.

Dual Automatic Temperature Control

You and your front passenger can press independent controls to adjust the air temperature on each side of the vehicle. To return to one temperature, hold down the **AUTO** button for more than two seconds. The passenger setting then switches to the driver set temperature.

Autolamps

When the lighting control is in the autolamps position , the headlamps automatically turn on in low-light situations or when the wipers activate. The headlamps remain on for a period of time after you switch the ignition off. Use the information display controls to adjust the period of time that the headlamps remain on.

*if equipped

Front and Rear Parking Aids*

Sounds a warning tone if there is an obstacle near the front or rear bumper. The front sensors are active when the transmission is in any position other than park (P) and your vehicle is traveling at low speed. The rear sensors are active when the transmission is in reverse (R) and your vehicle speed is below 3 mph (5 km/h). The warning tone increases in frequency as the object gets closer.

See the **Parking Aids** chapter in your **Owner's Manual** for complete information on your vehicle's sensing systems.

Intelligent Access





You can unlock and lock the vehicle without taking the key out of your pocket or bag when your intelligent access key is within 3 feet (1 meter) of your vehicle. To unlock, touch the unlock sensor on the back of the door handle for a brief period and then pull on the door handle, being careful to not touch the lock sensor at the same time or pull the door handle too quickly. To lock, touch the door handle lock sensor on the door for approximately one second, being careful to not touch the unlock sensor on the back of the door handle at the same time.

All-Wheel Drive*

All-Wheel Drive (AWD) uses all four wheels to power the vehicle. This increases traction, allowing you to drive over terrain and road conditions that a conventional two-wheel drive vehicle cannot. The AWD system is on all the time and requires no input from the driver.

Note: Your AWD vehicle is not for off-road use. The AWD feature gives your vehicle some limited off-road capabilities. See the **All-Wheel Drive** chapter in your **Owner's Manual** for complete details.

Pre-Collision Assist

This system is designed to detect your vehicle's rapid approach to a stationary vehicle, another vehicle traveling in the same direction as yours or a pedestrian within your driving path. The system has three types of functionality:

- **Alert:** When active, a flashing visual warning appears and an audible warning tone sounds.
- **Brake Support:** The system is designed to help reduce the impact speed by preparing the brakes for rapid braking. The system does not automatically apply the brakes. If you press the brake pedal, the system could apply additional braking up to maximum braking force, even if you lightly press the brake pedal.
- **Active Braking:** Turns on if the system determines a collision is imminent. The system may help the driver reduce impact damage or avoid the crash completely.

Note: The system does not detect cyclists, animals, pedestrians at night or vehicles traveling in a different direction. Adverse weather conditions, extreme outside temperatures and debris on the camera lens can affect system operation. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.

See your **Owner's Manual** for safety information, complete details and system limitations.

Blind Spot Information System (BLIS) and Cross Traffic Alert



BLIS uses radar sensors to help you determine if a vehicle may be in your blind spot zone. Cross traffic alert warns you of vehicles approaching from the sides when the transmission is in reverse (R). Both systems turn on an indicator light in the exterior mirror on the side of the vehicle from which the approaching vehicle is coming. Cross traffic alert also sounds tones and displays messages to warn you from which direction vehicles are approaching.

Note: Visibility aids do not replace the need to watch where the vehicle is moving.

Refer to the **Driving Aids** chapter in your **Owner's Manual** for safety information and system limitations.

Lane Keeping System

When you switch the system on and the system detects an unintentional drift out of your lane is likely to occur, the system notifies or assists you to stay in your lane through the steering system and information display. Depending on the feature operation mode you select, the system provides a warning by vibrating the steering wheel (Alert Mode) or a steering assistance (Aid Mode) by gently counter steering your vehicle back into the lane. The system can also provide both warning (vibrating the steering wheel) and steering assistance (gently counter steering your vehicle back into the lane) while Aid+Alert mode is selected.

You can switch the system on or off by pressing the button on the direction indicator.

Refer to the **Driving Aids** chapter of your **Owner's Manual** for system operation and limitations.

*if equipped

Auto Hold

Auto Hold can assist you while stopping at traffic lights or while in traffic jams by holding the brakes when you stop the vehicle. Press the **AUTO HOLD** button to switch the system on. The **AUTO HOLD** button illuminates. When the system is on and actively holding the vehicle, **AUTO HOLD** displays in the instrument cluster.

When you press the accelerator pedal, Auto Hold automatically releases the brakes. In certain situations, Auto Hold may apply the electric parking brake and illuminate the brake warning lamp in the instrument cluster.

Auto Hold turns off when you power down your vehicle, or you can switch the feature off manually by pressing the **AUTO HOLD** button. Switch Auto Hold off if you are towing a trailer or having the vehicle towed.

See the **Brakes** chapter of your **Owner's Manual** for more details.



Technology

Lincoln Drive Control

Lincoln Drive Control delivers the Lincoln driving experience through a suite of sophisticated electronic vehicle systems. These systems continuously monitor your driving inputs and the road conditions to optimize ride comfort, steering and handling.

There are a range of modes from which you can choose to customize your ideal driving experience. Use the information display to set your preference:

- **Normal:** Delivers a balanced combination of comfortable, controlled ride and confident handling.
- **Comfort:** Provides a more relaxed driving experience, maximizing comfort.
- **Sport:** Provides a sportier driving experience with an emphasis on handling and control.

Refer to the **Driving Aids** chapter of your **Owner's Manual** for more details.

Active Park Assist with Parallel Parking, Perpendicular Parking and Parallel Park Out Assist*

Detects an available parallel or perpendicular parking space and automatically steers the vehicle into the space (hands-free) while you control the accelerator, gearshift and brakes. The system visually and audibly instructs you to park your vehicle.

To use active park assist, press the button once for parallel parking or twice for perpendicular parking. The system displays a message and a corresponding graphic to indicate that it is searching for a parking space. Use the direction indicator to select from which direction you want to begin searching, either to the left- or right-hand side of your vehicle.



Use the park out assist feature when your vehicle is at rest in a parallel parking space. Press the button, and then follow the instructions on the display. Use your direction indicator to signal from which side of your vehicle you want to exit the parking space. After the system directs your vehicle past the adjacent vehicle or object, it guides you to take control of the steering to complete the exit from the parking spot. To stop the parking procedure, grab the steering wheel or press the button again. For complete information, refer to the **Parking Aids** chapter of your **Owner's Manual.**

