

PRO TRAILER BACKUP ASSIST WITH TRAILER REVERSE GUIDANCE SENSOR SETUP

Note: Sensor kit and 7-12 connector must be purchased from dealer.

DETERMINE A SUITABLE LOCATION TO INSTALL THE SENSOR ON YOUR TRAILER THAT MEETS THESE GUIDELINES:

*Attach on a vertical surface with the arrows on the housing pointed up.

SENSOR ATTACHMENT GUIDELINES



*Attach on a vertical surface close to front of trailer to allow the wiring harness to reach the 12-pin socket on the truck.

*Attach on a vertical surface with the arrows on the housing pointed up.

*For best performance and ease of use, the sensor should remain on the same trailer. Additional sensors can be purchased from your dealer.

The sensor can be attached with the included bracket and adhesive tape, or tie straps. Adhesive tape attachment is best suited for installation on flat, clean surfaces such as a large frame section. Tie strap attachment can be used for a vertical post.


Prepare the attachment location by removing any debris, chipping paint or rust and wipe the surface clean.

For adhesive attachment, remove protective backing from adhesive. With arrows pointed up, place the assembled sensor housing and mounting plate on a vertical surface of the trailer. Push firmly against trailer, pressing firmly against each corner of the sensor housing.

Note: Do not install adhesive when temperature is below 32° F (0° C). See your Owner's Manual for more information.

ROUTE WIRING AND CONNECT SENSOR


Using the 15-in (38-mm) tie straps, secure the cable next to the sensor housing within 4 in (10 cm) of the sensor, leaving enough wiring to unplug and plug in the sensor. Secure the wiring every 12 in (30 cm) to prevent strain on the sensor or the wiring. Route the wiring along the standard 7-pin electrical cable.

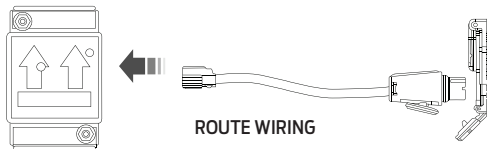

PRO TRAILER BACKUP ASSIST WITH TRAILER REVERSE GUIDANCE STICKER PLACEMENT

PLACEMENT TIPS

- Perform sticker placement when temperatures are above 32°F (0°C).
- Clean the trailer.
- Place the sticker:
 - On a flat, dry, horizontal surface.
 - Entire sticker must be visible to the camera located in the tailgate handle.
 - Within the green zone as shown below, between 4 in (10 cm) and 19 in (48 cm) from the trailer ball hitch.
 - Lengthwise on the trailer tongue.
- Once the sticker is in place, confirm that the sticker is visible using the touchscreen.

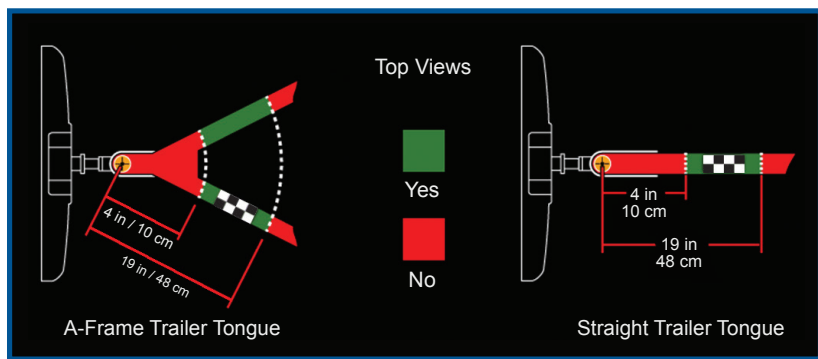

WARNING: Once placed, the sticker cannot be moved. Do not attempt to reuse stickers if removed.

Scan the QR code for additional information about your vehicle.



owner.ford.com



ford.ca



NL3J 19B146 RA