


F-SERIES CAB MARKER LIGHT INSTALLATION INSTRUCTIONS

KIT		
Part Number	Description	Quantity
SKHC3B-25001B24-AA	Instruction Sheet	1

SERVICE PROCEDURE:

- Cut out template and holes.
 - (Refer to Figure 3) for plain roof template.
 - (Refer to Figure 4) for moon roof template.
- Tape to roof following cab center and side character lines (refer to Figure 1).
- Mark hole locations (refer to Figure 1).
- Drill holes with a stepped drill bit, (Unibit).
- (Refer to Figure 2) for six (6) hole locations for marker lamps and SDARS if available.
- Protect openings with anti-corrosion primer.
- Install lights.

PLAIN ROOF TEMPLATE

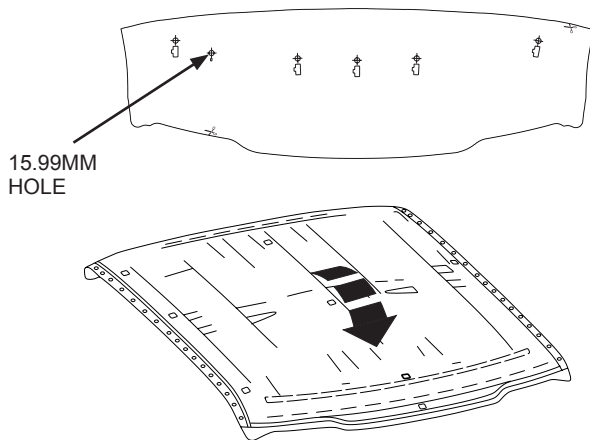

MOON ROOF TEMPLATE

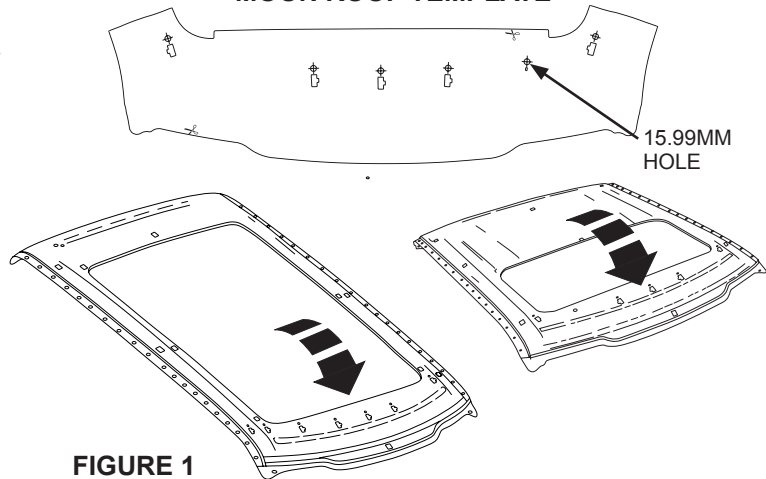


FIGURE 1






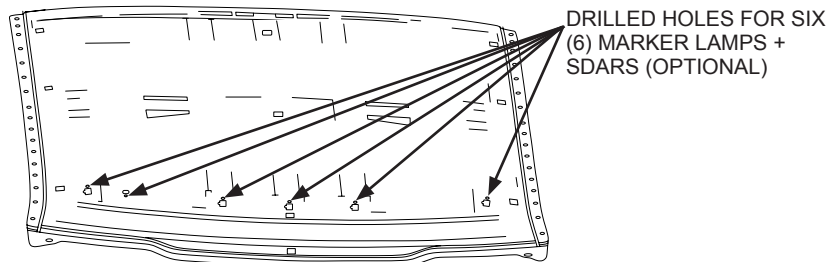


FIGURE 2

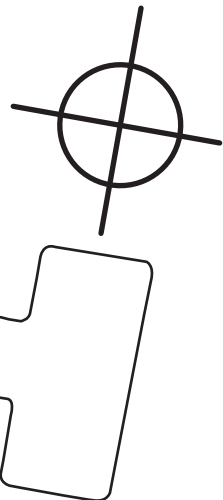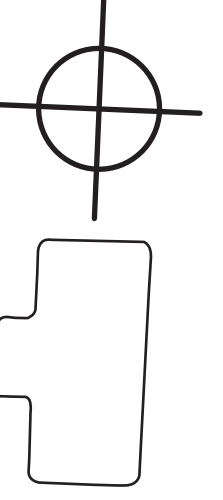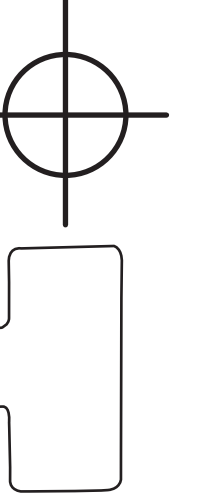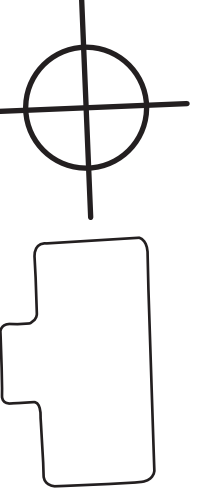


FULL SIZE TEMPLATE –
PRINT AT 100% - DO NOT SCALE
PRINT ON PAPER SIZE 58" X 20"

PLAIN ROOF TEMPLATE
FIGURE 3

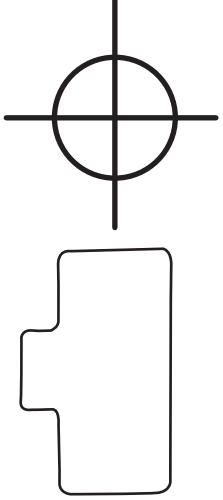

©PR 8/2016 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
7-16

FULL SIZE TEMPLATE –
PRINT AT 100% - DO NOT SCALE
PRINT ON PAPER SIZE 58" X 20"



MOON ROOF TEMPLATE
FIGURE 4

DRILL SIX (6) 15.99mm