

ESSENTIAL INFORMATION

TIRE PRESSURE

Your tire pressure needs to be properly set according to the recommended specifications. These specifications can be found on the Safety Compliance Certification Label or Tire Label which is located on the B-Pillar or the edge of the driver's door. Please check your tire pressure during routine maintenance and seasonal changes and when the Tire Pressure Monitoring System warning indicator is illuminated. Tire pressure is specified to provide the appropriate load capacity for your vehicle's axle load ratings. Keeping the tires at the proper pressure is an important part of maintaining your vehicle. Improperly inflated tires can affect vehicle handling and can fail suddenly, resulting in a possible loss of vehicle control.

FUSES

If your electrical components are not working properly, a fuse may have blown. Please refer to your Owner's Guide for fuse locations.

LOCATION OF SPARE TIRE AND TOOLS/CHANGING THE TIRES

If you get a flat tire while driving, do not apply the brake heavily. Instead,



gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Your vehicle is equipped with a temporary spare tire which is designed for emergency use only and should be replaced as soon as possible. Due to the different possible cab configurations, please refer to the Roadside Emergencies chapter in your Owner's Guide for spare tire and tool location in addition to complete details on how to change your tire.

ROADSIDE ASSISTANCE

Your new Ford Super Duty comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage period and details of service, refer to your roadside assistance information.

S.O.S. POST CRASH ALERT SYSTEM

Your vehicle is equipped with the S.O.S. Post Crash Alert system. This

system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the system, press the hazard flasher control  or you can press  on your remote transmitter.

IMPROVE YOUR FUEL ECONOMY

Below are several ways to improve fuel economy while driving:

- Drive sensibly
- Keep tires properly inflated
- Use cruise control
- Don't carry more than you need (you will lose up to 1% in fuel economy per 100 lbs. [45 kg])
- Observe the speed limit (speeds in excess of 70 mpg decrease overall fuel economy)
- Make sure your vehicle is properly maintained
- Check and replace air filter regularly
- Use recommended grade of motor oil
- Avoid excessive idling
- Add tonneau cover (available as a Ford accessory)

AUDIOPHILE IN-DASH SIX CD/MP3/SATELLITE COMPATIBLE SOUND SYSTEM (if equipped)

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

1. SETTING MEMORY PRESETS

To set a station: Select a frequency band with the AM/FM button, then select a station. Press and hold a numbered preset button 1–6 until the sound returns.

2. TEXT/SCAN FUNCTION

Press and hold for a brief sampling of radio stations or satellite radio channels (if equipped). Press again to stop. In CD/MP3 mode, press and release to display track title, artist name, disc title and file name (if available).

3. AM/FM AND CD SELECT

In radio mode, press AM/FM repeatedly to cycle through AM, FM1 or FM2 frequency bands. Press CD to begin CD play. In CD mode, press AM/FM to stop CD play and begin radio play.

4. ON/OFF/VOLUME CONTROL


Press to turn on/off. Turn to increase/decrease the volume.

5. LOADING CDS

To load a CD into the system, press LOAD. When prompted, select the desired slot (1-6) using the memory

presets and insert the CD into the system. Press and hold LOAD to autoloop up to six discs.

6. EJECTING CDS

Press  to eject a CD. Press and hold to auto-eject all CDs present in the system.

7. SEEK FUNCTION

Press to access the next listenable station, CD track, or previous satellite radio station.

8. SYNC

Press to access SYNC phone features (if equipped). If your vehicle is not equipped with SYNC, the display will read NO PHONE.



9. TUNE/DISC SELECTOR

Press to go up or down the radio frequency or to select a desired disc.



10. MENU

Press repeatedly to access the following settings, among others:



SPEED VOLUME

(speed sensitive volume, if equipped): The volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Use   to adjust.

SETTING THE CLOCK:

Press MENU until SELECT HOUR or SELECT MINS is displayed. Press   to adjust the hours/minutes.

SATELLITE RADIO MENU:

(if equipped): Press MENU when satellite radio mode is active to access. Press OK to enter into the satellite radio menu. Press   to cycle through the following options: Category, Save Song, Delete Song, Delete All Songs, Enable Alerts/Disable Alerts.

SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit www.sirius.com in the United States, www.sirius-canada.ca in Canada, or call SIRIUS at 1-888-539-7474.

11. AUX

Repeatedly press to cycle through FES/DVD (if equipped), SAT1, SAT2, SAT3 (satellite mode if equipped) or LINE IN (auxiliary audio mode if equipped).

VOICE-ACTIVATED NAVIGATION SYSTEM (if equipped):

Your vehicle may be equipped with a voice-activated navigation system which integrates several functions including voice recognition, destination entry and SIRIUS satellite radio (if equipped) in one easy to use system. **NOTE:** Some features are unavailable while driving. Refer to your Navigation supplement for more information.

AUDIO + CLIMATE CONTROL



DUAL AUTOMATIC TEMPERATURE CONTROL SYSTEM WITH HEATED SEATS AND HEATED MIRRORS (if equipped)

A. AUTO

Press to engage automatic temperature control, and select the desired temperature using the temperature control. The system will automatically determine fan speed, airflow location, A/C on or off, and outside or recirculated air to heat or cool the vehicle, allowing it to reach the desired temperature.

B. DRIVER/PASSENGER TEMPERATURE CONTROLS

Press to increase or decrease the temperature on the driver or passenger side of the vehicle.

C. EXT

Press to display outside temperature. Press again to display cabin temperature settings.


D. FAN SPEED CONTROL

Press to increase or decrease the fan speed.



E. HEATED SEAT CONTROLS

Press to turn the heated seats on and off. The heated seats turn off when the ignition is turned off.

F. MANUAL OVERRIDE CONTROL

Allows you to manually select where airflow is directed. Press  repeatedly to cycle through all possible options. To return to full automatic control, press AUTO.

G. A/C CONTROL

Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance and efficiency. Engages automatically in AUTO,  (defrost) and  (floor/defrost).

H. RECIRCULATION CONTROL

Recirculates air in the cabin, thereby reducing the amount of time needed to cool down the interior of the vehicle when used with A/C.

I. DUAL

Press to activate dual zone climate control where the passenger and driver can set their own individual climate settings. Press again to deactivate and return to single zone where the driver's climate settings determine the climate settings for the entire vehicle.


J. HEATED MIRRORS

Press to defrost the outside rear view mirrors. The heated mirrors will turn off after 10 minutes or can be shut off by pressing the button again.

K. DEFROST

Use to clear ice or fog from the windshield by distributing air through the windshield defroster and demister vents.

MAX A/C OPERATION

Automatic Operation: Press AUTO for full automatic operation. Do not override A/C or recirculated air. Set the temperature to 60° F (16° C). **Override Operation:** Select air distribution . Select A/C and recirculated air. Use recirculated air with A/C to provide colder airflow. Set temperature to 60° F (16° C). Set to highest front fan speed initially, then adjust to maintain comfort.


RAPID HEAT SUPPLEMENTAL HEATING SYSTEM (if equipped)

If your vehicle is equipped with a diesel engine, it may be equipped with a supplemental heater to assist in heating the inside of your vehicle in cold weather. For maximum effectiveness, mid to lower blower speed is recommended during initial warm-up. When operating in automatic mode (if equipped), the climate control system will determine the appropriate blower speed for existing conditions.

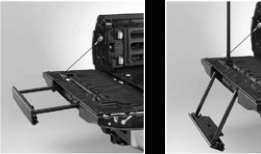
For complete details on these and other climate control features or if your vehicle is equipped with a climate control system other than the one shown, please refer to your Owner's Guide.

ADDITIONAL FEATURES

MEMORY FEATURE (if equipped)

Your vehicle may be equipped with a memory feature, which allows your vehicle to 'remember' your desired settings for your seats, mirrors and adjustable pedals (if equipped). To set, move your seat, mirrors and adjustable pedals (if equipped) to the desired position. Press and hold either memory button 1 or 2 for five seconds. Continue to hold until two tones are heard. Within three seconds of the second tone, press  on your remote transmitter. Your settings are now saved and will be activated when that remote transmitter is used to unlock your vehicle.

TAILGATE STEP (if equipped)



Your vehicle may be equipped with a tailgate step that allows easy entry into the truck bed. To use, open the tailgate. Pull the yellow latch lever to the unlock position to release the grab handle from its stowed position and raise the handle upright until you feel it latch and see the latch lever in the lock position. (The yellow lever only needs to be used when releasing the grab handle.) Rotate the center molding to unlatch the tailgate. Flip open the panel to widen the step. Always use the grab handle when stepping up or down on the tailgate step. Keep the step load (you + load) below 350 lbs. (159 kg).

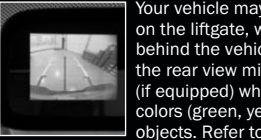
To close the tailgate step, fold the step panel, then lift and fully slide the tailgate step into the tailgate. Slide the latch at the bottom of the handle, then lower the handle. Never drive with the step deployed. Ensure that you fully close and latch the tailgate step before moving the vehicle.

BED EXTENDER (if equipped)



Your vehicle may be equipped with a cargo management feature in the truck bed. To open the bed extender into tailgate mode, start with the right side panels by pulling the locking pin toward the driver's side of the vehicle. Unlatch the panels and then rotate the panels toward the tailgate. Rotate the storage hinge rearward and then rotate the panels toward the tailgate. Engage locking pin to the right. Repeat for the left side panels of the bed extender. Connect the two panels at the center, then rotate both knobs a quarter turn clockwise to secure them. Ensure that the latch rod is inserted into the tailgate hole and the locking pins on BOTH sides are engaged into their holes in the pick-up box. Please refer to your Owner's Guide for complete details on this feature.

REVERSE CAMERA (if equipped)



Your vehicle may be equipped with a reverse camera located on the liftgate, which provides a visual display of the area behind the vehicle. The display will automatically appear in the rear view mirror or on the navigation system screen (if equipped) whenever the vehicle is in Reverse (R) and uses colors (green, yellow and red) to alert you of your proximity to objects. Refer to your Owner's guide for more information.

Keep the lens clean so the video image remains clear and undistorted. Clean the lens with a soft, lint-free cloth and non-abrasive cleaner. If the reverse camera system image is not clear or seems distorted it may be covered with water droplets, snow, mud or any other substance. If this occurs, clean the camera lens before using the reverse camera system.

The reverse camera system is not a replacement for the rear view and side view mirrors. Always make sure there are no people or objects behind the vehicle before using reverse. For complete details on the reverse camera system, please consult your Owner's Guide.

2003 FORD

SUPER DUTY

QUICK REFERENCE GUIDE



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

Ford Motor Company Customer Relationship Center | P.O. Box 6248 | Dearborn, MI 48121
1-800-392-3673 (FORD) (TDD for the hearing impaired: 1-800-232-5952)



9C3J 19G217 AA



August 2008
First Printing
Quick Reference Guide
Super Duty
Litho in U.S.A.

YOUR 2009 FORD

SUPER DUTY

SERVICE INTERVALS

It is important to maintain your vehicle to keep it running in peak condition. Engine oil and filter changes along with fuel filter (two fuel filters on diesel vehicles) and engine coolant inspection/replacement are common maintenance items that can be done to prolong the life of your engine. If you drive your vehicle in severe situations, more frequent service will be required on some items. Please refer to the scheduled maintenance information chapter of your diesel supplement if your vehicle is equipped with a diesel engine or the separate Scheduled Maintenance Guide if your vehicle is equipped with a gasoline engine.

ENGINE FAN OPERATION

Your vehicle is equipped with a high performance clutched cooling fan. When the clutch engages, the fan spins faster to provide more air to cool the engine. This typically occurs when carrying heavy loads, towing a trailer or with high outside temperatures. As fan speed increases (and as the clutch engages), you may notice an increase in fan noise which is normal. When extra cooling is no longer required,

the clutch disengages and the noise will go away. In most everyday driving conditions, the fan spins slower and the clutch is not engaged; this improves fuel economy and reduces fan speed/noise.


COLD WEATHER STARTING

It is recommended that the engine block heater be used for starting when the temperature is -10°F (-23°C) or colder for diesel engines and below 0°F (-17°C) for gas engines. Please refer to Engine Block Heater in the Driving chapter of your Owner's Guide.

DIESEL ENGINE OPERATION (if equipped)

Diesel engines have different starting and operating procedures than gasoline engines. Please refer to your diesel supplement for detailed information on starting and operating your diesel engine. Key items to remember are:

Starting the Engine

With the key in the on position, the  light will illuminate if glow plug heat is necessary as a starting aid. Wait for the light to extinguish before starting the engine.

Turning Off the Engine

It is important to remember that if you have been operating your vehicle at a high speed or maximum gross vehicle weight, it is recommended to let the engine idle for 3-5 minutes so the turbocharged engine can properly cool down.

Ultra Low Sulfur Diesel (ULSD) Fuel


The diesel engine requires ultra low sulfur diesel fuel to control exhaust emissions, especially when combined with new exhaust treatment devices such as a Diesel Particulate Filter (DPF). It is always important to make sure the proper fuel is used because use of improper fuel (e.g., high level of biodiesel fuel or a high sulfur diesel fuel) may cause serious engine damage. Use of biodiesel is acceptable as long as the content is no higher than 5% (B5). If the biodiesel is rated higher than B5 (such as B10 or B20), it may damage fuel system components.

Exhaust System

To control exhaust emissions, your diesel Super Duty is equipped with

an exhaust system with clean diesel after-treatment technology which includes a diesel oxidation catalytic converter and a diesel particulate filter (DPF). Do not modify the exhaust after-treatment. See Owner's Guide for more information.

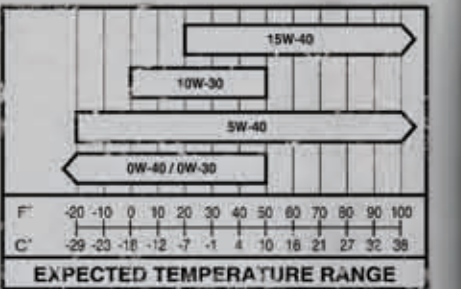
Draining the Water Separator

Remember to drain the water separator monthly. Water will gather in the frame-mounted water separator, called the horizontal fuel conditioning module (HFCM). A WATER IN FUEL indicator  will illuminate in the message center when the module has reached its capacity.

Checking the Air Filter

Your vehicle has an air filtration system with a restriction indicator gauge that will alert you when you need to change your filter. The gauge has a viewable indicator located underhood on the air filter assembly which should be inspected every oil change. A CHECK AIR FILTER message will also appear in the message center when the system restriction reaches its upper limit for proper operation.

Engine Oil Specifications for Diesel Engines



Heavier 15W-40 and 5W-40 engine oils are recommended for temperatures over 50°F (10°C) and must be used for heavy duty driving and trailer towing.


Use Motorcraft oil or an equivalent oil conforming to Ford specification WSS-M2C171-E or API service categories CJ-4 or CJ-4/SM. It is important to use these oils because they are compatible with the emission control equipment of your vehicle to meet the more stringent emission standards.

Under normal conditions, the engine oil and filter need to be changed at 10,000 mi (16,093 km) or 6 month intervals (whichever comes first). Under severe conditions, the intervals are sooner; 5,000 mi (8,046 km) or 3 months (whichever comes first). Refer to the scheduled maintenance information chapter of the diesel owner guide supplement for specific information on normal and severe conditions. Use the same engine oil and filter change intervals when using synthetic engine oil.

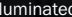
INSTRUMENT PANEL




1. SERVICE ENGINE SOON LIGHT

The Service Engine soon light  illuminates briefly when the ignition is turned on. If it remains on after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. If the light is blinking, an engine misfire is occurring which could damage your catalytic converter. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

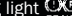
2. ABS WARNING LIGHT

If the ABS light  stays illuminated or continues to flash, a malfunction has been detected, contact your authorized dealer as soon as possible. Normal braking is still functional unless the brake warning light is also illuminated.

3. AIRBAG READINESS LIGHT




The air bag readiness light  illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer as soon as possible. A chime will also sound if a malfunction in the supplemental restraint system is detected.

4. BRAKE SYSTEM WARNING LIGHT


The brake system warning light  illuminates briefly when the ignition is turned on or when the parking brake is applied to confirm that the system is functional. If the light does not illuminate at this time, contact your authorized dealer as soon as possible. If the light continues to illuminate after the parking brake

is released, your brake fluid is low and should be inspected immediately by your authorized dealer.

5. HEADLAMPS, FOG LAMPS (if equipped) AND AUTOLAMPS (if equipped)

Turn the control one position to the right  to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right  to turn on the headlamps. Turn the control one position to the left  to activate the autolamp feature (if equipped), which automatically turns the exterior lamps on and off, based on available daylight. Vehicles equipped with a message center, you can also select a delay from 1-180 seconds for the lights to stay on after the ignition is turned off. Pull the control towards you to activate the fog lamps (if equipped). (The fog lamps will not operate when the control is turned off (O) or when the high beams are on).

6. SPEED CONTROL (if equipped)

To set the speed control, press and release ON. Accelerate to the desired speed. Press and release the SET+ control. Take your foot off the accelerator pedal. The speed control indicator light  will illuminate in the cluster. To set a higher speed: press and hold SET+ until the desired speed is reached, or briefly press SET+ to increase the speed by small amounts. To set a lower speed: press and hold SET- until the desired speed is reached, or briefly press SET- to decrease the speed by small amounts.

Press RES to return to the previously set speed. To turn speed control off, depress the brake pedal or press OFF.

7. MESSAGE CENTER

When the ignition is in the ON position, the message center on your vehicle's instrument cluster will display information on your vehicle's operating functions, as well as warning messages. Pressing the INFO button lets you scroll through general vehicle information such as odometer, trip odometer, compass, average fuel economy, distance to empty (fuel) and engine hours. Engine hours register how many hours the engine has been running. This is especially important if your vehicle is equipped with a diesel engine as important maintenance items (engine oil changes and fuel filter changes) may be based on engine hours. Please refer to the scheduled maintenance information in your diesel supplement for more information.

8. POWER REAR SLIDER WINDOW (if equipped)

Push the switch, (located behind the steering wheel) to open the rear window. Pull to close the rear window.



Please refer to your Owner's Guide for more details.

9. TOW/HAIL SWITCH (if equipped)

To eliminate excessive transmission shifting, activate the Tow/Haul feature. This will reduce frequency of transmission shifting and assist in transmission cooling. This feature also provides engine braking in all forward gears when the transmission is in the D (Overdrive) position; the engine braking will slow the vehicle and assist the driver in controlling the vehicle when descending a grade.

10. ELECTRONIC SHIFT ON THE FLY 4X4 SYSTEM (if equipped)

Your vehicle may be equipped with an electronic shift on the fly 4x4 system which allows you to choose between 2WD, 4x4 HIGH or 4x4 LOW driving modes. Choose 2WD to provide power to the rear wheels only – used mainly for street and highway driving. This mode provides optimal smoothness and fuel economy at high speeds. Choose 4x4 HIGH to send power to the rear and front wheels for extra traction during winter and off-road conditions. (Not intended for use on dry pavement.) Choose 4x4 LOW when you need extra gearing to provide maximum power to all four wheels at reduced speeds. This is intended for use in situations such as deep sand, steep grades or pulling a boat out of the water. This mode is not intended for use on dry pavement. For complete information on these modes and shifting requirements, or on the optional manual shift on-stop 4x4 system, please refer to the Driving chapter in your Owner's Guide for more information.

11. TRACTION CONTROL™ SYSTEM (if equipped)

Your vehicle may be equipped with a Traction control™ system which helps you maintain stability and steerability of your vehicle during a variety of road conditions, especially on slippery road surfaces such as snow or ice covered roads and gravel roads. If your vehicle becomes stuck in the snow, mud or sand, try turning off the system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off.

12. POWER ADJUSTABLE FOOT PEDALS (if equipped)

Press the top of the control to move the pedals further away from you or press the bottom of the control to move the pedals closer to you. The pedals should only be adjusted when the vehicle is stopped and in Park (P).

13. REVERSE SENSING (if equipped)

Your vehicle may be equipped with a reverse sensing system which can warn you if there is an object behind the vehicle that may be too low for you to see. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. Refer to your Owner's Guide for more information.

14. CLIMATE CONTROL AND AUDIO

Refer to the Climate Control and Audio section on the reverse side of this Quick Reference Guide.

15. TRAILER BRAKE CONTROLLER (if equipped)

Your vehicle may be equipped with a fully-integrated electronic Trailer Brake Controller (TBC). This helps ensure smooth and effective trailer braking by powering the trailer's electric brakes with a proportional output based on the towing vehicle's brake pressure. Use the GAIN adjustment buttons (+, -) and the manual control lever to make adjustments. The system will display any necessary messages through your message center. For complete information on using the TBC, please refer to the Tires, Wheels and Loading chapter of your Owner's Guide for more information.

16. UPFITTER (if equipped)

If your vehicle is equipped with the Upfitter package, these auxiliary switches can be customized to perform additional functions. The switches deliver 10A, 15A or 30A of battery power to whatever accessory is chosen. Refer to the Body Builder's Layout Book or visit www.fleet.ford.com/truckbbas/non-html/Q117R1.pdf for more detailed information.

17. AUXILIARY POWER POINT

Your vehicle is equipped with a 12V auxiliary power point which allows you to power electrical devices that require up to 12V. For more information, please refer to your Owner's Guide.

18. AUXILIARY INPUT JACK (if equipped)

Your vehicle may be equipped with an Auxiliary input jack, which allows you to play music from your portable music player through the vehicle speakers with high fidelity.

19. USB PORT (if equipped)



If your vehicle is equipped with SYNC, you will have a USB port which allows you to plug in media playing devices, memory sticks and also to charge devices if they support this feature. SYNC is a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC supplement or to the SYNC section in the Navigation supplement. Please also feel free to visit www.SyncMyRide.com.

FUEL PUMP SHUT-OFF SWITCH

This device stops the electric fuel pump from sending fuel to the engine when your vehicle has had a substantial jolt. After an accident, if the engine cranks but doesn't start, the switch may have been activated. The fuel pump shut-off switch is located on the passenger side of the instrument panel. You have to open the passenger side door and remove the access

panel to reset the switch. For switch reset instructions, please refer to your Owner's Guide.

TELESCOPING MIRRORS (if equipped)

Your vehicle may be equipped with manual or power telescoping mirrors which can extend out 2.75 inches (70 mm). These mirrors are especially useful when you are towing a trailer. Manual mirrors can be pushed out or pulled in to the desired position. If your vehicle is equipped with power telescoping mirrors, you can simultaneously position the mirrors using the control switch on the door trim panel. To telescope the mirrors outboard, press and hold  until the mirrors reach the desired position. To telescope the mirrors inboard, press and hold  until the mirrors reach their desired position.