

FORD **TOURNEO CUSTOM** / **TRANSIT CUSTOM** Owner's Manual



The information contained in this publication was correct at the time of going to print. In the interest of continuous development, we reserve the right to change specifications, design or equipment at any time without notice or obligation. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated into any language in any form by any means without our written permission. Errors and omissions excepted.

© Ford Motor Company 2020

All rights reserved.

Part Number: CG3900en 202008 20200819095055

Table of Contents

Introduction

Acknowledgments	9
About This Manual	9
Symbols Glossary	9
Data Recording	11
REACH	15
Replacement Parts Recommendation	15
Special Notices	15
Mobile Communications Equipment	16

Environment

Protecting the Environment	17
----------------------------------	----

At a Glance

Instrument Panel - RHD	18
Instrument Panel - LHD	19

Child Safety

Installing Child Restraints	21
Child Restraint Positioning	25
Child Restraint Positioning	30
Child Safety Locks	33

Seatbelts

Fastening the Seatbelts	34
Seatbelt Height Adjustment	35
Seatbelt Reminder	35

Supplementary Restraints System

Principle of Operation	36
Driver Airbag	36
Passenger Airbag	37
Switching the Passenger Airbag On and Off	37
Side Airbags	38
Side Curtain Airbags	39

Pedestrian Alert System - Plug-In Hybrid Electric Vehicle (PHEV)

What Is the Pedestrian Alert System	40
Pedestrian Alert System – Troubleshooting	40

Automatic Crash Notification System

Emergency Assistance	41
ERA-GLONASS	43

Keys and Remote Controls

General Information on Radio Frequencies	46
Remote Control	46
Replacing a Lost Key or Remote Control	46

MyKey™ - Vehicles With: MyKey

Principle of Operation	47
MyKey Settings	47
Creating a MyKey	48
Programming a MyKey	48
Clearing All MyKeys	49
Checking MyKey System Status	50
MyKey – Troubleshooting	51

Doors and Locks

Locking and Unlocking - Vehicles With: Manual Liftgate	52
Locking and Unlocking - Vehicles With: Rear Cargo Doors	55

Liftgate

Manual Liftgate	60
-----------------------	----

Security

Passive Anti-Theft System	61
---------------------------------	----

Table of Contents

Anti-Theft Alarm	61
------------------------	----

Steering Wheel

Adjusting the Steering Wheel	62
------------------------------------	----

Wipers and Washers

Windshield Wipers	63
Autowipers	63
Windshield Washers	65
Rear Window Wiper and Washers	65

Lighting

General Information	66
Lighting Control	66
Autolamps	67
Instrument Lighting Dimmer	68
Headlamp Exit Delay	68
Automatic High Beam Control	68
Front Fog Lamps	69
Rear Fog Lamps	70
Headlamp Leveling	70
Cornering Lamps	71
Direction Indicators	71
Interior Lamps - Bus	72
Interior Lamps - Van	73

Windows and Mirrors

Power Windows	74
Global Opening and Closing	75
Exterior Mirrors - Bus	75
Exterior Mirrors - Van	76
Interior Mirror - Vehicles With: Auto-Dimming Interior Mirror/Interior Mirror With Camera Display	77
Interior Mirror - Vehicles With: Interior Mirror	77

Instrument Cluster

Gauges - Plug-In Hybrid Electric Vehicle (PHEV)	78
--	----

Gauges - Excluding: Plug-In Hybrid Electric Vehicle (PHEV)	80
Warning Lamps and Indicators	81
Audible Warnings and Indicators	86

Information Displays

General Information	87
Trip Computer	89
Personalized Settings	91
Information Messages	92

Climate Control

Air Vents	99
Manual Climate Control	99
Hints on Controlling the Interior Climate	100
Rear Passenger Climate Controls	101
Heated Windshield	101
Heated Rear Window	101
Heated Exterior Mirrors - Vehicles Without: Heated Rear Window	101
Heated Exterior Mirrors - Vehicles With: Heated Rear Window	102
Auxiliary Heater	102
Remote Start	104

Seats

Sitting in the Correct Position	107
Head Restraints	107
Manual Seats	108
Power Seats	110
Rear Seats	111
Heated Seats - 2.0L EcoBlue, Plug-In Hybrid Electric Vehicle (PHEV)	115
Heated Seats - 2.2L Diesel	116

Rear Occupant Alert System

What is the Rear Occupant Alert System	118
---	-----

Table of Contents

How Does the Rear Occupant Alert System Work	118
Rear Occupant Alert System Precautions	118
Rear Occupant Alert System Limitations	118
Switching Rear Occupant Alert System On and Off	118
Switching Rear Occupant Alert System On and Off	119
Rear Occupant Alert System Indicators	119
Rear Occupant Alert System Indicators	119
Rear Occupant Alert System Audible Warnings	119

Auxiliary Power Points

Auxiliary Power Points	120
Cigar Lighter	121

Storage Compartments

Cup Holders	123
Overhead Console	123
Folding Tray	123
Bottle Holders	123
Under Seat Storage - Vehicles With: Passenger Double Seat, Vehicles Without: Rear Climate Control, Excluding: Mild Hybrid Electric Vehicle (MHEV)	124
Under Seat Storage - Mild Hybrid Electric Vehicle (MHEV), Vehicles With: Passenger Double Seat/Rear Climate Control	125
Device Holder	125

Starting and Stopping the Engine

General Information	127
Ignition Switch	127
Steering Wheel Lock	127
Starting a Diesel Engine	128

Switching Off the Engine	128
Engine Block Heater	128

Starting and Stopping the Electric Motor

Ignition Switch	130
Starting the Electric Motor	130
Switching Off the Electric Motor	130

Unique Driving Characteristics

Hybrid Vehicle Operation - Mild Hybrid Electric Vehicle (MHEV)	131
Plug-In Hybrid Vehicle Operation	131
Hybrid Vehicle Frequently Asked Questions	132

Auto-Start-Stop - Manual Transmission, Excluding: Mild Hybrid Electric Vehicle (MHEV)

What Is Auto-Start-Stop	133
Auto-Start-Stop Precautions	133
Switching Auto-Start-Stop On and Off	133
Stopping the Engine	133
Restarting the Engine	133
Auto-Start-Stop Indicators	134
Auto-Start-Stop Audible Warning	134
Auto-Start-Stop – Troubleshooting	134

Auto-Start-Stop - Mild Hybrid Electric Vehicle (MHEV)

What Is Auto-Start-Stop	136
Auto-Start-Stop Precautions	136
Auto-Start-Stop Settings	136
Switching Auto-Start-Stop On and Off	136
Stopping the Engine	136
Restarting the Engine	137

Table of Contents

Auto-Start-Stop Indicators	137
Auto-Start-Stop Audible Warning	137
Auto-Start-Stop – Troubleshooting	137

Auto-Start-Stop - Automatic Transmission

What Is Auto-Start-Stop	139
Auto-Start-Stop Precautions	139
Switching Auto-Start-Stop On and Off	139
Stopping the Engine	139
Restarting the Engine	139
Auto-Start-Stop Indicators	140
Auto-Start-Stop – Troubleshooting	140

Fuel and Refueling

Safety Precautions	142
Fuel Quality - Gasoline	142
Fuel Quality - Diesel	143
Fuel Quality - 2.0L EcoBlue, Hydrotreated Vegetable Oil	143
Fuel Filler Funnel Location	143
Running Out of Fuel	144
Refueling - Plug-In Hybrid Electric Vehicle (PHEV)	145
Refueling - Excluding: Plug-In Hybrid Electric Vehicle (PHEV)	147
Fuel Consumption	150

Engine Emission Control

Catalytic Converter	151
Selective Catalytic Reductant System	151
Gasoline Particulate Filter	156
Diesel Particulate Filter	157

High Voltage Battery

What Is the High Voltage Battery	163
Charging the High Voltage Battery	163

High Voltage Battery Precautions	164
Charging Equipment Requirements	164
Locating the Charging Equipment	164
Charging Equipment Indicators	164
Locating the Charge Port	166
Charge Port Indicators	166
High Voltage Shutoff Switch	166

Transmission

Manual Transmission	167
Automatic Transmission - Plug-In Hybrid Electric Vehicle (PHEV)	167
Automatic Transmission - 6-Speed Automatic Transmission	169

Brakes

General Information	173
Hints on Driving With Anti-Lock Brakes	173
Parking Brake - Automatic Transmission	173
Parking Brake - Manual Transmission	174
Hill Start Assist	174

Traction Control

Principle of Operation	176
Using Traction Control	176

Stability Control

Principle of Operation	177
Using Stability Control	177

Parking Aids

Principle of Operation	178
Rear Parking Aid	178
Front Parking Aid	180
Side Sensing System	182
Active Park Assist	184
Rear View Camera	186

Table of Contents

Cruise Control

Principle of Operation	190
Using Cruise Control	190
Using Adaptive Cruise Control	191

Driving Aids

Speed Limiter	200
Intelligent Speed Limiter	200
Lane Keeping System	202
Blind Spot Information System	205
Cross Traffic Alert	209
Traffic Sign Recognition	212
Wrong Way Alert	213
Eco	215
Pre-Collision Assist	216
Drive Control - Diesel	220
Self-Leveling Suspension	220

Local Hazard Information

What Is Local Hazard Information	221
Local Hazard Information Precautions	221
Enabling Local Hazard Information	221
Checking Local Hazard Information Status	221

Load Carrying

General Information	222
Luggage Anchor Points - Bus	223
Rear Loadspace Hatches	224
Roof Racks and Load Carriers - Vehicles With: Integrated Roof Rack	224
Roof Racks and Load Carriers - Vehicles Without: Integrated Roof Rack	226
Load Retaining Fixtures - Van	226

Towing

Towing a Trailer - Plug-In Hybrid Electric Vehicle (PHEV)	230
Towing a Trailer - Excluding: Plug-In Hybrid Electric Vehicle (PHEV)	230

Trailer Sway Control	231
Towing the Vehicle on Four Wheels - Automatic Transmission, Excluding: Plug-In Hybrid Electric Vehicle (PHEV)	231
Towing the Vehicle on Four Wheels - Plug-In Hybrid Electric Vehicle (PHEV)	232
Towing the Vehicle on Four Wheels - Manual Transmission	232

Driving Hints

Reduced Engine Performance	234
Economical Driving	234
Cold Weather Precautions	234
Breaking-In	235
Driving Through Water	235
Floor Mats	235

Roadside Emergencies

Hazard Flashers	237
Fuel Shutoff	237
Jump Starting the Vehicle - 2.2L Duratorq-TDCi Diesel	237
Jump Starting the Vehicle - 2.0L EcoBlue	239
Towing Points	240

Emergency Equipment

First Aid Kit	242
Warning Triangle	242

Fuses

Fuse Box Locations - 2.0L EcoBlue, Plug-In Hybrid Electric Vehicle (PHEV)	243
Fuse Box Locations - 2.2L Diesel	243
Fuse Specification Chart - Plug-In Hybrid Electric Vehicle (PHEV)	245
Fuse Specification Chart - 2.0L EcoBlue	256
Fuse Specification Chart - 2.2L Diesel	267

Table of Contents

Changing a Fuse	277
-----------------------	-----

Maintenance

General Information	279
Opening and Closing the Hood - RHD	279
Opening and Closing the Hood - LHD	281
Under Hood Overview - 2.0L EcoBlue	283
Under Hood Overview - 2.2L Diesel	284
Under Hood Overview - Plug-In Hybrid Electric Vehicle (PHEV)	285
Engine Oil Dipstick - 1.0L EcoBoost™	286
Engine Oil Dipstick - 2.0L EcoBlue	286
Engine Oil Dipstick - 2.2L Diesel	286
Engine Oil Check	286
Draining the Fuel Filter Water Trap - 2.0L Diesel	287
Draining the Fuel Filter Water Trap - 2.2L Diesel	287
Engine Cooling Fan - Plug-In Hybrid Electric Vehicle (PHEV)	288
Engine Cooling Fan - Diesel	288
Engine Coolant Check - Diesel	288
Coolant Check - Plug-In Hybrid Electric Vehicle (PHEV)	290
Brake Fluid Check	291
Clutch Fluid Check - Manual Transmission	292
Power Steering Fluid Check - 2.2L Diesel	292
Changing the 12V Battery	292
Fuel Filter Service Indicator Check - 2.0L EcoBlue/2.2L Diesel	295
Washer Fluid Check	295
Checking the Wiper Blades	295
Changing the Front Wiper Blades	295
Changing the Rear Wiper Blades	296
Removing a Headlamp	297

Changing a Bulb - Vehicles With: Halogen Headlamps	297
Changing a Bulb - Vehicles With: Halogen Projector Headlamps	302
Changing a Bulb - Vehicles With: High Intensity Discharge Headlamps	307

Vehicle Care

Cleaning the Exterior	313
Cleaning the Interior	314
Repairing Minor Paint Damage	316
Cleaning the Wheels	316
Body Styling Kits	316

Wheels and Tires

General Information	317
Tire Sealant and Inflator Kit	317
Tire Care	320
Using Winter Tires	321
Using Snow Chains - Van	321
Using Snow Chains - Bus	323
Using Snow Chains - Shuttle Bus	324
Tire Pressure Monitoring System	325
Changing a Road Wheel	327
Tire Pressures - Van	334
Tire Pressures - Shuttle Bus	338
Tire Pressures - Bus	340
Lug Nuts	343

Capacities and Specifications

Vehicle Dimensions - Bus	344
Vehicle Dimensions - Van	345
Towbar Dimensions	346
Vehicle Identification Plate	347
Vehicle Identification Number	348
Capacities and Specifications - 2.0L EcoBlue, Bus	348
Capacities and Specifications - 2.0L EcoBlue, Van	351

Table of Contents

Capacities and Specifications - 2.2L Duratorq-TDCi Diesel, Bus	354
Capacities and Specifications - 2.2L Duratorq-TDCi Diesel, Van	357
Capacities and Specifications - Plug-In Hybrid Electric Vehicle (PHEV), Bus	360
Capacities and Specifications - Plug-In Hybrid Electric Vehicle (PHEV), Van	363
Bulb Specification Chart - Vehicles With: Halogen Headlamps	366
Bulb Specification Chart - Vehicles With: Halogen Projector Headlamps	367
Bulb Specification Chart - Vehicles With: High Intensity Discharge Headlamps	368
Fuel Consumption Figures	369
Fuel Consumption Figures - 2.0L EcoBlue	369
Fuel Consumption Figures - 2.2L Duratorq-TDCi Diesel	370
Fuel Consumption Figures - Plug-In Hybrid Electric Vehicle (PHEV)	371

Connected Vehicle

What Is a Connected Vehicle	372
Connected Vehicle Requirements	372
Connected Vehicle Limitations	372
Connecting the Vehicle to a Mobile Network	372
Connecting the Vehicle to a Wi-Fi Network	373
Connected Vehicle – Troubleshooting - Vehicles With: Modem	373
Connected Vehicle – Troubleshooting - Vehicles With: SYNC 3/SYNC 2.5	374

Vehicle Wi-Fi Hotspot

Creating a Vehicle Wi-Fi Hotspot	376
Changing the Vehicle Wi-Fi Hotspot Name or Password	376

Audio System

Audio Unit - Van, Vehicles Without: SYNC	377
Audio Unit - Van, Vehicles With: SYNC 2.5	379
Audio Unit - Vehicles With: SYNC 3	381
AM/FM Radio - Van, Vehicles Without: SYNC	382
AM/FM Radio - Van, Vehicles With: SYNC 2.5	382
Digital Radio - Van, Vehicles Without: SYNC	383
Digital Radio - Van, Vehicles With: SYNC 2.5	384
Audio Unit Clock and Date Displays - Van, Vehicles Without: SYNC	385
Audio Unit Clock and Date Displays - Van, Vehicles With: SYNC 2.5	385
Connecting a Bluetooth® Device - Van, Vehicles Without: SYNC	385
Connecting a Bluetooth® Device - Van, Vehicles With: SYNC 2.5	385
Streaming Bluetooth Audio - Van, Vehicles Without: SYNC	385
Streaming Bluetooth Audio - Van, Vehicles With: SYNC 2.5	386
Playing Media From a USB Device - Van, Vehicles Without: SYNC	386
Playing Media From a USB Device - Van, Vehicles With: SYNC 2.5	387
USB Port	387
Apps - Van, Vehicles With: SYNC 2.5	387
Using Voice Recognition	390
Audio System – Troubleshooting - Van, Vehicles With: SYNC 2.5	391

SYNC™ 3

General Information	393
Using Voice Recognition	395
Entertainment	401
Phone	403
Navigation	405

Table of Contents

Apps	409
Settings	410
SYNC™ 3 Troubleshooting	412

Geofencing

What Is Geofencing	422
How Does Geofencing Work	422
Geofencing Precautions	422
Geofencing Limitations	422
Locating the Geofencing Display	422
Using Geofencing	422
Geofencing Indicators	422
Geofencing – Troubleshooting	422

Appendices

Electromagnetic Compatibility	423
End User License Agreement	426
Declaration of Conformity	451

Introduction

ACKNOWLEDGMENTS

Your vehicle could have components that use open source software. For additional information, visit <http://corporate.ford.com/ford-open-source.html>.

ABOUT THIS MANUAL

Thank you for choosing Ford. We recommend that you take some time to get to know your vehicle by reading this manual. The more that you know about your vehicle, the greater the safety and pleasure you will get from driving it.



WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.


Note: *This manual describes product features and options available throughout the range of available models, sometimes even before they are generally available. It may describe options not fitted to the vehicle you have purchased.*

Note: *Some of the illustrations in this manual may show features as used in different models, so may appear different to you on your vehicle.*

Note: *Always use and operate your vehicle in line with all applicable laws and regulations.*

Note: *Pass on this manual when selling your vehicle. It is an integral part of your vehicle.*

This manual may qualify the location of a component as left-hand side or right-hand side. The side is determined when facing forward in the seat.

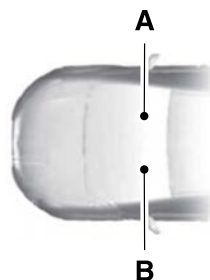

- A Right-hand side.
- B Left-hand side.

SYMBOLS GLOSSARY

These are some of the symbols you may see on your vehicle.



Safety alert.



See the Owner's Manual.



Air conditioning system.



Anti-lock braking system.



Avoid smoking, flames or sparks.

Introduction



Battery.



Battery acid.



Brake fluid level.



Brake system.



Brake failure.



Cabin air filter.



Check fuel cap.



Child safety door lock.



Child safety door unlock.



Child seat lower anchor.



Child seat tether anchor.



Cruise control.



Do not open when hot.



Electronic power steering malfunction.



Engine air filter.



Engine coolant.



Engine coolant temperature.



Engine oil.



Explosive gas.



Fan warning.



Fasten seatbelt.



Front airbag.



Front fog lamps.



Fuel pump reset.



Fuse compartment.



Hazard warning flashers.



Heated rear window.



Heated windshield.



Interior luggage compartment release.



Jack.

Introduction



Keep out of reach of children.



Lighting control.



Low tire pressure warning.



Maintain correct fluid level.



Panic alarm.



Parking aid.



Parking brake.



Power steering fluid.



Power windows.



Power window lockout.



Service engine soon.



Side airbag.



Shield the eyes.



Stability control.



Windshield wash and wipe.

DATA RECORDING



WARNING: Do not connect wireless plug-in devices to the data link connector. Unauthorized third parties could gain access to vehicle data and impair the performance of safety related systems. Only allow repair facilities that follow our service and repair instructions to connect their equipment to the data link connector.

We respect your privacy and are committed to protecting it. The information contained in this publication was correct at the time of going to print but as technology rapidly changes, we recommend that you visit the local Ford website for the latest information.

Your vehicle has electronic control units that have data recording functionality and the ability to permanently or temporarily store data. This data could include information on the condition and status of your vehicle, vehicle maintenance requirements, events and malfunctions. The types of data that can be recorded are described in this section. Some of the data recorded is stored in event logs or error logs.

Note: Error logs are reset following a service or repair.

Note: We may provide information in response to requests from law enforcement, other government authorities and third parties acting with lawful authority or through a legal process. Such information could be used by them in legal proceedings.

Introduction

Data recorded includes, for example:

- Operating states of system components, for example fuel level, tire pressure and battery charge level.
- Vehicle and component status, for example wheel speed, deceleration, lateral acceleration and seatbelt status.
- Events or errors in essential systems, for example headlamps and brakes.
- System responses to driving situations, for example airbag deployment and stability control.
- Environmental conditions, for example temperature.

Some of this data, when used in combination with other information, for example an accident report, damage to a vehicle or eyewitness statements, could be associated with a specific person.

Service Data

Our dealers collect service data through the data link connector in your vehicle. They use service data, for example error logs, to help them if you take your vehicle for repair. They share this data with our technical team, if required, to help with diagnosis. In addition to using the information for diagnosis and repair, we use and share service data with our service providers, for example parts suppliers, where required and where permitted by law, for continuous improvement or with other information that we have about you, for example your contact information, to offer you products and services that may be of interest to you according to your preferences and where allowed by law. Our service providers are equally required by law to protect your data and retain it in accordance with data retention policies.

Note: *Third party repair facilities can also collect service data through the data link connector.*

Event Data

This vehicle is equipped with an event data recorder. The main purpose of an event data recorder is to record, in certain crash or near crash-like situations, such as an airbag deployment or hitting a road obstacle; this data will assist in understanding how a vehicle's systems performed. The event data recorder is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The event data recorder in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and passenger seatbelts were buckled/fastened;
- How far (if at all) the driver was depressing the accelerator and/or the brake pedal; and
- How fast the vehicle was traveling; and
- Where the driver was positioning the steering wheel.

This data can help provide a better understanding of the circumstances in which crashes and injuries occur.

Note: *Event data recorder data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the event data recorder under normal driving conditions and no personal data or information (e.g., name, gender, age, and crash location) is recorded. However, parties, such as law enforcement, could combine the event data recorder data with the type of personally identifying data routinely acquired during a crash investigation.*

Introduction

To read data recorded by an event data recorder, special equipment is required, and access to the vehicle or the event data recorder is needed. In addition to the vehicle manufacturer, other parties, such as law enforcement, that have such special equipment, can read the information if they have access to the vehicle or the event data recorder.

Comfort, Convenience and Entertainment Data

Your vehicle has electronic control units that have the ability to store data based on your personalized settings. The data is stored locally in the vehicle or on devices that you connect to it, for example, a USB drive or digital music player. You can delete some of this data and also choose whether to share it through the services to which you subscribe. See **Settings** (page 410).

Comfort and Convenience Data

Data recorded includes, for example:

- Seat and steering wheel position.
- Climate control settings.
- Radio presets.

Entertainment Data

Data recorded includes, for example:

- Music, videos or album art.
- Contacts and corresponding address book entries.
- Navigation destinations.

Services That We Provide

If you use our services, we collect and use data, for example account information, vehicle location and driving characteristics, that could identify you. We transmit this data through a dedicated, protected connection. We only collect and use data

to enable your use of our services to which you have subscribed, with your consent or where permitted by law. For additional information, see the terms and conditions of the services to which you have subscribed.

For additional information about our privacy policy, refer to the local Ford website.

Services That Third Parties Provide

We recommend that you review the terms and conditions and data privacy information for any services to which you subscribe. We take no responsibility for services that third parties provide.

Vehicles With a Modem (If Equipped)



The modem has a SIM. The modem was enabled when your vehicle was built and periodically sends messages to stay connected to the cell phone network, receive automatic software updates and send vehicle-related information to us, for example diagnostic information. These messages could include information that identifies your vehicle, the SIM and the electronic serial number of the modem. Cell phone network service providers could have access to additional information, for example cell phone network tower identification. For additional information about our privacy policy, visit www.FordConnected.com or refer to your local Ford website.

Note: *The modem continues to send this information unless you disable the modem or stop the modem from sharing vehicle data by changing the modem settings.*

Note: *The service can be unavailable or interrupted for a number of reasons, for example environmental or topographical conditions and data plan coverage.*

Introduction

Note: To find out if your vehicle has a modem, visit www.FordConnected.com.

Vehicles With SYNC

Mobile Device Data

If you connect a mobile device to your vehicle, you can display data from your device on the touchscreen for example, music and album art. You can share your vehicle data with mobile apps on your device through the system. See **Apps** (page 409).

The mobile apps function operates by your connected device sending data to us in the United States. The data is encrypted and includes the vehicle identification number of your vehicle, the SYNC module serial number, odometer, enabled apps, usage statistics and debugging information. We retain it only as long as necessary to provide the service, to troubleshoot, for continuous improvement and to offer you products and services that may be of interest to you according to your preferences and where allowed by law.

If you connect a cell phone to the system, the system creates a profile that links to that cell phone. The cell phone profile enables more mobile features and efficient operation. The profile contains, for example data from your phonebook, read and unread text messages and call history, including history of calls when your cell phone was not connected to the system.

If you connect a media device, the system creates and retains a media device index of supported media content. The system also records a short diagnostic log of approximately 10 minutes of all recent system activity.

The cell phone profile, media device index and diagnostic log remain in your vehicle unless you delete them and are generally accessible only in your vehicle when you connect your cell phone or media device. If you no longer plan to use the system or your vehicle, we recommend you use the master reset function to erase the stored information. See **Settings** (page 410).

System data cannot be accessed without special equipment and access to your vehicle's module.

For additional information about our privacy policy, refer to the local Ford website.

Note: To find out if your vehicle has a connectivity technology, visit www.FordConnected.com.

Vehicles With an Emergency Call System

When the emergency call system is active, it may disclose to emergency services that your vehicle has been in a crash involving the deployment of an airbag or activation of the fuel pump shut-off. Certain versions or updates to the emergency call system may also be capable of electronically or verbally disclosing to emergency services operators your vehicle location or other details about your vehicle or crash to assist emergency services operators to provide the most appropriate emergency services. If you do not want to disclose this information, do not activate the emergency call system.

Examples of data that the system transmits are:

- Vehicle identification number.
- Vehicle fuel type.
- Current time.
- Vehicle location and direction.

Introduction

- Whether the call was automatically or manually initiated.
- Vehicle category.

Note: *You cannot deactivate emergency call systems that are required by law.*

REACH

We are committed to promoting the responsible manufacturing, handling and use of our products and support the underlying goals of **REACH**, a European Union regulation that concerns the registration, evaluation, authorisation and restriction of chemicals.

We specifically support Regulation EC 1907/2006 Article 33(1) that relates to substances of very high concern which appear on the current list for authorisation.

If these substances do exist in a product, it is important to guarantee their safe use so the regulation is designed to enable you to take any appropriate risk management measures.

To find out more about the **REACH** directive, search **REACH** on the local Ford website.

Note: *To find the local Ford website, visit <https://corporate.ford.com/global-links.html#s0f0>.*

REPLACEMENT PARTS RECOMMENDATION

We have built your vehicle to the highest standards using quality parts. We recommend that you demand the use of genuine Ford and Motorcraft parts whenever your vehicle requires scheduled maintenance or repair. You can clearly identify genuine Ford and Motorcraft parts by looking for the Ford, FoMoCo or Motorcraft branding on the parts or their packaging.

Scheduled Maintenance and Mechanical Repairs

One of the best ways for you to make sure that your vehicle provides years of service is to have it maintained in line with our recommendations using parts that conform to the specifications detailed in this Owner's Manual.

Genuine Ford and Motorcraft parts meet or exceed these specifications.

Collision Repairs

We hope that you never experience a collision, but accidents happen sometimes.

Genuine Ford replacement collision parts meet our stringent requirements for fit, finish, structural integrity, corrosion protection and dent resistance. During vehicle development we validate that these parts deliver the intended level of protection as a whole system. A great way to know for sure you are getting this level of protection is to use genuine Ford replacement collision parts.

Warranty on Replacement Parts

Genuine Ford and Motorcraft replacement parts are the only replacement parts that benefit from a Ford Warranty.

The Ford Warranty may not cover damage caused to your vehicle as a result of failed non-Ford parts.

For additional information, refer to the terms and conditions of the Ford Warranty.

SPECIAL NOTICES

If converting or modifying your vehicle from production specification, refer to the Body and Equipment Mounting Manual at www.etis.ford.com/BEMM.

Introduction

MOBILE COMMUNICATIONS EQUIPMENT



WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Using mobile communications equipment is becoming increasingly important in the conduct of business and personal affairs. However, you must not compromise your own or others' safety when using such equipment. Mobile communications can enhance personal safety and security when appropriately used, particularly in emergency situations. Safety must be paramount when using mobile communications equipment to avoid negating these benefits. Mobile communication equipment includes, but is not limited to, cellular phones, pagers, portable email devices, text messaging devices and portable two-way radios.


PROTECTING THE ENVIRONMENT

You should play your part in protecting the environment. Correct vehicle usage and the authorized disposal of waste, cleaning and lubrication materials are significant steps toward this aim.

For additional information about our sustainability progress and initiatives, visit www.sustainability.ford.com.

At a Glance

INSTRUMENT PANEL - RHD

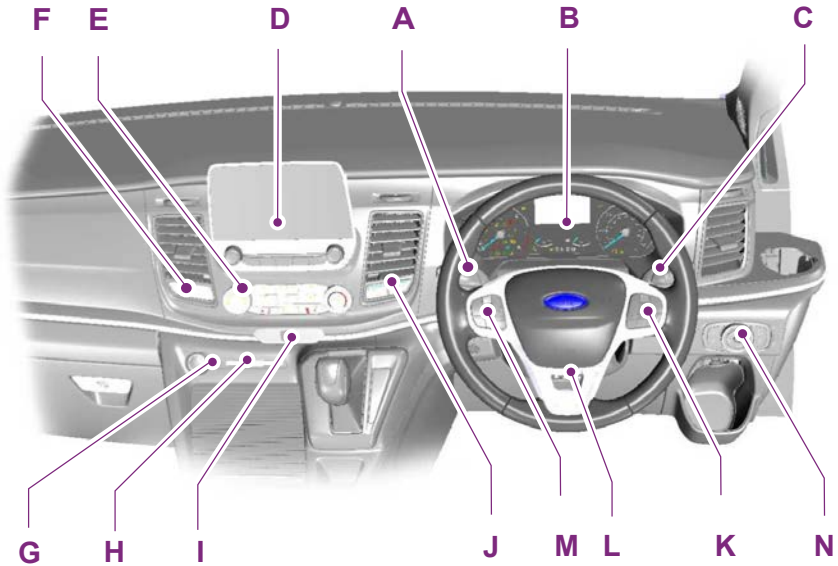


- A Direction indicator lever. See **Direction Indicators** (page 71).
- B Instrument cluster. See **Instrument Cluster** (page 78).
- C Wiper lever. See **Wipers and Washers** (page 63).
- D Audio unit. See **Audio System** (page 377).
- E Climate control. See **Climate Control** (page 99).
- F Fuel filler door release button. See **Refueling** (page 145). Auto-Start-Stop button.
- G Auxiliary power point. USB port. See **Auxiliary Power Points** (page 120).
- H Passenger airbag deactivation indicator. See **Switching the Passenger Airbag On and Off** (page 37).
- I Hazard flasher switch. See **Hazard Flashers** (page 237).
- J Parking aid button. See **Parking Aids** (page 178). Active park assist button. See **Active Park Assist** (page 184). Drive control button. See **Drive Control** (page 220).
- K Information display controls. See **General Information** (page 87).

At a Glance

- L Steering wheel adjustment lever. See **Adjusting the Steering Wheel** (page 62).
- M Cruise control buttons. See **Using Cruise Control** (page 190).
- N Lighting control. See **Lighting Control** (page 66).

INSTRUMENT PANEL - LHD

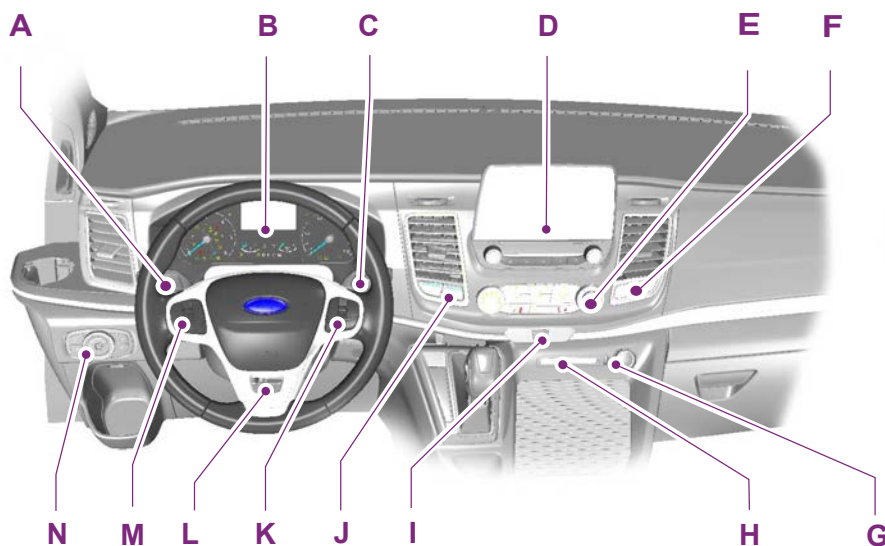

- A Direction indicator lever. See **Direction Indicators** (page 71).
- B Instrument cluster. See **Instrument Cluster** (page 78).
- C Wiper lever. See **Wipers and Washers** (page 63).
- D Audio unit. See **Audio System** (page 377).
- E Climate control. See **Climate Control** (page 99).
- F Fuel filler door release button. See **Refueling** (page 145). Auto-Start-Stop button.
- G Auxiliary power point. USB port. See **Auxiliary Power Points** (page 120).

At a Glance

- H Passenger airbag deactivation indicator. See **Switching the Passenger Airbag On and Off** (page 37).
- I Hazard flasher switch. See **Hazard Flashers** (page 237).
- J Parking aid button. See **Parking Aids** (page 178). Active park assist button. See **Active Park Assist** (page 184). Drive control button. See **Drive Control** (page 220).
- K Information display controls. See **General Information** (page 87).
- L Steering wheel adjustment lever. See **Adjusting the Steering Wheel** (page 62).
- M Cruise control buttons. See **Using Cruise Control** (page 190).
- N Lighting control. See **Lighting Control** (page 66).

Child Safety

INSTALLING CHILD RESTRAINTS



E161855



E133140



E68916



WARNING: Extreme Hazard! Never use a rearward facing child restraint on a seat protected by an active airbag in front of it. Death or serious injury to the child can occur.



WARNING: You must switch the passenger airbag off when using a rearward facing child restraint on the front seat.



WARNING: You must switch the passenger airbag on following the removal of the child restraint.



WARNING: Secure children that are less than 150 cm (60 in) tall in an approved child restraint on the rear seat.



WARNING: Read and follow the manufacturer's instructions when you are installing a child restraint.



WARNING: Do not modify child restraints in any way.



WARNING: Do not hold a child on your lap when your vehicle is moving.



WARNING: Do not leave children or pets unattended in your vehicle. Failure to follow this instruction could result in personal injury or death.



WARNING: If your vehicle has been involved in a crash, have the child restraints checked.

Only child restraints certified to ECE-R129 or ECE-R44.03 (or later) have been tested and approved for use in your vehicle. A choice of these are available from an authorized dealer.

Note: *Mandatory use of child restraints varies from country to country.*

Child Restraints for Different Mass Groups

Use the correct child restraint as follows:

Child Safety

Rearward Facing Baby Safety Seat



E68918

Secure children that weigh less than 13 kg (29 lb) in a rearward facing baby safety seat (Group 0+) on the front seat.

Child Safety Seat



E68920

Secure children that weigh between 13 kg (29 lb) and 18 kg (40 lb) in a child safety seat (Group 1) on the front seat.

Booster Seats



WARNING: Do not install a booster seat or a booster cushion with only the lap strap of the seatbelt.



WARNING: Do not install a booster seat or a booster cushion with a seatbelt that is slack or twisted.



WARNING: Do not put the shoulder section of the seatbelt or allow the child to put the shoulder section of the seatbelt under their arm or behind their back. Failure to follow this instruction could reduce the effectiveness of the seatbelt and increase the risk of injury or death in a crash.



WARNING: Do not use pillows, books or towels to boost your child's height. Failure to follow this instruction could result in personal injury or death.



WARNING: Make sure that your children sit in an upright position.



WARNING: When using a child restraint on a rear seat, the child restraint must rest tightly against the vehicle seat. It must not touch the head restraint. If necessary remove the head restraint.



WARNING: You must reinstall the head restraint following the removal of the child restraint.

Secure children that weigh greater than 15 kg (33 lb) but are less than 150 cm (60 in) tall in a booster seat or on a booster cushion.

Child Safety

Booster Seat (Group 2)



We recommend that you use a booster seat that combines a cushion with a backrest instead of a booster cushion only. The raised seating position will allow you to position the shoulder strap of the adult seatbelt over the center of your child's shoulder and the lap strap tightly across their hips.

Booster Cushion (Group 3)



WARNING: When using a booster cushion, make sure you adjust the vehicle head restraint on that seating position.



ISOFIX Anchor Points



WARNING: Use an anti-rotation device when using the ISOFIX system. We recommend the use of a top tether or support leg.

Your vehicle may have ISOFIX anchor points that accommodate universally approved ISOFIX child restraints.



E266092

The ISOFIX system has two rigid attachment arms on the child restraint. These attach to anchor points on the ISOFIX or i-Size labeled vehicle seats, where the cushion and backrest meet.

Note: If you are purchasing an ISOFIX child restraint, make sure that you know the correct mass group and ISOFIX size class for the intended seating locations. See **Child Restraint Positioning** (page 30).


Child Safety

Attaching a Child Restraint With Top Tethers



WARNING: Do not attach the top tether strap to anything other than the correct top tether strap anchor point.

Always follow the child restraint manufacturer's instructions for installing a child restraint with a top tether.

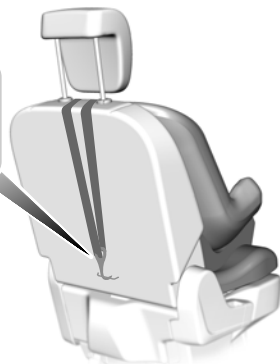

E147062



E153270

For child restraints with a top tether, tether anchor points are on the underside or rear of the seat backrest of each ISOFIX and i-Size seating position.

Attaching a Child Restraint With a Support Leg



WARNING: If you use a child restraint that has a support leg, make sure the support leg rests securely on the floor.



WARNING: Make sure that the child restraint manufacturer lists your vehicle as suitable for use with this type of child restraint.

Always follow the child restraint manufacturer's instructions for installing a child restraint with a support leg.

Child Safety



E162148

CHILD RESTRAINT POSITIONING



WARNING: Extreme Hazard! Never use a rearward facing child restraint on a seat protected by an active airbag in front of it. Death or serious injury to the child can occur.



WARNING: If you use a child restraint that has a support leg, make sure the support leg rests securely on the floor.



WARNING: If you use a child restraint and a seatbelt, make sure that the seatbelt is not slack or twisted.



WARNING: Make sure the child restraint rests tightly against the vehicle seat. If necessary, adjust the seat backrest to an upright position. It may also be necessary to lift or remove the head restraint.



WARNING: You must reinstall the head restraint following the removal of the child restraint.

Note: When using a child restraint on a front seat, always adjust the front passenger seat as far back as possible. If it proves difficult to tighten the lap section of the seatbelt without slack remaining, adjust the seat backrest to the fully upright position and raise the height of the seat. See **Seats** (page 107).

Child Safety

Vehicle Seating Positions	Mass Group Categories				
	0	0+	1	2	3
	0–10 kg (0–22 lb)	0–13 kg (0–29 lb)	9–18 kg (20–40 lb)	15–25 kg (33–55 lb)	22–36 kg (49–79 lb)
Front passenger seat with airbag ON .	X	X	UF ¹	UF ¹	UF ¹
Front passenger seat with airbag OFF .	U ¹	U ¹	U ¹	U ¹	U ¹
Second row seats - forward facing.	U	U	U	U	U
Second row seats - rearward facing. ²	X	X	X	X	X
Third row seats.	U	U	U	U	U
Fourth row seats.	X	X	X	X	X

¹ We recommend that you secure children in a government approved child restraint, on the rear seat.

² Vehicles with second row reversible seats.

X Not suitable for children in this mass group.

U Suitable for universal category child restraints approved for use in this mass group.

UF Suitable for universal category forward facing child restraints approved for use in this mass group.

See an authorized dealer for the latest details relating to our recommended child restraints.

Child Safety

ISOFIX Child Restraints

The following table provides information suitable for vehicle seats that have an i-Size or ISOFIX label attached.

Vehicle Seating Positions		Mass Group Categories			
		0	0+	1	1
		Rearward Facing	Rearward Facing	Forward Facing	Rearward Facing
		0–13 kg (0–29 lb)	0–13 kg (0–29 lb)	9–18 kg (20–40lb)	9–18 kg (20–40lb)
Front passenger seat.	Size class. ¹	No ISOFIX.			
	Seat type.				
Second row seats - forward facing - ISOFIX.	Size class. ¹	C, D, E ³		A, B, B1 ³	C, D ³
	Seat type.	IL		IL, IUUF	IL
Second row seats - rearward facing - ISOFIX. ²	Size class. ¹	X		X	X
	Seat type.	X		X	X
Third row dual seat - ISOFIX.	Size class. ¹	D, E ³		A, B, B1 ³	D ³
	Seat type.	IL		IL, IUUF	IL
Third row single seats - ISOFIX.	Size class. ¹	C, D, E ³		A, B, B1 ³	C, D ³
	Seat type.	IL		IL, IUUF	IL

Child Safety

Vehicle Seating Positions		Mass Group Categories			
		0	0+	1	1
		Rearward Facing	Rearward Facing	Forward Facing	Rearward Facing
		0–13 kg (0–29 lb)	0–13 kg (0–29 lb)	9–18 kg (20–40lb)	9–18 kg (20–40lb)
Fourth row seats.	Size class. ¹	No ISOFIX.			
	Seat type.				

¹ As defined by ECE-R16.

² Vehicles with second row reversible seats.

³ The capital letters A to E define the ISOFIX size class for both universal and semi-universal child restraints systems. You can see the identification letters on ISOFIX child restraints.

IL Suitable for use with particular ISOFIX child restraint systems in the semi-universal category. Refer to the child restraint system manufacturer vehicle recommendation list for additional information.

IUF Suitable for use with forward facing ISOFIX child restraint systems in the universal category.

Note: If you are purchasing an ISOFIX child restraint, make sure that you know the correct mass group and ISOFIX size class for the intended seating locations.

See an authorized dealer for the latest details relating to our recommended child restraints.

Recommended Child Restraints

Mass Group Categories	Manufacturer	Model	Attachment
0+ 0–13 kg (0–29 lb)	Britax Römer.	Baby Safe Plus with ISOFIX base. ¹	ISOFIX base or seatbelt only.
1 9–18 kg (20–40 lb)	Britax Römer.	Duo Plus. ¹	ISOFIX and top tether anchors or seatbelt only.
2 15–25 kg (33–55 lb)	Britax Römer.	KidFix. ^{1, 2}	ISOFIX and seatbelt or seatbelt only.

Child Safety

Mass Group Categories	Manufacturer	Model	Attachment
3 22–36 kg (49–79 lb)	Britax Römer.	KidFix. ^{1, 2}	ISOFIX and seatbelt or seatbelt only.

¹We recommend that you secure children using an ISOFIX child restraint on the rear outermost seats.

²We recommend that you use a booster seat that combines a cushion with a backrest instead of a booster cushion only.

See an authorized dealer for the latest details relating to our recommended child restraints.

i-Size Child Restraints

The following table provides information suitable for vehicle seats that have an i-Size label attached.

Vehicle Seating Positions	i-Size Child Restraint Systems
Front passenger seat.	X
Second row dual seat.	i-U
Second row single seats - forward facing.	i-U
Second row single seats - rearward facing. ¹	X
Third row dual seat.	i-U
Third row single seats.	i-U
Fourth row triple bench seat.	X

¹Vehicles with second row reversible seats.

i-U Suitable for use with forward and rearward facing i-Size child restraint systems.

X Not suitable for use with i-Size child restraint systems.

Child Safety

CHILD RESTRAINT POSITIONING



WARNING: Extreme Hazard! Never use a rearward facing child restraint on a seat protected by an active airbag in front of it. Death or serious injury to the child can occur.



WARNING: If you use a child restraint that has a support leg, make sure the support leg rests securely on the floor.



WARNING: If you use a child restraint and a seatbelt, make sure that the seatbelt is not slack or twisted.



WARNING: Make sure the child restraint rests tightly against the vehicle seat. If necessary, adjust the seat backrest to an upright position. It may also be necessary to lift or remove the head restraint.



WARNING: You must reinstall the head restraint following the removal of the child restraint.

Note: When using a child restraint on a front seat, always adjust the front passenger seat as far back as possible. If it proves difficult to tighten the lap section of the seatbelt without slack remaining, adjust the seat backrest to the fully upright position and raise the height of the seat. See **Seats** (page 107).

Vehicle Seating Positions	Mass Group Categories				
	0	0+	1	2	3
	0–10 kg (0–22 lb)	0–13 kg (0–29 lb)	9–18 kg (20–40 lb)	15–25 kg (33–55 lb)	22–36 kg (49–79 lb)
Front passenger seat with airbag ON .	X	X	UF ¹	UF ¹	UF ¹
Front passenger seat with airbag OFF .	U ¹	U ¹	U ¹	U ¹	U ¹
Second row seats.	U	U	U	U	U
Third row seats.	U	U	U	U	U

¹ We recommend that you secure children in a government approved child restraint, on the rear seat.

X Not suitable for children in this mass group.

U Suitable for universal category child restraints approved for use in this mass group.

UF Suitable for universal category forward facing child restraints approved for use in this mass group.

See an authorized dealer for the latest details relating to our recommended child restraints.

Child Safety

ISOFIX Child Restraints

The following table provides information suitable for vehicle seats that have an i-Size or ISOFIX label attached.

Vehicle Seating Positions		Mass Group Categories			
		0	0+	1	1
		Rearward Facing	Rearward Facing	Forward Facing	Rearward Facing
		0–13 kg (0–29 lb)	0–13 kg (0–29 lb)	9–18 kg (20–40lb)	9–18 kg (20–40lb)
Front passenger seat.	Size class. ¹	No ISOFIX.			
	Seat type.				
Second row seats - ISOFIX.	Size class. ¹	C, D, E ²		A, B, B1 ²	C, D ²
	Seat type.	IL		IL, IUF	IL
Third row dual seat - ISOFIX.	Size class. ¹	D, E ²		A, B, B1 ²	D ²
	Seat type.	IL		IL, IUF	IL

¹ As defined by ECE-R16.

² The capital letters A to E define the ISOFIX size class for both universal and semi-universal child restraints systems. You can see the identification letters on ISOFIX child restraints.

IL Suitable for use with particular ISOFIX child restraint systems in the semi-universal category. Refer to the child restraint system manufacturer vehicle recommendation list for additional information.

IUF Suitable for use with forward facing ISOFIX child restraint systems in the universal category.

Note: If you are purchasing an ISOFIX child restraint, make sure that you know the correct mass group and ISOFIX size class for the intended seating locations.

See an authorized dealer for the latest details relating to our recommended child restraints.

Child Safety

Recommended Child Restraints

Mass Group Categories	Manufacturer	Model	Attachment
0+ 0–13 kg (0–29 lb)	Britax Römer.	Baby Safe Plus with ISOFIX base. ¹	ISOFIX base or seatbelt only.
1 9–18 kg (20–40 lb)	Britax Römer.	Duo Plus. ¹	ISOFIX and top tether anchors or seatbelt only.
2 15–25 kg (33–55 lb)	Britax Römer.	KidFix. ^{1, 2}	ISOFIX and seatbelt or seatbelt only.
3 22–36 kg (49–79 lb)	Britax Römer.	KidFix. ^{1, 2}	ISOFIX and seatbelt or seatbelt only.

¹We recommend that you secure children using an ISOFIX child restraint on the rear outermost seats.

²We recommend that you use a booster seat that combines a cushion with a backrest instead of a booster cushion only.

See an authorized dealer for the latest details relating to our recommended child restraints.

i-Size Child Restraints

The following table provides information suitable for vehicle seats that have an i-Size label attached.

Vehicle Seating Positions	i-Size Child Restraint Systems
Front passenger seat.	X
Second row dual seat.	i-U
Second row triple bench seat.	i-U
Third row dual seat.	i-U

i-U Suitable for use with forward and rearward facing i-Size child restraint systems.

X Not suitable for use with i-Size child restraint systems.

Child Safety

CHILD SAFETY LOCKS



WARNING: You cannot open the rear doors from inside if you have put the child safety locks on.



E176719

A child safety lock is on the rear edge of each rear door. You must set the child safety lock separately on each door.

Left-Hand Side

Turn it counterclockwise to switch the child lock on and clockwise to switch it off.

Right-Hand Side

Turn it clockwise to switch the child lock on and counterclockwise to switch it off.

Seatbelts

FASTENING THE SEATBELTS



WARNING: Insert the tongue into the buckle until you hear a distinct click. You have not fastened the seatbelt correctly if you do not hear a click.



WARNING: Make sure that your seatbelt is securely stored away and is not outside your vehicle when closing the door.



E68586

Pull the seatbelt out steadily. It may lock if you pull it sharply or if your vehicle is on a slope.

Press the red button on the buckle to release the seatbelt. Hold the seatbelt tongue and let it retract completely and smoothly to its stowed position.

Using Seatbelts During Pregnancy




WARNING: Position the seatbelt correctly for your safety and that of your unborn child. Do not use only the lap strap or the shoulder strap.



E68584



E68585

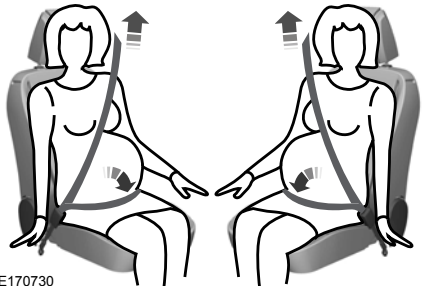

E170730


Seatbelts

Pregnant women should always wear their seatbelt. The lap belt portion of a combination lap and shoulder seatbelt should be positioned low across the hips below the stomach and worn as tight as comfort will allow. The shoulder belt should be positioned to cross the middle of the shoulder and the center of the chest.

SEATBELT HEIGHT ADJUSTMENT



WARNING: Position the seatbelt height adjuster so that the belt rests across the middle of your shoulder. Failure to adjust the seatbelt properly could reduce the effectiveness of the seatbelt and increase the risk of injury in a crash.

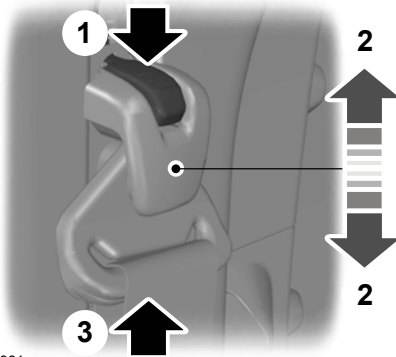

E143981

1. Support the seatbelt loop while pressing the adjuster button.
2. Slide the adjuster to the desired position then release the button.
3. Pull down on the seatbelt loop to make sure it is secure in position.

SEATBELT REMINDER



WARNING: The system will only provide protection when you use the seatbelt correctly.

The warning lamp illuminates and an audible warning sounds when the following conditions have been met:

- The driver seatbelt has not been fastened.
- Your vehicle exceeds a relatively low speed.

It also illuminates when the driver seatbelt is unfastened when your vehicle is moving.

If you do not fasten the driver seatbelt both the audible and visual warnings switch off automatically after approximately five minutes.

Turning the Seatbelt Reminder Off

Contact an authorized dealer.

Supplementary Restraints System

PRINCIPLE OF OPERATION



WARNING: Extreme Hazard! Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!



WARNING: Do not modify the front of your vehicle in any way. This could adversely affect deployment of the airbags.



WARNING: Wear a safety belt and keep sufficient distance between yourself and the steering wheel. Only when you use the safety belt properly, can it hold you in a position that allows the airbag to achieve its optimum effect. See **Sitting in the Correct Position** (page 107).



WARNING: Repairs to the steering wheel, steering column, seats, airbags and safety belts must be carried out by an authorized dealer.



WARNING: Keep the areas in front of the airbags free from obstruction. Do not affix anything to or over the airbag covers.



WARNING: Do not puncture the seat with sharp objects. This could damage and adversely affect deployment of the airbags.




WARNING: Use seat covers designed for seats with side airbags. Have these fitted by an authorized dealer.

Note: You will hear a loud bang and see a cloud of harmless powdery residue if an airbag deploys. This is normal.

Note: The front passenger airbag protects both positions of a double seat.

Note: Only wipe airbag covers with a damp cloth.

DRIVER AIRBAG

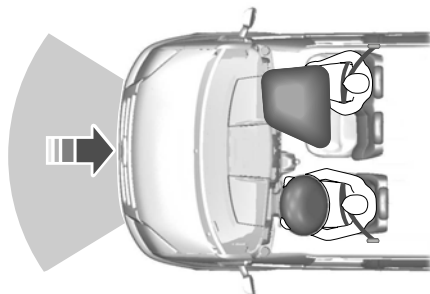


E268726

The airbag is designed to deploy during a significant frontal or near-frontal crash. The airbag inflates within a few thousandths of a second cushioning forward body movement and deflates on contact with the occupant. The airbag is not designed to deploy during a minor frontal crash, rear crash, side crash or a vehicle rollover.

Supplementary Restraints System

PASSENGER AIRBAG

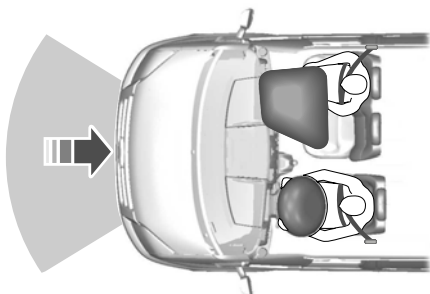

E268726

The airbag is designed to deploy during a significant frontal or near-frontal crash. The airbag inflates within a few thousandths of a second cushioning forward body movement and deflates on contact with the occupant. The airbag is not designed to deploy during a minor frontal crash, rear crash, side crash or a vehicle rollover.


SWITCHING THE PASSENGER AIRBAG ON AND OFF



E71313

The passenger airbag on and off indicators are close to the climate control unit.

Switching the Passenger Airbag Off

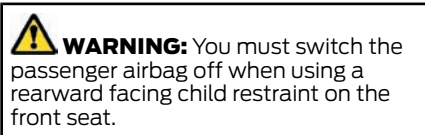

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.
3. Select **Passenger airbag**.
4. Select **Off**.
5. Press and hold the **OK** button until a confirmation message appears in the information display.
6. Switch the ignition off and on and check that the passenger airbag off indicator illuminates.

Supplementary Restraints System

Note: If it does not illuminate, this indicates a malfunction. Have your vehicle checked as soon as possible.

Switching the Passenger Airbag On

WARNING: You must switch the passenger airbag on following the removal of the child restraint.

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.
3. Select **Passenger airbag**.
4. Select **On**.
5. Press and hold the **OK** button until a confirmation message appears in the information display.
6. Switch the ignition off and on and check that the passenger airbag on indicator illuminates.

Note: If it does not illuminate, this indicates a malfunction. Have your vehicle checked as soon as possible.

SIDE AIRBAGS

WARNING: Do not place objects or mount equipment on or near the headliner at the siderail that may come into contact with a deploying curtain airbag. Failure to follow these instructions may increase the risk of personal injury in the event of a crash.

WARNING: Do not lean your head on the door. The side airbag could injure you as it deploys from the side of the seatback.

WARNING: Accessory seat covers not released by Ford Motor Company could prevent the deployment of the airbags and increase the risk of injuries in a crash.

WARNING: Do not attempt to service, repair, or modify the supplementary restraint system or associated components. Failure to follow this instruction could result in personal injury or death.

WARNING: If a supplementary restraint system component has deployed, it will not function again. Have the system and associated components inspected as soon as possible. Failure to follow this instruction could result in personal injury or death.



E72658

The side airbags are on the outermost side of each front seat backrest. There is a label attached to the side of each backrest to indicate this.

Supplementary Restraints System




Side curtain airbags are located over both side windows where there are driver and front passenger seats. There are molded badges in the headlining above the side windows to indicate this.

The airbags will deploy during significant lateral collisions. They will also deploy during significant frontal angled collisions. The side curtain airbags will not deploy in minor lateral and frontal collisions, rear collisions or overturns.

The side airbags are designed to inflate between the door panel and the occupant to enhance the protection in certain crashes.

The airbag is designed to deploy during a significant lateral crash. It might also deploy during a significant frontal crash. The airbag is not designed to deploy during a minor lateral or frontal crash, rear crash or a vehicle rollover.

SIDE CURTAIN AIRBAGS

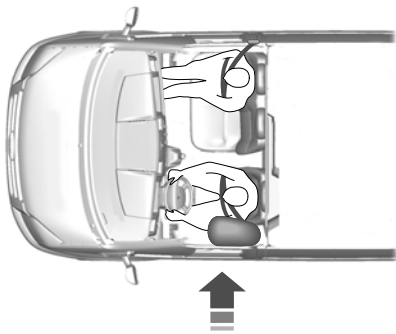

E68905

Pedestrian Alert System - Plug-In Hybrid Electric Vehicle (PHEV)

WHAT IS THE PEDESTRIAN ALERT SYSTEM

Electric drive vehicles can be extremely

quiet. The pedestrian alert system is designed to generate a sound to alert pedestrians to the presence of an electric drive vehicle.

PEDESTRIAN ALERT SYSTEM – TROUBLESHOOTING

Pedestrian Alert System – Information Messages

Message	Condition	Action
Pedestrian sounder malfunction Service now	The system has malfunctioned.	Have your vehicle checked as soon as possible.

Automatic Crash Notification System

EMERGENCY ASSISTANCE



WARNING: Unless the Emergency Assistance setting is on prior to a collision, the system does not attempt to place an emergency call. This could delay the response time, increasing the risk of serious injury or death.



WARNING: For this feature to work, your mobile phone must be Bluetooth-enabled and compatible with the system.



WARNING: Always place your phone in a secure location in your vehicle so it does not become a projectile or get damaged in a crash. Failure to do so may cause serious injury to someone or damage the phone which could prevent Emergency Assistance from working properly.

Note: *Not all accidents activate the system. If an accident does trigger the system, it initiates a call to the emergency services. Do not wait for the system to initiate a call if you are able to do so. Call emergency services immediately to avoid a delayed response time. If you do not hear the system within five seconds of the accident, the system could be non-functional.*

If an accident results in an attempt to deploy an airbag, excluding knee airbags and rear inflatable seatbelts, or to shut off the fuel pump, the system initiates a call to the emergency services.

Note: *Before setting the feature on, please read the important notice about the Emergency Assistance feature and the Emergency Assistance privacy notice later in this section for important information.*

Note: *When you switch Emergency Assistance on or off, the settings apply to all paired mobile phones. If you switch Emergency Assistance off and a previously paired phone connects when you switch the ignition on, either a voice message plays, a display message or icon is shown or both.*

Note: *Every mobile phone operates differently. While Emergency Assistance works with most mobile phones, some mobile phones may experience difficulties using this feature.*

Note: *In the case of an emergency, the system, as a means of communication aid, can help you contact specific rescue departments of public emergency services. The system does not deploy the rescue operations. The local public emergency service deploys specific rescue operations according to the actual situation.*

To make sure that Emergency Assistance works correctly:

- The system must have power and be working correctly at the time of the crash and during feature activation and use.
- You must switch on the feature before a crash.
- You must have a cell phone connected to the system.
- In certain countries, it may be necessary to have a valid and registered SIM card with credit in order to place and maintain an emergency call.
- A connected cell phone must have the ability to make and maintain an outgoing call at the time of the crash.
- A connected cell phone must have adequate network coverage, battery power and signal strength.
- Your vehicle must have battery power.

Automatic Crash Notification System

Note: *This feature only works in a country where Emergency Assistance can call the local emergency services. For additional information, please refer to the local Ford website.*

In the Event of a Crash

Before making a call:

- If you do not cancel the call, an introductory message plays for the emergency operator. After this message, there is hands-free communication between your vehicle's occupants and the operator.
- The system provides a short window of time (approximately 10 seconds) to cancel the call. If you do not cancel the call, the system initiates a call to the emergency services.
- The system plays a message letting you know when it attempts to make an emergency call. You can cancel the call by selecting the relevant button or by pressing the end call button on the steering wheel.

Note: *Not every crash deploys an airbag or triggers the fuel pump shut off, which may turn on Emergency Assistance. However, if Emergency Assistance is triggered, the system tries to contact the emergency services. If a connected cell phone sustains damage or loses connection to the system, it searches for and tries to connect to any available previously paired cell phone and initiates a call to the emergency services.*

During a call:

- Emergency Assistance uses your vehicle GPS or cellular network information when available to determine the most appropriate language to use. It alerts the emergency operator of the crash and delivers the introductory message. This may include your vehicle GPS coordinates.
- The language the system uses to interact with the occupants of your vehicle may differ from the language used to deliver information to the emergency operator.
- After the delivery of the introductory message the voice line opens so that you can speak hands-free with the emergency operator.
- When the line is connected, you must be prepared to provide your name, phone number and location information immediately.

Note: *While the system provides information to the emergency operator, the system plays a message letting you know it is sending important information. It then lets you know when the line is open to start hands-free communication.*

Note: *During an Emergency Assistance call, an emergency priority screen appears which contains vehicle GPS coordinates when available.*

Note: *It is possible that GPS location information is not available at the time of the crash; in this case, Emergency Assistance will still attempt to place an emergency call.*

Note: *It is possible that the emergency services will not receive the GPS coordinates; in this case, hands-free communication with an emergency operator is available.*

Automatic Crash Notification System

Note: The emergency operator may also receive information from the cellular network such as cell phone number, cell phone location and cell phone carrier name independent from Emergency Assistance.

Emergency Assistance may not work if:

- Your cell phone or Emergency Assistance hardware sustains damage in the crash.
- The vehicle battery or the system has no power.
- A crash ejects your cell phone from your vehicle.
- You do not have a valid and registered SIM card with credit in your cell phone.
- You are in a country where Emergency Assistance cannot call the local emergency services. For additional information, please refer to the local Ford website.

Important Information About Emergency Assistance

Emergency Assistance does not currently call emergency services in the following countries:

- Albania.
- Armenia.
- Azerbaijan.
- Belarus.
- Bosnia and Herzegovina.
- Georgia.
- Macedonia.
- Moldova.
- Netherlands.
- Russia.
- Ukraine.

Emergency Assistance Privacy Notice

When you switch on Emergency Assistance, it may disclose to emergency services that your vehicle has been in a crash involving the deployment of an airbag or activation of the fuel pump shut off. This feature has the capability to disclose your location information to the emergency operator or other details about your vehicle or crash to provide the most appropriate emergency services.

If you do not want to disclose this information, do not switch on the feature.

ERA-GLONASS



WARNING: If the system malfunctions, have your vehicle checked as soon as possible.

Note: The system is compliant with ERA-GLONASS.

Note: The system is designed for emergency calls for severe accidents, medical emergencies and test mode calls. It does not support other voice calls.

Note: The system may not mute the audio during an emergency call if your vehicle has a non-Ford approved audio unit.

Note: The system may not operate properly if your vehicle has non-Ford approved speakers.

Note: The system may not operate at temperatures below -40°C (-40°F) or above 85°C (185°F).

Note: The system only operates in areas with a compatible network, and may not operate outside coverage areas.

Note: System coverage may not be available in all regions.

Automatic Crash Notification System

Note: If an emergency call cannot be placed, a voice prompt plays and the status indicator illuminates.

Note: The operator may not receive your vehicle data if the transmission is unsuccessful.

During an emergency call, the system transmits vehicle data, including:

- Vehicle Identification Number.
- Vehicle propulsion type.
- Current timestamp.
- Vehicle location and direction.
- Call activation type.
- Vehicle type.

The Emergency Call System indicator briefly illuminates when you switch the ignition on. If the indicator stays on permanently or does not turn on at all, the system is not functioning properly. If the system is still malfunctioning after restarting the vehicle, contact an authorized dealer for service.

Emergency Call System Indicator	Action
Flashes rapidly.	The system is placing the emergency call.
Flashes at a medium speed.	The system is transmitting vehicle data to emergency personnel.
Flashes slowly.	The system successfully connected to emergency personnel. Voice communication established.
Solid Red.	The system detects a malfunction and requires service.
Off.	The emergency call is complete or cancelled.

Crash or Rollover

In certain types of crashes or rollovers, the system activates an automatic call to the emergency services. This call cannot be cancelled.

Using Manual Emergency Call



WARNING: Use caution when making a manual emergency call when driving.

Note: You can only make a manual emergency call with the ignition on or in accessory mode.

Automatic Crash Notification System



Press, hold and release the button in the overhead console after approximately two seconds to dial emergency services. You can then speak with the operator.

To cancel the call, press the button again before the call is placed.

After an Emergency Call

After completing an emergency call, the emergency call operator can place an emergency call to the vehicle. Your vehicle automatically answers incoming calls for up to two hours. The system will answer the call after two rings.

Test Mode

You can perform system diagnostics on your Emergency Call System.

Press and hold the button for more than ten seconds. After completion of test mode, you can only place another test mode call after five minutes.

Note: *If released after a duration of between two and ten seconds, a manual emergency call will be triggered.*

Note: *You can only switch on test mode when your vehicle is stationary for at least one minute and the ignition is on.*

Note: *The system cannot make an emergency call when test mode is in progress.*

Test Mode Cancellation

To cancel test mode, press and hold the button for more than two seconds during test mode.

Note: *Test mode cancels after you drive the vehicle approximately 300 m (328 yd).*

Note: *Test mode cancels if you switch the ignition off during test mode.*

Test Mode System Checks

The Emergency Call System performs various system checks.

Note: *If the emergency call system indicator stays on after diagnostics, there may be a problem with the Emergency Call System. Contact an authorized dealer for service.*

Emergency Call System Indicator	Action
Flashes twice, and then repeats.	Test Mode successfully begins.
Flashes twice, and then repeats.	Follow the voice prompts.
Flashes twice, and then repeats.	Confirm that you heard the recording by pressing the button.
Flashes twice, and then repeats.	If you hear the tone, press the button. This tests the speaker.
Solid Red.	The system detects a malfunction and requires service.
Off.	Diagnostics are complete, or you cancel Test Mode.

Backup Battery Replacement

The Emergency Call System has a backup battery. The system indicates when to replace the battery by a status indicator (solid red) and voice prompt. Contact an authorized dealer for service.

Note: *To maintain the best operating conditions and service life of the battery, it must remain between -20°C (-4°F) and 85°C (185°F).*

Keys and Remote Controls

GENERAL INFORMATION ON RADIO FREQUENCIES

Note: *Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

The typical operating range for your transmitter is approximately 10 m (33 ft).

A decrease in operating range could be caused by:

- weather conditions
- nearby radio towers
- structures around your vehicle
- other vehicles parked next to your vehicle.

The radio frequency used by your remote control can also be used by other radio transmitters, for example amateur radios, medical equipment, wireless headphones, wireless remote controls, cell phones, battery chargers and alarm systems. If the frequencies are jammed, you will not be able to use your remote control. You can lock and unlock the doors with the key.

Note: *Make sure your vehicle is locked before leaving it unattended.*

Note: *If you are in range, the remote control will operate if you press any button unintentionally.*

Note: *The remote control contains sensitive electrical components. Exposure to moisture or impact may cause permanent damage.*

REMOTE CONTROL

Your vehicle comes with a rechargeable remote control. The remote control battery automatically charges when the key is in the ignition and the engine is running. You should use all remote controls to drive your vehicle at least once every year, to prevent the remote control battery from losing charge.

Note: *The remote control battery cannot be replaced. Do not attempt to remove or replace the battery as this could cause damage to the key housing not covered by the vehicle Warranty.*

You can purchase replacement keys or remote controls from an authorized dealer.

Reprogramming the Unlocking Function

Note: *When you press the unlock button, either all the doors are unlocked or only the driver and passenger doors are unlocked. Pressing the unlock button again unlocks all the doors.*

Press and hold the unlock and lock buttons on the remote control simultaneously for at least four seconds with the ignition off. The direction indicators flash twice to confirm the change. To return to the original unlocking function, repeat the process.

REPLACING A LOST KEY OR REMOTE CONTROL

You can purchase replacement keys or remote controls from an authorized dealer. Authorized dealers can program remote controls for your vehicle. See **Remote Control** (page 46).

To re-program the passive anti-theft system see an authorized dealer.

MyKey™ - Vehicles With: MyKey

PRINCIPLE OF OPERATION

The system is designed to promote good driving behaviors using keys that you have programmed with some restricted settings.

MYKEY SETTINGS

Non-Configurable Settings

Seatbelt Reminder

The audio system mutes when the seatbelt reminder turns on. The seatbelt reminder cannot be switched off with a MyKey.

Early Low Fuel

The low fuel level warning lamp turns on earlier.

Driving and Parking Aids

Parking aids, blind spot information system and cross traffic alert turn on when you start the engine and cannot be switched off with a MyKey.

Pre-collision assist and lane keeping alert turn on when you start the engine, but can be switched off with a MyKey.

A new destination in the navigation system can only be set using voice commands, when using a MyKey and your vehicle is moving.

Configurable Settings

You can configure the following settings after creating a MyKey. See **Creating a MyKey** (page 48).

Speed Limit



WARNING: Do not set MyKey maximum speed limit to a limit that will prevent the driver from maintaining a safe speed considering posted speed limits and prevailing road conditions. The driver is always responsible to drive in accordance with local laws and prevailing conditions. Failure to do so could result in accident or injury.

You can set a speed limit for your vehicle. Warning messages appear in the information display and a tone sounds if your vehicle reaches the set speed. You cannot override the set speed when using a MyKey.

Speed Reminder

You can set a speed reminder for your vehicle. Warning messages appear in the information display and a tone sounds if your vehicle exceeds the set speed.

Audio System Volume Limit

The audio system maximum volume is reduced. A message appears in the information display if you attempt to exceed the volume limit. Automatic volume control turns off.

Emergency Assistance

If you set emergency assistance to be always on, it cannot be switched off with a MyKey.

Do Not Disturb

If you set do not disturb to be always on, it cannot be switched off with a MyKey.

Traction Control

If you set traction control to be always on, it cannot be switched off with a MyKey.

MyKey™ - Vehicles With: MyKey

CREATING A MYKEY

Switch the ignition on using an admin key.

To create a MyKey, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Settings	Press the menu button.
MyKey	Press the OK button.
Create MyKey	Press and hold the OK button until a confirmation message appears in the information display.
	Switch the ignition off.

Note: We recommend that you label this key.

MyKey Information Messages

Message	Description
Key is already a MyKey	Displays when trying to create a MyKey with a key already designated as a MyKey.
Key restricted at next start. Label this key	Displays to confirm that the key is restricted after you switch the ignition off.

Switch the ignition on using an admin key.

PROGRAMMING A MYKEY

You can only program MyKeys to the same settings.

To program a MyKey, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Settings	Press the menu button.
MyKey	Press the OK button.
	Select a setting and press the OK button.
	Configure the setting.
	Switch the ignition off.

MyKey™ - Vehicles With: MyKey

CLEARING ALL MYKEYS

When you clear all MyKeys, you remove all

restrictions and return all MyKeys to their original admin key status.

Switch the ignition on using an admin key.

To clear all MyKeys, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Settings	Press the menu button.
MyKey	Press the OK button.
Clear MyKeys	Press and hold the OK button until a confirmation message appears in the information display.

MyKey™ - Vehicles With: MyKey

CHECKING MYKEY SYSTEM STATUS

Switch the ignition on.

To find information about the distance traveled using a MyKey and also the number of admin keys and MyKeys created for your vehicle, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Settings	Press the menu button.
MyKey	Press the OK button.
MyKey info	Press the OK button.

MYKEY – TROUBLESHOOTING

What is an admin key?

- An admin key is a key that has not been created as a MyKey. See **Creating a MyKey** (page 48).

Why can I not create a MyKey?

- The key used to switch the ignition on is not an admin key.
- The key used to switch the ignition on is the only admin key. There always has to be at least one admin key.

Why can I not program a MyKey?

- The key used to switch the ignition on is not an admin key.
- No MyKeys are created. See **Creating a MyKey** (page 48).

Why can I not clear the MyKeys?

- The key used to switch the ignition on is not an admin key.
- No MyKeys are created. See **Creating a MyKey** (page 48).

Why does the MyKey distance not accumulate?

- The key used to start the engine is an admin key.
- No MyKeys are created. See **Creating a MyKey** (page 48).
- The MyKeys have been cleared.

Doors and Locks

LOCKING AND UNLOCKING - VEHICLES WITH: MANUAL LIFTGATE

Locking the Doors



Press the button to lock all doors. The direction indicators flash.

Note: You can lock the driver door with the key. Turn the key toward the front of your vehicle. Use the key when the remote control is not functioning.

Note: Check your vehicle is locked before leaving it unattended.

Note: Do not leave your keys in your vehicle.

Double Locking the Doors (If Equipped)



WARNING: Do not use double locking when passengers or animals are inside your vehicle. The doors cannot be unlocked or opened from the inside when double locked.

Double locking is a theft protection feature that prevents someone from opening the doors from the inside.



Press the button twice within three seconds. The direction indicators flash.

Note: If you double lock your vehicle when inside, switch the ignition on to return the door locks to a single locked state.

Note: You can double lock your vehicle with the key. Turn the key toward the front of your vehicle twice within three seconds. Use the key when the remote control is not functioning.

Note: Check your vehicle is locked before leaving it unattended.

Note: Do not leave your keys in your vehicle.

Unlocking the Doors



Press the button to unlock all doors. The direction indicators flash.

Note: You can unlock the driver door with the key. Turn the key toward the rear of your vehicle. Use the key when the remote control is not functioning.

Note: When you leave your vehicle unattended for several weeks, the remote control turns off. Unlock your vehicle and start the engine to enable the remote control.

Reprogramming the Unlocking Function

You can reprogram the unlocking function so that all doors are unlocked.


Simultaneously press and hold the unlock and lock buttons on the remote control for at least four seconds with the ignition off. The direction indicators flash twice to confirm the change.

To return to the original unlocking function, repeat the process.

You can also change between the unlocking modes in the information display. See **General Information** (page 87).

Doors and Locks


Locking and Unlocking the Doors From Inside

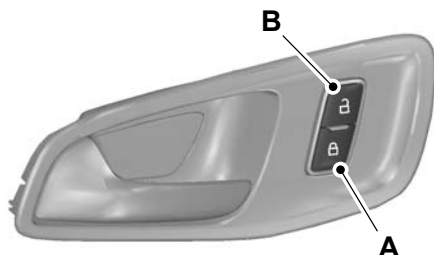

E148829

- A Lock.
- B Unlock.

Opening the Sliding Door

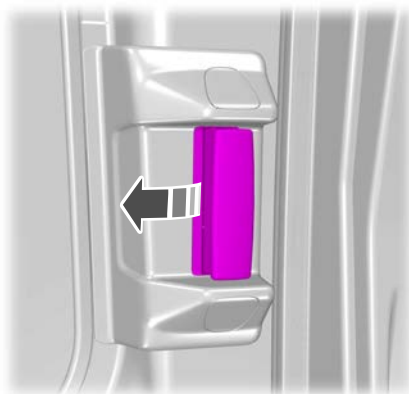

Slam Locking (If Equipped)

You can use slam locking to individually lock the doors if the vehicle battery or the key battery has no charge.

Note: Do not leave the keys in your vehicle.

Note: The horn could sound if you try to lock the doors when a door is still open.

Front Passenger Door

Left-Hand Side

1. Fully open the door.




E260666

2. Insert the key blade into the key slot.
3. Turn the key clockwise.
4. Remove the key.
5. Close the door. The door locks when you close it.

Right-Hand Side

1. Fully open the door.

Doors and Locks

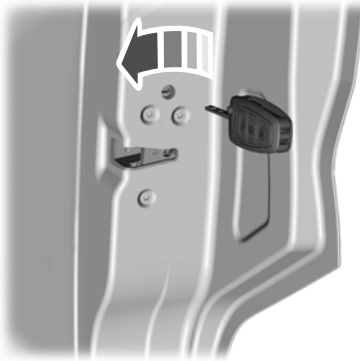


E260667

2. Insert the key blade into the key slot.
3. Turn the key counterclockwise.
4. Remove the key.
5. Close the door. The door locks when you close it.

Sliding Door

1. Fully open the door.

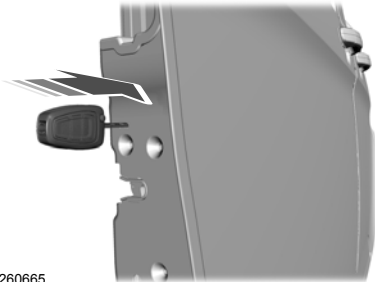

E260665

2. Fully insert the key blade into the key slot.
3. Remove the key.
4. Close the door. The door locks when you close it.

Autolock (If Equipped)

Autolock locks all the doors when all of the following occur:

- All doors are closed.
- The ignition is on.
- You shift into any gear putting your vehicle in motion.
- The vehicle speed exceeds a predetermined limit.

You can turn this function on using the information display. See **Information Displays** (page 87). If you have turned this function on, either use the interior door unlock button or switch the ignition off and use the key or remote control to unlock the sliding door.

Auto Relock

The doors relock if you do not open a door within 45 seconds of unlocking the doors with the remote control. The door locks and the alarm return to their previous state.

Autounlock

Autounlock unlocks all the doors when all of the following occur:

- The ignition is on, all the doors are closed, and the vehicle speed exceeds a predetermined limit.
- Your vehicle comes to a stop and you switch the ignition off or to the accessory position.
- You open the driver door within 10 minutes of switching the ignition off or to the accessory position.

You can turn this function on using the information display. See **Information Displays** (page 87).

Doors and Locks

Unlocking the Doors (One-Stage Unlock)

All doors unlock when you press the unlock button on the remote control once.

Note: When you have double locked your vehicle, the interior unlock button only operates for approximately 20 seconds.

You can turn this function on using the information display. See **Information Displays** (page 87).

Unlocking the Doors (Two-Stage Unlock)

The driver and passenger doors unlock when you do any of the following:

- Pull an interior door handle if you have not double locked your vehicle.
- Press the unlock button on the remote control once.
- Press the interior unlock button once.

Note: When you have double locked your vehicle, the interior unlock button only operates for approximately 20 seconds.

All doors unlock when you do any of the following:

- Press the unlock button on the remote control twice within three seconds.
- Press the interior unlock button twice within three seconds.

Note: When you have double locked your vehicle, the interior unlock button only operates for approximately 20 seconds.

Configurable Unlocking (If Equipped)

Configurable unlocking is set at the time of vehicle purchase. It allows you to select which doors unlock when you press the unlock button or the luggage compartment unlock button on the remote control once or twice. You cannot switch this feature back on if you have had it switched off. See an authorized dealer for further information.

LOCKING AND UNLOCKING - VEHICLES WITH: REAR CARGO DOORS

Locking the Doors



Press the button to lock all doors. The direction indicators flash.

Note: You can lock the driver door with the key. Turn the key toward the front of your vehicle. Use the key when the remote control is not functioning.

Note: Check your vehicle is locked before leaving it unattended.

Note: Do not leave your keys in your vehicle.

Double Locking the Doors (If Equipped)



WARNING: Do not use double locking when passengers or animals are inside your vehicle. The doors cannot be unlocked or opened from the inside when double locked.

Double locking is a theft protection feature that prevents someone from opening the doors from the inside.



Press the button twice within three seconds. The direction indicators flash.

Doors and Locks

Note: If you double lock your vehicle when inside, switch the ignition on to return the door locks to a single locked state.

Note: You can double lock your vehicle with the key. Turn the key toward the front of your vehicle twice within three seconds. Use the key when the remote control is not functioning.

Note: Check your vehicle is locked before leaving it unattended.

Note: Do not leave your keys in your vehicle.

Unlocking the Doors



Press the button to unlock all doors. The direction indicators flash.

Note: You can unlock the driver door with the key. Turn the key toward the rear of your vehicle. Use the key when the remote control is not functioning.

Note: When you leave your vehicle unattended for several weeks, the remote control turns off. Unlock your vehicle and start the engine to enable the remote control.

Reprogramming the Unlocking Function


You can reprogram the unlocking function so that all doors are unlocked.

Simultaneously press and hold the unlock and lock buttons on the remote control for at least four seconds with the ignition off. The direction indicators flash twice to confirm the change.

To return to the original unlocking function, repeat the process.

You can also change between the unlocking modes in the information display. See **General Information** (page 87).


Locking and Unlocking the Doors From Inside

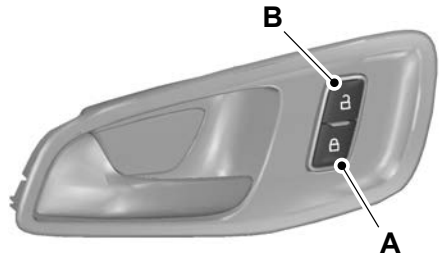

E148829

- A Lock.
- B Unlock.

Opening the Sliding Door

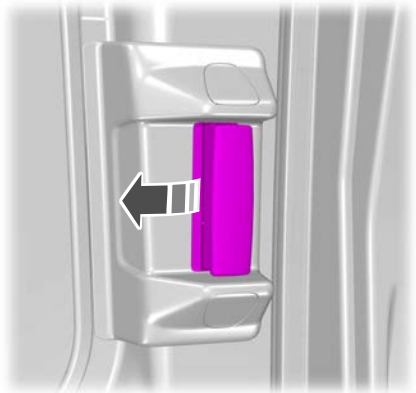


Doors and Locks

Opening the Double Rear Doors (If Equipped)



E148805

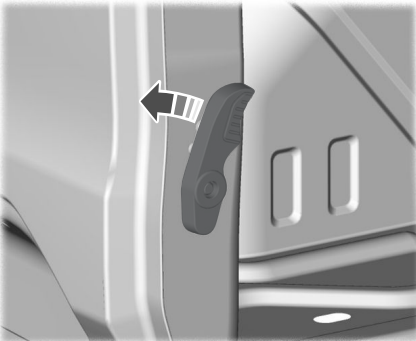

E148806

Slam Locking (If Equipped)

You can use slam locking to individually lock the doors if the vehicle battery or the key battery has no charge.


Note: Do not leave the keys in your vehicle.

Note: The horn could sound if you try to lock the doors when a door is still open.

Front Passenger Door

Left-Hand Side

1. Fully open the door.

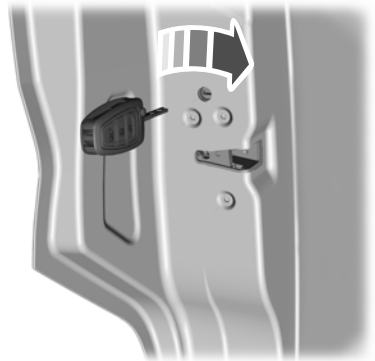


E260666

2. Insert the key blade into the key slot.
3. Turn the key clockwise.
4. Remove the key.
5. Close the door. The door locks when you close it.

Right-Hand Side

1. Fully open the door.

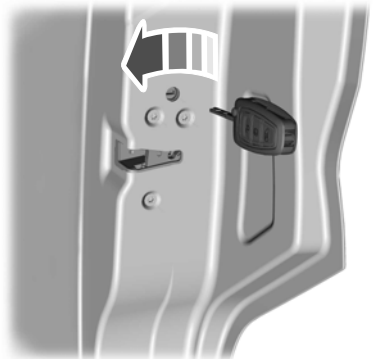

E260667


2. Insert the key blade into the key slot.
3. Turn the key counterclockwise.
4. Remove the key.

Doors and Locks

5. Close the door. The door locks when you close it.

Sliding Door

1. Fully open the door.

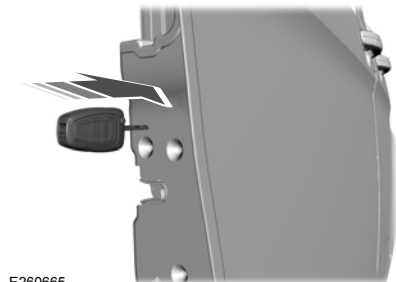


E260665

2. Fully insert the key blade into the key slot.
3. Remove the key.
4. Close the door. The door locks when you close it.

Rear Cargo Doors

1. Fully open the right-hand side rear cargo door.

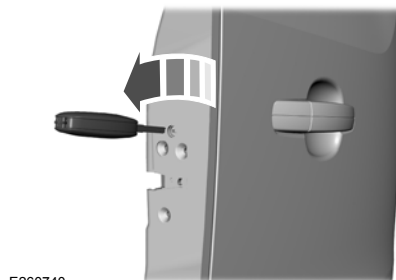

E260740

2. Insert the key blade into the key slot.
3. Turn the key counterclockwise.
4. Remove the key.

5. Close the door. The door locks when you close it.

Autolock (If Equipped)

Autolock locks all the doors when all of the following occur:

- All doors are closed.
- The ignition is on.
- You shift into any gear putting your vehicle in motion.
- The vehicle speed exceeds a predetermined limit.

You can turn this function on using the information display. See **Information Displays** (page 87). If you have turned this function on, either use the interior door unlock button or switch the ignition off and use the key or remote control to unlock the rear or sliding door.

Auto Relock

The doors relock if you do not open a door within 45 seconds of unlocking the doors with the remote control. The door locks and the alarm return to their previous state.

Autounlock

Autounlock unlocks all the doors when all of the following occur:

- The ignition is on, all the doors are closed, and the vehicle speed exceeds a predetermined limit.
- Your vehicle comes to a stop and you switch the ignition off or to the accessory position.
- You open the driver door within 10 minutes of switching the ignition off or to the accessory position.

You can turn this function on using the information display. See **Information Displays** (page 87).

Doors and Locks

Unlocking the Doors (One-Stage Unlock)

All doors unlock when you press the unlock button on the remote control once.

Note: *When you have double locked your vehicle, the interior unlock button only operates for approximately 20 seconds.*

You can turn this function on using the information display. See **Information Displays** (page 87).

Unlocking the Doors (Two-Stage Unlock)

The driver and passenger doors unlock when you do any of the following:

- Pull an interior door handle if you have not double locked your vehicle.
- Press the unlock button on the remote control once.
- Press the interior unlock button once.

Note: *When you have double locked your vehicle, the interior unlock button only operates for approximately 20 seconds.*

All doors unlock when you do any of the following:

- Press the unlock button on the remote control twice within three seconds.
- Press the interior unlock button twice within three seconds.

Note: *When you have double locked your vehicle, the interior unlock button only operates for approximately 20 seconds.*

Configurable Unlocking (If Equipped)

Configurable unlocking is set at the time of vehicle purchase. It allows you to select which doors unlock when you press the unlock button or the luggage compartment unlock button on the remote control once or twice. You cannot switch this feature back on if you have had it switched off. See an authorized dealer for further information.

Liftgate

MANUAL LIFTGATE



WARNING: It is extremely dangerous to ride in a cargo area, inside or outside of a vehicle. In a crash, people riding in these areas are more likely to be seriously injured or killed. Do not allow people to ride in any area of your vehicle that is not equipped with seats and seatbelts. Make sure everyone in your vehicle is in a seat and properly using a seatbelt. Failure to follow this warning could result in serious personal injury or death.



WARNING: Make sure to close and latch the liftgate to prevent drawing exhaust fumes into your vehicle. This will also prevent passengers and cargo from falling out. If you must drive with the liftgate open, keep the vents or windows open so outside air comes into your vehicle. Failure to follow this warning could result in serious personal injury.

Note: Be careful when opening or closing the liftgate in a garage or other enclosed area to avoid damaging the liftgate.


Note: Do not hang anything, for example a bike rack, from the glass or liftgate. This could damage the liftgate and its components.

Unlocking the Liftgate



Press the button on the remote control.

Opening the Liftgate

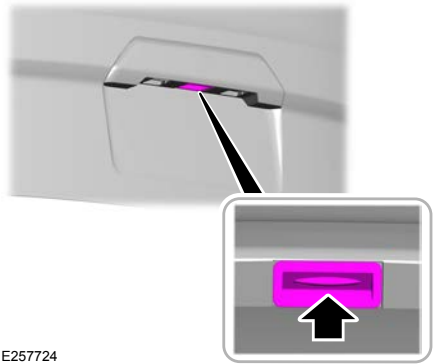

E257724

Press the exterior release button hidden above the license plate.

Closing the Liftgate

Pull the strap inside the liftgate to help with closing.

PASSIVE ANTI-THEFT SYSTEM

Principle of Operation

The system prevents someone from starting the vehicle with an incorrectly coded key.

Coded Keys

If you lose a key, you can obtain a replacement from an authorized dealer. If possible, provide them with the key number from the tag provided with the original keys. You can also obtain extra keys from an authorized dealer.

Note: Have all of your remaining keys erased and recoded if you lose a key. Have replacement keys coded together with recoding your remaining keys. See an authorized dealer for further information

Note: Do not shield your keys with metal objects. This may prevent the receiver from recognizing a coded key.

Arming the Vehicle Immobilizer

When you switch the ignition off the vehicle immobilizer will arm automatically after a short time.

Disarming the Vehicle Immobilizer

When you switch the ignition on the vehicle immobilizer will disarm automatically if a correctly coded key is used.

If you are unable to start the vehicle with a correctly coded key, have your vehicle checked by an authorized dealer.

ANTI-THEFT ALARM

The system will warn you of an unauthorized entry to your vehicle. It will be triggered if any door, the luggage compartment or the hood is opened without using the key or the remote control.

The park and direction indicators will flash and the horn will sound if unauthorized entry is attempted while the alarm is armed.

Take all remote controls to an authorized dealer if there is any potential alarm problem with your vehicle.

Arming the Alarm

The alarm is ready to arm when there is not a key in the ignition. Lock your vehicle to arm the alarm.

Disarming the Alarm

Disarm the alarm by:

- Unlocking the doors or luggage compartment with the remote control.
- Switching the ignition on or starting the engine.
- Using a key in the driver's door to unlock your vehicle, then switching the ignition on within 12 seconds.

Steering Wheel

ADJUSTING THE STEERING WHEEL




WARNING: Do not adjust the steering wheel when your vehicle is moving.

Note: Make sure that you are sitting in the correct position. See **Sitting in the Correct Position** (page 107).



E95179

3. Lock the steering column.

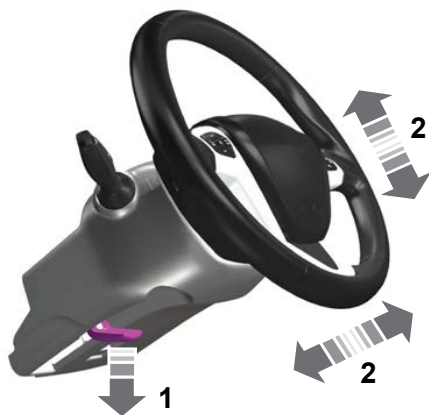


E95178

1. Unlock the steering column.
2. Adjust the steering wheel to the desired position.

Wipers and Washers

WINDSHIELD WIPERS

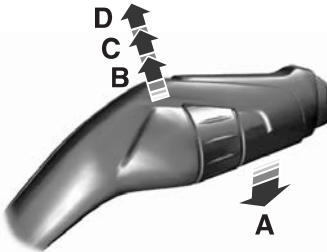

E197525

- A Single wipe.
- B Intermittent wipe.
- C Normal wipe.
- D High-speed wipe.


Note: Fully defrost the windshield before you switch the windshield wipers on.

Note: Make sure that you switch the windshield wipers off before entering a car wash.

Note: If streaks or smears appear on the windshield, clean the windshield and the wiper blades. See **Checking the Wiper Blades** (page 295). If that does not resolve the issue, install new wiper blades. See **Changing the Front Wiper Blades** (page 295).

Note: Do not operate the wipers on a dry windshield. This may scratch the glass or damage the wiper blades. Always use the windshield washers before wiping a dry windshield.

Intermittent Wipe

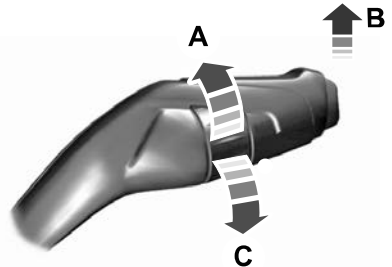

E197526

- A Short wipe interval.
- B Intermittent wipe.
- C Long wipe interval.

Use the rotary control to adjust the intermittent wipe interval.

Note: When your vehicle speed increases, the interval between intermittent wipes may decrease.

AUTOWIPERS


Autowipers uses a rain sensor in the area around the interior mirror. The wipers operate when the rain sensor detects water on the windshield in front of it. The rain sensor continues to monitor the amount of water and adjusts the speed of the wipers.

Note: The wipers remain in a slightly raised position during operation and only return to the park position a short time after the rain sensor detects no water on the windshield.

You can switch autowipers on or off in the information display.

Note: If you switch autowipers off in the information display, the windshield wipers operate in intermittent mode.

Wipers and Washers

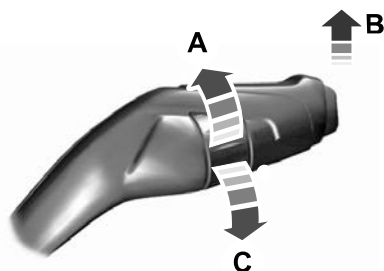

E197526

- A High sensitivity.
- B Autowipers on.
- C Low sensitivity.

Move the wiper lever upward to the first position to switch autowipers on.

Use the rotary control to adjust the sensitivity of the autowipers. When you select low sensitivity, the wipers operate when the sensor detects a large amount of water on the windshield. When you select high sensitivity, the wipers operate when the sensor detects a small amount of water on the windshield.

Note: Keep the outside of the windshield clean. The rain sensor is very sensitive and the wipers may operate if dirt, mist or insects hit the windshield.

Settings

To switch autowipers on or off, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Settings	Press the menu button.
Vehicle settings	Press the OK button.
Wipers	Press the OK button.
Rain sensing	Press the OK button.

If you leave autowipers on, it may not operate when you switch the ignition on during freezing temperatures. This is because the system has deactivated the rain sensor to prevent damage to the windshield wipers. Defrost the windshield before reactivating the rain sensor. You can reactivate the rain sensor by moving the rotary control or switching autowipers off and on.

Note: Fully defrost the windshield before you switch the windshield wipers on.

Note: Make sure that you switch the windshield wipers off before entering a car wash.

Wet or winter weather conditions could cause unexpected wiping or smearing.

To keep the windshield clear:

- Lower the sensitivity of the autowipers to reduce the amount of smearing on the windshield.
- Switch autowipers off.

Note: If streaks or smears appear on the windshield, clean the windshield and the wiper blades. If that does not resolve the issue, install new wiper blades. See **Changing the Front Wiper Blades** (page 295).

Wipers and Washers

WINDSHIELD WASHERS



E144498

Pull the lever toward you to operate the windshield washers. When you release the lever, the wipers operate for a short time.

Note: Do not operate the washers when the washer reservoir is empty. This could cause the washer pump to overheat.

REAR WINDOW WIPER AND WASHERS

Rear Window Wiper



E171615

- A Intermittent wipe.
- B Continuous wipe.
- C Rear window wiper off.


Press the top of the button to switch intermittent wipe on. Press the top of the button again to switch continuous wipe on. Press the bottom of the button to switch the rear window wiper off.

Note: Make sure you switch the rear window wiper off before entering a car wash.

Reverse Gear Wipe (If Equipped)

If you shift to reverse (R) when the windshield wipers are on, the rear window wiper turns on.

Rear Window Washer

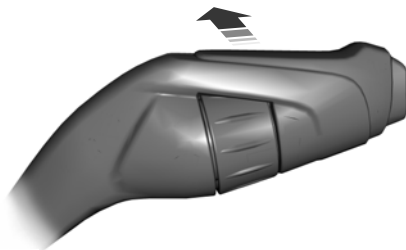

E167407

Push the lever away from you to operate the rear window washer. When you release the lever, the wipers operate for a short time.

Lighting

GENERAL INFORMATION

Condensation in the Exterior Front Lamps and Rear Lamps

Exterior front lamps and rear lamps have vents to accommodate normal changes in air pressure.

Condensation can be a natural by-product of this design. When moist air enters the lamp assembly through the vents, there is a possibility that condensation can occur when the temperature is cold. When normal condensation occurs, a fine mist can form on the interior of the lens. The fine mist eventually clears and exits through the vents during normal operation.

Clearing time may take as long as 48 hours under dry weather conditions.

Examples of acceptable condensation are:

- The presence of a fine mist (no streaks, drip marks or large droplets).
- A fine mist covers less than 50% of the lens.


Examples of unacceptable condensation are:

- A water puddle inside the lamp.
- Streaks, drip marks or large droplets present on the interior of the lens.

If you see any unacceptable condensation, have your vehicle checked by an authorized dealer.

LIGHTING CONTROL

Lighting Control Positions

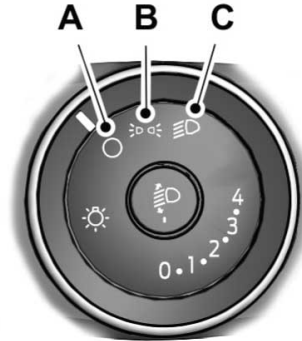

E132706

- A Off.
- B Parking lamps, instrument panel lamps, license plate lamps and tail lamps.
- C Headlamps.

Parking Lamps

Note: *Parking lamps may turn off automatically. This prevents the vehicle battery from running out of charge.*


Switch the ignition off.

Both Sides

Select position B on the lighting control to switch the parking lamps on.

Lighting

One Side

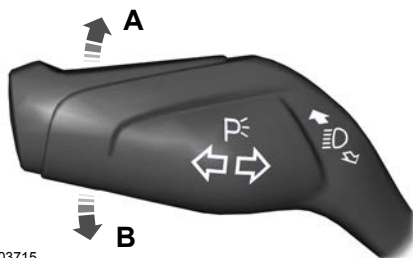

E203715

- A Right-hand side.
- B Left-hand side.

Slightly pull the lever toward you and release it to flash the headlamps.

AUTOLAMPS

⚠ WARNING: The system does not relieve you of your responsibility to drive with due care and attention. You may need to override the system if it does not turn the headlamps on in low visibility conditions, for example daytime fog.

Autolamps turn the headlamps on in low light situations or when the wipers operate.

Headlamp High Beam



E163718

Push the lever away from you to switch the high beam on.

Push the lever forward again or pull the lever toward you to switch the high beams off.

Headlamp Flasher



E163719



E259051

The headlamps remain on for a period of time after you switch the ignition off. Use the information display controls to adjust the period of time that the headlamps remain on. See **General Information** (page 87).

Note: When you switch the autolamps on, the headlamps turn on within 10 seconds of switching the wipers on.

Note: If you switch the autolamps and the autowipers on, the headlamps turn on when the windshield wipers continuously operate.

Lighting

Note: The headlamps turn off approximately 60 seconds after you switch the wipers off.

INSTRUMENT LIGHTING DIMMER

The instrument lighting dimmer buttons are on the lighting control.



Repeatedly press one of the buttons to adjust the brightness.

HEADLAMP EXIT DELAY

After you switch the ignition off, you can switch the headlamps on by pulling the direction indicator lever toward you. You will hear a short tone. The headlamps will switch off automatically after three minutes with any door open or 30 seconds after the last door has been closed. You can cancel this feature by pulling the direction indicator lever toward you again or switching the ignition on.

AUTOMATIC HIGH BEAM CONTROL



WARNING: The system does not relieve you of your responsibility to drive with due care and attention. You may need to override the system if it does not turn the high beams on or off.



WARNING: You may need to override the system when approaching other road users.



WARNING: You may need to override the system during inclement weather.



WARNING: Do not use the system in poor visibility, for example fog, heavy rain, spray or snow.



WARNING: The system may not switch the high beams off if the lights of oncoming vehicles are hidden by obstacles, for example guard rails.



WARNING: Inspect and replace the windshield wiper blades regularly to make sure the camera sensor has a clear view. The windshield wiper blades must be the correct length.

About Automatic High Beam Control

The system is designed to turn the high beams on if all of the following occur:

- You switched the system on in the information display.
- You set the lighting control to the autolamps position.
- The ambient light level is low enough that high beams are required.
- There is no traffic in front of your vehicle.
- Your vehicle speed is greater than approximately 40 km/h (25 mph).

The system is designed to turn the high beams off if any of the following occur:

- You switch the system off in the information display.
- You set the lighting control to any position except autolamps.
- You switch the rear fog lamps on.
- The ambient light level is high enough that high beams are not required.

Lighting

- The system detects an approaching vehicle's headlamps or rear lamps.
- The system detects severe rain, snow or fog.
- The system detects street lighting.
- The camera has reduced visibility.
- Your vehicle speed falls below approximately 30 km/h (19 mph).

Switching Automatic High Beam Control On or Off

To switch the system on or off, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Settings	Press the menu button.
Vehicle settings	Press the OK button.
Lighting	Press the OK button.
Auto highbeam	Press the OK button.

Automatic High Beam Indicator



It illuminates to confirm when the system is ready to assist.

Overriding Automatic High Beam Control

Push the lever away from you to switch between high beam and low beam.

Automatic High Beam Control Information Messages

Message	Description
Front camera Low visibility Clean screen	The camera has reduced visibility. Clean the windshield. If the message continues to appear, have your vehicle checked as soon as possible.
Front camera temporarily not available	The camera has malfunctioned. Wait a short period of time for the camera to cool down. If the message continues to appear, have your vehicle checked as soon as possible.

FRONT FOG LAMPS

Switching the Front Fog Lamps On or Off

Only switch the front fog lamps on during reduced visibility.

You can switch the front fog lamps on if any of the following occur:

- You set the lighting control to the parking lamps position.
- You set the lighting control to the headlamps position.
- You set the lighting control to the autolamps position and the headlamps are on.

Lighting

The front fog lamp button is on the lighting control.



Press the button to switch the front fog lamps on or off.

Note: The brightness of the daytime running lamps may decrease when the front fog lamps are switched on.

Front Fog Lamp Indicator



It illuminates when you switch the front fog lamps on.

REAR FOG LAMPS

Switching the Rear Fog Lamps On or Off



WARNING: Do not use the rear fog lamps when it is raining or snowing and visibility is more than 50 m (164.0 ft).

You can switch the rear fog lamps on if any of the following occur:

- You switched the front fog lamps on.
- You set the lighting control to the headlamps position.
- You set the lighting control to the autolamps position and the headlamps are on.

The rear fog lamp button is on the lighting control.



Press the button to switch the rear fog lamps on or off.

Rear Fog Lamp Indicator



It illuminates when you switch the rear fog lamps on.

HEADLAMP LEVELING

To adjust the level of the headlamp beams, do the following:



E132711


1. Press to release the control.
2. Rotate the control in accordance with your vehicle load to prevent you from distracting other road users when the headlamps are on.

Note: Set the control to zero when your vehicle is unloaded.

Note: Set the headlamp beams to give between 35–100 m (115–328 ft) of road surface illumination when your vehicle is partially or fully loaded.

3. Press to close the control.

CORNERING LAMPS

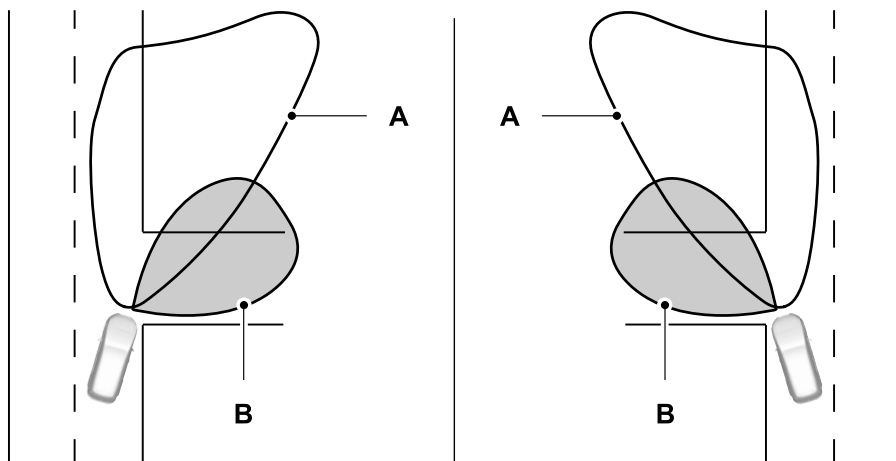

E72898

- A Headlamp beam.
- B Cornering lamp beam.

The cornering lamps illuminate the inside of a corner when you are turning the steering wheel.

DIRECTION INDICATORS



E162681


Push the lever up or down to use the direction indicators.

Lighting

Note: Tap the lever up or down to make the direction indicators flash three times to indicate a lane change.

INTERIOR LAMPS - BUS

Switching All of the Interior Lamps On and Off

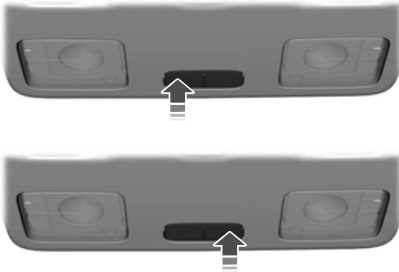


Switching the Front Interior Lamps On and Off




E249791

Note: Press the edge of the lamps lens to switch the front interior lamp off before switching the ignition off to prevent the vehicle battery from running out of charge.

Switching the Rear Interior Lamps On and Off

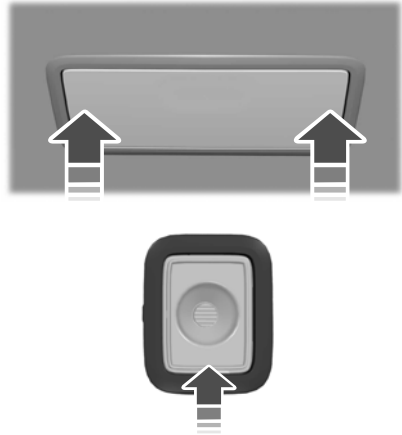

Interior Lamp Function

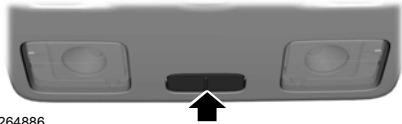

E264886

When you set the switch to the middle position, the interior lamps turn on if:


- You open a door.
- You press the unlock button on the remote control.
- You switch the ignition off.

Note: If you switch the ignition off, the interior lamps could turn off after a short time to prevent the vehicle battery from running out of charge.

Lighting

INTERIOR LAMPS - VAN

Courtesy Lamp

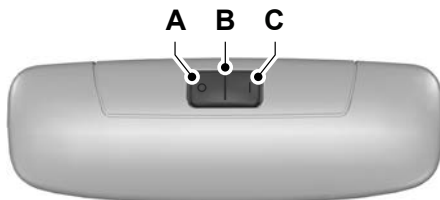

E112207

- A Off
- B Door contact
- C On

If you set the switch to position B, the courtesy lamp will switch on when you unlock your vehicle, open a door or the liftgate. If you leave a door open with the ignition switched off, the courtesy lamp will switch off automatically after a short period of time to prevent your vehicle battery from losing charge. To switch it back on, switch the ignition on for a short period of time.

The courtesy lamp will also switch on when you switch the ignition off. It will switch off automatically after a short period of time or when you start the engine.

If you set the switch to position C with the ignition switched off, the courtesy lamp will switch on. It will switch off automatically after a short period of time to prevent your vehicle battery from losing charge. To switch it back on, switch the ignition on for a short period of time.


Reading Lamps



E112208

If you switch the ignition off, the reading lamps will switch off automatically after a short period of time to prevent your vehicle battery from losing charge. To switch them back on, switch the ignition on for a short period of time.

Entrance Lamps

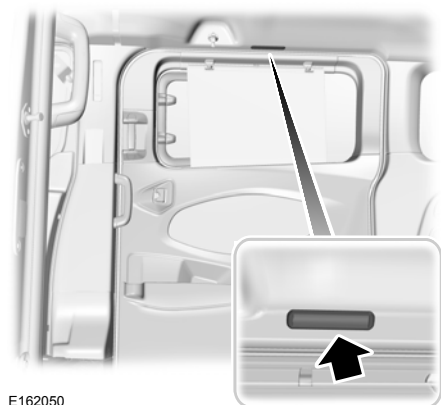

E162050

The lamps are located above the rear doors and sliding door. They will switch on and off automatically when you open and close the doors. If you unlock the doors with the remote control, they will switch on. They will switch off automatically after a short period of time.

Windows and Mirrors

POWER WINDOWS



WARNING: Do not leave children unattended in your vehicle and do not let them play with the power windows. Failure to follow this instruction could result in personal injury.



WARNING: When closing the power windows, verify they are free of obstruction and make sure that children and pets are not in the proximity of the window openings.



Press the control to open the window. Lift the control to close the window.

Note: The power windows operate with the ignition on, and for several minutes after you switch the ignition off or until you open a front door.

To reduce wind noise or pulsing noise when just one window is open, slightly open the opposite window.

One-Touch Open (If Equipped)

Fully press the control and release it. Press again or lift it to stop the window.

One-Touch Close (If Equipped)

Fully lift the control and release it. Press again or lift it to stop the window.

Bounce-Back (If Equipped)

The window automatically stops and reverses if it detects an obstruction.

Overriding Bounce-Back



WARNING: When you override the bounce-back feature the window will not reverse if it detects an obstacle. Take care when closing the windows to avoid personal injury or damage to your vehicle.

1. Close the window twice until it reaches the point of resistance and let it reverse.
2. Lift the control within two seconds to override the feature and close the window. Bounce-back is now disabled and you can close the window manually. The window will go past the point of resistance and you can close it fully.

Note: If the window does not close, have your vehicle checked as soon as possible.

Resetting Bounce-Back



WARNING: Bounce-back is off until you reset the memory. Take care when closing the windows to avoid personal injury or damage to your vehicle.

Carry out all steps within 30 seconds of starting the sequence.

1. Close the window.
2. Press and hold the switch until the window is fully open. Keep the switch fully pressed for a few seconds.
3. Lift and hold the switch until the window is fully closed. Keep the switch held for a few seconds.
4. Press and hold the switch until the window is fully open. Keep the switch fully pressed for a few seconds.

Windows and Mirrors

5. Lift and hold the switch until the window is fully closed. Keep the switch held for a few seconds.

Note: Repeat the procedure if the window does not close when you use one-touch.

GLOBAL OPENING AND CLOSING

You can use the remote control to open and close the windows when the ignition is off.

You can switch this feature on or off in the information display. See **General Information** (page 87).

Global Opening

1. Press and release the unlock button on the remote control.
2. Press and hold the unlock button on the remote control.
3. Release the button when the windows start to open.

Press the lock or the unlock button on the remote control to stop global opening.

Note: You can use global opening for a short period of time when you unlock your vehicle using the remote control.

Global Closing



WARNING: When closing the power windows, verify they are free of obstruction and make sure that children and pets are not in the proximity of the window openings.

1. Press and hold the lock button on the remote control.
2. Release the button when the windows start to close.

Press the lock or the unlock button on the remote control to stop global closing.

Note: Bounce-back is on during global closing.

EXTERIOR MIRRORS - BUS

Power Exterior Mirrors



WARNING: Do not adjust the mirrors when your vehicle is moving. This could result in the loss of control of your vehicle, serious personal injury or death.



E252156

- A Left-hand mirror switch.
- B Mirror adjustment control.
- C Right-hand mirror switch.

Folding the Mirrors (If Equipped)

The exterior mirrors fold when you lock your vehicle and unfold when you unlock your vehicle.



For tight parking conditions, press the control to fold the mirrors.

Press the control again to unfold the mirrors.

Windows and Mirrors

If you press the control to fold in the mirrors with auto-fold on, the mirrors do not automatically unfold.

Note: The power folding mirrors operate with the ignition on, and for several minutes after you switch the ignition off.

Note: If you fold and unfold the mirrors several times within one minute, the power fold function may turn off to protect the motors from overheating.


You can switch auto-fold on or off in the information display. See **General Information** (page 87).

Loose Mirror

If your power-folding mirrors are manually folded, they may not work properly, even after you re-position them. You need to reset them if:


- The mirrors vibrate when you drive.
- The mirrors feel loose.
- The mirrors do not stay in the folded or unfolded position.
- One of the mirrors is not in its normal driving position.

To reset the power-fold feature, use the power-folding mirror control to fold and unfold the mirrors. You may hear a loud noise as you reset the power-folding mirrors. This sound is normal. Repeat this process as needed each time the mirrors are manually folded.

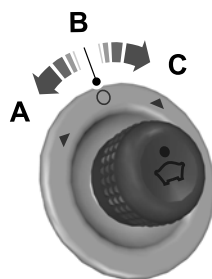

E71280

- A Left-hand mirror switch.
- B Neutral.
- C Right-hand mirror switch.

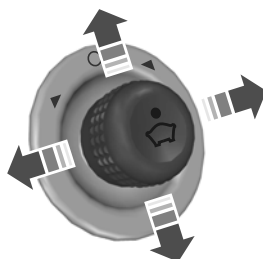

E71281

Move the adjustment control in the direction of the arrows to adjust the mirror.

EXTERIOR MIRRORS - VAN


Power Exterior Mirrors



WARNING: Do not adjust the mirrors when your vehicle is moving. This could result in the loss of control of your vehicle, serious personal injury or death.

Windows and Mirrors

Folding the Mirrors (If Equipped)

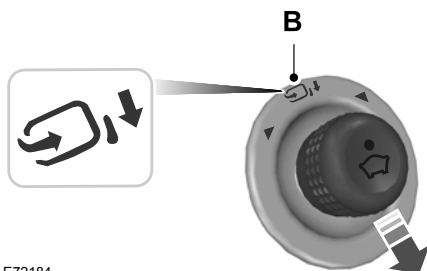

E72184

Move the adjustment control downward to fold or unfold the mirrors.

Note: The power folding mirrors operate with the ignition on, and for several minutes after you switch the ignition off.

Note: You can only fold the mirrors when the adjustment control is set to position B.

Note: If you fold and unfold the mirrors several times within one minute, the power fold function may turn off to protect the motors from overheating.

Note: Do not manually fold or unfold power folding mirrors.

Loose Mirror

If your power-folding mirrors are manually folded, they may not work properly, even after you re-position them. You need to reset them if:

- The mirrors vibrate when you drive.
- The mirrors feel loose.
- The mirrors do not stay in the folded or unfolded position.
- One of the mirrors is not in its normal driving position.

To reset the power-fold feature, use the power-folding mirror control to fold and unfold the mirrors. You may hear a loud noise as your reset the power-folding mirrors. This sound is normal. Repeat this process as needed each time the mirrors are manually folded.

INTERIOR MIRROR - VEHICLES WITH: AUTO-DIMMING INTERIOR MIRROR/INTERIOR MIRROR WITH CAMERA DISPLAY



WARNING: Do not adjust the mirrors when your vehicle is moving. This could result in the loss of control of your vehicle, serious personal injury or death.

The mirror dims to reduce the effect of bright light from behind. It returns to normal when the bright light from behind is no longer present or if you shift into reverse (R).

Do not block the sensors on the front and back of the mirror.

Note: A rear center passenger or raised rear center head restraint could prevent light from reaching the sensor.

INTERIOR MIRROR - VEHICLES WITH: INTERIOR MIRROR




WARNING: Do not adjust the mirrors when your vehicle is moving. This could result in the loss of control of your vehicle, serious personal injury or death.

Pull the tab below the mirror toward you to reduce the effect of bright light from behind.

Instrument Cluster

GAUGES - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

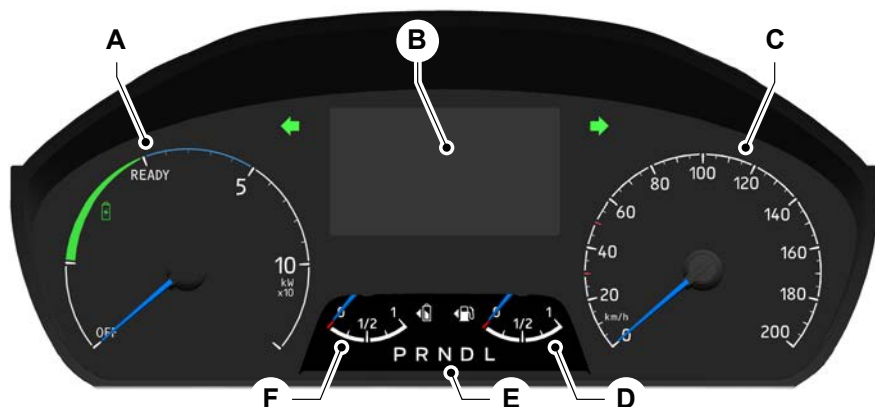

- A Power gauge.
- B Information display.
- C Speedometer.
- D Fuel gauge.
- E Automatic transmission position indicators.
- F High voltage battery level indicator.

Power Gauge

Shows the instantaneous power consumption of your vehicle.

The green section indicates that the high voltage battery is charging when braking, decelerating or driving downhill.

The blue section indicates efficient vehicle driving.

The white section indicates that the high voltage battery is discharging when accelerating. Driving your vehicle in this section for long periods of time can result in a loss of vehicle performance.

Information Display

The information display shows the following information:

- Odometer
- Trip computer.
- MyView information.
- Driver assistance information.
- Navigation information.
- Audio information.
- Phone information.
- Vehicle and system settings.

Instrument Cluster

- Outside air temperature.
- Shift indicator.

Odometer

Records the total distance traveled by your vehicle.

The system detects unauthorized odometer adjustments to avoid total distance reading fraud. If the system detects an unauthorized odometer adjustment, the total distance reading displays XXXX. Recovery of the original mileage could result in system damage not covered by the vehicle Warranty and may carry a significant expense.

Trip Computer

See **Trip Computer** (page 89).

Vehicle and System Settings

Use the information display control on the steering wheel to adjust various system settings. See **General Information** (page 87).

Speedometer

Shows the vehicle speed.

Fuel Gauge

The fuel gauge indicates approximately how much fuel is in the fuel tank.

The arrow adjacent to the fuel pump symbol indicates on which side of your vehicle the fuel filler door is located.



A



B

E236403

A The fuel filler door is on the left-hand side of your vehicle.

B The fuel filler door is on the right-hand side of your vehicle.

Automatic Transmission Position Indicators

The instrument cluster displays the current position. See **Automatic Transmission** (page 169).

High Voltage Battery Level Indicator


Indicates the amount of energy stored in the high voltage battery. The level increases or decreases as the battery charges and discharges during normal operation. See **Plug-In Hybrid Vehicle Operation** (page 131).



The arrow adjacent to the battery symbol indicates on which side of your vehicle the charge port is located.

Instrument Cluster

GAUGES - EXCLUDING: PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

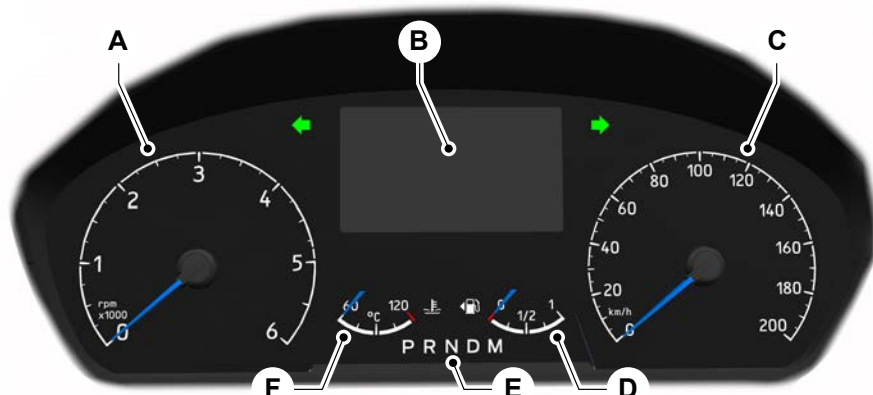

- A Tachometer.
- B Information display.
- C Speedometer.
- D Fuel gauge.
- E Automatic transmission position indicators.
- F Engine coolant temperature gauge.

Tachometer

Shows the engine speed.

Information Display

The information display shows the following information:

- Odometer
- Trip computer.
- MyView information.
- Driver assistance information.
- Navigation information.

- Audio information.
- Phone information.
- Vehicle and system settings.
- Outside air temperature.
- Shift indicator.

Odometer

Records the total distance traveled by your vehicle.

Instrument Cluster

The system detects unauthorized odometer adjustments to avoid total distance reading fraud. If the system detects an unauthorized odometer adjustment, the total distance reading displays XXXX. Recovery of the original mileage could result in system damage not covered by the vehicle Warranty and may carry a significant expense.

Trip Computer

See **Trip Computer** (page 89).

Vehicle and System Settings

Use the information display control on the steering wheel to adjust various system settings. See **General Information** (page 87).

Speedometer

Shows the vehicle speed.

Fuel Gauge

The fuel gauge indicates approximately how much fuel is in the fuel tank.

The arrow adjacent to the fuel pump symbol indicates on which side of your vehicle the fuel filler door is located.



A



B

E236403

- A The fuel filler door is on the left-hand side of your vehicle.
- B The fuel filler door is on the right-hand side of your vehicle.

Automatic Transmission Position Indicators (If Equipped)

The instrument cluster displays the current position. See **Automatic Transmission** (page 169).

Engine Coolant Temperature Gauge

At normal operating temperature, the needle remains in the center section.

If the needle enters the red section, the engine is overheating. If you continue to operate the engine at high engine speeds with the needle in the red section, the engine speed reduces automatically to prevent engine damage. Stop your vehicle as soon as it is safe to do so, switch the engine off and allow it to cool.

Note: *Do not restart the engine until the cause of overheating has been determined and resolved.*

WARNING LAMPS AND INDICATORS

The following warning lamps and indicators alert you to a vehicle condition that may become serious. Some lamps illuminate when you start your vehicle to make sure they work. If any lamps remain on after starting your vehicle, refer to the respective system warning lamp for further information.

Note: *Some warning indicators appear in the information display and operate the same as a warning lamp but do not illuminate when you start your vehicle.*

12V Battery Charging Condition Warning Lamp



It illuminates when you switch the ignition on.

Instrument Cluster

If it illuminates when the engine is running this indicates a malfunction. Have your vehicle checked as soon as possible.

Adaptive Cruise Control Indicator

(If Equipped)



It illuminates when you switch the system on.

It illuminates white when the system is in standby mode. It illuminates green when you set the adaptive cruise speed.

See **Using Adaptive Cruise Control** (page 191).

Airbag Warning Lamp



If it does not illuminate when you switch the ignition on, continues to flash or remains on when the engine is running, this indicates a malfunction. Have your vehicle checked as soon as possible.

Anti-Lock Brake System Warning Lamp



If it illuminates when you are driving, this indicates a malfunction. Your vehicle continues to have normal braking without the anti-lock brake system function. Have your vehicle checked as soon as possible.

Automatic Headlamp High Beam Indicator (If Equipped)



It illuminates when the system turns the headlamp high beam on.

See **Automatic High Beam Control** (page 68).

Auto-Start-Stop Indicator



It illuminates green when the engine stops. It flashes amber and a message appears when you need to take an action.



It illuminates grey with a strike out when the system is not available.

Note: You can display the reason why the system is not available in the information display.

Blind Spot Information System Indicator (If Equipped)



It illuminates when you switch the system off.

See **Blind Spot Information System** (page 205).

Brake Pad Wear Warning Lamp



It illuminates when the brake pads have worn down to a predetermined limit. Have your vehicle checked as soon as possible.

Brake System Warning Lamp



WARNING: Driving your vehicle with the warning lamp on is dangerous. A significant decrease in braking performance may occur. It may take you longer to stop your vehicle. Have your vehicle checked as soon as possible. Driving extended distances with the parking brake engaged can cause brake failure and the risk of personal injury.



It illuminates when you engage the parking brake and the ignition is on.

Instrument Cluster

If it illuminates when your vehicle is moving, make sure the parking brake is disengaged. If the parking brake is disengaged, this indicates low brake fluid level or a brake system fault. Have your vehicle immediately checked.

Change Engine Oil Indicator



It displays when the engine oil life is becoming depleted. Have the engine oil changed as soon as possible.

Note: Do not ignore engine oil change indicators and information messages. Resulting component damage is not covered by the Warranty.

Change Engine Oil Now Indicators



If both indicators display, the engine oil life is seriously depleted. Engine torque reduces to 70% to further indicate the serious risk of engine damage. Have the engine oil changed immediately.



Note: Do not ignore engine oil change indicators and information messages. Resulting component damage is not covered by the Warranty.

Coolant Temperature Warning Lamp



If it illuminates when your vehicle is moving, this indicates a system malfunction. Stop your vehicle as soon as it is safe to do so and switch your vehicle off. Have your vehicle checked as soon as possible.

Cruise Control Indicator



It illuminates when you switch the system on.

See **Using Cruise Control** (page 190).

Diesel Exhaust Fluid Warning Lamp



It illuminates when the diesel exhaust fluid is low. If the level is sufficient, this indicates a system malfunction. Have your vehicle checked as soon as possible. See **Selective Catalytic Reductant System** (page 151).

Direction Indicator



It illuminates when you switch a direction indicator or the hazard flashers on. Flashes during operation. An increase in the rate of flashing warns of a failed indicator bulb.

Door Ajar Warning Lamp



It illuminates when you switch the ignition on and remains on if any door or the hood is open.

Engine Warning Lamps



Malfunction Indicator Lamp
Check Engine

If it illuminates when the engine is running this indicates a malfunction. If it flashes when you are driving, immediately reduce the vehicle speed. Avoid heavy acceleration and deceleration and have your vehicle checked as soon as possible.



Powertrain Warning Lamp

If it illuminates when the engine is running this indicates a malfunction. If it flashes when you are driving, immediately reduce the vehicle speed. Avoid heavy acceleration and deceleration and have your vehicle checked as soon as possible.

Instrument Cluster

If both lamps illuminate when the engine is running, stop your vehicle as soon as it is safe to do so. Continuing to drive your vehicle may cause reduced power or the engine to stop. Switch the ignition off and attempt to restart the engine. Have your vehicle checked as soon as possible.

Fasten Seatbelt Warning Lamp



It illuminates and a chime sounds until you fasten the seatbelts.

See **Seatbelt Reminder** (page 35).

Front Fog Lamp Indicator



It illuminates when you switch the front fog lamps on.

Frost Warning Lamp



WARNING: Even if the temperature rises to above 4°C (39°F) there is no guarantee that the road is free of hazards caused by inclement weather.



It illuminates when the outside air temperature is 4°C (39°F) or below.

Glow Plug Indicator



If it illuminates, wait until it turns off before starting.

Headlamp High Beam Indicator



It illuminates when you switch the headlamp high beam on.

Lamps on Indicator



It illuminates when you switch the headlamp low beam or the side and rear lamps on.

Lane Keeping Alert Indicator



It illuminates when you switch the system on.

See **Lane Keeping System** (page 202).

Low Fuel Level Warning Lamp



If it illuminates when you are driving, refuel as soon as possible.

Low Tire Pressure Warning Lamp (If Equipped)



It illuminates if the tire pressure in one or more tires is below the correct tire pressure.

See **Tire Pressure Monitoring System** (page 325).

Oil Pressure Warning Lamp



WARNING: If it illuminates when you are driving do not continue your journey, even if the oil level is correct. Have your vehicle checked.



If it illuminates when the engine is running this indicates a malfunction. Stop your vehicle as soon as it is safe to do so and switch the engine off. Check the engine oil level. See **Engine Oil Check** (page 286).

If the oil level is sufficient, this indicates a system malfunction. Have your vehicle immediately checked.

Instrument Cluster

Pre-Collision Assist Warning Lamp



It illuminates if your vehicle rapidly approaches another vehicle, to warn you of the risk of a crash with the vehicle in front of you.

It could illuminate red if the distance to the vehicle ahead is small.

It illuminates amber when you switch the system off.

It illuminates when the system is not available.

Ready to Drive Indicator



It illuminates when you switch your vehicle on and it is ready to drive. A message may appear in the information display.

Rear Fog Lamp Indicator



It illuminates when you switch the rear fog lamps on.

Secondary Interior Heater Indicator



It illuminates when you switch the system on.

Shift Indicator



It illuminates to advise you that shifting to a higher or lower gear may give better performance, fuel economy or lower emissions.



Stability Control and Traction Control Indicator



Flashes during operation.

If it does not illuminate when you switch the ignition on, or remains on when the engine is running, this indicates a malfunction. Have your vehicle checked as soon as possible.

Note: *The system is designed to turn off if it detects a malfunction.*

See **Stability Control** (page 177). See **Traction Control** (page 176).

Stability Control and Traction Control Off Warning Lamp



It illuminates when you switch the system off.

Stop Safely Warning Lamp



It illuminates if your vehicle has an electrical component fault or failure that causes the vehicle to shutdown or enter into a limited operating mode. A message may appear in the information display.

Vehicle Plugged in Indicator



It illuminates when your vehicle is plugged in. A message may appear in the information display after attempting to start your vehicle.

Note: *This does not indicate that your vehicle is charging.*

Water In Fuel Warning Lamp



If it illuminates when the engine is running this indicates there is excess water in the fuel filter.

See **Fuel Filter Service Indicator Check** (page 295).

AUDIBLE WARNINGS AND INDICATORS

Airbag Secondary Warning

Sounds when the airbag warning lamp is not working.

Automatic Transmission

Sounds when you switch the ignition off or open the driver door and the transmission is not in park (P).

Door Ajar

Sounds when a door is not fully closed and your vehicle is moving.

Emergency Door Open (If Equipped)

Continuously sounds when the emergency door is open.

Engine On

Sounds when the driver door is open and the key is in the ignition. Sounds when you open the driver door and Auto-Start-Stop has turned the engine off.

Exterior Lamps On

Sounds when you open the driver door and the exterior lamps are on.

Parking Brake On

Sounds when the parking brake is on and your vehicle is moving.


If the warning tone continues after you have released the parking brake, this indicates a malfunction. Have your vehicle checked as soon as possible.

Seatbelt Reminder

Sounds when the driver seatbelt is unfastened and your vehicle is moving.

Information Displays

GENERAL INFORMATION




WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Note: For your safety, some features are speed-dependent. Their use is limited to when your vehicle speed is not moving.

Information Display Controls



E257718

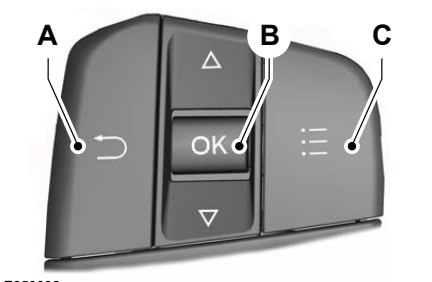

The diagram shows a close-up of the control buttons. Label A points to the return button (left), Label B points to the OK button (center), and Label C points to the menu button (right).

E250032

- A Return button.
- B OK button.
- C Menu button.

Return Button

Use the return button to go back or to exit.

OK Button

Use the **OK** button to make a selection. You can also use it to scroll through a menu.

Menu Button

Use the menu button on the main screen to display the submenu. You can also use it to go back to the main screen.

Information Display Menus

Main Menu

Menu Item
Trip computer 1 or Trip computer 2
MyView
Driver assist.
Navigation

Information Displays

Menu Item
Audio
Phone
Settings

Submenus

Trip computer 1 and Trip computer 2

Menu Item
Trip computer 1
Trip computer 2
Reset individual values
Configure view

MyView

Menu Item
Digital speedometer
Fuel economy
Trip computer/audio
Eco coach
Calm screen

Driver assist.

Menu Item
Traction control
BLIS
Trailer BLIS
Pre-collision Assist
Traffic sign recognition
Lane keeping system

Menu Item
Driver alert
Hill Start Assist
Cross traffic alert
Eco coach
Trailer control
Cruise control
Speed limiter
Rear Park Pilot

Navigation

Menu Item
Home
Favourite destinations
Previous destinations

Audio

Menu Item
Radio
USB device.
Bluetooth device.

Phone

Menu Item
All calls
Incoming calls
Missed calls
Outgoing calls

Information Displays

Settings

Menu Item
Information
Display
Driver assistance
Vehicle settings
Vehicle maintenance
MyKey

TRIP COMPUTER

You can reset the trip computer and personalize it using the information display. See **Information Displays** (page 87).

Resetting the Trip Computer

Navigate to the following main menu item.

Menu Item	Action
Trip computer 1	Press and hold the OK button until the system reset confirmation appears.
Trip computer 2	Press and hold the OK button until the system reset confirmation appears.

Alternatively you can reset individual trip values.

Menu Item	Action
Trip computer 1	Press the menu button.
Trip computer 2	Press the menu button.
Reset individual values	Press the OK button.
Reset trip odometer	Press and hold the OK button until the system reset confirmation appears.
Reset trip timer	Press and hold the OK button until the system reset confirmation appears.
Reset average fuel	Press and hold the OK button until the system reset confirmation appears.
Reset average speed	Press and hold the OK button until the system reset confirmation appears.

Information Displays

Personalization

Navigate to the following main menu item.

Menu Item	Action
Trip computer 1	Press the menu button.
Trip computer 2	Press the menu button.
Configure view	Press the OK button.
Trip odometer	Press the OK button.
Trip timer	Press the OK button.
Average fuel consumption	Press the OK button.
Average speed	Press the OK button.
Distance to empty	Press the OK button.
Instantaneous fuel	Press the OK button.

Note: You can display a maximum of four values.

Trip Odometer

Registers the total distance since you last reset the value.

Trip Timer

Registers the total time since you last reset the value.

Average Fuel

Indicates the average fuel consumption since you last reset the value.

Average Speed

Indicates the average vehicle speed since you last reset the value.

Distance to Empty

Indicates the approximate distance your vehicle could travel on the fuel remaining in the fuel tank. Changes in driving pattern may cause the value to vary.

Instantaneous Fuel

Indicates the current fuel consumption.

Information Displays

PERSONALIZED SETTINGS

Language

Menu Item	Action
Settings	Press the menu button.
Display	Press the OK button.
Language	Press the OK button. Choose your applicable setting.

Measure Unit

Menu Item	Action
Settings	Press the menu button.
Display	Press the OK button.
Measurement unit	Press the OK button. Choose your applicable setting.

Temperature Unit

Menu Item	Action
Settings	Press the menu button.
Display	Press the OK button.
Temperature unit	Press the OK button. Choose your applicable setting.

Tire Pressure Unit (If Equipped)

Menu Item	Action
Settings	Press the menu button.
Display	Press the OK button.
Tyre pressure	Press the OK button. Choose your applicable setting.

Information Displays

Chimes

Menu Item	Action
Settings	Press the menu button.
Vehicle settings	Press the OK button.
Chimes	Press the OK button.
Parking space found	Press the OK button.
Information	Press the OK button.

INFORMATION MESSAGES



E259919

Press the **OK** button to acknowledge and remove some messages from the information display. You need to confirm certain messages before you can access the menus. The information display will automatically remove other messages after a short period of time.

Note: Depending on vehicle options and instrument cluster type fitted, not all of the following information messages display or are available. The information display may abbreviate or shorten certain messages.

Airbag

Message	Action
Airbag malfunction Service now	Have your vehicle checked as soon as possible.

Information Displays

Air Suspension

Message	Action
Air suspension malfunction Service required	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.
Air suspension on due to vehicle speed	No action required. Displays when the system turns the air suspension on after you drive the vehicle over a preset speed.

Automatic High Beam Control

Message	Action
Front camera Low visibility Clean screen	Displays when the front camera sensor has reduced visibility. Clean the windshield.
Front camera malfunction Service required	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.
Front camera temporarily not available	Displays if the front camera sensor malfunctions. Wait a short period of time for the sensor to cool down. If the message continues to appear, have your vehicle checked as soon as possible.

Battery and Charging System

Message	Action
Electrical system over-voltage Stop safely	Stop your vehicle as soon as it is safe to do so and switch the engine off. Have your vehicle checked as soon as possible.
Battery low See manual	Displays if the battery is low or has no charge. Have your vehicle checked as soon as possible.

Cruise Control and Adaptive Cruise Control

Message	Action
Front radar sensor blocked See manual	Displays when the sensor has reduced visibility. See Cruise Control (page 190).
Adaptive cruise not available	Displays when the system is not available. See Cruise Control (page 190).
Forward Alert malfunction	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.

Information Displays

Message	Action
	See Cruise Control (page 190).

Diesel Exhaust Fluid (AdBlue) Level

Message	Action
AdBlue® low Range XXXX mls	Indicates the approximate distance remaining before the diesel exhaust fluid tank will be empty.
AdBlue® low Range XXXX km Refill soon	Indicates the approximate distance remaining before the diesel exhaust fluid tank will be empty. Refill the diesel exhaust fluid tank as soon as possible. See Selective Catalytic Reductant System (page 151).
AdBlue® low No engine start in XXXX km	Indicates the approximate distance remaining before the diesel exhaust fluid tank will be empty and when it will restrict the engine from starting. Refill the diesel exhaust fluid tank as soon as possible. See Selective Catalytic Reductant System (page 151).
AdBlue® level empty. Refill to start engine	The diesel exhaust fluid tank is empty and is restricting the engine from starting. Refill the diesel exhaust fluid tank. The minimum AdBlue refill quantity required to restart the engine is 5.7 L (1.3 gal). See Selective Catalytic Reductant System (page 151).

Note: When filling the diesel exhaust fluid tank from empty, there may be a short period before the increased diesel exhaust fluid level is registered.

Note: If your vehicle is on a gradient, the minimum diesel exhaust fluid refill quantity required to restart the engine may be greater than 5.7 L (1.3 gal).

Diesel Exhaust Fluid (AdBlue) System Malfunction

Message	Action
AdBlue® sys malfunction Service required	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.
AdBlue® sys No engine start in XXXX km	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.
AdBlue® sys Service required to start engine	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.

Information Displays

Door Open

Message	Action
Vehicle is on	Displays if you open the driver door when the engine is running and the vehicle speed is 5 km/h (3 mph) or less. Displays if you open the driver door when the auto-start-stop system has turned the engine off.

Engine

Message	Action
Service required	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.
High engine temperature Stop safely	Displays when the engine temperature is too high. Stop your vehicle as soon as it is safe to do so, switch the engine off and allow it to cool. If the message continues to appear, have your vehicle checked as soon as possible. See Engine Coolant Check (page 288).
Change engine oil soon	Displays when the engine oil life is becoming depleted. Have the engine oil changed as soon as possible.
Oil change required	Displays when the engine oil life is depleted. Have the engine oil changed as soon as possible.

Exhaust Filter

Message	Action
Exhaust filter at limit Drive to clean now	If driving conditions and speed limitations on the road allow, drive the vehicle continuously for 30 km (20 mi) with a minimum average speed of 60 km/h (40 mph) to clean the diesel particulate filter. Failure to respond to a warning lamp or information message may cause component damage not covered by the vehicle Warranty.
Exhaust filter over limit Service now	Displays when the exhaust filter is overloaded. Have your vehicle checked as soon as possible. Failure to respond to a warning lamp or information message may cause component damage not covered by the vehicle Warranty.

Information Displays

Fuel System

Message	Action
Water detected in fuel Service required	Displays if the system detects there is excess water in the fuel filter. See Draining the Fuel Filter Water Trap (page 287). See Draining the Fuel Filter Water Trap (page 287).

Hill Start Assist

Message	Action
Hill start assist not available	Displays when hill start assist is not available. Have your vehicle checked as soon as possible. See Hill Start Assist (page 174).

Maintenance

Message	Action
Oil change required	Displays when the engine oil life is depleted and your vehicle requires an oil change.
Brake fluid level low Service now	Displays if the brake fluid level is low or if there is a brake system fault. See Brake Fluid Check (page 291). Have your vehicle immediately checked.
Brake pad wear Service now	Displays when the brake pads have worn down to a predetermined limit.
Washer fluid level low	Displays when the washer fluid is low and needs to be refilled. See Washer Fluid Check (page 295).

Parking Aid

Message	Action
Parking aid malfunction Service required	The system has detected a fault that requires service. Have your vehicle checked as soon as possible. See Front Parking Aid (page 180).

Information Displays

Parking Brake

Message	Action
Park brake applied	Displays when the parking brake is set, the engine is running and your vehicle speed is above 10 km/h (6 mph). If the warning message remains on after you have released the parking brake, the system has detected a fault that requires service. Have your vehicle checked as soon as possible.

Pre-Collision Assist

Message	Action
Forward Alert not available	Displays when the system is not available. See Pre-Collision Assist (page 216).

Starting System

Message	Action
Press brake to start	Displays when you start your vehicle as a reminder to fully press the brake pedal. See Starting and Stopping the Engine (page 127).
Press clutch to start	Displays when you start your vehicle as a reminder to fully press the clutch pedal. See Starting and Stopping the Engine (page 127).
Cranking time exceeded	Displays if your vehicle fails to start. See Starting and Stopping the Engine (page 127).

Steering System

Message	Description
Steering malfunction Service now	The system has malfunctioned. Stop your vehicle as soon as it is safe to do so. You continue to have full steering but you need to exert greater force on the steering wheel. Have your vehicle checked as soon as possible.
Steering loss Stop safely	
Steering assist malfunction Service required	


Information Displays

Traction Control

Message	Action
Traction control off	Displays when you switch the system off. See Using Traction Control (page 176).

Climate Control

AIR VENTS

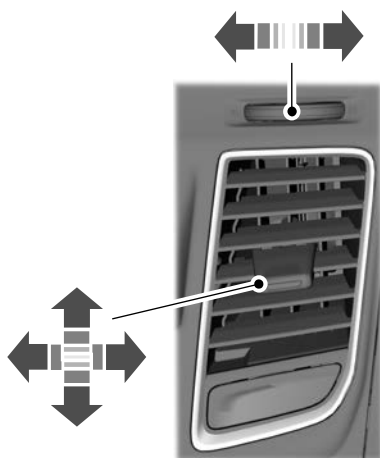

E252151

MANUAL CLIMATE CONTROL

Switching the Climate Control On and Off



Switching the Recirculated Air On and Off



Note: The air currently in the passenger compartment recirculates.

Switching the Air Conditioning On and Off



Note: Under certain conditions, the air conditioning compressor could continue to operate after you switch air conditioning off.

Switching Maximum Defrost On and Off



Turn the temperature control clockwise past the highest setting to maximize defrosting.

Note: The temperature control springs back to the highest setting.

Note: When you switch maximum defrost on, the heated windshield, heated rear window and air conditioning turn on. The blower motor is set to the highest speed.

Note: When you switch maximum defrost off, the heated windshield and heated rear window remain on.

Switching Maximum Cooling On and Off



Turn the temperature control counterclockwise past the lowest setting to maximize cooling.

Note: The temperature control springs back to the lowest setting.

Note: When you switch maximum cooling off, air conditioning remains on.

Setting the Blower Motor Speed



Note: Lights on the control illuminate to indicate the blower motor speed.

Climate Control

Note: When you switch the blower motor off, air conditioning turns off and the windows could fog up.

Directing Air to the Windshield Air Vents




Directing Air to the Instrument Panel Air Vents



Directing Air to the Footwell Air Vents



Setting the Temperature

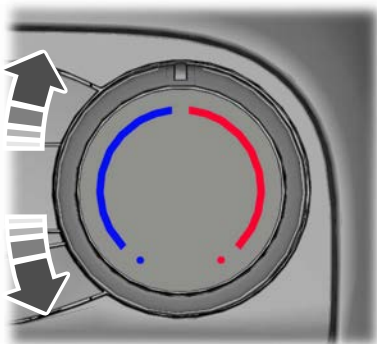

Turn the temperature control counterclockwise for cooler temperature settings.

Turn the temperature control clockwise for warmer temperature settings.

HINTS ON CONTROLLING THE INTERIOR CLIMATE

General Hints

Do not place objects under the front seats as this may interfere with directing air to the rear seats.

Remove any snow, ice or leaves from the air intake area at the base of the windshield.

Note: You may feel a small amount of air from the footwell air vents regardless of the air distribution setting.

Note: To reduce humidity build-up inside your vehicle, do not drive with the system switched off or with recirculated air always switched on.

Note: To reduce fogging of the windshield during humid weather conditions, direct air to the windshield air vents.

Note: Prolonged use of recirculated air may cause the windows to fog up.

Note: Use air conditioning with recirculated air to improve cooling performance and efficiency.

Quickly Heating the Interior

- Select the highest blower motor speed.
- Select the highest temperature.
- Direct air to the footwell air vents.

Recommended Settings for Heating

- Select a medium blower motor speed.
- Select the required temperature.
- Direct air to the footwell and windshield air vents.

Quickly Cooling the Interior

- Select maximum cooling.

Climate Control

Note: To improve the time to reach a comfortable temperature in hot weather, drive with the windows open until you feel cold air through the air vents.

Recommended Settings for Cooling

- Select a medium blower motor speed.
- Select the required temperature.
- Direct air to the instrument panel air vents.
- Press A/C.

Defogging the Side Windows in Cold Weather

- Select maximum defrost.

Defogging or Clearing the Windshield of Thin Ice

- Select maximum defrost.

REAR PASSENGER CLIMATE CONTROLS

Adjusting the Blower Motor Speed



Directing Air to the Overhead Air Vents



When you direct air to the overhead air vents, the system distributes cold air.

Directing Air to the Footwell Air Vents



When you direct air to the footwell air vents, the system distributes hot air.

Directing Air to the Overhead Air Vents and the Footwell Air Vents



When you direct air to the Overhead and footwell air vents, the system distributes warm air.

HEATED WINDSHIELD



Press the button to clear the windshield of thin ice and fog. The heated windshield turns off after a short period of time.

Note: Make sure that the engine is running before switching the heated windshield on.

Note: The system does not operate if the battery charge level is low.

HEATED REAR WINDOW



Press the button to clear the rear window of thin ice and fog. The heated rear window turns off after a short period of time.

Note: Make sure the engine is on before operating the heated windows.

Note: Do not use razor blades or other sharp objects to clean or remove decals from the inside of the heated rear window. The vehicle Warranty may not cover damage caused to the heated rear window grid lines.

HEATED EXTERIOR MIRRORS - VEHICLES WITHOUT: HEATED REAR WINDOW



Press the button to clear the exterior mirrors of thin ice and fog. Press the button again to switch them off. They switch off after a short period of time.

Climate Control

Note: Do not remove ice from the mirrors with a scraper or adjust the mirror glass when it is frozen in place. These actions could cause damage to the glass and mirrors.

Note: Do not clean the mirror housing or glass with harsh abrasives, fuel or other petroleum-based cleaning products.

HEATED EXTERIOR MIRRORS - VEHICLES WITH: HEATED REAR WINDOW

When you switch the heated rear window on, the heated exterior mirrors turn on.

Note: Do not remove ice from the mirrors with a scraper or adjust the mirror glass when it is frozen in place.

Note: Do not clean the mirror housing or glass with harsh abrasives, fuel or other petroleum-based cleaning products. The vehicle warranty may not cover damage caused to the mirror housing or glass.

AUXILIARY HEATER

Principle of Operation

The system is designed to improve the heating time of your engine while it is on. It automatically turns on or off depending on the outside air temperature and the coolant temperature.

The system warms the engine and the vehicle interior. It uses fuel from the vehicle fuel tank.

Using Auxiliary Heater



WARNING: We recommend that you have a qualified technician check and repair the heater system after a crash. Failure to follow this instruction could result in personal injury or death.



WARNING: Do not use the auxiliary heater at fuel filling stations or near sources of combustible vapors, dust or in enclosed spaces. Failure to follow this instruction could result in personal injury or death.

The system requires a minimum of 16 L (3.5 gal) of fuel in the vehicle fuel tank and the outside air temperature has to be below 5°C (41°F).

Note: The system does not operate if the battery charge level is low.

Note: Make sure the heater exhaust outlet, behind the right-hand front tire, is free from snow, ice, mud, and any other blockages to avoid issues with heater operation.

Note: When the system is on, exhaust fumes come from under your vehicle. This is normal.

You can switch the system on or off in the information display. See **General Information** (page 87).

Note: If the heater is in the process of stopping, excess fuel in the heater burns out and there is some heat, exhaust and noise.

Parking Heater

Principle of Operation

The system is designed to provide heat when your vehicle is parked.

The system warms the engine and the vehicle interior. It uses fuel from the vehicle fuel tank.

Climate Control

The system only operates when your vehicle is stationary with the engine off.

Note: Make sure the heater exhaust outlet, behind the right front tire, is free from snow, ice, mud, and any other blockages to avoid issues with heater operation.

Using Parking Heater



WARNING: We recommend that you have a qualified technician check and repair the heater system after a crash. Failure to follow this instruction could result in personal injury or death.



WARNING: Do not use the parking heater at fuel filling stations or near sources of combustible vapors, dust or in enclosed spaces. Failure to follow this instruction could result in personal injury or death.

The system requires a minimum of 16 L (3.5 gal) of fuel in the vehicle fuel tank.

Note: The system does not operate if the battery charge level is low.

Setting the Timer

The system has three different modes, that you can set in the information display.

Timer Mode	Description
Once	Allows you to set one heating cycle for a specific day. If conditions permit, the heater starts up to 40 minutes prior to the set date and time. ¹
Time one	Allows you to program a heating cycle for each day of the week. The time remains stored and the system warms up your vehicle prior to the programmed departure times.
Time two	Allows you to program a second heating cycle for each day of the week. The time remains stored and the system warms up your vehicle prior to the programmed departure times.

¹ You must set the day and time for this mode before you check the box in the information display.

When you correctly use the system it:

- Keeps the windows clear of thin ice and helps prevent condensation.
- Assists the engine to reach normal operating temperature sooner.

Note: If the heater is in the process of stopping, excess fuel in the heater burns out and there is some heat, exhaust and noise.

System Settings

You can personalize the settings using the system settings menu in the information display. See **General Information** (page 87).

Switching Continue Heat On

When you switch the ignition off, the heater starts or continues running if conditions permit for up to 30 minutes.

Note: You can use this mode to maintain a warm cabin after you switch the ignition off. After the heater completes this mode, the check box in the information display resets to unchecked.

Climate Control

Note: The time and date on your vehicle clock must be correctly set.

Switching the Parking Heater On and Off With the Remote Control

The parking heater transmitter allows you to remotely request the heater to start and run for up to 30 minutes or to stop all heater modes.

Note: Up to three transmitters can be paired to your vehicle.

Note: The LED light on the remote transmitter does not indicate the actual status of the heater. The light does not guarantee the heater received a signal to start or stop.

Note: The maximum possible range of the transmitter signal is approximately 600 m (2,000 ft). Electronic devices that operate in the same frequency may affect the range.

Press and hold the **ON** or **HEAT** button on the transmitter until a green LED light illuminates on the transmitter.

Press and hold the **OFF** button on the transmitter until a green LED light illuminates on the transmitter. This applies only for the heater mode running at the present time, so future timer settings or future continue heat settings do not disable.

The following table lists the parking heater remote control indications.

Transmitter LED	Description
Green	The transmitter sent a radio signal.
Flashing green	The transmitter sent a radio signal and the heater starts.
Fast flashing red	The transmitter sent a radio signal, but the heater did not receive the signal.
Slow flashing red	The transmitter sent a radio signal and the heater stops.

REMOTE START

About Remote Start

The system allows you to remotely start the engine using the FordPass app.

The system can also adjust the interior temperature according to the settings that you chose.

Note: All other vehicle systems remain off when you have remotely started the engine.

Note: The vehicle remains secured when you have remotely started the engine. A valid key must be inside your vehicle to switch the ignition on and drive your vehicle.

Remote Start Limitations

Remote start does not work if:

- The alarm horn is sounding.
- The hood is open.
- The transmission is not in park (P).

Enabling Remote Start

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.
3. Select **Remote start**.
4. Switch **System** on or off.

Climate Control

Note: To use remote start, make sure that the **modem** is enabled. See **Connected Vehicle** (page 372).

Remotely Starting the Engine



WARNING: Do not start the engine in a closed garage or in other enclosed areas. Exhaust fumes are toxic. Always open the garage door before you start the engine. Failure to follow this instruction could result in personal injury or death.

Use the FordPass app to start the engine.

Note: The direction indicators flash twice.

Note: The parking lamps turn on when the engine is running.

Note: The horn sounds if the system fails to start.

Note: You must switch on the ignition before driving your vehicle.

Remotely Stopping the Engine

Use the FordPass app to stop the engine.

Remote Start Settings

Use the information display to adjust the remote start settings.

Note: You cannot adjust the climate control settings when you have remotely started the engine.

Note: When you switch the ignition on, the climate control system returns to the last used settings.

Switching Auto On

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.
3. Select **Remote start**.

4. Select **Climate control**.

5. Switch **Auto** on.

Note: If you switch **Auto** on, the system attempts to heat or cool the interior to 22°C (72°F).

Note: The heated windshield, heated rear window and heated seats could turn on in cold weather.

Switching Last settings On

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.
3. Select **Remote start**.
4. Select **Climate control**.
5. Switch **Last settings** on.

Note: If you switch **Last settings** on, the system remembers the last used settings.

Switching the Heated Seats Settings On

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.
3. Select **Remote start**.
4. Select **Seats**.
5. Switch **Auto** on.

Note: If you switch the heated seats settings on, the heated seats turn on during cold weather.

Setting the Duration

You can set a duration for the engine to run.

Note: Wait a few seconds before remotely starting the engine after the engine stops running.

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.

Climate Control

3. Select **Remote start**.
4. Select **Duration**.

Seats

SITTING IN THE CORRECT POSITION




WARNING: Do not recline the seat backrest too far as this can cause the occupant to slide under the seatbelt, resulting in personal injury in the event of a crash.



WARNING: Always sit upright against your seatback with your feet on the floor.



WARNING: Do not place objects higher than the top of the seat backrest. Failure to follow this instruction could result in personal injury or death in the event of a sudden stop or crash.

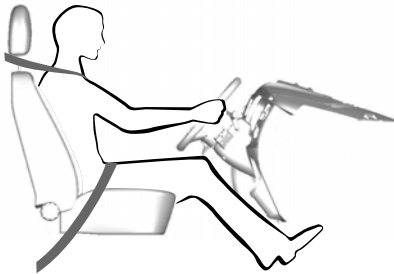

When you use them properly, the seat, head restraint, seatbelt and airbags will provide optimum protection in the event of a crash.

We recommend that you follow these guidelines:

- Sit in an upright position with the base of your spine as far back as possible.
- Do not recline the seat backrest so that your torso is more than 30 degree from the upright position.
- Adjust the head restraint so that the top of it is level with the top of your head and as far forward as possible. Make sure that you remain comfortable.
- Keep sufficient distance between yourself and the steering wheel. We recommend a minimum of 25 cm (10 in) between your breastbone and the airbag cover.
- Hold the steering wheel with your arms slightly bent.
- Bend your legs slightly so that you can press the pedals fully.
- Position the shoulder strap of the seatbelt over the center of your shoulder and position the lap strap tightly across your hips.

Make sure that your driving position is comfortable and that you can maintain full control of your vehicle.

HEAD RESTRAINTS



WARNING: Fully adjust the head restraint before you sit in or operate your vehicle. This will help minimize the risk of neck injury in the event of a collision. Do not adjust the head restraint when your vehicle is moving.

Seats



E66539

Adjusting the Head Restraint



WARNING: Raise the rear head restraint when the rear seat is occupied by a passenger or a child restraint.

Adjust the head restraint so that the top of it is level with the top of your head.

Removing the Head Restraint

Press the locking buttons and remove the head restraint.



WARNING: Rock the seat backward and forward after releasing the lever to make sure that it is fully latched.



WARNING: The driver's seat has removable stop bolts on the track to enable access to the vehicle battery. See **Changing the 12V Battery** (page 292).

Moving the Seat Backward and Forward



E130249

MANUAL SEATS



WARNING: Do not adjust the driver's seat or seatback when your vehicle is moving.



WARNING: Do not place cargo or any objects behind the seatback before returning it to the original position. Pull on the seatback to make sure that it has fully latched after returning the seatback to its original position. An unlatched seat may become dangerous if you stop suddenly or have a collision.


Seats

Adjusting the Lumbar Support




E146386

Adjusting the Height of the Driver's Seat

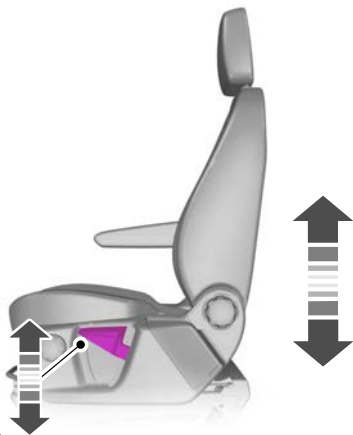


E146384

Seat Cushion Adjustment

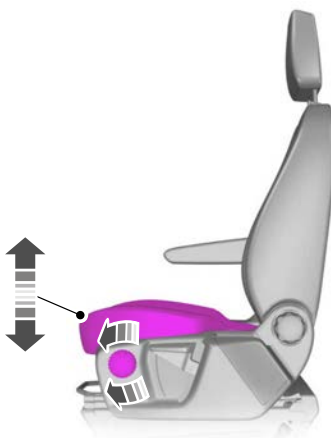

E146959


Recline Adjustment

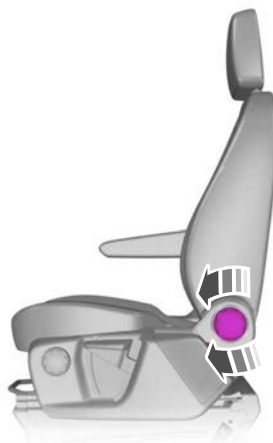

E146385

Seats

Adjusting the Armrest

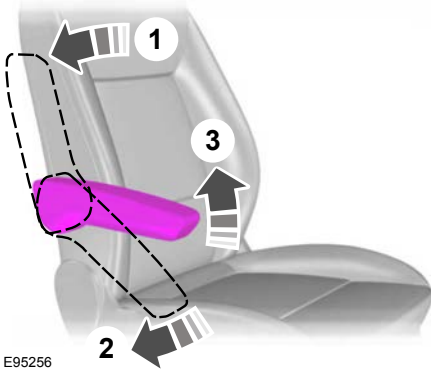





E95256

POWER SEATS

⚠ WARNING: Do not adjust the driver seat when your vehicle is moving.

⚠ WARNING: Do not place cargo or any objects behind the seat backrest before returning it to the original position.

⚠ WARNING: The driver seat has removable stop bolts on the track to enable access to the vehicle battery. See **Changing the 12V Battery** (page 292).

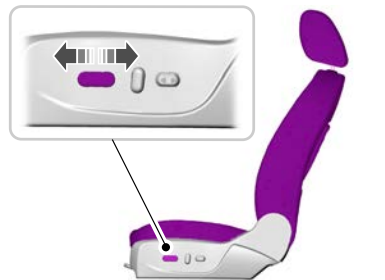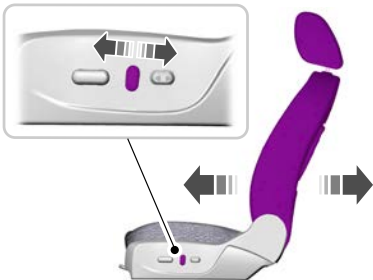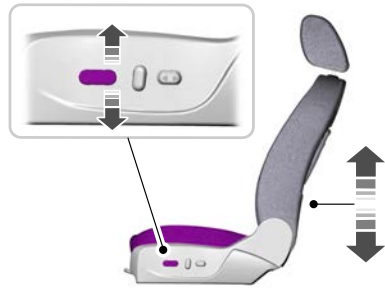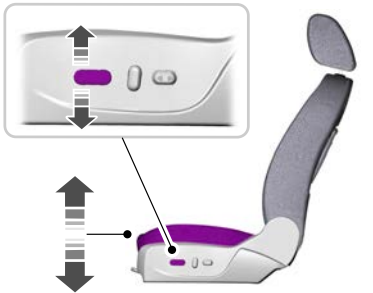

E138647

Seats

Power Lumbar



E138648

Recline Adjustment



E146605

With the seat occupied, lift the recline lever or pull the strap to recline the seat backrest.

REAR SEATS

WARNING: Do not use the bench seats as a bed when your vehicle is moving. Failure to follow this warning could result in serious personal injury or death.


WARNING: Make sure that the seats and the seat backrests are secure and fully locked in their catches.

WARNING: Do not place any objects on a folded seat. Hard objects may become projectiles in a crash or sudden stop, which may increase the risk of serious personal injury.

WARNING: Do not sit in a seat facing a folded seat. Failure to follow this instruction could result in personal injury in the event of a sudden stop or crash.

Folding the Seat Backrest

WARNING: When folding the seat backrest down, take care not to get your fingers caught in the mechanism.

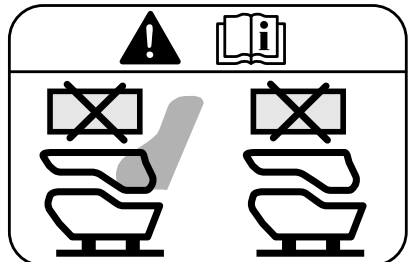

E187831


Seats

Easy Entry

Accessing the Third Row Seats


WARNING: Make sure the latch indicators are not protruding after you lock the seat legs into the floor catches.

WARNING: Make sure that you securely fasten the seat catches when installing. Make sure that the latches are correctly engaged by checking the red latch indicators.

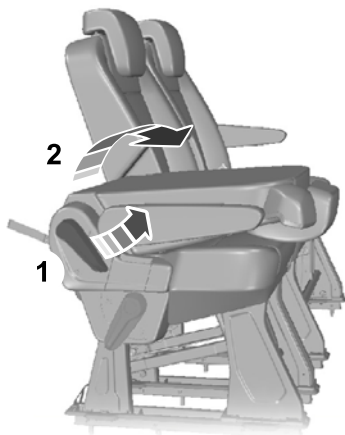

E224141

1. Fold the seat backrest forward by pulling the upper lever, or pull the red strap on the seat backrest to release the seat backrest.
2. Move the seat backrest into the down position until the recliner engages.

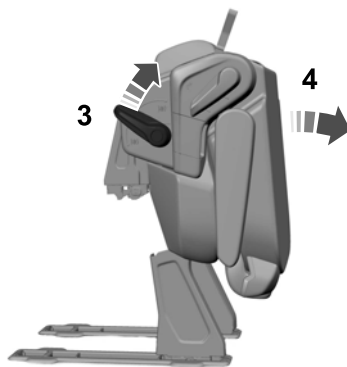

E224142

3. Pull the lower lever up.
4. Lift and tilt the entire seat forward.


To bring the seat backrest to the seating position, reverse the order of the preceding steps.

Removing the Seats

WARNING: Seats can weigh up to 60 kg (132 lb). Do not attempt to lift or carry any seat on your own.


WARNING: When folding the seat backrest down, take care not to get your fingers caught in the mechanism.

Seats

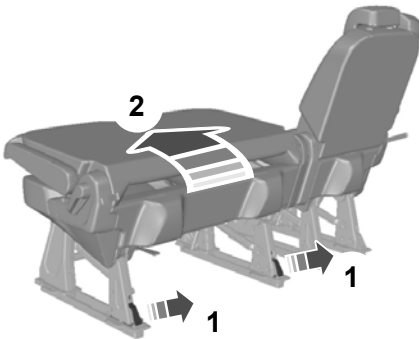

E146611

1. Fold all seat backrests forward. See **Accessing the Third Row Seats.**
2. Tilt the seat forward. For single seats, pull the lower lever up and tilt the seat forward. For dual seats, from the third row, pull both release straps and tilt the seat up with the straps.

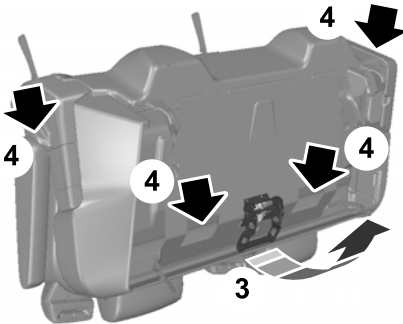


E224143


3. Pull the now accessible release handle to unlock the floor latches and tilt the seat gently forward.

4. Lift and remove the seat. For single seats, grab the seat on the side valance. For dual seats, grab the two sections next to the release handle.

Note: *The third row can be stored directly behind the second row to create loading space.*

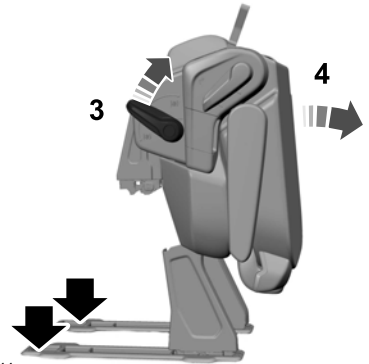

E224144

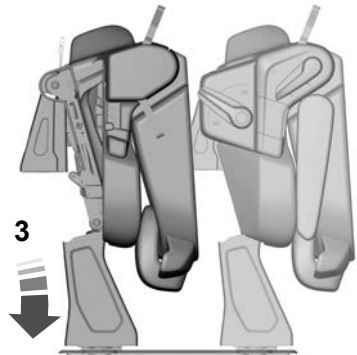


E187956

Seats

Installing the Seats



WARNING: Make sure that you securely fasten the seat catches when installing. Make sure that the latches are correctly engaged by checking the red latch indicators.

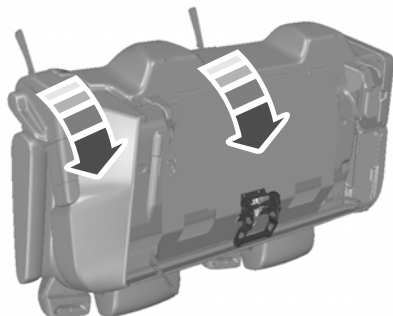


E224145

1. The floor latches are designed to catch when the seats are gently dropped into the floor rail.


Note: If the seat latches do not catch, remove the seat by pulling the release handle again and repeat the process. See **Removing the Seats.**

2. For dual seats and the single third row seat, pull both upper straps and tilt the seat down into the seating position. For the second row single seat, pull the large lever rearward and tilt the seat down.

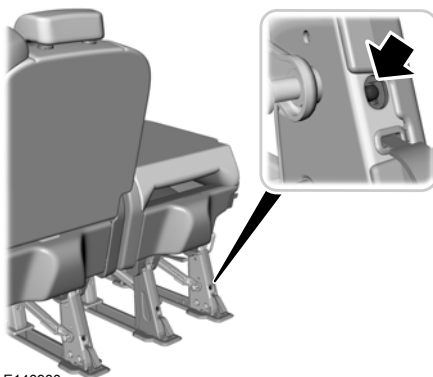

E146980

3. The seats have latch indicators at the bottom of each leg. Check the latch indicators after installing the seats.

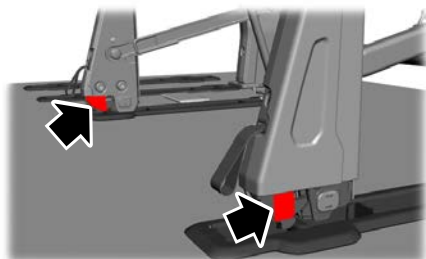


E160371

4. Make sure that the red latch indicators on the bottom of the seat legs are not visible above floor level.

Seats

Double Cab

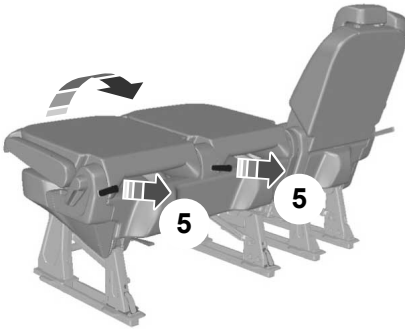

E263672

5. Release the seat backrest by pulling the red straps or the side upper lever and move the seat backrest up into the seating position until the recliner engages.

Seat Storage

- Please handle all seats with care.
- Please store the seats in a dry and warm environment
- Make sure the seats are securely fixed and cannot fall over.
- Pay special attention to the latches integrated in the seat feet. Store the seat on solid ground to prevent possible soiling to the latch mechanism.



E146594

The under seat storage guard may be set to two different positions. Lift up the guard and pull out to remove.

HEATED SEATS - 2.0L ECOBLUE, PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)



WARNING: Use caution when using the heated seat if you are unable to feel pain to your skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical conditions. The heated seat could cause burns even at low temperatures, especially if used for long periods of time. Failure to follow this instruction could result in personal injury.


Seats



WARNING: Do not place anything on the seat that blocks the heat, for example a seat cover or a cushion. This could cause the seat to overheat. Failure to follow this instruction could result in personal injury.



WARNING: Do not poke sharp objects into the seat cushion or seat backrest. This could damage the heated seat element and cause it to overheat. Failure to follow this instruction could result in personal injury.

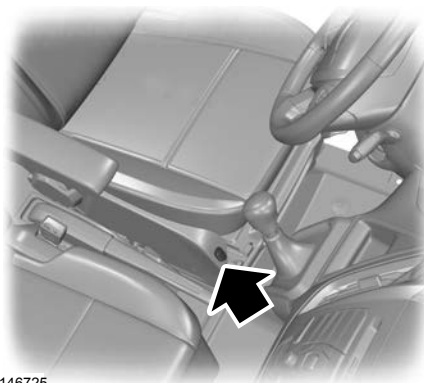

E146725

Do not switch the heated seat on if the seat is wet.

The heated seat button is on the climate control assembly.



Repeatedly press the button to adjust the temperature.

HEATED SEATS - 2.2L DIESEL



WARNING: People who are unable to feel pain to their skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical conditions, must exercise care when using the heated seat. The heated seat may cause burns even at low temperatures, especially if used for long periods of time. Do not place anything on the seat that insulates against heat, such as a blanket or cushion. This may cause the heated seat to overheat. Do not puncture the seat with pins, needles or other pointed objects. This may damage the heating element which may cause the heated seat to overheat. An overheated seat may cause serious personal injury.



E151818

Note: Only the outboard seat on a dual passenger seat is heated.

The maximum temperature is reached after five or six minutes. It is regulated thermostatically.

The heated seat will remain on until you switch it off. If the heated seat is on when you switch the ignition off, it will be on when you switch the ignition back on.

Seats

Do not do the following:

- Place heavy objects on the seat.
- Operate the heated seat if water or any other liquid is spilled on the seat. Allow the seat to dry thoroughly.
- Operate the heated seats unless the engine is running. This prevents the vehicle battery from running out of charge.

Rear Occupant Alert System (If Equipped)

WHAT IS THE REAR OCCUPANT ALERT SYSTEM

The rear occupant alert system monitors vehicle conditions and notifies you to check for rear seat occupants when you switch the ignition off.

HOW DOES THE REAR OCCUPANT ALERT SYSTEM WORK

The system monitors when rear doors have been opened and closed to indicate the potential presence of an occupant in the rear seat.

A message displays in the information and entertainment display screen and an audible warning sounds when you switch the ignition off after any of the following conditions have been met:

- A rear door is opened or closed while the ignition is on.
- You switch the ignition on within 15 minutes of a rear door opening and closing.
- You switch the ignition on within 15 minutes of the alert having displayed or sounded.

REAR OCCUPANT ALERT SYSTEM PRECAUTIONS



WARNING: On hot days, the temperature inside the vehicle can rise very quickly. Exposure of people or animals to these high temperatures for even a short time can cause death or serious heat related injuries, including brain damage. Small children are particularly at risk.



WARNING: Do not leave children or pets unattended in your vehicle. Failure to follow this instruction could result in personal injury or death.

REAR OCCUPANT ALERT SYSTEM LIMITATIONS

The system does not detect the presence of objects or passengers in the rear seat. It monitors when rear doors are opened and closed.

Note: *It is possible to receive an alert when there is no rear seat occupant, but alert conditions are met.*

Note: *It is possible to receive no alert when there is an occupant in the rear seat, if alert conditions are not met. For example, if a rear seat occupant does not enter the vehicle through a rear door.*

Note: *The audible warning does not sound when the front door is opened before you switch the ignition off.*

SWITCHING REAR OCCUPANT ALERT SYSTEM ON AND OFF

1. Press **Settings** on the touchscreen.
2. Press **Vehicle**.
3. Switch **Rear Occupant Alert** on or off.

Note: *The default setting is on.*

Note: *When you switch the system off, a message appears every six months as a reminder that the system is off. You can switch the system back on or leave it off.*

Note: *Performing a master reset causes the system to switch on again.*

Rear Occupant Alert System (If Equipped)

SWITCHING REAR OCCUPANT ALERT SYSTEM ON AND OFF



Press the button on the audio unit.

1. Using the controls on the audio unit, select **Settings**.
2. Switch **Rear Occupant Alert** on or off.

Note: When you switch the system off, a message appears every six months as a reminder that the system is off. You can switch the system back on or leave it off.

REAR OCCUPANT ALERT SYSTEM INDICATORS


Message
Check rear seats for occupants.

Displays when you switch the vehicle off after the alert conditions are met.



The message displays for a short period of time. Press the **OK** button to acknowledge and remove some messages from the information display.

REAR OCCUPANT ALERT SYSTEM INDICATORS

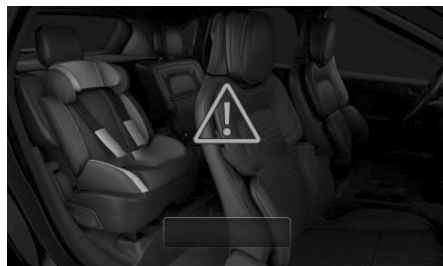

Message
Check rear seats for occupants.

Displays when you switch your vehicle off after the alert conditions are met.

The message displays for a short period of time. Press **Close** to acknowledge and remove the message.

REAR OCCUPANT ALERT SYSTEM AUDIBLE WARNINGS

Sounds when you switch your vehicle off after the alert conditions are met.

The warning sounds for a short period of time.

Auxiliary Power Points



WARNING: Do not plug optional electrical accessories into the cigar lighter socket. Incorrect use of the cigar lighter can cause damage not covered by the vehicle warranty, and can result in fire or serious injury.



WARNING: Do not use a power point for operating a cigar lighter. Incorrect use of the power points can cause damage not covered by the vehicle warranty, and can result in fire or serious injury.

Run the vehicle for full capacity use of the power point.

Do not hang any accessory from the accessory plug.

Keep the power point caps closed when not in use.

Do not insert objects other than an accessory plug into the power point.

Do not use the power point over the vehicle capacity of 12 volt DC 180 watts or a fuse may blow.

Note: *The power points turn off after 30 minutes if the ignition is on and the engine is not running. The power points may turn off if the battery charge level is low.*


To prevent the battery from running out of charge:

- Do not use the power point longer than necessary when the vehicle is not running.
- Do not leave devices plugged in overnight or when you park your vehicle for extended periods.

230 Volt AC Power Point



WARNING: Do not keep electrical devices plugged in the power point whenever the device is not in use. Do not use any extension cord with the 230 volt AC power point, since it will defeat the safety protection design. Doing so may cause the power point to overload due to powering multiple devices that can reach beyond the 150 watt load limit and could result in fire or serious injury.

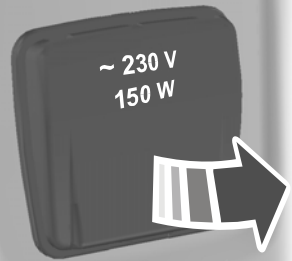

E98199

You can use the power point for electrical devices that require up to 150 watts. It is on the center console.

Auxiliary Power Points

The indicator light on the power point changes to indicate the status.


	System Status
On	The power point is working, the ignition is on and a device is plugged in.
Off	The power point is off, the ignition is off or no device is plugged in.
Flashing	The power point is in fault mode.


The power outlet temporarily turns off power when in fault mode if the device exceeds the 150 watt limit. Unplug your device and switch the ignition off. Switch the ignition back on, but do not plug your device back in. Let the system cool off and switch the ignition off to reset the fault mode. Switch the ignition back on and make sure the indicator light remains on.

Do not use the power point for certain electric devices, including:

- Cathode-ray, tube-type televisions.
- Motor loads, such as vacuum cleaners, electric saws and other electric power tools or compressor-driven refrigerators.
- Measuring devices, which process precise data, such as medical equipment or measuring equipment.
- Other appliances requiring an extremely stable power supply such as microcomputer-controlled electric blankets or touch-sensor lamps.

CIGAR LIGHTER

 **WARNING:** Do not plug optional electrical accessories into the cigar lighter socket. Incorrect use of the cigar lighter can cause damage not covered by the vehicle warranty, and can result in fire or serious injury.

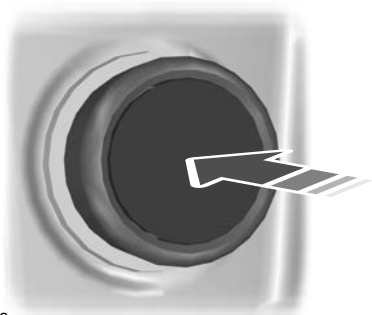

E103382

Press the element in to use the cigar lighter. It pops out after a short period of time.

Do not hold the cigar lighter element pressed in.

Note: *If the power supply does not work after you switch the ignition off, switch the ignition on.*

Auxiliary Power Points

Note: *If you use the socket when the engine is not running, the battery may run out of charge.*

Note: *When you switch the ignition on, you can use the socket to power 12 volt appliances with a maximum current rating of 15 amps.*

Storage Compartments

CUP HOLDERS



WARNING: Do not place hot drinks in the cup holders when your vehicle is moving.



WARNING: Make sure that cups placed in the holders do not obstruct your vision while driving.


OVERHEAD CONSOLE

Overhead Storage Compartment

Vehicles with Medium Roof



WARNING: Do not place heavy objects in the storage compartment. The maximum permitted load is 44 pounds (20 kilograms). Heavy objects may become projectiles in a crash or sudden stop, which may increase the risk of serious injury.

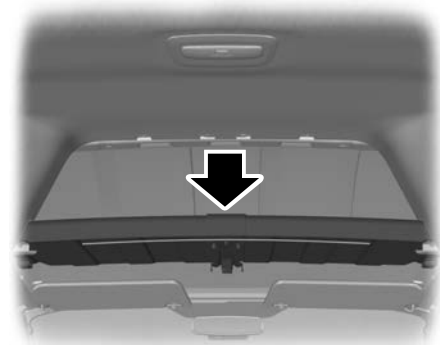

E158139

FOLDING TRAY



WARNING: Do not place hot drinks in the cup holders when your vehicle is moving.




E154676

BOTTLE HOLDERS



WARNING: Do not place glass objects in the bottle holder.

Storage Compartments

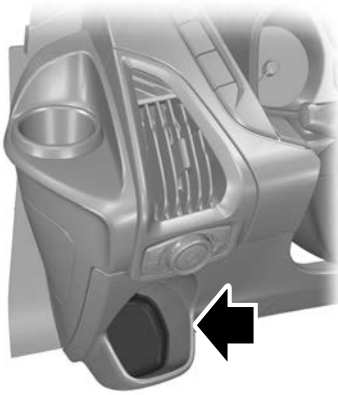

E145944

UNDER SEAT STORAGE - VEHICLES WITH: PASSENGER DOUBLE SEAT, VEHICLES WITHOUT: REAR CLIMATE CONTROL, EXCLUDING: MILD HYBRID ELECTRIC VEHICLE (MHEV)

Front Passenger Seat



E154714

1. Lift the front of the passenger seat cushion.
2. Pull the seat cushion forward.
3. Tilt the seat cushion forward.

Storage Compartments

Note: Both the inboard and outboard seats have a storage compartment.

Note: Only the inboard seat has a storage compartment.

UNDER SEAT STORAGE - MILD HYBRID ELECTRIC VEHICLE (MHEV), VEHICLES WITH: PASSENGER DOUBLE SEAT/ REAR CLIMATE CONTROL

Front Passenger Seat



2




E154714

1. Lift the front of the passenger seat cushion.
2. Pull the seat cushion forward.
3. Tilt the seat cushion forward.

DEVICE HOLDER




WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

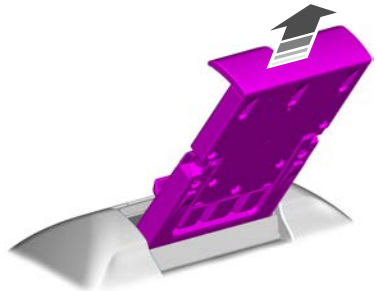


1. Fully lift the device holder.

Note: Make sure to pull the device holder all the way out.


Storage Compartments

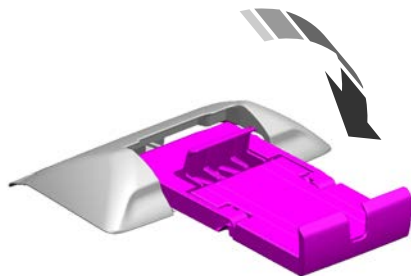

2. Bring the device holder to fully horizontal position.

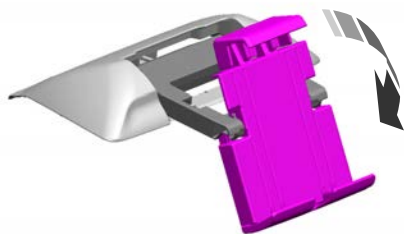

3. Fully rotate the base.

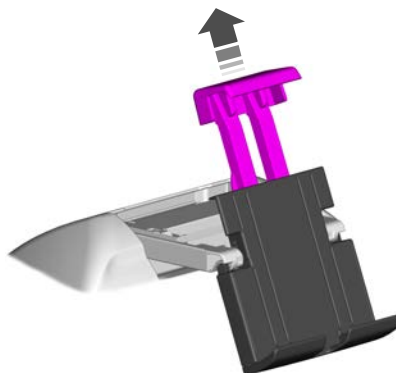

4. Lift the arm.
5. Place your device on the base.
6. Release the arm.
7. To close the device holder, reverse the opening procedure.

Note: Do not leave your device in the device holder when leaving your vehicle.

Starting and Stopping the Engine

GENERAL INFORMATION



WARNING: Extended idling at high engine speeds can produce very high temperatures in the engine and exhaust system, creating the risk of fire or other damage.



WARNING: Do not park, idle or drive your vehicle on dry grass or other dry ground cover. The emission system heats up the engine compartment and exhaust system, creating the risk of fire.



WARNING: Do not start the engine in a closed garage or in other enclosed areas. Exhaust fumes can be toxic. Always open the garage door before you start the engine.



WARNING: Exhaust leaks may result in entry of harmful and potentially lethal fumes into the passenger compartment. If you smell exhaust fumes inside your vehicle, have your vehicle inspected immediately. Do not drive if you smell exhaust fumes.

If you disconnect the battery, your vehicle may exhibit some unusual driving characteristics for approximately 8 km (5 mi) after you reconnect it. This is because the engine management system must realign itself with the engine. You can disregard any unusual driving characteristics during this period.

The powertrain control system meets all Canadian interference-causing equipment standard requirements regulating the impulse electrical field or radio noise.

When you start the engine, avoid pressing the accelerator pedal before and during operation. Only use the accelerator pedal when you have difficulty starting the engine.

IGNITION SWITCH



E72128

Note: Make sure the key is clean before inserting it into any lock cylinder.

0 (off) - The ignition is off.

Note: When you switch the ignition off and leave your vehicle, do not leave your key in the ignition. This could cause your vehicle battery to lose charge.

I (accessory) - Allows the electrical accessories such as the radio to operate while the engine is not running.

Note: Do not leave the ignition key in position **I** or **II** (without the engine running) for too long to avoid vehicle battery losing charge.

II (on) - All electrical circuits operational. Warning lamps and indicators are illuminated.

III (start) - cranks the engine. Release the key as soon as the engine starts.

STEERING WHEEL LOCK



WARNING: Always check that the steering is unlocked before attempting to move your vehicle.

Locking the Steering Wheel

1. Remove the key from the ignition.

Starting and Stopping the Engine

2. Slightly rotate the steering wheel to engage the lock.

Unlocking the Steering Wheel

1. Insert the key in the ignition.
2. Turn the key to position **I**.

Note: You may have to slightly rotate the steering wheel to assist unlocking it.

STARTING A DIESEL ENGINE



Switch the ignition on and if the glow plug indicator lamp illuminates, wait until it turns off before starting.

1. For vehicles with manual transmission, fully depress the clutch pedal. For vehicles with automatic transmission, fully depress the brake pedal.

Note: Do not touch the accelerator pedal.

2. Turn the key to the start position to start your vehicle.

Note: Releasing the brake or clutch pedal during engine starting stops the engine from cranking.

Note: When the temperature is below -15°C (5°F), you may need to crank the engine for up to 10 seconds.

Note: You can only operate the starter for a limited period of time.

Note: After a limited number of attempts to start your engine, the system will not allow you to try again until a period of time has elapsed, for example 30 minutes.

Failure to Start

If the engine does not start, wait for a short period and try again.

SWITCHING OFF THE ENGINE

Vehicles With a Turbocharger



WARNING: Do not switch the engine off when it is running at high speed. If you do, the turbocharger will continue running after the engine oil pressure has dropped to zero. This will lead to premature turbocharger bearing wear.

Release the accelerator pedal. Wait until the engine has reached idle speed and then switch it off.

ENGINE BLOCK HEATER



WARNING: Failure to follow engine block heater instructions could result in property damage or serious personal injury.



WARNING: Do not use your heater with ungrounded electrical systems or two-pronged adapters. There is a risk of electrical shock.

The heater warms the engine coolant. This allows the climate control system to quickly respond. The equipment includes a heater element installed in the engine block and a wire harness. You can connect the system to a grounded 220-240 volt AC electrical source.

Note: The heater is most effective when the ambient temperature is below -18°C (0°F).

Starting and Stopping the Engine

We recommend that you do the following for a safe and correct operation:

- Use an extension cord suitable for outdoor use and in cold temperatures. It should be clearly marked that it is suitable for use with outdoor appliances. Do not use an indoor extension cord outdoors. This could result in an electric shock or become a fire hazard.
- Use as short an extension cord as possible.
- Do not use multiple extension cords.
- Make sure that when in operation, the extension cord plug and heater cord plug connections are free and clear of water. This could result in an electric shock or become a fire hazard.
- Make sure that you park your vehicle in a clean area, clear of combustible materials.
- Make sure that you firmly connect the heater, heater cord and extension cord.
- Check for heat anywhere in the electrical hookup when the system has been operating for approximately 30 minutes.
- Make sure that you unplug and properly stow the system before starting and driving your vehicle. Make sure the protective cover seals the terminals of the block heater cord plug when not in use.
- Make sure that you check the heater system for proper operation before winter.

Make sure the receptacle terminals are clean and dry before use. Clean them with a dry cloth if necessary.

The heater uses 0.4 to 1.0 kilowatt-hours of energy per hour of use. The system does not have a thermostat. It reaches maximum temperature after approximately three hours of operation. Using the heater longer than three hours does not improve system performance and unnecessarily uses electricity.

Using the Engine Block Heater

The engine block heater plug may be found in one of the following locations:

- Under the hood.
- In the front fog lamp bezel.
- Front lower grille.

Starting and Stopping the Electric Motor

IGNITION SWITCH



E247596

Note: Make sure the key is clean before inserting it into any lock cylinder.

Switching the Ignition Off

Turn the key to position **0**.

Switching the Ignition to Accessory Mode

Turn the key to position **I**. Electrical accessories, for example the radio, operate without the electric motor running.

Switching the Ignition On

Turn the key to position **II**. All electrical circuits and accessories are operational and the warning lamps and indicators illuminate.

Note: The high voltage battery discharges in this mode.

Starting the Electric Motor

Turn the key to position **III**. Release the key when the ready to drive indicator illuminates.

STARTING THE ELECTRIC MOTOR

1. Shift into park (P) or neutral (N).
2. Press the brake pedal.
3. Turn the key to position **III**.



The indicator illuminates when your vehicle is ready to drive.

SWITCHING OFF THE ELECTRIC MOTOR

1. Stop your vehicle.
2. Shift into park (P).
3. Turn the key to position **0**.
4. Apply the parking brake.

Unique Driving Characteristics

HYBRID VEHICLE OPERATION - MILD HYBRID ELECTRIC VEHICLE (MHEV)

Your vehicle has a 48 volt mild hybrid system. The system is designed to help reduce fuel consumption and CO₂ emissions by using regenerative charging and stopping the engine when your vehicle is coasting at a speed less than the engine stop speed that you have set. See **Setting the Engine Stop Speed** (page 136).

Note: *Regenerative charging results in a greater degree of engine braking. This is normal.*

PLUG-IN HYBRID VEHICLE OPERATION

The system is designed to help reduce fuel consumption and CO₂ emissions by using regenerative charging and the gasoline engine as a generator to capture energy in the high voltage battery.

The gasoline engine starts and stops to provide power when required.

Conditions that may cause the gasoline engine to start or remain running include:

- Considerable vehicle acceleration.
- Driving uphill.
- The high voltage battery charge level is low.
- Heating or cooling the vehicle interior in high or low outside temperatures.
- Gasoline engine below normal operating temperature.
- Gasoline particulate filter regeneration in process.

Drive Mode Control

About Drive Mode Control

Your vehicle has various drive modes that you can select for different driving conditions. Depending on the drive mode that you select, the system adjusts various vehicle settings.

Selecting a Drive Mode

The button is on the instrument panel.



Repeatedly press the button to scroll through the available drive modes.

Drive Modes

Auto EV



This mode automatically uses the gasoline engine to provide power when required and will automatically revert to electric only driving when possible.

EV now



This mode uses the high voltage battery only. When you select this mode, a blue indicator appears in the information display.

Vehicle acceleration, top speed and climate control system performance could be reduced in this mode to maximize the distance your vehicle could travel.

EV override

When your power demand is higher than the high voltage battery can provide, a message appears in the information display. Press the **OK** button on the steering wheel to enable the gasoline engine to provide additional power.

Note: *The blue indicator turns amber.*

Unique Driving Characteristics

Your vehicle returns to **EV Now** mode when possible.

EV later



When this mode is selected, the current high voltage battery charge level is maintained.

Note: *Maximum displayed battery charge is 95%. The system will discharge some of the battery to allow the regenerative braking and hybrid systems full operation.*

EV charge



This mode uses the gasoline engine to charge the high voltage battery.

Note: *This mode is not a substitute for plug-in charging. Energy usage is most efficient when you plug-in charge the high voltage battery.*

HYBRID VEHICLE FREQUENTLY ASKED QUESTIONS

How long is the high voltage battery system designed to last?

The high voltage battery system is designed to last the life of your vehicle.

Does the high voltage battery need maintenance?

The high voltage battery does not need maintenance.

Does the heating and cooling systems work while driving in electric only mode?

Yes, but it decreases the available electric range.

What happens if the high voltage battery runs out of charge?

Plug-in charge your vehicle.

What should I do if the vehicle runs out of fuel and the high voltage battery is out of charge?


Refuel and start your vehicle normally. You can drive after the engine charges the high voltage battery to the minimum required level.

Auto-Start-Stop - Manual Transmission, Excluding: Mild Hybrid Electric Vehicle (MHEV)


WHAT IS AUTO-START-STOP

The system is designed to help reduce fuel consumption and CO₂ emissions by stopping the engine when it is idling, for example at traffic lights.

AUTO-START-STOP PRECAUTIONS



WARNING: Apply the parking brake, shift into neutral, switch the ignition off and remove the key before you leave your vehicle. Failure to follow this instruction could result in personal injury or death.



WARNING: Apply the parking brake, shift into neutral, switch the ignition off and remove the key before you open the hood or have any service or repair work completed. If you do not switch the ignition off, the engine could restart at any time. Failure to follow this instruction could result in personal injury or death.

SWITCHING AUTO-START-STOP ON AND OFF

The system turns on when you switch the ignition on.



Press the switch to switch the system off.

Note: *OFF* illuminates in the switch.

Press the switch again to switch the system back on.

Note: *The system is designed to turn off if it detects a malfunction. If the system malfunctions, have your vehicle checked as soon as possible.*

STOPPING THE ENGINE

1. Stop your vehicle.
2. Shift into neutral.
3. Release the clutch pedal and the accelerator pedal.

Note: *To obtain maximum benefit from the system, shift into neutral and release the clutch pedal whenever you stop your vehicle for more than three seconds.*

Note: *Power assist steering turns off when the engine stops.*

RESTARTING THE ENGINE


Press the clutch pedal.

A message appears in the information display if the system requires you to take action.


Message	Condition	Action
Auto StartStop Press a pedal to start engine	The system needs to restart the engine but requires your confirmation.	Press the accelerator pedal, brake pedal or clutch pedal to restart the engine.
Auto StartStop Select neutral to start engine	The system needs to restart the engine but cannot because the transmission is in gear.	Shift into neutral to restart the engine.

Auto-Start-Stop - Manual Transmission, Excluding: Mild Hybrid Electric Vehicle (MHEV)


AUTO-START-STOP INDICATORS



WARNING: The system may require the engine to automatically restart when the auto-start-stop indicator illuminates green or flashes amber. Failure to follow this instruction could result in personal injury.



The Auto-Start-Stop indicator illuminates green when the engine stops. It flashes amber and a message appears when you need to take action.



The Auto-Start-Stop indicator illuminates gray with a strikethrough when the system is not available.

Note: You can display the reason why the system is not available in the information display.

AUTO-START-STOP AUDIBLE WARNING

The Auto-Start-Stop audible warning sounds if you open the driver door when the system has stopped the engine.

AUTO-START-STOP – TROUBLESHOOTING

Auto-Start-Stop – Information Messages

Message	Condition	Action
Auto StartStop Manual restart required	The system is not functioning.	Shift into neutral and restart the engine yourself.

Auto-Start-Stop - Manual Transmission, Excluding: Mild Hybrid Electric Vehicle (MHEV)

Auto-Start-Stop – Frequently Asked Questions

Why does the engine not always stop when I expect it to?

The system is designed to work in a way that complements other vehicle systems, allowing them to operate at optimum performance.

The system does not stop the engine if:

- The driver door is open.
- Your vehicle is at high altitude.
- The heated windshield is on.
- The engine is warming up.
- The outside temperature is too low or too high.
- The battery charge is low.
- The battery temperature is outside the optimal operating range.
- The engine is required to run to maintain interior climate and reduce fogging.

Why does the engine sometimes restart when I do not expect it to?

The system is designed to work in a way that complements other vehicle systems, allowing them to operate at optimum performance.

The system restarts the engine if:

- You switch the heated windshield on.
- You switch maximum defrost on.
- Your vehicle starts to roll downhill in neutral.
- The engine is required to run to maintain adequate brake system assistance.
- The engine is required to run to maintain interior climate and reduce fogging.

Can I permanently switch the system off?

No. The system plays an important role in reducing the fuel consumption and the CO₂ emissions.

Will the frequent engine starts cause parts to wear out?

Your vehicle has an enhanced battery and starter motor that are designed for the increased number of engine starts.

Auto-Start-Stop - Mild Hybrid Electric Vehicle (MHEV)

WHAT IS AUTO-START-STOP

The system is designed to help reduce fuel consumption and CO₂ emissions by stopping the engine when it is idling, for example at traffic lights or when your vehicle is coasting at a speed less than the engine stop speed that you have set. See **Setting the Engine Stop Speed** (page 136). The system is designed to stop the engine when the transmission is in gear or in neutral.

AUTO-START-STOP PRECAUTIONS



WARNING: Apply the parking brake, shift into neutral, switch the ignition off and remove the key before you leave your vehicle. Failure to follow this instruction could result in personal injury or death.



WARNING: Apply the parking brake, shift into neutral, switch the ignition off and remove the key before you open the hood or have any service or repair work completed. If you do not switch the ignition off, the engine could restart at any time. Failure to follow this instruction could result in personal injury or death.

AUTO-START-STOP SETTINGS

Setting the Engine Stop Speed

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle settings**.
3. Select **Rolling StartStop**.
4. Select a setting and press the **OK** button.

SWITCHING AUTO-START-STOP ON AND OFF

The system turns on when you switch the ignition on.



Press the switch to switch the system off.

Note: *OFF* illuminates in the switch.

Press the switch again to switch the system back on.

Note: *The system is designed to turn off if it detects a malfunction. If the system malfunctions, have your vehicle checked as soon as possible.*

STOPPING THE ENGINE

Stopping the Engine in Gear

1. Press the brake pedal and slow your vehicle down to 12 km/h (7 mph) or less.

Note: *You can set the speed at which the system stops the engine through the information display.*

2. Fully press the clutch pedal.

Note: *Power assist steering remains on when the engine stops.*

Stopping the Engine in Neutral

1. Press the brake pedal and slow your vehicle down to 12 km/h (7 mph) or less.

Note: *You can set the speed at which the system stops the engine through the information display.*

2. Press the clutch pedal and shift into neutral.
3. Release the clutch pedal.

Note: *Power assist steering remains on when the engine stops.*

Auto-Start-Stop - Mild Hybrid Electric Vehicle (MHEV)

RESTARTING THE ENGINE

Restarting the Engine in Gear

Release the brake pedal.

Restarting the Engine in Neutral

1. Fully press the clutch pedal.
2. Select a gear.

AUTO-START-STOP INDICATORS



WARNING: The system may require the engine to automatically restart when the auto-start-stop indicator illuminates green or flashes amber. Failure to follow this instruction could result in personal injury.



The Auto-Start-Stop indicator illuminates green when the engine stops. It flashes amber and a message appears when you need to take action.



The Auto-Start-Stop indicator illuminates gray with a strikethrough when the system is not available.

Note: You can display the reason why the system is not available in the information display.

AUTO-START-STOP AUDIBLE WARNING

The Auto-Start-Stop audible warning sounds if you open the driver door when the system has stopped the engine.

AUTO-START-STOP – TROUBLESHOOTING

Auto-Start-Stop – Information Messages

Message	Condition	Action
Auto StartStop Manual restart required	The system is not functioning.	Shift into neutral and restart the engine yourself.
Auto StartStop Select neutral to start engine	The system cannot restart the engine.	Shift into neutral.
Auto StartStop Press clutch to start engine	The system cannot restart the engine.	Fully press the clutch pedal.

Auto-Start-Stop - Mild Hybrid Electric Vehicle (MHEV)

Auto-Start-Stop – Frequently Asked Questions

Why does the engine not always stop when I expect it to?

The system is designed to work in a way that complements other vehicle systems, allowing them to operate at optimum performance.

The system does not stop the engine if:

- The driver door is open.
- The driver seatbelt is unfastened.
- The engine is warming up.
- The outside temperature is too low or too high.
- The battery charge is low.
- The battery temperature is outside the optimal operating range.
- The engine is required to run to maintain interior climate and reduce fogging.

Why does the engine sometimes restart when I do not expect it to?

The system is designed to work in a way that complements other vehicle systems, allowing them to operate at optimum performance.

The system restarts the engine if:

- You switch **MAX A/C** on.
- You switch maximum defrost on.
- Your vehicle starts to roll downhill in neutral.
- The engine is required to run to maintain adequate brake system assistance.
- The engine is required to run to maintain interior climate and reduce fogging.

Can I permanently switch the system off?

No. The system plays an important role in reducing the fuel consumption and the CO₂ emissions.

Will the frequent engine starts cause parts to wear out?

Your vehicle has an enhanced battery and starter generator that are designed for the increased number of engine starts.

Auto-Start-Stop - Automatic Transmission

WHAT IS AUTO-START-STOP

The system is designed to help reduce fuel consumption and CO₂ emissions by stopping the engine when it is idling, for example at traffic lights.

AUTO-START-STOP PRECAUTIONS



WARNING: Apply the parking brake, shift into park (P), switch the ignition off and remove the key before you leave your vehicle. Failure to follow this instruction could result in personal injury or death.



WARNING: Apply the parking brake, shift into park (P), switch the ignition off and remove the key before you open the hood or have any service or repair work completed. If you do not switch the ignition off, the engine could restart at any time. Failure to follow this instruction could result in personal injury or death.

SWITCHING AUTO-START-STOP ON AND OFF

The system turns on when you switch the ignition on.



Press the switch to switch the system off.

Note: *OFF* illuminates in the switch.

Press the switch again to switch the system back on.

Note: *The system is designed to turn off if it detects a malfunction. If the system malfunctions, have your vehicle checked as soon as possible.*

STOPPING THE ENGINE

Stop your vehicle, keep your foot on the brake pedal and the transmission in drive (D).

Note: *The engine stops when you shift into park (P) whether you have your foot on the brake pedal or not.*

Note: *Power assist steering turns off when the engine stops.*

RESTARTING THE ENGINE

Release the brake pedal or press the accelerator pedal.

A message appears in the information display if the system requires you to take action.

Message	Condition	Action
Auto StartStop Press brake to start engine	The system needs to restart the engine but requires your confirmation.	Press the brake pedal to restart the engine.
Auto StartStop Press a pedal to start engine	The system needs to restart the engine but requires your confirmation.	Press the brake pedal or the accelerator pedal to restart the engine.

Auto-Start-Stop - Automatic Transmission

AUTO-START-STOP INDICATORS



WARNING: The system may require the engine to automatically restart when the auto-start-stop indicator illuminates green or flashes amber. Failure to follow this instruction could result in personal injury.



The Auto-Start-Stop indicator illuminates green when the engine stops. It flashes amber and a message appears when you need to take action.



The Auto-Start-Stop indicator illuminates gray with a strikethrough when the system is not available.

Note: You can display the reason why the system is not available in the information display.

AUTO-START-STOP – TROUBLESHOOTING

Auto-Start-Stop – Information Messages

Message	Condition	Action
Auto StartStop Shift to P Restart engine	The system is not functioning.	Shift into park (P) and restart the engine yourself.
Auto StartStop Manual restart required	The system is not functioning.	Restart the engine yourself.

Auto-Start-Stop - Automatic Transmission

Auto-Start-Stop – Frequently Asked Questions

Why does the engine not always stop when I expect it to?

The system is designed to work in a way that complements other vehicle systems, allowing them to operate at optimum performance.

The system does not stop the engine if:

- The driver door is open.
- The driver seatbelt is unfastened.
- Your vehicle is at high altitude.
- The heated windshield is on.
- The transmission is in manual (M).
- Your vehicle is on a steep grade.
- The engine is warming up.
- The outside temperature is too low or too high.
- The battery charge is low.
- The battery temperature is outside the optimal operating range.
- The engine is required to run to maintain interior climate and reduce fogging.

Why does the engine sometimes restart when I do not expect it to?

The system is designed to work in a way that complements other vehicle systems, allowing them to operate at optimum performance.

The system restarts the engine if:

- You switch the heated windshield on.
- You switch maximum defrost on.
- Your vehicle starts to roll downhill in neutral.

- The engine is required to run to maintain adequate brake system assistance.
- The engine is required to run to maintain interior climate and reduce fogging.

Can I permanently switch the system off?

No. The system plays an important role in reducing the fuel consumption and the CO₂ emissions.

Will the frequent engine starts cause parts to wear out?

Your vehicle has an enhanced battery and starter motor that are designed for the increased number of engine starts.

Fuel and Refueling

SAFETY PRECAUTIONS



WARNING: Do not overfill the fuel tank. The pressure in an overfilled tank may cause leakage and lead to fuel spray and fire.



WARNING: The fuel system may be under pressure. If you hear a hissing sound near the fuel filler inlet, do not refuel until the sound stops. Otherwise, fuel may spray out, which could cause serious personal injury.



WARNING: Fuels can cause serious injury or death if misused or mishandled.



WARNING: Fuel may contain benzene, which is a cancer-causing agent.



WARNING: When refueling always shut the engine off and never allow sparks or open flames near the fuel tank filler valve. Never smoke or use a cell phone while refueling. Fuel vapor is extremely hazardous under certain conditions. Avoid inhaling excess fumes.

- Avoid inhaling fuel vapors. Inhaling fuel vapor can lead to eye and respiratory tract irritation. In severe cases, excessive or prolonged breathing of fuel vapor can cause serious illness and permanent injury.
- Avoid getting fuel in your eyes. If you splash fuel in your eyes, immediately remove contact lenses (if worn), flush with water for 15 minutes and seek medical attention. Failure to seek proper medical attention could lead to permanent injury.
- Fuels can be harmful if absorbed through the skin. If you splash fuel on your skin, clothing or both, promptly remove contaminated clothing and thoroughly wash your skin with soap and water. Repeated or prolonged skin contact causes skin irritation.
- Be particularly careful if you are taking Antabuse or other forms of Disulfiram for the treatment of alcoholism. Breathing fuel vapors could cause an adverse reaction, serious personal injury or sickness. Immediately call a physician if you experience any adverse reactions.

Follow these guidelines when refueling:

- Extinguish all smoking materials and any open flames before refueling your vehicle.
- Always switch the engine off before refueling.
- Automotive fuels can be harmful or fatal if swallowed. Fuel is highly toxic and if swallowed can cause death or permanent injury. If fuel is swallowed immediately call a physician, even if no symptoms are immediately apparent. The toxic effects of fuel may not be apparent for hours.

FUEL QUALITY - GASOLINE




WARNING: Do not mix diesel with gasoline, gasohol or alcohol. This could cause an explosion.



WARNING: Do not use leaded gasoline or gasoline with additives containing other metallic compounds, for example manganese-based. They could damage the emission system.

Use minimum 95 octane unleaded gasoline that meets the specification defined by EN 228 or the equivalent national specification.

Fuel and Refueling

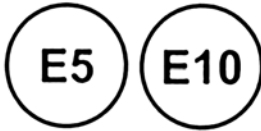

E268502

Your vehicle is suitable for use with ethanol blends up to 10% (E5 and E10).

Note: We recommend that you only use high quality fuel. We do not recommend the use of aftermarket fuel additives or other engine treatments.

Long-Term Storage

Most gasoline contains ethanol. We recommend that you fill the fuel tank with fuel that does not contain ethanol if you intend to store your vehicle for more than two months.

FUEL QUALITY - DIESEL



WARNING: Do not mix diesel with gasoline, gasohol or alcohol. This could cause an explosion.

Use diesel that meets the specification defined by EN 590 or the relevant national specification.



E268503

Your vehicle is suitable for use with biodiesel blends up to 7% (B7).

Note: We recommend that you only use high quality fuel. We do not recommend the use of aftermarket fuel additives or other engine treatments.

Note: We do not recommend the use of additional additives to prevent fuel waxing.

Long-Term Storage

Most diesel fuels contain biodiesel. We recommend that you fill the fuel tank with fuel that does not contain biodiesel if you intend to store your vehicle for more than two months.

FUEL QUALITY - 2.0L ECOBLUE, HYDROTREATED VEGETABLE OIL



WARNING: Do not mix hydrotreated vegetable oil with gasoline, gasohol or alcohol. This could cause an explosion. Failure to follow this instruction could result in personal injury or death.

Use hydrotreated vegetable oil that meets the specification defined by EN 15940 or the relevant national specification.

Note: Do not use normal vegetable oil as this may cause engine damage not covered by the vehicle Warranty.

Note: We do not recommend the use of additional additives to prevent fuel waxing.

FUEL FILLER FUNNEL LOCATION

The fuel filler funnel is in the under seat storage compartment or in the glove compartment.

Fuel and Refueling

RUNNING OUT OF FUEL

Running out of fuel can cause damage not covered by the vehicle Warranty.

If your vehicle runs out of fuel:

- Add a minimum of 5 L (1.1 gal) of fuel to restart the engine.
- You may need to switch the ignition from off to on several times after refueling to allow the fuel system to pump the fuel from the tank to the engine. When restarting, cranking time takes a few seconds longer than normal.

Note: *If your vehicle is on a steep slope, more fuel may be required.*

Filling a Portable Fuel Container



WARNING: Flow of fuel through a fuel pump nozzle can produce static electricity. This can cause a fire if you are filling an ungrounded fuel container.

Use the following guidelines to avoid electrostatic charge build-up, which can produce a spark, when filling an ungrounded fuel container:

- Only use an approved fuel container to transfer fuel to your vehicle. Place the container on the ground when filling it.
- Do not fill a fuel container when it is inside your vehicle (including the cargo area).
- Keep the fuel pump nozzle in contact with the fuel container when filling it.
- Do not use a device that holds the fuel pump nozzle lever in the fill position.

Adding Fuel From a Portable Fuel Container



WARNING: Do not insert the nozzle of a fuel container or an aftermarket funnel into the fuel filler neck. This may damage the fuel system filler neck or its seal and cause fuel to run onto the ground.



WARNING: Do not try to pry open or push open the capless fuel system with foreign objects. This could damage the fuel system and its seal and cause injury to you or others.



WARNING: Do not dispose of fuel in the household refuse or the public sewage system. Use an authorized waste disposal facility.

When refueling the vehicle fuel tank from a fuel container, use the fuel filler funnel included with your vehicle. See **Fuel Filler Funnel Location** (page 143).

Note: *Do not use aftermarket funnels as they may not work with the capless fuel system and can damage it.*

When refueling the vehicle fuel tank from a fuel container, do the following:

1. Fully open the fuel filler door.
2. Fully insert the fuel filler funnel into the fuel filler inlet.

Fuel and Refueling



3. Add fuel to your vehicle from the fuel container.
4. Remove the fuel filler funnel.
5. Fully close the fuel filler door.
6. Clean the fuel filler funnel and place it back in your vehicle or correctly dispose of it.

Note: Extra funnels can be purchased from an authorized dealer if you choose to dispose of the funnel.

REFUELING-PLUG-INHYBRID ELECTRIC VEHICLE (PHEV)



WARNING: Do not overfill the fuel tank. The pressure in an overfilled tank may cause leakage and lead to fuel spray and fire.



WARNING: Do not pry open the fuel tank filler valve. This could damage the fuel system. Failure to follow this instruction could result in fire, personal injury or death.



WARNING: Do not remove the fuel pump nozzle from its fully inserted position when refueling.



WARNING: When refueling always shut the engine off and never allow sparks or open flames near the fuel tank filler valve. Never smoke or use a cell phone while refueling. Fuel vapor is extremely hazardous under certain conditions. Avoid inhaling excess fumes.



WARNING: Stop refueling when the fuel pump nozzle automatically shuts off for the first time. Failure to follow this will fill the expansion space in the fuel tank and could lead to fuel overflowing.



WARNING: Wait at least five seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.



WARNING: The fuel system may be under pressure. If you hear a hissing sound near the fuel filler inlet, do not refuel until the sound stops. Otherwise, fuel may spray out, which could cause serious personal injury.



WARNING: Read and follow all the instructions on the pump island.




Stop your vehicle, switch the ignition off and press the button on the instrument panel to release the fuel filler door.


Note: The fuel filler door can take up to 15 seconds to release before you can open the fuel filler door.

1. Open the left-hand front door.
2. Open the fuel filler door.

Fuel and Refueling

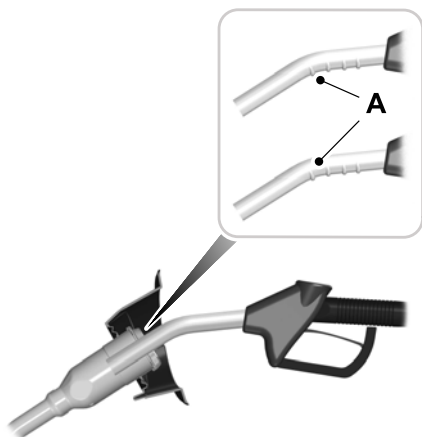


3. Insert the fuel pump nozzle up to the first notch on the nozzle A. Keep it resting on the cover of the fuel tank filler pipe opening.

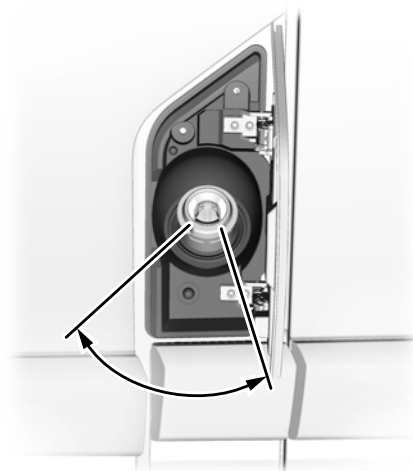


E162792

5. Operate the fuel pump nozzle within the area shown.

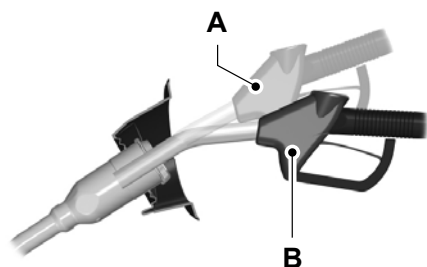

E139203

4. Hold the fuel pump nozzle in position B when refueling. Holding the fuel pump nozzle in position A can affect the flow of fuel and shut off the fuel nozzle before the fuel tank is full.

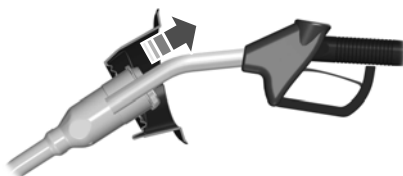

6. Slightly raise the fuel pump nozzle and then slowly remove it.
7. Fully close the fuel filler door.
8. Fully close the left-hand front door.

Note: To close the fuel filler door, press the center rear edge of the fuel filler door and then release.

You must complete the refueling process within 20 minutes. If 20 minutes elapses, you must press the button on the instrument panel again. Fuel pump nozzle automatic shut off may occur if you do not press the button on the instrument panel.

Fuel and Refueling

Fuel Filler Door Override Cord




WARNING: The fuel system may be under pressure. If you hear a hissing sound near the fuel filler inlet, do not refuel until the sound stops. Otherwise, fuel may spray out, which could cause serious personal injury.

Note: The transmission must be in park (P) or neutral (N).

When using the fuel filler door override cord do the following:

1. Switch the ignition on.
2. Open the left-hand front door.

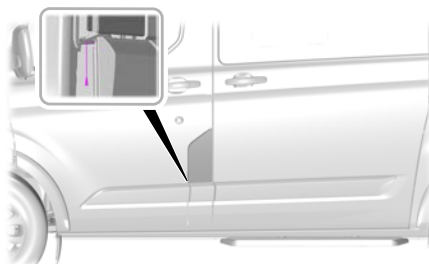

3. Pull the fuel filler door override cord.
4. Switch the ignition off.
5. Complete the refueling process within 20 minutes.

Fuel System Information Messages

If the fuel filler door fails to open, an information message appears in the information display.

Message	Description
Refuel error See manual	A warning message appears in the information display when the fuel system fails to depressurize or the fuel filler door fails to release. You may have to use the fuel filler door override cord.

If the information message appears, do the following:

1. Check the fuel filler door for anything that may be obstructing its movement, for example ice or snow.
2. Remove any obstruction from the fuel filler door.
3. Press the button on the instrument panel to release the fuel filler door.
4. If the fuel filler door fails to release and the information message remains in the information display, use the fuel filler door override cord.

REFUELING - EXCLUDING: PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)



WARNING: Do not overfill the fuel tank. The pressure in an overfilled tank may cause leakage and lead to fuel spray and fire.

Fuel and Refueling

WARNING: Do not try to pry open or push open the capless fuel system with foreign objects. This could damage the fuel system and its seal and cause injury to you or others.

WARNING: Do not remove the fuel pump nozzle from its fully inserted position when refueling.

WARNING: When refueling always shut the engine off and never allow sparks or open flames near the fuel tank filler valve. Never smoke or use a cell phone while refueling. Fuel vapor is extremely hazardous under certain conditions. Avoid inhaling excess fumes.

WARNING: Wait at least 10 seconds before removing the fuel pump nozzle to allow any residual fuel to drain into the fuel tank.


WARNING: Stop refueling when the fuel pump nozzle automatically shuts off for the first time. Failure to follow this will fill the expansion space in the fuel tank and could lead to fuel overflowing.



E162791

1. Open the left-hand front door.
2. Fully open the fuel filler door.


Note: Your vehicle does not have a fuel filler cap.

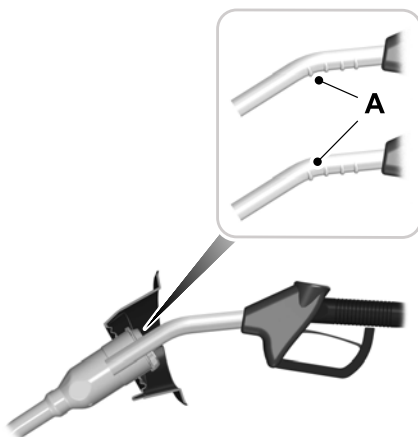

3. Insert the fuel pump nozzle up to the first notch on the nozzle A. Keep it resting on the cover of the fuel tank filler pipe opening.


Fuel and Refueling

Note: The fuel filler nozzle inhibitor only opens when you insert the correct fuel pump nozzle.

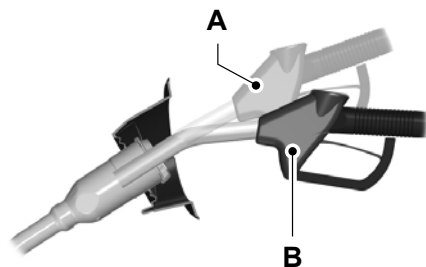


E139203

4. Hold the fuel pump nozzle in position B when refueling. Holding the fuel pump nozzle in position A could affect the flow of fuel and shut off the fuel pump nozzle before the fuel tank is full.

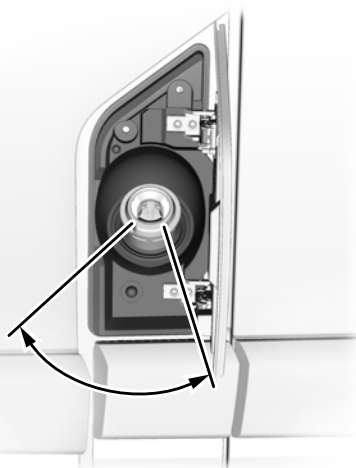

E162792

5. Operate the fuel pump nozzle within the area shown.

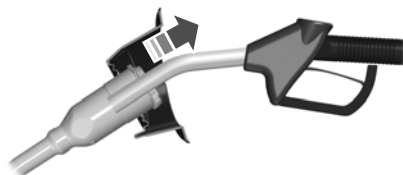

6. Slightly raise the fuel pump nozzle and then slowly remove it.
7. Fully close the fuel filler door.

Note: Do not attempt to start the engine if you have filled the fuel tank with incorrect fuel. Incorrect fuel use can cause damage not covered by the vehicle Warranty. Have your vehicle immediately checked.

System Warnings (If Equipped)

If the fuel filler nozzle inhibitor does not fully close a warning message appears in the information display.

1. Stop your vehicle as soon as it is safe to do so and switch the engine off.
2. Shift into park (P) or neutral (N).
3. Apply the parking brake.
4. Open the left-hand front door.
5. Fully open the fuel filler door.
6. Check the fuel filler inlet and the area around it for any items or debris that may be obstructing its movement.
7. Fully insert a fuel pump nozzle or the fuel filler funnel provided with your vehicle into the fuel filler inlet. See **Fuel Filler Funnel Location** (page 143). This action should dislodge any debris that may be preventing the fuel filler inlet from fully closing.
8. Remove the fuel pump nozzle or fuel filler funnel from the fuel filler inlet.
9. Fully close the fuel filler door.

Fuel and Refueling

Note: *If this action corrects the problem the message may not immediately reset. If the message remains and the service engine soon warning lamp illuminates, have your vehicle checked as soon as possible.*

FUEL CONSUMPTION

We derive CO₂ and fuel consumption figures in laboratory tests according to Regulation (EC) 715/2007 or CR (EC) 692/2008 and subsequent amendments.

They are intended as a comparison between makes and models of vehicles. They are not intended to represent the real world fuel consumption you may get from your vehicle.

Real world fuel consumption is governed by many factors, for example driving style, high speed driving, stop-start driving, air conditioning usage, add-on accessories, payload and towing.

Advertised Capacity

The advertised capacity is the maximum amount of fuel that you can add to the fuel tank when the fuel gauge indicates empty. See **Capacities and Specifications** (page 351).

In addition, the fuel tank contains an empty reserve. The empty reserve is an unspecified amount of fuel that remains in the fuel tank when the fuel gauge indicates empty.

Note: *The amount of fuel in the empty reserve varies and should not be relied upon to increase driving range.*

Fuel Economy

Your vehicle calculates fuel economy figures through the trip computer average fuel function. See **Trip Computer** (page 89).

The first 1,500 km (1,000 mi) of driving is the break-in period of the engine. A more accurate measurement is obtained after 3,000 km (2,000 mi).

Impacting Fuel Economy

- Incorrect tire inflation pressures. See **Tire Pressures** (page 334).
- Fully loading your vehicle.
- Carrying unnecessary weight.
- Adding certain accessories to your vehicle such as bug deflectors, rollbars or light bars, running boards and ski racks.
- Using fuel blended with alcohol. See **Fuel Quality** (page 143).
- Fuel economy may decrease with lower temperatures.
- Fuel economy may decrease when driving short distances.
- You may get better fuel economy when driving on flat terrain than when driving on hilly terrain.

Engine Emission Control

CATALYTIC CONVERTER



WARNING: Do not park, idle or drive your vehicle on dry grass or other dry ground cover. The emission system heats up the engine compartment and exhaust system, creating the risk of fire.



WARNING: The normal operating temperature of the exhaust system is very high. Never work around or attempt to repair any part of the exhaust system until it has cooled. Use special care when working around the catalytic converter. The catalytic converter heats up to a very high temperature after only a short period of engine operation and stays hot after the engine is switched off.



WARNING: Exhaust leaks may result in entry of harmful and potentially lethal fumes into the passenger compartment. If you smell exhaust fumes inside your vehicle, have your vehicle inspected immediately. Do not drive if you smell exhaust fumes.

Your vehicle has various emission control components and a catalytic converter that enables it to comply with applicable exhaust emission standards.

To avoid damaging the catalytic converter:

- Do not crank the engine for more than 10 seconds at a time.
- Do not run the engine with a spark plug lead disconnected.
- Do not push-start or tow-start your vehicle. Use booster cables. See **Jump Starting the Vehicle** (page 239).
- Do not switch the ignition off when your vehicle is moving.
- Do not use leaded fuel.
- Avoid running out of fuel.

Note: Resulting component damage may not be covered by the vehicle Warranty.

On-Board Diagnostics System

Your vehicle has an on-board diagnostics system that monitors the emission control system. If any of the following warning lamps illuminate, this may indicate that the on-board diagnostics system has detected an emission control system malfunction.



Continuing to drive your vehicle may cause reduced power or the engine to stop. Failure to respond to a warning lamp may cause component damage not covered by the vehicle Warranty. Have your vehicle checked as soon as possible.

See **Warning Lamps and Indicators** (page 81).

SELECTIVE CATALYTIC REDUCTANT SYSTEM

Your vehicle has a selective catalytic reductant system. This reduces exhaust emission levels by injecting AdBlue® into the exhaust system. The engine does not start if you tamper with or disable the selective catalytic reductant system.

For the system to correctly operate, you must maintain the fluid level.

Note: When you switch the engine off the selective catalytic reductant system pump runs for a short period of time. This is normal.

Engine Emission Control

AdBlue® Guidelines

- Only use AdBlue® certified to ISO-22241.
- Do not put in the vehicle fuel tank. This can cause engine damage not covered by the vehicle Warranty.
- Do not overfill the AdBlue® tank.
- Do not dilute with water or any other liquid.
- Do not re-use an empty fluid container.
- Do not store in direct sunlight.
- Store at temperatures between -5°C (23°F) and 20°C (68°F).
- Do not store fluid containers in your vehicle.
- The fluid is non-flammable, non-toxic, colorless and water-soluble.
- Immediately remove any residue on painted surfaces when filling with AdBlue®.

Filling the AdBlue® Tank



E204215

The AdBlue® tank filler pipe is next to the fuel tank filler pipe and has a blue cap. Fill the tank using a fluid pump at an AdBlue® filling station or an AdBlue® container.

Filling in Cold Climates

AdBlue® may freeze when the temperature is below -11°C (12°F). Your vehicle has a preheating system which allows the fluid to operate below -11°C (12°F). If you overfill the AdBlue® tank and the fluid freezes, it may cause damage not covered by the vehicle Warranty.

Note: *It may not be possible to fully fill the AdBlue® tank when the temperature is below -11°C (12°F).*

Note: *If the AdBlue® tank is frozen, it might not correctly display the fluid level. The AdBlue® level updates once the tank completely thaws out.*

Filling the AdBlue® Tank Using a Fuel Station Pump



WARNING: Do not allow diesel exhaust fluid (AdBlue) to come into contact with eyes, skin or clothing. Should the fluid come into contact with eyes, flush them with plenty of water and seek medical attention. Clean affected skin with soap and water. If swallowed, drink plenty of water and seek medical attention immediately.




WARNING: Refill the diesel exhaust fluid (AdBlue) tank in a well-ventilated area. When removing the tank cap or a container cap, ammonia vapor may escape. Ammonia vapor is an irritant to the eyes, skin and mucous membranes. Inhaling ammonia vapor can cause burning to the eyes, throat and nose resulting in watering eyes or severe coughing.

Engine Emission Control


Filling the AdBlue® tank using a fuel station pump is similar to refueling your vehicle.

1. Fully open the fuel filler door.

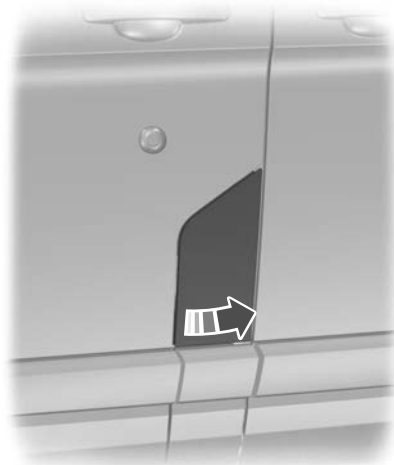

E144358

2. Remove the AdBlue® tank filler cap.
3. Fully insert the AdBlue® pump nozzle.

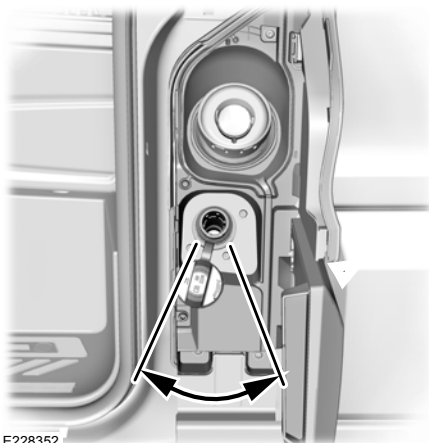

E228352

4. Operate the AdBlue® pump nozzle within the area shown.

Note: The pump nozzle shuts off when the tank is full.

5. Slightly raise the AdBlue® pump nozzle and then slowly remove it.
6. Replace the AdBlue® tank filler cap. Turn it clockwise until you feel a strong resistance and it clicks.

Do not attempt to start the engine if you have filled the AdBlue® tank with incorrect fluid. Incorrect fluid use could cause damage not covered by the vehicle Warranty. Have your vehicle checked as soon as possible.

Engine Emission Control

Filling the AdBlue® Tank Using a Container



WARNING: Do not allow diesel exhaust fluid (AdBlue) to come into contact with eyes, skin or clothing. Should the fluid come into contact with eyes, flush them with plenty of water and seek medical attention. Clean affected skin with soap and water. If swallowed, drink plenty of water and seek medical attention immediately.



WARNING: Refill the diesel exhaust fluid (AdBlue) tank in a well-ventilated area. When removing the tank cap or a container cap, ammonia vapor may escape. Ammonia vapor is an irritant to the eyes, skin and mucous membranes. Inhaling ammonia vapor can cause burning to the eyes, throat and nose resulting in watering eyes or severe coughing.

Use containers that have a seal on the spout.

Always follow the manufacturer's instructions.

1. Remove the fluid container cap.
2. Place the spout on to the container and tighten it until you feel a strong resistance.
3. Remove the AdBlue® tank filler cap.
4. Insert the spout into the AdBlue® tank filler pipe until the seal on the spout fully seats.
5. Pour the fluid into the tank.

Note: *The fluid stops flowing when the tank is full.*

6. Return the container to the vertical position slightly below the AdBlue® tank filler pipe.

7. Allow any fluid remaining in the spout to drain back into the container.
8. Remove the spout from the AdBlue® tank filler pipe.
9. Remove the spout from the AdBlue® container and replace the cap.
10. Replace the AdBlue® tank filler cap. Turn it clockwise until you feel a strong resistance and it clicks.

Do not attempt to start the engine if you have filled the AdBlue® tank with incorrect fluid. Incorrect fluid use could cause damage not covered by the vehicle Warranty. Have your vehicle checked as soon as possible.

Checking the AdBlue® Level

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle maintenance**.
3. Select **DEF gauge**.

Checking the AdBlue® Level Status

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle maintenance**.
3. Select **DEF level**.

AdBlue® Consumption

AdBlue® consumption is directly related to fuel consumption and is governed by many factors, for example driving style, high speed driving, stop-start driving, air conditioning usage, add-on accessories, payload and towing. The AdBlue® consumption may vary between 1% and 5% of the fuel consumption.

AdBlue® consumption is specified for a vehicle variant and not for a single car.

Engine Emission Control

Selective Catalytic Reductant System Warning Lamp



The warning lamp illuminates if the system detects the fluid level is low or if there is a system malfunction.

If the warning lamp illuminates, the information display messages give you an indication whether the concern is fluid related or if there is a selective catalytic reductant system malfunction. If the warning lamp illuminates when your vehicle is moving, and the fluid is at a sufficient level, this indicates a system malfunction. Have your vehicle checked as soon as possible.

Selective Catalytic Reductant System Information Messages

AdBlue® Level

Message	Action
AdBlue® low Range : XXXX km Refill soon AdBlue® low Range : XXXX mls Refill soon	Indicates the approximate distance remaining before the AdBlue® tank becomes empty. Refill the AdBlue® tank as soon as possible.
AdBlue® low No engine start in XXXX km AdBlue® low No engine start in XXXX mls	Indicates the approximate distance remaining before the AdBlue® tank becomes empty. The engine would not restart if you switch the ignition off. Refill the AdBlue® tank as soon as possible.
AdBlue® level empty. Refill to start engine	The AdBlue® tank is empty. The engine would not restart if you switch the ignition off. Refill the AdBlue® tank. The minimum AdBlue® refill quantity required to restart the engine is available in the information display. See Information Displays (page 87).

Note: When filling the AdBlue® tank from empty, there may be a short period before the increased AdBlue® level is registered.

Engine Emission Control

AdBlue® Malfunction

Message	Action
AdBlue® system malfunction Service required	The system has malfunctioned. Have your vehicle checked as soon as possible.
AdBlue® system No engine start in XXXX km AdBlue® system No engine start in XXXX mls	Indicates the approximate distance before a detected system fault would restrict the engine from starting. The engine would not restart if you switch the ignition off. Have your vehicle checked as soon as possible.
AdBlue® system Service required to start engine	The system has malfunctioned. Have your vehicle checked as soon as possible.

GASOLINE PARTICULATE FILTER



WARNING: Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The regeneration process creates very high exhaust gas temperatures and the exhaust will radiate a considerable amount of heat during and after regeneration and after you have switched the engine off. This is a potential fire hazard.

To reduce the risk of causing damage to the gasoline particulate filter:

- Do not crank the engine for more than 10 seconds at a time.
- Do not push-start or tow-start your vehicle. Use booster cables.
- Do not switch the ignition off when your vehicle is moving.
- Do not ignore warning lamps, indicators or information messages.

Gasoline Particulate Filter Regeneration

Particles in the exhaust gas collect in the gasoline particulate filter causing a gradual restriction over time. This restriction is removed through a regeneration process controlled by the engine control system. The regeneration process converts the particles in the exhaust gas into harmless gases.

Regeneration occurs during normal driving, to varying degrees depending on how you drive. Passive regeneration occurs when you drive at moderate to high speed but if you generally drive short distances at low speed, the engine control system could actively raise the exhaust gas temperature to remove the particles that have collected in the filter to make sure that it continues to correctly operate.

Engine Emission Control

To assist passive regeneration, we recommend that you make occasional journeys that allow you to:

- Drive at a varied range of conditions, including highway conditions for a minimum of 20 minutes.
- Avoid prolonged engine idling.
- Select a suitable gear to maintain engine speed between 1500 and 4000 RPM.

If the filter is saturated or is approaching saturation, a warning lamp illuminates or a message appears in the information display.

Note: A warning lamp illuminates and a message appears in the information display on some vehicles.

If you do not take action when a warning lamp illuminates or a message appears in the information display, you could cause damage not covered by the vehicle Warranty.

Gasoline Particulate Filter Warning Lamps and Indicators



Malfunction indicator lamp.

Gasoline Particulate Filter Information Messages

Message	Action
Exhaust filter at limit Drive to clean now	<ul style="list-style-type: none">• Drive at a varied range of conditions, including highway conditions for 20 minutes or until the message disappears.• Avoid prolonged engine idling.• Select a suitable gear to maintain engine speed between 1500 and 4000 RPM.
Exhaust filter over limit Service now	<ul style="list-style-type: none">• Drive at a moderate speed.• Avoid heavy acceleration and deceleration.• Have your vehicle checked as soon as possible.

DIESEL PARTICULATE FILTER



WARNING: Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The regeneration process creates very high exhaust gas temperatures and the exhaust will radiate a considerable amount of heat during and after regeneration and after you have switched the engine off. This is a potential fire hazard.



WARNING: The normal operating temperature of the exhaust system is very high. Never work around or attempt to repair any part of the exhaust system until it has cooled. Use special care when working around the diesel oxidation catalytic converter or the diesel particulate filter. The diesel oxidation catalytic converter and the diesel particulate filter heat up to very high temperatures after only a short period of engine operation and remain hot after you switch the engine off.

Engine Emission Control



WARNING: Exhaust leaks may result in entry of harmful and potentially lethal fumes into the passenger compartment. If you smell exhaust fumes inside your vehicle, have your vehicle inspected immediately. Do not drive if you smell exhaust fumes.

Your vehicle has various emission control components and a diesel particulate filter that enables it to comply with applicable exhaust emission standards. It filters harmful diesel particulates, for example soot from the exhaust gas.

To avoid damaging the diesel particulate filter:

- Do not crank the engine for more than 10 seconds at a time.
- Do not push-start or tow-start your vehicle. Use booster cables.
- Do not switch the ignition off when your vehicle is moving.
- Do not ignore warning lamps or information messages regarding exhaust system cleaning and regeneration.

Note: This could result in damage not covered by the vehicle Warranty.

On-Board Diagnostics System

Your vehicle has an on-board diagnostics system that monitors the emission control system. If any of the following warning lamps illuminate, this indicates that the on-board diagnostics system has detected an emission control system malfunction.



Engine coolant temperature warning lamp.



Ignition warning lamp.



Malfunction indicator lamp.



Water in fuel warning lamp.

If you continue to drive your vehicle when the warning lamp is illuminated, the engine could stop without warning. This could result in damage not covered by the vehicle Warranty. Have your vehicle checked as soon as possible.

See **Warning Lamps and Indicators** (page 81).

Diesel Particulate Filter Automatic Regeneration



WARNING: Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The regeneration process creates very high exhaust gas temperatures and the exhaust will radiate a considerable amount of heat during and after regeneration and after you have switched the engine off. This is a potential fire hazard.



WARNING: The normal operating temperature of the exhaust system is very high. Never work around or attempt to repair any part of the exhaust system until it has cooled. Use special care when working around the diesel oxidation catalytic converter or the diesel particulate filter. The diesel oxidation catalytic converter and the diesel particulate filter heat up to very high temperatures after only a short period of engine operation and remain hot after you switch the engine off.

Engine Emission Control

The diesel particulate filter on your vehicle requires periodic regeneration to maintain correct operation. The emission control system automatically carries out this process. As soot gathers in the system it begins to restrict the filter. The soot that gathers inside the filter is cleaned in two different ways, passive regeneration and active regeneration. Both methods occur automatically and require no actions from the driver. During automatic regeneration, the system cleans the diesel particulate filter by oxidizing the soot. Cleaning happens during normal engine operating conditions at varying levels depending on driving conditions.

If the diesel particulate filter is near or at saturation, an information message appears in the information display. Drive your vehicle in a manner to allow effective diesel particulate filter cleaning.

Failure to carry out regeneration when required could result in a clogged diesel particulate filter. If the diesel particulate filter fills beyond the regeneration threshold, the system disables the ability to carry out regeneration. This could result in damage not covered by the vehicle Warranty.

Where vehicle use meets any of the following conditions:

- Driving short distances.
- Prolonged engine idling.
- Frequently switching the engine on and off.
- High levels of acceleration and deceleration.

We recommend you assist the regeneration process by:

- Avoiding prolonged engine idling.
- Drive your vehicle in a manner to allow effective cleaning. Drive at a steady vehicle speed of 48 km/h (30 mph) or above for approximately 20 minutes.



If the warning lamp illuminates the diesel particulate filter could have become overloaded. Have your vehicle checked as soon as possible.

Automatic regeneration raises the exhaust temperature to eliminate the soot particles. During cleaning soot particles are converted to harmless gasses. Once cleaned the diesel particulate filter continues to trap harmful diesel particles.

If you are driving your vehicle in a manner that allows effective cleaning, a message may appear in the information display to indicate automatic regeneration is in progress.

If you are not driving your vehicle in a manner that allows effective cleaning, a message may appear in the information display to instruct you to drive in a manner that allows automatic regeneration.

The automatic regeneration process is most effective when you drive at a steady vehicle speed of 48 km/h (30 mph) or above for approximately 20 minutes. The frequency and duration of the regeneration process varies by how you drive your vehicle, the outside air temperature and altitude. Frequency varies between 160 km (100 mi) and 500 km (310 mi) and each regeneration process lasts between 10 and 20 minutes.

Note: *Changes in the engine or exhaust sound may be heard during the regeneration process.*

Note: *During regeneration at low speed or engine idle, you may smell a hot metallic odor and could notice a clicking metallic sound. This is due to the high temperatures reached during the regeneration process. This is normal.*

Engine Emission Control

Diesel Particulate Filter Manual Regeneration (If Equipped)



WARNING: Do not park or idle your vehicle over dry leaves, dry grass or other combustible materials. The regeneration process creates very high exhaust gas temperatures and the exhaust will radiate a considerable amount of heat during and after regeneration and after you have switched the engine off. This is a potential fire hazard.



WARNING: The normal operating temperature of the exhaust system is very high. Never work around or attempt to repair any part of the exhaust system until it has cooled. Use special care when working around the diesel oxidation catalytic converter or the diesel particulate filter. The diesel oxidation catalytic converter and the diesel particulate filter heat up to very high temperatures after only a short period of engine operation and remain hot after you switch the engine off.

If the diesel particulate filter is near or at saturation, an information message appears in the information display advising you to initiate diesel particulate filter manual regeneration.

Before you start manual regeneration, do the following:

- Park your vehicle outside of any enclosed structure.
- Make sure the transmission is in park (P) or neutral (N).
- Make sure the parking brake is on.
- Park your vehicle a minimum of 3 m (10 ft) from any obstructions and materials that can easily combust or melt, for example, paper, leaves, fuels, plastics and other dry organic material.

- Make sure there is a minimum of 12 L (2.6 gal) of fuel in the fuel tank.
- Check the engine oil level.
- Check the engine coolant level.

Manual Regeneration

Where vehicle use has significant engine idle operation, frequent vehicle speed less than 40 km/h (25 mph), or driving short distances where the engine does not fully warm up, manual regeneration allows you to start diesel particulate filter cleaning when the engine is idling.

Use the manual regeneration feature when:

- You are not able to drive in a manner that allows effective automatic cleaning. The automatic regeneration process is most effective when you drive at a steady vehicle speed of 48 km/h (30 mph) or above for approximately 20 minutes. .
- You choose to manually start the regeneration process when the engine is idling.

Note: *Changes in the engine or exhaust sound may be heard during the regeneration process.*

Note: *During regeneration at low speed or engine idle, you may smell a hot metallic odor and could notice a clicking metallic sound. This is due to the high temperatures reached during the regeneration process. This is normal.*

Starting Manual Regeneration

You can only start manual regeneration with the engine running at normal operating temperature using the information display.

Note: *During the use of manual regeneration, you may observe a light amount of white smoke. This is normal.*

Engine Emission Control

Note: *If you press any pedal during manual regeneration the engine may turn off. To protect the exhaust system you may not be able to restart the engine for 10 minutes.*

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Vehicle maintenance**.
3. Select **Exhaust filter**.
4. Press and hold the **OK** button until a confirmation message appears in the information display.



If a warning illuminates you may not be able to start manual regeneration.

When you start manual regeneration the engine speed rises to approximately 2000–2500 rpm and the cooling fan speed increases. A change in engine noise due to the cooling fan and engine speed increase may be heard during the regeneration process.

Depending on the amount of soot collected by the diesel particulate filter, the regeneration process varies depending on the outside air temperature and altitude. Manual regeneration may last up to 40 minutes.

When manual regeneration is complete the cooling fan and engine speed return to normal idling. The exhaust system remains very hot for several minutes after regeneration is complete. Do not reposition the vehicle over dry leaves, dry grass or other combustible materials until the exhaust system has had sufficient time to cool.

Interrupting or Cancelling Manual Regeneration

You can interrupt or cancel manual regeneration by switching the engine off. It may be possible to interrupt or cancel manual regeneration by pressing any pedal.

Note: *To protect the exhaust system you may not be able to restart the engine for 10 minutes.*

Depending on the amount of time allowed for manual regeneration to operate, soot may not have had sufficient time to be eliminated. The exhaust system may still be very hot for several minutes after regeneration.

If you switch the engine off during manual regeneration, turbo charger flutter occurs. This is a consequence of switching a diesel engine off during turbo charger boost operation, which is normal.

Engine Emission Control

Diesel Particulate Filter Information Messages

Message	Action
Exhaust filter at limit Drive to clean now	<ul style="list-style-type: none">• Drive at a varied range of conditions, including highway conditions for 20 minutes or until the message disappears.• Avoid prolonged engine idling.• Select a suitable gear to maintain engine speed between 1500 and 4000 RPM.
Exhaust filter over limit Service now	<ul style="list-style-type: none">• Drive at a moderate speed.• Avoid heavy acceleration and deceleration.• Have your vehicle checked as soon as possible.

High Voltage Battery

WHAT IS THE HIGH VOLTAGE BATTERY

Your plug-in hybrid vehicle has an electric motor, a high voltage battery and a gasoline engine.

The system is designed to help reduce fuel consumption and CO₂ emissions by using the gasoline engine as a generator.

Your vehicle is equipped with regenerative braking system. It captures deceleration energy and stores it in the high voltage battery.


CHARGING THE HIGH VOLTAGE BATTERY

AC Charging

Charging

Make sure that the convenience cord is completely unwound before charging.

1. Shift into park (P), apply the parking brake and switch the ignition off.
2. Plug the convenience cord into the AC outlet.

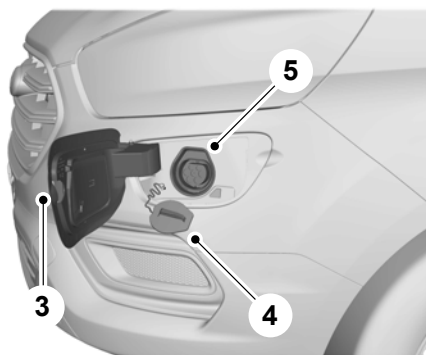

3. Fully open the charge port door.
4. Remove the charge port cover.
5. Plug the convenience cord coupler into the vehicle charge port.

Note: Make sure that you fully engage the convenience cord coupler.

Note: It takes approximately four to six hours to completely charge a discharged battery.

Note: If you are using a 230 V charging station, follow the instructions on the charging station.

Stopping Charging

The charge port unlock button is next to the charge port.



Unlock your vehicle.

Press the charge port unlock button to stop charging the high voltage battery.

Note: If the convenience cord remains connected, charging resumes after a short period of time.

Disconnecting the Convenience Cord

1. Unlock your vehicle.
2. Press the charge port unlock button.
3. Disconnect the convenience cord coupler from the charge port.

Note: You cannot disconnect the convenience cord coupler until charging has been stopped or completed.

Note: Do not use excessive force to disconnect the convenience cord coupler. This could damage the charge port and the convenience cord coupler.

4. Install the charge port cover.
5. Close the charge port door.
6. Disconnect the convenience cord plug from the AC outlet.

High Voltage Battery

Note: Do not disconnect the convenience cord plug from the AC outlet when the vehicle is charging. This could damage the AC outlet and the convenience cord.

HIGH VOLTAGE BATTERY PRECAUTIONS



WARNING: Do not use the 230 V convenience cord with an extension cord, two-prong adapter, surge protector, timer or other adapter.



WARNING: The AC wall plug must fit firmly into the AC outlet. If the connection feels loose, worn or the AC outlet is damaged, please have a qualified electrician replace the AC outlet. Using a convenience cord with a worn outlet may cause burns, property damage and increase the risk of electric shock.



WARNING: This battery pack should only be serviced by an authorized electric vehicle technician. Improper handling can result in personal injury or death.

CHARGING EQUIPMENT REQUIREMENTS

Your electrical source must meet certain requirements for the high voltage batteries to charge:

- Make sure that the AC outlet is properly grounded and in good condition.
- Use a dedicated circuit, which means you cannot have other appliances connected to the same circuit.


Note: If you do not have a dedicated circuit, contact a qualified electrician for proper installation.

LOCATING THE CHARGING EQUIPMENT

The convenience cord is in a bag under the front passenger seat.

CHARGING EQUIPMENT INDICATORS

The convenience cord has indicators showing the charging status.

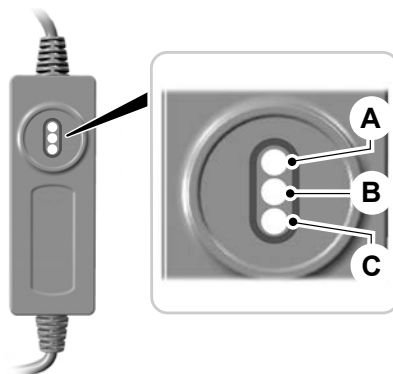

Item	Indicator Color	Charging Status
A	Green.	Power.
B	Red.	Fault.
C	Amber.	Check AC outlet.

High Voltage Battery

Convenience Cord Indicators			Description
Green	Red	Amber	
On	Off	Off	The convenience cord is connected to the AC outlet and ready to charge your vehicle.
Off	Off	Off	If all indicators are off after connecting to the AC outlet, your vehicle is not charging. Use a different AC outlet.
On	Flashing	On	The convenience cord is overheating. Check the AC outlet. If the convenience cord still overheats, use a different AC outlet.
On	Off	Flashing	The convenience cord is charging at a reduced current rate due to AC outlet overheating. Check the AC outlet. If the AC outlet still overheats, use a different AC outlet.
On	On	Flashing	The convenience cord plug has overheated. Your vehicle is not charging. Have the AC outlet checked as soon as possible.
On	On or double flashing	Double flashing	The AC outlet has malfunctioned. Your vehicle is not charging. Have the AC outlet checked as soon as possible. Use a different AC outlet.
On	On or flashing	Off	The vehicle has malfunctioned. Your vehicle is not charging. Have your vehicle checked as soon as possible.


High Voltage Battery

LOCATING THE CHARGE PORT

The charge port is on the left-hand side of your vehicle, under the headlamp.

CHARGE PORT INDICATORS

The indicators around the charge port are divided into five segments. They display the high voltage battery state of charge in 20 percent increments.

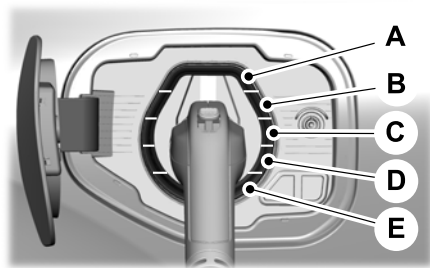

- A. State of charge 80-100%.
- B. State of charge 60-80%.
- C. State of charge 40-60%.
- D. State of charge 20-40%.
- E. State of charge 0-20%.

Note: The charge port indicators flash blue to confirm you have correctly engaged the convenience cord coupler.

Note: If the charge port indicators illuminate red, there is a charging malfunction. Disconnect the convenience cord coupler, then connect it again to the charge port. If the charge port indicators still illuminate red, have your vehicle checked.

Note: If the charge port indicators flash red, there is a charging equipment malfunction. Disconnect the convenience cord coupler, then connect it again to the charge port. If the charge port indicators still flash red, try another convenience cord or charging station.

HIGH VOLTAGE SHUTOFF SWITCH

In the event of a moderate to severe crash, the high voltage shutoff switch stops the power going from the high voltage battery. Not every impact causes a shutoff.

Should your vehicle shutoff after a crash, attempt to restart your vehicle:

1. Turn the key to position **0**.
2. Press the brake pedal.
3. Turn the key to position **III**.



The indicator illuminates when your vehicle is ready to drive.

Note: If your vehicle does not restart after a third attempt, have your vehicle checked as soon as possible.

Transmission

MANUAL TRANSMISSION

General Information

Do not rest your hand on the gearshift lever or use the gearshift lever to hang and support objects. This could cause damage to the transmission not covered by the vehicle Warranty.

Do not rest your foot on the clutch pedal or use the clutch pedal to keep your vehicle stationary when waiting on a hill. This could cause damage to the clutch not covered by the vehicle Warranty.


Failure to fully press the clutch pedal could cause increased shift efforts, prematurely wear transmission components or damage to the transmission.

If any gear is not fully engaged, fully press the clutch pedal and shift into neutral. Release the clutch pedal for a moment, fully press the clutch pedal again and shift into gear.

Shifting Into Reverse Gear

Do not shift into reverse gear when your vehicle is moving. This could cause damage to the transmission not covered by the vehicle Warranty.


1. Fully press the brake pedal.
2. Fully press the clutch pedal and shift into neutral.

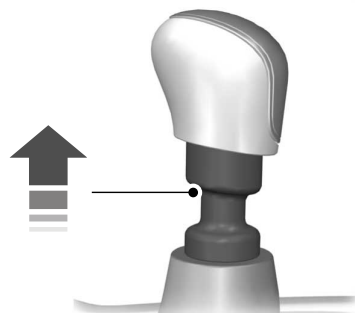



E99067

3. Raise the collar and shift into reverse gear.

AUTOMATIC TRANSMISSION - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

 **WARNING:** Do not apply the brake pedal and accelerator pedal simultaneously. Applying both pedals simultaneously for more than a few seconds will limit engine performance, which may result in difficulty maintaining speed in traffic and could lead to serious injury.

 **WARNING:** When your vehicle is stationary, keep the brake pedal fully pressed when shifting gears. Failure to follow this instruction could result in personal injury, death or property damage.

 **WARNING:** Apply the parking brake, shift into park (P), switch the ignition off and remove the key before you leave your vehicle. Failure to follow this instruction could result in personal injury or death.

Transmission

Selector Lever Positions

The instrument cluster displays the current position.

Park (P)

In park (P), power is not transmitted to the driven wheels and the transmission is locked. You can start the vehicle with the transmission in this position.

Shift into park (P) only when your vehicle is stationary.

Reverse (R)

Shift into reverse (R) only when your vehicle is stationary.

Neutral (N)



WARNING: In neutral (N) your vehicle has the ability to roll freely. If you intend to leave your vehicle, make sure you apply the parking brake.

In neutral (N), power is not transmitted to the driven wheels but the transmission is not locked.

Drive (D)

Drive (D) is the normal position for driving.

Low (L)

Low (L) provides maximum regenerative braking. You can shift into low (L) at any vehicle speed.

Brake Shift Interlock

About Brake Shift Interlock

Brake shift interlock prevents you from shifting out of park (P) when you have started your vehicle and not pressed the brake pedal.

Shifting Out of Park (P)



WARNING: Do not drive your vehicle until you verify that the stoplamps are working.




WARNING: If the parking brake is fully released, but the brake warning lamp remains illuminated, the brakes may not be working properly. Have your vehicle checked as soon as possible.

Use the brake shift interlock lever to move the selector lever out of park (P) if you cannot start the vehicle.

In the event of an electrical malfunction, it is possible that a fuse has blown or the stoplamps are not working.




WARNING: When doing this procedure, you need to take the transmission out of park (P) which means your vehicle can roll freely. To avoid unwanted vehicle movement, always fully apply the parking brake prior to doing this procedure. Use wheels chocks if appropriate.

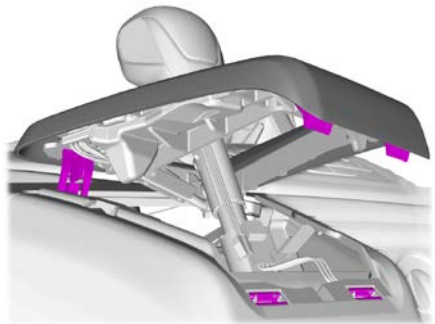


Transmission

1. Using a flat-bladed screwdriver, remove the panel.

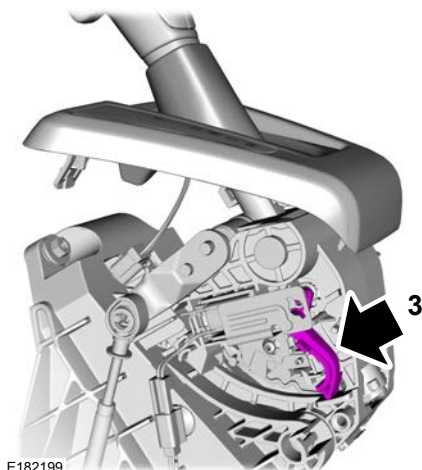

2. Locate the brake shift interlock lever.

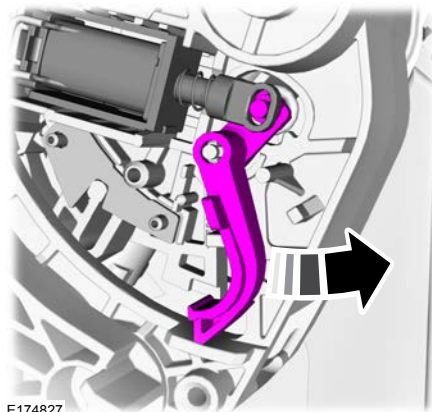

3. Push the brake shift interlock lever toward the rear of your vehicle and hold it there.

4. Move the selector lever from park (P) to neutral (N).
5. Install the panel.
6. Press the brake pedal, start the vehicle and release the parking brake.

Transmission Not in Park (P) Audible Warning

Sounds when you open the driver door and you have not moved the selector lever to park (P).

AUTOMATIC TRANSMISSION - 6-SPEED AUTOMATIC TRANSMISSION



WARNING: Do not apply the brake pedal and accelerator pedal simultaneously. Applying both pedals simultaneously for more than a few seconds will limit engine performance, which may result in difficulty maintaining speed in traffic and could lead to serious injury.



WARNING: When your vehicle is stationary, keep the brake pedal fully pressed when shifting gears. Failure to follow this instruction could result in personal injury, death or property damage.



WARNING: Apply the parking brake, shift into park (P), switch the ignition off and remove the key before you leave your vehicle. Failure to follow this instruction could result in personal injury or death.

Selector Lever Positions

The instrument cluster displays the current position.

Transmission

Park (P)

In park (P), power is not transmitted to the driven wheels and the transmission is locked. You can start the engine with the transmission in this position.

Shift into park (P) only when your vehicle is stationary.

Reverse (R)

Shift into reverse (R) only when your vehicle is stationary and the engine is at idle speed.

Neutral (N)



WARNING: In neutral (N) your vehicle has the ability to roll freely. If you intend to leave your vehicle, make sure you apply the parking brake.

In neutral (N), power is not transmitted to the driven wheels but the transmission is not locked. You can start the engine with the transmission in this position.

Drive (D)

Drive (D) is the normal position for driving.

Manual (M)

In manual (M), you can upshift or downshift using the buttons on the selector lever.

SelectShift™

About SelectShift™

Use this feature to upshift or downshift using the buttons on the selector lever.

Using SelectShift™

Shift into manual (M) to switch the feature on.

- Press the **+** button to upshift.
- Press the **-** button to downshift.

Shift into another gear to switch the feature off.

Brake Shift Interlock

About Brake Shift Interlock

Brake shift interlock prevents you from shifting out of park (P) when you have switched the ignition on and not pressed the brake pedal.

Shifting Out of Park (P)



WARNING: Do not drive your vehicle until you verify that the stoplamps are working.



WARNING: If the parking brake is fully released, but the brake warning lamp remains illuminated, the brakes may not be working properly. Have your vehicle checked as soon as possible.

Use the brake shift interlock lever to move the selector lever out of park (P) if you cannot start the engine.


In the event of an electrical malfunction, it is possible that a fuse has blown or the stoplamps are not working. See **Fuse Specification Chart** (page 256).

If the vehicle battery has no charge, jump start your vehicle. See **Jump Starting the Vehicle** (page 239).




WARNING: When doing this procedure, you need to take the transmission out of park (P) which means your vehicle can roll freely. To avoid unwanted vehicle movement, always fully apply the parking brake prior to doing this procedure. Use wheels chocks if appropriate.

Transmission

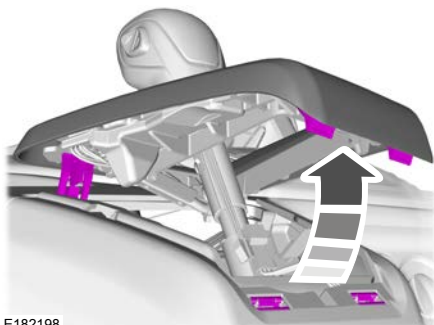


E182198

1. Using a flat-bladed screwdriver, remove the panel.

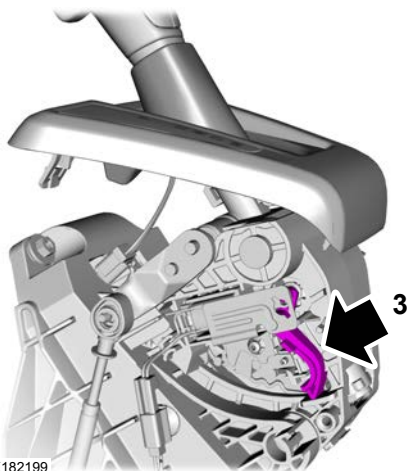

E182199

2. Locate the brake shift interlock lever.

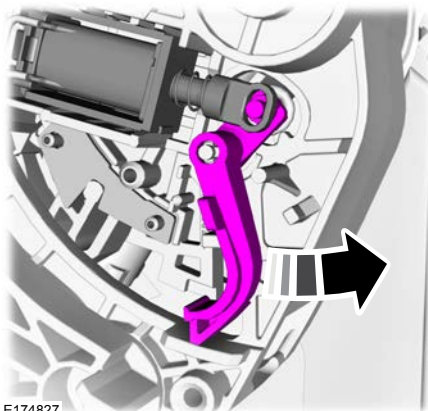

E174827

3. Push the brake shift interlock lever toward the rear of your vehicle and hold it there.
4. Move the selector lever from park (P) to neutral (N).
5. Install the panel.
6. Press the brake pedal, start the engine and release the parking brake.

Transmission Not in Park (P) Audible Warning

Sounds when you open the driver door and you have not moved the selector lever to park (P).

Transmission

Automatic Transmission Information Messages

Message	Description
Transmission malfunction Service now Transmission Service required	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.
Transmission overtemperature Stop safely Transmission overheating Stop safely Transmission too hot Press brake	The transmission is overheating and needs to cool. Stop your vehicle as soon as it is safe to do so, leave the engine running and allow the transmission to cool. Wait until the message disappears.
Transmission limited function See manual	The transmission has limited functionality. The system has detected a fault that requires service. Have your vehicle checked as soon as possible.
Transmission warming up Please wait	Displays at low outside temperatures, if it takes a few seconds for the transmission to engage a gear. Fully press the brake pedal until the message disappears.
Transmission not in Park	Displays as a reminder to shift into park (P).

Brakes

GENERAL INFORMATION

Note: Occasional brake noise is normal. If a metal-to-metal, continuous grinding or continuous squeal sound is present, the brake linings may be worn-out. If your vehicle has continuous vibration or shudder in the steering wheel while braking, have your vehicle checked by an authorized dealer.

Note: Brake dust may accumulate on the wheels, even under normal driving conditions. Some dust is inevitable as the brakes wear. See **Cleaning the Wheels** (page 316).

Note: Depending on applicable laws and regulations in the country for which your vehicle was originally built, the brake lamps may flash during heavy braking. Following this the hazard warning flashers may also flash when your vehicle comes to a stop.

Wet brakes result in reduced braking efficiency. Gently press the brake pedal a few times when driving from a car wash or standing water to dry the brakes.

Brake Over Accelerator

In the event the accelerator pedal becomes stuck or entrapped, apply steady and firm pressure to the brake pedal to slow the vehicle and reduce engine power. If you experience this condition, apply the brakes and bring your vehicle to a safe stop. Shift the transmission to park (P) (automatic transmission) or to a low gear (manual transmission), switch the engine off and apply the parking brake. Inspect the accelerator pedal and the area around it for any items or debris that may be obstructing its movement. If none are found and the condition persists, have your vehicle towed to the dealer for service.

Brake Assist

Brake assist detects when you brake heavily by measuring the rate at which you press the brake pedal. It provides maximum braking efficiency as long as you press the pedal. Brake assist can reduce stopping distances in critical situations.

Anti-lock Brake System

This system helps you maintain steering control and vehicle stability during emergency stops by keeping the brakes from locking.

HINTS ON DRIVING WITH ANTI-LOCK BRAKES

The anti-lock braking system does not eliminate the risks when:

- You drive too closely to the vehicle in front of you.
- Your vehicle is hydroplaning.
- You take corners too fast.
- The road surface is poor.

Note: If the system activates, the brake pedal may pulse and may travel further. Maintain pressure on the brake pedal. You may also hear a noise from the system. This is normal.

PARKING BRAKE - AUTOMATIC TRANSMISSION



WARNING: Always fully apply the parking brake and make sure you shift into park (P). Switch the ignition off and remove the key whenever you leave your vehicle.

To apply the parking brake:

1. Firmly press the brake pedal.

Brakes

2. Pull the parking brake lever upward to its fullest extent.

Note: Do not press the release button when pulling the parking brake lever upward.

Note: If you park your vehicle on a hill and facing uphill, shift into park (P) and turn the steering wheel away from the curb.

Note: If you park your vehicle on a hill and facing downhill, shift into park (P) and turn the steering wheel toward the curb.

To release the parking brake:

1. Firmly press the brake pedal.
2. Slightly pull the parking brake lever upward.
3. Press the release button and push the parking brake lever downward.

PARKING BRAKE - MANUAL TRANSMISSION



WARNING: Always set the parking brake fully.

Note: If you park your vehicle on a hill and facing uphill select first gear and turn the steering wheel away from the curb.

Note: If you park your vehicle on a hill and facing downhill select reverse gear and turn the steering wheel toward the curb.

Note: Do not press the release button while pulling the lever up.

To apply the parking brake:

1. Press the foot brake pedal firmly.
2. Pull the parking brake lever up to its fullest extent.

To release the parking brake:

1. Press the brake pedal firmly.
2. Pull the lever up slightly.

3. Press the release button and push the lever down.

HILL START ASSIST



WARNING: The system does not replace the parking brake. When you leave your vehicle, always apply the parking brake.



WARNING: You must remain in your vehicle when the system turns on. At all times, you are responsible for controlling your vehicle, supervising the system and intervening, if required. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.



WARNING: The system will turn off if a malfunction is apparent or if you rev the engine excessively. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.

The system makes it easier to pull away when your vehicle is on a slope without the need to use the parking brake.

When the system is active, your vehicle will remain stationary on the slope for two to three seconds after you release the brake pedal. This allows time to move your foot from the brake to the accelerator pedal. The system releases the brakes automatically once the engine has developed sufficient drive to prevent your vehicle from rolling down the slope. This is an advantage when pulling away on a slope, for example from a car park ramp, traffic lights or when reversing uphill into a parking space.

Note: The system will not operate if the parking brake is applied.

Brakes

Note: *There is no warning light to indicate the system is either on or off.*

Using Hill Start Assist

1. Press the brake pedal to bring your vehicle to a complete standstill. Keep the brake pedal pressed.
2. If the sensors detect that your vehicle is on a slope, the system will activate automatically.
3. When you remove your foot from the brake pedal, your vehicle will remain on the slope without rolling away for approximately two to three seconds. This hold time will automatically be extended if you are in the process of driving off.
4. Drive off in the normal manner. The system will release the brakes automatically.

Note: *When you remove your foot from the brake pedal and press the pedal again when the system is active, you will experience significantly reduced brake pedal travel. This is normal.*

Switching the System On and Off

Vehicles with Manual Transmission

You can switch this feature on or off in the information display. The system remembers the last setting when you start your vehicle.

Vehicles with Automatic Transmission

You cannot turn the system on or off. When you switch the ignition on, the system automatically turns on.

Traction Control

PRINCIPLE OF OPERATION

The traction control system helps avoid drive wheel spin and loss of traction.

If your vehicle begins to slide, the system applies the brakes to individual wheels and, when needed, reduces engine power at the same time. If the wheels spin when accelerating on slippery or loose surfaces, the system reduces engine power in order to increase traction.

USING TRACTION CONTROL

The system automatically turns on each time you switch the ignition on.

If your vehicle is stuck in mud or snow, switching traction control off may be beneficial as this allows the wheels to spin.

When you switch traction control off, stability control remains fully active.

Switching the System Off and On Using the Information Display Controls

If required, you can switch this feature off using the information display controls. See **General Information** (page 87).

Switching the System Off Using the Switch (If Equipped)

The location of the switch is on the instrument panel.

Press the switch. You will see a message in conjunction with an illuminated icon in the display. Press the switch again to return the system to normal mode.

Stability Control

PRINCIPLE OF OPERATION


Electronic Stability Control



WARNING: The system is designed to aid the driver. It is not intended to replace your attention and judgment. You are still responsible to drive with due care and attention.

The system supports stability when your vehicle starts to slide away from your intended path. The system does this by braking individual wheels and reducing engine torque.

The system also provides an enhanced traction control function by reducing engine torque if the wheels spin when you accelerate. This helps to pull away on slippery roads or loose surfaces, and improves comfort by limiting wheel spin in hairpin bends.

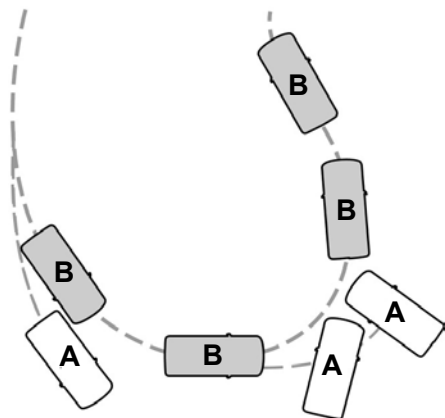

E72903

- A Without ESC.
- B With ESC.

Stability Control Warning Lamp



Flashes during operation. See **Warning Lamps and Indicators** (page 81).

Side-Wind Stabilization (If Equipped)

The system applies the brakes on one side of your vehicle to reduce the effect of a sudden side-wind gust on your vehicle's path. When the system turns on, the stability and traction control light flashes, and a message may appear in the information display. You may notice a slight deceleration and may still need to make a steering correction to maintain the intended vehicle path. The system does not turn on for a continuous side-wind or during turns.

USING STABILITY CONTROL

Note: The system automatically turns on each time you switch the ignition on.

You can switch the traction control system off and on. See **Using Traction Control** (page 176).

Parking Aids (If Equipped)

PRINCIPLE OF OPERATION



WARNING: The system may not detect objects with surfaces that absorb reflection. Always drive with due care and attention. Failure to take care may result in a crash.



WARNING: To help avoid personal injury, always use caution when in reverse (R) and when using the sensing system.



WARNING: Traffic control systems, inclement weather, air brakes, external motors and fans may affect the correct operation of the sensing system. This may cause reduced performance or false alerts.



WARNING: The system may not detect small or moving objects, particularly those close to the ground.

Note: Some accessories such as large trailer hitches, bike or surfboard racks can cause reduced performance or false alerts.

Note: Keep the sensors free from snow, ice and large accumulations of dirt. Blocked sensors may affect system accuracy. Do not clean the sensors with sharp objects.

Note: If your vehicle sustains damage leaving the sensors misaligned, this will cause inaccurate measurements or false alerts.

Note: The sensing system cannot be turned off when a MyKey is present. See **Principle of Operation** (page 47).

We recommend that you take some time to get to know the system and its limitations by reading this section.

The sensing system warns the driver of obstacles within a certain range of your vehicle. The system automatically turns on each time you switch the ignition on.



You can turn the system on or off by pressing the parking aid button. If your vehicle does not have a parking aid button, the system can be switched off through the information display menu or from the pop-up message that appears once you shift the transmission into reverse (R). See **General Information** (page 87).

If a fault is present in the system, a warning message appears in the information display and does not allow you to switch the system on.

See **Information Messages** (page 92).

REAR PARKING AID



WARNING: The system may not detect objects with surfaces that absorb reflection. Always drive with due care and attention. Failure to take care may result in a crash.



WARNING: The system may not detect small or moving objects, particularly those close to the ground.



WARNING: To help avoid personal injury, always use caution when in reverse (R) and when using the sensing system.



WARNING: The parking aid system can only assist you to detect objects when your vehicle is moving at parking speeds. To help avoid personal injury you must take care when using the parking aid system.

Parking Aids (If Equipped)

If the system malfunctions, a message appears in the information display.

Note: Keep the sensors free from snow, ice and large accumulations of dirt.

Note: Do not cover up the sensors.

Note: Do not clean the sensors with sharp objects.

Note: If your vehicle sustains damage leaving the sensors misaligned, this may cause inaccurate measurements or false alerts.

Note: Some add-on accessories, for example large trailer hitches or bike or surfboard racks can cause reduced performance or false alerts.

The sensors are active when the transmission is in reverse (R) and the vehicle speed is less than 5 km/h (3 mph). When the parking aid system sounds a tone, the audio system may reduce the set volume.

A warning tone sounds when an object approaches your vehicle. As your vehicle moves closer to an object, the rate of the tone increases. The warning tone continuously sounds when an object is 30 cm (12 in) or less from the center of the rear bumper.

Note: There is a decreased coverage area at the outer corners.



Sensor coverage area is up to 180 cm (70 in) from the rear bumper.

The system detects large objects when you shift into reverse (R) and any of the following occur:

- Your vehicle is moving backward at low speed.
- Your vehicle is stationary but an object is approaching the rear of your vehicle at low speed.
- Your vehicle is moving backward at low speed and an object is moving toward your vehicle, for example another vehicle at low speed.

If your vehicle remains stationary for two seconds the audible warning turns off. If your vehicle moves backward the tone sounds again.

Note: If the detected object is 30 cm (12 in) or less from the rear bumper, the audible warning does not turn off.

Object Distance Indicator (If Equipped)

When you shift into reverse (R), the system provides object distance indication through the information display.

Parking Aids (If Equipped)

- As the distance to the object decreases, the indicator blocks illuminate and move toward the vehicle icon.
- If there is no object detected, the distance indicator blocks are gray.

Rear Parking Aid Information Messages

Message	Description
Park Pilot malfunction	The system has malfunctioned. Have your vehicle checked as soon as possible.
Check Park Pilot	The system has malfunctioned. Have your vehicle checked as soon as possible.
Check rear Park Pilot	The system has malfunctioned. Have your vehicle checked as soon as possible.
Rear Park Pilot not available Sensor blocked See manual	A sensor is blocked or the system has malfunctioned. Clean the bumper or remove any obstruction. If the message continues to appear, have your vehicle checked as soon as possible.

FRONT PARKING AID



WARNING: The system may not detect objects with surfaces that absorb reflection. Always drive with due care and attention. Failure to take care may result in a crash.



WARNING: The system may not detect small or moving objects, particularly those close to the ground.



WARNING: The parking aid system can only assist you to detect objects when your vehicle is moving at parking speeds. To help avoid personal injury you must take care when using the parking aid system.

The sensors are on the front bumper.

Note: Keep the sensors free from snow, ice and large accumulations of dirt.

Note: Do not cover up the sensors.

Note: Do not clean the sensors with sharp objects.

Note: If your vehicle sustains damage leaving the sensors misaligned, this may cause inaccurate measurements or false alerts.

The sensors are active when the transmission is in any position other than park (P). When the parking aid system sounds a tone, the audio system may reduce the set volume.

A warning tone sounds when an object approaches your vehicle. As your vehicle moves closer to an object, the rate of the tone increases. The warning tone continuously sounds when an object is 30 cm (12 in) or less from the front bumper.

The system turns off when the vehicle speed reaches 8 km/h (5 mph).

Parking Aids (If Equipped)



Sensor coverage area is up to 70 cm (28 in) from the center of the bumper.

If the transmission is in reverse (R), the system detects objects when your vehicle is moving at low speed or an object is moving toward your vehicle, for example another vehicle at low speed. When you stop your vehicle, the audible warning turns off after two seconds.

If the transmission is in any forward gear, the system provides audible warnings when your vehicle is moving and an object is within the detection area. When you stop your vehicle, the audible warning turns off after two seconds and the visual warning turns off after four seconds.



Press the parking aid button to switch the system off.

If the system malfunctions, a message appears in the information display.

Object Distance Indicator (If Equipped)

The system provides object distance indication through the information display.

- As the distance to the object decreases, the indicator blocks illuminate and move toward the vehicle icon.
- If there is no object detected, the distance indicator blocks are gray.

When you shift into reverse (R), the system provides audio warnings and visual indication when your vehicle is moving and the detected object is moving toward your vehicle. When you stop your vehicle, the audio warnings stop after two seconds. Visual indication remains on when the transmission is in reverse (R).

When you shift into any forward gear, the system provides audio warnings and visual indication when your vehicle is moving at a speed of approximately 8 km/h (5 mph) or below and the system detects an object within the detection zone. When you stop your vehicle, the audio warnings stop after two seconds and visual indication stops after four seconds.

Note: *If the detected object is 30 cm (12 in) or less from your vehicle, visual indication remains on.*

When you shift into neutral (N), the system only provides visual indication if your vehicle is moving at a speed of approximately 8 km/h (5 mph) or below, for example, your vehicle is moving on a slope, and the system detects an object moving toward your vehicle. When you stop your vehicle, visual indication stops after four seconds.

Parking Aids (If Equipped)

Front Parking Aid Information Messages

Message	Description
Park Pilot malfunction	The system has malfunctioned. Have your vehicle checked as soon as possible.
Check Park Pilot	The system has malfunctioned. Have your vehicle checked as soon as possible.
Check front Park Pilot	The system has malfunctioned. Have your vehicle checked as soon as possible.
Front Park Pilot not available sensor blocked See Manual	A sensor is blocked or the system has malfunctioned. Clean the bumper or remove any obstruction. If the message continues to appear, have your vehicle checked as soon as possible.

SIDE SENSING SYSTEM



WARNING: The system may not detect objects with surfaces that absorb reflection. Always drive with due care and attention. Failure to take care may result in a crash.



WARNING: The system may not detect small or moving objects, particularly those close to the ground.



WARNING: To help avoid personal injury, always use caution when in reverse (R) and when using the sensing system.



WARNING: The parking aid system can only assist you to detect objects when your vehicle is moving at parking speeds. To help avoid personal injury you must take care when using the parking aid system.

The system uses the front and rear outermost parking aid sensors to detect objects that are near to the sides of your vehicle. The system displays them on a virtual map in the information display as your vehicle moves past them.

The sensors are on the front and rear bumpers.

Note: *Keep the sensors free from snow, ice and large accumulations of dirt.*

Note: *Do not cover up the sensors.*

Note: *Do not clean the sensors with sharp objects.*

Note: *If your vehicle sustains damage leaving the sensors misaligned, this may cause inaccurate measurements or false alerts.*

The system may not function if:

- You switch the ignition on, off and back on within a few seconds.
- Your vehicle remains stationary for over two minutes.
- The anti-lock brake system activates.
- The traction control system activates.

Note: *If you switch traction control off, the side sensing system also turns off.*

Parking Aids (If Equipped)

Note: Some accessories, for example large trailer hitches or bike or surfboard racks can cause reduced performance or false alerts.

To reinitialize the system, you may have to drive your vehicle approximately 3 m (10 ft).



The sensor coverage area is up to 60 cm (24 in) from the side of your vehicle.

When the system detects an object within the coverage area and the driving path of your vehicle, an audible warning sounds. As your vehicle moves closer to the object, the rate of the tone increases.

Note: The system does not detect an object that is moving toward the side of your vehicle, for example another vehicle moving at low speed, if it does not pass a front or rear sensor.

Object Distance Indicator (If Equipped)



The system provides object distance indication through the information display.

- As the distance to the object decreases, the indicator blocks illuminate and move toward the vehicle icon.
- If there is no object detected, the distance indicator blocks are gray.

When you shift into reverse (R), the system provides audible warnings and a visual indication when detected objects are within 60 cm (24 in) and are inside the driving path of your vehicle. When you stop your vehicle, the audible warnings turn off after two seconds.

Parking Aids (If Equipped)

When you shift into any forward gear, the system provides audible warnings and a visual indication when your vehicle is moving at a speed of approximately 8 km/h (5 mph) or below and the system detects an object within the detection zone. When you stop your vehicle, the audible warnings turn off after two seconds and the visual indication turns off after four seconds.

When you shift into neutral (N), the system only provides a visual indication if your vehicle is moving at a speed of approximately 8 km/h (5 mph) or below. For example, your vehicle is moving on a slope, and the system detects an object moving toward your vehicle. When you stop your vehicle, the visual indication turns off after four seconds.

If the system is not available, the side distance indicator blocks do not display.

ACTIVE PARK ASSIST

The system assists parking into and out of parking spaces. Sensors are used to detect parking spaces. The system then steers as required to maneuver into or out of a parking space. You control the accelerator, brakes and changing gears.

Using Active Park Assist



WARNING: You must remain in your vehicle when the system turns on. At all times, you are responsible for controlling your vehicle, supervising the system and intervening, if required. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.



WARNING: The sensors may not detect objects in heavy rain or other conditions that cause interference.



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



The active park assist button is located on the instrument panel.

Driving into a Parking Space

1. Press the active park assist button.

Note: The system searches for parallel parking spaces on the passenger side. Press the active park assist button again to make the system search for perpendicular spaces.

2. Use the direction indicator lever to search for a parking space on the driver or passenger side of your vehicle.
3. Drive your vehicle approximately 1 m (3 ft) away from and parallel to the other parked vehicles when searching for a parking space.

Note: A tone sounds and a message appears in the information display when active park assist finds a suitable parking space.

4. Bring your vehicle to a complete standstill.
5. Release the steering wheel and shift into reverse (R).
6. Drive backward and your vehicle steers itself into the parking space.
7. Follow the instructions on the information display.

Note: When parking is complete, a tone sounds and an information message appears.

Parking Aids (If Equipped)

Leaving a Parking Space

The system assists leaving only parallel parking spaces.

1. Press the active park assist button.
2. Use the direction indicator lever to choose the direction to leave.
3. Release the steering wheel and shift into reverse (R).
4. Follow the instructions on the information display.

Note: After the system drives your vehicle to a position where you can exit the parking space in a forward movement, a message appears instructing you to take full control of your vehicle.

Canceling Active Park Assist

To cancel parking assistance at any time, press the active park assist button or turn the steering wheel.

Note: It also cancels when your vehicle exceeds 9 km/h (6 mph).

Brake System Intervention

When active park assist is controlling the steering, it may under certain conditions apply the brakes to slow or stop your vehicle.

Note: This could cause the parking assistance to cancel.

Active Park Assist Troubleshooting

Symptom	Possible Cause
The system does not search for a parking space.	You may have switched traction control off.
	The transmission is in reverse (R). Your vehicle must be moving forward to be able to detect a parking space.
The system does not offer a parking space.	The sensors may be blocked. For example, snow, ice or large accumulations of dirt. Blocked sensors can affect how the system functions.
	The sensors in the front or rear bumper could be damaged.
	There is not enough room in the parking space for your vehicle to safely park.
	There is not enough space for the parking maneuver on the opposite side of the parking space.
	The parking space is more than 1.5 m (5 ft) or less than 0.5 m (2 ft) away.
	The vehicle speed is greater than 35 km/h (22 mph) for parallel parking or greater than 30 km/h (19 mph) for perpendicular parking.

Parking Aids (If Equipped)

Symptom	Possible Cause
	You recently disconnected or replaced the battery. After you reconnect the battery you must drive your vehicle on a straight road for a short period of time.
The system does not correctly position your vehicle in a parking space.	An irregular curb along the parking space prevents the system from correctly aligning your vehicle.
	Vehicles or objects bordering the space may not be correctly parked.
	Your vehicle stopped too far past the parking space.
	The tires may not be correctly installed or maintained. For example, not inflated correctly, improper size, or of different sizes.
	A repair or alteration changes the detection capabilities.
	A parked vehicle has a high attachment. For example, a salt sprayer, snowplow or moving truck bed.
	The parking space length or position of parked objects changes after your vehicle passes the space.
	You are using a spare tire or a tire that is significantly worn more than the other tires.
	The temperature around your vehicle quickly changes. For example, driving from a heated garage into cold outside temperature, or after leaving a car wash.

REAR VIEW CAMERA



WARNING: The rear view camera system is a reverse aid supplement device that still requires the driver to use it in conjunction with the interior and exterior mirrors for maximum coverage.



WARNING: Objects that are close to either corner of the bumper or under the bumper, might not be seen on the screen due to the limited coverage of the camera system.



WARNING: Reverse your vehicle slowly. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: To help avoid personal injury always use caution when in reverse (R) and when using the rear view camera.



WARNING: Do not switch the camera features on or off when your vehicle is moving.


Parking Aids (If Equipped)

The rear view camera provides an image of the area behind your vehicle. During operation, lines appear in the display that represents the path of your vehicle and proximity to objects behind it.

Rear View Camera Positions



WARNING: Use caution when the rear cargo door is ajar. If the rear cargo door is ajar, the camera will be out of position and the video image may be incorrect. All guidelines disappear when the rear cargo door is ajar. Failure to follow this instruction could result in personal injury.

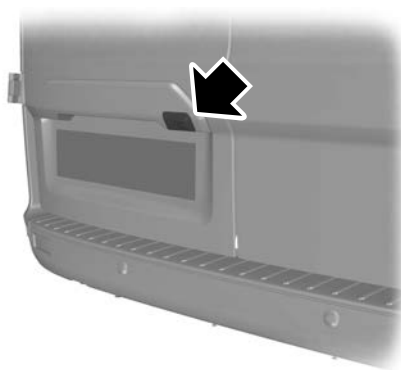

E142833



E142834

The camera is on the rear cargo door or liftgate.

Using the Rear View Camera

The rear view camera system displays what is behind your vehicle when you shift the transmission into reverse (R).

Note: When towing, the camera only sees what you are towing. In some vehicles, the guidelines may disappear when you connect the trailer tow connector.

The system may not correctly operate in any of the following conditions:

- Nighttime or dark areas if the reverse lamps are not operating.
- If the camera is obstructed. Clean the lens with a soft, lint-free cloth and non-abrasive cleaner.
- The camera is misaligned due to damage to the rear of your vehicle.


Rear View Camera Guidelines



WARNING: Objects above the camera may not be visible. Check the area behind your vehicle when necessary.

Parking Aids (If Equipped)

The system uses three types of guidelines to help you see what is behind your vehicle:

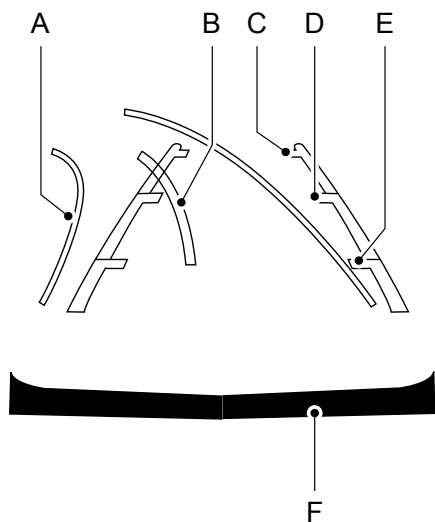

E142436

- A Active guidelines. Show the intended path of your vehicle when reversing.
- B Centerline. Helps you align the center of your vehicle with a trailer.
- C Fixed guidelines. Show the actual path of your vehicle when reversing in a straight line. Green zone.
- D Fixed guidelines. Show the actual path of your vehicle when reversing in a straight line. Yellow zone.

- E Fixed guidelines. Show the actual path of your vehicle when reversing in a straight line. Red zone.

- F Rear bumper.

Note: Active guidelines are only available when the transmission is in reverse (R).

Active guidelines are only available with fixed guidelines. To use active guidelines, turn the steering wheel to point the guidelines toward an intended path. If you change the steering wheel position when reversing, your vehicle might deviate from the original intended path.

Note: Guidelines do not display if the rear cargo door is open.

The fixed and active guidelines fade in and out depending on the steering wheel position. When the steering wheel position is straight the active guidelines do not display. Objects in the red zone are closest to your vehicle and objects in the green zone are further from your vehicle.

Manual Zoom



WARNING: When manual zoom is on, the full area behind your vehicle may not show. Be aware of your surroundings when using the manual zoom feature.

Press the zoom in or zoom out symbol to change the view.

Note: Manual zoom is only available when you shift into reverse (R).

Note: The rear bumper remains in the image as a reference point.

Note: Only the centerline shows when you switch on manual zoom.

Parking Aids (If Equipped)

System Settings

You can adjust the camera settings using the touchscreen. See **Settings** (page 410).

Rear View Camera Delay

You can switch this feature on or off using the vehicle settings menu. The default setting is off. See **Settings** (page 410).

If you switch this feature on, the image continues to display when you shift from reverse (R) until:

- The vehicle speed sufficiently increases.
- You shift your vehicle into park (P).
- You apply the parking brake on vehicles with a manual transmission.

Enhanced Parking Aids or Park Pilot (If Equipped)

You can switch this feature on or off using the vehicle settings menu. See **Settings** (page 410).

The system shows an image of your vehicle and the sensing zones. When the reverse sensing system detects an object, the zones display red, yellow and green indicators to indicate the proximity of the object.

Cruise Control

PRINCIPLE OF OPERATION



WARNING: The system does not relieve you of your responsibility to drive with due care and attention.

Cruise control allows you to control your speed using the switches on the steering wheel. You can use cruise control when you exceed approximately 30 km/h (19 mph).

USING CRUISE CONTROL



WARNING: Do not use cruise control on winding roads, in heavy traffic or when the road surface is slippery. This could result in loss of vehicle control, serious injury or death.



WARNING: When you are going downhill, your vehicle speed could increase above the set speed. The system does not apply the brakes.

Your vehicle speed could decrease below the set speed when driving uphill. To help the system to maintain the set speed when going uphill, downshift to a lower gear.

Note: The system cancels if your vehicle speed drops below 16 km/h (10 mph) under the set speed when driving uphill.

To help the system to maintain the set speed when going downhill, downshift to a lower gear.

The cruise controls are on the steering wheel.

Switching the System On



Press the button.

The indicator appears when you switch the system on.

Switching the System Off

Press and release the cruise control icon, when the system is in standby mode or switch the ignition off.

Note: You erase the set speed when you switch the system off.

Setting the Cruise Speed

Drive to the desired speed.

SET+

Press the toggle button upward to set the current speed.

SET-

Press the toggle button downward to set the current speed.

Take your foot off the accelerator pedal.

Note: The set speed appears in the information display.

Changing the Set Speed

SET+

Press the toggle button upward to increase the set speed.

SET-

Press the toggle button downward to decrease the set speed.

The set speed changes in small increments.

Note: Press and hold the toggle button upward or downward to change the set speed in larger increments.

Note: If you accelerate by pressing the accelerator pedal, the set speed will not change. When you release the accelerator pedal, your vehicle returns to the speed that you previously set.

Cruise Control

Canceling the Set Speed

CAN

Press the button, or tap the brake pedal to cancel the set speed.

Note: *The set speed is stored.*

Resuming the Set Speed

RES

Press to resume the set speed.

USING ADAPTIVE CRUISE CONTROL



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: Pay close attention to changing road conditions such as entering or leaving a highway, on roads with intersections or roundabouts, roads without visible lanes of travel, roads that are winding, slippery, unpaved, or steep slopes.



WARNING: The system may not detect stationary or slow moving vehicles below 10 km/h (6 mph).



WARNING: Do not use the system when towing a trailer that has aftermarket electronic trailer brake controls. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: The system is not a crash warning or avoidance system.



WARNING: The system does not detect pedestrians or objects in the road.



WARNING: The system does not detect oncoming vehicles in the same lane.



WARNING: Do not use the system in poor visibility, for example fog, heavy rain, spray or snow.



WARNING: Do not use tire sizes other than those recommended because this can affect the normal operation of the system. Failure to do so may result in a loss of vehicle control, which could result in serious injury.

The system adjusts the vehicle speed to maintain the set gap between you and the vehicle in front of you in the same lane. You can select four gap settings.

The system uses a radar that projects a beam directly in front of your vehicle.



E248321

The adaptive cruise controls are on the steering wheel.

Cruise Control

Switching Adaptive Cruise Control On



Press to set the system in standby mode.



E260516

The indicator, current gap setting and set speed appear in the information display.

Setting the Adaptive Cruise Speed

Drive to the required speed.



Press the toggle button upward to set the current speed.

Take your foot off the accelerator pedal.

The indicator, current gap setting and set speed appear in the information display.



E249552

A vehicle graphic appears in the information display if the system detects a vehicle in front of you.

Note: When adaptive cruise control is active, the speedometer may vary slightly from the set speed displayed in the information display.

Following a Vehicle



WARNING: When following a vehicle that is braking, your vehicle does not always decelerate quickly enough to avoid a crash without driver intervention. Apply the brakes when necessary. Failure to follow this instruction could result in personal injury or death.



WARNING: The system only warns of vehicles detected by the radar sensor. In some cases there may be no warning or a delayed warning. Apply the brakes when necessary. Failure to follow this instruction could result in personal injury or death.

When a vehicle ahead of you enters the same lane or a slower vehicle is ahead in the same lane, the vehicle speed adjusts to maintain a preset gap distance. A vehicle graphic appears in the information display.

Note: When you are following a vehicle and you switch on a direction indicator, adaptive cruise control may provide a small temporary acceleration to help you pass.

Your vehicle maintains a consistent gap from the vehicle ahead until:

- The vehicle in front of you accelerates to a speed above the set speed.
- The vehicle in front of you moves out of the lane you are in.
- You set a new gap distance.

The system applies the brakes to slow your vehicle to maintain a safe gap distance from the vehicle in front. The system only applies limited braking. You can override the system by applying the brakes.

If the system determines that its maximum braking level is not sufficient, an audible warning sounds when the system continues to brake. Take immediate action.

Cruise Control

Note: The brakes may emit noise when applied by the system.

Setting the Gap Distance



You can decrease or increase the distance between your vehicle and the vehicle in front by pressing the gap control.

Note: It is your responsibility to select a gap appropriate to the driving conditions.



The selected gap appears in the information display as shown by the bars in the image. You can select four gap settings.

Adaptive Cruise Control Distance Between Vehicle Settings

Set Speed km/h (mph)	Graphic Display - Bars Indicated Between Vehicles	Time Gap - Seconds	Distance Gap m (yd)	Dynamic Beha- vior
100 (62)	1	1	28 (31)	Sport.
100 (62)	2	1.4	39 (43)	Normal.
100 (62)	3	1.8	50 (55)	Normal.
100 (62)	4	2.2	61 (67)	Comfort.

When you switch the ignition on, the system selects the last chosen gap setting.

Overriding the System



WARNING: If you override the system by pressing the accelerator pedal, it does not automatically apply the brakes to maintain a gap from any vehicle ahead.

Use the accelerator pedal to intentionally exceed the set speed limit.

When you override the system, the vehicle graphic disappears from the information display.

Changing the Set Speed

SET+

Press the toggle button upward to increase the set speed.

SET-

Press the toggle button downward to decrease the set speed.

You can adjust the set speed in small or large increments. Press the toggle button upward or downward once to adjust the set speed in small increments. Press and hold the toggle button upward or downward to adjust the set speed in large increments.

Cruise Control

The system may apply the brakes to slow your vehicle to the new set speed. The set speed continuously displays in the information display when the system is active.

Canceling the Set Speed

CAN Press the button, or tap the brake pedal.

The last set speed displays with a strikethrough and the last gap setting appears but does not erase.

Note: The set speed also cancels if you press the clutch pedal for an extended period.

Resuming the Set Speed

RES Press the button.

The vehicle speed returns to the previously set speed and gap setting. The set speed continuously shows in the information display when the system is active.

Note: Only use resume if you are aware of the set speed and intend to return to it.

Automatic Cancellation

The system does not operate if the vehicle speed is below 20 km/h (12 mph). A tone sounds and adaptive braking releases if the vehicle speed falls below 20 km/h (12 mph).

Automatic cancellation can also occur when:

- The tires lose traction.
- The engine speed is too low.
- You apply the parking brake.

Note: If the engine speed drops too low, the information display advises you to shift to a lower gear.

Hilly Condition Usage

Select a lower gear when the system is active and you are driving downhill on steep grades, for example in mountainous areas. The system needs additional engine braking in these situations to reduce the load on the brake system to prevent it from overheating.

Note: A tone sounds and the system turns off if it applies brakes for an extended period of time. This allows the brakes to cool. The system operates after the brakes cool.

Switching Adaptive Cruise Control Off

 Press the button.

Note: The set speed erases when you switch the system off.

Detection Issues



WARNING: On rare occasions, detection issues can occur due to the road infrastructures, for example bridges, tunnels and safety barriers. In these cases, the system may brake late or unexpectedly. At all times, you are responsible for controlling your vehicle, supervising the system and intervening, if required.




WARNING: If the system malfunctions, have your vehicle checked as soon as possible.

The radar has a limited field of view. It does not detect all vehicles in all situations and could detect vehicles later than you expect. The lead vehicle graphic does not display if the system does not detect a vehicle in front of you.

Cruise Control


A



B



C

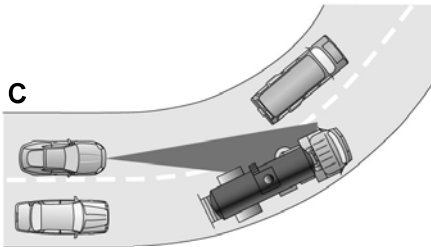

Detection issues can occur:

- A When driving on a different line than the vehicle in front.
- B With vehicles that edge into your lane. The system can only detect these vehicles once they fully move into your lane.
- C There may be issues with the detection of vehicles in front when driving into and coming out of a bend or curve in the road.

In these cases, the system may brake late or unexpectedly. You should stay alert and take action when necessary.

If something hits the front of your vehicle or damage occurs, the radar-sensing zone may change. This could cause the system to malfunction. Have your vehicle checked as soon as possible.

System Not Available


The system may not turn on if there is:

- A blocked sensor.
- High brake temperature.
- A failure in the system or a related system.

Adaptive Cruise Control System Sensors



WARNING: The system may not operate properly if the sensor is blocked. Keep the windshield free from obstruction.

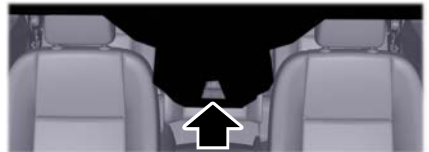

E243054

The camera is mounted behind the interior mirror.

Cruise Control



E244279

The radar is behind the front grille below the license plate.

A message displays if something obstructs the radar signals from the sensor. The system cannot detect a vehicle ahead and does not function when something blocks the sensor.

Note: You cannot see the sensor, it is behind a fascia panel.

Note: Keep the front of your vehicle free of dirt, metal badges or objects. Vehicle front protectors, aftermarket lights, additional paint or plastic coatings could also degrade sensor performance.

Cause	Action
The surface of the radar in the radiator grille is dirty or obstructed.	Clean the radiator grille in front of the radar or remove any obstruction.
The surface of the radar is clean but the message remains in the display.	Wait a short period of time. It may take several minutes for the radar to detect that it is free from obstruction.
Heavy rain or snow interfere with the radar signals.	Do not use the system in these conditions because it may not detect any vehicles ahead.
Swirling water, snow or ice on the surface of the road interfere with the radar signals.	Do not use the system in these conditions because it may not detect any vehicles ahead.
You are in a desert or remote area with no other vehicles and no roadside objects.	Wait a short period of time or switch to normal cruise control.

Due to the nature of radar technology, a blocked sensor message could display when the sensor is not blocked. This can happen, for example, when driving in sparse rural or desert environments. A false blocked condition self clears or clears after you switch the ignition off and on.

Switching to Normal Cruise Control



WARNING: Normal cruise control will not brake when your vehicle is approaching slower vehicles. Always be aware of which mode you have selected and apply the brakes when necessary.

Cruise Control

You can change from adaptive cruise control to cruise control using the information display.

To switch between adaptive cruise control and normal cruise control, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Driver assist.	Press the menu button.
Cruise control	Press the OK button.
Mode	Press the OK button. Press the toggle button upward or downward to choose your required setting. Press the OK button.



The cruise control indicator replaces the adaptive cruise control indicator if you select normal cruise control. The gap setting does not display, the system does not automatically respond to lead vehicles and adaptive braking does not activate. The system remembers the last setting when you start your vehicle.

Adaptive Cruise Control Indicator



The indicator appears when you switch the system on.

The indicator appears in the information display when the system is in standby mode and when you set the adaptive cruise speed.

Adaptive Cruise Control Information Messages

Message	Action
Adaptive cruise control not available Sensor blocked See manual	The radar has reduced visibility.
Adaptive cruise control not available	The system is not available.
Adaptive cruise control malfunction	The system has malfunctioned. Have your vehicle checked as soon as possible.
Cruise control active Adaptive braking off	You have switched normal cruise control on. Adaptive braking turns off.

Cruise Control

Adaptive Cruise Control With Speed Sign Recognition (If Equipped)



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.

The system combines speed sign recognition with adaptive cruise control. The system allows you to set the vehicle speed to the speed limit detected by the speed sign recognition system. For example, if the speed sign recognition system detects a 80 km/h (50 mph) speed limit, the vehicle speed is set to 80 km/h (50 mph).

To switch between the cruise control modes, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Driver assist.	Press the menu button.
Cruise control	Press the OK button.
Mode	Press the OK button. Press the toggle button upward or downward to choose your required setting. Press the OK button.

Intelligent Mode



E265663

Note: The system does not set the vehicle speed to speed limits shown with a supplementary traffic sign in the information display.

Note: You can override the set speed at any time.

Note: The adaptive cruise control gap setting normally operates.

Switching Between the Cruise Control Modes

You can change between the cruise control modes using the information display.

If you select this mode, a bracket appears around the set speed and the detected speed limit sign in the information display. The system is designed to set the vehicle speed to the speed limit detected by the speed sign recognition system before your vehicle passes the speed limit sign.

Under certain conditions, the system may not adjust the vehicle speed until after your vehicle passes the speed limit sign.

Cruise Control

Note: The set speed adjusts when the system detects a different maximum speed limit.

If the system does not detect a speed limit, the vehicle speed remains at the current set speed.

Automatic Cancellation

If the speed sign recognition system detects a speed limit below the minimum adaptive cruise control set speed, a tone sounds and the system returns to standby mode.

To adjust the speed tolerance setting, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Driver assist.	Press the menu button.
Cruise control	Press the OK button.
Tolerance	Press the OK button. Press the toggle button upward or downward to choose your required speed setting. Press the OK button.

Adaptive Mode

If you select this mode, adaptive cruise control operates with manual set speed input. The system does not set the vehicle speed to the speed limit detected by the speed sign recognition system.

Normal Mode

If you select this mode, normal cruise control operates. The gap setting does not display, the system does not automatically respond to lead vehicles and adaptive braking does not activate.

Adaptive Cruise Control With Speed Sign Recognition Information Messages

Message	Action
Adaptive cruise control Speed sign recognition not available	Navigation system based speed limit information is not available. If the message continues to appear, have your vehicle checked as soon as possible.

Driving Aids

SPEED LIMITER

Principle of Operation



WARNING: When you are going downhill, your vehicle speed could increase above the set speed. The system does not apply the brakes.



WARNING: The system is designed to aid the driver. It is not intended to replace your attention and judgment. You are still responsible to drive with due care and attention.

The system allows you to set a speed to which your vehicle becomes limited. The set speed sets the effective maximum speed of your vehicle. You can temporarily exceed the set speed if required, for example to overtake.

Using Speed Limiter

The controls are on the steering wheel.

Switching the System On and Off

LIM

Press to set the system in standby mode. Press again to switch the system off.

Setting the Speed Limiter

SET+

Press the toggle button upward or downward with the system in standby mode to set the speed limiter to the current vehicle speed. The set speed is stored and displayed in the information

display.

SET-

You can adjust the set speed in small or large increments. Press the toggle button upward or downward once to adjust the set speed in small increments. Press and hold the toggle button upward or downward to adjust the set speed in large increments.

Canceling the Set Speed

CAN

Press to cancel the set speed limiter. The system returns to standby mode.

Resuming the Set Speed

RES

Press to resume the set speed limiter.

Intentionally Exceeding the Speed Limit

Firmly press the accelerator pedal to temporarily exceed the set speed limit. The system resumes when the vehicle speed drops below the set speed limit, or when you press the **RES** button.

System Warnings

If you intentionally exceed the set speed, a warning appears in the information display.

If you unintentionally exceed the set speed, for example when you are going downhill, a warning appears in the information display and a tone sounds.

INTELLIGENT SPEED LIMITER

Principle of Operation



WARNING: When you are going downhill, your vehicle speed could increase above the set speed. The system does not apply the brakes.

Driving Aids



WARNING: The system is designed to aid the driver. It is not intended to replace your attention and judgment. You are still responsible to drive with due care and attention.

The system allows you to limit the vehicle speed to the maximum speed limit detected by the traffic sign recognition system. For example, if the traffic sign recognition system detects a 80 km/h (50 mph) speed limit, the vehicle speed is limited to 80 km/h (50 mph). You can temporarily exceed the set speed if required, for example to overtake.

Note: *The system does not detect speed limits shown with a supplementary traffic sign.*

You can change between the speed limiter modes using the information display. See **General Information** (page 87).

You can set a permanent speed tolerance that is in addition to the detected speed limit through the tolerance menu in the information display. See **General Information** (page 87).

Using Intelligent Speed Limiter

The controls are on the steering wheel.

Switching the System On and Off

LIM

Press to set the system in standby mode. The system prompts you to set a speed or show the detected speed limit as the set speed. Press again to switch the system off.

Note: *The system does not limit the vehicle speed in standby mode.*

Setting the Speed Limiter

SET+

Press the toggle button upward or downward with the system in standby mode to set the speed limiter to the current vehicle speed. The set speed is stored and displayed in the information

SET-

display.

Note: *The set speed limiter adjusts when the system detects a different maximum speed limit.*

Note: *If the system cannot detect a maximum speed limit, the system returns to standby mode.*

You can adjust the set speed in small or large increments. Press the toggle button upward or downward once to adjust the set speed in small increments. Press and hold the toggle button upward or downward to adjust the set speed in large increments.

Canceling the Set Speed

CAN

Press to cancel the set speed limiter. The system returns to standby mode.

Resuming the Set Speed

RES

Press to resume the set speed limiter. The system sets the speed limiter to the detected maximum speed limit at the time it resumes.

Intentionally Exceeding the Speed Limit

Firmly press the accelerator pedal to temporarily exceed the set speed limit. The system resumes when the vehicle speed drops below the set speed limit, or when you press the **RES** button.

Driving Aids

System Warnings

A warning appears in the information display if any of the following occur:

- The vehicle speed exceeds the current set speed.
- The system detects a maximum speed limit that is lower than the current vehicle speed.
- You intentionally exceed the set speed.
- You unintentionally exceed the set speed, for example when you are going downhill. A tone also sounds.

Note: A tone sounds if you continue to exceed the set speed.

Note: If the traffic sign recognition system detects a speed limit outside the operational speed range, a tone sounds and the system returns to standby mode.

LANE KEEPING SYSTEM



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: The system may not function if the sensor is blocked.



WARNING: The sensor may incorrectly track lane markings as other structures or objects. This can result in a false or missed warning.



WARNING: In cold and severe weather conditions the system may not function. Rain, snow and spray can all limit sensor performance.



WARNING: Large contrasts in outside lighting can limit sensor performance.



WARNING: The system will not operate if the sensor cannot track the road lane markings.



WARNING: If damage occurs in the immediate area surrounding the sensor, have your vehicle checked as soon as possible.



WARNING: The system may not correctly operate if your vehicle is fitted with a suspension kit not approved by us.

The system is designed to alert you by providing temporary steering assistance or steering wheel vibration when it detects an unintended lane departure. The system detects and tracks the road lane markings using a camera mounted behind the interior mirror. The system only operates when the vehicle speed is greater than approximately 60 km/h (37 mph). You can view the system status in the information display.

Note: The system works when the camera can detect at least one lane marking or the edge of the road.

The system may not correctly operate in any of the following conditions:

- The system does not detect at least one lane marking or the edge of the road.
- You switch the direction indicator on.
- You apply direct steering, accelerate fast or brake hard.
- The vehicle speed is less than 60 km/h (37 mph).

Driving Aids

- The anti-lock brake, stability control or traction control system activates.
- Narrow lane width.

The system may not correct lane positioning in any of the following conditions:

- High winds.
- Uneven road surfaces.
- Heavy or uneven loads.
- Incorrect tire pressure.

Switching Lane Keeping System On or Off



E132099

Press the button on the direction indicator stalk.

Note: A warning indicator may remain illuminated in the information display when you switch the system off.

Note: The system may turn on when you start your vehicle.

Lane Keeping System Settings

The system has different settings that you can view or adjust using the information display.

Note: The system remembers the last setting when you start your vehicle. If the system detects a MyKey, the mode is set to alert.

Alert Mode

Provides steering wheel vibration when the system detects an unintended lane departure.

Adjusting the Steering Wheel Vibration Intensity

1. Using the information display controls on the steering wheel, select **Driver assist..**
2. Select **Lane keeping system.**
3. Select **Intensity.**
4. Select a setting and press the **OK** button.

Note: This setting does not affect aid mode.

Note: The system remembers the last setting when you start your vehicle.

Adjusting the Lane Keeping System Sensitivity

1. Using the information display controls on the steering wheel, select **Driver assist..**
2. Select **Lane keeping system.**
3. Select **Sensitivity.**
4. Select a setting and press the **OK** button.

Aid Mode


Provides temporary steering assistance toward the lane center when the system detects an unintended lane departure.

Note: When aid mode is on and the system does not detect any steering activity for a short period of time, for example lightly holding the steering wheel, the system alerts you to put your hands on the steering wheel.

Driving Aids

Alert and Aid Mode

Provides temporary steering assistance toward the lane center when the system detects an unintended lane departure. If your vehicle continues drifting out of the lane, the steering wheel vibrates.

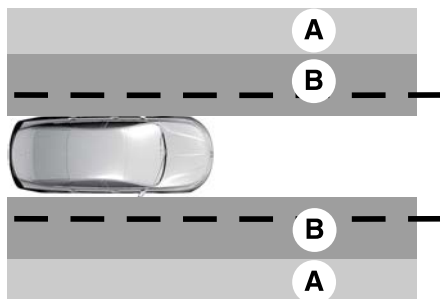

A Alert mode.

B Aid mode.

Note: The diagram illustrates general zone coverage. It does not provide exact zone parameters.

Switching the Lane Keeping System Mode

1. Using the information display controls on the steering wheel, select **Driver assist**.
2. Select **Lane keeping system**.
3. Select **Mode**.
4. Select a setting and press the **OK** button.

Lane Keeping System Display



When the system is on, a graphic of lane markings appears in the information display.

Lane Keeping System Warning Lamps and Indicators

Lane Keeping Alert Indicators



It illuminates in the information display when you switch the system on and Aid Mode or Alert and Aid Mode are selected.



It illuminates in the information display when you switch the system on and Alert Mode is selected.

Lane Keeping Aid Warning Lamp



It could illuminate when you switch the system off. If it illuminates when you are driving, this indicates a malfunction. Have your vehicle checked as soon as possible.

Driving Aids

Black and White Information Display

Indicator	System Status
Gray.	Unavailable.
White.	Available.
White and inverted.	Temporary steering assistance.
White and flashing.	Temporary steering assistance and steering wheel vibration.

Color Information Display

Indicator	System Status
Gray.	Unavailable.
Green.	Available.
Amber.	Temporary steering assistance.
Red.	Temporary steering assistance and steering wheel vibration.

Lane Keeping System Messages

Message	Action
Lane keeping system malfunction Service required	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.

BLIND SPOT INFORMATION SYSTEM




WARNING: Do not use the blind spot information system as a replacement for using the interior and exterior mirrors or looking over your shoulder before changing lanes. The blind spot information system is not a replacement for careful driving.



WARNING: The system may not operate properly during severe weather conditions, for example snow, ice, heavy rain and spray. Always drive with due care and attention. Failure to take care may result in a crash.

Driving Aids

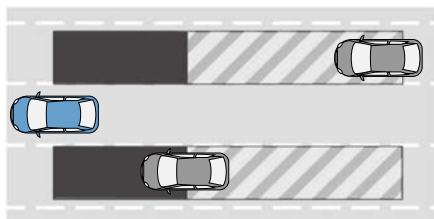

E255695

The system is designed to detect vehicles that may have entered the blind spot zone. The detection area is on both sides of your vehicle, extending rearward from the exterior mirrors to approximately 4 m (13 ft) beyond the rear bumper. The detection area extends to approximately 18 m (59 ft) beyond the rear bumper when the vehicle speed is greater than 48 km/h (30 mph) to alert you of faster approaching vehicles.

Note: *The system does not prevent contact with other vehicles. It is not designed to detect parked vehicles, pedestrians, animals or other infrastructures.*

Using the Blind Spot Information System

Vehicles with Automatic Transmission

The system turns on when all of the following occur:

- You start your vehicle.
- You shift into drive (D).
- The vehicle speed is greater than 10 km/h (6 mph).

Note: *The system does not operate in park (P) or reverse (R).*


Vehicles with Manual Transmission

The system turns on when all of the following occur:

- You start your vehicle.
- The vehicle speed is greater than 10 km/h (6 mph).

Note: *The system does not operate in reverse (R).*

Blind Spot Information System Sensors

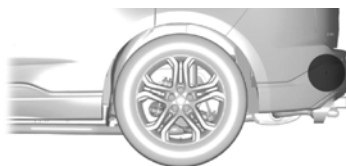

E205199

The sensors are behind the rear bumper on both sides of your vehicle.

Note: *Keep the sensors free from snow, ice and large accumulations of dirt.*

Note: *Do not cover the sensors with bumper stickers, repair compound or other objects.*

Note: *Blocked sensors could affect system performance.*

If the sensors are blocked, a message may appear in the information display. The indicators remain illuminated in the exterior mirror but the system does not alert you.

Switching the Blind Spot Information System On and Off

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Driver assistance**.
3. Select **BLIS**.
4. Switch **BLIS** on or off.

Driving Aids

When you switch the system off, a warning lamp illuminates in the instrument cluster and the alert indicators flash twice.

The system remembers the last setting when you start your vehicle.

Note: The system may not correctly operate when towing a trailer. The system turns off when you attach a trailer, if your vehicle has an approved trailer tow module and tow bar. For vehicles with an aftermarket trailer tow module or tow bar, turn the system off when you attach a trailer.

To permanently switch the system off, contact an authorized dealer.


Blind Spot Information System Indicator



When the system detects a vehicle, an alert indicator illuminates in the exterior mirror on the side the approaching vehicle is coming from. If you turn the direction indicator on for that side of your vehicle, the alert indicator flashes.

Note: The system may not alert you if a vehicle quickly passes through the detection zone.

Blind Spot Information System with Trailer Tow

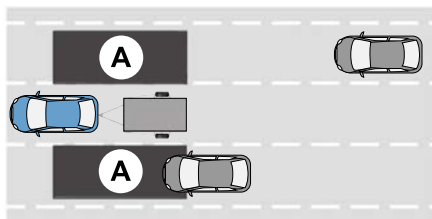


E293525

The blind spot information system with trailer tow is designed to detect vehicles that may have entered the blind spot zone. The detection area is on both sides of your vehicle and trailer, extending rearward from the exterior mirrors to the end of your trailer. When you attach a trailer and have set up a trailer, the blind spot information system with trailer tow becomes active when driving forward above 10 km/h (6 mph).

You can set up the trailer length, select a trailer or switch blind spot information system with trailer tow off.

Note: The system remembers the last trailer setting when you start your vehicle.

Setting up the Trailer Length

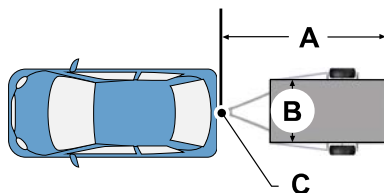

E293526

- A Trailer length.
- B Trailer width.
- C Trailer hitch.

The system operates only if the trailer front width is less than 2.5 m (8.2 ft), and the total length from the trailer hitch to the rear of the trailer is less than 10 m (33 ft).

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Driver assistance**.
3. Select **BLIS**.
4. Select **Trailer lengths**.
5. Select **Trailer A**, **Trailer B** or **Trailer C**.

Driving Aids

6. Select the trailer length at the closest available value.

Note: Proper measurement and measurement entry are required for the system to function as designed.

7. Press the **OK** button.

Note: If you attach load carriers such as bike racks or cargo racks with electrical lighting, enter a length of 1 m (3 ft). Cross Traffic Alert remains on.

Selecting a Trailer

If you select a trailer in the information display prior to connecting a trailer, the system loads that configuration and an information message appears in the information display when you connect the trailer.

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Driver assistance**.
3. Select **BLIS**.
4. Select **Trailer**.
5. Select **Trailer A**, **Trailer B** or **Trailer C**.
6. Press the **OK** button.

Switching the Blind Spot Information System with Trailer Tow Off

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Driver assistance**.
3. Select **BLIS**.
4. Select **Trailer**.
5. Select **None**.
6. Press the **OK** button.

When you switch the system off, a warning lamp illuminates and the alert indicators flash twice.

Note: The system turns off and a message appears when a trailer is connected, but not set up or selected.

Blind Spot Information System Limitations

Some trailers may cause a slight change in system performance:

- Wide box trailers, especially those wider than the towing vehicle, may cause false alerts to occur when driving next to infrastructure or near parked cars. A false alert may also occur while making a 90-degree turn or driving through a roundabout.
- Wide trailers that have a total length greater than 6 m (20 ft) may cause delayed alerts when a vehicle is passing at high speed.
- Box trailers that have a width greater than 2.5 m (8.2 ft) may cause early alerts when you pass a vehicle.
- Clam shell or V-Nose box trailers with a width greater than 2.5 m (8.2 ft) may cause delayed alerts when a vehicle traveling the same speed as your vehicle merges lanes.

Blind Spot Information System Warning Lamp



It illuminates in the instrument cluster if you switch the system off.

If it illuminates when the system is on this indicates a malfunction. Have your vehicle checked as soon as possible.

Driving Aids

Blind Spot Information System Information Messages

Message	Description
Trailer BLIS Add trailer Exit Press OK to select	Displays if the new trailer is attached but not selected. Select a trailer.
BLIS not available Sensor blocked See manual	Displays if the blind spot information system sensors are blocked.
BLIS and cross traffic alert deactivated Trailer attached	Displays if you attach a trailer to your vehicle.
BLIS malfunction	The system has detected a fault that requires service. Have your vehicle checked as soon as possible.

CROSS TRAFFIC ALERT



WARNING: Do not use the cross traffic alert system as a replacement for using the interior and exterior mirrors or looking over your shoulder before reversing out of a parking space. The cross traffic alert system is not a replacement for careful driving.



WARNING: The system may not operate properly during severe weather conditions, for example snow, ice, heavy rain and spray. Always drive with due care and attention. Failure to take care may result in a crash.


The system is designed to alert you of vehicles approaching from the sides behind your vehicle when you shift into reverse (R).

Using Cross Traffic Alert

The system is designed to detect vehicles that approach at a speed between 6 km/h (4 mph) and 60 km/h (37 mph). Coverage decreases when the sensors are partially, mostly or fully obstructed. Slowly reversing helps increase the coverage area and effectiveness.


The system turns on when you start the engine and you shift into reverse (R). The system turns off when you shift out of reverse (R).

Driving Aids

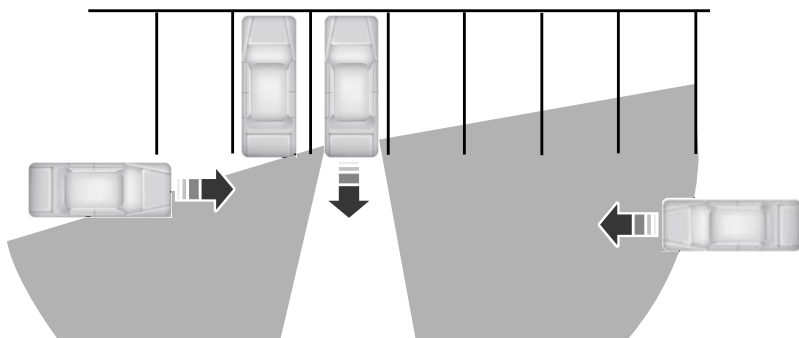

E142440

The sensor on the left-hand side is only partially obstructed and zone coverage on the right-hand side is maximized.

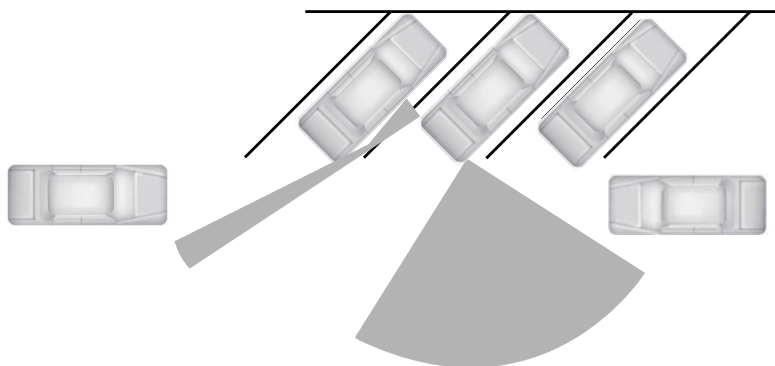

E142441

Driving Aids

Zone coverage also decreases when parking at narrow angles. The sensor on the left-hand side is mostly obstructed and zone coverage on that side is severely reduced.

Cross Traffic Alert System Sensors



E205199

The sensors are behind the rear bumper on both sides of your vehicle.

Note: Keep the sensors free from snow, ice and large accumulations of dirt.

Note: Do not cover the sensors with bumper stickers, repair compound or other objects.

Note: Blocked sensors could affect system performance.

If the sensors are blocked, a message may appear in the information display when you shift into reverse (R).

Cross Traffic Alert System Limitations

The system may not correctly operate when any of the following occur:

- The sensors are blocked.
- Adjacently parked vehicles or objects are obstructing the sensors.
- Vehicles approach at speeds less than 6 km/h (4 mph) or greater than 60 km/h (37 mph).
- The vehicle speed is greater than 12 km/h (7 mph).
- You reverse out of an angled parking space.

Cross Traffic Alert behavior when trailer is attached

Note: The system may not correctly operate when towing a trailer. For vehicles with an approved trailer tow module and tow bar, the system turns off when you attach a trailer. For vehicles with an aftermarket trailer tow module or tow bar, we recommend that you switch the system off when you attach a trailer.

Cross traffic alert remains on when you attach a trailer in vehicles equipped with a Blind Spot Information System with Trailer Tow under the following conditions:

- You connect a trailer.
- The trailer is a bike rack or cargo rack with a maximum length of 1 m (3 ft).
- You set the trailer length to 1 m (3 ft) in the information display.

See **Blind Spot Information System** (page 205).

Switching the System On and Off

To switch cross traffic alert on or off, use the Information display. See **General Information** (page 87).

Note: The system turns on every time you switch the ignition on. To permanently switch the system off, contact an authorized dealer.

Cross Traffic Alert Indicator



When the system detects an approaching vehicle a tone sounds, a warning lamp illuminates in the relevant exterior mirror and arrows appear in the information display to show which side the approaching vehicle is coming from.

Note: If arrows do not display, a message appears in the information display.

Driving Aids

If the system malfunctions, a warning lamp illuminates in the instrument cluster and a message appears in the information display. Have your vehicle checked as soon as possible.

Note: In exceptional conditions, the system could alert you, even when there is nothing in the detection zone, for example a vehicle passing further away from your vehicle.

Cross Traffic Alert Information Messages

Message	Action
Cross traffic alert	Displays instead of indication arrows when the system detects a vehicle. Check for approaching traffic.
Cross traffic not available Sensor blocked See manual	Displays if the cross traffic alert system sensors are blocked. Clean the sensors. If the message continues to appear, have your vehicle checked as soon as possible.
Cross traffic malfunction	The system has malfunctioned. Have your vehicle checked as soon as possible.
Cross traffic alert deactivated Trailer attached	Displays if you attach a trailer to your vehicle.

TRAFFIC SIGN RECOGNITION

Principle of Operation



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: The system may not function if the sensor is blocked.

Note: In cold and severe weather conditions the system may not function. Rain, snow, spray and large contrasts in lighting can all prevent the sensor from functioning correctly.

Note: Do not carry out windshield repairs in the immediate area surrounding the sensor.

Note: If your vehicle has a suspension kit not approved by us, the system may not correctly function.

Note: Always replace headlamp bulbs with those specifically designed for your vehicle. Other bulbs may reduce system performance.

Note: The system may not detect all traffic signs and may incorrectly read signs.

Note: Keep the windshield free from obstructions for example bird droppings, insects and snow or ice.

Note: The system is designed to detect traffic signs meeting the Vienna convention.

Note: Traffic sign data provided by the navigation system contains information integrated to the data carrier release.

Driving Aids

The sensor is behind the interior rear view mirror. It continuously monitors road signs to inform you of the current maximum speed limit and overtaking regulations.

The system detects recognizable traffic signs, for example:

- Speed limit signs.
- No overtaking signs.
- Speed limit cancellation signs.
- No overtaking cancellation signs.

Using Traffic Sign Recognition

Setting the System Speed Warning

The system has a number of speed warning levels that you can set using the information display. See **General Information** (page 87).

System Display



The system can display two traffic signs in parallel.

You can view the status at any time using the information display.

The system displays recognizable traffic signs in four stages as follows:

1. All new traffic signs appear brighter than the others in the display.
2. After a predetermined time they display normally.

3. After a predetermined distance they are greyed out.
4. After another predetermined distance they are deleted.

If the system detects a supplementary traffic sign, it displays below the respective traffic sign. For example, when passing a reduced speed limit in wet road conditions sign.

If your vehicle has a navigation system, stored traffic sign data may influence the indicated speed limit value.

Switching Speed Warning On and Off

You can switch the speed warning on and off using the information display. See **General Information** (page 87).

Note: The system remembers the last setting when you start your vehicle.

WRONG WAY ALERT



WARNING: The system is designed to aid the driver. It is not intended to replace your attention and judgment. You are still responsible to drive with due care and attention.



WARNING: At all times, you are responsible for controlling your vehicle, supervising the system and intervening, if required. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.



WARNING: The system may not operate properly if the sensor is blocked. Keep the windshield free from obstruction.

Driving Aids

The system is designed to alert you if it detects that you are driving the wrong way on a freeway exit road. The system uses a sensor behind the interior mirror to detect no entry signs and uses information from the navigation system.

Note: Do not carry out windshield repairs in the immediate area surrounding the sensor.

Note: Traffic sign data provided by the navigation system contains information integrated to the data carrier release.

Note: The system is designed to detect traffic signs meeting the Vienna convention.

Note: The system may not detect all traffic signs and may incorrectly read signs.

Note: If your vehicle has a suspension kit not approved by us, the system may not correctly function.

Note: Always fit Ford original parts when replacing headlamp bulbs. Other bulbs may reduce system performance.

Note: The system does not operate in some countries. We recommend that you check system availability before use.

If the system detects that you are driving the wrong way on a freeway exit road, a message appears in the information display and a tone sounds. The audio system volume mutes and navigation system guidance pauses.

Note: In cold and severe weather conditions the system may not function. Rain, snow, spray and large contrasts in lighting can all prevent the sensor from functioning correctly.

Note: The system may not correctly operate in areas under construction or new infrastructure.

Note: In exceptional conditions, the system could alert you even if you are not driving the wrong way on a freeway exit road.

Switching Wrong Way Alert On or Off

To switch wrong way alert on or off, use the information display controls on the steering wheel to select the following:

Menu Item	Action
Driver assist.	Press the menu button.
Wrong way alert	Press the OK button.

Note: The system remembers the last setting when you start your vehicle.

Wrong Way Alert Information Messages

Message	Action
Check driving direction	The system has detected that you are driving the wrong way on a freeway exit road. Press the OK button.

Driving Aids

ECO

Eco Mode

How Does Eco Mode Work

The system is designed to monitor certain driving characteristics to help you drive more efficiently. See **Economical Driving** (page 234).

Note: *The efficiency levels do not result in a defined fuel consumption figure. See **Fuel Consumption** (page 150).*

Note: *The system only indicates the efficiency level for the current trip. The system resets each time you switch the ignition on.*

Instantaneous Efficiency Level

The display ring increases as the instantaneous efficiency level increases and illuminates when it reaches maximum efficiency. The level continuously updates to indicate the efficiency level for the current trip.

Viewing the Instantaneous Efficiency Level

1. Using the information display controls on the steering wheel, select **MyView**.
2. Select **Eco coach**.

Trip Summary

The calculated trip summary is shown as four colored bars. The bars travel from left to right as the calculated efficiency levels increase. The bars indicate the average efficiency level for acceleration, deceleration, speed and gear shifting during the total distance traveled by your vehicle for the current trip.

Note: *Vehicles with an automatic transmission do not have a bar for gear shifting.*

Viewing the Trip Summary

1. Using the information display controls on the steering wheel, select **MyView**.
2. Select **Eco coach**.

Efficient Drive Mode

What Is Efficient Drive Mode

Efficient drive mode is a predictive coach that provides near real-time traffic information to help you drive more efficiently by releasing the accelerator pedal.

Switching Efficient Drive Mode On and Off

1. Using the information display controls on the steering wheel, select **Driver assist**.
2. Select **Eco coach**.
3. Switch **Eco advice** on and off.

Displaying the Efficient Drive Mode

1. Using the information display controls on the steering wheel, select **Driver assist**.

The display ring can provide information about speed limit, freeway ramp, slope, curve, crosswalk, etc.

Efficient Drive Mode Indicator



It indicates that you have to slowly decelerate.

Driving Aids

Trip Summary

The calculated trip summary is shown as five colored bars. The bars travel from left to right as the calculated efficiency levels increase. The bars indicate the average efficiency level for acceleration, deceleration, speed, gear shifting and compliance score during the total distance traveled by your vehicle for both last and current trips.

Note: Vehicles with an automatic transmission do not have a bar for gear shifting.

Viewing the trip summary

1. Using the information display controls on the steering wheel, select **MyView**.
2. Select **Eco coach**.
3. Switch the engine off.
4. Press the **OK** button.

PRE-COLLISION ASSIST



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: The system does not operate during hard acceleration or steering. Failure to take care may lead to a crash or personal injury.



WARNING: The system may fail or operate with reduced function during cold and severe weather conditions. Snow, ice, rain, spray and fog can adversely affect the system. Keep the front camera and radar free of snow and ice. Failure to take care may result in the loss of control of your vehicle, serious personal injury or death.



WARNING: The system may not operate properly if your vehicle has a non-Ford windshield. Do not carry out windshield repairs in the area around the sensor.



WARNING: Some situations and objects prevent hazard detection. For example low or direct sunlight, inclement weather, unconventional vehicle types, and pedestrians. Apply the brakes when necessary. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: The Pre-Collision Assist system with brake support cannot help prevent all collisions. Do not rely on this system to replace your judgment and the need to maintain correct distance and speed.

The pre-collision assist system is active when your vehicle reaches a speed greater than approximately 10 km/h (6 mph). Pedestrian detection is active at speeds up to 80 km/h (50 mph).

Note: The system is not designed to detect animals.

Note: The system is not designed to detect vehicles or cyclists that are traveling in a different direction.

Driving Aids



E156130

If your vehicle is rapidly approaching another stationary vehicle, a vehicle or cyclist traveling in the same direction as yours, or a pedestrian within your driving path, the system is designed to provide three levels of functionality.

Level of Functionality	Description
Alert	When activated, a warning lamp flashes and an audible warning sounds.
Brake support	The system is designed to help reduce the impact speed by preparing the brakes for rapid braking. The system does not automatically apply the brakes. If you press the brake pedal, the system could apply additional braking up to maximum braking force, even if you lightly press the brake pedal.
Active braking	The system is designed to apply the brakes if it detects a crash is imminent. This may help reduce impact or avoid the crash.

Switching Active Braking On and Off

1. Using the information display controls on the steering wheel, select **Driver assist.**
2. Select **Pre-collision Assist.**
3. Switch **Active braking** on or off.

Distance Alert (If Equipped)

A warning lamp illuminates if the distance to the vehicle ahead is small.

Note: The warning lamp does not illuminate if cruise control or adaptive cruise control is active.

Adjusting the Sensitivity of Distance Alert

1. Using the information display controls on the steering wheel, select **Driver assist..**
2. Select **Pre-collision Assist.**
3. Select **Alert sensitivity.**
4. Select a setting and press the **OK** button.

Distance Indication (If Equipped)

A graphical indication displays the time gap to vehicles ahead of you traveling in the same direction.

Note: The graphic does not display if you switch on cruise control or adaptive cruise control.


Driving Aids

Vehicle Speed	System Sensitivity	Distance Indicator Color	Distance Gap	Time Gap
100 km/h (62 mph)	Normal.	Gray.	Greater than 25 m (82.0 ft) .	Greater than 0.9 seconds.
		Yellow.	17–25 m (55.8–82.0 ft)	0.6–0.9 seconds.
		Red.	Less than 17 m (55.8 ft).	Less than 0.6 seconds.

Switching Distance Indication On and Off

1. Using the information display controls on the steering wheel, select **Driver assist..**
2. Select **Pre-collision Assist.**
3. Switch **Distance indication** on or off.

Pre-Collision Assist System Sensors

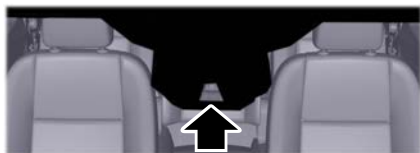

E243054

The camera is mounted behind the interior mirror.



E244279

The radar sensor is behind the front grille below the license plate.

Note: Keep the sensors free from snow, ice and large accumulations of dirt.

Note: Do not clean the sensors with sharp objects.

Note: If your vehicle sustains damage leaving the sensors misaligned, this may cause inaccurate measurements or false alerts.

Blocked sensors could affect system accuracy. A message may appear in the information display.

Pre-Collision Assist Warning Lamp



It illuminates if your vehicle rapidly approaches another vehicle, to warn you of the risk of a crash with the vehicle in front of you.

Driving Aids

It could illuminate red if the distance to the vehicle ahead is small.

It illuminates amber when you switch the system off or if the system is not available.

Pre-Collision Assist Information Messages

Message	Action
Pre-collision assist not available	The system has malfunctioned. Have your vehicle checked as soon as possible.
Pre-collision assist not available Sensor blocked	The sensors are dirty. Clean the sensors. If the message continues to appear, have your vehicle checked as soon as possible.

The following table lists possible causes and actions for when a blocked sensor message may display.

Cause	Action
The surface of the radar in the radiator grille is dirty or obstructed.	Clean the radiator grille in front of the radar or remove any obstruction.
The surface of the radar is clean but the message remains in the display.	Wait for a short period of time. It may take several minutes for the system to detect that there is no obstruction.
Heavy rain, spray, snow, or fog is interfering with the radar signals.	The system is temporarily disabled. The system should reactivate after a short period of time when the weather conditions improve.
The radar is misaligned.	Have your vehicle checked as soon as possible.
The windshield in front of the camera is dirty or obstructed.	Clean the outside of the windshield in front of the camera.
The windshield in front of the camera is clean but the message remains in the display.	Wait for a short period of time. It may take several minutes for the camera to detect that there is no obstruction.
Excessive heat around the camera.	Wait for a short period of time. The message should clear when the temperature around the camera decreases.

Driving Aids

DRIVE CONTROL - DIESEL

Selectable Drive Modes

Your vehicle has various drive modes that you can select for different driving conditions. Depending on the drive mode that you select, the system adjusts various vehicle settings, for example steering, gear shifting, handling and powertrain response.

Selecting a Drive Mode

The button is on the instrument panel.



Repeatedly press the button to scroll through the available drive modes. Release the button to confirm your selected drive mode.

Normal



Vehicle settings suited for balanced driving.

Note: *This is the default mode each time you switch the ignition on.*

Eco



Vehicle settings suited for economical driving.

Selectable Drive Modes Information Messages

Message	Action
Drive mode not available	The system is not available. If it is still not available the next time you switch the ignition on, the system has detected a fault that requires service. Have your vehicle checked as soon as possible.

SELF-LEVELING SUSPENSION

Air Suspension (If Equipped)

Air suspension is designed to maintain a constant suspension height for all loading conditions. The air springs will be pumped up if your vehicle is sitting low or lowered if your vehicle is sitting high. The system begins running after the engine has started and stays active for up to approximately 45 minutes after the engine has been shut down.

The air suspension system can be turned on or off through the instrument cluster. See **General Information** (page 87).

Note: *The system should be turned off before any service is performed in order to prevent adjustments during service.*

If the system is off and the vehicle is driven above a set speed, the system will turn itself back on. If there is a fault in the system, a message may appear in the instrument cluster. If this message persists, have your vehicle inspected by an authorized dealer.

Local Hazard Information

WHAT IS LOCAL HAZARD INFORMATION

The system is designed to provide near real-time information about the road in front of you.

LOCAL HAZARD INFORMATION PRECAUTIONS



WARNING: You are responsible for controlling your vehicle at all times. The system is designed to be an aid and does not relieve you of your responsibility to drive with due care and attention. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.

ENABLING LOCAL HAZARD INFORMATION

Note: Make sure that the modem is enabled. See **Enabling and Disabling the Modem** (page 372).

1. Press **Settings** on the touchscreen.
2. Press **Connectivity**.
3. Press **Connected Vehicle Features**.
4. Switch **Local hazard information** on.

CHECKING LOCAL HAZARD INFORMATION STATUS

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **Information**.
3. Select **Local hazard information**.

Load Carrying

GENERAL INFORMATION



WARNING: Make sure that you properly secure objects in the luggage compartment. Failure to follow this instruction could result in personal injury in the event of a sudden stop or crash.



WARNING: Do not place objects on the luggage cover. Failure to follow this instruction could result in personal injury or death in the event of a sudden stop or crash.



WARNING: The appropriate loading capacity of your vehicle can be limited either by volume capacity (how much space is available) or by payload capacity (how much weight the vehicle should carry). Once you have reached

the maximum payload of your vehicle, do not add more cargo, even if there is space available. Overloading or improperly loading your vehicle can contribute to loss of vehicle control and vehicle rollover.



WARNING: Make sure that you fully close the liftgate to prevent exhaust fumes from entering your vehicle. If you are unable to fully close the liftgate, open the air vents or the windows to allow fresh air to enter your vehicle. Failure to follow this instruction could result in personal injury or death.




WARNING: Do not exceed the maximum front and rear axle loads for your vehicle.

Note: When loading long objects into your vehicle, for example pipes, timber or furniture be careful not to damage the interior trim.

Load Carrying

LUGGAGE ANCHOR POINTS - BUS

Securing Luggage

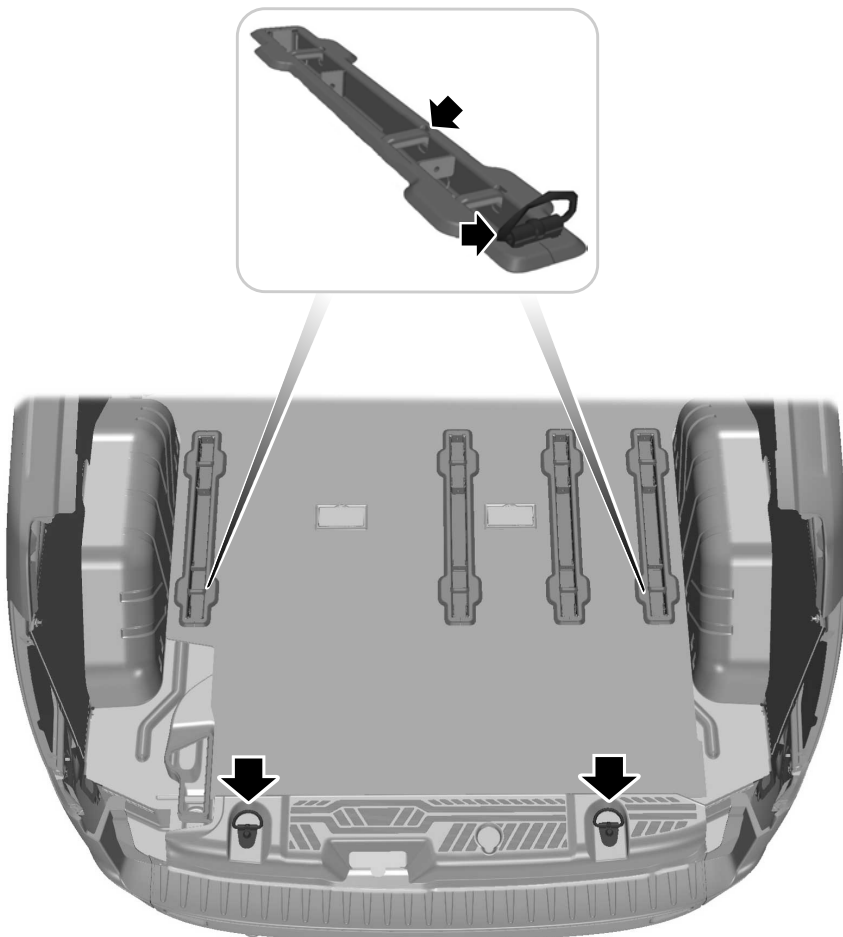

E146220

Load Carrying

See the following table for luggage anchor point maximum load values.

Note: The type and number of luggage anchor points may vary depending on your vehicle model.


Note: The maximum load value is applicable to rear and seat track luggage anchor points.

Variant	Rear Anchor Point Type	Maximum Load Value
All.	Black.	5,000 N (1,125 lb)
	Chrome.	3,500 N (785 lb)

REAR LOADSPACE HATCHES

You can carry long items inside your vehicle by opening the access hatch in the bulkhead.

Note: Fully open the access hatch against the bulkhead when in use.

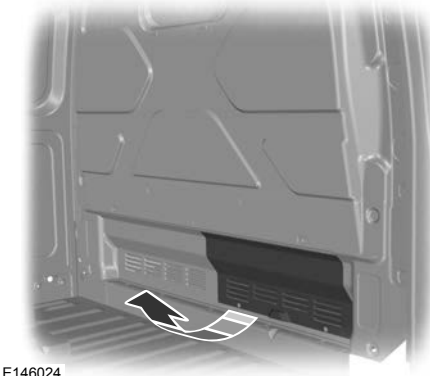

E146024

ROOF RACKS AND LOAD CARRIERS - VEHICLES WITH: INTEGRATED ROOF RACK



WARNING: When loading the roof racks, we recommend you evenly distribute the load, as well as maintain a low center of gravity. Loaded vehicles, with higher centers of gravity, may handle differently than unloaded vehicles. Take extra precautions, such as slower speeds and increased stopping distance, when driving a heavily loaded vehicle.



WARNING: Do not exceed the maximum front and rear axle loads for your vehicle.



WARNING: Read and follow the manufacturer's instructions when you are fitting a roof rack.

You must place loads directly on the crossbars fitted to the roof rack side rails.

Note: Never place loads directly on the roof panel.

Make sure that you securely fasten the load. Check to make sure the straps are secure before driving and at each fuel stop.

The maximum roof loading using two adjacent rails is 75 kg (165 lb).

The maximum roof loading using all rails is 130 kg (287 lb).

Raising and Lowering the Crossbars



WARNING: The crossbars are heavy. To help avoid personal injury take care when lowering the crossbars.

Load Carrying



WARNING: When folding the crossbars down, take care not to get your fingers caught in the mechanism.




WARNING: Do not tether loads near the release lever.



E171581

Note: Make sure the crossbars are in the folded position before entering a car wash.

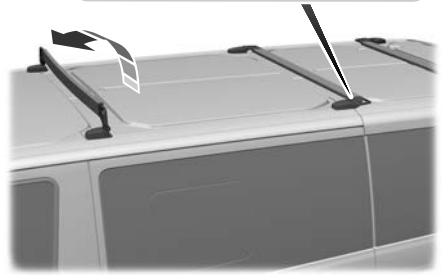

E167062

1. Pull the release lever.
2. Raise or lower the crossbars until they lock into place.

Load Carrying

ROOF RACKS AND LOAD CARRIERS - VEHICLES WITHOUT INTEGRATED ROOF RACK



WARNING: When loading the roof racks, we recommend you evenly distribute the load, as well as maintain a low center of gravity. Loaded vehicles, with higher centers of gravity, may handle differently than unloaded vehicles. Take extra precautions, such as slower speeds and increased stopping distance, when driving a heavily loaded vehicle.



WARNING: Do not exceed the maximum permissible roof load.



WARNING: Do not exceed the maximum axle load for your vehicle. See **Vehicle Identification Plate** (page 347).



WARNING: Read and follow the manufacturer's instructions when you are fitting a roof rack.



WARNING: Do not place loads directly on the roof panel.



WARNING: If you use a roof rack, the fuel consumption of your vehicle will be higher and you may experience different driving characteristics.

For correct roof rack system function, you must place loads directly on crossbars fitted to the roof rack side rails.

Make sure that you securely fasten the load. Check to make sure the straps are secure before driving and at each fuel stop.

Variant	Maximum Roof Load (Including Roof Rack) kg (lb)
Low Roof	150 (331)
Medium Roof	100 (220)


LOAD RETAINING FIXTURES - VAN

Note: The number of load retaining fixtures may vary depending on your vehicle model.

Load Carrying

Securing Cargo


Except Kombi

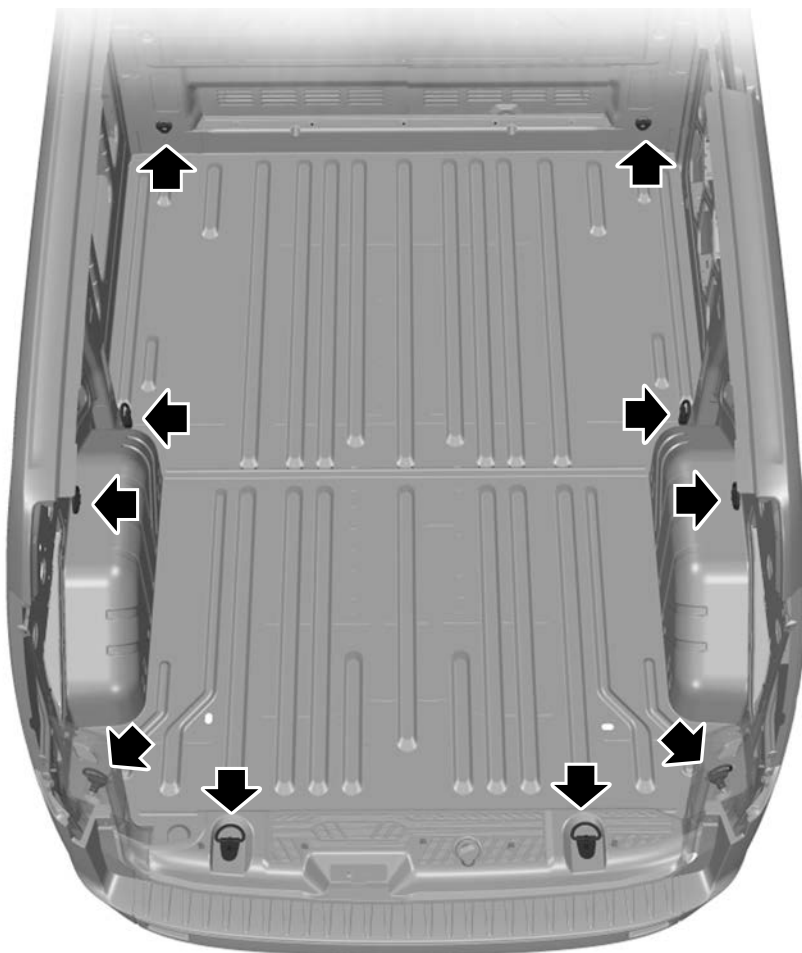

E146219

Load Carrying

Kombi

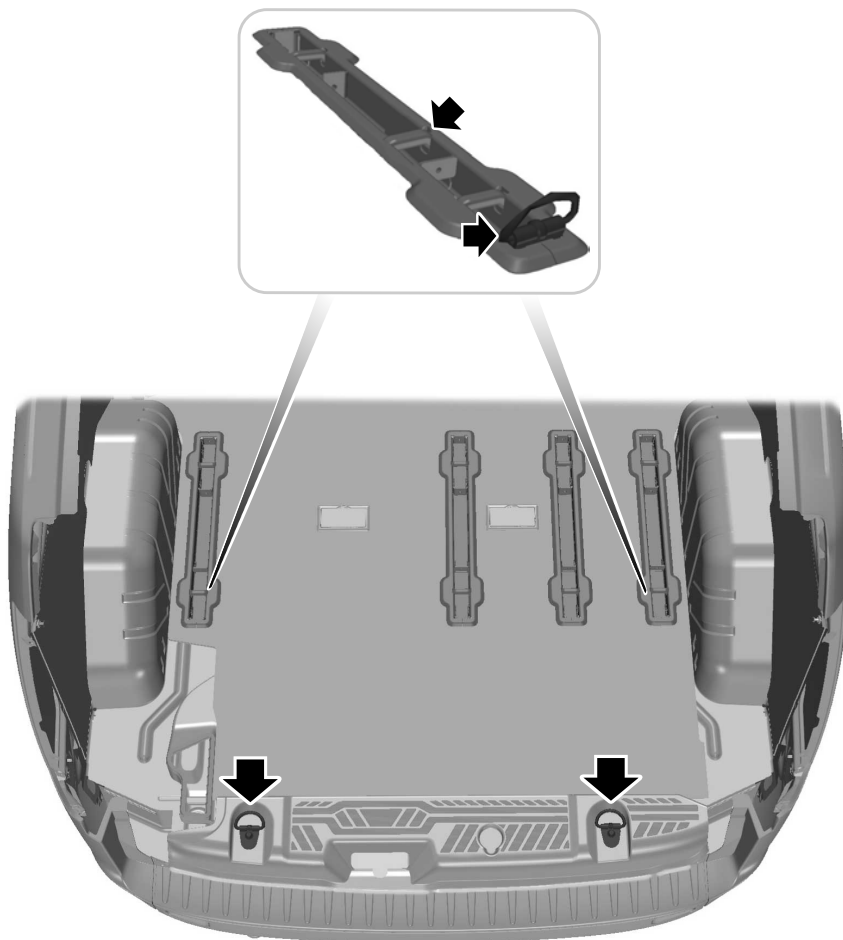

E146220

Load Carrying

Variant	Maximum Load Value
All	5,000 N (1,125 lb)

Towing

TOWING A TRAILER - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)



WARNING: Your vehicle is not approved for trailer towing. Never tow a trailer with your vehicle.

TOWING A TRAILER - EXCLUDING: PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)



WARNING: Do not exceed 100 km/h (62 mph). This could result in the loss of vehicle control, serious personal injury or death.



WARNING: Do not exceed the maximum gross train weight stated on your vehicle identification plate. This could result in the loss of vehicle control, serious personal injury or death. See **Vehicle Identification Plate** (page 347).



WARNING: Do not exceed the maximum permissible trailer nose weight (vertical weight on the tow ball) as stated in the vehicle specification chart. This could result in the loss of vehicle control, serious personal injury or death. See **Capacities and Specifications** (page 344).



WARNING: The anti-lock braking system does not control the overrun brake on the trailer. This could result in the loss of vehicle control, serious personal injury or death.

When towing a trailer:

- Obey country specific regulations for towing a trailer.
- Do not exceed 100 km/h (62 mph) even if a country allows higher speeds under certain conditions.
- Place loads as low as possible and central to the axle of your trailer. If you are towing with an unladen vehicle, the load in your trailer should be placed toward the nose, within the maximum nose load, as this gives the best stability. See **Capacities and Specifications** (page 344).
- The trailer nose weight (vertical weight on the tow ball), is essential for the driving stability of your vehicle and trailer.
- The vertical weight on the tow ball should be at least 4% of the trailer weight and not exceed the maximum permissible weight. See **Capacities and Specifications** (page 344).
- Reduce speed immediately if the trailer shows any sign of swaying. See **Trailer Sway Control** (page 231).
- Use a low gear when descending a steep downhill gradient.

Note: *The maximum permissible trailer nose weight on the trailer identification plate is the trailer manufacturer's testing value. The vehicle maximum permissible trailer nose weight may be lower.*

The stability of your vehicle to trailer combination is very much dependent on the quality of the trailer.

Towing a trailer changes the vehicle handling characteristics and increases stopping distances. Adapt your speed and driving behavior to the load of the trailer.

Towing

The gross train weight stated on the vehicle identification plate applies for road gradients up to 12% and altitudes up to 1,000 m (3,281 ft) when towing a trailer. In mountainous regions the engine performance decreases due to lower air density with increasing altitude. In high altitude regions above 1,000 m (3,281 ft), the stipulated maximum permitted gross train weight must be reduced by 10% for every extra 1,000 m (3,281 ft).

Note: *Not all vehicles are suitable or approved to have tow bars fitted. See an authorized dealer for further information.*

Trailer Lighting

The electrical system on your vehicle is suitable for towing trailers with LED lamps.

TRAILER SWAY CONTROL

Note: *This feature does not prevent trailer sway, but reduces it once it begins.*

Note: *This feature cannot stop all trailers from swaying.*

Note: *In some cases, if your vehicle speed is too high, the system may turn on multiple times, gradually reducing your vehicle speed.*

This feature applies your vehicle brakes at individual wheels and if necessary, reduces engine power. If the trailer begins to sway, the traction control warning lamp flashes and a message will appear in the information display. Slow your vehicle down, pull safely to the side of the road and check for correct load distribution. See **Load Carrying** (page 222).

TOWING THE VEHICLE ON FOUR WHEELS - AUTOMATIC TRANSMISSION, EXCLUDING: PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)



WARNING: You must switch the ignition on when your vehicle is being towed. Failure to follow this warning could seriously increase the risk of injury or death.



WARNING: If your vehicle has a steering wheel lock make sure the ignition is in the accessory or on position when being towed.



WARNING: You must make sure the transmission selector lever is placed in position **N**. Failure to follow this warning could damage the transmission and may lead to a crash or injury.



WARNING: The brake and steering assistance will not operate unless the engine is running. Press the brake pedal harder and be aware of increased stopping distances and heavier steering.



WARNING: Too much tension on a tow rope could cause damage to your vehicle or the vehicle that is towing.



WARNING: Do not tow your vehicle if the ambient temperature is below 0°C (32°F).

Emergency Towing

If your vehicle is disabled without access to wheel dollies, a car-hauling trailer, or a flatbed transport vehicle it can be flat-towed with all wheels on the ground.

Towing

You may do this under the following conditions:

- Your vehicle is facing forward so that it is towed in a forward direction.
- The transmission selector lever is placed in position **N**. If the transmission gear shift lever cannot be moved to position **N**, it may need to be overridden. See **Automatic Transmission** (page 169).
- Maximum speed is 50 km/h (31 mph).
- Maximum distance is 80 km (50 mi).

Drive off slowly and smoothly without jerking the vehicle you are towing.

You must only use the recovery hook that was delivered with your vehicle. See **Towing Points** (page 240).

Tow ropes or rigid towing bars must be placed on the same side. For example; right hand rear towing point to right hand front towing point.

You must use a tow rope or rigid towing bar that is of the correct strength for the weight of the towing vehicle and the vehicle that is being towed.

Note: *Using a rigid towing bar is the safest way to tow a vehicle.*

The weight of the vehicle that is being towed must not exceed the weight of the towing vehicle.

TOWING THE VEHICLE ON FOUR WHEELS - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

If you need to tow your vehicle, contact a professional towing service or, if you are a member of a roadside assistance program, your roadside assistance service provider. The front wheels must be lifted off the ground.

TOWING THE VEHICLE ON FOUR WHEELS - MANUAL TRANSMISSION



WARNING: You must switch the ignition on when your vehicle is being towed. Failure to follow this warning could seriously increase the risk of injury or death.



WARNING: The brake and steering assistance will not operate unless the engine is running. Press the brake pedal harder and be aware of increased stopping distances and heavier steering.



WARNING: If your vehicle has a steering wheel lock make sure the ignition is in the accessory or on position when being towed.



WARNING: Too much tension on a tow rope could cause damage to your vehicle or the vehicle that is towing.



WARNING: When towing your vehicle you must select neutral. Failure to follow this warning could damage the transmission and may lead to a crash or injury.

Drive off slowly and smoothly without jerking the vehicle you are towing.

You must only use the towing eye that was delivered with your vehicle. See **Towing Points** (page 240).

Tow ropes or rigid towing bars must be placed on the same side. For example; right hand rear towing point to right hand front towing point.

You must use a tow rope or rigid towing bar that is of the correct strength for the weight of the towing vehicle and the vehicle that is being towed.

Towing

The weight of the vehicle that is being towed must not exceed the weight of the towing vehicle.

Do not exceed 50 km/h (31 mph).

Driving Hints

REDUCED ENGINE PERFORMANCE



WARNING: If you continue to drive your vehicle when the engine is overheating, the engine could stop without warning. Failure to follow this instruction could result in the loss of control of your vehicle.

If the engine coolant temperature gauge needle moves to the upper limit position, the engine is overheating. See **Gauges** (page 80).

You must only drive your vehicle for a short distance if the engine overheats. The distance you can travel depends on ambient temperature, vehicle load and terrain. The engine continues to operate with limited power for a short period of time.

If the engine temperature continues to rise, the fuel supply to the engine reduces. The air conditioning switches off and the engine cooling fan operates continually.

1. Gradually reduce your speed and stop your vehicle as soon as it is safe to do so.
2. Immediately switch the engine off to prevent severe engine damage.
3. Wait for the engine to cool down.
4. Check the coolant level. See **Engine Coolant Check** (page 288).
5. Have your vehicle checked as soon as possible.

ECONOMICAL DRIVING

The following helps to improve fuel consumption:

- Regularly check your tire pressures and make sure that they are inflated to the correct pressure. See **Tire Pressures** (page 334).
- Follow the recommended maintenance schedule and carry out the recommended checks.
- Plan your journey and check the traffic before you set off.
- Avoid idling the engine in cold weather or for extended periods. Start the engine only when you are ready to set off.
- Do not carry unnecessary weight in your vehicle as extra weight wastes fuel.
- Do not add unnecessary accessories to the exterior of your vehicle, for example running boards. If you use a roof rack, remember to fold it down or remove it when not in use.
- Drive smoothly, accelerate gently and anticipate the road ahead to avoid heavy braking.
- Switch off all electric systems when not in use, for example air conditioning. Make sure that you unplug any accessories from the auxiliary power points when not in use.

COLD WEATHER PRECAUTIONS

The functional operation of some components and systems can be affected at temperatures below approximately -25°C (-13°F).

Driving Hints

BREAKING-IN

Tires

New tires need to be run-in for approximately 500 km (300 mi). During this time, you may experience different driving characteristics.

Brakes and Clutch

Avoid heavy use of the brakes and clutch if possible for the first 150 km (100 mi) in town and for the first 1,500 km (1,000 mi) on freeways.

Engine

Avoid driving too fast during the first 1,500 km (1,000 mi). Vary your speed frequently and change up through the gears early. Do not labor the engine.

Vehicles With a Diesel Engine

During the first 3,000 km (2,000 mi), you may notice a ticking sound when your vehicle slows down. This is due to adjustments of your new diesel engine and is normal.

DRIVING THROUGH WATER




WARNING: Do not drive through flowing or deep water as you may lose control of your vehicle.

Note: Driving through standing water can cause vehicle damage.

Note: Engine damage can occur if water enters the air filter.

Before driving through standing water, check the depth. Never drive through water that is higher than the bottom of the wheel hubs.

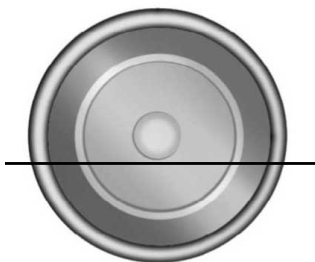

E176913

When driving through standing water, drive very slowly and do not stop your vehicle. Your brake performance and traction may be limited. After driving through water and as soon as it is safe to do so:

- Lightly press the brake pedal to dry the brakes and to check that they work.
- Check that the horn works.
- Check that the exterior lights work.
- Turn the steering wheel to check that the steering power assist works.

FLOOR MATS



WARNING: Use a floor mat designed to fit the footwell of your vehicle that does not obstruct the pedal area. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: Pedals that cannot move freely can cause loss of vehicle control and increase the risk of serious personal injury.

Driving Hints



WARNING: Secure the floor mat to both retention devices so that it cannot slip out of position and interfere with the pedals. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: Do not place additional floor mats or any other covering on top of the original floor mats. This could result in the floor mat interfering with the operation of the pedals. Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: Always make sure that objects cannot fall into the driver foot well while your vehicle is moving. Objects that are loose can become trapped under the pedals causing a loss of vehicle control.



To install the floor mats, position the floor mat eyelet over the retention post and press down to lock in position.

To remove the floor mat, reverse the installation procedure.

Note: *Regularly check the floor mats to make sure they are secure.*

Roadside Emergencies

HAZARD FLASHERS

Note: Depending on applicable laws and regulations in the country for which your vehicle was originally built, your brake lamps may flash during heavy braking. Following this your hazard warning flashers may also flash once your vehicle comes to a stop. To stop the hazard warning flashers press the button or drive off normally.



For item location: See **Instrument Panel** (page 19).

FUEL SHUTOFF



WARNING: If your vehicle has been involved in a crash, have the fuel system checked. Failure to follow this instruction could result in fire, personal injury or death.

In the event of a moderate to severe crash, your vehicle is fitted with a fuel pump shut-off feature that stops the flow of fuel to the engine. Not every impact will cause a shutoff.

Should the engine turn off after a crash, you may restart the engine by carrying out the following.

Ignition Switch

1. Switch the ignition off.
2. Switch the ignition to position **III**.
3. Switch the ignition off.
4. Switch the ignition on again to re-enable the fuel pump.

Note: Various system checks are automatically carried out before the vehicle will restart. If your vehicle fails to restart after the third attempt, the system has detected a fault that requires service. We recommend you contact an authorized dealer.

Keyless Starting (If Equipped)

1. Without applying the brake pedal, press and release the button once.
2. Press the brake pedal, and then press and release the button once.
3. Without applying the brake pedal, press and release the button once.
4. Press the brake pedal and then press the button until the engine starts.

Note: Various system checks are automatically carried out before the vehicle will restart. If your vehicle fails to restart after the third attempt, the system has detected a fault that requires service. We recommend you contact an authorized dealer.

JUMP STARTING THE VEHICLE - 2.2L DURATORQ-TDCI DIESEL



WARNING: Connect batteries with only the same nominal voltage.




WARNING: Use only adequately sized cables with insulated clamps.

Note: Do not disconnect the battery of the disabled vehicle as this could damage the vehicle electrical system.


Roadside Emergencies

Connecting the Jumper Cables

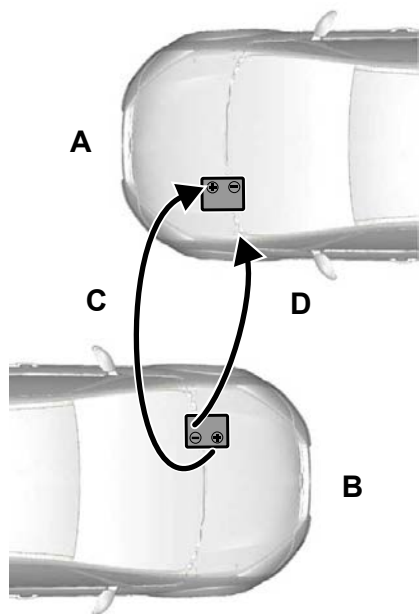

- A Vehicle with the discharged battery.
- B Vehicle with the booster battery.
- C Positive jumper cable.
- D Negative jumper cable.


1. Switch the ignition off and any electrical equipment.

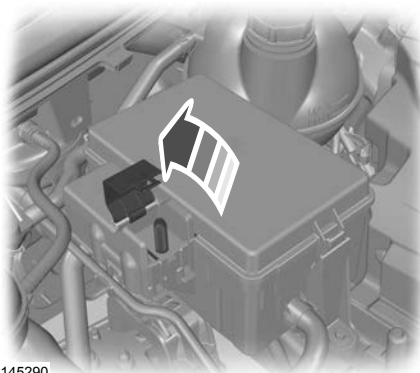

2. Lift up the battery positive connection point cover. For item location, refer to the appropriate under hood overview. See **Maintenance** (page 279).

WARNING: Make sure that the cables are clear of any moving parts and fuel delivery system parts.

3. Connect one end of the positive jumper cable to the positive terminal of the discharged battery and the other end to the positive terminal of the booster battery.

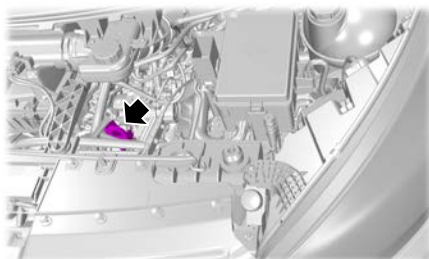

Roadside Emergencies



WARNING: Do not connect the negative jumper cable to any other part of your vehicle. Use the ground point.

4. Connect one end of the negative jumper cable to the negative terminal of the booster battery or to a suitable ground point and the other end to the ground point on your vehicle.

Starting the Engine

1. Start the engine of the vehicle with the booster battery and keep the engine speed between 2000 and 3000 RPM.
2. Start the engine of the vehicle with the discharged battery.
3. When the engine starts, run the engines for three minutes before you disconnect the jumper cables.

Remove the jumper cables in the reverse order that they were connected.

Note: Do not switch the headlamps on before you disconnect the jumper cables. The peak voltage could cause the bulbs to fail.

JUMP STARTING THE VEHICLE - 2.0L ECOBLUE




WARNING: Connect batteries with only the same nominal voltage.



WARNING: Use only adequately sized cables with insulated clamps.

Note: Do not disconnect the battery of the disabled vehicle as this could damage the vehicle electrical system.


Connecting the Jumper Cables

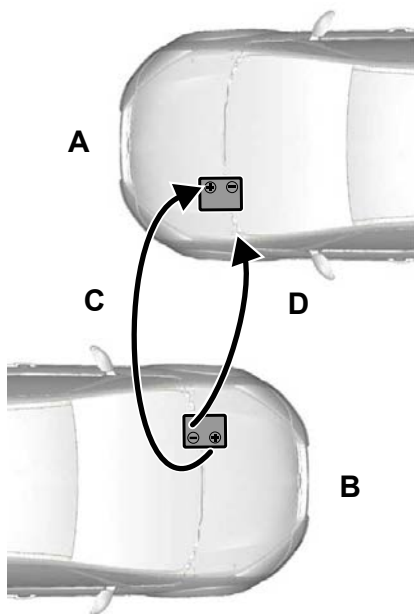

- A Vehicle with the discharged battery.
- B Vehicle with the booster battery.
- C Positive jumper cable.
- D Negative jumper cable.

1. Switch the ignition off and any electrical equipment.

Roadside Emergencies

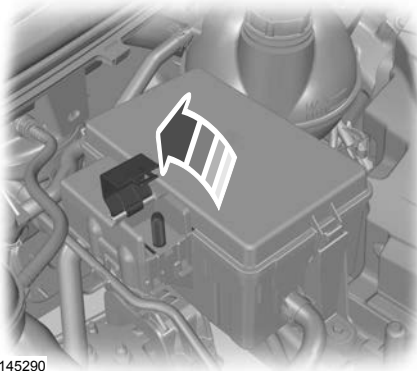

E145290

2. Lift up the battery positive connection point cover. For item location, refer to the appropriate under hood overview. See **Maintenance** (page 279).



WARNING: Make sure that the cables are clear of any moving parts and fuel delivery system parts.

3. Connect one end of the positive jumper cable to the positive terminal of the discharged battery and the other end to the positive terminal of the booster battery.



WARNING: Do not connect the negative jumper cable to any other part of your vehicle. Use the ground point.

4. Connect one end of the negative jumper cable to the negative terminal of the booster battery or to a suitable ground point and the other end to the ground point on your vehicle.

Starting the Engine

1. Start the engine of the vehicle with the booster battery and keep the engine speed between 2000 and 3000 RPM.
2. Start the engine of the vehicle with the discharged battery.
3. When the engine starts, run the engines for three minutes before you disconnect the jumper cables.

Remove the jumper cables in the reverse order that they were connected.

Note: Do not switch the headlamps on before you disconnect the jumper cables. The peak voltage could cause the bulbs to fail.

TOWING POINTS

Front Towing Point



WARNING: Make sure that the towing eye is fully tightened. Failure to follow this instruction could result in personal injury.



WARNING: You must switch the ignition on when your vehicle is being towed.

Roadside Emergencies




E146426

1. Carefully remove the cover.
2. Install the towing eye.


Note: It has a left-hand thread. Turn it counterclockwise to install it.

Rear Towing Point

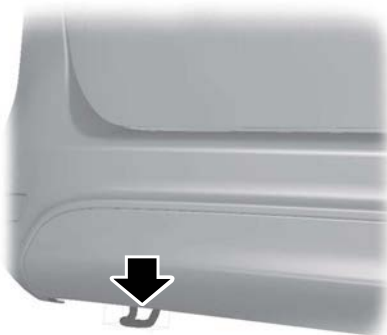


E142319

Towing Eye Location

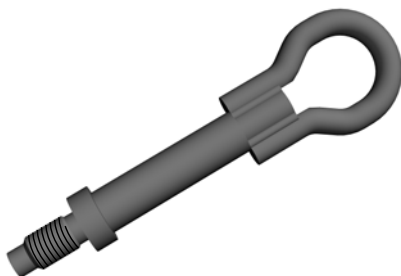

The towing eye is in the engine compartment on the right-hand side.

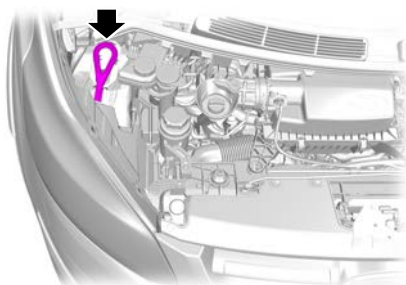

Note: You must carry the towing eye in your vehicle at all times.

Emergency Equipment

FIRST AID KIT

Space is provided in the passenger's side lower door bin.


WARNING TRIANGLE

Space is provided in the driver's side lower door bin.

Fuses

FUSE BOX LOCATIONS - 2.0L ECOBLUE, PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

Engine Compartment Fuse Box

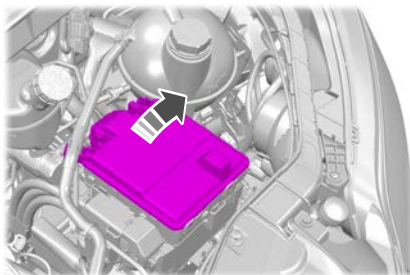

Passenger Compartment Fuse Box



E260233

The fuse box is behind the removable trim panel.

Pre-fuse Box

The fuse box is under the driver seat.

Body Control Module




E260233

The fuse box is behind the removable trim panel.

FUSE BOX LOCATIONS - 2.2L DIESEL

Engine Compartment Fuse Box

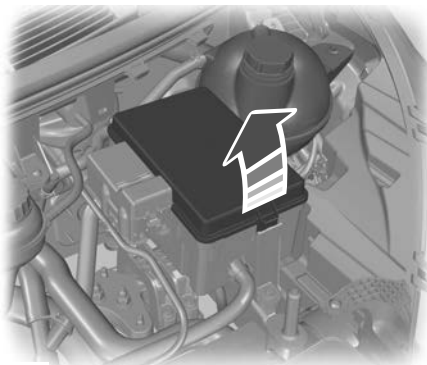

E146726

Fuses

Passenger Compartment Fuse Box



E260233

The fuse box is behind the removable trim panel.

Body Control Module



E260233

The fuse box is behind the removable trim panel.


Pre-fuse Box

The fuse box is under the driver seat.

Fuses

FUSE SPECIFICATION CHART - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

Engine Compartment Fuse Box

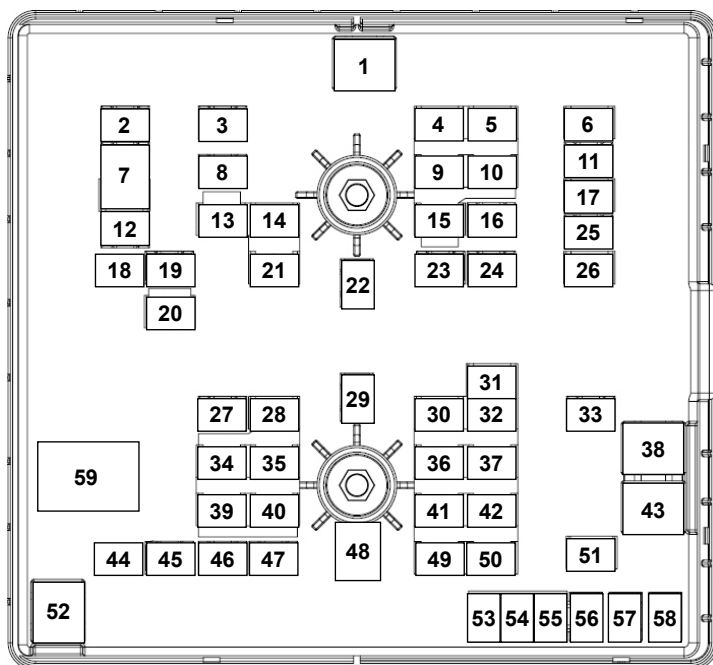

Item	Fuse Rating	Protected Component
1	50 A	Wipers.
2	-	Not used.
3	40 A	Right-hand heated windshield element.
4	15 A	Rear washer motor.
5	-	Not used.
6	5 A	Fuel door actuator.

Fuses


Item	Fuse Rating	Protected Component
7	40 A	Front blower motor.
8	40 A	Left-hand heated windshield element.
9	-	Not used.
10	5 A	Fuel tank isolation valve.
11	40 A	Auxiliary power point. USB port.
12	20 A	Horn.
13	10 A	Vehicle power 3.
14	5 A	Heater core isolation valve.
15	5 A	Turbo coolant pump.
16	-	Not used.
17	10 A	Right-hand high-intensity discharge headlamps.
18	40 A	Rear window defroster.
19	30 A	Fuel pump driver module.
20	10 A	Power folding mirrors.
21	15 A	High temperature coolant pump.
22	40 A	Rear blower motor.
23	-	Not used.
24	40 A	Run/Start.
25	40 A	Auxiliary power points.
26	10 A	Left-hand high-intensity discharge headlamps.
27	-	Not used.
28	15 A	Motor electronics coolant pump.
29	40 A	Brake vacuum pump.
30	15 A	Traction battery coolant pump.
31	5 A	Anti-lock brake system.
32	-	Not used.

Fuses

Item	Fuse Rating	Protected Component
33	30 A	Powertrain control module.
34	15 A	Vehicle power 4.
35	5 A	Traction battery cooling valve.
36	5 A	Front evaporator shutoff valve.
37	-	Not used.
38	-	Not used.
39	15 A	Vehicle power 2.
40	5 A	Air conditioning compressor.
41	5 A	Chiller shutoff valve.
42	5 A	Rear heater shutoff valve.
43	60 A	Anti-lock brake system pump.
44	25 A	Cooling fan.
45	30 A	Trailer socket.
46	40 A	Heater element 3.
47	40 A	Heater element 1.
48	50 A	Cooling fan.
49	10 A	Positive temperature coefficient heater.
50	5 A	Rear evaporator shutoff valve.
51	15 A	Battery energy control module.
52	50 A	Cooling fan.
53	5 A	Bypass shutoff valve.
54	10 A	Battery charge control module.
55	5 A	Vehicle control module.
56	-	Not used.
57	25 A	Anti-lock brake system valves.
58	40 A	Heater element 2.
59	-	Cooling fan relay.

Fuses

Passenger Compartment Fuse Box

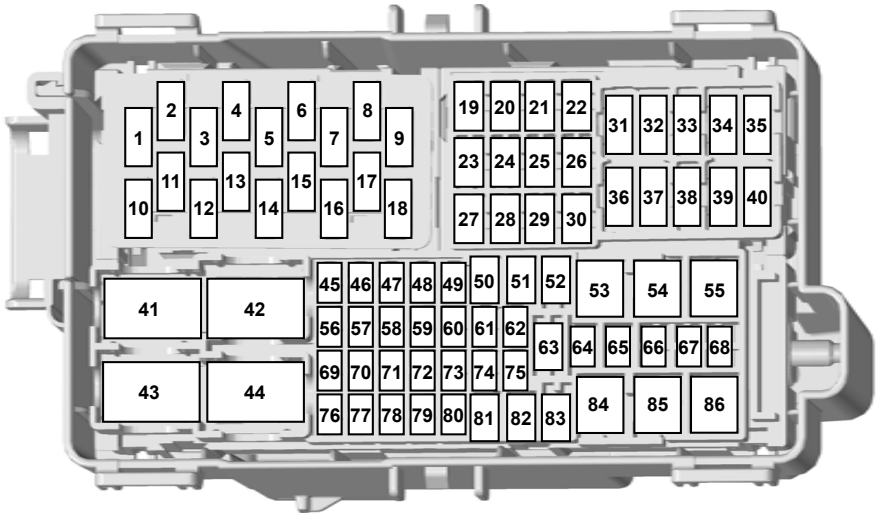

Item	Fuse Rating	Protected Component
1	5 A	USB port.
2	-	Not used.
3	5 A	USB port.
4	-	Not used.
5	5 A	USB port.
6	-	Not used.
7	-	Not used.
8	-	Not used.
9	10 A	Heated exterior mirrors.
10	-	Not used.
11	-	Not used.
12	15 A	Vehicle control module.

Fuses

Item	Fuse Rating	Protected Component
13	15 A	Vehicle control module.
14	15 A	Vehicle control module.
15	-	Not used.
16	5 A	Rain sensor.
17	-	Not used.
18	20 A	Rear window wiper motor.
19	-	Not used.
20	-	Not used.
21	20 A	Heated rear window.
22	20 A	Heated rear window.
23	20 A	Auxiliary power point.
24	20 A	Auxiliary power point.
25	25 A	Windshield wiper motor.
26	25 A	Windshield wiper motor.
27	-	Not used.
28	-	Not used.
29	-	Not used.
30	-	Not used.
31	-	Not used.
32	-	Not used.
33	-	Not used.
34	-	Not used.
35	-	Not used.
36	-	Not used.
37	-	Not used.
38	-	Not used.
39	-	Not used.

Fuses


Item	Fuse Rating	Protected Component
40	-	Not used.
41	-	Not used.
42	40 A	Run/start relay.
43	10 A	Upfitter relay.
44	40 A	Run/start relay.
45	10 A	Upfitter interface module.
46	15 A	Trailer tow module.
47	10 A	Generator alternating current/direct current inverter.
48	-	Not used.
49	10 A	Brake pedal switch.
50	-	Not used.
51	-	Not used.
52	30 A	Driver power seat.
53	60 A	Battery.
54	-	Not used.
55	50 A	Body control module.
56	-	Not used.
57	-	Not used.
58	10 A	Upfitter interface control module.
59	10 A	Blind spot information system.
60	10 A	Not used.
61	7.5 A	Tachograph.
62	15 A	Upfitter interface module.
63	20 A	Auxiliary power point.
64	-	Not used.
65	-	Not used.
66	10 A	Upfitter relay.

Fuses

Item	Fuse Rating	Protected Component
67	-	Not used.
68	5 A	Trailer tow module.
69	5 A	Electronic power assist steering.
70	-	Not used.
71	10 A	Heated seats.
72	10 A	Heated seats.
73	20 A	Lighting control.
74	-	Not used.
75	20 A	Power distribution box.
76	10 A	Not used.
77	5 A	Headlamp switch.
78	10 A	Electric motor direct current/alternating current inverter.
79	-	Run/start relay.
80	5 A	Not used.
81	40 A	Vehicle dynamics control module.
82	30 A	Not used.
83	15 A	Vehicle dynamics control module.
84	50 A	Body control module.
85	-	Not used.
86	50 A	Body control module.

Fuses

Pre-fuse Box

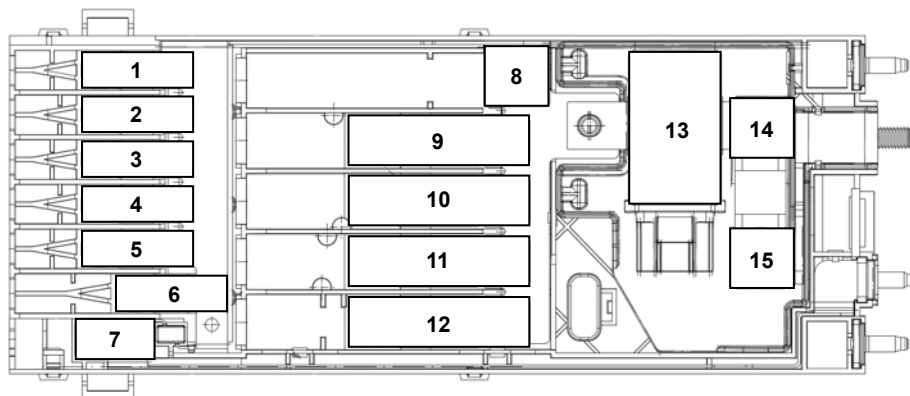

Item	Fuse Rating	Protected Component
1	125 A	Body control module.
2	80 A	Electronic power assist steering.
3	150 A	Auxiliary heater.
4	-	Not used.
5	-	Not used.
6	150 A	Passenger compartment fuse box.
7	60 A	Camper.
8	-	Battery.
9	470 A	Direct current/Direct current inverter.
10	300 A	Engine compartment fuse box.
11	-	Not used.
12	150 A	Driver compartment fuse box.

Fuses

Item	Fuse Rating	Protected Component
13	-	Load shed relay.
14	180 A	Auxiliary power point 1.
15	60 A	Auxiliary power point 2.

Body Control Module



Item	Fuse Rating	Protected Component
1	-	Not used.
2	10 A	Power inverter.
3	7.5 A	Power window switch. Power exterior mirrors.
4	20 A	Not used.
5	-	Not used.
6	10 A	Anti-theft alarm horn.
7	10 A	Not used.
8	5 A	Telematics modem.

Fuses

Item	Fuse Rating	Protected Component
9	5 A	Intrusion sensor. Rear air conditioning.
10	-	Not used.
11	-	Not used.
12	7.5 A	Climate control.
13	7.5 A	Data link connector. Steering column. Instrument cluster.
14	-	Not used.
15	15 A	SYNC 3 module.
16	-	Not used.
17	7.5 A	Tachograph.
18	7.5 A	Not used.
19	5 A	Battery back-up sounder.
20	5 A	Ignition switch.
21	5 A	Positive temperature coefficient heater control.
22	5 A	Pedestrian alert control module.
23	30 A	Not used.
24	30 A	Not used.
25	20 A	Driver door module.
26	30 A	Passenger door module.
27	30 A	Not used.
28	30 A	Not used.
29	15 A	Not used.
30	5 A	Not used.
31	10 A	Data link connector. Remote key receiver.
32	20 A	Radio.


Fuses

Item	Fuse Rating	Protected Component
33	-	Not used.
34	30 A	Tachograph. Message center. Positive temperature coefficient heater. Direct current/Alternating current inverter. Lane keeping system camera. Parking aid. Steering column.
35	5 A	Not used.
36	15 A	Parking aid. Lane keeping system camera. Steering column control module.
37	20 A	Not used.
38	30 A	Power windows.

Fuses

FUSE SPECIFICATION CHART - 2.0L ECOBLUE

Engine Compartment Fuse Box

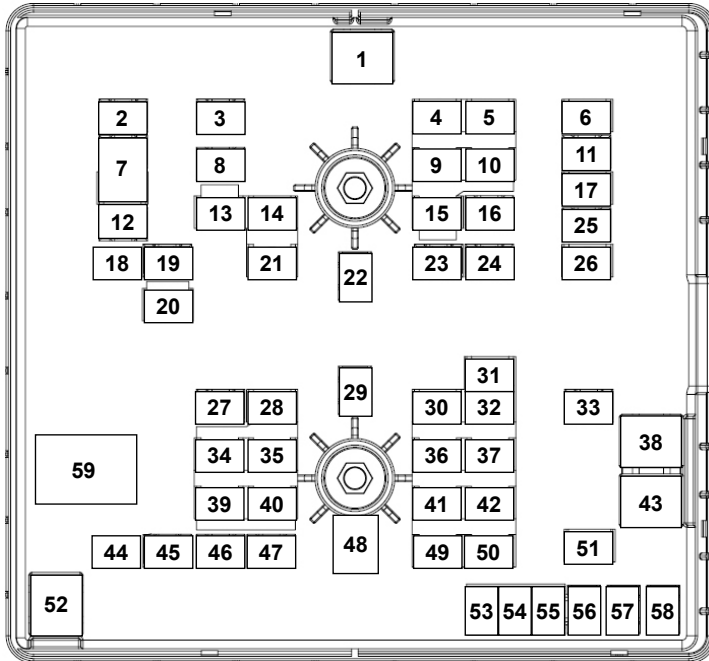

Item	Fuse Rating	Protected Component
1	50 A	Wipers.
2	-	Not used.
3	40 A	Right-hand heated windshield element.
4	15 A	Rear window washer pump.
5	-	Not used.
6	-	Not used.
7	40 A	Front blower motor.

Fuses


Item	Fuse Rating	Protected Component
8	40 A	Left-hand heated windshield element.
9	15 A	Rear door latch.
10	5 A	Battery energy control module - MHEV.
11	40 A	Auxiliary power point. USB port.
12	20 A	Horn.
13	20 A	Selective catalytic reduction system.
14	10 A	Vehicle power 5.
15	-	Not used.
16	-	Not used.
17	10 A	Right-hand high-intensity discharge headlamps.
18	40 A	Rear window defroster.
19	20 A	Front fog lamps.
20	10 A	Power folding mirrors.
21	15 A	Vehicle power 4.
22	40 A	Rear blower motor.
23	20 A	Fuel pump.
24	40 A	Starter relay.
25	40 A	Auxiliary power point.
26	10 A	Left-hand high-intensity discharge headlamps.
27	40 A	Selective catalytic reduction system.
28	20 A	Vehicle power 1.
29	40 A	Fuel filter heater.
30	15 A	Coolant pump.
31	5 A	Anti-lock brake system.
32	15 A	Transmission control module.
33	30 A	Starter motor.

Fuses

Item	Fuse Rating	Protected Component
34	15 A	Selective catalytic reduction system.
35	15 A	Vehicle power 2.
36	5 A	Belt integrated starter generator - MHEV.
37	5 A	Glow plugs. Powertrain control module.
38	60 A	Glow plugs.
39	15 A	Selective catalytic reduction system.
40	10 A	Vehicle power 3.
41	10 A	Glow plug monitor.
42	15 A	Transmission control unit.
43	60 A	Anti-lock brake system pump.
44	25 A	Cooling fan.
45	30 A	Trailer socket.
46	-	Not used.
47	40 A	Rear suspension.
48	50 A	Cooling fan.
49	15 A	Nitrogen oxides sensor.
50	5 A	Closed crankcase ventilation heater.
51	10 A	Air conditioning clutch.
52	50 A	Cooling fan.
53	5 A	Active tensioner - MHEV.
54	20 A	Backup alarm.
55	25 A	Transmission fluid pump.
56	20 A	Fuel fired booster heater.
57	25 A	Anti-lock brake system with electronic stability control.
58	30 A	Trailer socket.
59	-	Cooling fan relay.

Fuses

Passenger Compartment Fuse Box

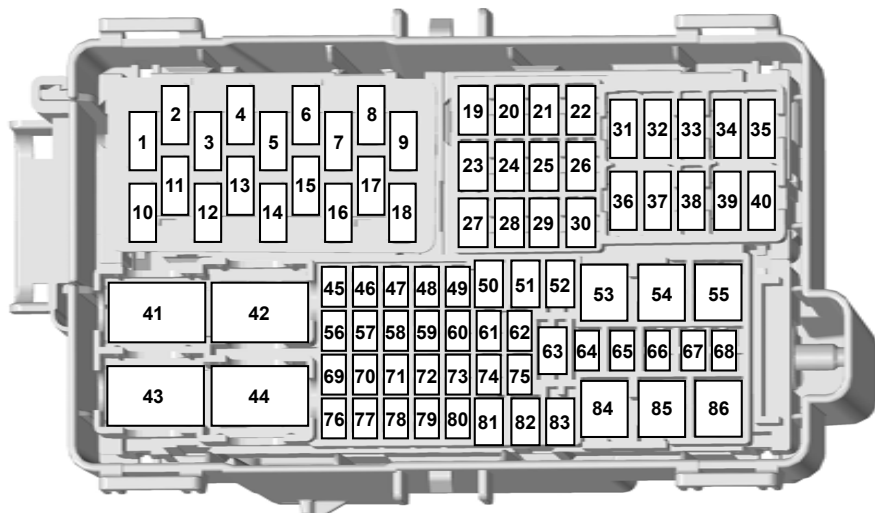

Item	Fuse Rating	Protected Component
1	5 A	USB port.
2	-	Not used.
3	5 A	USB port.
4	-	Not used.
5	5 A	USB port.
6	-	Not used.
7	-	Not used.
8	-	Not used.
9	10 A	Heated exterior mirrors.
10	-	Not used.
11	-	Not used.
12	-	Not used.

Fuses

Item	Fuse Rating	Protected Component
13	-	Not used.
14	-	Not used.
15	-	Not used.
16	5 A	Rain sensor.
17	-	Not used.
18	20 A	Rear window wiper motor.
19	-	Not used.
20	-	Not used.
21	20 A	Heated rear window.
22	20 A	Heated rear window.
23	20 A	Auxiliary power point.
24	20 A	Auxiliary power point.
25	25 A	Windshield wiper motor.
26	25 A	Windshield wiper motor.
27	-	Not used.
28	-	Not used.
29	-	Not used.
30	-	Not used.
31	-	Not used.
32	-	Not used.
33	-	Not used.
34	-	Not used.
35	-	Not used.
36	-	Not used.
37	-	Not used.
38	-	Not used.
39	-	Not used.

Fuses


Item	Fuse Rating	Protected Component
40	-	Not used.
41	-	Not used.
42	40 A	Run/start relay.
43	-	Upfitter relay.
44	40 A	Run/start relay.
45	10 A	Upfitter module.
46	15 A	Trailer tow module.
47	5 A	Fuel fired heater.
48	-	Not used.
49	10 A	Brake pedal switch.
50	-	Not used.
51	-	Not used.
52	30 A	Driver power seat.
53	60 A	Battery.
54	60 A	Power inverter.
55	50 A	Body control module.
56	-	Not used.
57	-	Not used.
58	10 A	Connector camper body interface. Upfitter interface control module. Secondary junction box.
59	-	Not used.
60	-	Not used.
61	7.5 A	Tachograph.
62	15 A	Upfitter interface module.
63	20 A	Auxiliary power point.
64	-	Not used.
65	-	Not used.

Fuses

Item	Fuse Rating	Protected Component
66	10 A	Enhanced cut off relay system.
67	-	Not used.
68	5 A	Trailer tow module.
69	30 A	Electronic power assist steering.
70	-	Not used.
71	10 A	Heated seats.
72	10 A	Heated seats.
73	20 A	Adaptive front lighting module. Headlamp leveling.
74	-	Not used.
75	10 A	Power distribution box.
76	-	Not used.
77	5 A	Headlamp switch.
78	-	Not used.
79	5 A	Run/start relay.
80	-	Not used.
81	-	Not used.
82	-	Not used.
83	15 A	Vehicle dynamics control module.
84	50 A	Body control module.
85	-	Not used.
86	50 A	Body control module.

Fuses

Pre-fuse Box

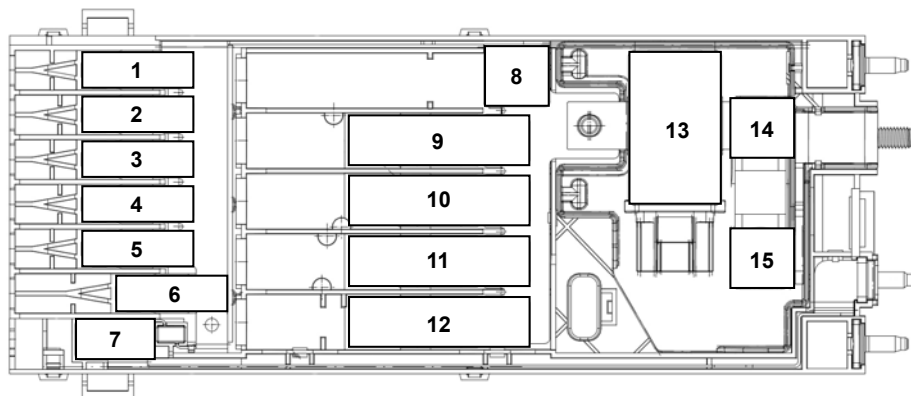


Item	Fuse Rating	Protected Component
1	125 A	Body control module.
2	80 A	Electronic power assist steering.
3	150 A	Auxiliary heater.
4	-	Not used.
5	-	Not used.
6	150 A	Passenger compartment fuse box.
7	60 A	Camper.
8	-	Battery.
9	470 A	Direct current/Direct current inverter.
10	300 A	Engine compartment fuse box.
11	-	Not used.
12	150 A	Driver compartment fuse box.

Fuses

Item	Fuse Rating	Protected Component
13	-	Load shed relay.
14	180 A	Auxiliary power point 1.
15	60 A	Auxiliary power point 2.

Body Control Module

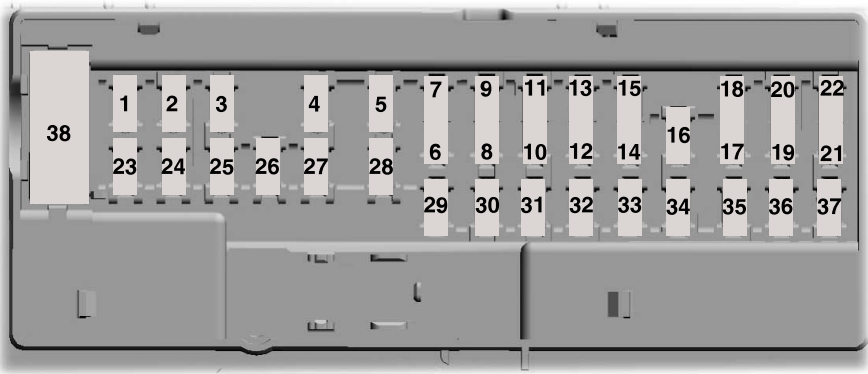

Item	Fuse Rating	Protected Component
1	-	Not used.
2	10 A	Power inverter.
3	7.5 A	Power window switch. Power exterior mirrors.
4	20 A	Not used.
5	-	Not used.
6	10 A	Not used.
7	10 A	Not used.
8	5 A	Anti-theft alarm horn.

Fuses

Item	Fuse Rating	Protected Component
9	5 A	Intrusion sensor. Rear air conditioning.
10	-	Not used.
11	-	Not used.
12	7.5 A	Climate control.
13	7.5 A	Data link connector. Steering column. Instrument cluster.
14	15 A	Battery energy control module - MHEV.
15	15 A	SYNC 3 module.
16	-	Not used.
17	7.5 A	Tachograph.
18	7.5 A	Not used.
19	5 A	Battery back-up sounder.
20	5 A	Ignition switch.
21	5 A	Positive temperature coefficient heater control.
22	5 A	Pedestrian alert control module.
23	30 A	Not used.
24	30 A	Not used.
25	20 A	Driver door module.
26	30 A	Passenger door module.
27	30 A	Not used.
28	30 A	Not used.
29	15 A	Not used.
30	5 A	Not used.
31	10 A	Data link connector. Remote key receiver.
32	20 A	Radio. Telematics module.


Fuses

Item	Fuse Rating	Protected Component
33	-	Not used.
34	30 A	Tachograph. Message center. Positive temperature coefficient heater. Direct current/Alternating current inverter. Lane keeping system camera. Parking aid. Steering column.
35	5 A	Not used.
36	15 A	Parking aid. Lane keeping system camera. Steering column control module.
37	20 A	Not used.
38	30 A	Power windows.

Fuses

FUSE SPECIFICATION CHART - 2.2L DIESEL

Engine Compartment Fuse Box

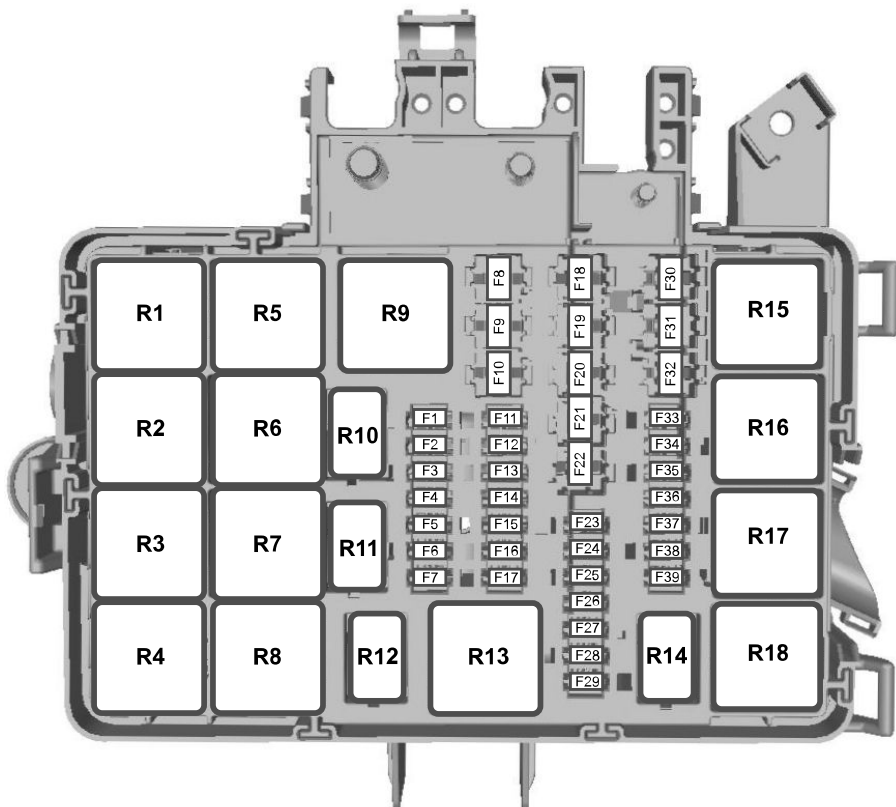

E148826

Fuse Location	Fuse Rating	Protected Component
F1	-	Not used.
F2	-	Not used.
F3	-	Not used.

Fuses

Fuse Location	Fuse Rating	Protected Component
F4	-	Not used.
F5	3 A	Diesel particulate filter vaporizer glow plug.
F6	3 A	Anti-lock brake system with electronic stability control.
F7	7.5 A	Powertrain control module. Telematics control unit module.
F8	-	Not used.
F9	30 A	Left-hand windshield wiper.
F10	30 A	Right-hand windshield wiper.
F11	10 A	Air conditioning clutch.
F12	20 A	Diesel particulate filter vaporizer glow plug.
F13	-	Not used.
F14	-	Not used.
F15	-	Not used.
F16	-	Not used.
F17	-	Not used.
F18	40 A	Anti-lock brake system with electronic stability control.
F19	30 A	Starter motor solenoid.
F20	60 A	Glow plugs.
F21	60 A	Ignition relay 3.
F22	30 A	Fuel fired booster heater.
F23	10 A	Not used (spare).
F24	7.5 A	Fuel pump.
F25	15 A	Not used (spare).
F26	-	Not used.
F27	-	Not used.
F28	-	Not used.

Fuses


Fuse Location	Fuse Rating	Protected Component
F29	3 A	Audio unit.
F30	60 A	Low-speed cooling fan.
F31	-	Not used.
F32	60 A	Windshield wiper motor.
F33	-	Not used.
F34	-	Not used.
F35	15 A	Powertrain control module.
F36	7.5 A	Mass air flow sensor.
F37	7.5 A	Fuel volume control valve.
F38	7.5 A	Air conditioning clutch.
F39	15 A	Exhaust gas temperature sensor. Fuel vaporizer system fuel pump. Coolant bypass solenoid valve. Low-speed cooling fan. High-speed cooling fan.

Relay Number	Circuits Switched
R1	Ignition relay 3.
R2	Not used.
R3	Rear window wiper.
R4	Windshield wiper relay.
R5	Not used.
R6	Windshield wipers.
R7	Windshield wiper speed.
R8	Fuel heater.
R9	Starter motor.
R10	Air conditioning clutch.
R11	Fuel vaporizer system glow plug.

Fuses

Relay Number	Circuits Switched
R12	Fuel pump.
R13	Not used.
R14	Not used.
R15	Low-speed cooling fan.
R16	Not used.
R17	Powertrain control module.
R18	High-speed cooling fan.

Passenger Compartment Fuse Box

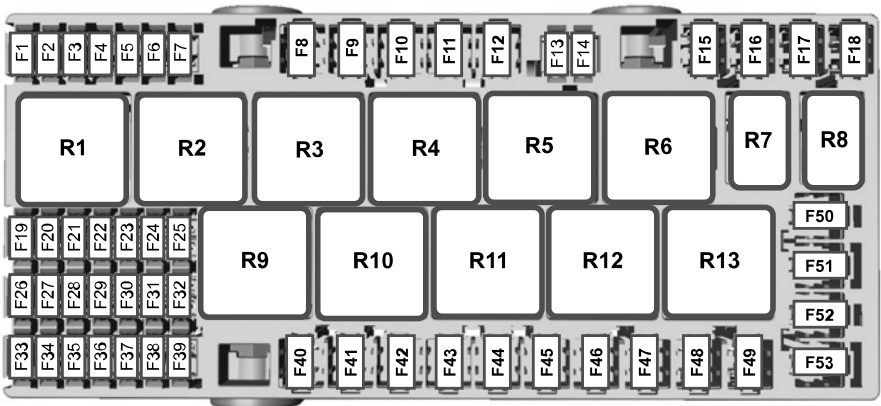

E148827

Fuse Location	Fuse Rating	Protected Component
F1	10 A	Restraints control module.
F2	-	Not used.
F3	10 A	Heated exterior mirrors.
F4	-	Not used.

Fuses

Fuse Location	Fuse Rating	Protected Component
F5	20 A	Fuel fired booster heater.
F6	5 A	Tachograph.
F7	10 A	Adaptive cruise control.
F8	40 A	Direct current/alternating current inverter.
F9	-	Not used.
F10	30 A	Driver power seat.
F11	-	Not used.
F12	-	Not used.
F13	-	Not used.
F14	5 A	Powertrain control module.
F15	40 A	Powertrain control module.
F16	40 A	Passenger compartment fuse box.
F17	-	Not used.
F18	30 A	Anti-lock brake system with electronic stability control.
F19	5 A	Tachograph.
F20	5 A	Heated windshield relay. Heated exterior mirror relay. AC power point. Direct current/alternating current inverter.
F21	10 A	Modified vehicle connection.
F22	15 A	Passenger compartment fuse box.
F23	7.5 A	Climate control.
F24	5 A	Headlamp leveling.
F25	7.5 A	Interior lighting.
F26	10 A	Heated seats.
F27	10 A	Heated seats.
F28	20 A	Cornering lamps.

Fuses

Fuse Location	Fuse Rating	Protected Component
F29	10 A	Rear view camera. Interior rear view mirror. Lane keeping system.
F30	5 A	Adaptive cruise control.
F31	-	Not used.
F32	10 A	Interior lamp.
F33	-	Not used.
F34	20 A	Rear window wiper.
F35	5 A	Power folding mirrors.
F36	20 A	Horn.
F37	7.5 A	Not used (spare).
F38	5 A	Windshield wiper relay. Rear window wiper relay. Horn relay. Blower motor relay.
F39	7.5 A	Power windows. Rear heating, ventilation and air conditioning. Remote keyless entry.
F40	40 A	Blower motor.
F41	40 A	Rear blower motor.
F42	30 A	Heated rear window.
F43	30 A	Trailer module.
F44	60 A	Auxiliary power points.
F45	-	Not used.
F46	30 A	Power windows.
F47	20 A	Cigar lighter.
F48	20 A	Rear auxiliary power points.
F49	20 A	Front auxiliary power points.
F50	60 A	Ignition relay 1.


Fuses

Fuse Location	Fuse Rating	Protected Component
F51	60 A	Ignition relay 2.
F52	40 A	Left-hand heated windshield element.
F53	40 A	Right-hand heated windshield element.

Relay Number	Circuits Switched
R1	Fuel fired booster heater.
R2	Auxiliary power points.
R3	Not used.
R4	Ignition relay 2.
R5	Not used.
R6	Ignition relay 1.
R7	Horn.
R8	Not used.
R9	Blower motor.
R10	Rear blower motor.
R11	Heated rear window. Heated exterior mirrors.
R12	Right-hand heated windshield element.
R13	Left-hand heated windshield element.

Fuses

Pre-fuse Box

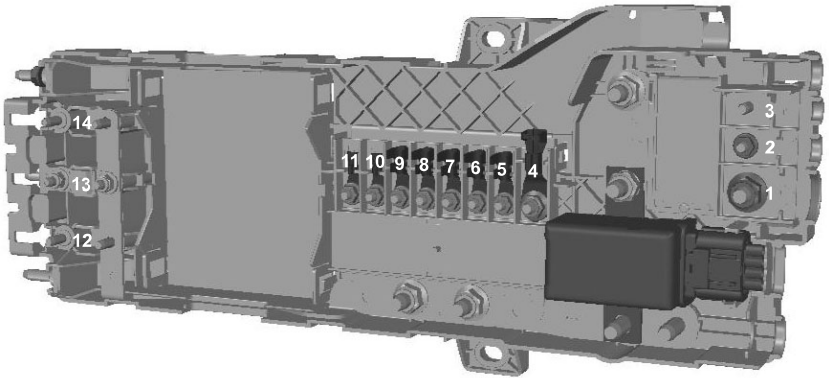


E148828

Fuse Location	Fuse Rating	Protected Component
F1	470 A	Alternator. Starter motor. Engine junction box.
F2	100 A	Passenger compartment fuse box.
F3	-	Not used.
F4	200 A	Auxiliary junction box.
F5	100 A	Auxiliary junction box.
F6	80 A	Electric booster heater.
F7	80 A	Heated windshield relay.
F8	100 A	Engine junction box.
F9	100 A	Auxiliary junction box.
F10	60 A	Passenger compartment fuse box.
F11	60 A	Passenger compartment fuse box.
F12	60 A	Modified vehicle connection.
F13	60 A	Modified vehicle connection.
F14	60 A	Modified vehicle connection.

Fuses

Body Control Module

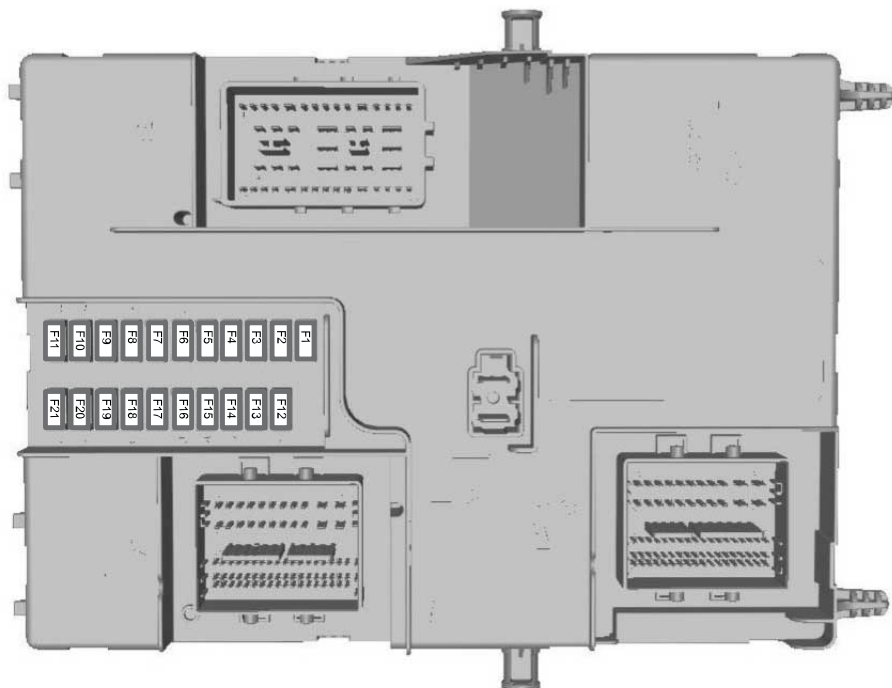

E148830

Fuse Location	Fuse Rating	Protected Component
F1	15 A	Central locking system.
F2	15 A	Central locking system.
F3	15 A	Ignition switch. Auxiliary battery.
F4	5 A	Parking assist control module.
F5	5 A	Rain sensor module. Autolamps.

Fuses

Fuse Location	Fuse Rating	Protected Component
F6	15 A	Windshield washer pump.
F7	7.5 A	Exterior mirrors.
F8	15 A	Front fog lamps.
F9	10 A	Right-hand high beam.
F10	10 A	Left-hand high beam.
F11	25 A	Right-hand exterior lamps. Left-hand side lamps.
F12	20 A	Anti-theft alarm horn. Battery back-up sounder.
F13	15 A	Data link connector. Auxiliary power point relay. Interior lighting.
F14	25 A	Daytime running lamps. Direction indicators. Rear fog lamp.
F15	25 A	Left-hand exterior lamps. Right-hand side lamps. High mounted stoplamp.
F16	20 A	Audio control.
F17	7.5 A	Blower motor. Instrument cluster. Climate control.
F18	10 A	Lighting control. Steering wheel module.
F19	5 A	Front control/display interface module.
F20	5 A	Passive anti-theft system. Ignition.
F21	3 A	Audio control. Accessory delay.


Fuses

CHANGING A FUSE

Fuses










WARNING: Always replace a fuse with one that has the specified amperage rating. Using a fuse with a higher amperage rating can cause severe wire damage and could start a fire.

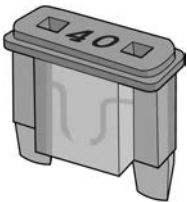

E217331

If electrical components in the vehicle are not working, a fuse may have blown. Blown fuses are identified by a broken wire within the fuse. Check the appropriate fuses before replacing any electrical components.

Fuse Types

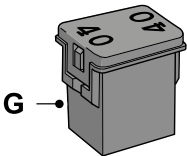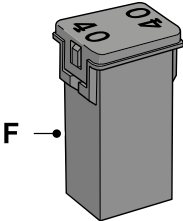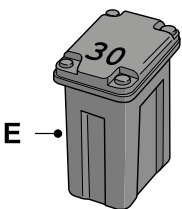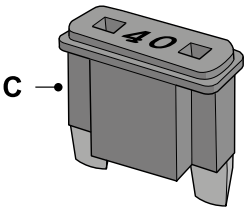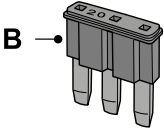

E207206

Callout	Fuse Type
A	Micro 2
B	Micro 3
C	Maxi
D	Mini

Fuses

Callout	Fuse Type
E	M Case
F	J Case
G	J Case Low Profile

Maintenance

GENERAL INFORMATION



WARNING: Do not work on a hot engine.



WARNING: Switch the ignition off and apply the parking brake.



WARNING: Do not touch the electronic ignition system parts after you have switched the ignition on or when the engine is running. The system operates at high voltage. Failure to adhere to this warning could result in serious personal injury or death.



WARNING: Keep your hands and clothing clear of the engine cooling fan.



WARNING: If your vehicle has self-leveling air suspension, you must switch the system off before carrying out any maintenance or repair. Failure to follow this warning could result in serious personal injury or death.

Under certain conditions, the engine cooling fan may continue to run for several minutes after you switch your vehicle off. See **Engine Cooling Fan** (page 288).

Make sure that you fit filler caps securely after carrying out maintenance checks.

In addition to regular servicing, we recommend that you carry out the following checks.

Check Daily

- Exterior lamps.
- Interior lamps.
- Warning lamps and indicators.

Check When Refueling


- Washer fluid level. See **Washer Fluid Check** (page 295).
- Tire pressures. See **Tire Pressures** (page 334).
- Tire condition. See **Tire Care** (page 320).

Check Monthly

- Engine oil level. See **Engine Oil Check** (page 286).
- Engine coolant level. See **Engine Coolant Check** (page 288).
- Brake fluid level. See **Brake Fluid Check** (page 291).
- Pipes, hoses and reservoirs for leaks.
- Air conditioning operation.
- Parking brake operation.
- Horn operation.
- Wheel Lug Nut Torque. See **Lug Nuts** (page 343).

OPENING AND CLOSING THE HOOD - RHD


Opening the Hood

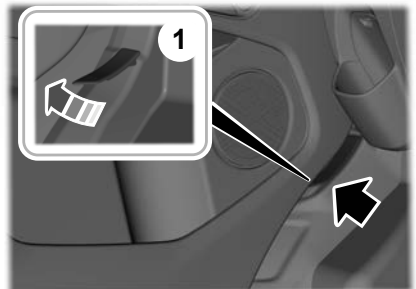

E251852


1. Open the left-hand front door and pull the hood release handle up.

Maintenance

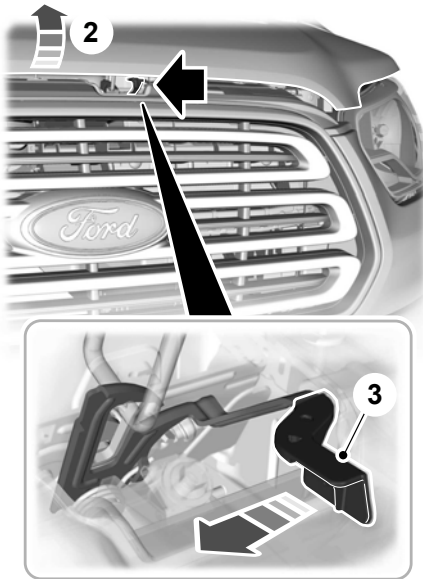

E217707

2. Slightly lift the hood.
3. Move the catch to the left.
4. Open the hood.

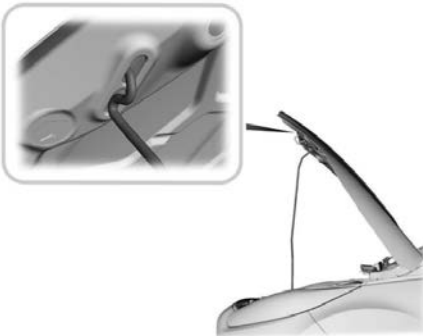


E87786

5. Support the hood with the strut.


Opening the Hood if the Vehicle Battery has no Charge

1. Unlock the right-hand front door using the key and access the left-hand front footwell. See **Locking and Unlocking** (page 55).

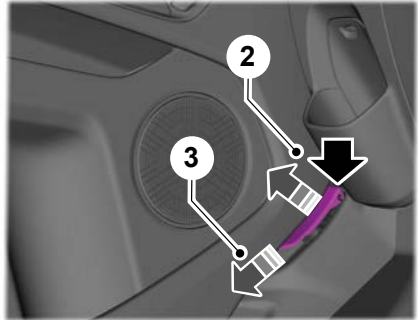

E251853


2. Remove the hood release handle by carefully prying it upward in the position shown.
3. Slide the hood release handle down to remove it from the hood release lever.

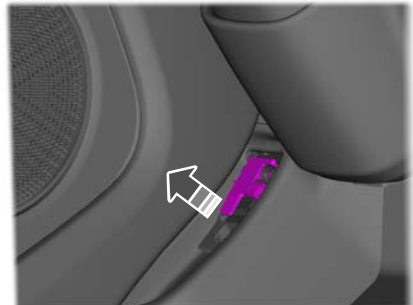

E251854

4. Pull the hood release lever up.

Maintenance

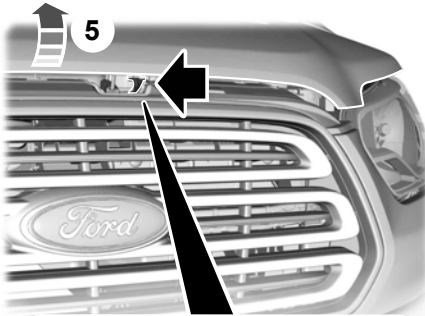

E252070

5. Slightly lift the hood.
6. Move the catch to the left.
7. Open the hood.



E87786

8. Support the hood with the strut.


Closing the Hood

1. Remove the strut from the catch and secure it correctly in the clip.
2. Lower the hood and allow it to drop under its own weight for the last 20–30 cm (8–12 in).

Note: Make sure that the hood is correctly closed.

OPENING AND CLOSING THE HOOD - LHD


Opening the Hood

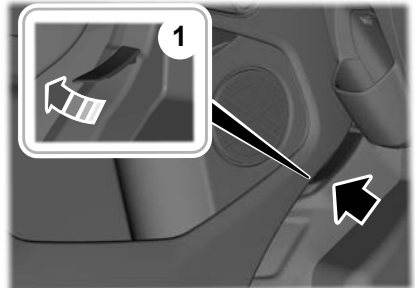

E251852

1. Open the left-hand front door and pull the hood release handle up.


Maintenance

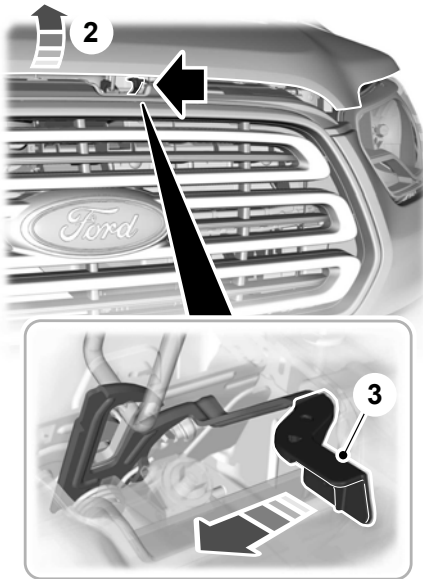

E217707

2. Slightly lift the hood.
3. Move the catch to the left.

4. Open the hood.

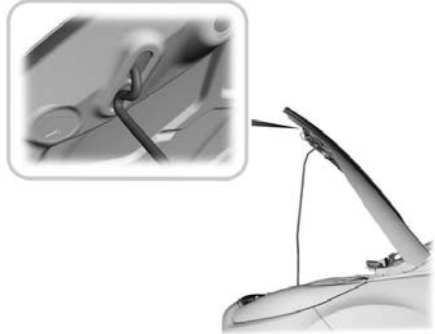

E87786

5. Support the hood with the strut.


Closing the Hood

1. Remove the strut from the catch and secure it correctly in the clip.
2. Lower the hood and allow it to drop under its own weight for the last 20–30 cm (8–12 in).

Note: Make sure that the hood is correctly closed.

Maintenance

UNDER HOOD OVERVIEW - 2.0L ECOBLUE

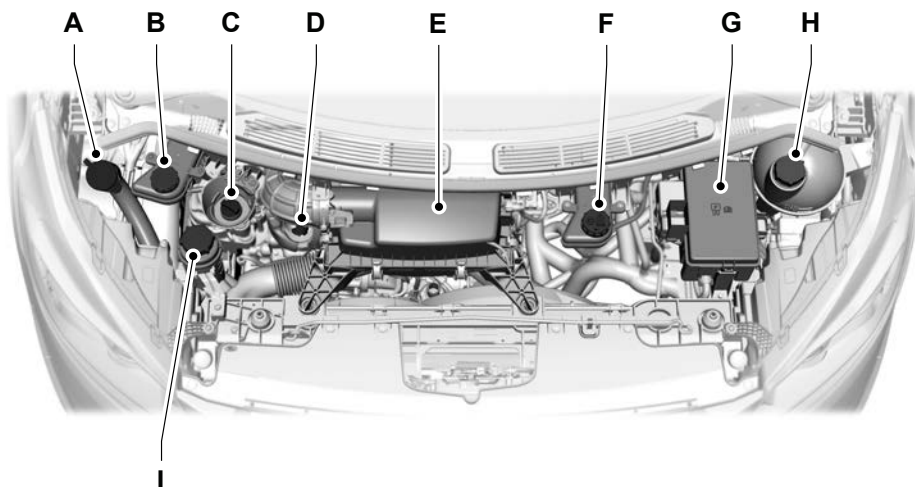


E221303

- A Washer fluid reservoir. See **Washer Fluid Check** (page 295).
- B Brake and clutch fluid reservoir (right-hand drive). See **Brake Fluid Check** (page 291). See **Clutch Fluid Check** (page 292).
- C Engine oil filler cap. See **Engine Oil Check** (page 286).
- D Engine oil dipstick. See **Engine Oil Dipstick** (page 286).
- E Air filter assembly.
- F Brake and clutch fluid reservoir (left-hand drive). See **Brake Fluid Check** (page 291). See **Clutch Fluid Check** (page 292).
- G Engine compartment fusebox. See **Fuses** (page 243).
- H Engine coolant reservoir. See **Engine Coolant Check** (page 288).
- I Power steering fluid reservoir. See **Power Steering Fluid Check** (page 292).

Maintenance

UNDER HOOD OVERVIEW - 2.2L DIESEL

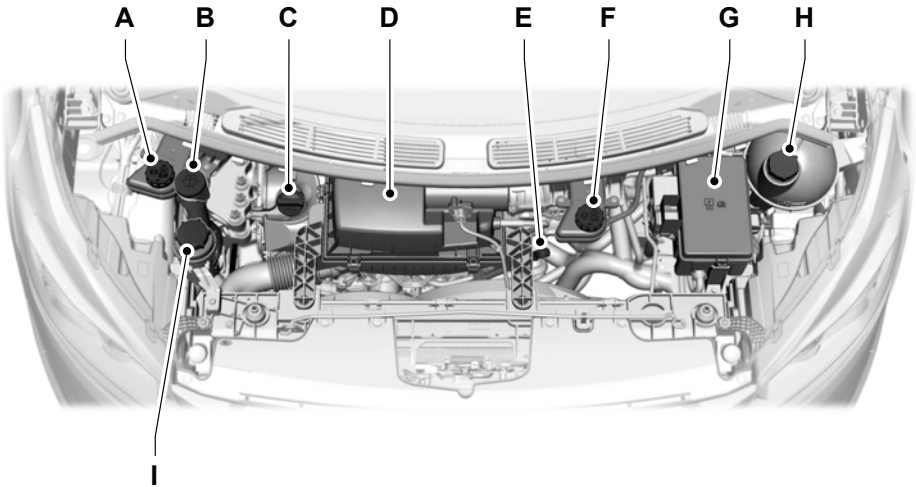


E146432

- A Brake and clutch fluid reservoir (right-hand drive). See **Brake Fluid Check** (page 291). See **Clutch Fluid Check** (page 292).
- B Washer fluid reservoir. See **Washer Fluid Check** (page 295).
- C Engine oil filler cap. See **Engine Oil Check** (page 286).
- D Air filter assembly.
- E Engine oil dipstick. See **Engine Oil Dipstick** (page 286).
- F Brake and clutch fluid reservoir (left-hand drive). See **Brake Fluid Check** (page 291). See **Clutch Fluid Check** (page 292).
- G Engine compartment fusebox. See **Fuses** (page 243).
- H Engine coolant reservoir. See **Engine Coolant Check** (page 288).
- I Power steering fluid reservoir. See **Power Steering Fluid Check** (page 292).

Maintenance


UNDERHOOD OVERVIEW - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

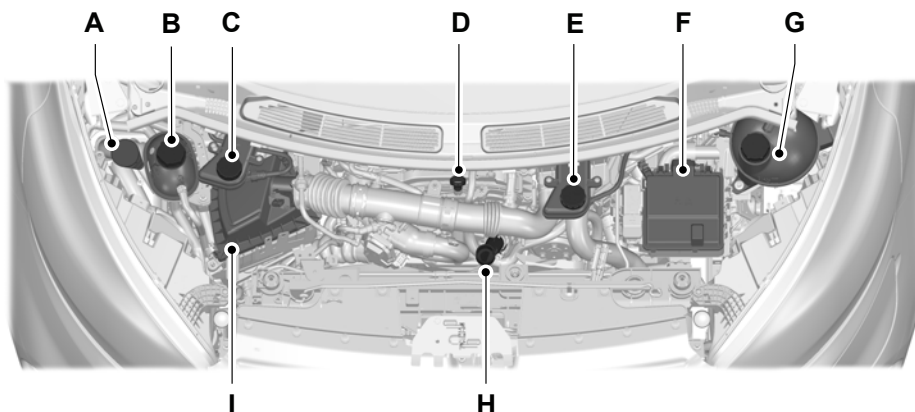

- A Washer fluid reservoir. See **Washer Fluid Check** (page 295).
- B Electric motor coolant reservoir. See **Coolant Check** (page 290).
- C Brake fluid reservoir (right-hand drive). See **Brake Fluid Check** (page 291).
- D Engine oil dipstick. See **Engine Oil Dipstick** (page 286).
- E Brake fluid reservoir (left-hand drive). See **Brake Fluid Check** (page 291).
- F Engine compartment fusebox. See **Fuses** (page 243).
- G Engine coolant reservoir. See **Coolant Check** (page 290).
- H Engine oil filler cap. See **Engine Oil Check** (page 286).
- I Air filter assembly.

Maintenance


ENGINE OIL DIPSTICK - 1.0L ECOBOOST™

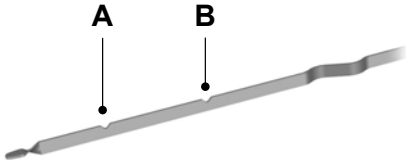

E141337

- A Minimum.
- B Maximum.


ENGINE OIL DIPSTICK - 2.2L DIESEL

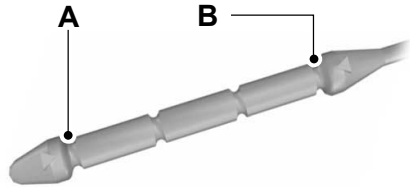

E90983

- A Minimum.
- B Maximum.

ENGINE OIL DIPSTICK - 2.0L ECOBLUE

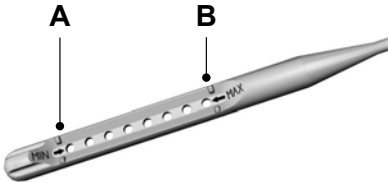

E226469

- A Minimum.
- B Maximum.

ENGINE OIL CHECK

1. Make sure that your vehicle is on level ground.
2. Check the oil level before starting the engine, or switch the engine off and wait 10 minutes for the oil to drain into the oil pan.
3. Remove the dipstick and wipe it with a clean, lint-free cloth.
4. Reinstall the dipstick and make sure it is fully seated.
5. Remove the dipstick again to check the oil level.

Note: If the oil level is between the maximum and minimum marks, the oil level is acceptable. Do not add oil.

6. If the oil level is at the minimum mark, immediately add oil.
7. Reinstall the dipstick. Make sure it is fully seated.

Note: The oil consumption of new engines reaches its normal level after approximately 5,000 km (3,000 mi).

Maintenance

Adding Engine Oil



WARNING: Do not add engine oil when the engine is hot. Failure to follow this instruction could result in personal injury.



WARNING: Do not remove the filler cap when the engine is running.

Do not use supplemental engine oil additives because they are unnecessary and could lead to engine damage that the vehicle warranty may not cover.

1. Clean the area surrounding the engine oil filler cap before you remove it.
2. Remove the engine oil filler cap.
3. Add engine oil that meets our specifications. See **Capacities and Specifications** (page 344).
4. Reinstall the engine oil filler cap. Turn it clockwise until you feel a strong resistance.

Note: Do not add oil further than the maximum mark. Oil levels above the maximum mark may cause engine damage.



Note: Immediately soak up any oil spillage with an absorbent cloth.

DRAINING THE FUEL FILTER WATER TRAP - 2.0L DIESEL



WARNING: Do not dispose of fuel in the household refuse or the public sewage system. Use an authorized waste disposal facility.

To drain the fuel filter water trap, access the underside of your vehicle.

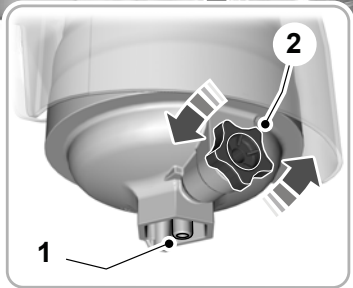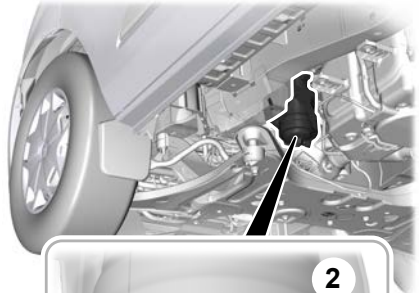

E223800

1. Attach a tube to the drain plug and place the end of the tube into a suitable container.
2. Loosen the drain plug one to two turns and allow the water to drain.
3. Tighten the drain plug until you feel a strong resistance.



When you start the engine the water in fuel indicator lamp turns off after a short period of time.


DRAINING THE FUEL FILTER WATER TRAP - 2.2L DIESEL



WARNING: Do not dispose of fuel in the household refuse or the public sewage system. Use an authorized waste disposal facility.

Maintenance

To drain the fuel filter water trap, access the underside of your vehicle.

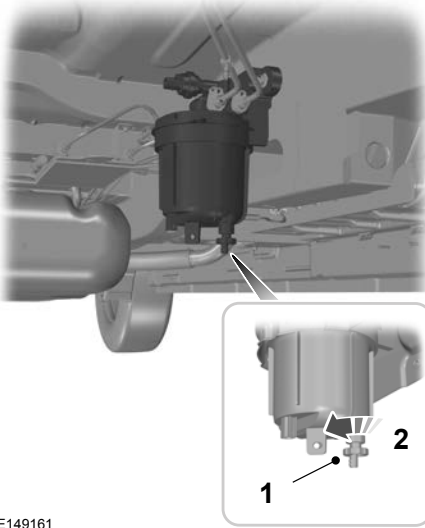

E149161

1. Attach a tube to the drain plug and place the end of the tube into a suitable container.
2. Loosen the drain plug one to two turns and allow the water to drain.

Note: *The drain plug rises when you loosen it.*

3. Tighten the drain plug until you feel a strong resistance.



When you start the engine the water in fuel indicator lamp turns off after a short period of time.

ENGINE COOLING FAN - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)



WARNING: Keep your hands and clothing clear of the engine cooling fan.

Under certain conditions, the engine cooling fan may continue to run for several minutes after you switch your vehicle off.

ENGINE COOLING FAN - DIESEL



WARNING: Keep your hands and clothing clear of the engine cooling fan.

Under certain conditions, the engine cooling fan may continue to run for several minutes after you switch your vehicle off. This could happen in low ambient temperatures and independent of the engine coolant temperature, for example short journeys or low coolant temperature. See **Diesel Particulate Filter** (page 157).

ENGINE COOLANT CHECK - DIESEL



WARNING: Do not dispose of coolant in the household refuse or the public sewage system. Use an authorized waste disposal facility.



WARNING: Do not put coolant in the windshield washer reservoir. If sprayed on the windshield, coolant could make it difficult to see through the windshield.

Maintenance



Make sure that the coolant level is between the **MIN** and **MAX** marks on the coolant reservoir at ambient temperature. If the coolant level is at or below the minimum mark, immediately add coolant.

The coolant concentration should be maintained within 48% to 50%, which equates to a freeze point between -34°C (-29°F) and -37°C (-35°F).

Note: Coolant expands when it is hot. The level may extend beyond the **MAX** mark.

Note: Do not use stop leak pellets, cooling system sealants, or non-specified additives as they can cause damage to the engine cooling or heating systems.

Adding Coolant

⚠ WARNING: Do not remove the coolant reservoir cap when the engine is on or the cooling system is hot. Wait 10 minutes for the cooling system to cool down. Cover the coolant reservoir cap with a thick cloth to prevent the possibility of scalding and slowly remove the cap. Failure to follow this instruction could result in personal injury.

⚠ WARNING: Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your physician.

⚠ WARNING: Undiluted coolant is flammable and may ignite if spilled on a hot exhaust.

We do not recommend the use of recycled engine coolant since a Ford-approved recycling process is not yet available.

Do not mix different colors or types of coolant in your vehicle.

Note: Add a 50/50 mixture of antifreeze and water or prediluted engine coolant that meets the correct specification.

Note: Use fluids which meet the specifications or requirements defined. Use of other fluids may lead to damage which is not covered by the vehicle Warranty. See **Capacities and Specifications** (page 344).

To top up the coolant level do the following:

1. Remove the coolant reservoir cap.
2. Add coolant to the **MAX** mark, do not overfill.
3. Replace the coolant reservoir cap. Turn it clockwise until you feel a strong resistance.

Maintenance

In case of emergency, you can add water without engine coolant in order to reach a vehicle service location.

Note: *Prolonged use of an incorrect dilution of coolant can cause damage, for example corrosion, overheating or freezing.*

COOLANT CHECK - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)



WARNING: Do not dispose of coolant in the household refuse or the public sewage system. Use an authorized waste disposal facility.



WARNING: Do not put coolant in the windshield washer reservoir. If sprayed on the windshield, coolant could make it difficult to see through the windshield.

Your vehicle is equipped with two separate cooling systems. One is for cooling the engine and one is for cooling the electric motor. The two systems operate similarly, with the electric motor cooling system generally operating at a lower temperature and pressure.



Make sure that the coolant level is between the **MIN** and **MAX** marks on both engine and electric motor coolant reservoirs at ambient temperature. If the coolant level is at or below the minimum mark, immediately add coolant.

The coolant concentration should be maintained within 48% to 50%, which equates to a freeze point between -34°C (-29°F) and -37°C (-35°F).

Note: *Coolant expands when it is hot. The level may extend beyond the **MAX** mark.*

Note: *Do not use stop leak pellets, cooling system sealants, or non-specified additives as they can cause damage to the engine cooling or heating systems.*

Maintenance

Adding Coolant



WARNING: Do not remove the coolant reservoir cap when the engine is on or the cooling system is hot. Wait 10 minutes for the cooling system to cool down. Cover the coolant reservoir cap with a thick cloth to prevent the possibility of scalding and slowly remove the cap. Failure to follow this instruction could result in personal injury.



WARNING: Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your physician.



WARNING: Undiluted coolant is flammable and may ignite if spilled on a hot exhaust.

We do not recommend the use of recycled engine coolant since a Ford-approved recycling process is not yet available.

Do not mix different colors or types of coolant in your vehicle.

Note: Add a 50/50 mixture of antifreeze and water or prediluted engine coolant that meets the correct specification.

Note: Use fluids which meet the specifications or requirements defined. Use of other fluids may lead to damage which is not covered by the vehicle Warranty. See **Capacities and Specifications** (page 363). See **Capacities and Specifications** (page 363).

To top up the coolant level do the following:

1. Remove the coolant reservoir cap.
2. Add coolant to the **MAX** mark, do not overfill.

3. Replace the coolant reservoir cap. Turn it clockwise until you feel a strong resistance.

In case of emergency, you can add water without engine coolant in order to reach a vehicle service location.

Note: Prolonged use of an incorrect dilution of coolant can cause damage, for example corrosion, overheating or freezing.

BRAKE FLUID CHECK



WARNING: Do not use any fluid other than the recommended brake fluid as this will reduce brake efficiency. Use of incorrect fluid could result in the loss of vehicle control, serious personal injury or death.



WARNING: Only use brake fluid from a sealed container. Contamination with dirt, water, petroleum products or other materials may result in brake system damage or failure. Failure to adhere to this warning could result in the loss of vehicle control, serious personal injury or death.



WARNING: Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your physician.



WARNING: A fluid level between the **MAX** and **MIN** lines is within the normal operating range and there is no need to add fluid. A fluid level not in the normal operating range could compromise the performance of the system. Have your vehicle checked immediately.

Maintenance



To avoid fluid contamination, the reservoir cap must remain in place and fully tight, unless you are adding fluid.

Only use fluid that meets Ford specifications. See **Capacities and Specifications** (page 344).

CLUTCH FLUID CHECK - MANUAL TRANSMISSION

The clutch and brake systems share the same fluid reservoir. See **Brake Fluid Check** (page 291).

POWER STEERING FLUID CHECK - 2.2L DIESEL



WARNING: Do not allow the fluid to touch your skin or eyes. If this happens, rinse the affected areas immediately with plenty of water and contact your physician.

If the power steering fluid level is below the **MAX** mark, add power steering fluid that meets the correct specification. See **Capacities and Specifications** (page 351). See **Capacities and Specifications** (page 357).

Adding Power Steering Fluid

1. Remove the power steering fluid reservoir filler cap. See **Under Hood Overview** (page 283). See **Under Hood Overview** (page 284).
2. Add power steering fluid to the **MAX** mark, do not overfill.
3. Replace the power steering fluid reservoir filler cap. Turn it clockwise until you feel a strong resistance.


CHANGING THE 12V BATTERY

The battery is under the driver seat.

Note: If you have power seats and the battery has no charge, jump-start your vehicle to move the seat. See **Jump Starting the Vehicle** (page 237).

Maintenance


Removing the Battery

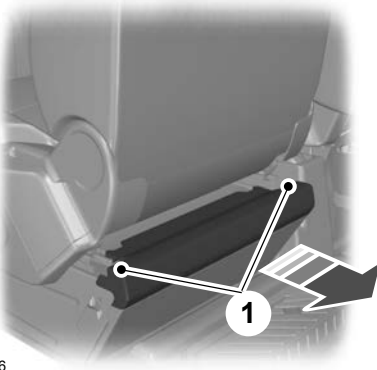

E152526


1. Fully raise the driver seat and move it fully forward. Pull the tabs upward and remove the cover.

Note: Your vehicle may not have this cover.

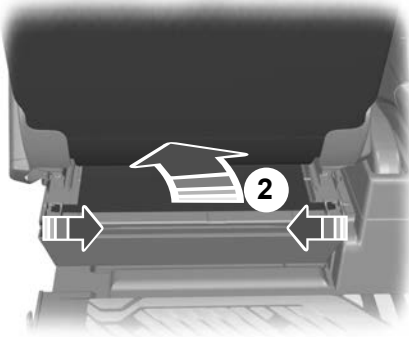


E152529

2. Unhook the cover and tuck it under the seat.

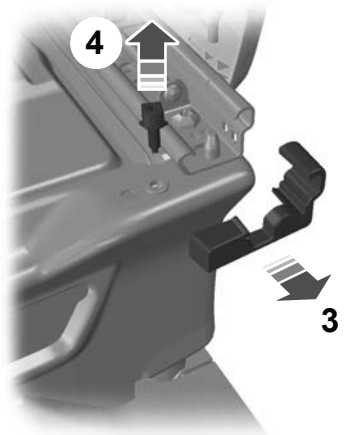

E146781


3. Remove both seat track end caps.
- Note:** Your vehicle may not have these end caps.
4. Remove both seat adjustment end stop bolts at the front of the seat.

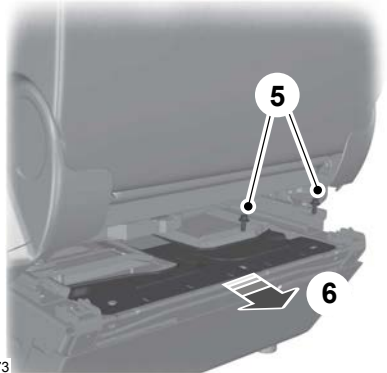

E146773

5. Remove the battery clamp and cover bolts.
6. Remove the battery clamp and cover.


Maintenance

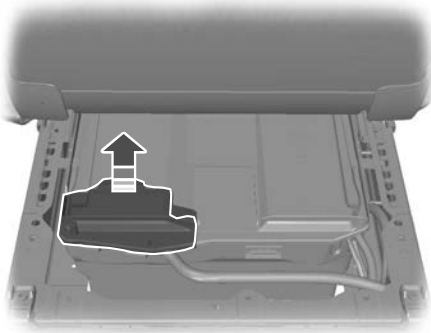

E162774


7. Remove the battery terminal cover and remove the negative (-) terminal.

Note: Single batteries could be mounted the opposite way around in the battery tray. The negative terminal is toward the rear of your vehicle.

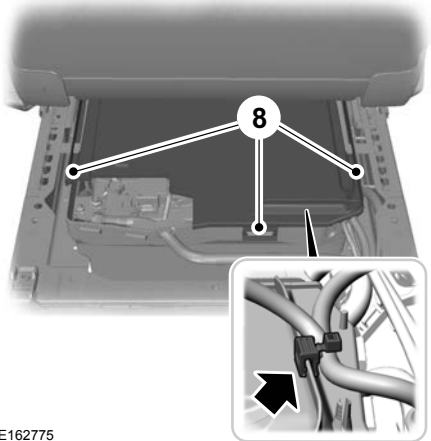

E162775

8. Release the retaining clips and remove the cover.
9. Remove the cable securing clips from the cover.

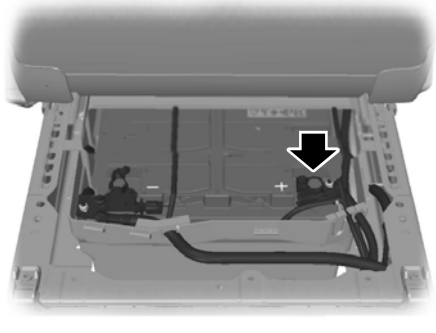

E162776

10. Remove the positive (+) terminal and remove the battery.

Note: Batteries are heavy.

11. Move the second battery toward the rear of your vehicle and remove the negative (-) terminal.
12. Remove the positive (+) terminal and remove the battery.

Replacing the Battery



WARNING: Make sure that you securely fasten the seat runner bolts before installing the covers.

You must replace the battery with one of exactly the same specification.

To install, reverse the removal procedure.

Note: Make sure that you correctly install the battery terminal covers, battery cover and battery cable clips.

Maintenance

FUEL FILTER SERVICE INDICATOR CHECK - 2.0L ECOBUE/2.2L DIESEL



If the warning lamp illuminates when the engine is running this indicates there is excess water in the fuel filter.

This occurs when approximately 200 ml (7 fl oz) of water accumulates in the fuel filter water trap. Have your vehicle checked as soon as possible.

Alternatively you can drain the fuel filter water trap. See **Draining the Fuel Filter Water Trap** (page 287).

WASHER FLUID CHECK

When adding fluid, use a mixture of washer fluid and water to help prevent freezing in cold weather and improve the cleaning capability. For information on fluid dilution, refer to the product instructions. We recommend that you only use high quality washer fluid.

Note: The reservoir supplies the front and rear washer systems.

CHECKING THE WIPER BLADES




E142463

Run the tip of your fingers over the edge of the blade to check for roughness.

Clean the wiper blades with washer fluid or water applied with a soft sponge or cloth.

CHANGING THE FRONT WIPER BLADES

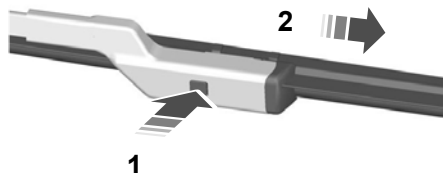

E72899

1. Lift the wiper arm. Press the wiper blade locking button.

Note: Do not hold the wiper blade when lifting the wiper arm.

2. Remove the wiper blade.


Note: Make sure that the wiper arm does not spring back against the glass when the wiper blade is not attached.

3. To install, reverse the removal procedure.

Note: Make sure that the wiper blade locks into place.

Maintenance

CHANGING THE REAR WIPER BLADES (IF EQUIPPED)

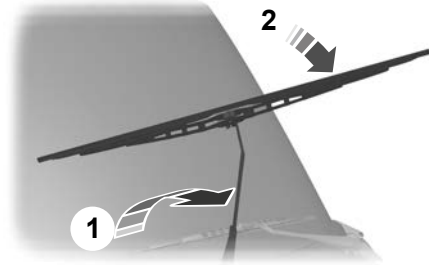


E93783

1. Lift the wiper arm.


Note: Do not hold the wiper blade when lifting the wiper arm.

2. Slightly rotate the wiper blade.

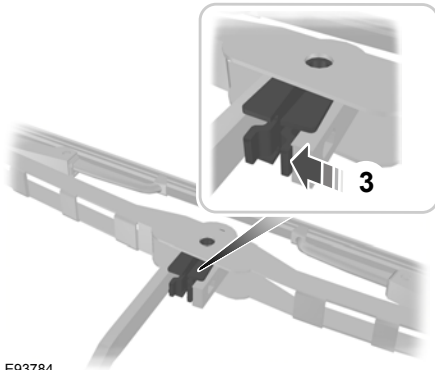

E93784


3. Press the wiper blade locking clip.

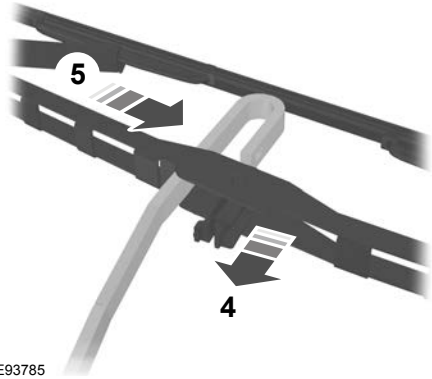

E93785

4. Disengage the wiper blade from the wiper arm.

5. Move the wiper blade to the side.

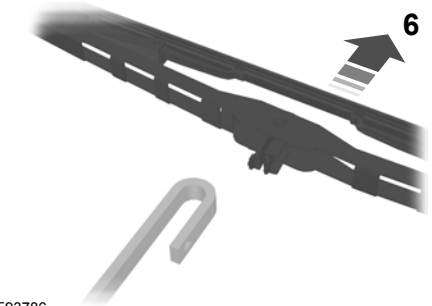

E93786

6. Remove the wiper blade.

Note: Make sure that the wiper arm does not spring back against the glass when the wiper blade is not attached.

7. To install, reverse the removal procedure.

Note: Make sure that the wiper blade locks into place.

Maintenance

REMOVING A HEADLAMP




WARNING: Switch the lamps and the ignition off. Failure to follow this warning could result in serious personal injury.




WARNING: Lamps and associated components become hot when in use. Let them cool down before you remove them.

1. Open the hood. See **Opening and Closing the Hood** (page 281).

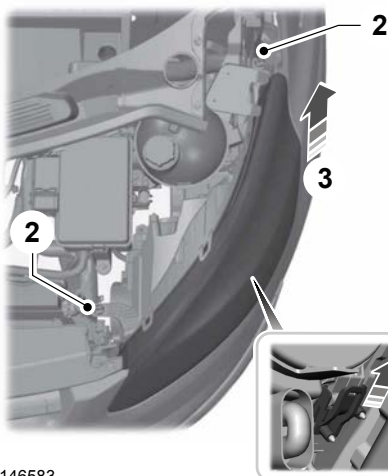

E146583

2. Remove the screws.
3. Push the headlamp toward the rear of your vehicle and upward to disengage the locating points.

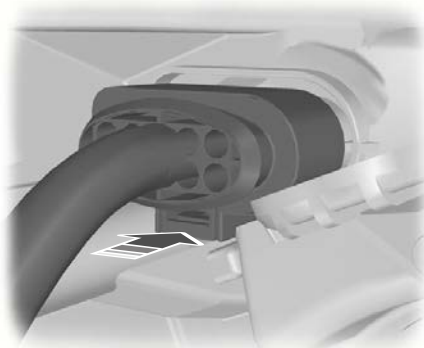

E88875

4. Disconnect the electrical connector.
5. To install, reverse the removal procedure.

Note: Make sure that you correctly attach the electrical connector.

Note: Make sure that you correctly engage the locating points.

CHANGING A BULB-VEHICLES WITH: HALOGEN HEADLAMPS



WARNING: Lamps and associated components become hot when in use. Let them cool down before you remove them.




WARNING: Switch the lamps and the ignition off. Failure to follow this warning could result in serious personal injury.

Only fit bulbs of the correct specification. See **Bulb Specification Chart** (page 366).

Note: We recommend that you see an authorized dealer to change the bulbs if your vehicle has air conditioning.

Maintenance


Headlamp

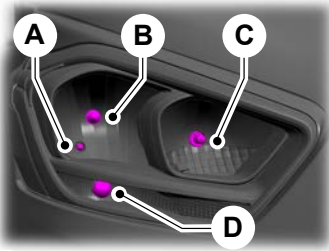

E260595

- A Front position lamps.
- B Headlamp low beam.
- C Headlamp high beam. Daytime running lamps.
- D Front direction indicator.

You may have to remove the headlamp assembly prior to replacing a bulb. See **Removing a Headlamp** (page 297).

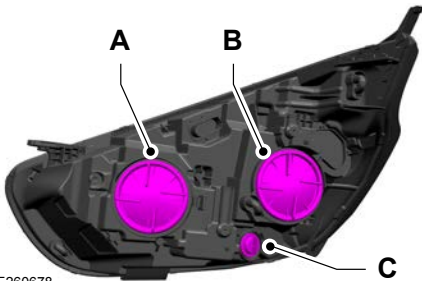

E260678

- A Headlamp high beam. Daytime running lamps.
- B Headlamp low beam. Front position lamps.
- C Front direction indicator.

Front Position Lamp

1. Carefully remove the cover.
2. Remove the bulb holder by pulling it straight out.
3. Remove the bulb by pulling it straight out.
4. To install, reverse the removal procedure.

Front Direction Indicator

1. Turn the bulb holder counterclockwise and remove it.
2. Press the bulb in and turn the bulb counterclockwise to remove it.
3. To install, reverse the removal procedure.

Headlamp Low Beam

1. Carefully remove the cover.
2. Press down on the electrical connector to release the bulb.
3. Disconnect the electrical connector.
4. To install, reverse the removal procedure.

Note: Do not touch the bulb glass.

Headlamp High Beam and Daytime Running Lamp


1. Carefully remove the cover.
2. Turn the bulb holder counterclockwise and remove it.
3. To install, reverse the removal procedure.

Note: Do not touch the bulb glass.

Note: You cannot separate the bulb from the bulb holder.


Maintenance

Front Fog Lamps

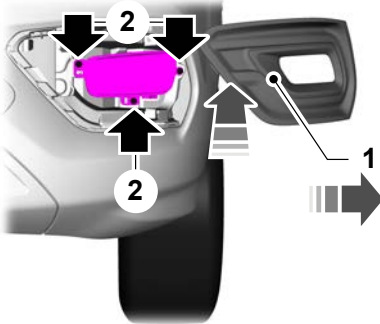

E256126

1. Gently press the fog lamp trim inward and then slide it toward the outer edge of the bumper.
2. Remove the screws that secure the lamp assembly.
3. Remove the lamp.
4. Disconnect the electrical connector.

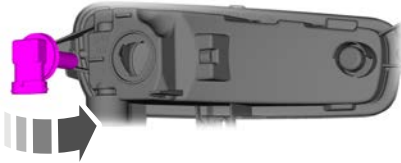


E256280

5. Turn the bulb holder counterclockwise and remove it.

Note: You cannot separate the bulb from the bulb holder.

6. To install, reverse the removal procedure.

Side Repeater

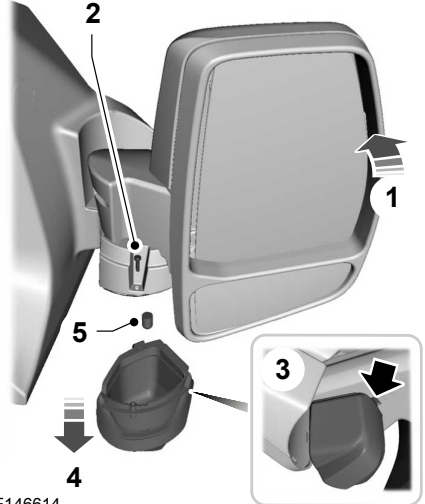


E146614

1. Fold the mirror fully forward.
2. Remove the screw.
3. Using a screwdriver, gently pry the clip to release the lamp.
4. Remove the lamp.
5. Remove the bulb holder by pulling it straight out.
6. Remove the bulb by pulling it straight out.
7. To install, reverse the removal procedure.

Maintenance


Rear Lamp

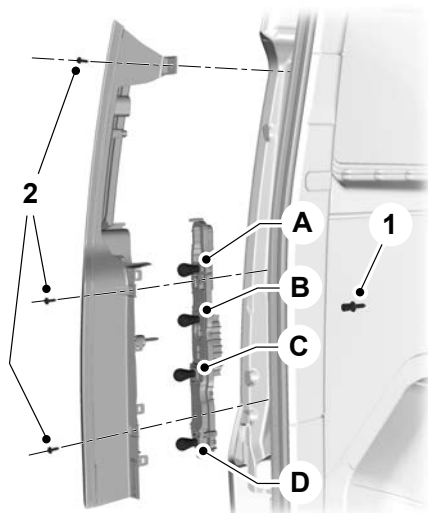

- A Rear lamp and stoplamp.
- B Rear direction indicator.
- C Reversing lamp.
- D Rear fog lamp.

1. Remove the wing nut.
2. Remove the screws.
3. Remove the lamp and unclip the bulb holder.
4. Press the bulb in and turn the bulb counterclockwise to remove it.

Central High Mounted Stoplamp

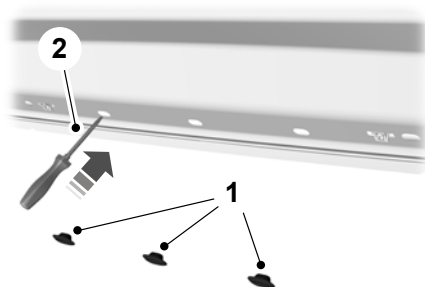


E162641

1. Remove the rubber grommets.

Note: You may need to remove a trim panel first.

2. Using a screwdriver, gently pry the clip to release the lamp.

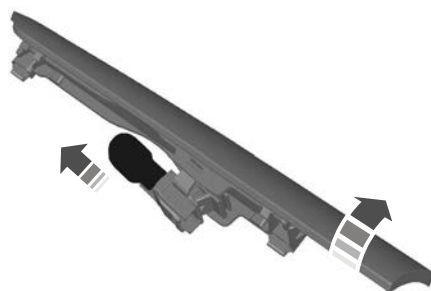


E146638

3. Remove the lamp.
4. Remove the bulb by pulling it straight out.

Maintenance

License Plate Lamp

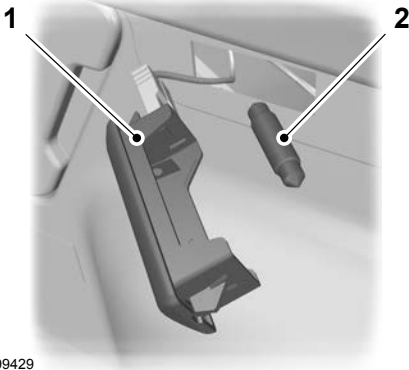


E99429

1. Using a screwdriver, gently pry the clip to release the lamp.
2. Remove the bulb.


Interior Lamp

Entrance Lamps

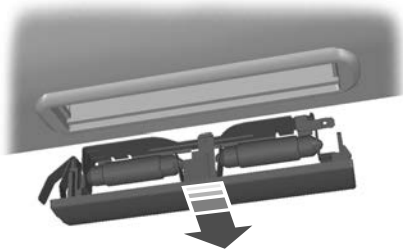

E154369


1. Using a screwdriver, gently pry the clip to release the lamp.

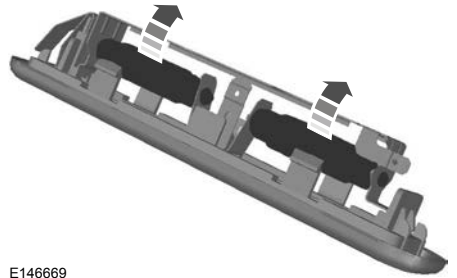

E146669

2. Remove the bulb.

Vehicles with Interior Sensors

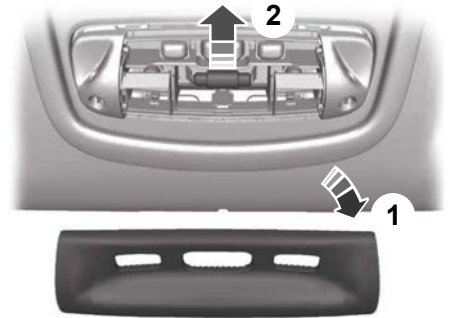


E154370


1. Remove the lamp lens.
2. Remove the bulb.

Maintenance

Reading Lamps

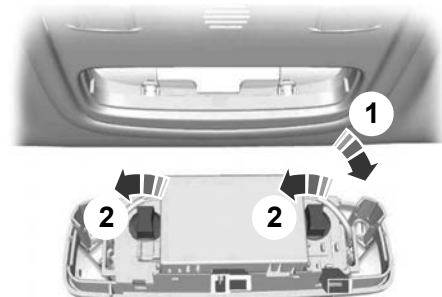


E72786

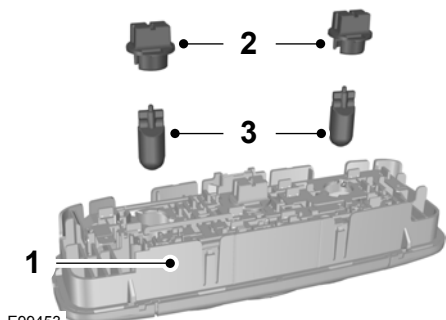

E99453

1. Using a screwdriver, gently pry the clip to release the lamp.
2. Turn the bulb holder counterclockwise and remove it.
3. Remove the bulb by pulling it straight out.

Vanity Mirror Lamp

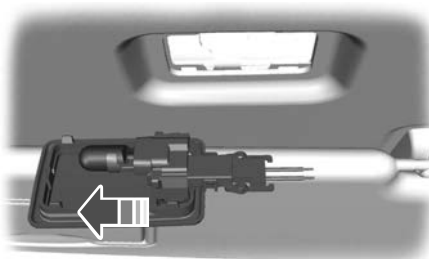

E72785

1. Remove the lamp.
2. Remove the bulb by pulling it straight out.

CHANGING A BULB - VEHICLES WITH: HALOGEN PROJECTOR HEADLAMPS

WARNING: Switch the lamps and the ignition off. Failure to follow this warning could result in serious personal injury.


WARNING: Lamps and associated components become hot when in use. Let them cool down before you remove them.

Only fit bulbs of the correct specification. See **Bulb Specification Chart** (page 367).

Note: We recommend that you see an authorized dealer to change the bulbs if your vehicle has air conditioning.

Maintenance


Headlamp

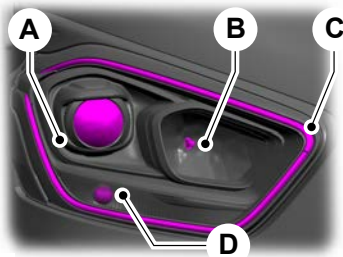

E260596

- A Headlamp low beam.
- B Headlamp high beam.
- C Daytime running lamps. Front position lamps.
- D Front direction indicator.

You may have to remove the headlamp assembly prior to replacing a bulb. See **Removing a Headlamp** (page 297).

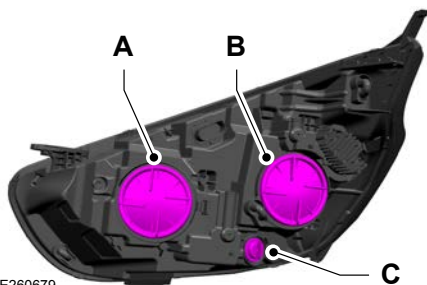

E260679

- A Headlamp high beam.
- B Headlamp low beam.
- C Front direction indicator.

Front Direction Indicator

1. Turn the bulb holder counterclockwise and remove it.
2. Press the bulb in and turn the bulb counterclockwise to remove it.
3. To install, reverse the removal procedure.

Headlamp Low Beam

1. Carefully remove the cover.
2. Release the clip and remove the bulb.
3. Disconnect the electrical connector.
4. To install, reverse the removal procedure.

Note: Do not touch the bulb glass.

Headlamp High Beam

1. Carefully remove the cover.
2. Release the clip and remove the bulb.
3. Disconnect the electrical connector.
4. To install, reverse the removal procedure.

Note: Do not touch the bulb glass.


Daytime Running Lamp and Front Position Lamps

These lamps have LEDs.

Note: LED lamps are not serviceable. Have your vehicle checked as soon as possible.


Maintenance

Front Fog Lamps

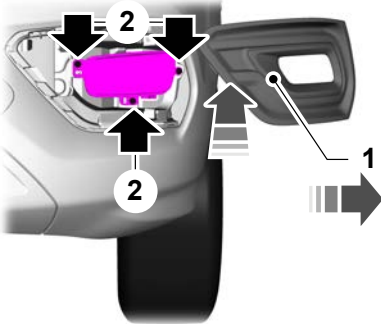

E256126

1. Gently press the fog lamp trim inward and then slide it toward the outer edge of the bumper.
2. Remove the screws that secure the lamp assembly.
3. Remove the lamp.
4. Disconnect the electrical connector.

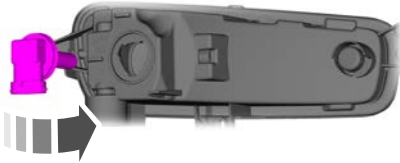


E256280

5. Turn the bulb holder counterclockwise and remove it.

Note: You cannot separate the bulb from the bulb holder.

6. To install, reverse the removal procedure.

Side Repeater

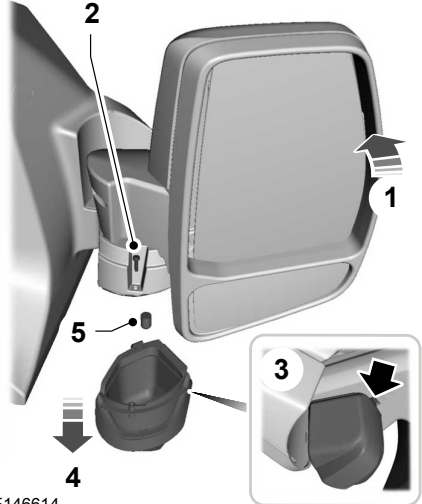


E146614

1. Fold the mirror fully forward.
2. Remove the screw.
3. Using a screwdriver, gently pry the clip to release the lamp.
4. Remove the lamp.
5. Remove the bulb holder by pulling it straight out.
6. Remove the bulb by pulling it straight out.
7. To install, reverse the removal procedure.

Maintenance

Rear Lamp

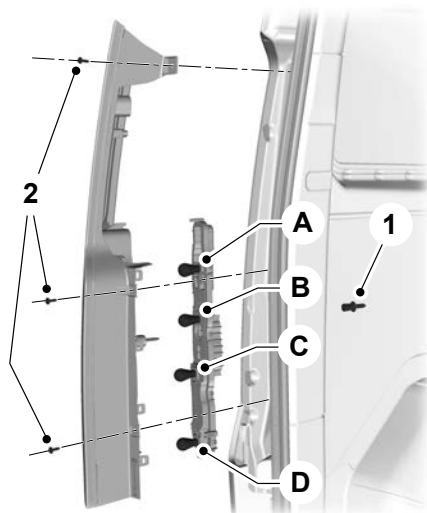


E146621

- A Rear lamp and stoplamp.
- B Rear direction indicator.
- C Reversing lamp.
- D Rear fog lamp.

1. Remove the wing nut.
2. Remove the screws.
3. Remove the lamp and unclip the bulb holder.
4. Press the bulb in and turn the bulb counterclockwise to remove it.

Central High Mounted Stoplamp

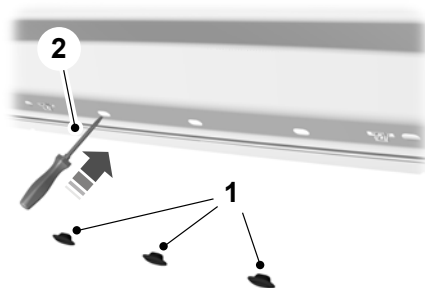


E162641

1. Remove the rubber grommets.

Note: You may need to remove a trim panel first.

2. Using a screwdriver, gently pry the clip to release the lamp.

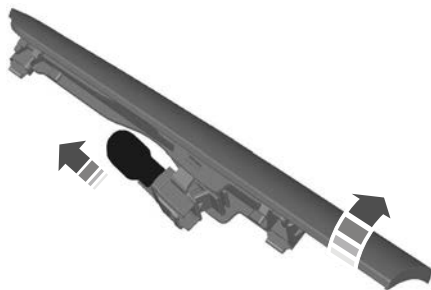


E146638

3. Remove the lamp.
4. Remove the bulb by pulling it straight out.

Maintenance

License Plate Lamp

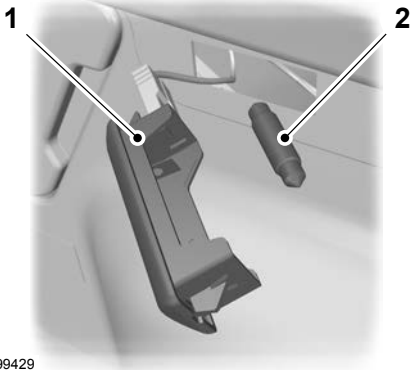


E99429

1. Using a screwdriver, gently pry the clip to release the lamp.
2. Remove the bulb.


Interior Lamp

Entrance Lamps

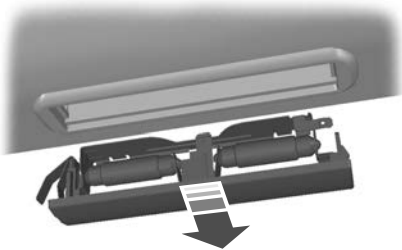

E154369


1. Using a screwdriver, gently pry the clip to release the lamp.

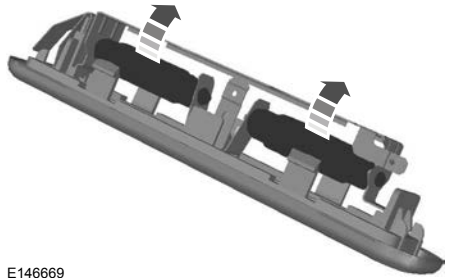

E146669

2. Remove the bulb.

Vehicles with Interior Sensors

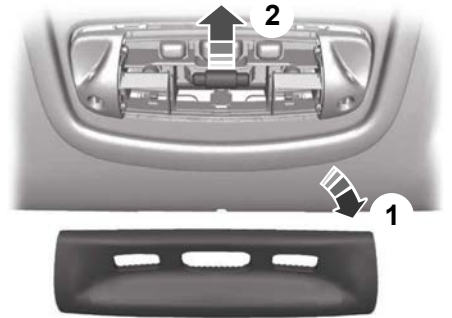


E154370


1. Remove the lamp lens.
2. Remove the bulb.

Maintenance

Reading Lamps

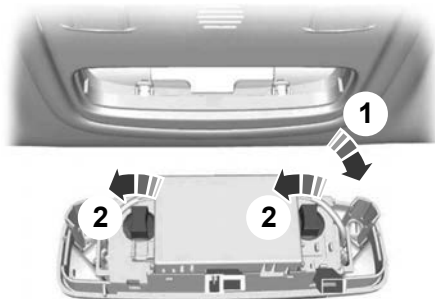


E72786

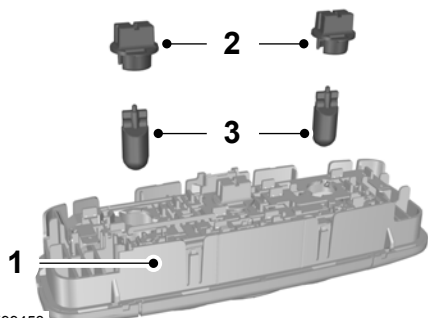

E99453

1. Using a screwdriver, gently pry the clip to release the lamp.
2. Turn the bulb holder counterclockwise and remove it.
3. Remove the bulb by pulling it straight out.

Vanity Mirror Lamp

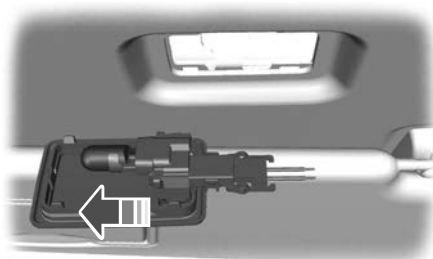

E72785

1. Remove the lamp.
2. Remove the bulb by pulling it straight out.

CHANGING A BULB - VEHICLES WITH: HIGH INTENSITY DISCHARGE HEADLAMPS

⚠ WARNING: Switch the lamps and the ignition off. Failure to follow this warning could result in serious personal injury.


⚠ WARNING: Lamps and associated components become hot when in use. Let them cool down before you remove them.

Only fit bulbs of the correct specification. See **Bulb Specification Chart** (page 368).

Note: We recommend that you see an authorized dealer to change the bulbs if your vehicle has air conditioning.

Maintenance


Headlamp

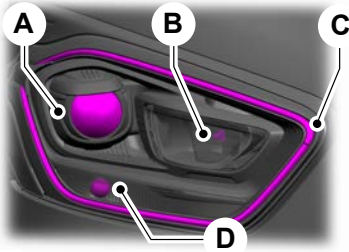

E260597

- A Headlamp low beam. Headlamp high beam.
- B Cornering lamps.
- C Daytime running lamps. Front position lamps.
- D Front direction indicator.

You may have to remove the headlamp assembly prior to replacing a bulb. See **Removing a Headlamp** (page 297).

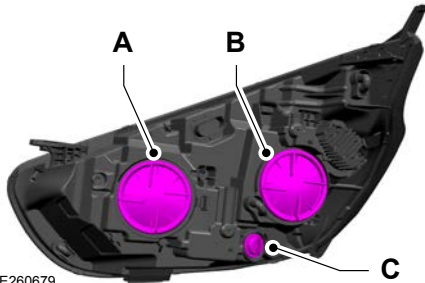

E260679

- A Cornering lamps.
- B Headlamp low beam. Headlamp high beam.
- C Front direction indicator.

Front Direction Indicator

1. Turn the bulb holder counterclockwise and remove it.
2. Press the bulb in and turn the bulb counterclockwise to remove it.
3. To install, reverse the removal procedure.

HID Headlamp Low Beam and High Beam

1. Carefully remove the cover.
2. Turn the bulb holder counterclockwise and remove it.
3. To install, reverse the removal procedure.

Note: Do not touch the bulb glass.

Note: You cannot separate the bulb from the bulb holder.

Cornering Lamps

1. Carefully remove the cover.
2. Release the clip and remove the bulb.
3. Disconnect the electrical connector.
4. To install, reverse the removal procedure.

Note: Do not touch the bulb glass.


Daytime Running Lamp and Front Position Lamps

These lamps have LEDs.

Note: LED lamps are not serviceable. Have your vehicle checked as soon as possible.


Maintenance

Front Fog Lamps

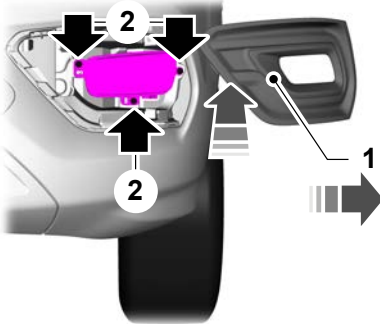

E256126

1. Gently press the fog lamp trim inward and then slide it toward the outer edge of the bumper.
2. Remove the screws that secure the lamp assembly.
3. Remove the lamp.
4. Disconnect the electrical connector.

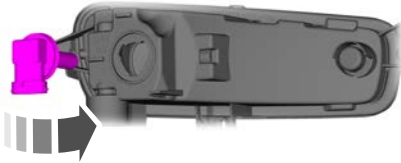


E256280

5. Turn the bulb holder counterclockwise and remove it.

Note: You cannot separate the bulb from the bulb holder.

6. To install, reverse the removal procedure.

Side Repeater

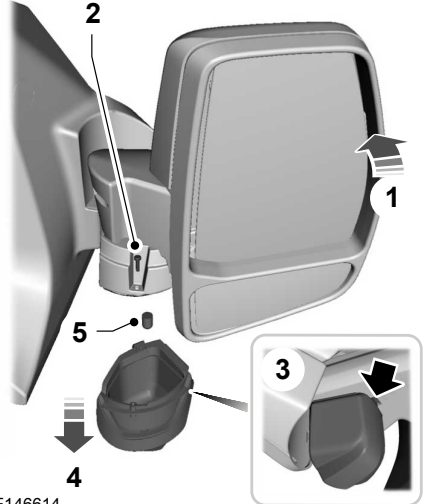


E146614

1. Fold the mirror fully forward.
2. Remove the screw.
3. Using a screwdriver, gently pry the clip to release the lamp.
4. Remove the lamp.
5. Remove the bulb holder by pulling it straight out.
6. Remove the bulb by pulling it straight out.
7. To install, reverse the removal procedure.

Maintenance

Rear Lamp

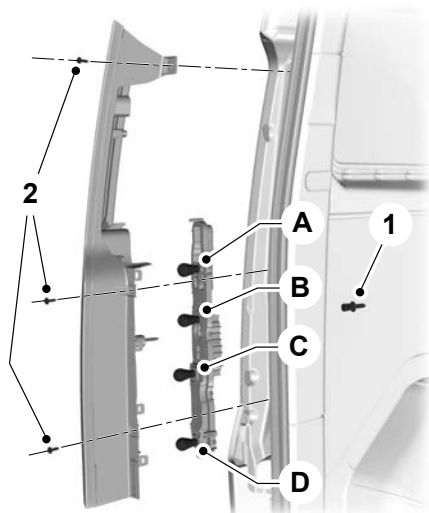


E146621

- A Rear lamp and stoplamp.
- B Rear direction indicator.
- C Reversing lamp.
- D Rear fog lamp.

1. Remove the wing nut.
2. Remove the screws.
3. Remove the lamp and unclip the bulb holder.
4. Press the bulb in and turn the bulb counterclockwise to remove it.

Central High Mounted Stoplamp

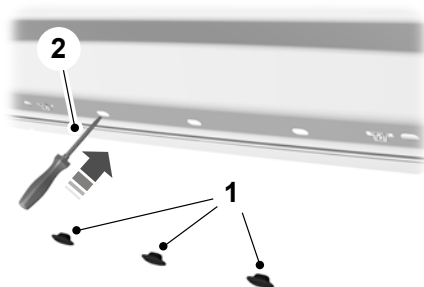


E162641

1. Remove the rubber grommets.

Note: You may need to remove a trim panel first.

2. Using a screwdriver, gently pry the clip to release the lamp.

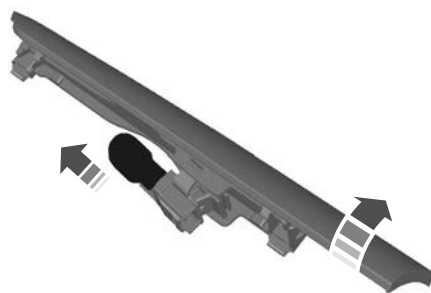


E146638

3. Remove the lamp.
4. Remove the bulb by pulling it straight out.

Maintenance

License Plate Lamp

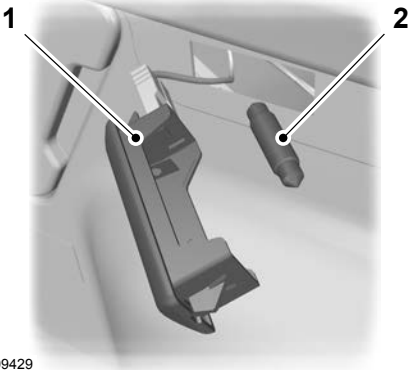


E99429

1. Using a screwdriver, gently pry the clip to release the lamp.
2. Remove the bulb.


Interior Lamp

Entrance Lamps

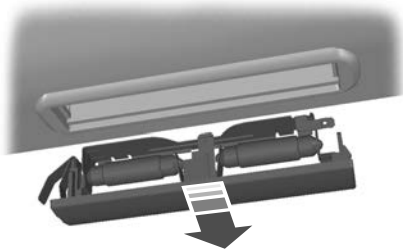

E154369


1. Using a screwdriver, gently pry the clip to release the lamp.

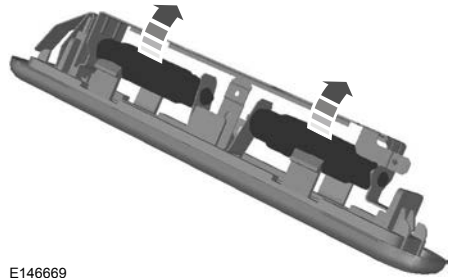

E146669

2. Remove the bulb.

Vehicles with Interior Sensors

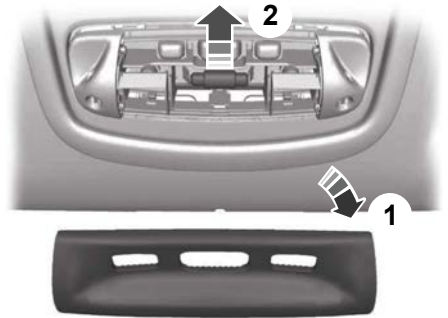


E154370


1. Remove the lamp lens.
2. Remove the bulb.

Maintenance

Reading Lamps

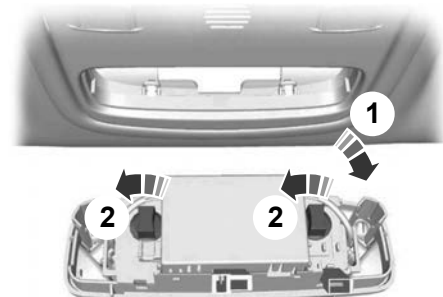


E72786

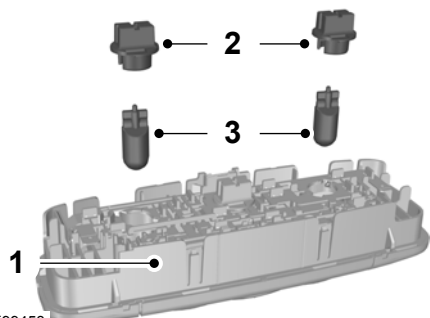

E99453

1. Using a screwdriver, gently pry the clip to release the lamp.
2. Turn the bulb holder counterclockwise and remove it.
3. Remove the bulb by pulling it straight out.

Vanity Mirror Lamp

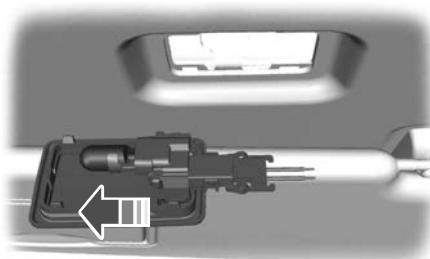

E72785

1. Remove the lamp.
2. Remove the bulb by pulling it straight out.

Vehicle Care

CLEANING THE EXTERIOR

Wash your vehicle regularly with cool or lukewarm water and a neutral pH shampoo.

- Never use strong household detergents or soap, for example dish washing or laundry liquid. These products can discolor and spot painted surfaces.
- Never wash your vehicle when it is hot to the touch, or during strong or direct sunlight.
- Dry your vehicle with a chamois or soft terry cloth towel to eliminate water spotting.
- Immediately remove fuel spillages, bird droppings, insect deposits and road tar. These may cause damage to your vehicle's paintwork or trim over time.
- Remove any exterior accessories, for example antennas, before entering a car wash.
- When filling with AdBlue®, remove any residue on painted surfaces immediately.

Note: *Suntan lotions and insect repellents can damage painted surfaces. If these substances come in contact with your vehicle, wash the affected area as soon as possible.*

Note: *If you use a car wash with a waxing cycle, make sure that you remove the wax from the windshield and the wiper blades.*

Note: *Before using a car wash, check that it is suitable for your vehicle.*

Note: *Some car washes use water at high pressure. Due to this, water droplets may enter inside your vehicle and could also damage certain parts of your vehicle.*

Note: *Remove the antenna before using an automatic car wash.*

Note: *Switch the blower motor off to prevent contamination of the cabin air filter.*

We recommend that you wash your vehicle with a sponge and lukewarm water containing a car shampoo.

Cleaning the Exterior Precautions

Immediately remove fuel spillages, AdBlue residuals, bird droppings, insect deposits and road tar. These may cause damage to your vehicle's paintwork or trim over time.

Remove any exterior accessories, for example antennas, before entering a car wash.

Cleaning the Headlamps

Note: *Do not scrape the headlamps.*

Note: *Do not use abrasives, alcoholic solvents or chemical solvents to clean the headlamps.*

Note: *Do not wipe the headlamps when they are dry.*

Cleaning the Rear Window

Note: *Do not scrape the inside of the rear window*

Note: *Do not use abrasives, alcoholic solvents or chemical solvents to clean the inside of the rear window.*

Clean the inside of the rear window with a soft, lint-free cloth and non-abrasive cleaner.

Cleaning the Chrome Trim (If Equipped)

Note: *Do not use abrasives or chemical solvents. Use soapy water.*

Note: *Do not apply cleaning product to hot surfaces and do not leave cleaning product on chrome surfaces for a period of time exceeding that which is recommended.*

Note: *Industrial-strength (heavy-duty) cleaners, or cleaning chemicals, may cause damage over a period of time.*

Vehicle Care

Cleaning Stripes or Graphics (If

Equipped)

Hand washing your vehicle is preferred however, pressure washing may be used under the following conditions:

- Do not use water pressure higher than 14,000 kPa (2,000 psi).
- Do not use water hotter than 82°C (179°F).
- Use a spray with a 40° wide spray angle pattern.
- Keep the nozzle at a 305 mm (12 in) distance and 90° angle to your vehicle's surface.

Note: Holding the pressure washer nozzle at an angle to the vehicle's surface may damage graphics and cause the edges to peel away from the vehicle's surface.

BodyPaintwork Preservation

Frequently remove particles such as bird droppings, tree sap, insect deposits, tar spots, road salt and industrial fallout to avoid paint surface damage.

Frequently wash the underbody of your vehicle if salt is applied on the road.

We recommend that you wax the paintwork once or twice a year.

Note: Do not apply polish in strong sunlight as this dries the polish too quickly.

Note: Do not allow polish to come in contact with unpainted plastic surfaces as it could be difficult to remove.

Note: Do not apply polish to the windshield or rear window. A contaminated windshield or contaminated wiper blades may lead to increased wiper noise, reduced wipe quality or reduced rain sensor performance.

CLEANING THE INTERIOR

Note: Do not allow air fresheners and hand sanitizers to spill on interior surfaces. If a spill occurs, wipe off immediately. Damage may not be covered by the vehicle Warranty.

Note: Do not use household cleaning products or glass cleaners, which can stain and discolor the fabric and affect the flame retardant abilities of the seat materials.

Note: We recommend distilled water when cleaning.

Fabric, Carpets, Cloth Seats, Headliners and Floor Mats

Note: Avoid soaking any surface. Do not use excessive amounts of water to clean the vehicle interior.

Note: To avoid spots or discoloration, clean the entire surface.

To clean:

- Remove dust and loose dirt with a vacuum cleaner or brush.
- Wipe the surface with a soft, damp cloth and a mild soap and water solution. Dry the area with a clean, soft cloth.
- If a ring forms on the fabric after spot cleaning, clean the entire area immediately, but do not soak or the ring will set.

Seatbelts



WARNING: Do not use cleaning solvents, bleach or dye on the vehicle's seatbelts, as these actions may weaken the belt webbing.

Vehicle Care



WARNING: On vehicles equipped with seat-mounted airbags, do not use chemical solvents or strong detergents. Such products could contaminate the side airbag system and affect performance of the side airbag in a crash.

Note: Do not use abrasives, or chemical solvents to clean them.

Note: Do not allow moisture to penetrate the seatbelt retractor mechanism.

Cleaning may safely be carried out using mild soap and water. Let them dry naturally, away from artificial heat.

Leather Interior (If Equipped)

Note: Follow the same procedure as cleaning leather seats for cleaning leather instrument panels and leather interior trim surfaces.

For routine cleaning, wipe the surface with a soft, damp cloth and a mild soap and water solution. Dry the area with a clean, soft cloth.

For cleaning and removing stains such as dye transfer, use a leather cleaning product for automotive interiors.

Do not use the following products as these may damage the leather:

- Oil and petroleum or silicone-based leather conditioners.
- Household cleaners.
- Alcohol solutions.
- Solvents or cleaners intended specifically for rubber, vinyl and plastics.

Suede Micro Fiber Fabric (If Equipped)

Note: Do not steam clean.

Note: To avoid spots or discoloration, clean the entire surface.

Do not use the following products:

- Leather care products.
- Household cleaners.
- Alcoholic solutions.
- Spot removers.
- Shoe polish.

To clean:

- Remove dust and loose dirt with a vacuum cleaner.
- Wipe the surface with a soft, damp cloth and a mild soap and water solution. Dry the area with a clean, soft cloth.
- If a ring forms on the fabric after spot cleaning, clean the entire area immediately, but do not soak or the ring will set.

Instrument Cluster Screens, LCD Screens and Radio Screens

Note: Do not use abrasives, alcoholic solvents or chemical solvents to clean the instrument cluster screens, LCD screens or radio screens. These cleaning products can damage the screens.

Clean the instrument panel and cluster lens with a clean, damp and soft cloth, then use a clean, dry and soft cloth to dry these areas.

Do not spray any liquid directly onto the screens.

Do not use a microfiber cloth to clean the bezel around the display screens as it could damage the surface.

Rear Windows

Note: Do not use any abrasive materials to clean the interior of the rear windows.

Note: Do not install stickers or labels to the interior of the rear windows.

Vehicle Care

Mirrors

Do not clean the housing or glass of any mirror with harsh abrasives, fuel or other petroleum or ammonia-based cleaning products.

Storage Compartments, Cup Holders and Ashtrays

To clean:

- Take out any removable inserts.
- Wipe the surface with a soft, damp cloth and a mild soap and water solution. Dry the area with a clean, soft cloth.

REPAIRING MINOR PAINT DAMAGE

You should repair paintwork damage caused by stones from the road or minor scratches as soon as possible. A choice of products are available from an authorized dealer.

Remove particles such as bird droppings, tree sap, insect deposits, tar spots, road salt and industrial fallout before repairing paint chips.

Always read and follow the manufacturer's instructions before using the products.

CLEANING THE WHEELS

Note: Do not apply a cleaning chemical to warm or hot wheel rims and covers.

Note: Industrial-strength (heavy-duty) cleaners, or cleaning chemicals, in combination with brush agitation to remove brake dust and dirt, could wear away the clear coat finish over a period of time.

Note: Do not use hydrofluoric acid-based or high caustic-based wheel cleaners, steel wool, fuels or strong household detergent.

Note: If you intend parking your vehicle for an extended period after cleaning the wheels with a wheel cleaner, drive your vehicle for a few minutes before doing so. This will reduce the risk of increased corrosion of the brake discs, brake pads and linings.

Note: Some automatic car washes may cause damage to the finish on your wheel rims and covers.

Alloy wheels and wheel covers are coated with a clear coat paint finish. To maintain their condition we recommend that you:

- Clean them weekly with the recommended wheel and tire cleaner.
- Use a sponge to remove heavy deposits of dirt and brake dust accumulation.
- Rinse them thoroughly with a pressurized stream of water when you have completed the cleaning process.

Consult your authorized dealer for approved cleaning products.

Using other non-recommended cleaning products can result in severe and permanent cosmetic damage.

BODY STYLING KITS

The distance between the underside of your vehicle and the ground is less than that of other models. Drive with extreme care to avoid damage to your vehicle.

Wheels and Tires

GENERAL INFORMATION



WARNING: Use only approved wheel and tire sizes. Using other sizes could damage your vehicle and will make the National Type Approval invalid.



WARNING: If your vehicle has self-leveling air suspension, you must switch the system off before carrying out any maintenance or repair. Failure to follow this warning could result in serious personal injury or death.

We do not recommend the use of alternative wheel diameters and tire sizes other than those approved for your vehicle. The speedometer may not display the correct speed.

TIRE SEALANT AND INFLATOR KIT



WARNING: Do not use the inflator kit on run flat tires. This could cause loss of vehicle control.



WARNING: Depending on the type and extent of tire damage, some tires can only be partially sealed or not sealed at all. Loss of tire pressure can affect vehicle handling, leading to loss of vehicle control.




WARNING: Do not use the kit on a previously damaged tire, for example when it has been driven under inflated. This could cause loss of vehicle control, personal injury or death.

Note: Motorhome owners may have to follow separate instructions issued with the temporary mobility kit.

If your vehicle does not have a spare wheel it has a tire sealant and inflator kit. The kit is in the right-hand side stepwell. Only use the kit supplied with your vehicle.

Note: : The kit can only temporarily repair one tire puncture with a maximum puncture size of up to 0.24 in (6 mm).

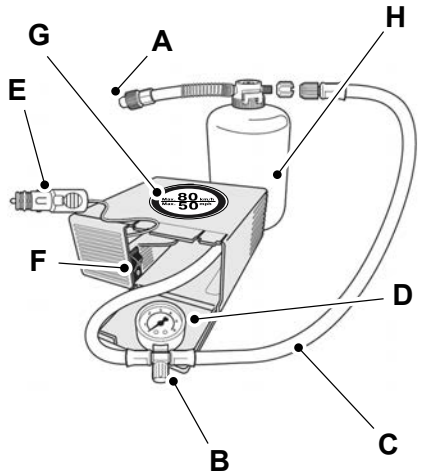

E146784

- A Protective cap
- B Pressure relief valve
- C Hose
- D Pressure gauge
- E Power plug with cable
- F Compressor switch
- G Label
- H Sealant bottle

Note: Make sure you regularly check the expiry date on the sealant bottle.

Wheels and Tires



If the low tire pressure warning lamp illuminates do the following:

1. Gradually reduce the vehicle speed and stop your vehicle as soon as it is safe to do so.
2. Apply the parking brake and switch the ignition off.
3. Check for a punctured tire.

Note: Do not remove objects, for example nails or screws from a punctured tire.

Using the Tire Sealant and Inflator Kit



WARNING: Check the sidewall of the tire prior to inflation. If there are any cracks, bumps or similar damage, do not attempt to inflate the tire. This could cause personal injury.



WARNING: Watch the sidewall of the tire when inflating. If any cracks, bumps or similar damage appears, switch the compressor off and let the air out by means of the pressure relief valve. Do not continue driving with this tire. This could cause loss of vehicle control.



WARNING: Do not stand directly beside the tire while the compressor is operating. This could cause personal injury if the tire bursts.



WARNING: Do not leave the kit unattended when it is in use. Failure to follow this instruction could result in personal injury or death.



WARNING: Do not keep the compressor operating for more than 10 minutes. This could cause the compressor to malfunction causing serious personal injury.



WARNING: The sealant contains natural rubber latex. Avoid contact with skin and clothing. If this happens, rinse the affected areas immediately with plenty of water and consult a physician.

1. Open the lid of the tire sealant and inflator kit.
2. Peel off the label G showing the maximum permissible speed of 50 mph (80 km/h) from the casing and attach it to the instrument panel in the driver's field of view. Make sure the label does not obscure anything important.
3. Take the hose C and the power plug with cable E out of the temporary mobility kit.
4. Screw the hose C onto the sealant bottle.
5. Remove the valve cap from the damaged tire.
6. Remove the protective cap A from the sealant bottle hose and screw the hose firmly onto the valve of the damaged tire.
7. Make sure that the compressor switch F is in position 0.
8. Insert the power plug E into the auxiliary power point. See **Auxiliary Power Points** (page 120).
9. Start the engine.
10. Move the compressor switch F to position 1.
11. After a minimum of two minutes move the compressor switch F to position 0 and unscrew the hose C from the sealant bottle. Unscrew the sealant bottle hose from the tire valve.

Wheels and Tires

12. Screw the hose C onto the tire valve and move the compressor switch F to position 1.
13. Inflate the tire for no longer than 10 minutes or to the recommended inflation pressure. Move the compressor switch F to position 0 and check the current tire pressure with pressure gauge D. Unscrew the hose C from the tire valve.
14. Remove the power plug E from the auxiliary power point.
15. Make sure the tire sealant and inflator kit, the bottle lid and the orange cap are stored safely, but still easily accessible in your vehicle. The tire sealant and inflator kit will be required again when you check the tire pressure.
16. Immediately drive approximately six miles (10 kilometers) so that the sealant can seal the damaged area.

Note: When pumping in the sealant through the tire valve, the pressure may rise up to 87 psi (6 bar) but will drop again after about 30 seconds.

Note: If the tire pressure has dropped to 26 psi (1.8 bar) or below, the tire could be damaged beyond a temporary repair. Have your vehicle immediately checked. Do not drive your vehicle.

Note: If the tire pressure has dropped but is still above 26 psi (1.8 bar), use the kit to inflate the tire again.

After Using the Tire Sealant and Inflator Kit



WARNING: If you experience any unusual vibration, ride disturbance or noise while driving, reduce your speed until you can safely pull off to the side of the road and call for roadside assistance. Failure to do so could cause you to lose control of your vehicle and increase the risk of personal injury or death.

1. Stop your vehicle after driving approximately six miles (10 kilometers). Check, and where necessary, adjust the pressure of the damaged tire.
2. Attach the tire sealant and the inflator kit and check the tire pressure from the pressure gauge D.
3. If the pressure of the sealant-filled tire is more than the recommended pressure, adjust it to the recommended pressure. See **Tire Pressures** (page 334). See **Tire Pressures** (page 334).
4. Follow the inflation procedure once again to inflate the tire.
5. Check the tire pressure again from the pressure gauge D. If the tire pressure is too high, deflate the tire to the specified pressure using the pressure relief valve B.
6. If the tire pressure is less than the recommended pressure, repeat steps 13 to 16 and steps 1 to 5 (Checking the Tire Pressure).
7. Once you have inflated the tire to its correct tire pressure, move the compressor switch F to position 0, remove the power plug E from the auxiliary power point, unscrew the sealant bottle hose, fasten the valve cap and replace the protective cap A.

Wheels and Tires

8. Drive to the nearest tire specialist to get the damaged tire replaced. Before the tire is removed from the wheel, inform the tire specialist that the tire contains sealant. Renew the sealant bottle as soon as possible after it has been used once.

Note: The temporary mobility kit only provides an emergency repair. Regulations concerning tire repair after using the temporary mobility kit may differ from country to country. You should consult a tire specialist for advice.

TIRE CARE



WARNING: Do not scrub the sidewalls of the tires when you are parking.

Regularly check all of the tire pressures. See **Tire Pressures** (page 334).

Regularly check all of the tires for cuts, foreign material and uneven tire wear. Uneven tire wear could indicate that the wheel alignment or tire pressures are not to specification. Have your vehicle checked as soon as possible.

To avoid tire damage, slowly move your vehicle if you have to mount a curb. Have the wheels as much as possible to right angles to the curb.


Repositioning the Wheels and Tires

We recommend that you reposition the wheels and tires from front to rear and vice versa at intervals of between 5,000 km (3,000 mi) and 10,000 km (6,000 mi). This helps the tires to wear evenly and last longer. See **Changing a Road Wheel** (page 327).

Reposition the wheels and tires as shown:


Note: Front tires are shown on the left.

Non-Directional Tires

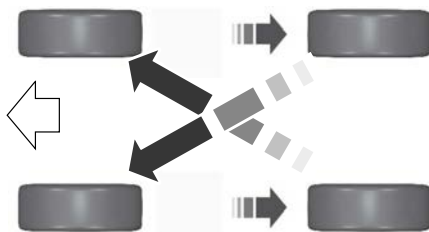

E142547

Directional Tires

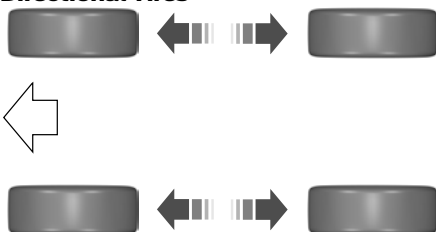

E70415

Note: Directional tires have an arrow on the sidewall to indicate the correct direction of wheel rotation. Do not switch directional tires to the other side of your vehicle.

Wheels and Tires

USING WINTER TIRES



E278852

We recommend that you use winter or all-season tires carrying this symbol when the temperature is 7°C (45°F) or lower, or in snow and ice conditions.

Inflate the winter tires to the same tire pressures as those listed in the tire pressures table. See **Tire Pressures** (page 334).



WARNING: Snow tires must be the same size, load index and speed rating as those originally provided by Ford. Use of any tire or wheel not recommended by Ford can affect the safety and performance of your vehicle, which could result in an increased risk of loss of control, vehicle rollover, personal injury and death. Additionally, the use of non-recommended tires and wheels can cause steering, suspension, axle, transfer case or power transfer unit failure. Follow the Ford recommended tire inflation pressure found on the Safety Compliance Certification Label (on the door hinge pillar, door latch post or the door edge that meets the door latch post, next to the driver seat), or Tire

Label on the B-Pillar or the edge of the driver door. Failure to follow the tire pressure recommendations can cause uneven treadwear patterns and adversely affect the way your vehicle handles.

USING SNOW CHAINS - VAN



WARNING: Do not exceed 50 km/h (30 mph). Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: Only fit snow chains to specified tires.



WARNING: Do not use snow chains on snow-free roads.



WARNING: If your vehicle is fitted with wheel trims, remove them before fitting snow chains.

Only use snow chains on the front wheels.

Only use snow chains or cables on wheels that have 215/65R15C tires.

Only use SAE Class S snow chains or cables of 10 mm (0.4 in) or smaller in diameter.

Note: If your vehicle does not have this tire size, you can purchase alternative wheels that permit the use of snow chains or cables.

Note: Maintain correct tire pressures.

Note: The anti-lock brake system continues to correctly operate.

Note: We recommend that you switch the stability control system off. See **Using Stability Control** (page 177).

Do not use self-tensioning snow chains.

Wheels and Tires

Alternative Wheels for Snow Chain or Cable Use

Variant ¹	Tire Size	Suitable for Snow Chain or Cable Use, or Alternative Wheels and Tires Required	Tire Pressure bar (psi)
250 260 270 280 290 300 310	215/65R15C 104/102T	Suitable for snow chain or cable use.	See Tire Pressures (page 334).
250 260 270 280 290 300 310	215/65R16C 109/107T	Alternative wheel and tire size required. Use 15x6.5J steel wheels with 215/65R15C tires on the front and rear axles.	4 (58)
290 Sport	235/50R18 XL 101W	Alternative wheel and tire size required. Use special snow chain wheel kit 16x5.5J with 185/75R16C tires only on the front axle.	4 (58)
290 Sport 300 320 320 Sport 340	215/60R17C 109/107T	Alternative wheel and tire size required. Use 17x6J steel wheels with 215/60R17C tires only on the front axle.	4 (58)
320 330 340	215/65R16C 109/107T	Alternative wheel and tire size required. Use special snow chain wheel kit 16x5.5J with 185/75R16C tires only on the front axle.	4 (58)

¹To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Wheels and Tires

USING SNOW CHAINS - BUS



WARNING: Do not exceed 50 km/h (30 mph). Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: Do not use snow chains on snow-free roads.



WARNING: Only fit snow chains to specified tires.



WARNING: If your vehicle is fitted with wheel trims, remove them before fitting snow chains.

Only use snow chains on the front wheels.

Do not use snow chains or cables on alloy wheels that have 215/65R16C or 215/60R17C tires.

Only use SAE Class S snow chains or cables of 10 mm (0.4 in) or smaller in diameter.

Note: You can purchase alternative wheels that permit the use of snow chains or cables.

Note: Maintain correct tire pressures.

Note: The anti-lock brake system continues to correctly operate.

Note: We recommend that you switch the stability control system off. See **Using Stability Control** (page 177).

Do not use self-tensioning snow chains.

Alternative Wheels for Snow Chain or Cable Use

Variant ¹	Tire Size	Suitable for Snow Chain or Cable Use, or Alternative Wheels and Tires Required	Tire Pressure bar (psi)
300. 320.	215/65R16C.	Alternative wheel and tire size required. Use special snow chain use wheel kit 16x5.5J with 185/75R16C tires only on the front axle.	4 (58)
320. 320 Sport.	215/60R17C.	Alternative wheel and tire size required. Use 17x6J steel wheels with 215/60R17C tires only on the front axle.	4 (58)

¹ To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Wheels and Tires

USING SNOW CHAINS - SHUTTLE BUS



WARNING: Do not exceed 50 km/h (30 mph). Failure to follow this instruction could result in the loss of control of your vehicle, personal injury or death.



WARNING: Do not use snow chains on snow-free roads.



WARNING: Only fit snow chains to specified tires.



WARNING: If your vehicle is fitted with wheel trims, remove them before fitting snow chains.

Only use snow chains on the front wheels.

Only use SAE Class S snow chains or cables of 10 mm (0.4 in) or smaller in diameter.

Do not use snow chains or cables on wheels that have 215/65R16C tires.

Note: You can purchase alternative wheels that permit the use of snow chains or cables.

Note: Maintain correct tire pressures.

Do not use self-tensioning snow chains.

Alternative Wheels for Snow Chain or Cable Use

Variant ¹	Tire Size	Suitable for Snow Chain or Cable Use, or Alternative Wheels and Tires Required	Tire Pressure bar (psi)
300. 320.	215/65R16C.	Alternative wheel and tire size required. Use special snow chain use wheel kit 16x5.5J with 185/75R16C tires only on the front axle.	4 (58)

¹ To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Wheels and Tires

TIRE PRESSURE MONITORING SYSTEM (IF EQUIPPED)



WARNING: The tire pressure monitoring system is not a substitute for manually checking tire pressures. You should periodically check tire pressures using a pressure gauge. Failure to correctly maintain tire pressures could increase the risk of tire failure, loss of control, vehicle rollover and personal injury.

Your vehicle has a tire pressure monitoring system. A warning lamp illuminates if the tire pressure in one or more tires is below the correct tire pressure. If the low tire pressure warning lamp illuminates, stop your vehicle as soon as it is safe to do so, check the tires and inflate them to the correct pressure. See **Tire Pressures** (page 334). See **Tire Pressures** (page 334).

Note: When you inflate the tires to the correct pressure the system may not respond immediately.

To maintain the load carrying capability of your vehicle, the front tire pressures are different to the rear tire pressures. The system illuminates the warning lamp at different pressures for the front and rear tires.

We recommend that you reposition the wheels and tires to provide consistent performance and maximum tire life. You must reset the system when the wheels have been repositioned for it to determine which set of wheels and tires are on the front and rear axles. The system can then detect and correctly warn you if the tire pressure in one or more tires is below the correct tire pressure.

Driving with one or more tires below the correct tire pressure can:

- Increase tire wear.
- Cause them to overheat.
- Lead to tire failure.
- Affect vehicle handling or stopping ability.
- Reduce fuel efficiency.

How Temperature Affects Tire Pressures

Under normal driving conditions, tire pressures could increase by up to 0.3 bar (4 psi) from a cold start situation.

If your vehicle is stationary overnight and the temperature is significantly lower than the daytime temperature, tire pressures could decrease by up to 0.2 bar (3 psi) when there is a drop in temperature of 31°F (17°C) or more. The system detects this pressure decrease as being significantly below the correct inflation pressure and the warning lamp illuminates.

System Warning Lamps

The main function of the system is to warn you when the tire pressures are significantly low. It also warns you if the system is not correctly operating.

Wheels and Tires

	Description	Action
Solid warning lamp.	One or more tires is below the correct tire pressure.	<ol style="list-style-type: none">1. Check the tires to verify that none are flat.2. If one or more tires are flat, repair as necessary.3. Check the tire pressures.4. Carry out the system reset procedure.
Warning lamp flashes for approximately one minute and then remains illuminated.	Spare wheel in use.	<ol style="list-style-type: none">1. Repair the damaged road wheel and tire and refit it to your vehicle as soon as possible.2. Carry out the system reset procedure.
	System malfunction.	If the malfunction indicator remains on, the spare wheel is not in use and after you have checked the tire pressures, the system has detected a fault that requires service. Have your vehicle checked as soon as possible.

System Malfunction

The system has a malfunction indicator to warn you if the system is not correctly operating. The malfunction indicator and low tire pressure warning lamp have a combined function. If the system detects a malfunction the indicator flashes for approximately one minute and then remains illuminated. This sequence occurs every time you switch the ignition on, if the malfunction remains. Have your vehicle checked as soon as possible.

If the malfunction indicator illuminates, the system may not be able to warn you that the tire pressure in one or more tires is below the correct tire pressure.

A malfunction could occur if:

- You install a replacement tire or wheel that prevents the system from correctly operating.
- You use the temporary spare wheel.

Always check the system malfunction warning after replacing one or more tires or wheels on your vehicle. Make sure the replacement tires or wheels allow the system to continue to correctly operate.

Tire Pressure Monitoring System Reset Procedure

You must carry out the system reset procedure after each tire replacement or after you inflate the tires to the correct pressure.

Wheels and Tires

Using the Information Display Controls on the Steering Wheel or Instrument Panel, Scroll to:

Message	Action
Settings	Press the OK button or the right arrow button.
Driver assist	Press the OK button or the right arrow button.
Tyre monitor	Press and hold the OK button until the system reset confirmation appears. Alternatively, if your vehicle has a tire pressure monitoring system reset button, press and hold the button until confirmation appears.

System Operation Using the Temporary Spare Wheel

If you use the temporary spare wheel, the system malfunction indicator illuminates. Repair the damaged road wheel and tire and refit it to your vehicle as soon as possible. To restore the correct operation of the system, you must have the repaired road wheel and tire refitted to your vehicle.

Removing a Tire



E142549

Each road wheel has a tire pressure sensor inside the wheel and tire assembly. The tire pressure sensor attaches to the valve stem and is not visible until the tire is removed. We recommend you have tires serviced by an authorized dealer.

Note: Take care when removing a tire to avoid damaging the sensor.

Changing a Road Wheel

If you change a road wheel, the system must relearn the tire pressure sensor strategy. Carry out the following procedure:

1. Check the tires and inflate them to the correct pressure.
2. Park your vehicle for a minimum of 20 minutes.
3. Carry out the system reset procedure.
4. The system relearns the tire pressure sensor strategy when you next drive your vehicle at 40 km/h (25 mph) or above for a minimum of 15 minutes.

CHANGING A ROAD WHEEL



WARNING: If your vehicle has self-leveling air suspension, you must switch the system off before carrying out any maintenance or repair. Failure to follow this warning could result in serious personal injury or death.

Wheels and Tires



WARNING: Do not fit more than one spare wheel on your vehicle at any one time.

If a tire deflates when your vehicle is moving, do the following:

1. Firmly hold the steering wheel.
2. Avoid heavy braking.
3. Gradually reduce the vehicle speed and stop your vehicle as soon as it is safe to do so.
4. Fully apply the parking brake.
5. Switch the ignition off.

If the spare wheel is exactly the same type and size as the other fitted road wheels, you can replace the existing road wheel with the spare wheel and continue to drive in the normal manner. We recommend that you have the damaged road wheel and tire repaired or replaced as soon as possible.

Note: Your vehicle may not have a spare wheel, vehicle jack or a wheel brace. See *Tire Sealant and Inflator Kit* (page 317).

Dissimilar Spare Wheel and Tire Assembly Information



WARNING: Failure to follow these guidelines could result in an increased risk of loss of vehicle control, injury or death.



WARNING: If you are not sure what type of spare wheel your vehicle has, do not exceed 80 km/h (50 mph).

If the spare wheel is different to the other fitted road wheels, it may have a warning label with the appropriate maximum speed limit. Drive cautiously when using a dissimilar spare wheel and tire assembly.

A dissimilar spare wheel and tire is for temporary use only. Drive the shortest distance possible and have the damaged road wheel and tire repaired or replaced as soon as possible. If the dissimilar spare wheel or tire is damaged, it must be replaced.

Locking Lug Nuts

You can obtain replacement locking lug nuts or a locking lug nut key using the reference number certificate.

The locking lug nut key is located in the glove box or next to the vehicle jack.

Vehicle Jack



WARNING: Do not use the vehicle jack other than when you are changing a wheel in an emergency.





WARNING: Check that the vehicle jack is not damaged or deformed and the thread is lubricated and clean.




WARNING: No person should place any portion of their body under a vehicle that is supported by a jack.

Wheels and Tires

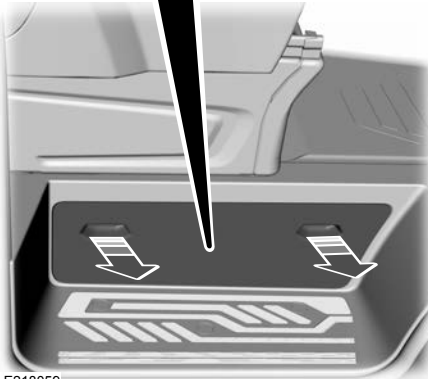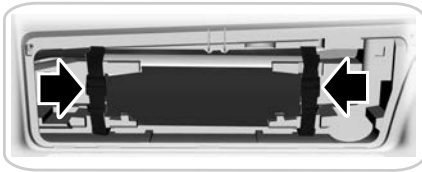


E218059

The vehicle jack, wheel brace and vehicle jack handle are in the storage compartment in the front right-hand side stepwell.

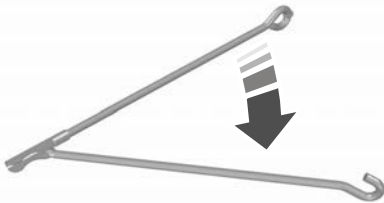

E146837

1. Unfold the vehicle jack handle.

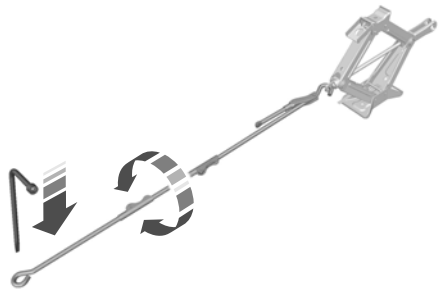

E70958

2. Insert the hook of the vehicle jack handle into the ring on the vehicle jack.
3. Insert the wheel brace into the end of the vehicle jack handle.
4. To raise your vehicle, rotate the vehicle jack handle clockwise.

Removing the Spare Wheel


The spare wheel is under the rear of your vehicle and removed using a winch system.



E145138

1. Open the liftgate or rear doors.

Wheels and Tires

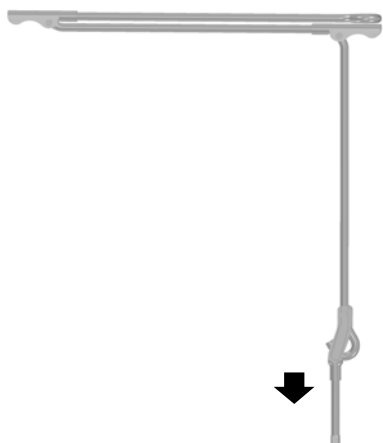

2. Insert the square end of the wheel brace or the short arm of the jack handle into the socket. Turn counterclockwise until the spare wheel rests on the ground and the cable is loose.




E146812

4. Rotate the cable through 90 degrees. Slide the cable through the slot to release the spare wheel bracket from the winch.



E146811

3. Raise the cable end cover.

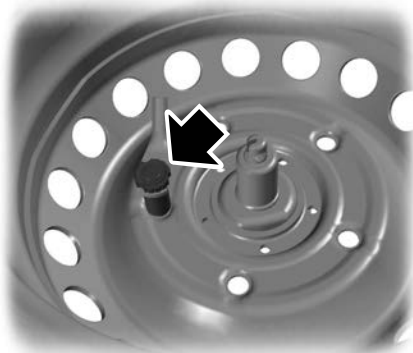

E146813

5. Remove the retaining nut to release the spare wheel bracket.

Wheels and Tires

Stowing the Spare Wheel




To stow the spare wheel, reverse the removal procedure. Make sure the spare wheel is secure by tightening the winch until you feel a slip.

Note: Do not raise the winch cable without having attached a wheel. This could damage the winch mechanism.

Front Jacking Points



WARNING: Use only the specified jacking points. If you use other positions, you may damage the body, steering, suspension, engine, braking system or the fuel lines.

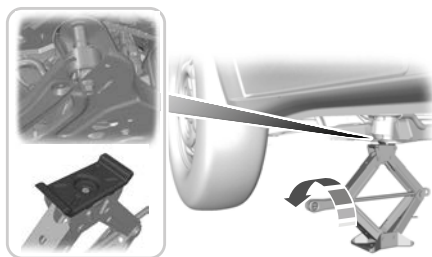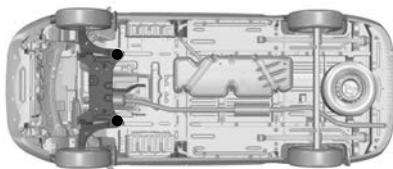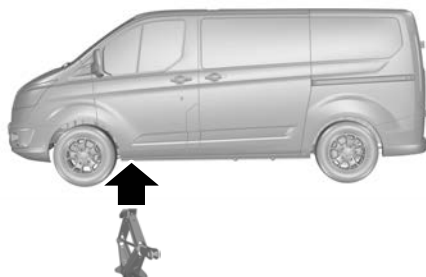

E146881

The front sub-frame rear bolts fit into a recess on the flap of the vehicle jack.




Wheels and Tires

Rear Jacking Points



WARNING: Use only the specified jacking points. If you use other positions, you may damage the body, steering, suspension, engine, braking system or the fuel lines.




Vehicles Without Rear Air Suspension

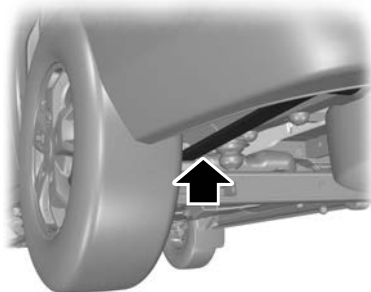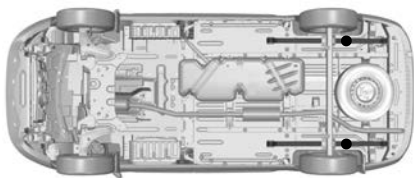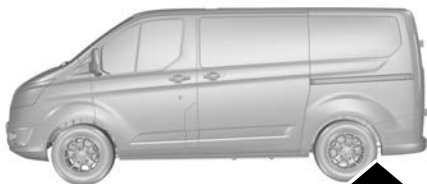

E146843

Rotate the head of the vehicle jack and position it under the rear leaf spring directly behind the rear axle.

Vehicles With Rear Air Suspension

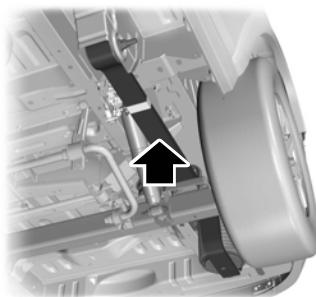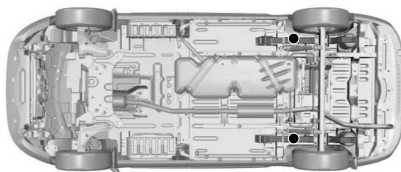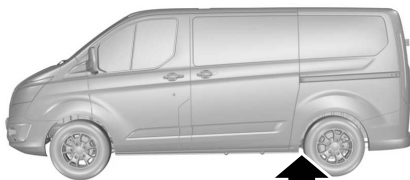

E227612

Rotate the head of the vehicle jack and position it under the rear leaf spring directly in front of the rear axle.

Wheels and Tires

Removing a Road Wheel



WARNING: Park your vehicle so that you do not obstruct the flow of traffic or place yourself in any danger and set up a warning triangle.



WARNING: Make sure that your vehicle is on firm and level ground with the front wheels pointing straight ahead.



WARNING: Switch the ignition off and apply the parking brake.



WARNING: If your vehicle has a manual transmission, shift into first or reverse gear. If your vehicle has an automatic transmission, shift into park (P).



WARNING: Make sure all passengers are out of your vehicle.



WARNING: Chock the diagonally opposite wheel to the punctured tire with an appropriate wheel block or wheel chock.



WARNING: Make sure that the arrows on directional tires point in the direction of rotation when your vehicle is moving forward. If you have to fit a spare tire with the arrows pointing in the opposite direction have the tire refitted as soon as possible.



WARNING: No person should place any portion of their body under a vehicle that is supported by a jack.



WARNING: Make sure that the vehicle jack is vertical to the jacking point and the base is flat on the ground.

1. Insert the flat end of the wheel brace between the wheel rim and the wheel trim and carefully remove the wheel trim.
2. Install the locking lug nut key.
3. Loosen the lug nuts and locking lug nut.
4. Correctly position the vehicle jack.
5. Raise your vehicle until the tire is clear of the ground.
6. Remove the lug nuts and locking lug nut.
7. Remove the wheel.

Note: Do not lay alloy wheels face down on the ground.

Installing a Road Wheel



WARNING: Make sure there is no grease or oil on the threads or the surface between the wheel lugs and nuts. This can cause the lug nuts to loosen while driving.




WARNING: Use only approved wheel and tire sizes. Using other sizes could damage your vehicle and will make the National Type Approval invalid.

1. Install the wheel.

Note: Make sure the wheel and hub contact surfaces are free from foreign matter.

Wheels and Tires

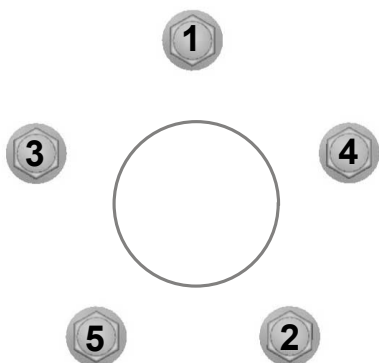

E154985

2. Install all of the lug nuts and partially tighten them in the sequence shown.

Note: Make sure that the cones on the lug nuts are against the wheel.

Note: Alloy wheel lug nuts are suitable for use on a steel spare wheel.

3. Lower your vehicle and remove the vehicle jack.
4. Install the locking lug nut key.
5. Fully tighten the lug nuts in the sequence shown. See **Lug Nuts** (page 343).
6. Install the wheel trim.
7. Correctly stow the spare wheel, vehicle jack, wheel brace and locking lug nut key.

Note: Have the lug nuts checked for tightness and the tire pressure checked as soon as possible.


Note: If the spare wheel is different in size or construction to the road wheels, have this replaced as soon as possible.

TIRE PRESSURES - VAN

The recommended tire inflation pressures are on the tire information label on the driver side B-pillar.

Check all tire pressures when they are cold, at least once every two weeks.

Note: You may need to remove the spare wheel from the spare wheel carrier to check the tire pressure.

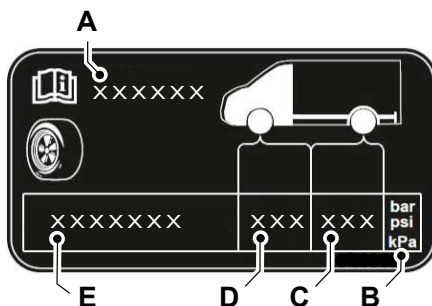

E254055

- A Vehicle model.
- B Measure unit.
- C Rear tire pressure.
- D Front tire pressure.
- E Tire size.

Wheels and Tires

Variant ¹	Tire Size	Front	Rear
		bar (psi)	bar (psi)
250 S	215/65R15C 104/102T	3.3 (48)	2.9 (42)
	215/65R16C 109/107T	3.6 (52)	3.1 (45)
260 S	215/65R15C 104/102T	3.3 (48)	2.9 (42)
	215/65R16C 109/107T	3.6 (52)	3.1 (45)
270 S	215/65R15C 104/102T	3.3 (48)	2.9 (42)
	215/65R16C 109/107T	3.6 (52)	3.1 (45)
280 S	215/65R15C 104/102T	3.3 (48)	2.9 (42)
	215/65R16C 109/107T	3.6 (52)	3.1 (45)
290 S	215/65R15C 104/102T	3.3 (48)	3.3 (48)
	215/65R16C 109/107T	3.5 (51)	3.6 (52)
290 S Sport	215/60R17C 109/107T	3.5 (51)	3.6 (52)
	235/50R18 XL 101W	3 (44)	3 (44)
290 L	215/65R15C 104/102T	3.6 (52)	3.3 (48)
	215/65R16C 109/107T	3.8 (55)	3.6 (52)
290 L Sport	235/50R18 XL 101W	3 (44)	3 (44)
300 S	215/65R15C 104/102T	3.3 (48)	3.3 (48)
	215/65R16C 109/107T	3.5 (51)	3.6 (52)
300 L	215/65R15C 104/102T	3.6 (52)	3.3 (48)
	215/65R16C 109/107T	3.8 (55)	3.6 (52)
310 S	215/65R15C 104/102T	3.4 (49)	3.7 (54)
	215/65R16C 109/107T	3.7 (54)	4 (58)
310 L	215/65R15C 104/102T	3.7 (54)	3.7 (54)
	215/65R16C 109/107T	4 (58)	4 (58)
320 S	215/65R16C 109/107T	3.8 (55)	4 (58)
320 S Kombi	215/65R16C 109/107T	3.8 (55)	3.7 (54)

Wheels and Tires

Variant ¹	Tire Size	Front	Rear
		bar (psi)	bar (psi)
Vehicles with rear air suspension			
320 S Kombi. Plug-in hybrid electric vehicle	215/65R16C 109/107T	4 (58)	3.7 (54)
300 S	215/60R17C 109/107T	3.5 (51)	3.6 (52)
300 L	215/60R17C 109/107T	3.8 (55)	3.6 (52)
320 S	215/60R17C 109/107 T	3.8 (55)	4 (58)
320 L	215/60R17C 109/107 T	4 (58)	4 (58)
320 S Sport Van	215/60R17C 109/107 T	3.6 (52)	3.7 (54)
320 S Sport Kombi	215/60R17C 109/107T	3.7 (54)	4 (58)
320 S Sport Double Cab in Van			
320 L.	215/65R16C 109/107T	4 (58)	4 (58)
320 L Kombi. Vehicles with rear air suspension	215/65R16C 109/107T	4 (58)	3.7 (54)
320 L Sport Van	215/60R17C 109/107T	4 (58)	3.7 (54)
320 L Sport Kombi	215/60R17C 109/107T	4 (58)	4 (58)
320 L Sport Double Cab in Van			
330 S	215/65R16C 109/107 T	3.7 (54)	4.75 (69)
330 L	215/65R16C 109/107T	4 (58)	4.75 (69)
340 S	215/65R16C 109/107T	3.7 (54)	4.75 (69)
340 S Plug-in hybrid electric vehicle	215/65R16C 109/107T	4 (58)	4.75 (69)
340 L	215/65R16C 109/107T	4 (58)	4.75 (69)

¹ To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Wheels and Tires

Temporary Spare Wheel

Variant ¹	Tire Size	Front	Rear
		bar (psi)	bar (psi)
290 S Sport 290 L Sport	215/65R16C 109/107T	3.6 (52)	3.6 (52)
290 S Sport 300 S 300 L 320 S 320 L 320 S Sport 320 L Sport	215/60R17C 109/107T	4 (58)	4 (58)

¹ To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).


Wheels and Tires

TIRE PRESSURES - SHUTTLE BUS

The recommended tire inflation pressures are on the tire information label on the driver side B-pillar.

Check all tire pressures when they are cold, at least once every two weeks.

Note: You may need to remove the spare wheel from the spare wheel carrier to check the tire pressure.

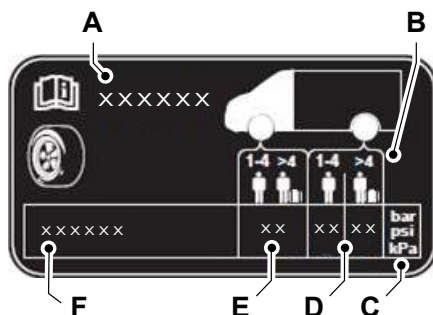

E254145

- A Vehicle model.
- B Vehicle load.
- C Measure unit.
- D Rear tire pressure.
- E Front tire pressure.
- F Tire size.

Variant ¹	Tire Size	Front	Rear
		bar (psi)	bar (psi)
320 L. Vehicles with rear air suspension.	215/65R16C.	4 (58)	3.7 (54)
320 L.	215/65R16C.	4 (58)	3.7 (54)
340 L.	215/65R16C.	4 (58)	4.75 (69)

¹ To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Wheels and Tires

Temporary Spare Wheel

Tire Size	bar (psi)
215/65R16C.	4 (58)

¹To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).


Wheels and Tires

TIRE PRESSURES - BUS

The recommended tire inflation pressures are on the tire information label on the driver side B-pillar.

Check all tire pressures when they are cold, at least once every two weeks.

Note: You may need to remove the spare wheel from the spare wheel carrier to check the tire pressure.

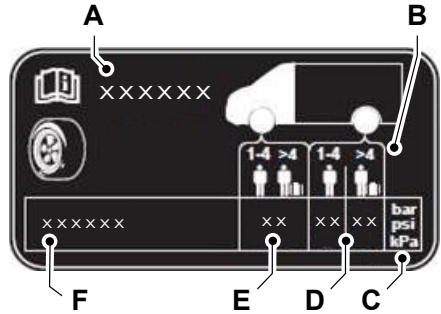

E254145

- A Vehicle model.
- B Vehicle load.
- C Measure unit.
- D Rear tire pressure.
- E Front tire pressure.
- F Tire size.

Variant ¹	Tire Size	Full Load		Half Load	
		Front	Rear	Front	Rear
		bar (psi)	bar (psi)	bar (psi)	bar (psi)
300 S.	215/65R16C.	3.6 (52)	3.5 (51)	3.6 (52)	3.1 (45)
300 L.	215/65R16C.	4 (58)	3.5 (51)	4 (58)	3.1 (45)
320 S.	215/65R16C.	3.8 (55)	3.7 (54)	3.8 (55)	3.1 (45)
320 S.	215/60R17C.	3.8 (55)	3.7 (54)	3.8 (55)	3.1 (45)
320 S Sport.					
320 S. Vehicles with rear air suspension.					
320 S.	215/65R16C.	4 (58)	3.7 (54)	4 (58)	3.1 (45)

Wheels and Tires

Variant ¹	Tire Size	Full Load		Half Load	
		Front	Rear	Front	Rear
		bar (psi)	bar (psi)	bar (psi)	bar (psi)
Plug-in hybrid electric vehicle.					
320 L.	215/65R16C.	4 (58)	3.7 (54)	4 (58)	3.1 (45)
320 L. Vehicles with rear air suspension.					
320 L.	215/60R17C.	4 (58)	3.7 (54)	4 (58)	3.1 (45)
320 L Sport.					
320 L. Vehicles with rear air suspension.					

¹ To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Temporary Spare Wheel

Variant ¹	Tire Size	Front	Rear
		bar (psi)	bar (psi)
320 S.	215/60R17C.	4 (58)	4 (58)
320 S. Vehicles with rear air suspension.			
320 S Sport.			
320 L.			
320 L. Vehicles with rear air suspension.			
320 L Sport.			

¹ To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Wheels and Tires

Shuttle Bus

Variant ¹	Tire Size	Front	Rear
		bar (psi)	bar (psi)
320 L.	215/65R16C.	4 (58)	3.7 (54)

¹To ascertain the variant of your vehicle, refer to the vehicle identification plate. See **Vehicle Identification Plate** (page 347).

Wheels and Tires

LUG NUTS

Lug Nut Torque



WARNING: When you install a wheel, always remove any corrosion, dirt or foreign materials present on the mounting surfaces of the wheel or the surface of the wheel hub, brake drum or brake disc that contacts the wheel. Make sure to secure any fasteners that attach the rotor to the hub so they do not interfere with the mounting surfaces of the wheel. Installing wheels without correct metal-to-metal contact at the wheel mounting surfaces can cause the wheel nuts to loosen and the wheel to come off while your vehicle is in motion, resulting in loss of vehicle control, personal injury or death.

Bolt size	Nm (lb.ft)
M14 x 1.5	204 (150)

Locking Lug Nuts

You can obtain a replacement locking lug nut key and replacement locking lug nuts from an authorized dealer using the reference number certificate.

Capacities and Specifications

VEHICLE DIMENSIONS - BUS

Short Wheelbase

Dimension Description	mm (in)
Overall length.	4,972 (195.7)
Overall width including the exterior mirrors.	2,290 (90.2)
Overall height excluding the antenna.	1,959–2,382 (77.1–93.8)
Wheelbase.	2,933 (115.5)
Front track.	1,732–1,752 (68.2–69.0)
Rear track.	1,734–1,759 (68.3–69.3)

Long Wheelbase

Dimension Description	mm (in)
Overall length.	5,339 (210.2)
Overall width including the exterior mirrors.	2,290 (90.2)
Overall height excluding the antenna.	1,968–2,373 (77.5–93.4)
Wheelbase.	3,300 (129.9)
Front track.	1,732–1,752 (68.2–69.0)
Rear track.	1,734–1,759 (68.3–69.3)

Capacities and Specifications

VEHICLE DIMENSIONS - VAN

Short Wheelbase


Dimension Description	Dimension mm (in)
Maximum length.	4,972 (195.7)
Overall width excluding exterior mirrors.	2,032 (80.0)
Overall height - EC curb weight.	1,959–2,367 (77.1–93.2)
Wheelbase.	2,933 (115.5)
Front track.	1,732–1,752 (68.2–69.0)
Rear track.	1,735–1,762 (68.3–69.4)

Long Wheelbase

Dimension Description	Dimension mm (in)
Maximum length.	5,339 (210.2)
Overall width excluding exterior mirrors.	2,032 (80.0)
Overall height - EC curb weight.	1,954–2,343 (76.9–92.2)
Wheelbase.	3,300 (129.9)
Front track.	1,732–1,752 (68.2–69.0)
Rear track.	1,735–1,762 (68.3–69.4)

Capacities and Specifications

TOWBAR DIMENSIONS

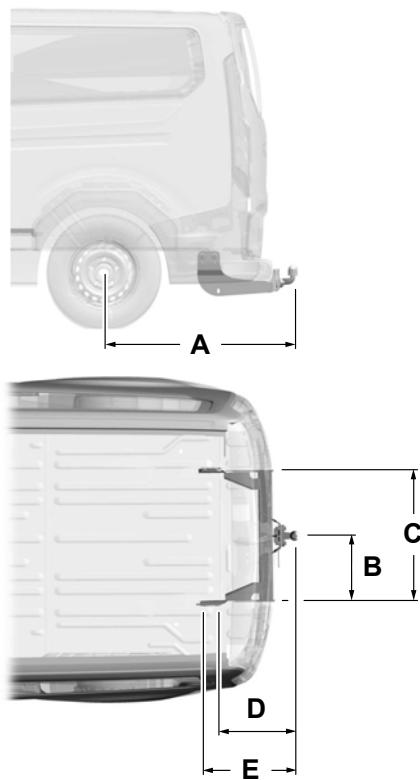

E148831

Item	Dimension Description	Dimension in mm (inches)
A	Wheel center to center of tow ball.	1151 (45.3)
B	Center of tow ball to side member.	417 (16.4)
C	Distance between side members.	834 (32.8)


Capacities and Specifications

Item	Dimension Description	Dimension in mm (inches)
D	Center of tow ball to center of first attachment point.	476 (18.7)
E	Center of tow ball to center of second attachment point.	551 (21.7)

Maximum Permissible Trailer Vertical Weight

kg (lb)
112 kg (247 lb)

VEHICLE IDENTIFICATION PLATE

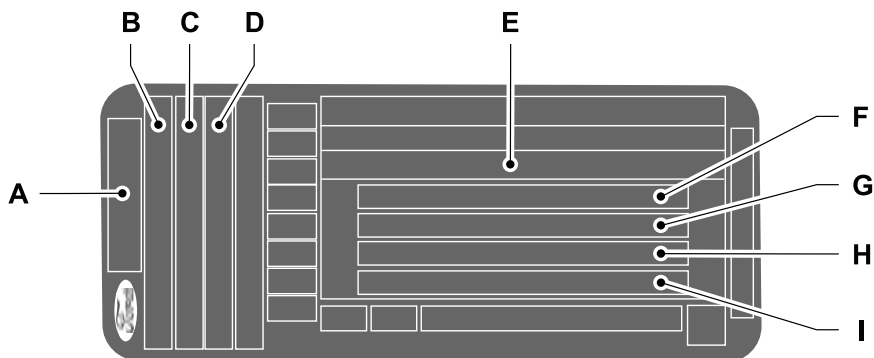

- A Model.
- B Variant.
- C Engine designation.
- D Engine power and emission level.
- E Vehicle identification number.
- F Gross vehicle weight.
- G Gross train weight.

Capacities and Specifications

- H Maximum front axle weight.
- I Maximum rear axle weight.

The vehicle identification plate is within the right-hand door aperture.

Note: The vehicle identification plate may vary to that shown.

Note: Information on the vehicle identification plate is dependent upon market requirements.

VEHICLE IDENTIFICATION NUMBER



E71369

The vehicle identification number is located on the left-hand side of the instrument panel. You will also find it stamped into the right-hand front wheel arch.

CAPACITIES AND SPECIFICATIONS - 2.0L ECOBLUE, BUS

Use oil and fluid that meets the defined specification and viscosity grade.

If you do not use oil and fluid that meets the defined specification and viscosity grade, it could result in:

- Component damage not covered by the vehicle Warranty.
- Longer engine cranking periods.
- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Reduced brake performance.

Air Conditioning System



WARNING: The air conditioning refrigerant system contains refrigerant under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Variant	Global Warming Potential	CO ₂ Equivalent
Vehicles without rear air conditioning.	4	0.003 tonnes
Vehicles with rear air conditioning.	4	0.004 tonnes

Capacities and Specifications

Capacities

Variant	Refrigerant	Refrigerant Oil
Vehicles without rear air conditioning.	0.74 kg (26.1 oz)	280 cm ³ (9.5 fl oz)
Vehicles with rear air conditioning.	1.05 kg (37.0 oz)	640 cm ³ (21.6 fl oz)

Materials

Name	Specification
Refrigerant - R-1234yf	WSS-M17B21-A
A/C Compressor Oil DE-12 FU7J-M2C300-AA	WSS-M2C300-A2

Engine

Engine Oil

Capacities

Variant	Including the Oil Filter	Excluding the Oil Filter
All.	9.8 L (2.2 gal)	9.1 L (2.0 gal)

Note: The quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum is 2 L (0.4 gal).

Materials

Name	Specification
Engine Oil - SAE 0W-30	WSS-M2C950-A

Engine Oil Top-Up

If you are unable to find engine oil that meets the specification defined by WSS-M2C950-A, you can top-up with a SAE 0W-30 engine oil that is defined by ACEA C2.

Note: Do not use more than 1 L (1.1 qt) of the alternative engine oil between scheduled service intervals.

Capacities and Specifications

Engine Coolant

Capacities

Variant	Quantity
Vehicles without fuel fired heater and auxiliary heater.	11.2 L (2.5 gal)
Vehicles with fuel fired heater.	12 L (2.6 gal)
Vehicles with auxiliary heater.	13.3 L (2.9 gal)
Vehicles with fuel fired heater and auxiliary heater.	13.7 L (3.0 gal)

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

Fuel Tank

Capacities

Variant	Quantity
All.	70 L (15.4 gal)

Diesel Exhaust Fluid (AdBlue) Tank

Capacities

Variant	Quantity
All.	22 L (4.8 gal)

Washer Reservoir

Capacities

Variant	Quantity
All.	4.5 L (1.0 gal)

Capacities and Specifications

Materials

Name	Specification
Screen Wash FU7J-19C544-AA/BA/DA/EA/GA/HA	WSS-M14P19-A

Brake System

Materials

Name	Specification
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2

CAPACITIES AND SPECIFICATIONS - 2.0L ECOBLUE, VAN

Use oil and fluid that meets the defined specification and viscosity grade.

If you do not use oil and fluid that meets the defined specification and viscosity grade, it could result in:

- Component damage not covered by the vehicle Warranty.
- Longer engine cranking periods.

- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Reduced brake performance.

Air Conditioning System



WARNING: The air conditioning refrigerant system contains refrigerant under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Variant	Global Warming Potential	CO ₂ Equivalent
Vehicles without rear air conditioning.	1430	1.06 tonnes
Vehicles with rear air conditioning.	1430	1.65 tonnes

Capacities and Specifications

Capacities

Variant	Refrigerant	Refrigerant Oil
Vehicles without rear air conditioning.	0.74 kg (26.1 oz)	280 cm ³ (9.5 fl oz)
Vehicles with rear air conditioning.	1.15 kg (40.6 oz)	640 cm ³ (21.6 fl oz)

Materials

Name	Specification
Refrigerant - R-134A	WSH-M17B19-A
Compressor Oil - Air Conditioning 6U7J-M1C231-CA	WSH-M1C231-B

Engine

Engine Oil

Capacities

Variant	Including the Oil Filter	Excluding the Oil Filter
All.	9.8 L (2.2 gal)	9.1 L (2.0 gal)

Note: The quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum is 2 L (0.4 gal).

Materials

Name	Specification
Engine Oil - SAE 0W-30	WSS-M2C950-A

Engine Oil Top-Up

If you are unable to find an engine oil that meets the specification defined by WSS-M2C950-A, you can top up with a SAE 0W-30 engine oil that is defined by ACEA C2.

Note: Do not use more than 1 L (0.2 gal) of the alternative engine oil between scheduled service intervals.

Capacities and Specifications

Engine Coolant

Capacities

Variant	Quantity
Vehicles without fuel fired heater and auxiliary heater.	11.2 L (2.5 gal)
Vehicles with fuel fired heater.	12 L (2.6 gal)
Vehicles with auxiliary heater.	13.3 L (2.9 gal)
Vehicles with fuel fired heater and auxiliary heater.	13.7 L (3.0 gal)

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

Fuel Tank

Capacities

Variant	Quantity
All.	70 L (15.4 gal)

Diesel Exhaust Fluid (AdBlue) Tank

Capacities

Variant	Quantity
All.	22 L (4.8 gal)

Washer Reservoir

Capacities

Variant	Quantity
All.	4.5 L (1.0 gal)

Capacities and Specifications

Materials

Name	Specification
Screen Wash FU7J-19C544-AA/BA/DA/EA/GA/HA	WSS-M14P19-A

Brake System

Materials

Name	Specification
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2

CAPACITIES AND SPECIFICATIONS - 2.2L DURATORQ-TDCI DIESEL, BUS

Use oil and fluid that meets the defined specification and viscosity grade.

If you do not use oil and fluid that meets the defined specification and viscosity grade, it could result in:

- Component damage not covered by the vehicle Warranty.
- Longer engine cranking periods.

- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Reduced brake performance.

Air Conditioning System



WARNING: The air conditioning refrigerant system contains refrigerant under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Variant	Global Warming Potential	CO ₂ Equivalent
Vehicles without rear air conditioning.	4	0.003 tonnes
Vehicles with rear air conditioning.	4	0.004 tonnes

Capacities and Specifications

Capacities

Variant	Refrigerant	Refrigerant Oil
Vehicles without rear air conditioning.	0.74 kg (26.1 oz)	280 cm ³ (9.5 fl oz)
Vehicles with rear air conditioning.	1.05 kg (37.0 oz)	640 cm ³ (21.6 fl oz)

Materials

Name	Specification
Refrigerant - R-1234yf	WSS-M17B21-A
A/C Compressor Oil DE-12 FU7J-M2C300-AA	WSS-M2C300-A2

Engine

Engine Oil

Capacities

Variant	Including the Oil Filter	Excluding the Oil Filter
All.	7.3 L (1.6 gal)	6.5 L (1.4 gal)

Note: The quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum is 1.5 L (0.3 gal).

Materials

Name	Specification
Engine Oil - SAE 5W-30	WSS-M2C913-D

Engine Oil Top-Up

If you are unable to find engine oil that meets the specification defined by WSS-M2C913-D, you can top-up with a SAE 5W-30 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 1 L (0.2 gal) of the alternative engine oil between scheduled service intervals.

Capacities and Specifications

Engine Coolant

Capacities

Variant	Quantity
Vehicles without fuel fired heater and auxiliary heater.	9.3 L (2.0 gal)
Vehicles with fuel fired heater.	10 L (2.2 gal)
Vehicles with auxiliary heater.	11.3 L (2.5 gal)
Vehicles with fuel fired heater and auxiliary heater.	11.7 L (2.6 gal)

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

Fuel Tank

Capacities

Variant	Quantity
Vehicles with standard fuel tank.	80 L (17.6 gal)
Vehicles with larger fuel tank.	95 L (20.9 gal)

Washer Reservoir

Capacities

Variant	Quantity
All.	4.5 L (1.0 gal)

Materials

Name	Specification
Screen Wash FU7J-19C544-AA/BA/DA/EA/GA/HA	WSS-M14P19-A

Capacities and Specifications

Brake System

Materials

Name	Specification
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2

CAPACITIES AND SPECIFICATIONS - 2.2L DURATORQ-TDCI DIESEL, VAN

Use oil and fluid that meets the defined specification and viscosity grade.

If you do not use oil and fluid that meets the defined specification and viscosity grade, it could result in:

- Component damage not covered by the vehicle Warranty.
- Longer engine cranking periods.

- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Reduced brake performance.

Air Conditioning System



WARNING: The air conditioning refrigerant system contains refrigerant under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Variant	Global Warming Potential	CO ₂ Equivalent
Vehicles without rear air conditioning.	1430	1.06 tonnes
Vehicles with rear air conditioning.	1430	1.65 tonnes

Capacities

Variant	Refrigerant	Refrigerant Oil
Vehicles without rear air conditioning.	0.74 kg (26.1 oz)	280 cm ³ (9.5 fl oz)
Vehicles with rear air conditioning.	1.15 kg (40.6 oz)	640 cm ³ (21.6 fl oz)

Capacities and Specifications

Materials

Name	Specification
Refrigerant - R-134A	WSH-M17B19-A
Compressor Oil - Air Conditioning 6U7J-M1C231-CA	WSH-M1C231-B

Engine

Engine Oil

Capacities

Variant	Including the Oil Filter	Excluding the Oil Filter
All.	7.3 L (1.6 gal)	6.5 L (1.4 gal)

Note: The quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum is 1.5 L (0.3 gal).

Materials

Name	Specification
Engine Oil - SAE 5W-30	WSS-M2C913-D

Engine Oil Top-Up

If you are unable to find engine oil that meets the specification defined by WSS-M2C913-D, you can top-up with a SAE 5W-30 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 1 L (0.2 gal) of the alternative engine oil between scheduled service intervals.

Capacities and Specifications

Engine Coolant

Capacities

Variant	Quantity
Vehicles without fuel fired heater and auxiliary heater.	9.3 L (2.0 gal)
Vehicles with fuel fired heater.	10 L (2.2 gal)
Vehicles with auxiliary heater.	11.3 L (2.5 gal)
Vehicles with fuel fired heater and auxiliary heater.	11.7 L (2.6 gal)

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

Fuel Tank

Capacities

Variant	Quantity
Vehicles with standard fuel tank.	80 L (17.6 gal)
Vehicles with larger fuel tank.	95 L (20.9 gal)

Washer Reservoir

Capacities

Variant	Quantity
All.	4.5 L (1.0 gal)

Materials

Name	Specification
Screen Wash FU7J-19C544-AA/BA/DA/EA/GA/HA	WSS-M14P19-A

Capacities and Specifications

Brake System

Materials

Name	Specification
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2

CAPACITIES AND SPECIFICATIONS - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV), BUS

Use oil and fluid that meets the defined specification and viscosity grade.

If you do not use oil and fluid that meets the defined specification and viscosity grade, it could result in:

- Component damage not covered by the vehicle Warranty.
- Longer engine cranking periods.

- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Reduced brake performance.

Air Conditioning System



WARNING: The air conditioning refrigerant system contains refrigerant under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Variant	Global Warming Potential	CO ₂ Equivalent
Vehicles without rear climate control.	1430	1.06 tonnes
Vehicles with rear climate control.	1430	1.65 tonnes

Capacities

Variant	Refrigerant	Refrigerant Oil
Vehicles without rear climate control.	0.74 kg (26.1 oz)	280 cm ³ (9.5 fl oz)
Vehicles with rear climate control.	1.15 kg (40.6 oz)	640 cm ³ (21.6 fl oz)

Capacities and Specifications

Materials

Name	Specification
Refrigerant - R-134A	WSH-M17B19-A
Compressor Oil - Air Conditioning 6U7J-M1C231-CA	WSH-M1C231-B

Engine

Engine Oil

Capacities

Variant	Including the Oil Filter	Excluding the Oil Filter
All.	4.6 L (1.0 gal)	4.4 L (1.0 gal)

Note: The quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum is 1 L (0.2 gal).

Materials

Name	Specification
Engine Oil - SAE 5W-20	WSS-M2C948-B

Engine Oil Top-Up

If you are unable to find engine oil that meets the specification defined by WSS-M2C948-B, you can top-up with a SAE 5W-20 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 0.5 L (0.1 gal) of the alternative engine oil between scheduled service intervals.

Engine Coolant

Capacities

Variant	Quantity
All.	11.85 L (2.6 gal)

Capacities and Specifications

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

High Voltage Battery Coolant

Capacities

Variant	Quantity
All.	8.55 L (1.9 gal)

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

Fuel Tank

Capacities

Variant	Quantity
All.	50 L (11.0 gal)

Washer Reservoir

Capacities

Variant	Quantity
All.	3.9 L (0.9 gal)

Materials

Name	Specification
Screen Wash FU7J-19C544-AA/BA/DA/EA/GA/HA	WSS-M14P19-A

Capacities and Specifications

Brake System

Materials

Name	Specification
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2

CAPACITIES AND SPECIFICATIONS - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV), VAN

Use oil and fluid that meets the defined specification and viscosity grade.

If you do not use oil and fluid that meets the defined specification and viscosity grade, it could result in:

- Component damage not covered by the vehicle Warranty.
- Longer engine cranking periods.

- Increased emission levels.
- Reduced engine performance.
- Reduced fuel economy.
- Reduced brake performance.

Air Conditioning System



WARNING: The air conditioning refrigerant system contains refrigerant under high pressure. Only qualified personnel should service the air conditioning refrigerant system. Opening the air conditioning refrigerant system can cause personal injury.

Variant	Global Warming Potential	CO ₂ Equivalent
Vehicles without rear climate control.	1430	1.06 tonnes
Vehicles with rear climate control.	1430	1.65 tonnes

Capacities

Variant	Refrigerant	Refrigerant Oil
Vehicles without rear climate control.	0.74 kg (26.1 oz)	280 cm ³ (9.5 fl oz)
Vehicles with rear climate control.	1.15 kg (40.6 oz)	640 cm ³ (21.6 fl oz)

Capacities and Specifications

Materials

Name	Specification
Refrigerant - R-134A	WSH-M17B19-A
Compressor Oil - Air Conditioning 6U7J-M1C231-CA	WSH-M1C231-B

Engine

Engine Oil

Capacities

Variant	Including the Oil Filter	Excluding the Oil Filter
All.	4.6 L (1.0 gal)	4.4 L (1.0 gal)

Note: The quantity of engine oil required to raise the indicated level on the dipstick from minimum to maximum is 1 L (0.2 gal).

Materials

Name	Specification
Engine Oil - SAE 5W-20	WSS-M2C948-B

Engine Oil Top-Up

If you are unable to find engine oil that meets the specification defined by WSS-M2C948-B, you can top-up with a SAE 5W-20 engine oil that is defined by ACEA A5/B5.

Note: Do not use more than 0.5 L (0.1 gal) of the alternative engine oil between scheduled service intervals.

Engine Coolant

Capacities

Variant	Quantity
All.	9.05 L (2.0 gal)

Capacities and Specifications

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

High Voltage Battery Coolant

Capacities

Variant	Quantity
All.	8.55 L (1.9 gal)

Materials

Name	Specification
Antifreeze Super Plus Premium FU7J-19544-xx	WSS-M97B44-D

Fuel Tank

Capacities

Variant	Quantity
All.	50 L (11.0 gal)

Washer Reservoir

Capacities

Variant	Quantity
All.	3.9 L (0.9 gal)

Materials

Name	Specification
Screen Wash FU7J-19C544-AA/BA/DA/EA/GA/HA	WSS-M14P19-A

Capacities and Specifications

Brake System

Materials

Name	Specification
Brake Fluid DOT 4 LV High Performance BU7J-M6C65-xxxx	WSS-M6C65-A2

BULB SPECIFICATION CHART - VEHICLES WITH: HALOGEN HEADLAMPS

Lamp	Specification	Power (Watt)
Approach lamp.	W5W	5
Front position lamps.	W5W	5
Headlamp low beam.	H7	55
Headlamp high beam and daytime running lamp.	H15	55/15
Front direction indicator.	PY21W	21
Front fog lamps.	H8	35
Side direction indicator.	WY5W	5
Rear lamp and stoplamp.	P21/5W	21/5
High mounted stoplamp.	W16W	16
Rear direction indicator.	PY21W	21
Rear fog lamp.	P21W	21
Reversing lamp.	W16W	16
License plate lamp.	W5W	5
Luggage compartment lamp.	211 Festoon	10

Capacities and Specifications

BULB SPECIFICATION CHART - VEHICLES WITH: HALOGEN PROJECTOR HEADLAMPS

Lamp	Specification	Power (Watt)
Approach lamp.	W5W	5
Daytime running lamps and front position lamps.	LED.	12.5/1.5
Headlamp low beam.	H7	55
Headlamp high beam.	H1	55
Front direction indicator.	PY21W	21
Front fog lamps.	H8	35
Side direction indicator.	WY5W	5
Rear lamp and stoplamp.	P21/5W	21/5
High mounted stoplamp.	W16W	16
Rear direction indicator.	PY21W	21
Rear fog lamp.	P21W	21
Reversing lamp.	W16W	16
License plate lamp.	W5W	5
Luggage compartment lamp.	211 Festoon	10

Capacities and Specifications

BULBSPECIFICATION CHART - VEHICLES WITH: HIGH INTENSITY DISCHARGE HEADLAMPS

Lamp	Specification	Power (Watt)
Approach lamp.	W5W	5
Daytime running lamps and front position lamps.	LED.	12.5/1.5
Headlamp low beam and headlamp high beam.	D5S	25
Cornering lamps.	H1	55
Front direction indicator.	PY21W	21
Front fog lamps.	H8	35
Side direction indicator.	WY5W	5
Rear lamp and stoplamp.	P21/5W	21/5
High mounted stoplamp.	W16W	16
Rear direction indicator.	PY21W	21
Rear fog lamp.	P21W	21
Reversing lamp.	W16W	16
License plate lamp.	W5W	5
Luggage compartment lamp.	211 Festoon	10

Capacities and Specifications

FUEL CONSUMPTION FIGURES

Fuel Economy and CO₂ Emissions

The declared fuel/energy consumptions, CO₂-Emissions and electric range are determined according to the technical requirements and specifications of the European Regulations (EC) 715/2007 and (EU) 2017/1151 as last amended. Light Duty Vehicle type-approved using the World Harmonised Light Vehicle Test Procedure (WLTP) will have Fuel/Energy Consumption and CO₂-Emission information for New European Drive Cycle (NEDC) and WLTP. WLTP will fully replace the NEDC latest by the end of the year 2020. The applied standard test procedures enable comparison between different vehicle types and different manufacturers.

During NEDC phase-out, WLTP fuel consumption and CO₂ emissions are being correlated back to NEDC. There will be some variance to the previous fuel economy and emissions as some elements of the tests have altered, so the same car might have different fuel consumption and CO₂ emissions.

European Directive 1999/94/EC

In addition to the fuel efficiency of a car, driving behaviour as well as other non-technical factors play a role in determining a car's fuel consumption and CO₂ emissions. CO₂ is the main greenhouse gas responsible for global warming. A guide on fuel economy and CO₂ emissions which contains data for all new passenger car models is available at any point of sale free of charge.

FUEL CONSUMPTION FIGURES - 2.0L ECOBLUE

NEDC

Urban	Extra-Urban	Combined	CO ₂ Emissions
L/100 km (mpg)	L/100 km (mpg)	L/100 km (mpg)	g/km
9–5.6 (31–50)	7.8–4.4 (36–64)	7.7–4.9 (37–58)	127–200

WLTP

Low	Medium	High	Extra-High	Combined	CO ₂ Emissions
L/100 km (mpg)	L/100 km (mpg)	L/100 km (mpg)	L/100 km (mpg)	L/100 km (mpg)	g/km
11.6–6.7 (24–42)	10.9–5.5 (26–51)	10.4–5.3 (27–53)	14.5–5.3 (19–53)	11.5–5.5 (25–51)	145–300

Capacities and Specifications

FUEL CONSUMPTION FIGURES - 2.2L DURATORQ-TDCI DIESEL

Urban	Extra-Urban	Combined	CO ₂ Emissions
L/100 km (mpg)	L/100 km (mpg)	L/100 km (mpg)	g/km
8.9–6.6 (32–43)	7.2–5.7 (39–50)	7.8–6 (36–47)	159–206

Capacities and Specifications

FUEL CONSUMPTION FIGURES - PLUG-IN HYBRID ELECTRIC VEHICLE (PHEV)

Combined	CO ₂ Emissions
L/100 km (mpg)	g/km
3.1–2.7 (91–105)	60–70

Connected Vehicle

WHAT IS A CONNECTED VEHICLE

A connected vehicle has technology that allows your vehicle to connect to a mobile network and for you to access a range of features. When used in conjunction with the FordPass app, it could allow you to monitor and control your vehicle further, for example checking the tire pressures, the fuel level and the vehicle location. For additional information, refer to the local Ford website.

CONNECTED VEHICLE REQUIREMENTS

Connected service and related feature functionality requires a compatible vehicle network.

Some remote features require additional service activation. Log in to your Ford account for details. Some restrictions, third party terms and message or data rates may apply.

CONNECTED VEHICLE LIMITATIONS

Evolving technology, cellular networks, or regulations could affect functionality and availability, or continued provision of some features. These changes could even stop some features from functioning.

CONNECTING THE VEHICLE TO A MOBILE NETWORK

What Is the Modem



The modem allows access to a range of features built into your vehicle.

Enabling and Disabling the Modem - Vehicles With: 4.2 Inch Instrument Cluster Display Screen

1. Using the information display controls on the steering wheel, select **Settings**.
2. Select **FordPass Connect**.
3. Select **Connectivity**.
4. Switch connectivity features on or off.

Enabling and Disabling the Modem - Vehicles With: 4.2 Inch Information and Entertainment Display Screen

1. Select **Settings**.
2. Select **Connectivity features**.
3. Select **Data sharing**.
4. Switch connectivity features on or off.

Enabling and Disabling the Modem - Vehicles With: 8 Inch Information and Entertainment Display Screen

1. Press **Settings**.
2. Press **FordPass Connect**.
3. Press **Connectivity settings**.
4. Switch connectivity features on or off.

Connecting FordPass to the Modem

1. Make sure that the modem is enabled using the vehicle settings menu.
2. Open the FordPass app on your device and log in.
3. Add your vehicle or select your vehicle if already added.
4. Select the option for vehicle details.
5. Select the option to activate your vehicle.

Connected Vehicle

6. Make sure that the name on the screen matches the name shown in your FordPass account.
7. Confirm that FordPass account is connected to the modem.
2. Press **Wi-Fi**.
3. Switch **System Wi-Fi** on.
4. Press **View available networks**.
5. Select an available Wi-Fi network.

Note: Enter the network password to connect to a secure network.

CONNECTING THE VEHICLE TO A WI-FI NETWORK

1. Press **Settings**.

CONNECTED VEHICLE – TROUBLESHOOTING - VEHICLES WITH: MODEM

Symptom	Possible Cause and Resolution
I cannot confirm the connection of my FordPass account to the modem.	<ul style="list-style-type: none">– Modem is not enabled.<ul style="list-style-type: none">• Switch connectivity features on.– Weak network signal.<ul style="list-style-type: none">• Move your vehicle closer to a place where the network signal is not obstructed.

Connected Vehicle

CONNECTED VEHICLE – TROUBLESHOOTING - VEHICLES WITH: SYNC 3/SYNC 2.5

Symptom	Possible Cause and Resolution
I cannot connect to a Wi-Fi network.	<ul style="list-style-type: none"> – Password error. <ul style="list-style-type: none"> • Enter the correct network password. – Weak network signal. <ul style="list-style-type: none"> • Move your vehicle closer to the Wi-Fi hotspot or to a place where the network signal is not obstructed. – Multiple access points in range with the same SSID. <ul style="list-style-type: none"> • Use a unique name for your SSID. Do not use the default name unless it contains a unique identifier, for example as part of the MAC address.
The Wi-Fi connection disconnects after successful connection.	<ul style="list-style-type: none"> – Weak network signal. <ul style="list-style-type: none"> • Move your vehicle closer to the Wi-Fi hotspot or to a place where the network signal is not obstructed.
I am close to a Wi-Fi hotspot but the network signal strength is weak.	<ul style="list-style-type: none"> – Obstructed network signal. <ul style="list-style-type: none"> • If your vehicle has a heated windshield, position your vehicle so that the windshield is not facing the Wi-Fi hotspot. • If your vehicle has metallic tinting on the windows but not on the windshield, position your vehicle so that the windshield is facing the Wi-Fi hotspot or open the windows that are facing the hotspot. • If your vehicle has metallic tinting on the windows and the windshield, open the windows that are facing the hotspot. • If your vehicle is in a garage and you have the garage door closed, open the garage door.
I cannot see a network in the list of available networks that I expect to see.	<ul style="list-style-type: none"> – Hidden network. <ul style="list-style-type: none"> • Make the network visible and try again.

Connected Vehicle

Symptom	Possible Cause and Resolution
I cannot see the Wi-Fi hotspot name when I search for Wi-Fi networks on my cell phone or other device.	<ul style="list-style-type: none">– System limitation.<ul style="list-style-type: none">• Make sure Wi-Fi hotspot visibility is on.• The system does not provide a Wi-Fi hotspot at this time.
Software downloads take too long.	<ul style="list-style-type: none">– Weak network signal.<ul style="list-style-type: none">• Move your vehicle closer to the Wi-Fi hotspot or to a place where the network signal is not obstructed.– Wi-Fi hotspot in high demand or has a slow Internet connection.<ul style="list-style-type: none">• Use a more reliable Wi-Fi hotspot.
The system seems to connect to a Wi-Fi network and the signal strength is excellent but the software does not update.	<ul style="list-style-type: none">– No software update available.– Wi-Fi network requires a subscription or acceptance of terms and conditions.<ul style="list-style-type: none">• Test the connection using another device. If the network requires a subscription or acceptance of terms and conditions, contact the network service provider.

Vehicle Wi-Fi Hotspot

CREATING A VEHICLE WI-FI HOTSPOT

You can create a Wi-Fi hotspot in your vehicle and allow devices to connect to it for access to the Internet.

1. Select **Settings**.
2. Select **FordPass Connect**.
3. Select **Vehicle Hotspot**.

Note: The vehicle hotspot default setting is on.

4. Select **Settings**.
5. Select **Edit**.
6. Select **Wi-Fi visibility**.

Note: The Wi-Fi Visibility default setting is on.

Finding the Wi-Fi Hotspot Name and Password

1. Select **Settings**.
2. Select **FordPass Connect**.
3. Select **Vehicle Hotspot**.
4. Select **Settings**.

Note: The SSID is the hotspot name.

5. Select **View password**.

Connecting a Device to the Wi-Fi Hotspot

1. On your device, turn on Wi-Fi and select the hotspot from the list of available Wi-Fi networks.
2. When prompted, enter the password.

Purchasing a Data Plan

1. Connect a device to the hotspot.

Note: The vehicle network carrier's portal opens on your device.

2. If the portal does not open on your device, open a website and it redirects to the vehicle network carrier's portal.

Note: Secure websites do not redirect.

Note: If you have an active plan, the system does not redirect to the vehicle network carrier's portal when you connect a device. Visit the vehicle network carrier's website to purchase more data.

Note: If data usage information is available in the vehicle hotspot menu, it is approximate.

Note: If you carry out a master reset, the system does not remove your vehicle from your vehicle network carrier's account. To remove your vehicle from the account, contact your vehicle network carrier.

Note: The vehicle network carrier provides Vehicle Hotspot services, subject to your vehicle network carrier agreement, coverage and availability.


CHANGING THE VEHICLE WI-FI HOTSPOT NAME OR PASSWORD

1. Select **Settings**.
2. Select **FordPass Connect**.
3. Select **Vehicle Hotspot**.
4. Select **Settings**.
5. Select **Edit**.
6. Select **Change SSID Name**.
7. Enter your required SSID.
8. Select **Done**.
9. Select **Change Password**.
10. Enter your required password.
11. Select **Done**.

Audio System



AUDIO UNIT - VAN, VEHICLES WITHOUT: SYNC

Switching the Audio Unit On and Off

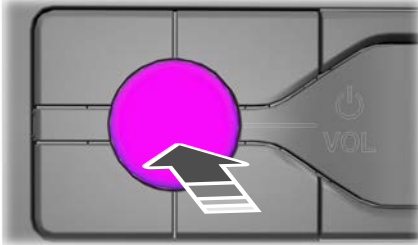

E260686

Adjusting the Volume

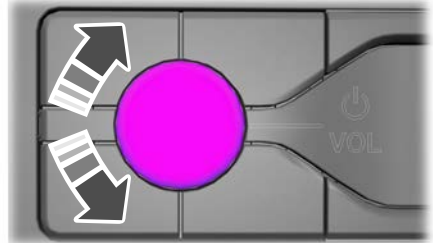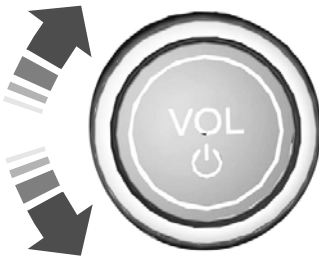

E260697

Selecting the Radio




Press the button to select radio mode.

Press the button again to display the available radio sources. Repeatedly press the button to scroll through the available radio sources.

Changing Radio Stations

Manual Tuning

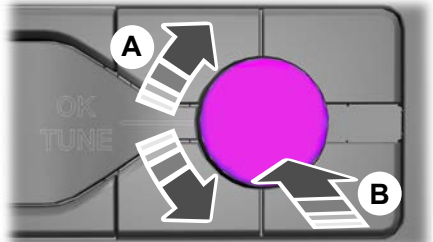

E260687

- A Tune by station list or tune by frequency.
- B Station list tuning.

Audio System



E248947

Scrolling Through the Menu Options



E248947

Note: You can change radio stations using the seek buttons.


Note: You can recall radio stations using the numeric preset buttons.

Selecting Media



Press the button to select media mode.

Press the button again to display the available media sources. Repeatedly press the button to scroll through the available media sources.

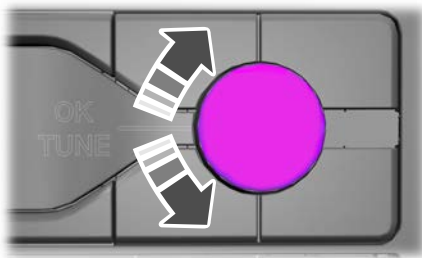


E260782

Audio System

Selecting a Menu Option



E248946

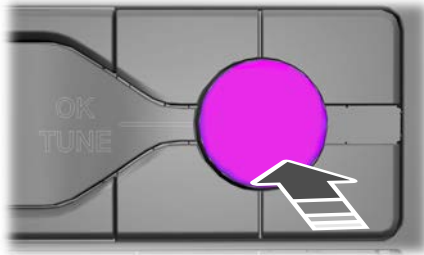

E260781

Returning to the Previous Screen



Seek Up and Next Track Button



Seek Down and Previous Track Button



Pausing or Playing Media



In media mode, press the button to pause playback. Press the button again to resume playback.

In radio mode, press the button to mute the radio. Press the button again to unmute.

Switching the Screen On and Off



System Settings



Sound Settings



Press the button to adjust the sound settings. You can optimize the sound for different seating positions.

You can also activate and set the sensitivity of the speed compensated volume.

Using a Cell Phone



You can make a call from a recent call list, contact list or dial a number.


AUDIO UNIT - VAN, VEHICLES WITH: SYNC 2.5

Switching the Audio Unit On and Off




Audio System

Adjusting the Volume

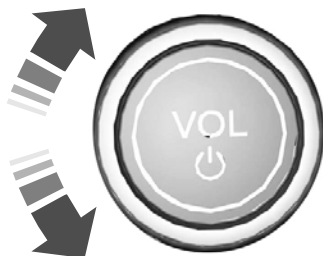

Changing Radio Stations

Manual Tuning

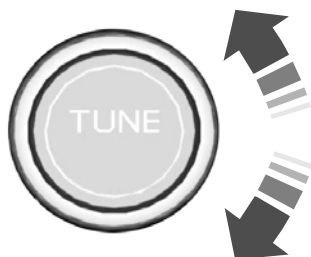

Note: You can change radio stations using the seek buttons.

Note: You can recall radio stations using the preset buttons on the touchscreen.

Seek Up and Next Track Button



Select to skip to the next track.
Press and hold the button to fast forward through the track.

Seek Down and Previous Track Button



Select to return to the beginning of a track.

Repeatedly press the button to return to previous tracks.

Press and hold the button to fast rewind.

Pausing or Playing Media



Select to play a track. Press the button again to pause the track.

In radio mode, press the button to mute the radio. Press the button again to unmute.

Switching the Screen On and Off



Sound Settings



Press the button to adjust the sound settings. You can optimize the sound for different seating positions.

You can also activate and set the sensitivity of the speed compensated volume.


Audio System

AUDIO UNIT - VEHICLES WITH: SYNC 3


Switching the Audio Unit On and Off



Adjusting the Volume

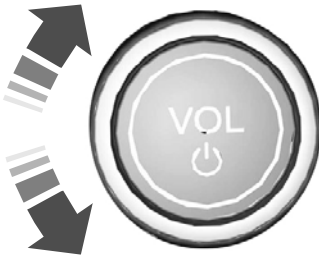

Changing Radio Stations Manual Tuning

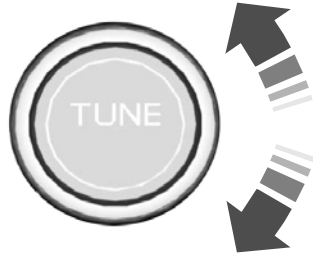

Note: You can change radio stations using the seek buttons.

Note: You can recall radio stations using the preset buttons on the touchscreen.

Seek Up and Next Track Button



Select to skip to the next track.

Press and hold the button to fast forward through the track.

Seek Down and Previous Track Button



Select to return to the beginning of a track.

Repeatedly press the button to return to previous tracks.

Press and hold the button to fast rewind.

Pausing or Playing Media



Select to play a track. Press the button again to pause the track.

Audio System

In radio mode, press the button to mute the radio. Press the button again to unmute.

Switching the Screen On and Off



Sound Settings



Press the button to adjust the sound settings. You can optimize the sound for different seating positions.

You can also activate and set the sensitivity of the speed compensated volume.

AM/FM RADIO - VAN, VEHICLES WITHOUT: SYNC

Selecting a Radio Source



Press the button to display the available radio sources.

Repeatedly press the button to scroll to the desired radio source.

Press the **OK** button.

Station Presets

To store a radio station, press and hold one of the numeric preset buttons.

Note: Six presets can be stored for each radio source.

Manually Changing Radio Stations



E248947

Rotate the control to change the frequency.

Automatically Changing Radio Stations



Press to seek the next station up the frequency band.



Press and hold to quickly seek up the frequency band.



Press to seek the next station down the frequency band.

Press and hold to quickly seek down the frequency band.

Selecting a Station from the List

Press the **OK** button to view available stations.

AM/FM RADIO - VAN, VEHICLES WITH: SYNC 2.5

Using the Radio




Select the audio option on the feature bar.

Audio System

Selecting a Radio Station From a List

1. Select **Sources**.
2. Select **AM** or **FM**.
3. Select **Stations**.
4. Select a radio station from the list.

Manually Changing Radio Stations

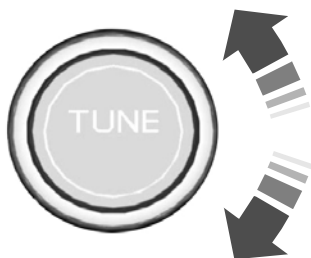

Rotate the control to change the frequency.

Note: In FM mode, rotating the control changes the station.

Automatically Changing Radio Stations



Press to seek the next station up the frequency band.

Press and hold to quickly seek up the frequency band.



Press to seek the next station down the frequency band.

Press and hold to quickly seek down the frequency band.

Storing a Radio Station

Press and hold one of the preset buttons on the touchscreen.

Note: The radio briefly mutes to indicate the station has been stored.

DIGITAL RADIO - VAN, VEHICLES WITHOUT: SYNC

Selecting a Radio Source



Press the button to display the available radio sources.

Repeatedly press the button to scroll to the desired radio source.

Press the **OK** button.

Station Presets

To store a station, press and hold one of the numeric preset buttons.

Note: Six presets can be stored for each radio source.

Manually Changing Stations



E248947

Rotate the control to change the station.

Automatically Changing Radio Stations



Press to seek the next station up the frequency band.

Audio System

Press and hold to quickly seek up the frequency band.



Press to seek the next station down the frequency band.

Press and hold to quickly seek down the frequency band.

Selecting a Station from the List

Press the **OK** button to view available ensembles. Select the desired ensemble and station from the list.

DIGITAL RADIO - VAN, VEHICLES WITH: SYNC 2.5

Using the Radio




Select the audio option on the feature bar.

Selecting a Radio Station From a List

1. Select **Sources**.
2. Select **DAB**.
3. Select **Stations**.
4. Select a radio station from the list.

Manually Changing Radio Stations

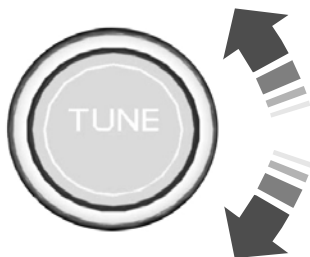

Rotate the control to change the frequency.

Automatically Changing Radio Stations



Press to seek the next station up the frequency band.

Press and hold to quickly seek up the frequency band.



Press to seek the next station down the frequency band.

Press and hold to quickly seek down the frequency band.

Storing a Radio Station

Press and hold one of the preset buttons on the touchscreen.

Note: The radio briefly mutes to indicate the station has been stored.

Audio System

AUDIO UNIT CLOCK AND DATE DISPLAYS - VAN, VEHICLES WITHOUT: SYNC

Adjusting the Clock



Press the button.

Select the clock and follow the instructions on the screen.

AUDIO UNIT CLOCK AND DATE DISPLAYS - VAN, VEHICLES WITH: SYNC 2.5



Select the settings option on the feature bar.

1. Select **Clock**.
2. Adjust the clock.

CONNECTING A BLUETOOTH® DEVICE - VAN, VEHICLES WITHOUT: SYNC

Pairing a Device



Press the button.

Select Bluetooth and follow the instructions on the screen.

Note: When pairing a new device, you can choose to download contacts, set this as the primary device and enable Emergency Assistance.

CONNECTING A BLUETOOTH® DEVICE - VAN, VEHICLES WITH: SYNC 2.5

Go to the settings menu on your device and switch Bluetooth on.



Select the settings options on the feature bar.

1. Select **Bluetooth**.
2. Switch Bluetooth on.
3. Select **Add a Bluetooth device**.

Note: A prompt alerts you to search for your vehicle on your device.

4. Select your vehicle on your device.

Note: A number appears on your device and on the touchscreen.

5. Confirm that the number on your device matches the number on the touchscreen.

Note: The touchscreen indicates that you have successfully paired your device.

STREAMING BLUETOOTH AUDIO - VAN, VEHICLES WITHOUT: SYNC

Selecting a Bluetooth Source



Press the button to display the menu.

Repeatedly press the button to scroll to the Bluetooth device.

Press the **OK** button.



Press the button to play the track. Press the button again to pause the track.



Press the button to skip to the next track.

Audio System

Press and hold the button to fast forward through the track.



Press the button once to return to the beginning of the track. Repeatedly press the button to return to previous tracks.

Press and hold the button to fast rewind.

Note: *Not all functions are supported by all phones.*

STREAMING BLUETOOTH AUDIO - VAN, VEHICLES WITH: SYNC 2.5

Check the compatibility of your device on the local Ford website.

Pair your device. See **Connecting a Bluetooth® Device** (page 385).



Select the audio option on the feature bar.

Select **Sources**.



Select the bluetooth option.



Press the button to play the track. Press the button again to pause the track.



Press the button to skip to the next track.

Press and hold the button to fast forward through the track.



Press the button once to return to the beginning of the track. Repeatedly press the button to return to previous tracks.

Press and hold the button to fast rewind.

PLAYING MEDIA FROM A USB DEVICE - VAN, VEHICLES WITHOUT: SYNC

Supported Audio File Formats

You can play audio file formats including MP3, WMA, WAV, M4A, M4B, AAC, and FLAC.

Note: *The NTFS file system is not supported.*

Selecting the USB Device



Press the button to display the menu.

Repeatedly press the button to scroll to your USB device.

Press the **OK** button.

Playing from the USB Device



Press the button to play a track. Press the button again to pause the track.



Press the button to skip to the next track.

Press and hold the button to fast forward through the track.



Press the button once to return to the beginning of a track. Repeatedly press the button to return to previous tracks.

Press and hold the button to fast rewind.

Sorting by Categories

You can also sort and play music by specific categories, for example artist or album.

Press the **OK** button to view the available categories.

Audio System

PLAYING MEDIA FROM A USB DEVICE - VAN, VEHICLES WITH: SYNC 2.5

Supported File Formats

The system supports the following file formats:

- MP3, M4A, M4B, WMA, WAV, AAC, FLAC, APE and AIFF audio file formats.
- ext2, exFAT, FAT, FAT32, NTFS and HFS+ file systems.

Selecting the USB Device

Connect your device to the USB port.



Select the audio option on the feature bar.

Select **Sources**.



Select the USB option.

Playing from the USB Device



Press the button to play a track. Press the button again to pause the track.



Press the button to skip to the next track.

Press and hold the button to fast forward through the track.



Press the button once to return to the beginning of a track. Repeatedly press the button to return to previous tracks.

Press and hold the button to fast rewind through the track.

Sorting by Categories

You can also sort and play music by specific categories, for example artist or album.

USB PORT

The USB ports are on the instrument panel and inside the storage compartment above the instrument cluster.

You can use the USB port to charge a device only when the engine is running.

APPS - VAN, VEHICLES WITH: SYNC 2.5

Note: We recommend that you check your data plan before using your apps through the system. Using them could result in additional charges.

Note: We recommend that you check the app provider's terms and conditions and privacy policy before using their app.

Note: Make sure that you have an active account for apps that you want to use through the system.

Note: Some apps will work with no setup. Others require you to configure some personal settings before you can use them.

Using Apple CarPlay

Switching Apple CarPlay On

1. Connect your device to a USB port.
2. Follow the instructions on the touchscreen.

Note: Certain features of the system are not available when you are using Apple CarPlay.

Audio System

Switching Apple CarPlay Off



Select the settings option on the feature bar.

1. Select **Apple CarPlay preferences**.
2. Disable Apple CarPlay.

Using Apps on an iOS Device

Note: For more information about available apps, refer to the local Ford website.

When you start an app through the system for the first time, you could be asked to grant certain permissions. You can review and change the permissions that you have granted at any time when your vehicle is not moving.



Select the apps option on the feature bar.

1. Switch Apple CarPlay off.
2. Connect your device to a USB port.
3. Start the apps on your device that you want to use through the system.

Note: If you close the apps on your device, you will not be able to use them through the system.

4. Select **Find mobile apps**.

Note: The system searches and connects to compatible apps that are running on your device.

5. Select the app that you want to use on the touchscreen.

Using Android Auto

Switching Android Auto On

1. Connect your device to a USB port.
2. Follow the instructions on the touchscreen.

Note: You might need to enable Android Auto from the settings menu.

Note: Certain features of the system are not available when you are using Android Auto.

Switching Android Auto Off



Select the settings option on the feature bar.

1. Select **Android Auto preferences**.
2. Disable Android Auto.

Using Apps on an Android Device

Note: For more information about available apps, refer to the local Ford website.

When you start an app through the system for the first time, you could be asked to grant certain permissions. You can review and change the permissions that you have granted at any time when your vehicle is not moving.



Select the apps option on the feature bar.

1. Switch Android Auto off.
2. Pair your device.
3. Start the apps on your device that you want to use through the system.

Note: If you close the apps on your device, you will not be able to use them through the system.

4. Select **Find mobile apps**.

Note: The system searches and connects to compatible apps that are running on your device.

5. Select the app that you want to use on the touchscreen.

Audio System

Apps Troubleshooting

Symptom	Possible Cause and Resolution
The system cannot find any apps.	<ul style="list-style-type: none">– Incompatible device.<ul style="list-style-type: none">• You will need an Android device with OS 2.3 or higher or an iOS 3GS device with iOS 5.0 or higher. Pair and connect your Android device to find AppLink compatible apps. Connect your iOS device to a USB port to find AppLink compatible apps.
I have a compatible device and it is correctly connected but the system still cannot find any apps.	<ul style="list-style-type: none">– AppLink compatible apps not installed on your device.<ul style="list-style-type: none">• Download and install the latest version of the app.– AppLink compatible apps not running on your device.<ul style="list-style-type: none">• Start the apps to allow the system to find them and make sure you sign in to any apps if required.– Incorrect app settings.<ul style="list-style-type: none">• Check and adjust the app settings on your device and allow the system to access the app if required.
I have a compatible device, it is correctly connected and my apps are running but the system still cannot find any apps.	<ul style="list-style-type: none">– Apps failed to fully close.<ul style="list-style-type: none">• Restart the apps and try again.
I have an Android device that is correctly connected, I have restarted my apps and they are running but the system still cannot find them.	<ul style="list-style-type: none">– An issue on some older versions of the Android operating system could result in apps not being found.<ul style="list-style-type: none">• Switch Bluetooth off and on again to force the system to reconnect to your device.

Audio System

Symptom	Possible Cause and Resolution
I have an iOS device that is correctly connected, I have restarted my apps and they are running but the system still cannot find them.	<ul style="list-style-type: none">– Cable connection issue.<ul style="list-style-type: none">• Disconnect the cable from your device, wait for a moment and then connect it again to force the system to reconnect to your device.
I have an Android device running a media app which the system has found but I cannot hear the sound or the sound is very quiet.	<ul style="list-style-type: none">– Device volume is low.<ul style="list-style-type: none">• Turn the volume up on your device.
I have an Android device running a number of compatible apps but the system cannot find all of them.	<ul style="list-style-type: none">– Device limitation. Some Android devices have a limited number of Bluetooth ports that apps can use to connect. If you have more apps running on your device than the number of available Bluetooth ports, the system cannot find all of them.<ul style="list-style-type: none">• Close some of the apps to allow the system to find those that you want to use.

USING VOICE RECOGNITION

Phone Voice Service

This system allows you to use the voice recognition features of your phone and focus on your driving.



Press the voice control button on the steering wheel.

Note: This only works when connected via Bluetooth. See **Connecting a Bluetooth® Device** (page 385).

Note: When using voice recognition use the language set on the device.

Note: We recommend that you check your data plan before using your phone voice service through the system. Using them could result in additional charges.

Audio System

AUDIO SYSTEM – TROUBLESHOOTING - VAN, VEHICLES WITH: SYNC 2.5

Symptom	Possible Cause and Resolution
The system is not functioning.	<ul style="list-style-type: none">You can reset the system to restore functionality that has stopped working.The system reset is designed to restore functionality and does not delete any personal data that you have stored.
I want to delete personal data from the system.	<ul style="list-style-type: none">A master reset is required to restore the system back to factory settings.This deletes any personal data that you have stored.
The system is not up to date.	<ul style="list-style-type: none">The latest version has not been installed.You can download the latest version or set the system to automatically update.

Resetting the System

1. Simultaneously press and hold the seek up and the audio unit power buttons until the screen goes black.
2. Wait three minutes to allow the system to complete the reset.

Updating the System

Note: We may need to update operating system software on your vehicle, including security updates and bug fixes, to keep connected services current, like Vehicle Hotspot, without prior notice to you.

Updating the System Using a USB Drive

Downloading an Update

1. Go to the system update page on the local Ford website.
2. Download the update.

Note: The website notifies you if an update is available.

3. Insert a USB drive into your computer.

Note: The USB drive needs to be empty and meet the minimum requirements detailed on the website.

4. Follow the instructions provided to download the update to the USB drive.

Installing an Update

Note: You can use the system when an installation is in progress.

1. Disconnect all other USB devices from the USB ports.
2. Connect the USB drive with the update to a USB port.

Note: Installation starts automatically within 10 minutes.

Updating the System Using a Wi-Fi Network Connection

Connecting to a Wi-Fi Network



Select the settings option on the feature bar.

Audio System

1. Select **Wi-Fi**.
2. Select **View available networks**.
3. Select an available network.

Note: Enter the network password to connect to a secure network.

Switching Automatic System Updates On



Select the settings option on the feature bar.

1. Select **Automatic updates**.
2. Switch automatic system updates on.

The system is now set to check for and receive system updates when it is connected to a Wi-Fi network.

Note: You can use the system when a download is in progress.

Note: If the system is disconnected from the Wi-Fi network when a download is in progress, the download continues the next time the system is connected to a Wi-Fi network.

Master Reset



Select the settings option on the feature bar.

1. Select **General**.
2. Select **Master reset**.
3. Select **Continue**.

Note: If you carry out a master reset, the system does not remove your vehicle from your vehicle network carrier's account. To remove your vehicle from the account, contact your vehicle network carrier.

Note: If you carry out a master reset, the system removes any authorized users and personal data.

GENERAL INFORMATION



WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

About SYNC


The system allows you to interact with the entertainment, information and communication systems on your vehicle using voice commands and a touchscreen. The system provides easy interaction with audio, phone, navigation, mobile apps and settings.

Note: You can switch the system on and use it for up to an hour without switching the ignition on.

Note: You can use the system after you switch the ignition off for up to 10 minutes or until you open a door.

Note: For your safety, some features are speed-dependent. Their use is limited to when your vehicle speed is less than 5 km/h (3 mph).

Using the Touchscreen

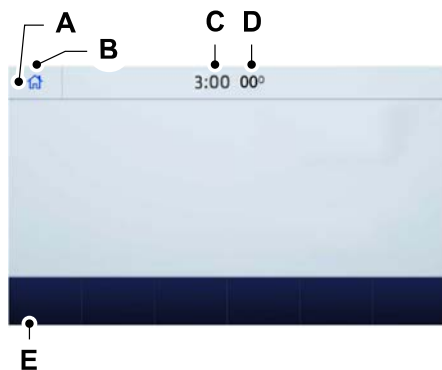

- A Status bar.
- B Home screen.
- C Clock. See **Settings** (page 410).
- D Outside air temperature.
- E Feature bar.

Status Bar

-  Cell phone microphone muted.
-  Audio system muted.
-  Software update installed.
-  Wi-Fi connected.
-  Cell phone roaming.
-  Text message received.



Emergency Assistance off.



Cell phone network signal strength.



Vehicle data sharing on.



Vehicle location sharing on.



Vehicle data and vehicle location sharing on.



Traffic data source: Live traffic.



Traffic data source: Traffic broadcast.



Wireless charger active.

Feature Bar



Select to use the radio, a USB, a media player or a Bluetooth device. See **Entertainment** (page 401).



Select to adjust climate settings.



Select to make calls and access the phonebook on your cell phone. See **Phone** (page 403).



Select to use the navigation system. See **Navigation** (page 405).



Select to search for and use compatible apps on your iOS or Android device. See **Apps** (page 409).



Select to adjust system settings. See **Settings** (page 410).

Cleaning the Touchscreen

See **Cleaning the Interior** (page 314).

Updating the System

Updating the System Using a USB Drive

Downloading an Update

1. Go to the SYNC update page on the local Ford website.
2. Download the update.

Note: The website notifies you if an update is available.

3. Insert a USB drive into your computer.

Note: The USB drive needs to be empty and meet the minimum requirements detailed on the website.

4. Follow the instructions provided to download the update to the USB drive.

Installing an Update

Note: You can use the system when installation is in progress.

1. Disconnect all other USB devices from the USB ports.
2. Connect the USB drive with the update to a USB port.

Note: Installation starts automatically within 10 minutes.

Updating the System Using a Wi-Fi Network Connection

Switching Automatic System Updates On

1. Select **Settings**.
2. Select **Automatic updates**.
3. Switch **Automatic system updates** on.

The system is now set to check for and receive system updates when it is connected to a Wi-Fi network.

Note: You can use the system when download is in progress.

Note: If the system is disconnected from the Wi-Fi network when download is in progress, the download continues the next time the system is connected to a Wi-Fi network.

Connecting to a Wi-Fi Network

See **Connecting the Vehicle to a Wi-Fi Network** (page 373).

Additional Information and Assistance

For additional information and assistance, we recommend that you contact an authorized dealer or refer to the local Ford website.

USING VOICE RECOGNITION

The system allows you to interact with the entertainment, information and communication systems on your vehicle using voice commands. This allows you to keep your hands on the steering wheel and focus on what is in front of you.



Press the voice control button on the steering wheel and wait for the voice prompt.

Note: Press the voice control button again to interrupt a voice prompt and begin speaking.

Note: Turn the volume control when a voice prompt plays to adjust the volume.

Note: Press and hold the voice control button on the steering wheel to use Siri on your iOS device.

The following voice commands are designed to help you from any screen:

- **List of commands**
- **Help**

The following tables list some of the more frequently used voice commands. For a complete list of voice commands, refer to the local Ford website.

General

Voice Command	Description
___ list of commands	Get a list of voice commands for a specific feature. ¹
Cancel	Cancel an active voice session.
___ help	Get a list of voice commands for a specific feature. ¹
Back	Return to the previous screen.
Main menu	Go to the main menu.

SYNC™ 3

Voice Command	Description
Next page	Go to the next page.
Previous page	Go to the previous page.

¹ Add the name of the feature to the command.

Entertainment

Audio Source

Voice Command	Description
Radio	Use the radio.
CD Player	Use the CD player.
Bluetooth audio	Use a Bluetooth device.
USB	Use a USB or media player.

Radio

Voice Command	Description
AM	Listen to AM radio.
___ AM	Tune to a specific AM frequency. ¹
DAB	Listen to DAB radio.
FM	Listen to FM radio.
___ FM	Tune to a specific FM frequency. ¹

¹ Add the radio frequency to two decimal places to the command.

USB and Media Player

Voice Command	Description
Play album ____	Play your music by category. ¹
Play artist ____	
Play audiobook ____	
Play genre ____	
Play playlist ____	
Play podcast ____	
Play song ____	
Browse all albums	Browse music on a USB device.
Browse all artists	
Browse all audiobooks	
Browse all genres	
Browse all playlists	
Browse all podcasts	
Browse all tracks	
Browse album ____	Browse your music by category on a USB device. ¹
Browse artist ____	
Browse audiobook ____	
Browse genre ____	
Browse playlist ____	
Browse podcast ____	

¹ Add an album name, artist name, audiobook name, genre name, playlist name, podcast name or track name to the command. Say the name exactly as it appears on your device.

Phone

Voice Command	Description
Pair phone	Pair a cell phone or Bluetooth enabled device.
Redial	Redial the last number that you dialed.
Dial ____	Dial a number. ¹
Call ____	Call a specific contact from your phonebook. ²
Call ____ ____	Call a specific contact from your phonebook at a specific location. ³
Listen to message	Listen to a text message.
Listen to message ____	Listen to a specific text message from a list of text messages.
Reply to message	Reply to the last text message.

¹ Add the number you want to dial to the command.

² Add a contact name from your phonebook to the command. Say the first and last name of your contact exactly as it appears on your device.

³ Add a contact name and location from your phonebook to the command. Say the first and last name of your contact exactly as it appears on your device.

Navigation (If Equipped)

Setting a Destination

Voice Command	Description
Find an address	Enter a destination address. When prompted, provide the house number, the street and city.
Find a POI	Search for a point of interest by name or by category.
Find nearest ____	Search for a nearby point of interest by category. ¹
Find a POI category	Search for a point of interest category. ¹
Destination home	Set your saved home address as your destination.
Destination work	Set your saved place of work as your destination.
Previous destinations	Display and select from a list of previous destinations.
Favourite destinations	Display and select from a list of favorite destinations.

¹ Add a point of interest category or the name of a major brand or chain to the command.

Route Guidance

Voice Command	Description
Cancel route	Cancel the current route.
Reroute	Select an alternate route.
Repeat last instruction	Repeat the last guidance prompt.
Show route	Display an overview of the route.
Show map	Display the map on the touchscreen.
Show north up	Display a two-dimensional map with north toward the top of the touchscreen.
Show heading up	Display a two-dimensional map with the direction you are traveling toward the top of the touchscreen.
Show 3D	Display a three-dimensional map with the direction you are traveling toward the front.

Apps

General

Voice Command	Description
Mobile apps	Start an app. The system prompts your for the app name.
List apps	Get a list of apps running on your device.
Find apps	Search and connect to apps running on your device.

Active App

Voice Command	Description
___ help	Get a list of voice commands for a specific app. ¹
Close ___	Close an app. ¹

¹ Add an app name to the command.

Voice Settings

Voice Command	Description
Voice settings	Go to the voice settings menu.
Interaction mode standard	Switch long voice prompts on.
Interaction mode advanced	Switch short voice prompts on.
Call confirmation on	Switch call confirmation on. The system prompts you to confirm before making a call.
Call confirmation off	Switch call confirmation off. The system does not prompt you to confirm before making a call.
Voice command lists on	Switch the display of voice commands on.
Voice command lists off	Switch the display of voice commands off.

Automatic Blower Motor Speed Reduction

If necessary, the system decreases the blower motor speed when you are using voice commands to reduce the amount of background noise in your vehicle. It returns to normal when you are finished.

Switching Automatic Blower Motor Speed Reduction Off

Simultaneously press the **A/C** and recirculated air buttons.

ENTERTAINMENT



Select the audio option on the feature bar.

A



B


- A Audio source. Select to choose a different audio source.
- B Presets. Swipe left to view more presets.

You can access these options using the touchscreen or voice commands.

Using the Radio

Setting an AM/FM Radio Station

1. Select **Sources**.
2. Select **AM** or **FM**.

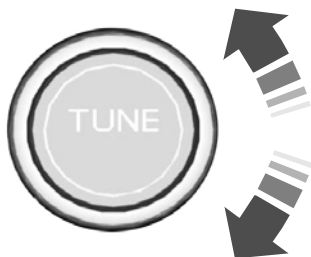

3. Rotate the control to change the frequency.


Selecting a FM Radio Station From a List

1. Select **Sources**.
2. Select **FM**.
3. Select **Stations**.
4. Select a radio station from the list.

Selecting a Digital Radio Station From a List

1. Select **Sources**.
2. Select **DAB**.
3. Select **Stations**.
4. Select an ensemble.
5. Select a radio station from the list.

Manually Changing Digital Radio Stations

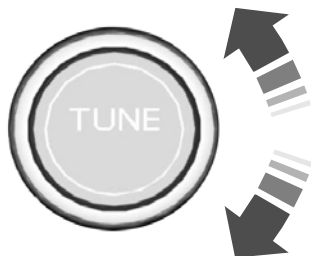

Rotate the control to change the station.

Automatically Changing Radio Stations



Press to seek the next station up the frequency band.

Press and hold to quickly seek up the frequency band.



Press to seek the next station down the frequency band.

Press and hold to quickly seek down the frequency band.

Storing a Radio Station

Press and hold one of the preset buttons.

Note: The radio briefly mutes to indicate the station has been stored.

Note: You can add additional preset pages using the settings option on the feature bar.

Switching Traffic Announcements On

Select **Traffic (TA)**.

Note: If you switch traffic announcements on, traffic announcements broadcast by radio stations interrupt the current audio source to help you plan your route.

Streaming Music From a Bluetooth Device

Check the compatibility of your device on the local Ford website.

Pair your device. See **Phone** (page 403).

Select **Sources**.



Select Bluetooth.

Searching for Tracks on a Bluetooth Device

Select **Browse**.

Select a track.

Note: Select the cover art to view information about the current track.

Playing Tracks on a Bluetooth Device in a Random Order



Select to play tracks in a random order.

Repeating Tracks on a Bluetooth Device



Select the repeat icon to repeat tracks.

Note: You can repeat one track or all tracks on an audio format Bluetooth device. You can repeat one track, all tracks or all tracks in one folder on a Bluetooth device.

Note: A small number one appears next to the repeat icon to indicate that a track is set to repeat. A small folder icon appears next to it to indicate that a folder is set to repeat.

Playing Music From a USB or Media Player

Connect your device to a USB port.

Select **Sources**.



Select USB.

Note: The system indexes your music before you can play it.

Searching for Tracks on a USB or Media Player

Select **Browse**.

Select a track.

Note: Select the cover art to view information about the current track.

Note: You can also browse by album, artist, audiobook, genre, playlist, podcast or track name.

Playing Tracks on a USB or Media Player in a Random Order



Select to play tracks in a random order.

Repeating Tracks on a USB or Media Player



Select the repeat icon to repeat tracks.

Note: You can repeat one track or all tracks on an audio format USB or media player. You can repeat one track, all tracks or all tracks in one folder on a USB or media player.

Note: A small number one appears next to the repeat icon to indicate that a track is set to repeat. A small folder icon appears next to it to indicate that a folder is set to repeat.

Supported Devices

The system supports most USB and media players, including iOS and Android devices.

Supported File Formats

The system supports the following file formats:

- MP3, MP4, WMA, WAV, AAC, AIFF, APE, DSD, and FLAC audio file formats.
- MP3, WMA, WAV, M4A, M4B, AAC, and FLAC file extensions.
- FAT, exFAT, and NTFS file systems.

Audio File Metadata

The system organizes files on your USB or media player by metadata tags. Metadata tags contain information about the file. If the metadata tags for the files on your USB or media player contain no information, the system classifies them as unknown. The system can index up to 50000 tracks on a USB device or media player, and up to 10 devices.

PHONE



WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Check the compatibility of your device on the local Ford website.

Pairing Your Cell Phone for the First Time

Go to the settings menu on your cell phone and switch Bluetooth on. Make sure your cell phone is discoverable. See your cell phone's user manual.



Select the phone option on the feature bar.

1. Select **Pair phone**.

Note: A prompt alerts you to search for your vehicle on your cell phone.

2. Select your vehicle on your cell phone.

Note: A number appears on your cell phone and on the touchscreen.

3. Confirm that the number on your cell phone matches the number on the touchscreen.

Note: The touchscreen indicates that you have successfully paired your cell phone.

4. Download the phonebook from your cell phone when you are prompted.

Note: If you pair more than one cell phone, use the phone settings to specify the primary phone. You can change this setting at any time.

Using Your Cell Phone

Recent Call list

Display and select an entry from a list of previous calls.

Contacts

Display a smart search form to look up your contacts. Use the List button to alphabetically sort your contacts.

Your phone

Change ring tones, alerts or pair another cell phone.

Change device

Display the list of paired or connected devices that you can select.

Do not disturb

Reject incoming calls and switch ring tones and alerts off.

Phone Keypad

Directly dial a number.

Text messages

Display the cell phone messages.

Siri

Connect to Siri on your iOS device.

Phone Voice Assistant

Connect to the phone voice service on your Android device.

Text Messaging

Setting Text Message Notification

iOS

1. Go to the settings menu on your cell phone.
2. Select Bluetooth.
3. Select the information icon to the right of your vehicle.
4. Switch text message notification on.

Android

1. Go to the settings menu on your cell phone.
2. Select Bluetooth.
3. Select the profiles option.
4. Select the phone profile.
5. Switch text message notification on.

Using Text Messaging

Menu Item	Description
Hear it	Hear the text message.
View	View the text message.
Call	Call the sender.
Reply	Reply to the text message with a standard text message.

Apple CarPlay

1. Connect your device to a USB port.
2. Follow the instructions on the touchscreen.

Note: Certain features of the system are not available when you are using Apple CarPlay.

Switching Apple CarPlay Off

1. Select **Settings**.
2. Select **Apple CarPlay preferences**.
3. Switch **Apple CarPlay** off.

Android Auto

1. Connect your device to a USB port.
2. Follow the instructions on the touchscreen.

Note: You might need to enable Android Auto from the settings menu.

Note: Certain features of the system are not available when you are using Android Auto.

Switching Android Auto Off


1. Select **Settings**.
2. Select **Android Auto**.
3. Switch **Android Auto** off.

NAVIGATION

Note: For more information, refer to the local Ford website.




Select the navigation option on the feature bar.

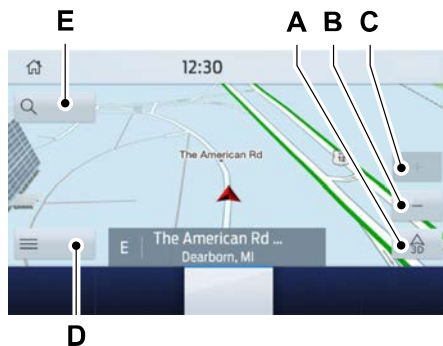

- A Map view menu.
- B Zoom out.
- C Zoom in.
- D Route guidance menu.
- E Destination entry menu.

Setting a Destination

Setting a Destination Using the Text Entry Screen

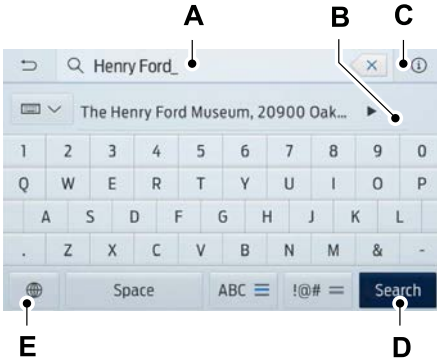

- A Text entry field.
- B Automatic suggestions based on the text you enter.
- C Information icon.
- D Search.
- E Keyboard settings.

Note: Select one of the suggestions to copy the detail to the text entry field.

Note: You can enter a destination in a number of formats, **city street number, city number street**, zip code or point of interest.


Note: You do not have to enter the destination country.

Note: To enter mutated vowels or accented characters, for example **ä** or **é**, press and hold the corresponding character on the keyboard.

Select **Search**.

Select **Start** to begin route guidance.

Setting a Destination Using the Map Screen

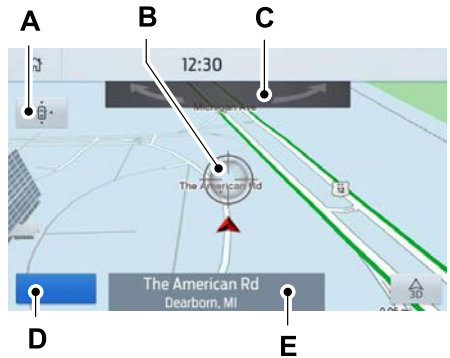

- A Re-center the map.
- B Selected location.
- C 3D map rotation. Swipe left or right.
- D Start route guidance.
- E Destination name.

Select the location on the map.

Select **Start** to begin route guidance.

Changing the Format of the Map

Display the map in one of the following formats:


- A two-dimensional map with the direction you are traveling toward the top of the screen.
- A two-dimensional map with north toward the top of the screen.
- A three-dimensional map with the direction you are traveling toward the front.

Zoom

Display more or less detail on the map.

Note: You can use pinch gestures to zoom in and out. Place two fingers on the screen and move them apart to zoom in. Place two fingers on the screen and bring them together to zoom out.

Route Guidance

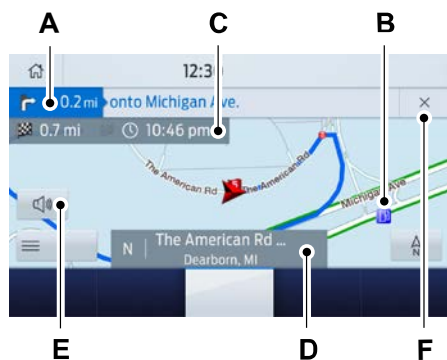

- C Estimated time of arrival, distance to destination or time to destination.
- D Current road.
- E Mute guidance prompts.
- F Cancel route guidance.

Note: To change guidance prompt volume, turn the volume control when a guidance prompt plays.

- A Turn indicator. Select to hear the last guidance prompt.
- B Point of interest.

Route Guidance Menu

Menu Item	Description
Screen view	Adjust your map preferences for when route guidance is active.
Full map	View a full screen map when route guidance is active.
Motorway exit info	View exit information for your current route.
Turn list	View the turn list for your current route. Select a road to avoid it.
Traffic list	View traffic nearby or on your current route. ¹
Navigation settings	Adjust navigation settings.
Where am I?	View information about your current location.

Menu Item	Description
Cancel route	Cancel route guidance.
Show route	View the entire current route on the map.
Re-route	View an alternative route compared to your current one.
Edit waypoints	Change the order or remove waypoints.
Optimise order	The system determines the order of waypoints for you.
Start	Go to the next screen and start the new route.
Search	Enter a destination address.
Home	Set your saved home address as your destination
Work	Set your saved place of work as your destination.
Favourites	Display and select from a list of favorite destinations.
Previous destinations	Display and select from a list of previous destinations.
POI	Display the point of interest categories.

¹ Reliant upon traffic message channel or live traffic.

Adjusting the Guidance Prompt Volume

Turn the volume control when a guidance prompt plays to adjust the volume.

Note: *If you have inadvertently adjusted the volume to zero, press the turn indicator button to play the last voice prompt and then adjust the volume to the desired level.*

Muting Guidance Prompts



Select the mute option on the screen to mute guidance prompts.

Note: *The system mutes the next and all future guidance prompts.*

Adding Waypoints

You can add a waypoint to a navigation route as a destination along your route. You can add up to five waypoints.

1. Select the search option on the map.
2. Set a destination.
3. Select the flag icon.
4. Select **Start**.

Canceling Route Guidance

Canceling Route Guidance From the Route Guidance Menu



Select the route guidance menu option on the active guidance screen.

Select **Cancel route**.


Canceling Route Guidance From the Main Map



Select the icon in the upper right-hand corner of the main map to cancel route guidance.

Live Traffic (If Equipped)

Live traffic provides near real-time traffic information to help you plan the fastest route to your destination. You must have an active subscription for Live Traffic.

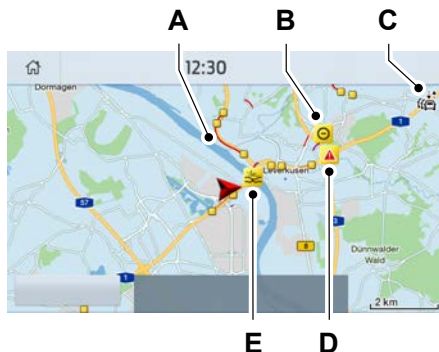

- A Traffic congestion.
- B Road closure.
- C Live traffic active.
- D Urgent warning.
- E Traffic incident.

Switching Live Traffic On

Note: Make sure that the modem is enabled. See **Connected Vehicle** (page 372).

1. Select **Settings**.
2. Select **FordPass Connect**.
3. Select **Connectivity settings**.
4. Switch **Vehicle connectivity** on.
5. Switch **Location** on.
6. Switch **Vehicle data & Remote ctrl** on.
7. Switch **Live Traffic** on.

Navigation Map Updates

Please check the local Ford website or contact your dealership for navigation map updates.

HERE is the digital map provider for the navigation application. If you find map data errors, you can report them directly to HERE by visiting www.here.com. HERE evaluates all reported map errors and responds with the result of their investigation by e-mail.

APPS

Note: For more information about available apps, supported devices and troubleshooting, refer to our local website.

When you start an app through the system for the first time, you could be asked to grant certain permissions. You can review and change the permissions that you have granted at any time when your vehicle is not moving. See **Settings** (page 410).

Note: We recommend that you check your data plan before using your apps through the system. Using them could result in additional charges.

Note: We recommend that you check the app provider's terms and conditions and privacy policy before using their app.

Note: Make sure that you have an active account for apps that you want to use through the system.

Note: Some apps will work with no setup. Others require you to configure some personal settings before you can use them.

Using Apps on an iOS Device



Select the apps option on the feature bar.

1. If your device is connected via USB, switch Apple CarPlay off. See **Phone** (page 403).
2. Connect your device to a USB port or pair and connect using Bluetooth.
3. If prompted to enable CarPlay, select **Disable**.
4. Start the apps on your device that you want to use through SYNC.

Note: If you close the apps on your device, you will not be able to use them through the system.

5. Select the app that you want to use on the touchscreen.

Note: Connect your device to a USB port if you want to use a navigation app. When using a navigation app, keep your device unlocked and the app open.

Using Apps on an Android Device



Select the apps option on the feature bar.

1. If your device is connected via USB, switch Android Auto off. See **Phone** (page 403).
2. Switch on **Enable Mobile apps via USB** in the Mobile Apps Settings tile.
3. Pair your device. See **Phone** (page 403).
4. Start the apps on your device that you want to use through SYNC.

Note: If you close the apps on your device, you will not be able to use them through the system.

5. Select **Find mobile apps**.

Note: The system searches and connects to compatible apps that are running on your device.

6. Select the app that you want to use on the touchscreen.

Note: Mobile Apps on your device use the USB port to establish a connection with SYNC. Some devices may lose the ability to play music over USB when Mobile Apps are enabled.

Using Mobile Navigation on an Android Device

1. Connect your device to a USB port.
2. Switch Android Auto off. See **Phone** (page 403).
3. Switch on **Enable Mobile apps via USB** in the Mobile Apps Settings tile.
4. Select the apps option on the feature bar.
5. Select the navigation app that you want to use on the touchscreen.

Note: When using a navigation app, keep your device unlocked and the app open.

Note: Mobile Apps on your device use the USB port to establish a connection with SYNC. Some devices may lose the ability to play music over USB when Mobile Apps are enabled.

SETTINGS



Select the settings option on the feature bar.

Select a tile to access the settings.



Select the option to display extra information.

Ambient Lighting

You can adjust the ambient lighting settings.

Android Auto

You can switch Android Auto on and off.

Apple CarPlay

You can switch Apple CarPlay on and off.

Audio

You can adjust the audio settings.

Automatic Updates

You can switch automatic updates on and off and adjust the settings.

Bluetooth

You can switch Bluetooth on and off and pair your cell phone.

Clock

You can adjust the clock settings.

Display

You can adjust display settings like brightness and auto dim.

Emergency Assistance

You can switch Emergency Assistance on and off.

FordPass

You can adjust the FordPass settings.

General

You can adjust settings like language, measurement units, or reset the system.

Mobile Apps

You can adjust permissions, enable, disable, and update mobile apps.

Navigation (If Equipped)

You can adjust navigation settings like map preferences and route guidance.

Phone

You can connect and disconnect your device, or manage the connected device settings.

Seats (If Equipped)

You can adjust the position and the massage function of the seats.

Sound

You can adjust the sound settings.

Valet Mode (If Equipped)

You can enable and disable the valet mode.

Vehicle (If Equipped)

You can adjust the camera settings.

Voice Control

You can adjust the voice control settings.

Wi-Fi

You can switch Wi-Fi on and off and adjust the settings.

SYNC™ 3 TROUBLESHOOTING

Voice Recognition

Symptom	Possible Cause and Resolution
The system does not understand what I am saying.	<ul style="list-style-type: none"> – You are using the wrong voice commands. <ul style="list-style-type: none"> • See Using Voice Recognition (page 395). • For a complete list of voice commands, refer to the local Ford website. – You are speaking too soon. <ul style="list-style-type: none"> • Wait for the voice prompt before you speak.
The system does not understand the name of a track or artist.	<ul style="list-style-type: none"> – Device limitation. Bluetooth does not support voice commands. <ul style="list-style-type: none"> • Connect your device to a USB port. • If you have an iOS device, press and hold the voice control button on the steering wheel to use Siri to play specific tracks. – You are using the wrong voice commands. <ul style="list-style-type: none"> • See Using Voice Recognition (page 395). • For a complete list of voice commands, refer to the local Ford website. – You are not saying the name exactly as it appears on your device. <ul style="list-style-type: none"> • Say the name of the track or artist exactly as it appears on your device. Spell out any abbreviations in the name. <p>The song or artist name may have some special characters that are not being recognized by the system.</p> – The name contains special characters, for example *, - or +. <ul style="list-style-type: none"> • Rename the files on your device or use the touch-screen to select and play the track.

Symptom	Possible Cause and Resolution
The system does not understand the name of a contact in the phonebook on my device and calls the wrong contact.	<ul style="list-style-type: none"> – You are not saying the name exactly as it appears on your device. <ul style="list-style-type: none"> • Say the first and last name of the contact exactly as it appears on your device. Spell out any abbreviations in the name. – The name contains special characters, for example *, - or +. <ul style="list-style-type: none"> • Rename the contact on your device or use the touchscreen to select and call the contact.
The system does not understand foreign names of contacts in the phonebook on my device.	<ul style="list-style-type: none"> – You are not saying the name exactly as it appears on your device. <ul style="list-style-type: none"> • Say the first and last name of the contact exactly as it appears on your device. The system applies phonetic pronunciation rules of the selected language to the names of contacts in the phonebook on your device. Select the name of the contact on the touchscreen and use the Hear it option to get an idea of how the system expects you to pronounce it.
The system voice prompts and the pronunciation of some words does not seem to be very accurate.	<ul style="list-style-type: none"> – Device limitation. <ul style="list-style-type: none"> • The system uses text-to-speech technology and uses a synthetically generated voice rather than pre-recorded human voice.

USB and Bluetooth Audio

Symptom	Possible Cause and Resolution
I cannot connect my device.	<ul style="list-style-type: none"> – Device malfunction. <ul style="list-style-type: none"> • Disconnect your device. Switch your device off, reset it and try again. – Cable connection issue. <ul style="list-style-type: none"> • Correctly connect the cable to your device and the vehicle USB port. – Incompatible cable. <ul style="list-style-type: none"> • Use the cable recommended by the manufacturer of your device.

SYNC™ 3

Symptom	Possible Cause and Resolution
	<ul style="list-style-type: none"> – Incorrect device settings. <ul style="list-style-type: none"> • Make sure that your device does not have an auto-install program or active security settings. • Check that your device is not set only to charge. – Device lock screen enabled. <ul style="list-style-type: none"> • Unlock your device before connecting it.
The system does not recognize my device.	<ul style="list-style-type: none"> – Device limitation. <ul style="list-style-type: none"> • Do not leave your device in your vehicle during very hot or very cold weather conditions.
The system does not understand the name of a track or artist.	<ul style="list-style-type: none"> – Device limitation. Bluetooth does not support voice commands. <ul style="list-style-type: none"> • Connect your device to a USB port. • If you have an iOS device, press and hold the voice control button on the steering wheel to use Siri to play specific tracks.
I cannot stream audio from my Bluetooth device.	<ul style="list-style-type: none"> – Incompatible device. <ul style="list-style-type: none"> • Check the compatibility of your device on the local Ford website. – Device not connected. <ul style="list-style-type: none"> • Pair your device. See Phone (page 403). – Media player not running. <ul style="list-style-type: none"> • Start the media player on your device.
The system does not recognize the music on my device.	<ul style="list-style-type: none"> – Missing or incorrect audio file metadata, for example artist, song title, album or genre. <ul style="list-style-type: none"> • Repair the files on your device. – Corrupt files. <ul style="list-style-type: none"> • Repair the files on your device. – Copyright protected files. <ul style="list-style-type: none"> • Use a device that contains files that are not copyright protected. – Unsupported file format. <ul style="list-style-type: none"> • Repair or convert the files to a supported format. See Entertainment (page 401).

SYNC™ 3

Symptom	Possible Cause and Resolution
	<ul style="list-style-type: none"> – Device indexing required. <ul style="list-style-type: none"> • Re-index your device. See Settings (page 410). – Device lock screen enabled. <ul style="list-style-type: none"> • Unlock your device before connecting it.
Sometimes I cannot hear a track playing on my device.	<ul style="list-style-type: none"> – Device malfunction. <ul style="list-style-type: none"> • Disconnect your device. Switch your device off, reset it and try again.
When I disconnect my iOS device the audio volume is set to maximum.	<ul style="list-style-type: none"> – Device limitation. <ul style="list-style-type: none"> • Turn the volume down on your device
The system does not play the tracks on my USB drive in the correct order.	<p>If the system does not play the tracks on your USB device in the correct order, the following information could help:</p> <ul style="list-style-type: none"> – If you are selecting USB as the audio source when the system is still indexing, SYNC plays tracks sorted alphabetically by file name in the root directory. – If you are selecting USB as the audio source after the system has finished indexing, SYNC plays all tracks sorted alphabetically by the title in the ID3 tag regardless of where they are located. SYNC uses the file name if the title in the ID3 Tag does not exist. – If you are selecting the option to play all tracks from the browsing menu, SYNC plays all tracks sorted alphabetically by the title in the ID3 tag regardless of where they are located. SYNC uses the file name if the title in the ID3 Tag does not exist. – If you are selecting a track when using the explore device option, SYNC plays tracks sorted alphabetically by file name in the folder you have selected. SYNC then plays all tracks in any subfolders in the folder you have selected.

Phone

Symptom	Possible Cause and Resolution
During a call, I can hear excessive background noise.	<ul style="list-style-type: none"> – Incorrect cell phone settings. <ul style="list-style-type: none"> • Check and adjust the audio settings on your cell phone. Refer to your cell phone's user manual.
During a call, I can hear the other person but they cannot hear me.	<ul style="list-style-type: none"> – Cell phone malfunction. <ul style="list-style-type: none"> • Switch your cell phone off, reset it and try again. – Cell phone microphone muted. <ul style="list-style-type: none"> • Unmute your cell phone microphone.
During a call, I cannot hear the other person and they cannot hear me.	<ul style="list-style-type: none"> – System restart required. <ul style="list-style-type: none"> • Restart the system. Switch the ignition off and open the door. Close the door and lock the vehicle. Wait until the touchscreen is off and any illuminated USB ports are not illuminated. Unlock the vehicle, switch the ignition on and try again.
I cannot download phonebook.	<ul style="list-style-type: none"> – Incompatible cell phone. <ul style="list-style-type: none"> • Check the compatibility of your cell phone on the local Ford website. – Incorrect cell phone settings. <ul style="list-style-type: none"> • Allow the system to retrieve contacts from your cell phone. Refer to your cell phone's user manual. – Incorrect system settings. <ul style="list-style-type: none"> • Switch automatic phonebook download on. See Settings (page 410). – Cell phone malfunction. <ul style="list-style-type: none"> • Switch your cell phone off, reset it and try again.
A message displays suggesting that my phonebook has downloaded but it is empty or it has missing contacts.	<ul style="list-style-type: none"> – Incorrect cell phone settings. <ul style="list-style-type: none"> • Allow the system to retrieve contacts from your cell phone. Refer to your cell phone's user manual. • Check the location of the missing contacts on your cell phone. If they are stored on the SIM card, move them to the cell phone memory. – Incorrect system settings. <ul style="list-style-type: none"> • Switch automatic phonebook download on. See Settings (page 410).

SYNC™ 3

Symptom	Possible Cause and Resolution
I cannot connect my cell phone.	<ul style="list-style-type: none"> – Incompatible cell phone. <ul style="list-style-type: none"> • Check the compatibility of your cell phone on the local Ford website. – Cell phone malfunction. <ul style="list-style-type: none"> • Switch your cell phone off, reset it and try again. • Install the latest cell phone firmware. • Delete your device from system and delete SYNC from your device and try again. • Switch automatic phonebook download off. See Settings (page 410).
Text messaging does not work.	<ul style="list-style-type: none"> – Incompatible cell phone. <ul style="list-style-type: none"> • Check the compatibility of your cell phone on the local Ford website. – Cell phone malfunction. <ul style="list-style-type: none"> • Switch your cell phone off, reset it and try again.
I cannot hear text messages.	<ul style="list-style-type: none"> – Incompatible cell phone. <ul style="list-style-type: none"> • Check the compatibility of your cell phone on the local Ford website.

Navigation (if Equipped)

Symptom	Possible Cause and Resolution
I cannot enter a street name when I am abroad.	<ul style="list-style-type: none"> – Incorrect entry method. <ul style="list-style-type: none"> • Enter the street name with the country.
The system does not recognize coordinates.	<ul style="list-style-type: none"> – You are using the wrong coordinates format. <ul style="list-style-type: none"> • Use the format ##. #####, ##. ##### (for N/S, E/W). Add a minus before coordinates if the direction is West and keep a positive value if the direction is East, for example 12.5412 means East and -12.5412 means West.

Apps

Symptom	Possible Cause and Resolution
The system cannot find any apps.	<ul style="list-style-type: none"> – Incompatible device. <ul style="list-style-type: none"> • You need an Android device with OS 4.3 or higher or an iOS device with iOS 8.0 or higher. Pair and connect your Android device to find AppLink compatible apps. Connect your Android or iOS device to a USB port or pair and connect using Bluetooth.
I have a compatible device and it is correctly connected but the system still cannot find any apps.	<ul style="list-style-type: none"> – AppLink compatible apps not installed on your device. <ul style="list-style-type: none"> • Download and install the latest version of the app. – AppLink compatible apps not running on your device. <ul style="list-style-type: none"> • Start the apps to allow the system to find them and make sure you sign in to any apps if required. – Incorrect app settings. <ul style="list-style-type: none"> • Check and adjust the app settings on your device and allow SYNC to access the app if required.
I have a compatible device, it is correctly connected and my apps are running but the system still cannot find any apps.	<ul style="list-style-type: none"> – Apps failed to fully close. <ul style="list-style-type: none"> • Restart the apps and try again. • If you have an Android device with apps that have an exit or quit option, use this and then restart the apps. Alternatively, use the force stop option in the settings menu on your device. • If you have an iOS device with iOS 7.0 or higher, tap the home button on your device twice and then swipe the app upward to close it.
I have an Android device that is correctly connected, I have restarted my apps and they are running but the system still cannot find them.	<ul style="list-style-type: none"> – An issue on some older versions of the Android operating system could result in apps not being found. <ul style="list-style-type: none"> • Switch Bluetooth off and on again to force the system to reconnect to your device.

SYNC™ 3

Symptom	Possible Cause and Resolution
I have an iOS device that is correctly connected, I have restarted my apps and they are running but the system still cannot find them.	<ul style="list-style-type: none">– Cable connection issue.<ul style="list-style-type: none">• Disconnect the cable from your device, wait for a moment and then connect it again to force the system to reconnect to your device.
I have an Android device running a media app which the system has found but I cannot hear the sound or the sound is very quiet.	<ul style="list-style-type: none">– Device volume is low.<ul style="list-style-type: none">• Turn the volume up on your device.
I have an Android device running a number of compatible apps but the system cannot find all of them.	<ul style="list-style-type: none">– Device limitation. Some Android devices have a limited number of Bluetooth ports that apps can use to connect. If you have more apps running on your device than the number of available Bluetooth ports, the system cannot find all of them.<ul style="list-style-type: none">• Close some of the apps to allow the system to find those that you want to use.

Wi-Fi Connectivity

Symptom	Possible Cause and Resolution
I cannot connect to a Wi-Fi network.	<ul style="list-style-type: none"> – Password error. <ul style="list-style-type: none"> • Enter the correct network password. – Weak network signal. <ul style="list-style-type: none"> • Move your vehicle closer to the Wi-Fi hotspot or to a place where the network signal is not obstructed. – Multiple access points in range with the same SSID. <ul style="list-style-type: none"> • Use a unique name for your SSID. Do not use the default name unless it contains a unique identifier, for example as part of the MAC address.
The Wi-Fi connection disconnects after successful connection.	<ul style="list-style-type: none"> – Weak network signal. <ul style="list-style-type: none"> • Move your vehicle closer to the Wi-Fi hotspot or to a place where the network signal is not obstructed.
I am close to a Wi-Fi hotspot but the network signal strength is weak.	<ul style="list-style-type: none"> – Obstructed network signal. <ul style="list-style-type: none"> • If your vehicle has a heated windshield, position your vehicle so that the windshield is not facing the Wi-Fi hotspot. • If your vehicle has metallic tinting on the windows but not on the windshield, position your vehicle so that the windshield is facing the Wi-Fi hotspot or open the windows that are facing the hotspot. • If your vehicle has metallic tinting on the windows and the windshield, open the windows that are facing the hotspot. • If your vehicle is in a garage and you have the garage door closed, open the garage door.

Symptom	Possible Cause and Resolution
I cannot see a network in the list of available networks that I expect to see.	<ul style="list-style-type: none"> – Hidden network. <ul style="list-style-type: none"> • Make the network visible and try again.
Software downloads take too long.	<ul style="list-style-type: none"> – Weak network signal <ul style="list-style-type: none"> • Move your vehicle closer to the Wi-Fi hotspot or to a place where the network signal is not obstructed. – Wi-Fi hotspot in high demand or has a slow Internet connection. <ul style="list-style-type: none"> • Use a more reliable Wi-Fi hotspot.
The system seems to connect to a Wi-Fi network and the signal strength is excellent but the software does not update.	<ul style="list-style-type: none"> – No software update available. – Wi-Fi network requires a subscription or acceptance of terms and conditions. <ul style="list-style-type: none"> • Test the connection using another device. If the network requires a subscription or acceptance of terms and conditions, contact the network service provider.

Resetting the System

1. Simultaneously press and hold the seek up and the audio unit power buttons until the screen goes black.
2. Wait three minutes to allow the system to complete the reset.
3. Press the audio unit power button to switch the system on.

Note: You can reset the system to restore functionality that has stopped working. The system reset is designed to restore functionality and not delete any data that you have stored.

Additional Information and Assistance

For additional information and assistance, we recommend that you contact an authorized dealer or refer to the local Ford website.

Geofencing

WHAT IS GEOFENCING

Geofencing is capable of automatically modifying the vehicle settings to help reducing emissions based on your vehicle current location, when you drive through a low emission zone.

HOW DOES GEOFENCING WORK

Using the GPS coordinates, geofencing detects that your vehicle approaches a low emission zone and starts optimising the high voltage battery charging. When your vehicle enters in the low emission zone, it uses the electric vehicle mode as much as possible.

The circle in the geofencing display starts to illuminate as your vehicle begins to approach a low emission zone.

GEOFENCING PRECAUTIONS



WARNING: Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

GEOFENCING LIMITATIONS

When your vehicle enters in a low emission zone, you cannot change the electric drive modes. See **Plug-In Hybrid Vehicle Operation** (page 131).

LOCATING THE GEOFENCING DISPLAY

The geofencing display is on the driver side cup holder.

USING GEOFENCING

Geofencing is a factory fitted system. When used in conjunction with the app, it gives you access to a range of features. For additional information about geofencing, visit www.CustomGeoPHEV.com.

GEOFENCING INDICATORS

EV now



Displays when your vehicle enters in a low emission zone. When in this mode, your vehicle uses the high voltage battery only.

Vehicle acceleration, top speed and climate control system performance could be reduced in this mode to maximize the distance your vehicle could travel.

GEOFENCING – TROUBLESHOOTING

Geofencing – Warning Lamps



The system has malfunctioned. Have your vehicle checked as soon as possible.

Appendices

ELECTROMAGNETIC COMPATIBILITY



WARNING: Do not place objects or mount equipment on or near the airbag cover, on the side of the front or rear seatbacks, or in areas that may come into contact with a deploying airbag. Failure to follow these instructions may increase the risk of personal injury in the event of a crash.



WARNING: Do not fasten antenna cables to vehicle wiring, fuel pipes and brake pipes.




WARNING: Keep antenna and power cables at least 10 cm (4 in) from any electronic modules and airbags.

Note: We test and certify your vehicle to meet electromagnetic compatibility legislation. It is your responsibility to make sure that any equipment an authorized dealer installs on your vehicle complies with applicable local legislation and other requirements. Installation of some aftermarket electronic devices could degrade the performance of vehicle functions, which use radio frequency signals such as broadcast radio receiver, tire pressure monitoring system, push button start, Bluetooth connectivity or satellite navigation.


Note: Any radio frequency transmitter equipment in your vehicle (such as cellular telephones and amateur radio transmitters) must keep to the parameters in the following illustrations and table. We do not provide any other special provisions or conditions for installations or use.

Car/SUV

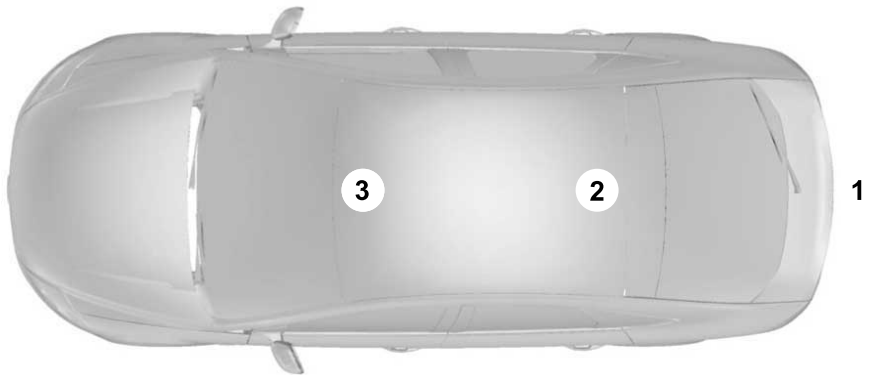


Appendices

Van

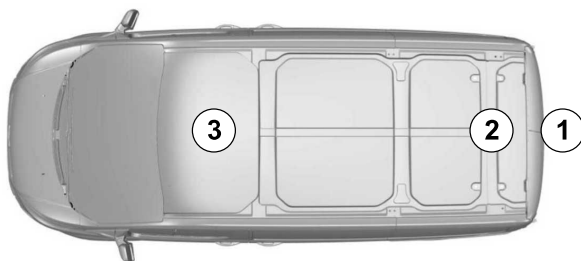

Truck

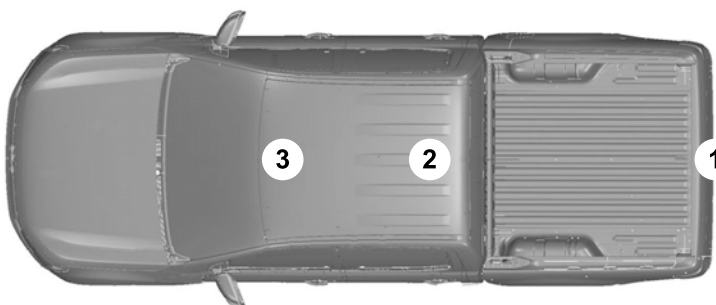

Appendices

Frequency Band MHz	Maximum output power Watt (Peak RMS)	Antenna Positions
1-30	50	1
50-54	50	2, 3
68-88	50	2, 3
142-176	50	2, 3
380-512	50	2, 3
806-870	10	2, 3

Appendices

END USER LICENSE AGREEMENT

VEHICLE SOFTWARE END USER LICENSE AGREEMENT (EULA)

- You ("You" or "Your" as applicable) have acquired a vehicle having several devices, including SYNC ® and various control modules, ("DEVICES") that include software licensed or owned by Ford Motor Company and its affiliates ("FORD MOTOR COMPANY"). Those software products of FORD MOTOR COMPANY origin, as well as associated media, printed materials, and "online" or electronic documentation ("SOFTWARE") are protected by international intellectual property laws and treaties. The SOFTWARE is licensed, not sold. All rights reserved.
- The SOFTWARE may interface with and/or communicate with, or may be later upgraded to interface with and/or communicate with additional software and/or systems provided by FORD MOTOR COMPANY.

IF YOU DO NOT AGREE TO THIS END USER LICENSE AGREEMENT ("EULA") DO NOT USE THE DEVICES OR COPY THE SOFTWARE. ANY USE OF THE SOFTWARE, INCLUDING BUT NOT LIMITED TO USE ON THE DEVICES, WILL CONSTITUTE YOUR AGREEMENT TO THIS EULA (OR RATIFICATION OF ANY PREVIOUS CONSENT).

GRANT OF SOFTWARE LICENSE: This EULA grants you the following license:

- You may use the SOFTWARE as installed on the DEVICES and as otherwise interfacing with systems and/or services provide by or through FORD MOTOR COMPANY or its third party software and service providers.

Description of Other Rights and Limitations

- **Speech Recognition:** If the SOFTWARE includes speech recognition component(s), you should understand that speech recognition is an inherently statistical process and that recognition errors are inherent in the process. Neither FORD MOTOR COMPANY nor its suppliers shall be liable for any damages arising out of errors in the speech recognition process. It is your responsibility to monitor any speech recognition functions included in the system.
- **Limitations on Reverse Engineering, Decompilation and Disassembly:** You may not reverse engineer, decompile, translate, disassemble or attempt to discover any source code or underlying ideas or algorithms of the SOFTWARE nor permit others to reverse engineer, decompile or disassemble the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation or to the extent as may be permitted by the licensing terms governing use of any open source components included with the SOFTWARE.
- **Limitations on Distributing, Copying, Modifying and Creating Derivative Works:** You may not distribute, copy, make modifications to or create derivative works based on the SOFTWARE, except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation or to the extent as may be permitted by the licensing terms governing use of any open source components included with the SOFTWARE.

Appendices

- **Single EULA:** The end user documentation for the DEVICES and related systems and services may contain multiple EULAs, such as multiple translations and/or multiple media versions (e.g., in the user documentation and in the software). Even if you receive multiple EULAs, you are licensed to use only one (1) copy of the SOFTWARE.
- **SOFTWARE Transfer:** You may permanently transfer your rights under this EULA only as part of a sale or transfer of the DEVICES, provided you retain no copies, you transfer all of the SOFTWARE (including all component parts, the media and printed materials, any upgrades, and, if applicable, the Certificate(s) of Authenticity), and the recipient agrees to the terms of this EULA. If the SOFTWARE is an upgrade, any transfer must include all prior versions of the SOFTWARE.
- **Termination:** Without prejudice to any other rights, FORD MOTOR COMPANY may terminate this EULA if you fail to comply with the terms and conditions of this EULA.
- **Internet-Based Services Components:** The SOFTWARE may contain components that enable and facilitate the use of certain Internet-based services. You acknowledge and agree that FORD MOTOR COMPANY, third party software and service suppliers, its affiliates and/or its designated agent may automatically check the version of the SOFTWARE and/or its components that you are utilizing and may provide upgrades or supplements to the SOFTWARE that may be automatically downloaded to your DEVICES.
- **Additional Software/Services:** The SOFTWARE may permit FORD MOTOR COMPANY, third party software and service suppliers, its affiliates and/or its designated agent to provide or make available to you SOFTWARE updates, supplements, add-on components, or Internet-based services components of the SOFTWARE after the date you obtain your initial copy of the SOFTWARE ("Supplemental Components"). SOFTWARE updates may cause you to incur additional charges from your wireless service provider. If FORD MOTOR COMPANY or third party software and services suppliers provide or make available to you Supplemental Components and no other EULA terms are provided along with the Supplemental Components, then the terms of this EULA shall apply. FORD MOTOR COMPANY, its affiliates and/or its designated agent reserve the right to discontinue without liability any Internet-based services provided to you or made available to you through the use of the SOFTWARE.

Appendices

- **Links to Third Party Sites:** The SOFTWARE may provide you with the ability to link to third party sites. The third party sites are not under the control of FORD MOTOR COMPANY, its affiliates and/or its designated agent. Neither FORD MOTOR COMPANY nor its affiliates nor its designated agent are responsible for (i) the contents of any third party sites, any links contained in third party sites, or any changes or updates to third party sites, or (ii) webcasting or any other form of transmission received from any third party sites. If the SOFTWARE provides links to third party sites, those links are provided to you only as a convenience, and the inclusion of any link does not imply an endorsement of the third party site by FORD MOTOR COMPANY, its affiliates and/or its designated agent.
- **Obligation to Drive Responsibly:** You recognize your obligation to drive responsibly and keep attention on the road. You will read and abide with the DEVICES operating instructions particularly as they pertain to safety and you agree to assume any risk associated with the use of the DEVICES.

UPGRADES AND RECOVERY MEDIA:

If the SOFTWARE is provided by FORD MOTOR COMPANY separate from the DEVICES on media such as a ROM chip, CD ROM disk(s) or via web download or other means, and is labeled "For Upgrade Purposes Only" or "For Recovery Purposes Only" you may install one (1) copy of such SOFTWARE onto the DEVICES as a replacement copy for the existing SOFTWARE, and use it in accordance with this EULA, including any additional EULA terms accompanying the upgrade SOFTWARE.

INTELLECTUAL PROPERTY RIGHTS:

All title and intellectual property rights in and to the SOFTWARE (including but not limited to any images, photographs, animations, video, audio, music, text and "applets" incorporated into the SOFTWARE), the accompanying printed materials, and any copies of the SOFTWARE, are owned by FORD MOTOR COMPANY, or its affiliates or suppliers. The SOFTWARE is licensed, not sold. You may not copy the printed materials accompanying the SOFTWARE. All title and intellectual property rights in and to the content which may be accessed through use of the SOFTWARE is the property of the respective content owner and may be protected by applicable copyright or other intellectual property laws and treaties. This EULA grants you no rights to use such content outside its intended use. All rights not specifically granted under this EULA are reserved by FORD MOTOR COMPANY, its affiliates, and third party software and service providers and suppliers. Use of any on-line services which may be accessed through the SOFTWARE may be governed by the respective terms of use relating to such services. If this SOFTWARE contains documentation that is provided only in electronic form, you may print one copy of such electronic documentation.

EXPORT RESTRICTIONS: You acknowledge that the SOFTWARE is subject to U.S. and European Union export jurisdiction. You agree to comply with all applicable international and national laws that apply to the SOFTWARE, including the U.S. Export Administration Regulations, as well as end-user, end-use and destination restrictions issued by U.S. and other governments.

Appendices

TRADEMARKS: This EULA does not grant you any rights in connection with any trademarks or service marks of FORD MOTOR COMPANY, its affiliates, and third party software and service providers.

PRODUCT SUPPORT: Please refer to FORD MOTOR COMPANY instructions provided in the documentation for the DEVICES product support, such as the vehicle owner guide.

Should you have any questions concerning this EULA, or if you desire to contact FORD MOTOR COMPANY for any other reason, please refer to the address provided in the documentation for the DEVICES.

No Liability for Certain Damages: EXCEPT AS PROHIBITED BY LAW, FORD MOTOR COMPANY, ANY THIRD PARTY SOFTWARE OR SERVICES SUPPLIERS, AND THEIR AFFILIATES SHALL HAVE NO LIABILITY FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE SOFTWARE. THIS LIMITATION SHALL APPLY EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE. THERE ARE NO WARRANTIES OTHER THAN THOSE THAT MAY BE EXPRESSLY PROVIDED FOR YOUR NEW VEHICLE.

SYNC® Automotive Important Safety Information Read and follow instructions:

- Before using your SYNC® system, read and follow all instructions and safety information provided in this end user manual ("Owner Guide".) Not following precautions found in the Owner Guide can lead to an accident or other serious injuries.

General Operation

- **Voice Command Control:** Certain functions within the SYNC® system may be accomplished using voice commands. Using voice commands while driving helps you to operate the system without removing your hands from the wheel or eyes from the road.
- **Prolonged Views of Screen:** Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention.
- **Volume Setting:** Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.
- **Navigation Features:** Any navigation features included in the system are intended to provide turn by turn instructions to get you to a desired destination. Please make certain all persons using this system carefully read and follow instructions and safety information fully.
- **Distraction Hazard:** Any navigation features may require manual (non-verbal) setup. Attempting to perform such set-up or insert data while driving can distract your attention and could cause an accident or other serious injury. Stop the vehicle in a safe and legal manner before attempting these operations.
- **Let Your Judgment Prevail:** Any navigation features are provided only as an aid. Make your driving decisions based on your observations of local conditions and existing traffic regulations. Any such feature is not a

Appendices

substitute for your personal judgment. Any route suggestions made by this system should never replace any local traffic regulations or your personal judgment or knowledge of safe driving practices.

- **Route Safety:** Do not follow the route suggestions if doing so would result in an unsafe or illegal maneuver, if you would be placed in an unsafe situation, or if you would be directed into an area that you consider unsafe. The driver is ultimately responsible for the safe operation of the vehicle and therefore, must evaluate whether it is safe to follow the suggested directions.
- **Potential Map Inaccuracy:** Maps used by this system may be inaccurate because of changes in roads, traffic controls or driving conditions. Always use good judgment and common sense when following the suggested routes.
- **Emergency Services:** Do not rely on any navigation features included in the system to route you to emergency services. Ask local authorities or an emergency services operator for these locations. Not all emergency services such as police, fire stations, hospitals and clinics are likely to be contained in the map database for such navigation features.

Your Responsibilities and Assumptions of Risk

- You agree to each of the following: (a) Any use of the SOFTWARE while driving an automobile or other vehicle in violation of applicable law or otherwise driving in an unsafe manner presents a significant risk of distracted driving and should not be attempted under any circumstances; (b) Use of the SOFTWARE at excessive volume poses a significant risk of hearing damage and should not be attempted under any circumstances; (c) The SOFTWARE may not be compatible with new or different versions of an operating system, third party software, or third party services, and the SOFTWARE may potentially cause a critical failure of an operating system, third party software, or third party service. (d) Any third party service accessed by or third party software used with the SOFTWARE (i) may charge an additional fee for access, (ii) may not work correctly, on an uninterrupted basis, or error free, (iii) may change streaming formats or discontinue operation, (iv) may contain adult, profane or offensive content; and (v) may contain inaccurate, false or misleading traffic, weather, financial or safety information or other content; and (e) Use of the SOFTWARE may cause you to incur additional charges from your wireless service provider (WSP) and any data or minute calculators that may be included in the software program are for reference only, are not warranted in any way and should not be relied upon in anyway.
- When using the SOFTWARE, you agree to be responsible for and assume the entire risk to the items set forth in Section (a) – (e) above.

Disclaimer of Warranty

YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE DEVICES AND SOFTWARE IS AT YOUR SOLE RISK AND THAT THE ENTIRE RISK AS TO SATISFACTORY QUALITY, PERFORMANCE, COMPATIBILITY, ACCURACY AND EFFORT IS WITH YOU. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE SOFTWARE AND ANY THIRD PARTY SOFTWARE OR THIRD-PARTY SERVICES ARE PROVIDED "AS IS" AND "AS AVAILABLE", WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND, AND FORD MOTOR COMPANY HEREBY DISCLAIMS ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE, THIRD PARTY SOFTWARE, AND THIRD-PARTY SERVICES, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OF FITNESS FOR AN PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. FORD MOTOR COMPANY DOES NOT WARRANT (a) AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THIRD PARTY SOFTWARE, OR THIRD-PARTY SERVICES, (b) THAT THE SOFTWARE, THIRD PARTY SOFTWARE, OR THIRD-PARTY SERVICES WILL MEET YOUR REQUIREMENTS, (c) THAT THE OPERATION OF THE SOFTWARE, THIRD PARTY SOFTWARE, OR THIRD-PARTY SERVICES WILL BE UNINTERRUPTED OR ERROR-FREE, (d) OR THAT DEFECTS IN THE SOFTWARE, THIRD PARTY SOFTWARE, OR THIRD-PARTY SERVICES WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY FORD MOTOR COMPANY OR ITS AUTHORIZED REPRESENTATIVE SHALL

CREATE A WARRANTY. SHOULD THE SOFTWARE, THIRD PARTY SOFTWARE, OR THIRD-PARTY SERVICES PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE DISCLAIMER OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER, SO THE ABOVE DISCLAIMER MAY NOT FULLY APPLY TO YOU. THE SOLE WARRANTY PROVIDED BY FORD MOTOR COMPANY SHALL BE FOUND IN THE WARRANTY INFORMATION INCLUDING WITH YOUR OWNER GUIDE. TO THE EXTENT THAT THERE IS ANY CONFLICT BETWEEN THE TERMS OF THIS SECTION AND THE WARRANTY BOOKLET, THE WARRANTY BOOKLET SHALL CONTROL.

Applicable Law, Venue, Jurisdiction

- The laws of the State of Michigan govern this EULA and Your use of the SOFTWARE. Your use of the SOFTWARE may also be subject to other local, state, national, or international laws. Any litigation arising out of or related to this EULA shall be brought and maintained exclusively in a court of the State of Michigan located in Wayne County or in the United States District Court for the Eastern District of Michigan. You hereby consent to submit to the personal jurisdiction of a court in the State of Michigan located in Wayne County and the United States District Court for the Eastern District of Michigan for any dispute arising out of or relating to this EULA.

Appendices

Binding Arbitration and Class Action Waiver

(a) Application. This Section applies to any dispute EXCEPT IT DOES NOT INCLUDE A DISPUTE RELATING TO COPYRIGHT INFRINGEMENT, OR TO THE ENFORCEMENT OR VALIDITY OF YOUR, FORD MOTOR COMPANY, OR ANY OF FORD MOTOR COMPANY'S LICENSORS' INTELLECTUAL PROPERTY RIGHTS. Dispute means any dispute, action, or other controversy between You and FORD MOTOR COMPANY, other than the exceptions listed above, concerning the SOFTWARE (including its price) or this EULA, whether in contract, warranty, tort, statute, regulation, ordinance, or any other legal or equitable basis.

(b) Notice of Dispute. In the event of a Dispute, You or FORD MOTOR COMPANY must give the other a "Notice of Dispute", which is a written statement of the name, address, and contact information of the party giving it, the facts giving rise to the dispute, and the relief requested. You and FORD MOTOR COMPANY will attempt to resolve any dispute through informal negotiation within 60 days from the date the Notice of Dispute is sent. After 60 days, You or FORD MOTOR COMPANY may commence arbitration.

(c) Small claims court. You may also litigate any dispute in small claims court in your county of residence or FORD MOTOR COMPANY'S principal place of business, if the dispute meets all requirements to be heard in the small claims court. You may litigate in small claims court whether or not You negotiated informally first.

(d) Binding arbitration. If You and FORD MOTOR COMPANY, do not resolve any dispute by informal negotiation or in small claims court, any other effort to resolve the dispute will be conducted exclusively by binding arbitration. You are giving up

the right to litigate (or participate in as a party or class member) all disputes in court before a judge or jury. Instead, all disputes will be resolved before a neutral arbitrator, whose decision will be final except for a limited right of appeal under the Federal Arbitration Act. Any court with jurisdiction over the parties may enforce the arbitrator's award.

(e) Class action waiver. Any proceedings to resolve or litigate any dispute in any forum will be conducted solely on an individual basis. Neither you nor FORD MOTOR COMPANY, will seek to have any dispute heard as a class action, as a private attorney general action, or in any other proceeding in which any party acts or proposes to act in a representative capacity. No arbitration or proceeding will be combined with another without the prior written consent of all parties to all affected arbitrations or proceedings.

(f) Arbitration procedure. Any arbitration will be conducted by the American Arbitration Association (the "AAA"), under its Commercial Arbitration Rules. If You are an individual and use the SOFTWARE for personal or vehicle use, or if the value of the dispute is \$75,000 or less whether or not You are an individual or how You use the SOFTWARE, the AAA Supplementary Procedures for Consumer-Related Disputes will also apply. To commence arbitration, submit a Commercial Arbitration Rules Demand for Arbitration form to the AAA. You may request a telephonic or in-person hearing by following the AAA rules. In a dispute involving \$10,000 or less, any hearing will be telephonic unless the arbitrator finds good cause to hold an in-person hearing instead. For more information, see adr.org or call 1-800-778-7879. You agree to commence arbitration only in your county of residence or FORD MOTOR COMPANY'S principal place of business. The arbitrator

Appendices

may award the same damages to You individually as a court could. The arbitrator may award declaratory or injunctive relief only to You individually, and only to the extent required to satisfy Your individual claim.

(g) Arbitration fees and incentives.

- I. Disputes involving \$75,000 or less. FORD MOTOR COMPANY will promptly reimburse your filing fees and pay the AAA's and arbitrator's fees and expenses. If you reject FORD MOTOR COMPANY'S last written settlement offer made before the arbitrator was appointed ("last written offer"), your dispute goes all the way to an arbitrator's decision (called an "award"), and the arbitrator awards you more than the last written offer, FORD MOTOR COMPANY will give you three incentives: (1) pay the greater of the award or \$1,000; (2) pay twice your reasonable attorney's fees, if any; and (3) reimburse any expenses (including expert witness fees and costs) that your attorney reasonably accrues for investigating, preparing, and pursuing your claim in arbitration. The arbitrator will determine the amounts.
- ii. Disputes involving more than \$75,000. The AAA rules will govern payment of filing fees and the AAA's and arbitrator's fees and expenses.
- iii. Disputes involving any amount. In any arbitration you commence, FORD MOTOR COMPANY will seek its AAA or arbitrator's fees and expenses, or Your filing fees it reimbursed, only if the arbitrator finds the arbitration frivolous or brought for an improper purpose. In any arbitration FORD MOTOR COMPANY commences, it will pay all

filing, AAA, and arbitrator's fees and expenses. It will not seek its attorney's fees or expenses from you in any arbitration. Fees and expenses are not counted in determining how much a dispute involves.

(h) Claims or disputes must be filed within one year. To the extent permitted by law, any claim or dispute under this EULA to which this Section applies must be filed within one year in small claims court (Section c) or in arbitration (Section d). The one-year period begins when the claim or dispute first could be filed. If such a claim or dispute is not filed within one year, it is permanently barred.

(i) Severability. If the class action waiver (Section e) is found to be illegal or unenforceable as to all or some parts of a dispute, then that portion of Section e will not apply to those parts. Instead, those parts will be severed and proceed in a court of law, with the remaining parts proceeding in arbitration. If any other provision of that portion Section e is found to be illegal or unenforceable, that provision will be severed with the remainder of Section e remaining in full force and effect.

Telenav Software End User License Agreement

Please read these terms and conditions carefully before you use the TeleNav Software. Your use of the TeleNav Software indicates that you accept these terms and conditions. If you do not accept these terms and conditions, do not break the seal of the package, launch, or otherwise use the TeleNav Software. TeleNav may revise this Agreement and the privacy policy at any time, with or without notice to you. You agree to visit <http://www.telenav.com> from time to time to review the then current version of this Agreement and of the privacy policy.

Appendices

1. Safe and Lawful Use

You acknowledge that devoting attention to the TeleNav Software may pose a risk of injury or death to you and others in situations that otherwise require your undivided attention, and you therefore agree to comply with the following when using the TeleNav Software:

(a) observe all traffic laws and otherwise drive safely;

(b) use your own personal judgment while driving. If you feel that a route suggested by the TeleNav Software instructs you to perform an unsafe or illegal maneuver, places you in an unsafe situation, or directs you into an area that you consider to be unsafe, do not follow such instructions;

(c) do not input destinations, or otherwise manipulate the TeleNav Software, unless your vehicle is stationary and parked;

(d) do not use the TeleNav Software for any illegal, unauthorized, unintended, unsafe, hazardous, or unlawful purposes, or in any manner inconsistent with this Agreement;

(e) arrange all GPS and wireless devices and cables necessary for use of the TeleNav Software in a secure manner in your vehicle so that they will not interfere with your driving and will not prevent the operation of any safety device (such as an airbag).

You agree to indemnify and hold TeleNav harmless against all claims resulting from any dangerous or otherwise inappropriate use of the TeleNav Software in any moving vehicle, including as a result of your failure to comply with the directions above.

2. Account Information

You agree: (a) when registering the TeleNav Software, to provide TeleNav with true, accurate, current, and complete information about yourself, and (b) to inform TeleNav promptly of any changes to such information, and to keep it true, accurate, current and complete.

3. Software License

- Subject to your compliance with the terms of this Agreement, TeleNav hereby grants to you a personal, non-exclusive, non-transferable license (except as expressly permitted below in connection with your permanent transfer of the TeleNav Software license), without the right to sublicense, to use the TeleNav Software (in object code form only) in order to access and use the TeleNav Software. This license shall terminate upon any termination or expiration of this Agreement. You agree that you will use the TeleNav Software only for your personal business or leisure purposes, and not to provide commercial navigation services to other parties.

3.1 License Limitations

- **(a)** reverse engineer, decompile, disassemble, translate, modify, alter or otherwise change the TeleNav Software or any part thereof; **(b)** attempt to derive the source code, audio library or structure of the TeleNav Software without the prior express written consent of TeleNav; **(c)** remove from the TeleNav Software, or alter, any of TeleNav's or its suppliers' trademarks, trade names, logos, patent or copyright notices, or other notices or markings; **(d)**

Appendices

distribute, sublicense or otherwise transfer the TeleNav Software to others, except as part of your permanent transfer of the TeleNav Software; or **(e)** use the TeleNav Software in any manner that

- i. infringes the intellectual property or proprietary rights, rights of publicity or privacy or other rights of any party,
- ii. violates any law, statute, ordinance or regulation, including but not limited to laws and regulations related to spamming, privacy, consumer and child protection, obscenity or defamation, or
- iii. is harmful, threatening, abusive, harassing, tortuous, defamatory, vulgar, obscene, libelous, or otherwise objectionable; and (f) lease, rent out, or otherwise permit unauthorized access by third parties to the TeleNav Software without advanced written permission of TeleNav.

4. Disclaimers

- To the fullest extent permissible pursuant to applicable law, in no event will TeleNav, its licensors and suppliers, or agents or employees of any of the foregoing, be liable for any decision made or action taken by you or anyone else in reliance on the information provided by the TeleNav Software. TeleNav also does not warrant the accuracy of the map or other data used for the TeleNav Software. Such data may not always reflect reality due to, among other things, road closures, construction, weather, new roads and other changing conditions. You are responsible for the entire risk arising out of your use of the TeleNav Software. For example but without limitation, you agree not to rely on the TeleNav Software for critical navigation in areas where the well-being or survival of you or others

is dependent on the accuracy of navigation, as the maps or functionality of the TeleNav Software are not intended to support such high risk applications, especially in more remote geographical areas.

- TELENAV EXPRESSLY DISCLAIMS AND EXCLUDES ALL WARRANTIES IN CONNECTION WITH THE TELENAV SOFTWARE, WHETHER STATUTORY, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES WHICH MAY ARISE FROM COURSE OF DEALING, CUSTOM OR TRADE AND INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS WITH RESPECT TO THE TELENAV SOFTWARE.
- Certain jurisdictions do not permit the disclaimer of certain warranties, so this limitation may not apply to you.

5. Limitation of Liability

- TO THE EXTENT PERMITTED UNDER APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL TELENAV OR ITS LICENSORS AND SUPPLIERS BE LIABLE TO YOU OR TO ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL OR EXEMPLARY DAMAGES (INCLUDING IN EACH CASE, BUT NOT LIMITED TO, DAMAGES FOR THE INABILITY TO USE THE EQUIPMENT OR ACCESS DATA, LOSS OF DATA, LOSS OF BUSINESS, LOSS OF PROFITS, BUSINESS INTERRUPTION OR THE LIKE) ARISING OUT OF THE USE OF OR INABILITY TO USE THE TELENAV SOFTWARE, EVEN IF TELENAV HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY

Appendices

REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED HEREIN AND ALL DIRECT OR GENERAL DAMAGES IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE), THE ENTIRE LIABILITY OF TELENAV AND OF ALL OF TELENAV'S SUPPLIERS SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE TELENAV SOFTWARE. SOME STATES AND/OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

6. Arbitration and Governing Law

- You agree that any dispute, claim or controversy arising out of or relating to this Agreement or the TeleNav Software shall be settled by independent arbitration involving a neutral arbitrator and administered by the American Arbitration Association in the County of Santa Clara, California. The arbitrator shall apply the Commercial Arbitration Rules of the American Arbitration Association, and the judgment upon the award rendered by the arbitrator may be entered by any court having jurisdiction. Note that there is no judge or jury in an arbitration proceeding and the decision of the arbitrator shall be binding upon both parties. You expressly agree to waive your right to a jury trial. This Agreement and performance hereunder will be governed by and construed in accordance with the laws of the State of California, without giving effect to its conflict of law provisions. To the extent judicial action is necessary in connection with the binding arbitration, both TeleNav and you agree to submit

to the exclusive jurisdiction of the courts of the County of Santa Clara, California. The United Nations Convention on Contracts for the International Sale of Goods shall not apply.

7. Assignment

- You may not resell, assign, or transfer this Agreement or any of your rights or obligations, except in totality, in connection with your permanent transfer of the TeleNav Software, and expressly conditioned upon the new user of the TeleNav Software agreeing to be bound by the terms and conditions of this Agreement. Any such sale, assignment or transfer that is not expressly permitted under this paragraph will result in immediate termination of this Agreement, without liability to TeleNav, in which case you and all other parties shall immediately cease all use of the TeleNav Software. Notwithstanding the foregoing, TeleNav may assign this Agreement to any other party at any time without notice, provided the assignee remains bound by this Agreement.

8. Miscellaneous

8.1

This Agreement constitutes the entire agreement between TeleNav and you with respect to the subject matter hereof.

8.2

Except for the limited licenses expressly granted in this Agreement, TeleNav retains all right, title and interest in and to the TeleNav Software, including without limitation all related intellectual property rights. No licenses or other rights which are not expressly granted in this Agreement are intended to, or shall be, granted or

Appendices

conferred by implication, statute, inducement, estoppel or otherwise, and TeleNav and its suppliers and licensors hereby reserve all of their respective rights other than the licenses explicitly granted in this Agreement.

8.3

By using the TeleNav Software, you consent to receive from TeleNav all communications, including notices, agreements, legally required disclosures or other information in connection with the TeleNav Software (collectively, "Notices") electronically. TeleNav may provide such Notices by posting them on TeleNav's Website or by downloading such Notices to your wireless device. If you desire to withdraw your consent to receive Notices electronically, you must discontinue your use of the TeleNav Software.

8.4

TeleNav's or your failure to require performance of any provision shall not affect that party's right to require performance at any time thereafter, nor shall a waiver of any breach or default of this Agreement constitute a waiver of any subsequent breach or default or a waiver of the provision itself.

8.5

If any provision herein is held unenforceable, then such provision will be modified to reflect the intention of the parties, and the remaining provisions of this Agreement will remain in full force and effect.

8.6

The headings in this Agreement are for convenience of reference only, will not be deemed to be a part of this Agreement, and will not be referred to in connection with the construction or interpretation of this Agreement. As used in this Agreement, the words "include" and "including" and variations thereof, will not be deemed to be terms of limitation, but rather will be deemed to be followed by the words "without limitation".

9. Other Vendors Terms and Conditions

- The Telenav Software utilizes map and other data licensed to Telenav by third party vendors for the benefit of you and other end users. This Agreement includes end-user terms applicable to these companies (included at the end of this Agreement), and thus your use of the Telenav Software is also subject to such terms. You agree to comply with the following additional terms and conditions, which are applicable to Telenav's third party vendor licensors::

9.1 End User Terms Required by HERE North America, LLC

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and Telenav ("Telenav") and its licensors (including their licensors and suppliers) on the other hand.

© 2013 HERE. All rights reserved.

The Data for areas of Canada includes information taken with permission from Canadian authorities, including: © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®, © Department of Natural Resources Canada.

Appendices

HERE holds a non-exclusive license from the United States Postal Service® to publish and sell ZIP+4® information.

©United States Postal Service® 2014. Prices are not established, controlled or approved by the United States Postal Service®. The following trademarks and registrations are owned by the USPS: United States Postal Service, USPS, and ZIP+4

The Data for Mexico includes certain data from Instituto Nacional de Estadística y Geografía.

9.2 End User Terms Required by NAV2 (Shanghai) Co., Ltd

The data ("Data") is provided for your personal, internal use only and not for resale. It is protected by copyright, and is subject to the following terms and conditions which are agreed to by you, on the one hand, and NAV2 (Shanghai) Co., Ltd ("NAV2") and its licensors (including their licensors and suppliers) on the other hand. 20xx. All rights reserved

Terms and Conditions

Permitted Use. You agree to use this Data together with the Telenav Software solely for the internal business and personal purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you agree not to otherwise reproduce, copy, modify, decompile, disassemble, create any derivative works of, or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

Restrictions. Except where you have been specifically licensed to do so by Telenav, and without limiting the preceding paragraph, you may not use this Data (a) with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs.

Warning. The Data may contain inaccurate or incomplete information due to the passage of time, changing circumstances, sources used and the nature of collecting comprehensive geographic data, any of which may lead to incorrect results.

No Warranty. This Data is provided to you "as is," and you agree to use it at your own risk. Telenav and its licensors (and their licensors and suppliers) make no guarantees, representations or warranties of any kind, express or implied, arising by law or otherwise, including but not limited to, content, quality, accuracy, completeness, effectiveness, reliability, fitness for a particular purpose, usefulness, use or results to be obtained from this Data, or that the Data or server will be uninterrupted or error-free.

Disclaimer of Warranty: TELENV AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A

Appendices

PARTICULAR PURPOSE OR NON-INFRINGEMENT. Some States, Territories and Countries do not allow certain warranty exclusions, so to that extent the above exclusion may not apply to you.

Disclaimer of Liability: TELENAV AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF TELENAV OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some States, Territories and Countries do not allow certain liability exclusions or damages limitations, so to that extent the above may not apply to you.

Export Control. You shall not export from anywhere any part of the Data or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations, including but not limited to the laws, rules and regulations administered by the Office of Foreign Assets Control of the U.S. Department of Commerce and the Bureau of Industry and Security of the U.S. Department of Commerce. To the extent that any such

export laws, rules or regulations prohibit HERE from complying with any of its obligations hereunder to deliver or distribute Data, such failure shall be excused and shall not constitute a breach of this Agreement.

Entire Agreement. These terms and conditions constitute the entire agreement between Telenav (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Governing Law. The above terms and conditions shall be governed by the laws of the State of Illinois [insert "Netherlands" where European HERE Data is used], without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. You agree to submit to the jurisdiction of the State of Illinois [insert "The Netherlands" where European HERE Data is used] for any and all disputes, claims and actions arising from or in connection with the Data provided to you hereunder.

Government End Users. If the Data is being acquired by or on behalf of the United States government or any other entity seeking or applying rights similar to those customarily claimed by the United States government, this Data is a "commercial item" as that term is defined at 48 C.F.R. ("FAR") 2.101, is licensed in accordance with these End-User Terms, and each copy of Data delivered or otherwise furnished shall be marked and embedded as appropriate with the following "Notice of Use," and shall be treated in accordance with such Notice:

Appendices

NOTICE OF USE

CONTRACTOR (MANUFACTURER/
SUPPLIER) NAME: HERE

CONTRACTOR (MANUFACTURER/
SUPPLIER) ADDRESS: c/o Nokia, 425
West Randolph Street, Chicago, Illinois
60606

This Data is a commercial item as
defined in FAR 2.101 and is subject to
these End-User Terms under which this
Data was provided.

© 1987 – 2014 HERE – All rights reserved.

If the Contracting Officer, federal
government agency, or any federal official
refuses to use the legend provided herein,
the Contracting Officer, federal
government agency, or any federal official
must notify HERE prior to seeking
additional or alternative rights in the Data.

I. US/Canada Territory

A. United States Data. The End-User
Terms for any Application containing
Data for the United States shall contain
the following notices:

"HERE holds a non-exclusive license
from the United States Postal
Service® to publish and sell ZIP+4®
information."

"©United States Postal Service®
20XX. Prices are not established,
controlled or approved by the United
States Postal Service®. The following
trademarks and registrations are
owned by the USPS: United States
Postal Service, USPS, and ZIP+4."

B. Canada Data. The following provi-
sions apply to the Data for Canada,
which may include or reflect data from
third party licensors ("Third Party
Data"), including Her Majesty the Queen
in Right of Canada ("Her Majesty"),
Canada Post Corporation ("Canada
Post") and the Department of Natural
Resources of Canada ("NRCan"):

1. Disclaimer and Limitation: Client
agrees that its use of the Third Party
Data is subject to the following provi-
sions:

a. Disclaimer: The Third Party Data
is licensed on an "as is" basis. The
licensors of such data, including Her
Majesty, Canada Post and NRCan,
make no guarantees, representa-
tions or warranties respecting such
data, either express or implied,
arising by law or otherwise, including
but not limited to, effectiveness,
completeness, accuracy or fitness
for a particular purpose.

b. Limitation on Liability: The Third
Party Data licensors, including Her
Majesty, Canada Post and NRCan,
shall not be liable: (i) in respect of
any claim, demand or action, irre-
spective of the nature of the cause
of the claim, demand or action
alleging any loss, injury or damages,
direct or indirect, which may result
from the use or possession of such
Data; or (ii) in any way for loss of
revenues or contracts, or any other
consequential loss of any kind
resulting from any defect in the
Data.

Appendices

2. Copyright Notice: In connection with each copy of all or any portion of the Data for the Territory of Canada, Client shall affix in a conspicuous manner the following copyright notice on at least one of: (i) the label for the storage media of the copy; (ii) the packaging for the copy; or (iii) other materials packaged with the copy, such as user manuals or end user license agreements: "This data includes information taken with permission from Canadian authorities, including © Her Majesty the Queen in Right of Canada, © Queen's Printer for Ontario, © Canada Post Corporation, GeoBase®, © The Department of Natural Resources Canada. All rights reserved."

3. End-User Terms: Except as otherwise agreed by the parties, in connection with the provision of any portion of the Data for the Territory of Canada to End-Users as may be authorized under the Agreement, Client shall provide such End-Users, in a reasonably conspicuous manner, with terms (set forth with other end user terms required to be provided under the Agreement, or as otherwise may be provided, by Client) which shall include the following provisions on behalf of the Third Party Data licensors, including Her Majesty, Canada Post and NRCan:

The Data may include or reflect data of licensors, including Her Majesty the Queen in the Right of Canada ("Her Majesty"), Canada Post Corporation ("Canada Post") and the Department of Natural Resources Canada ("NRCan"). Such data is licensed on an "as is" basis. The licensors, including Her Majesty, Canada Post and NRCan, make no guarantees, representations or warranties respecting such data,

either express or implied, arising by law or otherwise, including but not limited to, effectiveness, completeness, accuracy or fitness for a particular purpose. The licensors, including Her Majesty, Canada Post and NRCan, shall not be liable in respect of any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action alleging any loss, injury or damages, direct or indirect, which may result from the use or possession of the data or the Data. The licensors, including Her Majesty, Canada Post and NRCan, shall not be liable in any way for loss of revenues or contracts, or any other consequential loss of any kind resulting from any defect in the data or the Data.

End User shall indemnify and save harmless the licensors, including Her Majesty, Canada Post and NRCan, and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature of the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the data or the Data.

4. Additional Provisions: The terms contained in this Section are in addition to all of the rights and obligations of the parties under the Agreement. To the extent that any of the provisions of this Section are inconsistent with, or conflict with, any other provisions of the Agreement, the provisions of this Section shall prevail.

Appendices

II. Mexico. The following provision applies to the Data for Mexico, which includes certain data from the Instituto Nacional de Estadística y Geografía ("INEGI"):

A. Any and all copies of the Data and/or packaging containing Data for Mexico shall contain the following notice:
"Fuente: INEGI (Instituto Nacional de Estadística y Geografía)"

III. Latin America Territory

A. Third Party Notices. Any and all copies of the Data and/or packaging relating thereto shall include the respective Third Party Notices set forth below and used as described below corresponding to the Territory (or portion thereof) included in such copy:

Territory	Notice
-----------	--------

Argentina	IGN "INSTITUTO GEOGRAFICO NACIONAL ARGENTINO"
-----------	---

Ecuador	"INSTITUTO GEOGRAFICO MILITAR DEL ECUADOR AUTORIZACION N° IGM-2011-01- PCO-01 DEL 25 DE ENERO DE 2011" "source: © IGN 2009 - BD TOPO ®"
---------	--

Guadeloupe, French Guiana and Martinique Mexico	"Fuente: INEGI (Instituto Nacional de Estadística y Geografía)"
---	---

IV. Middle East Territory

A. Third Party Notices. Any and all copies of the Data and/or packaging relating thereto shall include the respective Third Party Notices set forth below and used as described below corresponding to the Territory (or portion thereof) included in such copy:

Country	Notice
---------	--------

Jordan	"© Royal Jordanian Geographic Centre". The foregoing notice requirement for Jordan Data is a material term of the Agreement. If Client or any of its permitted sublicensees (if any) fail to meet such requirement, HERE shall have the right to terminate Client's license with respect to the Jordan Data.
--------	--

B. Jordan Data. Client and its permitted sublicensees (if any) are restricted from licensing and/or otherwise distributing HERE's database for the country of Jordan ("Jordan Data") for use in Enterprise Applications to (i) non-Jordanian entities for use of the Jordan Data solely in Jordan or (ii) Jordan-based customers. In addition, Client, its permitted sublicensees (if any) and End-Users are restricted from using the Jordan Data in Enterprise Applications if such party is (i) a non-Jordanian entity using the Jordan Data solely in Jordan or (ii) a Jordan-based customer. For purposes of the foregoing, "Enterprise Applications" shall mean Geomarketing applications, GIS applications, mobile business asset management applications, call center applications, telematics applications, public organization Internet applications or for providing geocoding services.

Appendices

V. Europe Territory

A. Use of Certain Traffic Codes in Europe

1. General Restrictions Applicable to Traffic Codes. Client acknowledges and agrees that in certain countries of the Europe Territory, Client will need to obtain rights directly from third party RDS-TMC code providers to receive and use the Traffic Codes in the Data and to deliver to End-Users Transactions in any way derived from or based on such Traffic Codes. For such countries, HERE shall deliver the Data incorporating Traffic Codes to Client only after receiving certification from Client of its having obtained such rights.

2. Display of Third Party Rights Legends for Belgium. Client shall, for each Transaction that uses Traffic Codes for Belgium, provide the following notice to the End-User: "Traffic Codes for Belgium are provided by the Ministerie van de Vlaamse Gemeenschap and the Ministère de l'Équipement et des Transports."

B. Paper Maps. With respect to any license granted to Client relating to making, selling or distributing paper maps (i.e., a map fixed on a paper or paper-like medium): (a) such license with respect to Data for the Territory of Great Britain is conditioned on Client's entering into and complying with a separate written agreement with the Ordnance Survey ("OS") to create and sell paper maps, Client's paying to the OS any and all applicable paper map royalties, and Client's complying with the OS copyright notice requirements; (b) such license for selling or otherwise distributing for charge with respect to Data for the Territory of Czech Republic

is conditioned on Client's obtaining prior written consent from Kartografie a.s.; (c) such license for selling or distributing with respect to Data for the Territory of Switzerland is conditioned on Client's obtaining a permit from Bundesamt für Landestopografie of Switzerland; (d) Client is restricted from using Data for the Territory of France to create paper maps with a scale between 1:5,000 and 1:250,000; and (e) Client is restricted from using any Data to create, sell or distribute paper maps that are the same or substantially similar, in terms of data content and specific use of color, symbols and scale, to paper maps published by the European national mapping agencies, including without limitation, Landervermessungämter of Germany, Topografische Dienst of the Netherlands, Nationaal Geografisch Instituut of Belgium, Bundesamt für Landestopografie of Switzerland, Bundesamt für Eich-und Vermessungswesen of Austria, and the National Land Survey of Sweden.

C. OS Enforcement. Without limiting Section IV(B) above, with respect to Data for the Territory of Great Britain, Client acknowledges and agrees that the Ordnance Survey ("OS") may bring a direct action against Client to enforce compliance with the OS copyright notice (see Section IV(D) below) and paper map requirements (see Section IV(B) above) contained in this Agreement.

D. Third Party Notices. Any and all copies of the Data and/or packaging relating thereto shall include the respective Third Party Notices set forth below and used as described below corresponding to the Territory (or portion thereof) included in such copy:

Country(ies) Notice

Appendices

Austria	"© Bundesamt für Eich- und Vermessungswesen"	Spain	"Información geográfica propiedad del CNIG"
Croatia		Sweden	"Based upon electronic data © National Land Survey Sweden."
Cyprus,		Switzerland	"Topografische Grundlage: © Bundesamt für Landestopographie.
Estonia,			
Latvia,			
Lithuania,			
Moldova,			
Poland,			
Slovenia			
and/or			
Ukraine	"© EuroGeographics"		
France	"source: © IGN 2009 – BD TOPO ®"		
Germany	"Die Grundlagendaten wurden mit Genehmigung der zuständigen Behörden entnommen"		
Great Britain	"Contains Ordnance Survey data © Crown copyright and database right 2010 Contains Royal Mail data © Royal Mail copyright and database right 2010"		
Greece	"Copyright Geomatics Ltd."		
Hungary	"Copyright © 2003; Top-Map Ltd."		
Italy	"La Banca Dati Italiana è stata prodotta usando quale riferimento anche cartografia numerica ed al tratto prodotta e fornita dalla Regione Toscana."		
Norway	"Copyright © 2000; Norwegian Mapping Authority"		
Portugal	"Source: IgeoE – Portugal"		

E. Respective Country Distribution. Client acknowledges that HERE has not received approvals to distribute map data for the following countries in such respective countries: Albania, Belarus, Kyrgyzstan, Moldova and Uzbekistan. HERE may update such list from time to time. The license rights granted to Client under this TL with respect to the Data for such countries are contingent upon Client's compliance with all applicable laws and regulations, including, without limitation, any required licenses or approvals to distribute the Application incorporating such Data in such respective countries.

VI. Australia Territory

A. Third Party Notices. Any and all copies of the Data and/or packaging relating thereto shall include the respective Third Party Notices set forth below and used as described below corresponding to the Territory (or portion thereof) included in such copy:

Copyright. Based on data provided under license from PSMA Australia Limited (www.pasma.com.au).

Appendices

Product incorporates data which is © 20XX Telstra Corporation Limited, GM Holden Limited, Intelomatics Australia Pty Ltd and Continental Pty Ltd.

B. Third Party Notices for Australia. In addition to the foregoing, the End-User Terms for any Application containing RDS-TMC Traffic Codes for Australia shall contain the following notice: "Product incorporates traffic location codes which is © 20XX Telstra Corporation Limited and its licensors."

AT&T Vehicle Network Carrier Telematics Disclosure

END USER FOR PURPOSES OF THIS SECTION MEANS YOU AND YOUR HEIRS, EXECUTORS, LEGAL PERSONAL REPRESENTATIVES AND PERMITTED ASSIGNS. FOR PURPOSES OF THIS SECTION "UNDERLYING WIRELESS SERVICE CARRIER" INCLUDES ITS AFFILIATES AND CONTRACTORS AND THEIR RESPECTIVE OFFICERS, DIRECTORS, EMPLOYEES, SUCCESSORS AND ASSIGNS. END USER HAS NO CONTRACTUAL RELATIONSHIP WITH THE UNDERLYING WIRELESS SERVICE CARRIER AND END USER IS NOT A THIRD PARTY BENEFICIARY OF ANY AGREEMENT BETWEEN FORD AND UNDERLYING CARRIER. END USER UNDERSTANDS AND AGREES THAT THE UNDERLYING CARRIER HAS NO LEGAL, EQUITABLE, OR OTHER LIABILITY OF ANY KIND TO END USER. IN ANY EVENT, REGARDLESS OF THE FORM OF THE ACTION, WHETHER FOR BREACH OF CONTRACT, WARRANTY, NEGLIGENCE, STRICT LIABILITY IN TORT OR OTHERWISE, END USER'S EXCLUSIVE REMEDY FOR CLAIMS ARISING IN ANY WAY IN CONNECTION WITH THIS AGREEMENT, FOR ANY CAUSE WHATSOEVER, INCLUDING BUT NOT LIMITED TO ANY FAILURE OR

DISRUPTION OF SERVICE PROVIDED HEREUNDER, IS LIMITED TO PAYMENT OF DAMAGES IN AN AMOUNT NOT TO EXCEED THE AMOUNT PAID BY END USER FOR THE SERVICES DURING THE TWO-MONTH PERIOD PRECEDING THE DATE THE CLAIM AROSE.

(ii) END USER AGREES TO INDEMNIFY AND HOLD HARMLESS THE UNDERLYING WIRELESS SERVICE CARRIER AND ITS OFFICERS, EMPLOYEES, AND AGENTS AGAINST ANY AND ALL CLAIMS, INCLUDING WITHOUT LIMITATION CLAIMS FOR LIBEL, SLANDER, OR ANY PROPERTY DAMAGE, PERSONAL INJURY OR DEATH, ARISING IN ANY WAY, DIRECTLY OR INDIRECTLY, IN CONNECTION WITH THIS AGREEMENT OR THE USE, FAILURE TO USE, OR INABILITY TO USE THE DEVICE EXCEPT WHERE THE CLAIMS RESULT FROM THE UNDERLYING CARRIER'S GROSS NEGLIGENCE OR WILLFUL MISCONDUCT. THIS INDEMNITY WILL SURVIVE THE TERMINATION OF THE AGREEMENT.

(iii) END USER HAS NO PROPERTY RIGHT IN ANY NUMBER ASSIGNED TO THE DEVICE.

(iv) END USER UNDERSTANDS THAT FORD AND THE UNDERLYING CARRIER CANNOT GUARANTEE THE SECURITY OF WIRELESS TRANSMISSIONS, AND WILL NOT BE LIABLE FOR ANY LACK OF SECURITY RELATING TO THE USE OF THE SERVICES

THE SERVICE IS FOR [END USER'S] USE ONLY AND END USER MAY NOT RESELL THE SERVICE TO ANY OTHER PARTY. END USER UNDERSTANDS THAT THE UNDERLYING CARRIER DOES NOT GUARANTEE ANY END USER UNINTERRUPTED SERVICE OR COVERAGE. THE UNDERLYING CARRIER DOES NOT WARRANT THAT END USERS CAN OR WILL BE LOCATED USING THE SERVICE. THE UNDERLYING CARRIER

Appendices

MAKES NO WARRANTY, EXPRESS OR IMPLIED, OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SUITABILITY, OR PERFORMANCE REGARDING ANY SERVICES OR GOODS, AND IN NO EVENT SHALL AT&T BE LIABLE, WHETHER OR NOT DUE TO ITS OWN NEGLIGENCE, FOR ANY: (A) ACT OR OMISSION OF A THIRD PARTY; (B) MISTAKES, OMISSIONS, INTERRUPTIONS, ERRORS, FAILURES TO TRANSMIT, DELAYS, OR DEFECTS IN THE SERVICE PROVIDED BY OR THROUGH THE UNDERLYING CARRIER; (C) DAMAGE OR INJURY CAUSED BY SUSPENSION OR TERMINATION BY THE UNDERLYING CARRIER; OR (D) DAMAGE OR INJURY CAUSED BY A FAILURE OR DELAY IN CONNECTING A CALL TO ANY ENTITY, INCLUDING 911 OR ANY OTHER EMERGENCY SERVICE. TO THE FULL EXTENT ALLOWED BY LAW, THE END USER RELEASES, INDEMNIFIES AND HOLDS THE UNDERLYING CARRIER HARMLESS FROM AND AGAINST ANY AND ALL CLAIMS OF ANY PERSON OR ENTITY FOR DAMAGES OF ANY NATURE ARISING IN ANY WAY FROM OR RELATING TO, DIRECTLY OR INDIRECTLY, SERVICES PROVIDED BY THE UNDERLYING CARRIER OR ANY PERSON'S USE THEREOF, INCLUDING CLAIMS ARISING IN WHOLE OR IN PART FROM THE ALLEGED NEGLIGENCE OF THE UNDERLYING CARRIER.

VII. China Territory

Personal Use Only

You agree to use this Data together with [insert name of Client Application] for the solely personal, non-commercial purposes for which you were licensed, and not for service bureau, time-sharing or other similar purposes. Accordingly, but subject to the restrictions set forth in the following paragraphs, you may copy this Data only as necessary for your personal use to (i)

view it, and (ii) save it, provided that you do not remove any copyright notices that appear and do not modify the Data in any way. You agree not to otherwise reproduce, copy, modify, decompile, disassemble or reverse engineer any portion of this Data, and may not transfer or distribute it in any form, for any purpose, except to the extent permitted by mandatory laws.

Restrictions

Except where you have been specifically licensed to do so by NAV2, and without limiting the preceding paragraph, you may not (a) use this Data with any products, systems, or applications installed or otherwise connected to or in communication with vehicles, capable of vehicle navigation, positioning, dispatch, real time route guidance, fleet management or similar applications; or (b) with or in communication with any positioning devices or any mobile or wireless-connected electronic or computer devices, including without limitation cellular phones, palmtop and handheld computers, pagers, and personal digital assistants or PDAs. You agree to cease using this Data if you fail to comply with these terms and conditions.

Limited Warranty

NAV2 warrants that (a) the Data will perform substantially in accordance with the accompanying written materials for a period of ninety (90) days from the date of receipt, and (b) any support services provided by NAV2 shall be substantially as described in applicable written materials provided to you by NAV2, and NAV2's support engineers will make commercially reasonable efforts to solve any problem issues.

Appendices

rigCustomer Remedies

NAV2 and its suppliers' entire liability and your exclusive remedy shall be, at NAV2's sole discretion, either (a) return of the price paid, if any, or (b) repair or replacement of the Data that do not meet NAV2's Limited Warranty and that are returned to NAV2 with a copy of your receipt. This Limited Warranty is void if failure of the Data has resulted from accident, abuse, or misapplication. Any replacement Data will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer. Neither these remedies nor any product support services offered by NAV2 are available without proof of purchase from an authorized international source.

No Other Warranty:

EXCEPT FOR THE LIMITED WARRANTY SET FORTH ABOVE AND TO THE EXTENT PERMITTED BY APPLICABLE LAW, NAV2 AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) DISCLAIM ANY WARRANTIES, EXPRESS OR IMPLIED, OF QUALITY, PERFORMANCE, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OWNERSHIP OR NON-INFRINGEMENT. Certain warranty exclusions may not be permitted under applicable law, so to that extent the above exclusion may not apply to you.

Limited Liability:

TO THE EXTENT PERMITTED BY APPLICABLE LAW, NAV2 AND ITS LICENSORS (INCLUDING THEIR LICENSORS AND SUPPLIERS) SHALL NOT BE LIABLE TO YOU: IN RESPECT OF ANY CLAIM, DEMAND OR ACTION, IRRESPECTIVE OF THE NATURE OF THE CAUSE OF THE CLAIM, DEMAND OR ACTION ALLEGING ANY LOSS, INJURY OR DAMAGES, DIRECT OR INDIRECT, WHICH MAY RESULT FROM THE USE OR POSSESSION OF THE INFORMATION; OR

FOR ANY LOSS OF PROFIT, REVENUE, CONTRACTS OR SAVINGS, OR ANY OTHER DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF YOUR USE OF OR INABILITY TO USE THIS INFORMATION, ANY DEFECT IN THE INFORMATION, OR THE BREACH OF THESE TERMS OR CONDITIONS, WHETHER IN AN ACTION IN CONTRACT OR TORT OR BASED ON A WARRANTY, EVEN IF NAV2 OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. UNDER NO CIRCUMSTANCES SHALL NAV2's OR ITS SUPPLIERS' LIABILITY HEREUNDER EXCEED THE PRICE PAID. Certain liability exclusions may not be permitted under applicable law, so to that extent the above exclusion may not apply to you.

Export Control

You agree not to export to anywhere any part of the Data provided to you or any direct product thereof except in compliance with, and with all licenses and approvals required under, applicable export laws, rules and regulations.

IP Protection

The Data are owned by NAV2 or its suppliers and are protected by applicable copyright and other intellectual property law and treaties. The Data are provided solely on the basis of a license to use, not sale.

Entire Agreement

These terms and conditions constitute the entire agreement between NAV2 (and its licensors, including their licensors and suppliers) and you pertaining to the subject matter hereof, and supersedes in their entirety any and all written or oral agreements previously existing between us with respect to such subject matter.

Appendices

Governing Law.

The above terms and conditions shall be governed by the laws of the People's Republic of China, without giving effect to (i) its conflict of laws provisions, or (ii) the United Nations Convention for Contracts for the International Sale of Goods, which is explicitly excluded. Any dispute arising from or in connection with the Data provided to you hereunder shall be submitted to the Shanghai International Economic and Trade Arbitration Commission for arbitration.

Gracenote® Copyright

CD and music-related data from Gracenote, Inc., copyright©

2000-2007 Gracenote. Gracenote Software, copyright © 2000-2007 Gracenote. This product and service may practice one or more of the following U.S. Patents 5,987,525; 6,061,680; 6,154,773; 6,161,132; 6,230,192; 6,230,207; 6,240,459; 6,330,593 and other patents issued or pending. Some services supplied under license from Open Globe, Inc. for U.S. Patent 6,304,523.

Gracenote and CDDb are registered trademarks of Gracenote. The Gracenote logo and logotype, and the "Powered by Gracenote™" logo are trademarks of Gracenote.

Gracenote® End User License Agreement (EULA)

This device contains software from Gracenote, Inc. of 2000 Powell Street Emeryville, California 94608 ("Gracenote").

The software from Gracenote (the "Gracenote Software") enables this device to do disc and music file identification and obtain music-related information, including name, artist, track, and title information ("Gracenote Data") from online servers

("Gracenote Servers"), and to perform other functions. You may use Gracenote Data only by means of the intended End User functions of this device. This device may contain content belonging to Gracenote's providers. If so, all of the restrictions set forth herein with respect to Gracenote Data shall also apply to such content and such content providers shall be entitled to all of the benefits and protections set forth herein that are available to Gracenote. You agree that you will use the content from Gracenote ("Gracenote Content"), Gracenote Data, the Gracenote Software, and Gracenote Servers for your own personal, non-commercial use only. You agree not to assign, copy, transfer or transmit the Gracenote Content, Gracenote Software or any Gracenote Data (except in a Tag associated with a music file) to any third party. YOU AGREE NOT TO USE OR EXPLOIT GRACENOTE CONTENT, GRACENOTE DATA, THE GRACENOTE SOFTWARE, OR GRACENOTE SERVERS, EXCEPT AS EXPRESSLY PERMITTED HEREIN.

You agree that your non-exclusive licenses to use the Gracenote Content, Gracenote Data, the Gracenote Software, and Gracenote Servers will terminate if you violate these restrictions. If your licenses terminate, you agree to cease any and all use of the Gracenote Content, Gracenote Data, the Gracenote Software, and Gracenote Servers.

Gracenote, respectively, reserve all rights in Gracenote Data, the Gracenote Software, and the Gracenote Servers and Gracenote Content, including all ownership rights. Under no circumstances will either Gracenote become liable for any payment to you for any information that you provide,

Appendices

including any copyrighted material or music file information. You agree that Gracenote may enforce its respective rights, collectively or separately, under this agreement against you, directly in each company's own name.

Gracenote uses a unique identifier to track queries for statistical purposes. The purpose of a randomly assigned numeric identifier is to allow Gracenote to count queries without knowing anything about who you are. For more information, see the web page at www.gracenote.com for the Gracenote Privacy Policy.

THE GRACENOTE SOFTWARE, EACH ITEM OF GRACENOTE DATA AND THE GRACENOTE CONTENT ARE LICENSED TO YOU "AS IS". NEITHER GRACENOTE MAKES ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, REGARDING THE ACCURACY OF ANY GRACENOTE DATA FROM THE GRACENOTE SERVERS OR GRACENOTE CONTENT. GRACENOTE COLLECTIVELY AND SEPARATELY RESERVE THE RIGHT TO DELETE DATA AND/OR CONTENT FROM THE COMPANIES' RESPECTIVE SERVERS OR, IN THE CASE OF GRACENOTE, CHANGE DATA CATEGORIES FOR ANY CAUSE THAT GRACENOTE DEEMS SUFFICIENT. NO WARRANTY IS MADE THAT EITHER GRACENOTE CONTENT OR THE GRACENOTE SOFTWARE OR GRACENOTE SERVERS ARE ERROR-FREE OR THAT THE FUNCTIONING OF THE GRACENOTE SOFTWARE OR GRACENOTE SERVERS WILL BE UNINTERRUPTED. GRACENOTE IS NOT OBLIGATED TO PROVIDE YOU WITH ANY ENHANCED OR ADDITIONAL DATA TYPES THAT GRACENOTE MAY CHOOSE TO PROVIDE IN THE FUTURE AND IS FREE TO DISCONTINUE ITS ONLINE SERVICES AT ANY TIME. GRACENOTE DISCLAIM ALL WARRANTIES EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO,

IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, AND NON-INFRINGEMENT. NEITHER GRACENOTE WARRANTS THE RESULTS THAT WILL BE OBTAINED BY YOUR USE OF THE GRACENOTE SOFTWARE OR ANY GRACENOTE SERVER. IN NO CASE WILL GRACENOTE BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR FOR ANY LOST PROFITS OR LOST REVENUES FOR ANY REASON WHATSOEVER. © Gracenote 2007.

Radio Frequency Statement

FCC ID: ACJ-SYNCG3-L

IC: 216B-SYNCG3-L

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

- (1)** This device may not cause harmful interference, and
- (2)** this device must accept any interference received, including interference that may cause undesired operation.



WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Appendices

Taiwan Territory

Note: In accordance with the management approach of low-power radio wave radiation motors:

Article 12: For approved and certified low-power radiation motor models, companies, firms or users must not alter the frequency, increase the power or change the characteristics and functions of the original design without authorization.

Article 14: The usage of low-power radio-frequency motors must not affect aviation safety and interfere with legal telecommunications. Should interference be detected, immediately stop using the device and only resume usage after ensuring that there is no longer any interference. For the legal telecommunication and wireless telecommunication of the telco, the low-power radio frequency motor must be able to tolerate legal limits of interference from telecommunication, industrial, scientific and radio wave equipment.

SUNA TRAFFIC CHANNEL – TERMS AND CONDITIONS

By activating, using and/or accessing the SUNA Traffic Channel, SUNA Predictive or other content or material provided by Intelmatics (together, **SUNA Products and/or Services**), you must accept certain terms and conditions. The following is a brief summary of the terms and conditions that apply to you. To view the full terms and conditions relevant to your use of the SUNA Products and/or Services, please consult:

Website
www.sunatraffic.com.au/termsandconditions/

1. Acceptance

By using SUNA Products and/or Services, you will be deemed to have accepted and agreed to be bound by the terms and conditions fully detailed at:

Website
www.sunatraffic.com.au/termsandconditions/

2. Intellectual Property

SUNA Products and/or Services are for your personal use. You may not record, or retransmit the content, nor use the content in association with any other traffic information or route guidance service or device not approved by Intelmatics. You obtain no right of ownership in any Intellectual Property Rights (including copyright) in the data that is used to provide SUNA Products and/or Services.

3. Appropriate Use

SUNA Products and/or Services are intended as an aid to personal motoring and travel planning, and do not provide comprehensive or accurate information on all occasions. On occasions, you may experience additional delay as a result of using SUNA Products and/or Services. You acknowledge that it is not intended, or suitable, for use in applications where time of arrival or driving directions may impact the safety of the public or yourself.

4. Use of SUNA Products and Services while driving

You, and other authorised drivers of the vehicle in which SUNA Products and/or Services are available or installed and active, remain at all times responsible for observing all relevant laws and codes of safe driving. In particular, you agree to only actively operate SUNA Products and/or Services when the Vehicle is at a complete stop and it is safe to do so.

Appendices

5. Service Continuity and Reception of the SUNA Traffic Channel

We will use reasonable endeavours to provide the SUNA Traffic Channel 24 hours a day, 365 days a year. The SUNA Traffic Channel may occasionally be unavailable for technical reasons or for planned maintenance. We will try to perform maintenance at times when congestion is light. We reserve the right to withdraw SUNA Products and/or Services at any time.

Also, we cannot assure the uninterrupted reception of the SUNA Traffic Channel RDS-TMC signal at any particular location.

6. Limitation of Liability

Neither Intelematics (nor its suppliers or the manufacturer of your device (the “**Suppliers**”)) shall be liable to you or to any third party for any damages either direct, indirect, incidental, consequential or otherwise arising out of the use of or inability to use SUNA Products and/or Services even if Intelematics or a Supplier has been advised of the possibility of such damages. You also acknowledge that the neither Intelematics nor any Supplier guarantees nor make any warranties that relate to the availability, accuracy or completeness of SUNA Products and/or Services, and to the extent which it is lawful to do so, both Intelematics and each Supplier excludes any warranties which might otherwise be implied by any State or Federal legislation in relation to SUNA Products and/or Services.

7. Please Note

Great care has been taken in preparing this manual. Constant product development may mean that some information is not entirely up-to-date. The information in this document is subject to change without notice.

DECLARATION OF CONFORMITY

Your vehicle could have components that transmit and receive radio waves and are therefore subject to government regulation.

These components must accept any interference received, including interference that could cause undesired operation. For certification labels and declarations of conformity, visit www.wirelessconformity.ford.com.

Index

A

A/C	
See: Climate Control.....	99
About This Manual.....	9
ABS	
See: Brakes.....	173
ABS driving hints	
See: Hints on Driving With Anti-Lock Brakes.....	173
Accessories	
See: Replacement Parts Recommendation.....	15
ACC	
See: Using Adaptive Cruise Control.....	191
Acknowledgments.....	9
Active Park Assist.....	184
Using Active Park Assist.....	184
Adjusting the Steering Wheel.....	62
Air Conditioning	
See: Climate Control.....	99
Air Vents.....	99
Alarm	
See: Anti-Theft Alarm.....	61
AM/FM Radio - Van, Vehicles With:	
SYNC 2.5.....	382
Using the Radio.....	382
AM/FM Radio - Van, Vehicles Without:	
SYNC.....	382
Selecting a Radio Source.....	382
Anti-Theft Alarm.....	61
Arming the Alarm.....	61
Disarming the Alarm.....	61
Appendices.....	423
Apps.....	409
Using Apps on an Android Device.....	410
Using Apps on an iOS Device.....	409
Using Mobile Navigation on an Android Device.....	410
Apps - Van, Vehicles With: SYNC 2.5.....	387
Apps Troubleshooting.....	389
Using Android Auto.....	388
Using Apple CarPlay.....	387
Using Apps on an Android Device.....	388
Using Apps on an iOS Device.....	388
At a Glance.....	18
Audible Warnings and Indicators.....	86
Airbag Secondary Warning.....	86
Automatic Transmission.....	86
Door Ajar.....	86
Emergency Door Open.....	86
Engine On.....	86
Exterior Lamps On.....	86
Parking Brake On.....	86
Seatbelt Reminder.....	86
Audio System.....	377
Audio System – Troubleshooting - Van, Vehicles With: SYNC 2.5.....	391
Master Reset.....	392
Resetting the System.....	391
Updating the System.....	391
Audio Unit Clock and Date Displays - Van, Vehicles With: SYNC 2.5.....	385
Audio Unit Clock and Date Displays - Van, Vehicles Without: SYNC.....	385
Adjusting the Clock.....	385
Audio Unit - Van, Vehicles With: SYNC 2.5.....	379
Adjusting the Volume.....	380
Changing Radio Stations.....	380
Pausing or Playing Media.....	380
Seek Down and Previous Track Button.....	380
Seek Up and Next Track Button.....	380
Sound Settings.....	380
Switching the Audio Unit On and Off.....	379
Switching the Screen On and Off.....	380
Audio Unit - Van, Vehicles Without: SYNC.....	377
Adjusting the Volume.....	377
Changing Radio Stations.....	377
Pausing or Playing Media.....	379
Returning to the Previous Screen.....	379
Scrolling Through the Menu Options.....	378
Seek Down and Previous Track Button.....	379
Seek Up and Next Track Button.....	379
Selecting a Menu Option.....	379
Selecting Media.....	378
Selecting the Radio.....	377
Sound Settings.....	379
Switching the Audio Unit On and Off.....	377
Switching the Screen On and Off.....	379
System Settings.....	379

Index

Using a Cell Phone.....	379
Audio Unit - Vehicles With: SYNC	
3.....	381
Adjusting the Volume.....	381
Changing Radio Stations.....	381
Pausing or Playing Media.....	381
Seek Down and Previous Track	
Button.....	381
Seek Up and Next Track Button.....	381
Sound Settings.....	382
Switching the Audio Unit On and Off.....	381
Switching the Screen On and Off.....	382
Autolamps.....	67
Automatic Crash Notification	
System.....	41
Automatic High Beam Control.....	68
About Automatic High Beam Control.....	68
Automatic High Beam Control Information	
Messages.....	69
Automatic High Beam Indicator.....	69
Overriding Automatic High Beam	
Control.....	69
Switching Automatic High Beam Control	
On or Off.....	69
Automatic Transmission - 6-Speed	
Automatic Transmission.....	169
Automatic Transmission Information	
Messages.....	172
Brake Shift Interlock.....	170
Selector Lever Positions.....	169
SelectShift™.....	170
Transmission Not in Park (P) Audible	
Warning.....	171
Automatic Transmission - Plug-In Hybrid	
Electric Vehicle (PHEV).....	167
Brake Shift Interlock.....	168
Selector Lever Positions.....	168
Transmission Not in Park (P) Audible	
Warning.....	169
Auto-Start-Stop Audible Warning.....	134
Auto-Start-Stop.....	133
Auto-Start-Stop Settings.....	136
Auto-Start-Stop - Troubleshooting.....	134
Auto-Start-Stop Indicators.....	134
Auto-Start-Stop Precautions.....	133
Auto-Start-Stop Settings.....	136
Setting the Engine Stop Speed.....	136

Auto-Start-Stop -	
Troubleshooting.....	134
Auto-Start-Stop - Frequently Asked	
Questions.....	135
Auto-Start-Stop - Information	
Messages.....	134
Autowipers.....	63
Settings.....	64
Auxiliary Heater.....	102
Parking Heater.....	102
Principle of Operation.....	102
Using Auxiliary Heater.....	102
Auxiliary Power Points.....	120
230 Volt AC Power Point.....	120

B

Battery	
See: Changing the 12V Battery.....	292
Blind Spot Information System.....	205
Blind Spot Information System	
Indicator.....	207
Blind Spot Information System Information	
Messages.....	209
Blind Spot Information System	
Sensors.....	206
Blind Spot Information System Warning	
Lamp.....	208
Blind Spot Information System with Trailer	
Tow.....	207
Switching the Blind Spot Information	
System On and Off.....	206
Using the Blind Spot Information	
System.....	206
BLIS	
See: Blind Spot Information System.....	205
Body Styling Kits.....	316
Bonnet Lock	
See: Opening and Closing the Hood -	
LHD.....	281
See: Opening and Closing the Hood -	
RHD.....	279
Bottle Holders.....	123
Brake Fluid Check.....	291
Brakes.....	173
General Information.....	173
Breaking-In.....	235
Brakes and Clutch.....	235

Index

Engine.....	235	Engine.....	361
Tires.....	235	Fuel Tank.....	362
Bulb Specification Chart - Vehicles With:		High Voltage Battery Coolant.....	362
Halogen Headlamps.....	366	Washer Reservoir.....	362
Bulb Specification Chart - Vehicles With:		Capacities and Specifications - Plug-In	
Halogen Projector Headlamps.....	367	Hybrid Electric Vehicle (PHEV),	
Bulb Specification Chart - Vehicles With:		Van.....	363
High Intensity Discharge		Air Conditioning System.....	363
Headlamps.....	368	Brake System.....	366
C		Engine.....	364
Capacities and Specifications - 2.0L		Fuel Tank.....	365
EcoBlue, Bus.....	348	High Voltage Battery Coolant.....	365
Air Conditioning System.....	348	Washer Reservoir.....	365
Brake System.....	351	Car Wash	
Diesel Exhaust Fluid (AdBlue) Tank.....	350	See: Cleaning the Exterior.....	313
Engine.....	349	Catalytic Converter.....	151
Fuel Tank.....	350	On-Board Diagnostics System.....	151
Washer Reservoir.....	350	Changing a Bulb - Vehicles With:	
Capacities and Specifications - 2.0L		Halogen Headlamps.....	297
EcoBlue, Van.....	351	Central High Mounted Stoplamp.....	300
Air Conditioning System.....	351	Front Fog Lamps.....	299
Brake System.....	354	Headlamp.....	298
Diesel Exhaust Fluid (AdBlue) Tank.....	353	Interior Lamp.....	301
Engine.....	352	License Plate Lamp.....	301
Fuel Tank.....	353	Reading Lamps.....	302
Washer Reservoir.....	353	Rear Lamp.....	300
Capacities and Specifications - 2.2L		Side Repeater.....	299
Duratorq-TDCi Diesel, Bus.....	354	Vanity Mirror Lamp.....	302
Air Conditioning System.....	354	Changing a Bulb - Vehicles With:	
Brake System.....	357	Halogen Projector Headlamps.....	302
Engine.....	355	Central High Mounted Stoplamp.....	305
Fuel Tank.....	356	Front Fog Lamps.....	304
Washer Reservoir.....	356	Headlamp.....	303
Capacities and Specifications - 2.2L		Interior Lamp.....	306
Duratorq-TDCi Diesel, Van.....	357	License Plate Lamp.....	306
Air Conditioning System.....	357	Reading Lamps.....	307
Brake System.....	360	Rear Lamp.....	305
Engine.....	358	Side Repeater.....	304
Fuel Tank.....	359	Vanity Mirror Lamp.....	307
Washer Reservoir.....	359	Changing a Bulb - Vehicles With: High	
Capacities and Specifications.....	344	Intensity Discharge Headlamps.....	307
Capacities and Specifications - Plug-In		Central High Mounted Stoplamp.....	310
Hybrid Electric Vehicle (PHEV),		Front Fog Lamps.....	309
Bus.....	360	Headlamp.....	308
Air Conditioning System.....	360	Interior Lamp.....	311
Brake System.....	363	License Plate Lamp.....	311
		Reading Lamps.....	312
		Rear Lamp.....	310

Index

Side Repeater.....	309	Cleaning the Interior.....	314
Vanity Mirror Lamp.....	312	Fabric, Carpets, Cloth Seats, Headliners	
Changing a Fuse.....	277	and Floor Mats.....	314
Fuses.....	277	Instrument Cluster Screens, LCD Screens	
Changing a Road Wheel.....	327	and Radio Screens.....	315
Dissimilar Spare Wheel and Tire Assembly		Leather Interior.....	315
Information.....	328	Mirrors.....	316
Front Jacking Points.....	331	Rear Windows.....	315
Installing a Road Wheel.....	333	Seatbelts.....	314
Locking Lug Nuts.....	328	Storage Compartments, Cup Holders and	
Rear Jacking Points.....	332	Ashtrays.....	316
Removing a Road Wheel.....	333	Suede Micro Fiber Fabric.....	315
Removing the Spare Wheel.....	329	Cleaning the Wheels.....	316
Vehicle Jack.....	328	Clearing All MyKeys.....	49
Changing the 12V Battery.....	292	Climate Control.....	99
Removing the Battery.....	293	Clutch Fluid Check - Manual	
Replacing the Battery.....	294	Transmission.....	292
Changing the Front Wiper Blades.....	295	Cold Weather Precautions.....	234
Changing the Rear Wiper Blades.....	296	Connected Vehicle.....	372
Changing the Vehicle Wi-Fi Hotspot		Connecting the Vehicle to a Mobile	
Name or Password.....	376	Network.....	372
Charge Port Indicators.....	166	Connected Vehicle Limitations.....	372
Charging Equipment Indicators.....	164	Connected Vehicle Requirements.....	372
Charging Equipment		Connected Vehicle – Troubleshooting -	
Requirements.....	164	Vehicles With: Modem.....	373
Charging the High Voltage Battery.....	163	Connected Vehicle – Troubleshooting -	
AC Charging.....	163	Vehicles With: SYNC 3/SYNC 2.5.....	374
Checking Local Hazard Information		Connecting a Bluetooth® Device - Van,	
Status.....	221	Vehicles With: SYNC 2.5.....	385
Checking MyKey System Status.....	50	Connecting a Bluetooth® Device - Van,	
Checking the Wiper Blades.....	295	Vehicles Without: SYNC.....	385
Child Restraint Positioning.....	25	Pairing a Device.....	385
i-Size Child Restraints.....	29	Connecting the Vehicle to a Mobile	
ISOFIX Child Restraints.....	27	Network.....	372
Recommended Child Restraints.....	28	Connecting FordPass to the Modem.....	372
Child Safety.....	21	Enabling and Disabling the Modem.....	372
Child Safety Locks.....	33	What Is the Modem.....	372
Left-Hand Side.....	33	Connecting the Vehicle to a Wi-Fi	
Right-Hand Side.....	33	Network.....	373
Cigar Lighter.....	121	Coolant Check	
Cleaning the Exterior.....	313	See: Engine Coolant Check - Diesel.....	288
BodyPaintwork Preservation.....	314	Coolant Check - Plug-In Hybrid Electric	
Cleaning Stripes or Graphics.....	314	Vehicle (PHEV).....	290
Cleaning the Chrome Trim.....	313	Adding Coolant.....	291
Cleaning the Exterior Precautions.....	313	Cornering Lamps.....	71
Cleaning the Headlamps.....	313	Creating a MyKey.....	48
Cleaning the Rear Window.....	313	MyKey Information Messages.....	48

Index

Creating a Vehicle Wi-Fi Hotspot.....	376	Digital Radio - Van, Vehicles Without:	
Connecting a Device to the Wi-Fi		SYNC.....	383
Hotspot.....	376	Selecting a Radio Source.....	383
Finding the Wi-Fi Hotspot Name and		Direction Indicators.....	71
Password.....	376	Doors and Locks.....	52
Cross Traffic Alert.....	209	Draining the Fuel Filter Water Trap - 2.0L	
Cross Traffic Alert behavior when trailer is		Diesel.....	287
attached.....	211	Draining the Fuel Filter Water Trap - 2.2L	
Cross Traffic Alert Indicator.....	211	Diesel.....	287
Cross Traffic Alert Information		Drive Control - Diesel.....	220
Messages.....	212	Selectable Drive Modes.....	220
Cross Traffic Alert System		Selectable Drive Modes Information	
Limitations.....	211	Messages.....	220
Cross Traffic Alert System Sensors.....	211	Driver Airbag.....	36
Switching the System On and Off.....	211	Driving Aids.....	200
Using Cross Traffic Alert.....	209	Driving Hints.....	234
Cruise Control.....	190	Driving Through Water.....	235
Principle of Operation.....	190		
Cruise control		E	
See: Using Cruise Control.....	190	Eco.....	215
Cup Holders.....	123	Eco Mode.....	215
D		Efficient Drive Mode.....	215
Data Recording.....	11	Economical Driving.....	234
Comfort, Convenience and Entertainment		Electromagnetic Compatibility.....	423
Data.....	13	Emergency Assistance.....	41
Event Data.....	12	Emergency Equipment.....	242
Service Data.....	12	Enabling Local Hazard Information.....	221
Services That Third Parties Provide.....	13	End User License Agreement.....	426
Services That We Provide.....	13	VEHICLE SOFTWARE END USER LICENSE	
Vehicles With a Modem.....	13	AGREEMENT (EULA)	426
Vehicles With an Emergency Call		Engine Block Heater.....	128
System.....	14	Using the Engine Block Heater.....	129
Vehicles With SYNC.....	14	Engine Coolant Check - Diesel.....	288
Declaration of Conformity.....	451	Adding Coolant.....	289
Device Holder.....	125	Engine Cooling Fan - Diesel.....	288
Diesel Particulate Filter.....	157	Engine Cooling Fan - Plug-In Hybrid	
Diesel Particulate Filter Automatic		Electric Vehicle (PHEV).....	288
Regeneration.....	158	Engine Emission Control.....	151
Diesel Particulate Filter Information		Engine Immobilizer	
Messages.....	162	See: Passive Anti-Theft System.....	61
Diesel Particulate Filter Manual		Engine Oil Check.....	286
Regeneration.....	160	Adding Engine Oil.....	287
On-Board Diagnostics System.....	158	Engine Oil Dipstick - 1.0L	
Digital Radio - Van, Vehicles With: SYNC		EcoBoost™.....	286
2.5.....	384	Engine Oil Dipstick - 2.0L EcoBlue.....	286
Using the Radio.....	384	Engine Oil Dipstick - 2.2L Diesel.....	286

Index

Entertainment.....	401	Object Distance Indicator.....	181
Playing Music From a USB or Media Player.....	403	Front Wiper Blades See: Changing the Front Wiper Blades.....	295
Streaming Music From a Bluetooth Device.....	402	Fuel and Refueling.....	142
Using the Radio.....	401	Fuel Burning Heater See: Auxiliary Heater.....	102
Environment.....	17	Fuel Consumption Figures - 2.0L EcoBlue.....	369
ERA-GLONASS.....	43	Fuel Consumption Figures - 2.2L Duratorq-TDCi Diesel.....	370
After an Emergency Call.....	45	Fuel Consumption Figures.....	369
Backup Battery Replacement.....	45	European Directive 1999/94/EC.....	369
Crash or Rollover.....	44	Fuel Economy and CO2 Emissions.....	369
Test Mode.....	45	Fuel Consumption Figures - Plug-In Hybrid Electric Vehicle (PHEV).....	371
Using Manual Emergency Call.....	44	Fuel Consumption.....	150
Event Data Recording See: Data Recording.....	11	Advertised Capacity.....	150
Exterior Mirrors - Bus.....	75	Fuel Economy.....	150
Folding the Mirrors.....	75	Fuel Filler Funnel Location.....	143
Power Exterior Mirrors.....	75	Fuel Filter Service Indicator Check - 2.0L EcoBlue/2.2L Diesel.....	295
Exterior Mirrors - Van.....	76	Fuel Quality - 2.0L EcoBlue, Hydrotreated Vegetable Oil.....	143
Folding the Mirrors.....	77	Fuel Quality - Diesel.....	143
Power Exterior Mirrors.....	76	Long-Term Storage.....	143
F		Fuel Quality - Gasoline.....	142
Fan See: Engine Cooling Fan - Diesel.....	288	Long-Term Storage.....	143
See: Engine Cooling Fan - Plug-In Hybrid Electric Vehicle (PHEV).....	288	Fuel Shutoff.....	237
Fastening the Seatbelts.....	34	Ignition Switch.....	237
Using Seatbelts During Pregnancy.....	34	Keyless Starting.....	237
First Aid Kit.....	242	Fuse Box Locations - 2.0L EcoBlue, Plug-In Hybrid Electric Vehicle (PHEV).....	243
Flat Tire See: Changing a Road Wheel.....	327	Body Control Module.....	243
Flat Tire Inflation See: Tire Sealant and Inflator Kit.....	317	Engine Compartment Fuse Box.....	243
Floor Mats.....	235	Passenger Compartment Fuse Box.....	243
Fog Lamps - Front See: Front Fog Lamps.....	69	Pre-fuse Box.....	243
Fog Lamps - Rear See: Rear Fog Lamps.....	70	Fuse Box Locations - 2.2L Diesel.....	243
Folding Tray.....	123	Body Control Module.....	244
Front Fog Lamps.....	69	Engine Compartment Fuse Box.....	243
Front Fog Lamp Indicator.....	70	Passenger Compartment Fuse Box.....	244
Switching the Front Fog Lamps On or Off.....	69	Pre-fuse Box.....	244
Front Parking Aid.....	180	Fuses.....	243
Front Parking Aid Information Messages.....	182	Fuse Specification Chart - 2.0L EcoBlue.....	256
		Body Control Module.....	264
		Engine Compartment Fuse Box.....	256
		Passenger Compartment Fuse Box.....	259

Index

Pre-fuse Box.....	263	Geofencing Indicators.....	422
Fuse Specification Chart - 2.2L		Geofencing Limitations.....	422
Diesel.....	267	Geofencing Precautions.....	422
Body Control Module.....	275	Geofencing – Troubleshooting.....	422
Engine Compartment Fuse Box.....	267	Geofencing – Warning Lamps.....	422
Passenger Compartment Fuse Box.....	270	Global Opening and Closing.....	75
Pre-fuse Box.....	274	Global Closing.....	75
Fuse Specification Chart - Plug-In Hybrid		Global Opening.....	75
Electric Vehicle (PHEV).....	245		
Body Control Module.....	253		
Engine Compartment Fuse Box.....	245		
Passenger Compartment Fuse Box.....	248		
Pre-fuse Box.....	252		
G		H	
Gasoline Particulate Filter.....	156	Handbrake	
Gasoline Particulate Filter Information		See: Parking Brake - Automatic	
Messages.....	157	Transmission.....	173
Gasoline Particulate Filter		See: Parking Brake - Manual	
Regeneration.....	156	Transmission.....	174
Gasoline Particulate Filter Warning Lamps		Hazard Flashers.....	237
and Indicators.....	157	Headlamp Exit Delay.....	68
Gauges - Excluding: Plug-In Hybrid		Headlamp Leveling.....	70
Electric Vehicle (PHEV).....	80	Headlamp Removal	
Automatic Transmission Position		See: Removing a Headlamp.....	297
Indicators.....	81	Headrest	
Engine Coolant Temperature Gauge.....	81	See: Head Restraints.....	107
Fuel Gauge.....	81	Head Restraints.....	107
Information Display.....	80	Adjusting the Head Restraint.....	108
Speedometer.....	81	Removing the Head Restraint.....	108
Tachometer.....	80	Heated Exterior Mirrors - Vehicles With:	
Gauges - Plug-In Hybrid Electric Vehicle		Heated Rear Window.....	102
(PHEV).....	78	Heated Exterior Mirrors - Vehicles	
Automatic Transmission Position		Without: Heated Rear Window.....	101
Indicators.....	79	Heated Rear Window.....	101
Fuel Gauge.....	79	Heated Seats - 2.0L EcoBlue, Plug-In	
High Voltage Battery Level Indicator.....	79	Hybrid Electric Vehicle (PHEV).....	115
Information Display.....	78	Heated Seats - 2.2L Diesel.....	116
Power Gauge.....	78	Heated Windshield.....	101
Speedometer.....	79	Heating	
Gearbox		See: Climate Control.....	99
See: Transmission.....	167	High Voltage Battery.....	163
General Information on Radio		Charging the High Voltage Battery.....	163
Frequencies.....	46	High Voltage Battery Precautions.....	164
Geofencing.....	422	High Voltage Shutoff Switch.....	166
Geofencing – Troubleshooting.....	422	Hill Start Assist.....	174
		Switching the System On and Off.....	175
		Using Hill Start Assist.....	175

Index

Hints on Controlling the Interior	
Climate.....	100
Defogging or Clearing the Windshield of Thin Ice.....	101
Defogging the Side Windows in Cold Weather.....	101
General Hints.....	100
Quickly Cooling the Interior.....	100
Quickly Heating the Interior.....	100
Recommended Settings for Cooling.....	101
Recommended Settings for Heating.....	100
Hints on Driving With Anti-Lock Brakes.....	173
Hood Lock	
See: Opening and Closing the Hood - LHD.....	281
See: Opening and Closing the Hood - RHD.....	279
How Does Geofencing Work.....	422
How Does the Rear Occupant Alert System Work.....	118
Hybrid Vehicle Frequently Asked Questions.....	132
Hybrid Vehicle Operation - Mild Hybrid Electric Vehicle (MHEV).....	131
I	
Ignition Switch.....	127
Starting the Electric Motor.....	130
Switching the Ignition Off.....	130
Switching the Ignition On.....	130
Switching the Ignition to Accessory Mode.....	130
Information Displays.....	87
General Information.....	87
Information Messages.....	92
Installing Child Restraints.....	21
Attaching a Child Restraint With a Support Leg.....	24
Attaching a Child Restraint With Top Tethers.....	24
Booster Seats.....	22
Child Restraints for Different Mass Groups.....	21
ISOFIX Anchor Points.....	23
Instrument Cluster.....	78
Instrument Lighting Dimmer.....	68
Instrument Panel - LHD.....	19
Instrument Panel - RHD.....	18
Intelligent Speed Limiter.....	200
Principle of Operation.....	200
Using Intelligent Speed Limiter.....	201
Interior Lamps - Bus.....	72
Interior Lamp Function.....	72
Switching All of the Interior Lamps On and Off.....	72
Switching the Front Interior Lamps On and Off.....	72
Switching the Rear Interior Lamps On and Off.....	72
Interior Lamps - Van.....	73
Courtesy Lamp.....	73
Entrance Lamps.....	73
Reading Lamps.....	73
Interior Mirror - Vehicles With: Auto-Dimming Interior Mirror/Interior Mirror With Camera Display.....	77
Interior Mirror - Vehicles With: Interior Mirror.....	77
Introduction.....	9
J	
Jump Starting the Vehicle - 2.0L EcoBlue.....	239
Connecting the Jumper Cables.....	239
Starting the Engine.....	240
Jump Starting the Vehicle - 2.2L Duratorq-TDCi Diesel.....	237
Connecting the Jumper Cables.....	238
Starting the Engine.....	239
K	
Keys and Remote Controls.....	46
L	
Lane Keeping System.....	202
Lane Keeping System Display.....	204
Lane Keeping System Messages.....	205
Lane Keeping System Settings.....	203
Lane Keeping System Warning Lamps and Indicators.....	204

Index

Switching Lane Keeping System On or Off.....	203
Liftgate.....	60
Lighting Control.....	66
Headlamp Flasher.....	67
Headlamp High Beam.....	67
Lighting Control Positions.....	66
Parking Lamps.....	66
Lighting.....	66
General Information.....	66
Load Carriers	
See: Roof Racks and Load Carriers - Vehicles With: Integrated Roof Rack.....	224
See: Roof Racks and Load Carriers - Vehicles Without: Integrated Roof Rack.....	226
Load Carrying.....	222
General Information.....	222
Load Retaining Fixtures - Van.....	226
Securing Cargo.....	227
Local Hazard Information.....	221
Local Hazard Information Precautions.....	221
Locating the Charge Port.....	166
Locating the Charging Equipment.....	164
Locating the Geofencing Display.....	422
Locking and Unlocking - Vehicles With:	
Manual Liftgate.....	52
Autolock.....	54
Auto Relock.....	54
Autounlock.....	54
Configurable Unlocking.....	55
Double Locking the Doors.....	52
Locking and Unlocking the Doors From Inside.....	53
Locking the Doors.....	52
Opening the Sliding Door.....	53
Slam Locking.....	53
Unlocking the Doors.....	52
Unlocking the Doors (One-Stage Unlock).....	55
Unlocking the Doors (Two-Stage Unlock).....	55
Locking and Unlocking - Vehicles With:	
Rear Cargo Doors.....	55
Autolock.....	58
Auto Relock.....	58
Autounlock.....	58
Configurable Unlocking.....	59
Double Locking the Doors.....	55
Locking and Unlocking the Doors From Inside.....	56
Locking the Doors.....	55
Opening the Double Rear Doors.....	57
Opening the Sliding Door.....	56
Slam Locking.....	57
Unlocking the Doors.....	56
Unlocking the Doors (One-Stage Unlock).....	59
Unlocking the Doors (Two-Stage Unlock).....	59
Luggage Anchor Points - Bus.....	223
Securing Luggage.....	223
Lug Nuts	
See: Changing a Road Wheel.....	327
Lug Nuts.....	343
Locking Lug Nuts.....	343
Lug Nut Torque.....	343

M

Maintenance.....	279
General Information.....	279
Manual Climate Control.....	99
Directing Air to the Footwell Air Vents.....	100
Directing Air to the Instrument Panel Air Vents.....	100
Directing Air to the Windshield Air Vents.....	100
Setting the Blower Motor Speed.....	99
Setting the Temperature.....	100
Switching Maximum Cooling On and Off.....	99
Switching Maximum Defrost On and Off.....	99
Switching the Air Conditioning On and Off.....	99
Switching the Climate Control On and Off.....	99
Switching the Recirculated Air On and Off.....	99
Manual Liftgate.....	60
Closing the Liftgate.....	60
Opening the Liftgate.....	60
Unlocking the Liftgate.....	60

Index

Manual Seats.....	108
Adjusting the Armrest.....	110
Adjusting the Height of the Driver's Seat.....	109
Adjusting the Lumbar Support.....	109
Moving the Seat Backward and Forward.....	108
Recline Adjustment.....	109
Seat Cushion Adjustment.....	109
Manual Transmission.....	167
General Information.....	167
Shifting Into Reverse Gear.....	167
Message Center	
See: Information Displays.....	87
Mirrors	
See: Windows and Mirrors.....	74
Mobile Communications Equipment.....	16
MyKey Settings.....	47
Configurable Settings.....	47
Non-Configurable Settings.....	47
MyKey – Troubleshooting.....	51
What is an admin key?.....	51
Why can I not clear the MyKeys?.....	51
Why can I not create a MyKey?.....	51
Why can I not program a MyKey?.....	51
Why does the MyKey distance not accumulate?.....	51
MyKey™.....	47
Principle of Operation.....	47

N

Navigation.....	405
Changing the Format of the Map.....	406
Live Traffic.....	409
Navigation Map Updates.....	409
Route Guidance.....	407
Setting a Destination.....	406
Zoom.....	406

O

Oil Check	
See: Engine Oil Check.....	286
Opening and Closing the Hood -	
LHD.....	281
Closing the Hood.....	282
Opening the Hood.....	281

Opening and Closing the Hood -	
RHD.....	279
Closing the Hood.....	281
Opening the Hood.....	279
Opening the Hood if the Vehicle Battery has no Charge.....	280
Overhead Console.....	123
Overhead Storage Compartment.....	123

P

Parking Aids.....	178
Principle of Operation.....	178
Parking Brake - Automatic Transmission.....	173
Parking Brake - Manual Transmission.....	174
Passenger Airbag.....	37
Passive Anti-Theft System.....	61
Arming the Vehicle Immobilizer.....	61
Coded Keys.....	61
Disarming the Vehicle Immobilizer.....	61
Principle of Operation.....	61
PATS	
See: Passive Anti-Theft System.....	61
Pedestrian Alert System.....	40
Pedestrian Alert System – Troubleshooting.....	40
Pedestrian Alert System – Troubleshooting.....	40
Pedestrian Alert System – Information Messages.....	40
Personalized Settings.....	91
Chimes.....	92
Language.....	91
Measure Unit.....	91
Temperature Unit.....	91
Tire Pressure Unit.....	91
Phone.....	403
Android Auto.....	405
Apple CarPlay.....	405
Pairing Your Cell Phone for the First Time.....	404
Text Messaging.....	404
Using Your Cell Phone.....	404
Playing Media From a USB Device - Van, Vehicles With: SYNC 2.5.....	387
Selecting the USB Device.....	387

Index

Supported File Formats.....	387
Playing Media From a USB Device - Van,	
Vehicles Without: SYNC.....	386
Selecting the USB Device.....	386
Supported Audio File Formats.....	386
Plug-In Hybrid Vehicle Operation.....	131
Drive Mode Control.....	131
Drive Modes.....	131
Selecting a Drive Mode.....	131
Power Door Locks	
See: Locking and Unlocking - Vehicles With:	
Manual Liftgate.....	52
See: Locking and Unlocking - Vehicles With:	
Rear Cargo Doors.....	55
Power Seats.....	110
Power Lumbar.....	111
Power Steering Fluid Check - 2.2L	
Diesel.....	292
Adding Power Steering Fluid.....	292
Power Windows.....	74
Bounce-Back.....	74
One-Touch Close.....	74
One-Touch Open.....	74
Pre-Collision Assist.....	216
Distance Alert.....	217
Distance Indication.....	217
Pre-Collision Assist Information	
Messages.....	219
Pre-Collision Assist System Sensors.....	218
Pre-Collision Assist Warning Lamp.....	218
Switching Active Braking On and Off.....	217
Programming a MyKey.....	48
Protecting the Environment.....	17
Puncture	
See: Changing a Road Wheel.....	327
R	
REACH.....	15
Rear Fog Lamps.....	70
Rear Fog Lamp Indicator.....	70
Switching the Rear Fog Lamps On or	
Off.....	70
Rear Loadspace Hatches.....	224
Rear Occupant Alert System Audible	
Warnings.....	119
Rear Occupant Alert System	
Indicators.....	119
Rear Occupant Alert System	
Limitations.....	118
Rear Occupant Alert System	
Precautions.....	118
Rear Occupant Alert System.....	118
Rear Parking Aid.....	178
Object Distance Indicator.....	179
Rear Parking Aid Information	
Messages.....	180
Rear Passenger Climate Controls.....	101
Adjusting the Blower Motor Speed.....	101
Directing Air to the Footwell Air Vents.....	101
Directing Air to the Overhead Air	
Vents.....	101
Directing Air to the Overhead Air Vents and	
the Footwell Air Vents.....	101
Rear Seats.....	111
Double Cab.....	115
Easy Entry.....	112
Folding the Seat Backrest.....	111
Installing the Seats.....	114
Recline Adjustment.....	111
Removing the Seats.....	112
Seat Storage.....	115
Rear View Camera.....	186
Enhanced Parking Aids or Park Pilot.....	189
Rear View Camera Positions.....	187
Using the Rear View Camera.....	187
Rear View Camera	
See: Rear View Camera.....	186
Rear Window Wiper and Washers.....	65
Rear Window Washer.....	65
Rear Window Wiper.....	65
Rear Wiper Blades	
See: Changing the Rear Wiper Blades.....	296
Reduced Engine Performance.....	234
Refueling - Excluding: Plug-In Hybrid	
Electric Vehicle (PHEV).....	147
System Warnings.....	149
Refueling - Plug-In Hybrid Electric	
Vehicle (PHEV).....	145
Fuel Filler Door Override Cord.....	147
Fuel System Information Messages.....	147
Remote Control.....	46
Reprogramming the Unlocking	
Function.....	46
Remote Start.....	104
About Remote Start.....	104

Index

Enabling Remote Start.....	104
Remotely Starting the Engine.....	105
Remotely Stopping the Engine.....	105
Remote Start Limitations.....	104
Remote Start Settings.....	105
Removing a Headlamp.....	297
Repairing Minor Paint Damage.....	316
Replacement Parts	
Recommendation.....	15
Collision Repairs.....	15
Scheduled Maintenance and Mechanical Repairs.....	15
Warranty on Replacement Parts.....	15
Replacing a Lost Key or Remote Control.....	46
Restarting the Engine.....	133
Restarting the Engine in Gear.....	137
Restarting the Engine in Neutral.....	137
Roadside Emergencies.....	237
Roof Racks and Load Carriers - Vehicles With: Integrated Roof Rack.....	224
Raising and Lowering the Crossbars.....	224
Roof Racks and Load Carriers - Vehicles Without: Integrated Roof Rack.....	226
Running-In	
See: Breaking-In.....	235
Running Out of Fuel.....	144
Adding Fuel From a Portable Fuel Container.....	144
Filling a Portable Fuel Container.....	144
S	
Safety Precautions.....	142
Seatbelt Height Adjustment.....	35
Seatbelt Reminder.....	35
Turning the Seatbelt Reminder Off.....	35
Seatbelts.....	34
Seats.....	107
Security.....	61
Selective Catalytic Reductant System.....	151
AdBlue® Consumption.....	154
AdBlue® Guidelines.....	152
Checking the AdBlue® Level.....	154
Checking the AdBlue® Level Status.....	154
Filling the AdBlue® Tank.....	152
Filling the AdBlue® Tank Using a Container.....	154
Filling the AdBlue® Tank Using a Fuel Station Pump.....	152
Selective Catalytic Reductant System Information Messages.....	155
Selective Catalytic Reductant System Warning Lamp.....	155
Self-Leveling Suspension.....	220
Air Suspension.....	220
Settings.....	410
Ambient Lighting.....	410
Android Auto.....	410
Apple CarPlay.....	411
Audio.....	411
Automatic Updates.....	411
Bluetooth.....	411
Clock.....	411
Display.....	411
Emergency Assistance.....	411
FordPass.....	411
General.....	411
Mobile Apps.....	411
Navigation.....	411
Phone.....	411
Seats.....	411
Sound.....	411
Valet Mode.....	411
Vehicle.....	411
Voice Control.....	411
Wi-Fi.....	411
Side Airbags.....	38
Side Curtain Airbags.....	39
Side Sensing System.....	182
Object Distance Indicator.....	183
Sitting in the Correct Position.....	107
Snow Chains	
See: Using Snow Chains - Bus.....	323
See: Using Snow Chains - Shuttle Bus.....	324
See: Using Snow Chains - Van.....	321
Spare Wheel	
See: Changing a Road Wheel.....	327
Special Notices.....	15
Speed Control	
See: Cruise Control.....	190
Speed Limiter.....	200
Principle of Operation.....	200
Using Speed Limiter.....	200

Index

Stability Control.....	177
Principle of Operation.....	177
Starter Switch	
See: Ignition Switch.....	127
Starting a Diesel Engine.....	128
Failure to Start.....	128
Starting and Stopping the Electric Motor.....	130
Starting and Stopping the Engine.....	127
General Information.....	127
Starting the Electric Motor.....	130
Steering Wheel Lock.....	127
Locking the Steering Wheel.....	127
Unlocking the Steering Wheel.....	128
Steering Wheel.....	62
Stopping the Engine.....	133
Stopping the Engine in Gear.....	136
Stopping the Engine in Neutral.....	136
Storage Compartments.....	123
Streaming Bluetooth Audio - Van, Vehicles With: SYNC 2.5.....	386
Streaming Bluetooth Audio - Van, Vehicles Without: SYNC.....	385
Selecting a Bluetooth Source.....	385
Supplementary Restraints System.....	36
Principle of Operation.....	36
Switching Auto-Start-Stop On and Off.....	133
Switching Off the Electric Motor.....	130
Switching Off the Engine.....	128
Vehicles With a Turbocharger.....	128
Switching Rear Occupant Alert System On and Off.....	118
Switching the Passenger Airbag On and Off.....	37
Switching the Passenger Airbag Off.....	37
Switching the Passenger Airbag On.....	38
Symbols Glossary.....	9
SYNC™ 3.....	393
General Information.....	393
SYNC™ 3 Troubleshooting.....	412
Additional Information and Assistance.....	421
Apps.....	418
Navigation.....	417
Phone.....	416
Resetting the System.....	421
USB and Bluetooth Audio.....	413

Voice Recognition.....	412
Wi-Fi Connectivity.....	420

T

Technical Specifications

See: Capacities and Specifications.....	344
Tire Care.....	320
Repositioning the Wheels and Tires.....	320
Tire Inflation When Punctured	
See: Tire Sealant and Inflator Kit.....	317
Tire Pressure Monitoring System.....	325
Changing a Road Wheel.....	327
How Temperature Affects Tire Pressures.....	325
Removing a Tire.....	327
System Malfunction.....	326
System Operation Using the Temporary Spare Wheel.....	327
System Warning Lamps.....	325
Tire Pressure Monitoring System Reset Procedure.....	326
Tire Pressures - Bus.....	340
Tire Pressures - Shuttle Bus.....	338
Tire Pressures - Van.....	334
Tire Repair Kit	
See: Tire Sealant and Inflator Kit.....	317
Tire Sealant and Inflator Kit.....	317
After Using the Tire Sealant and Inflator Kit.....	319
Using the Tire Sealant and Inflator Kit.....	318
Tires	
See: Wheels and Tires.....	317
Towbar Dimensions.....	346
Maximum Permissible Trailer Vertical Weight.....	347
Towing a Trailer - Excluding: Plug-In Hybrid Electric Vehicle (PHEV).....	230
Trailer Lighting.....	231
When towing a trailer.....	230
Towing a Trailer - Plug-In Hybrid Electric Vehicle (PHEV).....	230
Towing Points.....	240
Front Towing Point.....	240
Rear Towing Point.....	241
Towing Eye Location.....	241

Index

Towing the Vehicle on Four Wheels - Automatic Transmission, Excluding: Plug-In Hybrid Electric Vehicle (PHEV).....	231
Emergency Towing.....	231
Towing the Vehicle on Four Wheels - Manual Transmission.....	232
Towing the Vehicle on Four Wheels - Plug-In Hybrid Electric Vehicle (PHEV).....	232
Towing.....	230
Traction Control.....	176
Principle of Operation.....	176
Traffic Sign Recognition.....	212
Principle of Operation.....	212
Using Traffic Sign Recognition.....	213
Trailer Sway Control.....	231
Transmission.....	167
Trip Computer.....	89
Average Fuel.....	90
Average Speed.....	90
Distance to Empty.....	90
Instantaneous Fuel.....	90
Personalization.....	90
Resetting the Trip Computer.....	89
Trip Odometer.....	90
Trip Timer.....	90

U

Under Hood Overview - 2.0L EcoBlue.....	283
Under Hood Overview - 2.2L Diesel.....	284
Under Hood Overview - Plug-In Hybrid Electric Vehicle (PHEV).....	285
Under Seat Storage - Mild Hybrid Electric Vehicle (MHEV), Vehicles With: Passenger Double Seat/Rear Climate Control.....	125
Front Passenger Seat.....	125
Under Seat Storage - Vehicles With: Passenger Double Seat, Vehicles Without: Rear Climate Control, Excluding: Mild Hybrid Electric Vehicle (MHEV).....	124
Front Passenger Seat.....	124
Unique Driving Characteristics.....	131

USB Port.....	387
Using Adaptive Cruise Control.....	191
Adaptive Cruise Control Indicator.....	197
Adaptive Cruise Control Information Messages.....	197
Adaptive Cruise Control System Sensors.....	195
Adaptive Cruise Control With Speed Sign Recognition.....	198
Adaptive Cruise Control With Speed Sign Recognition Information Messages.....	199
Automatic Cancellation.....	194
Canceling the Set Speed.....	194
Changing the Set Speed.....	193
Detection Issues.....	194
Following a Vehicle.....	192
Hilly Condition Usage.....	194
Overriding the System.....	193
Resuming the Set Speed.....	194
Setting the Adaptive Cruise Speed.....	192
Setting the Gap Distance.....	193
Switching Adaptive Cruise Control Off.....	194
Switching Adaptive Cruise Control On.....	192
Switching Between the Cruise Control Modes.....	198
Switching to Normal Cruise Control.....	196
System Not Available.....	195
Using Cruise Control.....	190
Canceling the Set Speed.....	191
Changing the Set Speed.....	190
Resuming the Set Speed.....	191
Setting the Cruise Speed.....	190
Switching the System Off.....	190
Switching the System On.....	190
Using Geofencing.....	422
Using Snow Chains - Bus.....	323
Alternative Wheels for Snow Chain or Cable Use.....	323
Using Snow Chains - Shuttle Bus.....	324
Alternative Wheels for Snow Chain or Cable Use.....	324
Using Snow Chains - Van.....	321
Alternative Wheels for Snow Chain or Cable Use.....	322
Using Stability Control.....	177

Index

Using Traction Control.....	176	Change Engine Oil Indicator.....	83
Switching the System Off and On Using the		Change Engine Oil Now Indicators.....	83
Information Display Controls.....	176	Coolant Temperature Warning Lamp.....	83
Switching the System Off Using the		Cruise Control Indicator.....	83
Switch.....	176	Diesel Exhaust Fluid Warning Lamp.....	83
Using Voice Recognition.....	390	Direction Indicator.....	83
Apps.....	400	Door Ajar Warning Lamp.....	83
Automatic Blower Motor Speed		Engine Warning Lamps.....	83
Reduction.....	401	Fasten Seatbelt Warning Lamp.....	84
Entertainment.....	396	Front Fog Lamp Indicator.....	84
General.....	395	Frost Warning Lamp.....	84
Navigation.....	399	Glow Plug Indicator.....	84
Phone.....	398	Headlamp High Beam Indicator.....	84
Phone Voice Service.....	390	Lamps on Indicator.....	84
Voice Settings.....	400	Lane Keeping Alert Indicator.....	84
Using Winter Tires.....	321	Low Fuel Level Warning Lamp.....	84
		Low Tire Pressure Warning Lamp.....	84
		Oil Pressure Warning Lamp.....	84
		Pre-Collision Assist Warning Lamp.....	85
		Ready to Drive Indicator.....	85
		Rear Fog Lamp Indicator.....	85
		Secondary Interior Heater Indicator.....	85
		Shift Indicator.....	85
		Stability Control and Traction Control	
		Indicator.....	85
		Stability Control and Traction Control Off	
		Warning Lamp.....	85
		Stop Safely Warning Lamp.....	85
		Vehicle Plugged in Indicator.....	85
		Water In Fuel Warning Lamp.....	85
		Warning Triangle.....	242
		Washer Fluid Check.....	295
		Washers	
		See: Cleaning the Exterior.....	313
		See: Wipers and Washers.....	63
		What Is a Connected Vehicle.....	372
		What Is Auto-Start-Stop.....	133
		What Is Geofencing.....	422
		What Is Local Hazard Information.....	221
		What Is the High Voltage Battery.....	163
		What Is the Pedestrian Alert	
		System.....	40
		What Is the Rear Occupant Alert	
		System.....	118
		Wheel Nuts	
		See: Changing a Road Wheel.....	327
		Wheels and Tires.....	317
		General Information.....	317

V	
Vehicle Care.....	313
Vehicle Dimensions - Bus.....	344
Vehicle Dimensions - Van.....	345
Vehicle Identification Number.....	348
Vehicle Identification Plate.....	347
Vehicle Wi-Fi Hotspot.....	376
Ventilation	
See: Climate Control.....	99
Vents	
See: Air Vents.....	99
VIN	
See: Vehicle Identification Number.....	348

W	
Warning Lamps and Indicators.....	81
12V Battery Charging Condition Warning	
Lamp.....	81
Adaptive Cruise Control Indicator.....	82
Airbag Warning Lamp.....	82
Anti-Lock Brake System Warning	
Lamp.....	82
Automatic Headlamp High Beam	
Indicator.....	82
Auto-Start-Stop Indicator.....	82
Blind Spot Information System	
Indicator.....	82
Brake Pad Wear Warning Lamp.....	82
Brake System Warning Lamp.....	82

Index

Windows and Mirrors.....	74
Windshield Washers.....	65
Windshield Wipers.....	63
Intermittent Wipe.....	63
Winter Tires	
See: Using Winter Tires.....	321
Wiper Blades	
See: Checking the Wiper Blades.....	295
Wipers and Washers.....	63
Wrong Way Alert.....	213
Switching Wrong Way Alert On or	
Off.....	214
Wrong Way Alert Information	
Messages.....	214

