



---

**2020 - 2023 MY OBD System Operation  
Summary for Gasoline Engines  
(PCED Pinpoint Test)**

**\*\* NOTE:** In this document, a monitor or sensor is considered OK if there are no DTCs stored for that component or system at the time the monitor is running.

| <b>CATALYST MONITOR OPERATION:</b> |  |
|------------------------------------|--|
| DTCs                               | P0420 - Catalyst System Efficiency Below Threshold, Bank 1 (or Y-pipe),<br>P0430 - Catalyst System Efficiency Below Threshold, Bank 2  |
| Monitor execution                  | once per driving cycle   |
| Monitor Sequence                   | The monitor will not make the pass or fail call until the following diagnostics complete: UEGO sensor (all), CMS heater, CMS circuit.  |
| Sensors OK                         | There are MIL DTCs that will disable the monitor for the rest of the key cycle if they have failed this key cycle. Sensors and systems included include: Primary O2, Rear O2, ECT, IAT, TP, VSS, CKP, MAF, fuel level, fuel pressure, barometric pressure, misfire, ignition coil, fuel monitor, VCT, evap system, electronic throttle control, intake manifold runner control, cylinder head temperature, closed loop fuel control, fuel rail pressure, fuel volume regulator, direct injector, port fuel injector, cam position, knock sensor, output shaft sensor, purge control, transmission control module data, variable displacement engine. |
| Monitoring Duration                | Approximately 700 seconds during appropriate FTP conditions (approximately 100 to 200 oxygen sensor switches are collected) for switching O2 control sensors<br><br>Approximately 10 to 20 seconds for wide range O2 index ratio monitor.<br><br>3 Decel Fuel Cutoff events for IAF catalyst monitor   |

| <b>TYPICAL IAF CATALYST MONITOR ENTRY CONDITIONS:</b>                                    |            |            |
|--|------------|------------|
| Entry condition  | Minimum    | Maximum    |
| Engine Coolant Temp  | 71 °C      | 121 °C     |
| Intake Air Temp  | -6.7 °C    | 60 °C      |
| Inferred catalyst mid-bed temperature  | 510 C      | 815 C      |
| Fuel Level   | 15%        |            |
| Air Mass Flow  |            | 2.0 lb/min |
| Minimum inferred rear O2 sensor temperature  | 800 °F     |            |
| closed loop fuel adaptation within limits  | 97%        | 103%       |
| Rear O2 sensor rich since last monitor attempt   | 0.45 volts |            |
| Rear O2 sensor lean with injectors off (voltage needed to enter monitor)                 |            | 0.1 volts  |
| Rear O2 sensor reads rich after fuel turned back on (voltage needed to complete monitor) | 0.45 volts |            |
| Engine speed   |            | 3000 RPM   |
| Vehicle speed during decel fuel cut off  |            | 5 KPH      |
| VDE not disabling cylinders during decel fuel shut off                                   |            |            |

| <b>TYPICAL MALFUNCTION THRESHOLDS:</b>               |
|--|
| Catalyst monitor index ratio > 0.75 (bank monitor)   |
| Catalyst monitor index-ratio > 0.60 (Y-pipe monitor) |

|  |
|--|
| Catalyst monitor index ratio > 0.50 for E10 to > 0.90 for E85 (flex fuel vehicles) |
|--|

Mode \$06 reporting for IAF Catalyst Monitor

The catalyst monitor results are converted to a ratio for Mode \$06 reporting to keep the same look and feel for the service technician. The equation for calculating the Mode \$06 monitor result is:

$$1 - (\text{Actual reactivation fuel} / \text{Good catalyst reactivation fuel})$$

#### J1979 CATALYST MONITOR MODE \$06 DATA

| Monitor ID | Test ID | Description   |          |
|------------|---------|---|----------|
| \$21       | \$81    | Bank 1 Oxygen Storage Capacity and max. limit (P0420) | unitless |
| \$22       | \$81    | Bank 2 Oxygen Storage Capacity and max. limit (P0430) | unitless |

### Catalyst Efficiency Monitor: Model Based (New)

#### CATALYST MONITOR OPERATION:

|                     |  |
|---------------------|--|
| DTCs                | P0420 - Catalyst System Efficiency Below Threshold, Bank 1 (or Y-pipe),<br>P0430 - Catalyst System Efficiency Below Threshold, Bank 2  |
| Monitor execution   | once per driving cycle   |
| Monitor Sequence    | The monitor will not make the pass or fail call until the following diagnostics complete: UEGO sensor response, CMS heater, CMS circuit.   |
| Sensors OK          | There are MIL DTCs that will disable the monitor for the rest of the key cycle if they have failed this key cycle. Sensors and systems included include: Primary O2, Rear O2, ECT, IAT, TP, VSS, CKP, MAF, fuel level, fuel pressure, barometric pressure, misfire, ignition coil, fuel monitor, VCT, evap system, electronic throttle control, intake manifold runner control, cylinder head temperature, closed loop fuel control, fuel rail pressure, fuel volume regulator, direct injector, port fuel injector, cam position, knock sensor, output shaft sensor, purge control, transmission control module data, variable displacement engine. |
| Monitoring Duration | 100 seconds of 'enabled time' (calibratable). Enabled time occurs during more steady 'cruise' driving conditions.  |

#### TYPICAL MODEL BASED CATALYST MONITOR ENTRY CONDITIONS:

| Entry condition                             | Minimum | Maximum |
|---|---------|---------|
| Engine Coolant Temp                         | 71 °C   | 127 °C  |
| Intake Air Temp                             | -6.7 °C | 60 °C   |
| Inferred catalyst mid-bed temperature       | 538 C   | 825 C   |
| Fuel Level                                  | 15%     |         |
| Air Mass Flow                               | 17 g/s  | 75 g/s  |
| Minimum inferred rear O2 sensor temperature | 800 °F  |         |
| Fuel adaptation learned within limits       | 97%     | 103%    |

|  |          |          |
|--|----------|----------|
| battery voltage  | 11 volts |          |
| ambient air temperature  | -6.7 °C  | 60 °C    |
| flex fuel adaptation complete  |          |          |
| Normalized engine load   | 0        | 2        |
| FAOS (outer loop control using rear O2 sensor) is enabled  | n/a      | n/a      |
| Air flow   | 17 g/s   | 75 g/s   |
| Engine speed   | 1100 rpm | 2500 rpm |
| Secondary O2 sensor voltage: (slow – heavily filtered )  | 0.45 V   | 0.85 V   |
| Rear O2 sensor voltage (fast – no filtering). Only used when the rear O2 sensor output has crossed 0.45 V < calibratable number (typically 4 to 12) times. | 0.35 V   | 0.9 V    |
| Air flow fractional change per 0.02 s loop   |          | 0.5      |
|  |          |          |

#### TYPICAL MALFUNCTION THRESHOLDS:

Catalyst gain with compensation > 1.5 (bank monitor)

Mode \$06 reporting for model based Catalyst Monitor

#### J1979 CATALYST MONITOR MODE \$06 DATA

| Monitor ID | Test ID | Description   |          |
|------------|---------|---|----------|
| \$21       | \$81    | Bank 1 Oxygen Storage Capacity and max. limit (P0420) | unitless |
| \$22       | \$81    | Bank 2 Oxygen Storage Capacity and max. limit (P0430) | unitless |

## Misfire Monitor

| Misfire Monitor Operation: |  |
|----------------------------|--|
| DTCs                       | P0300 to P0310 (general and specific cylinder misfire)<br>P033F or P1336 (noisy crank sensor, no cam/crank synchronization)<br>P0315 (unable to learn profile)<br>P0316 (misfire during first 1,000 revs after start-up)<br>P0313 (misfire detected with low fuel level) |
| Monitor execution          | Continuous, misfire rate calculated every 200 or 1000 revs   |
| Monitor Sequence           | None   |
| Sensors OK                 | CKP, CMP, MAF  |
| Monitoring Duration        | Entire driving cycle (see disablement conditions below)  |

| Typical misfire monitor entry conditions:                  |   |                                |
|--|---|--------------------------------|
| Entry condition  | Minimum   | Maximum                        |
| Time since engine start-up                                 | 0 seconds   | 0 seconds                      |
| Engine Coolant Temperature                                 | 20 °F   | 250 °F                         |
| RPM Range (Full-Range Misfire certified, with 2 rev delay) | 2 revs after exceeding 150 rpm below "drive" idle rpm | redline on tach or fuel cutoff |
| Profile correction factors learned in NVRAM                | Yes   |                                |
| Fuel tank level  | 15%   |                                |

| Typical misfire temporary disablement conditions:  |  |
|--|--|
| Temporary disablement conditions:  |  |
| Closed throttle decel (negative torque, engine being driven) > -100 ft lbs   |  |
| Fuel shut-off due to vehicle-speed limiting or engine-rpm limiting mode  |  |
| High rate of change of torque (heavy throttle tip-in or tip out) > -450 deg/sec or 250 deg/sec ; > -200 ft lbs/sec or > 250 ft lbs/sec |  |
| Rough Road conditions present  |  |

| Typical misfire monitor malfunction thresholds:   |  |
|---|--|
| Type A (catalyst damaging misfire rate): misfire rate is an rpm/load table ranging from 40% at idle to 5% at high rpm and loads |  |
| Type B (emission threshold rate): 0.9% to 1.5%  |  |

| J1979 Misfire Mode \$06 Data |         |   |         |
|------------------------------|---------|---|---------|
| Monitor ID                   | Test ID | Description   |         |
| A1                           | \$80    | Total engine misfire and catalyst damage misfire rate (updated every 200 revolutions) (P030x) | percent |

|         |      |   |         |
|---------|------|---|---------|
| A1      | \$81 | Total engine misfire and emission threshold misfire rate (updated every 1,000 revolutions) (P030x)                  | percent |
| A1      | \$82 | Highest catalyst-damage misfire and catalyst damage threshold misfire rate (updated when DTC set or clears) (P030x) | percent |
| A1      | \$83 | Highest emission-threshold misfire and emission threshold misfire rate (updated when DTC set or clears) (P030x)     | percent |
| A1      | \$84 | Inferred catalyst mid-bed temperature (P030x)   | °C      |
| A2 – AD | \$0B | EWMA misfire counts for last 10 driving cycles (P030x)  | events  |
| A2 – AD | \$0C | Misfire counts for last/current driving cycle (P030x)   | events  |
| A2 – AD | \$80 | Cylinder X misfire rate and catalyst damage misfire rate (updated every 200 revolutions) (P030x)                    | percent |
| A2 – AD | \$81 | Cylinder X misfire rate and emission threshold misfire rate (updated every 1,000 revolutions) (P030x)               | percent |

| Profile Correction Operation |   |
|------------------------------|---|
| DTCs                         | P0315 - unable to learn profile in three 60 to 40 mph decels                          |
| Monitor Execution            | Once per profile learning sequence.   |
| Monitor Sequence:            | Profile must be learned before misfire monitor is active.                             |
| Sensors OK:                  | CKP, CMP, CKP/CMP in synch  |
| Monitoring Duration;         | 10 cumulative seconds in conditions<br>(a maximum of three 60-40 mph defueled decels) |

| Typical profile learning entry conditions (Assembly Plant or Service Bay): |          |          |
|--|----------|----------|
| Entry condition  | Minimum  | Maximum  |
| Engine in decel-fuel cutout mode for 4 engine cycles                       |          |          |
| Park/Neutral gear  |          |          |
| Engine RPM   | 2000 rpm | 3000 rpm |
| Learning tolerance   |          | 1%       |

| Typical profile learning entry conditions (Customer drive cycle): |          |                         |
|---|----------|-------------------------|
| Entry condition   | Minimum  | Maximum                 |
| Engine in decel-fuel cutout mode for 4 engine cycles              |          |                         |
| Brakes applied (Brake On/Off Switch)                              | No       | No                      |
| Engine RPM  | 1300 rpm | 3700 rpm                |
| Change in RPM   |          | 600 rpm/background loop |
| Vehicle Speed   | 30 mph   | 75 mph                  |
| Learning tolerance  |          | 1%                      |

## EVAP System Monitor - 0.040" dia. Vacuum Leak Check

### 0.040" EVAP Monitor Operation:

|                       |   |
|-----------------------|---|
| DTCs                  | P0455 - EVAP System Leak Detected (large leak)<br>P0457 - EVAP System Leak Detected (fuel cap loose/off)<br>P0442 - EVAP System Leak Detected (small leak) (0.040" leak),<br>P1450 - Unable to Bleed Up Fuel Tank Vacuum (excessive vacuum) or<br>P0496 - EVAP System High Purge Flow<br>Note: P1450 is being replaced by P0496 |
| Monitor execution     | once per driving cycle  |
| Monitor Sequence      | HO2S monitor completed and OK   |
| Sensors/Components OK | MAF, IAT, VSS, ECT, CKP, TP, FTP, CPV, CVS  |
| Monitoring Duration   | 360 seconds (see disablement conditions below)  |

### Typical 0.040" EVAP monitor entry conditions, Phases 0 through 4:

| Entry condition   | Minimum               | Maximum                     |
|---|-----------------------|-----------------------------|
| Engine off (soak) time time OR<br>ECT at start – IAT at start $\leq 12^{\circ}\text{F}$ | 4 - 6 hours           |                             |
| Time since engine start-up  | 330 seconds           | 1800 to 2700 seconds        |
| Intake Air Temp   | 40 $^{\circ}\text{F}$ | 95 - 100 $^{\circ}\text{F}$ |
| BARO (<8,000 ft altitude)   | 22.0 " Hg             |                             |
| Engine Load   | 20%                   | 70%                         |
| Vehicle Speed   | 40 mph                | 90 mph                      |
| Purge Duty Cycle  | 75%                   | 100%                        |
| Purge Flow  | 0.05 lbm/min          | 0.10 lbm/min                |
| Fuel Fill Level   | 15%                   | 85%                         |
| Fuel Tank Pressure Range  | - 17 H <sub>2</sub> O | 1.5 H <sub>2</sub> O        |
| Battery Voltage   | 11 volts              | 18 volts                    |
| Clean Canister  |                       |                             |

### Typical 0.040" EVAP abort (fuel slosh) conditions for Phase 2:

|   |
|---|
| Change in load: > 30%                           |
| Change in tank pressure: > 1 " H <sub>2</sub> O |
| Change in fuel fill level: > 15%                |
| Number of aborts: > 255                         |
| Vehicle Accel > 1 mph / sec                     |

**Typical 0.040 EVAP monitor malfunction thresholds:**

P1450/P0496 (Excessive vacuum): < -4.0 in H<sub>2</sub>O delta vacuum from time that CVS is closed, or > -4. in H<sub>2</sub>O stagnant vapor over a 10 second evaluation time.

P0455 (Gross leak): > -8.0 in H<sub>2</sub>O over a 30 second evaluation time.

P0457 (Gross leak, cap off): > -8.0 in H<sub>2</sub>O over a 30 second evaluation time after a refueling event.

P0442 (0.040" leak): > 2.5 in H<sub>2</sub>O bleed-up over a 15 second evaluation time at 75% fuel fill. (Note: bleed-up and evaluation times vary as a function of fuel fill level and ambient air temperature)

P0442 vapor generation limit: < 2.5 in H<sub>2</sub>O over a 120 second evaluation time

**J1979 Evaporative System Mode \$06 Data prior to 2017 MY**

| Test ID | Comp ID | Description  | Units |
|---------|---------|--|-------|
| \$3A    | \$80    | Phase 0 end pressure result and test limits (data for P1450/P0496 – excessive vacuum)                      | Pa    |
| \$3A    | \$81    | Phase 4 vapor generation minimum change in pressure and test limits (data for P1450/P0496, CPV stuck open) | Pa    |
| \$3A    | \$82    | Phase 0 end pressure result and test limits (data for P0455/P0457 – gross leak/cap off)                    | Pa    |
| \$3B    | \$80    | Phase 2 0.040" cruise leak check vacuum bleed-up and test limits (data for P0442 – 0.040" leak)            | Pa    |

Note: Default values (0.0 Pa) will be displayed for all the above TIDs if the evap monitor has never completed. Each TID is associated with a particular DTC. The TID for the appropriate DTC will be updated based on the current or last driving cycle, default values will be displayed for any phases that have not completed.

**J1979 Evaporative System Mode \$06 Data for 2017 MY and beyond**

| Test ID | Comp ID | Description   | Units |
|---------|---------|---|-------|
| \$39    | \$82    | HD 0.150" Leak test - Phase 0 end pressure result and test limits (data for P0455/P0457 – gross leak/cap off) (P0455) | Pa    |
| \$3A    | \$83    | 0.090" Leak test - Phase 2 0.040"/0.090" leak check vacuum bleed-up and maximum 0.040"/0.090" leak threshold (P0442)  | Pa    |
| \$3B    | \$83    | 0.040" Leak test - Phase 2 0.040" leak check vacuum bleed-up and maximum 0.040" leak threshold (P0442)                | Pa    |
| \$3D    | \$88    | Purge Flow Monitor - Excessive vacuum limit (Fail on time out) (P1450/P0496)  | Pa    |
| \$3D    | \$88    | Purge Flow Monitor - Excessive vacuum limit (Fail on delta pressure) (P1450/P0496)                                    | Pa    |

Note: Default values (0.0 Pa) will be displayed for all the above TIDs if the evap monitor has never completed. Each TID is associated with a particular DTC. The TID for the appropriate DTC will be updated based on the current or last driving cycle, default values will be displayed for any phases that have not completed.

## EVAP System Monitor - 0.020" dia. Engine Off Natural Vacuum

### 0.020" EONV EVAP Monitor Operation:

|                       |   |
|-----------------------|---|
| DTCs                  | P0456 (0.020" leak)<br>P260F (Evaporative System Monitoring Processor Performance)  |
| Monitor execution     | Once per key-off when entry conditions are met during drive. Monitor will run up to 2 times per day, or 90 cumulative minutes per day (whichever comes first) |
| Monitor Sequence      | none  |
| Sensors/Components OK | EONV Processor, Canister Vent Solenoid, Fuel Tank Pressure Sensor, Fuel Level Input, Vapor Management Valve, CAN communication link                           |
| Monitoring Duration   | 45 minutes in key-off state if fault present. Tests will likely complete quicker if no fault is present.  |

### Typical 0.020" EONV EVAP monitor entry conditions:

| Entry conditions to allow EONV test (prior to key off)  | Minimum               | Maximum    |
|---|-----------------------|------------|
| Engine off (soak) time  | 3.5 - 6 hours         |            |
| OR  |                       |            |
| Inferred soak criteria met: - (ECT at start – IAT at start )  |                       | 12 °F F    |
| Inferred soak criteria met – ECT at start   | 35 °F F               | 105 °F F   |
| Inferred soak criteria met - minimum engine off soak time   | 0 sec                 |            |
| Time since engine start-up to allow EONV test   | 20 minutes            | 90 minutes |
| Ambient Temperature at start-up   | 40 °F                 | 95 °F      |
| Battery Voltage to start EONV test  | 11 volts              |            |
| Number of completed EONV tests in 24hr cycle  |                       | 6          |
| Cumulative test time in 24hr cycle  |                       | 90 minutes |
| Fuel level  | 15%                   | 85%        |
| ECU time since power-up to allow EONV test  | 180 seconds           |            |
| Flex fuel inference complete  | Learned               |            |
| BARO (<8,000 ft altitude)   | 22.0 " Hg             |            |
| Summation of air mass of the combustion engine since start ensures that vehicle has been operated off idle (function of ambient temperature).   | 7500 to 15000 lbm/min |            |
| Ratio of drive time to (drive + soak) time. (This allows for the driver to key-off for a short time without losing the initial soak condition.) | 0.8                   |            |

**Typical 0.020" EONV EVAP key-off abort conditions:**

Tank pressure at key-off > 1.5" H<sub>2</sub>O during stabilization phase (indicates excessive vapor)

Tank pressure not stabilized for tank pressure offset determination

Rapid change in tank pressure > 0.5"H<sub>2</sub>O (used for refuel/slosh detection)

Rapid change in fuel level > 5% (used for refuel/slosh detection)

Battery voltage < 11 Volts

Rapid change in battery voltage > 1 Volt

Loss of CAN network (only for standalone satellite micro applications)

Canister Vent Solenoid fault detected

Driver turns key-on

**Typical 0.020 EONV EVAP monitor malfunction thresholds:**

P0456 (0.020" leak): < 0.75 in H<sub>2</sub>O pressure build and  
< 0.50 in H<sub>2</sub>O vacuum build over a 45 minute maximum evaluation time

Note: EONV monitor can be calibrated to illuminate the MIL after two malfunctions (an average of four key-off EONV tests, eight runs in all) or after a single malfunction (an average of five key-off EONV tests, five runs in all), or using EWMA with Fast Initial Response and Step Change Logic. Most new 2006 MY and later vehicles will use the five-run approach, most new 2009 MY and later use the EWMA approach.

**J1979 EONV EVAP monitor Mode \$06 Data**

| Monitor ID | Comp ID | Description  | Units    |
|------------|---------|--|----------|
| \$3C       | \$81    | EONV Positive Pressure Test Result and Limits (data for P0456)   | Pa       |
| \$3C       | \$82    | EONV Negative Pressure (Vacuum) Test Result and Limits(data for P0456)                                   | Pa       |
| \$3C       | \$83    | Normalized Average of Multiple EONV Tests Results and Limits (where 0 = pass, 1 = fail) (data for P0456) | unitless |

Note: Default values (0.0) will be displayed for all the above TIDs if the evap monitor has never completed. The appropriate TID will be updated based on the current or last driving cycle, default values will be displayed for any phases that have not completed.

## EVAP System Monitor Component Checks

### Canister Purge Valve Check Operation:

|                     |   |
|---------------------|---|
| DTCs                | P0443 – Evaporative Emission System Purge Control Valve "A" Circuit |
| Monitor execution   | continuous  |
| Monitor Sequence    | None  |
| Sensors OK          | not applicable  |
| Monitoring Duration | 5 seconds to obtain smart driver status                             |

### Typical Canister Purge Valve check malfunction thresholds:

P0443 (CPV): open/shorted at 0 or 100% duty cycle

### Canister Vent Solenoid Check Operation:

|                     |   |
|---------------------|---|
| DTCs                | P0446 – Canister Vent Solenoid Circuit  |
| Monitor execution   | continuous                              |
| Monitor Sequence    | None                                    |
| Sensors OK          | not applicable                          |
| Monitoring Duration | 5 seconds to obtain smart driver status |

### Typical Canister Vent Solenoid check malfunction thresholds:

P0446 (Canister Vent Solenoid Circuit): open/shorted

### Evap Switching Valve Check Operation:

|                     |   |
|---------------------|---|
| DTCs                | P2418 - Evap Switching Valve Circuit    |
| Monitor execution   | continuous                              |
| Monitor Sequence    | None                                    |
| Sensors OK          | not applicable                          |
| Monitoring Duration | 5 seconds to obtain smart driver status |

### Evap Switching Valve check malfunction thresholds:

P2418 (Evap Switching Valve Circuit): open/shorted

### Fuel Tank Pressure Sensor Transfer Function

| FTP volts = [ Vref * ( 0.14167 * Tank Pressure) + 2.6250 ] / 5.00 |                   |   |
|---|-------------------|---|
| Volts   | A/D Counts in PCM | Fuel Tank Pressure, Inches H <sub>2</sub> O |
| 0.100   | 20                | -17.82                                      |
| 0.500   | 102               | -15.0                                       |

|       |      |       |
|-------|------|-------|
| 1.208 | 247  | -10.0 |
| 2.625 | 464  | 0     |
| 3.475 | 712  | 6.0   |
| 4.750 | 973  | 15.0  |
| 4.90  | 1004 | 16.06 |

#### Fuel Tank Pressure Sensor Check Operation:

|                     |   |
|---------------------|---|
| DTCs                | P0452 – Fuel Tank Pressure Sensor Circuit Low<br>P0453 – Fuel Tank Pressure Sensor Circuit High<br>P0454 – Fuel Tank Pressure Sensor Intermittent/Erratic (noisy) |
| Monitor execution   | continuous  |
| Monitor Sequence    | None  |
| Sensors OK          | not applicable  |
| Monitoring Duration | 5 seconds for electrical malfunctions, 10 seconds for noisy sensor test   |

#### Typical Fuel Tank Pressure Sensor check malfunction thresholds:

P0452 (Fuel Tank Pressure Sensor Circuit Low): < -17.82 in H<sub>2</sub>O

P0453 (Fuel Tank Pressure Sensor Circuit High): > 16.06 in H<sub>2</sub>O

P0454 (Fuel Tank Pressure Sensor Circuit Noisy): > open circuit, short circuit or > 4 in H<sub>2</sub>O change between samples, sampled every 100 msec

#### Fuel Tank Pressures Sensor Offset Check Operation

|                     |  |
|---------------------|--|
| DTCs                | P0451 – Fuel Tank Pressure Sensor Range/Performance (offset) |
| Monitor execution   | once per driving cycle                                       |
| Monitor Sequence    | No P0443 or P1450/P0496 DTCs                                 |
| Sensors OK          | not applicable   |
| Monitoring Duration | < 1 second   |

#### Typical Fuel Tank Pressure Sensor Offset Check Entry Conditions:

| Entry condition                                 | Minimum     | Maximum                 |
|---|-------------|-------------------------|
| Ignition key on, engine off, engine rpm         |             | 0 rpm                   |
| Purge Duty Cycle                                |             | 0%                      |
| Engine off (soak) time                          | 4 - 6 hours |                         |
| Fuel Tank Pressure Sensor Variation during test |             | 0.5 in H <sub>2</sub> O |
| Battery Voltage                                 | 11.0 Volts  |                         |

#### Typical Fuel Tank Pressure Sensor Offset Check Malfunction Thresholds:

Fuel tank pressure at key on, engine off is 0.0 in H<sub>2</sub>O +/- 2.0 in H<sub>2</sub>O

**Fuel Level Input Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P0461 – Fuel Level Sensor A Circuit Noisy<br>P0462 – Fuel Level Sensor A Circuit Low<br>P0463 – Fuel Level Sensor A Circuit High<br>P2066 – Fuel Level Sensor B Circuit Noisy<br>P2067 – Fuel Level Sensor B Circuit Low<br>P2068 – Fuel Level Sensor B Circuit High |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | not applicable   |
| Monitoring Duration | 30 seconds for electrical malfunctions,  |

**Typical Fuel Level Input check malfunction thresholds:**

P0460 or P0462 (Fuel Level Input Circuit Low): < 5 ohms (< 1 A/D count)  
P0460 or P0463 (Fuel Level Input Circuit High): > 200 ohms (>253 A/D counts)  
P0461 or P2066 (Fuel Level Input Noisy): > 40% change between samples, > 100 occurrences, sampled every 0.100 seconds

**Fuel Level Input Stuck Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P25B0 - Fuel Level Sensor "A" Stuck<br>P25B1 - Fuel Level Sensor "B" Stuck<br>P25B2 - Fuel Level Sensor "A" or "B" Stuck |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | not applicable   |
| Monitoring Duration | Between 15 and 85%, monitoring can take from 100 to 120 miles to complete  |

**Typical Fuel Level Input Stuck check malfunction thresholds:**

P25B0/P25B1/P25B2 (Fuel Level Input Stuck):  
Fuel level stuck at greater than 90%: > 60% difference in calculated fuel tank capacity consumed versus change in fuel level input reading  
Fuel level stuck at less than 10%: > 30% difference in calculated fuel tank capacity consumed versus change in fuel level input reading  
Fuel level stuck between 10% and 90%: > 25% difference in calculated fuel tank capacity consumed versus change in fuel level input reading

| Evap Monitor Microprocessor Performance: |  |
|--|--|
| DTCs                                     | P260F - Evap System Monitoring Processor Performance |
| Monitor execution                        | continuous   |
| Monitor Sequence                         | None   |
| Sensors OK                               | not applicable                                       |
| Monitoring Duration                      | 5 seconds  |

## Evap Switching Valve (EVAPSV) Diagnostics

| EVAP Switching Valve (EVAPSV) Monitor Operation: |  |
|--|--|
| DTC  | P2450  |
| Monitor execution                                | once per driving cycle                             |
| Monitor Sequence                                 | Runs during Phase 3 of the evap 0.040" cruise test |
| Sensors/Components OK                            | MAF, IAT, VSS, ECT, CKP, TP, FTP, CPV, CVS         |
| Monitoring Duration                              | 2 to 3 seconds (see disablement conditions below)  |

| Typical EVAP Switching Valve (EVAPSV) monitor entry conditions: |         |         |
|---|---------|---------|
| Entry condition   | Minimum | Maximum |
| 0.040" Cruise Test completes                                    |         |         |

| Typical EVAP Switching Valve (EVAPSV) abort conditions: |
|---|
| Change in fuel fill level: > 15%                        |

| Typical EVAP Switching Valve (EVAPSV) malfunction thresholds:                 |
|---|
| P2418: Presence of short, open, or intermittent fault for more than 5 seconds |
| P2450: Calculated ratio < 2.75  |

| J1979 Evaporative System Mode \$06 Data   |         |  |          |
|---|---------|--|----------|
| Test ID   | Comp ID | Description                              | Units    |
| \$3D  | \$82    | Vapor blocking valve performance (P2450) | Unitless |
| Note: Default values (0.0) will be displayed for all the above TIDs if the evap monitor has never completed. Each TID is associated with a particular DTC. The TID for the appropriate DTC will be updated based on the current or last driving cycle, default values will be displayed for any phases that have not completed. |         |  |          |

## Blocked Purge Line Diagnostics

| EVAP Blocked Line Monitor Operation: |  |
|--------------------------------------|--|
| DTC                                  | P144A - EVAP System Purge Vapor Line Restricted/Blocked or<br>P00FE - EVAP System Tank Vapor Line Restricted/Blocked<br>Note: P144A DTC is being replaced by P00FE |
| Monitor execution                    | once per driving cycle   |
| Monitor Sequence                     | Runs during Phase 0 of evap 0.040" cruise test. Performs an intrusive test in Phases 3 & 4 to confirm a fault.   |
| Sensors/Components OK                | MAF, IAT, VSS, ECT, CKP, TP, FTP, CPV, CVS   |
| Monitoring Duration                  | 30 seconds (see disablement conditions below)  |

| Typical Blocked Line monitor entry conditions:            |              |         |
|---|--------------|---------|
| Entry condition   | Minimum      | Maximum |
| General 0.040" Cruise Test conditions apply               |              |         |
| Air mass high enough for intrusive portion of test        | 1.5 (lb/min) |         |
| Manifold vacuum high enough for intrusive portion of test | 5 "Hg        |         |
| Not in open loop fueling                                  |              |         |
| CPV purging   |              |         |

| Typical EVAP Blocked Line abort conditions:   |
|---|
| All items cited under entry conditions apply. |

| Typical EVAP Blocked Line malfunction thresholds:                                  |
|--|
| P144A/P00FE: Phase 0 portion of test delta pressure < -5 "H <sub>2</sub> O/sec     |
| P144A/P00FE: Phase 3 & 4 (intrusive test) pressure response < -2 "H <sub>2</sub> O |

| J1979 Evaporative System Mode \$06 Data   |         |  |        |
|---|---------|--|--------|
| Test ID   | Comp ID | Description  | Units  |
| \$3D  | \$80    | Blocked Evap System Line - Screening test (P144A/P00FE)          | Pa/sec |
| \$3D  | \$81    | Blocked Evap System Line - Fault confirmation test (P144A/P00FE) | Pa     |
| Note: Default values (0.0) will be displayed for all the above TIDs if the evap monitor has never completed. Each TID is associated with a particular DTC. The TID for the appropriate DTC will be updated based on the current or last driving cycle, default values will be displayed for any phases that have not completed. |         |  |        |

## Single Path Purge Check Valve Diagnostics

| Evaporative System Purge Check Valve Performance Diagnostic Operation: |  |
|--|--|
| DTC  | P144C - Evaporative Emission System Purge Check Valve Performance or<br>P04F0 - EVAP System High Load Purge Line "A" Performance<br>Note: P144C is being replaced by P04F0 |
| Monitor execution  | Once per driving cycle, during boosted operation   |
| Monitor Sequence   | None   |
| Sensors/Components OK  | ECT/CHT, IAT, MAP, CPV, CVV, FTPT, FLI, BARO, TIP  |
| Monitoring Duration  | 5 to 10 seconds depending on level of boost  |

| Typical Evaporative System Purge Check Valve Performance Entry Conditions |               |         |
|---|---------------|---------|
| Entry condition   | Minimum       | Maximum |
| Ambient temperature (IAT)   | 40 °F         | 95 °F   |
| Battery Voltage   | 11.0 Volts    |         |
| Fuel level  | 15%           | 85%     |
| Engine Coolant Temperature (CHT/ECT)                                      | 160 °F        |         |
| Atmospheric Pressure (BARO)   | 23" Hg        |         |
| Boost Pressure (MAP – BARO)   | 4 to 8" Hg    |         |
| Engine Delta Load   | 0.2           |         |
| Vehicle Acceleration  | 0.5 mph / sec |         |

| Typical Evaporative System Purge Check Valve Diagnostic malfunction thresholds:  |
|--|
| Pressure Rise Rate (delta pressure / delta time) > 0.50 " H <sub>2</sub> O/sec<br>Threshold is a function of fuel level with a range of 0.5 to 1.0 |

## Dual Path Purge Check Valve Diagnostics

| Evaporative System Purge Check Valve Performance Diagnostic Operation: |   |
|--|---|
| DTC  | P144C - Evaporative Emission System Purge Check Valve Performance or P04F0 - EVAP System High Load Purge Line "A" Performance<br>Note: P144C is being replaced by P04F0 |
| Monitor execution  | Once per driving cycle, during boosted operation  |
| Monitor Sequence   | None  |
| Sensors/Components OK  | ECT/CHT, IAT, MAP, CPV, CVV, FTPT, FLI, BARO, TIP, WASTEGATE  |
| Monitoring Duration  | 5 to 10 seconds depending on level of boost   |

| Typical Evaporative System Purge Check Valve Performance Entry Conditions |            |         |
|---|------------|---------|
| Entry condition   | Minimum    | Maximum |
| Ambient air temperature   | 40 ° F     | 105 ° F |
| Battery Voltage   | 11.0 Volts |         |
| Fuel level  | 15%        | 90%     |
| Engine Coolant Temperature  | 160 ° F    |         |
| Atmospheric Pressure (BARO)   | 23" Hg     |         |
| Boost Pressure (MAP – BARO)   | 8" Hg      |         |

| Typical Evaporative System Purge Check Valve Diagnostic malfunction thresholds:  |  |
|--|--|
| CV1- Pressure Rise Rate (delta pressure / delta time) > 1 " H <sub>2</sub> O/sec   |  |
| CV1- Threshold is a function of fuel level with a range of 1.5 to 2.6  |  |
| CV2- Vacuum Rate (delta vacuum / delta time) >-0.4 and < 0.5 H <sub>2</sub> O/sec  |  |
| CV2- Threshold is a function of fuel level with a range of 0.5 to 0.7 for the upper band and -0.4 to -0.3 for the lower band |  |

| J1979 Evaporative System Mode \$06 Data   |         |   |        |
|---|---------|---|--------|
| Test ID   | Comp ID | Description   | Units  |
| \$3D  | \$89    | Check valve test for dual path purge. (Check Valve 1 Failed- P144C/P04F0)       | Pa/sec |
| \$3D  | \$89    | Check valve test for dual path purge. (Check Valve 2 Failed- P144C/P04F0)       | Pa/sec |
| \$3D  | \$89    | Check valve test for dual path purge. (Check Valve 1 and 2 Passed - P144CP04F0) | Pa/sec |
| Note: Default values (0.0) will be displayed for all the above TIDs if the evap monitor has never completed. Each TID is associated with a particular DTC. The TID for the appropriate DTC will be updated based on the current or last driving cycle, default values will be displayed for any phases that have not completed. |         |   |        |

## Fuel System Monitor

### Fuel Monitor Operation:

|                     |  |
|---------------------|--|
| DTCs                | P0171 Bank 1 Lean, P0174 Bank 2 Lean<br>P0172 Bank 1 Rich, P0175 Bank 2 Rich |
| Monitor execution   | continuous while in closed loop fuel   |
| Monitor Sequence    | none   |
| Sensors OK          | Fuel Rail Pressure (if available), IAT, CHT/ECT, MAF, TP                     |
| Monitoring Duration | 2 seconds to register malfunction  |

### Typical fuel monitor entry conditions:

| Entry condition     | Minimum         | Maximum         |
|---------------------|-----------------|-----------------|
| Engine Coolant Temp | 170 °F / 70 °C  | 230 °F / 110 °C |
| Engine load         | 12%             |                 |
| Intake Air Temp     | -30 °F / -40 °C | 150 °F / 65 °C  |
| Fuel Level          | 10%             |                 |
| Purge Duty Cycle    | 0%              | 0%              |

### Typical fuel monitor malfunction thresholds:

Long Term Fuel Trim correction cell currently being utilized in conjunction with Short Term Fuel Trim:

Lean malfunction: LONGFT > 25%, SHRTFT > 1%

Rich malfunction: LONGFT < 25%, SHRTFT < 1%

## FAOSC (Rear Fuel Trim) Monitor

| UEGO "FAOS Monitor" Operation: |  |
|--------------------------------|--|
| DTCs                           | P2096 – Post catalyst fuel trim system too lean (Bank 1)<br>P2097 – Post catalyst fuel trim system too rich (Bank 1)<br>P2098 – Post catalyst fuel trim system too lean (Bank 2)<br>P2099 – Post catalyst fuel trim system too rich (Bank 2)   |
| Monitor execution              | Continuous while in closed loop fuel   |
| Monitor Sequence               | > 30 seconds time in lack of movement test, > 30 seconds time in lack of switch test   |
| Sensors OK                     | ECT, IAT, MAF, MAP, VSS, TP, ETC, FRP, FVR, DPFE EGR, VCT, VMV/EVMV, CVS, CPV, EVAPSV, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, UEGO heaters OK, rear HO2S heaters OK, no "lack of switching" malfunction, no "lack of movement" malfunction, no UEGO circuit malfunction, no rear stream 2 HO2S circuit malfunction, no rear stream 2 HO2S functional DTCs, no rear stream 2 HO2S response rate malfunction. |
| Monitoring Duration            | 5 seconds to register a malfunction  |

| Typical UEGO "FAOS Monitor" entry conditions:   |            |            |
|---|------------|------------|
| Entry condition   | Minimum    | Maximum    |
| Closed loop stoich fuel control   |            |            |
| Time since engine start   | 20 seconds |            |
| Engine Coolant Temp   | 160 °F     | 250 °F     |
| Time since entering closed loop fuel  | 20 seconds |            |
| Fuel Level  | 15%        |            |
| Short Term Fuel Trim Range  | -13%       | 18%        |
| Air mass range  | 2 lbm/min  | 8 lbm/min  |
| Learning conditions stability time (based on air mass)  | 15 seconds |            |
| Injector fuel pulse width (not at minimum clip)   | 650 usec   |            |
| Inferred HO2S 2 Heated Tip Temperature  | 1100 °F    |            |
| No excessive movement between currently utilized long term fuel trim cells (1 = complete change from one cell to adjacent cell) |            | 0.5        |
| UEGO sensor within +/- 2 % from the fuel control target   |            |            |
| UEGO ASIC not in recalibration mode   |            |            |
| Stream1 UEGO response test not running  |            |            |
| Intrusive UEGO catalyst monitor not running   |            |            |
| Not performing intrusive UEGO Lack-of-Movement fuel control defib   |            |            |
| No air passing through during valve overlap (scavenging).   |            |            |
| Battery Voltage   | 11.0 Volts | 18.0 Volts |

**Typical UEGO "FAOS Monitor" malfunction thresholds:**

>= 5 seconds since reaching the FAOSC lean or rich limits while system bias maturity is met.

Lean malfunction: -0.083 rear bias trim limit

Rich malfunction: 0.087 rear bias trim limit

## Air Fuel Ratio Imbalance Monitor – O2 Sensor Monitor

| Air Fuel Ratio Imbalance Operation |   |
|------------------------------------|---|
| DTCs                               | P219A – Bank 1 Air-Fuel Ratio Imbalance<br>P219B – Bank 2 Air-Fuel Ratio Imbalance  |
| Monitor execution                  | Once per driving cycle during closed loop   |
| Monitor Sequence                   | Monitor runs after fuel monitor has adapted   |
| Sensors OK                         | ECT, IAT, MAF, VSS, TP, ETC, FRP, DPFE EGR, VCT, VMV/EVMV, CVS, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, UEGO heaters OK, rear HO2S heaters OK, no "lack of switching" malfunction, no "lack of movement" malfunction, no UEGO circuit malfunction, no rear stream 2 HO2S circuit malfunction, no rear stream 2 HO2S functional DTCs, no rear stream 2 HO2S response rate malfunction. |
| Monitoring Duration                | Time to complete monitor ranges from 300 to 700 seconds   |

| Air Fuel Ratio Imbalance entry conditions: |          |                  |
|--|----------|------------------|
| Entry condition                            | Minimum  | Maximum          |
| Closed Loop Fuel Control                   |          |                  |
| Engine Air Mass                            | 2 lb/min | 10 lb/min        |
| Engine RPM Cell 0                          | 1250 rpm | 1700 rpm         |
| Engine RPM Cell 1                          | 1700 rpm | 2100 rpm         |
| Engine RPM Cell 2                          | 2100 rpm | 3400 rpm         |
| Engine Load Cell 0                         | 40%      | 70%              |
| Engine Load Cell 1                         | 50%      | 80%              |
| Engine Load Cell 2                         | 60%      | 90%              |
| Engine Coolant Temp                        | 150 °F   | 250 °F           |
| Intake Air Temp                            | 20 °F    | 150 °F           |
| Throttle Position Rate of Change           |          | 0.122 v/100 msec |
| Fuel percentage from purge                 |          | 40%              |
| Fuel Level                                 | 15%      |                  |
| Fuel monitor has adapted                   |          |                  |
| No purge on/off transition                 |          |                  |
| Fuel type leaning is complete (FFV only)   |          |                  |

| Air Fuel Ratio Imbalance malfunction thresholds: |
|--|
| Imbalance Ratio Bank 1 > .75                     |
| Imbalance Ratio Bank 2 > .75                     |

| J1979 AFIMN MONITOR MODE \$06 DATA |         |   |          |
|------------------------------------|---------|---|----------|
| Monitor ID                         | Test ID | Description   |          |
| \$81                               | \$80    | Bank 1 imbalance-ratio and max. limit (P219A/P219B) | unitless |
| \$82                               | \$80    | Bank 2 imbalance-ratio and max. limit (P219A/P219B) | unitless |

## Front HO2S Monitor

### HO2S "Lack of Switching" Operation:

|                     |  |
|---------------------|--|
| DTCs                | P2195 - Lack of switching, sensor indicates lean, Bank 1<br>P2196 - Lack of switching, sensor indicates rich, Bank 1<br>P2197 - Lack of switching, sensor indicates lean, Bank 2<br>P2198 - Lack of switching, sensor indicates rich, Bank 2 |
| Monitor execution   | continuous, from startup and while in closed loop fuel or open loop fuel due to HO2S fault   |
| Monitor Sequence    | None   |
| Sensors OK          | ECT, IAT, MAF, VSS, TP, ETC, FRP, DPFE EGR, VCT, VMV/EVMV, CVS, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, front HO2S heaters OK, no front HO2S over voltage  |
| Monitoring Duration | 30 seconds to register a malfunction   |

### Typical HO2S "Lack of Switching" entry conditions:

| Entry condition   | Minimum    | Maximum                |
|---|------------|------------------------|
| Closed Loop or Open Loop Requested due to HO2S fault  |            |                        |
| Stream 1 HO2S not in CSD recovery mode  |            |                        |
| No fuel flow entering thru PCV during cold start when flashing off fuel in oil (for O2 Sensor Stuck Rich DTCs only) |            |                        |
| No air passing through during valve overlap (scavenging).   |            |                        |
| Inferred Ambient Temperature  | -40 °F     |                        |
| Time within entry conditions  | 10 seconds |                        |
| Fuel Tank Pressure  |            | 10 in H <sub>2</sub> O |
| Fuel Level  | 15%        |                        |
| Battery Voltage   | 11.0 Volts | 18.0 Volts             |

### Typical HO2S "Lack of Switching" malfunction thresholds:

< 5 switches since startup for > 30 seconds in test conditions or > 30 seconds since last switch while closed loop fuel

### Front HO2S "Circuit Open/Shorted to Ground Test via HO2S Impedance Measurement" Operation:

|                     |  |
|---------------------|--|
| DTCs                | P0131 HO2S11 Circuit Low Voltage (Bank 1 Sensor 1)<br>P0151 HO2S21 Circuit Low Voltage (Bank 2 Sensor 1) |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | front HO2S heaters OK  |
| Monitoring Duration | 10 seconds to register a malfunction   |

**Typical HO2S “Circuit Open/Shorted to Ground Test via HO2S Impedance Measurement” entry conditions:**

| Entry condition  | Minimum                  | Maximum                   |
|--|--------------------------|---------------------------|
| Closed Loop  |                          |                           |
| Inferred Stream 1 HO2S Temperature   | 680 °F                   | 1526 °F (short to ground) |
| Inferred Stream 1 HO2S Element Temperature (applicable only if Stream 1 HO2S Impedance Monitor is enabled)   | 480 °F                   |                           |
| Time Stream 1 HO2S inferred element temperature within 10% of the predicted steady state temperature (applicable only if Stream 1 HO2S Impedance Monitor is enabled) | 1 second                 |                           |
| Sensor 1 HO2S heater-on time   | 60 seconds               |                           |
| All injectors on (no Decel Fuel Shut Off)  |                          |                           |
| Not commanding lean lambda due to torque reduction   |                          |                           |
| Not requesting enrichment due to catalyst reactivation following decel fuel shut off   |                          |                           |
| Sensor 1 HO2S voltage (open circuit voltage fault band):<br>Conti-Moto CBP-A2 PCM  | -0.05 Volts              | 0.05 Volts                |
| Other PCMs<br>or depending on feedback circuit   | 0.27 Volts<br>1.30 Volts | 0.50 Volts<br>1.90 Volts  |
| Sensor 1 HO2S voltage (circuit shorted to ground voltage fault band):  | -3.00 Volts              | 0.06 Volts                |
| Voltage at sensor 1 HO2S connector   | 11.0 Volts               |                           |
| Battery Voltage  | 11.0 Volts               | 18.0 Volts                |

**Typical HO2S “Circuit Open/Shorted to Ground Test” malfunction thresholds:**

HO2S Circuit Open:

HO2S Impedance > 500k ohms (Conti-Moto CBP-A2, Conti-Siemens CBP-C2, Bosch Green Oak, Bosch MED ECM, Conti EMS22xx processors)

> 250k ohms (Conti EMS22xx, Conti EMS23xx, Conti EMS24xx without feedback circuit processors)

> 150k ohms (Bosch MEDG, Bosch MED ECM with feedback circuit, Bosch MG1 multicore, Bosch ME processors)

> 20k ohms (Conti EMS24xx with feedback circuit, Conti EMX25xx, Conti EMS27xx, Conti EMS28xx, Conti EMS290x, Conti EMS295x processors)

Fault counter > 14 (200 msec test every 500 msec check)

HO2S Circuit Shorted to ground:

HO2S Impedance < 10 ohms

Fault counter > 17 (100 msec test every 500 msec check)

| HO2S “Over Voltage Test” Operation: |  |
|-------------------------------------|--|
| DTCs                                | P0132 – O2 Sensor Circuit High Voltage, Bank 1<br>P0152 - O2 Sensor Circuit High Voltage, Bank 2 |
| Monitor execution                   | Continuous   |
| Monitor Sequence                    | None   |
| Sensors OK                          | front HO2S heaters OK  |
| Monitoring Duration                 | 10 seconds to register a malfunction   |

| Typical HO2S “Over Voltage Test” entry conditions: |            |            |
|--|------------|------------|
| Entry condition                                    | Minimum    | Maximum    |
| Inferred Stream 1 HO2S temperature                 | 400 °F     |            |
| Battery Voltage                                    | 11.0 Volts | 18.0 Volts |

| Typical HO2S “Over Voltage Test” malfunction thresholds:   |
|--|
| HO2S Voltage > 1.1 volts or 1.9 volts (pending on feedback circuit) for 10 seconds for over voltage test |

| HO2S Response Rate Operation: |  |
|-------------------------------|--|
| DTCs                          | P0133 - O2 Sensor Circuit Slow Response Bank 1)<br>P0153 - O2 Sensor Circuit Slow Response Bank 2)   |
| Monitor execution             | once per driving cycle   |
| Monitor Sequence              | > 30 seconds time in lack of switch test   |
| Sensors OK                    | ECT, IAT, MAF, VSS, TP, ETC, FRP, DPFE EGR, VCT, VMV/EVMV, CVS, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel system, no EVAP gross leak failure, no "lack of switching" malfunctions, front HO2S heaters OK no front HO2S over voltage |
| Monitoring Duration           | 6 seconds  |

| Typical HO2S response rate entry conditions:          |            |            |
|---|------------|------------|
| Entry condition                                       | Minimum    | Maximum    |
| Stream 1 HO2S not in CSD recovery mode                |            |            |
| Flex Fuel Composition not changing                    |            |            |
| Not in Phase 0 of Evaporative System Monitor          |            |            |
| No Purge System reset                                 |            |            |
| Purge intrusive test not running                      |            |            |
| Not performing CSER spark retard                      |            |            |
| Engine Coolant Temp                                   | 150 °F     | 240 °F     |
| Intake Air Temp                                       |            | 140 °F     |
| Time since entering closed loop fuel                  | 10 seconds |            |
| Inferred Catalyst Midbed Temperature                  |            | 1600 °F    |
| Fuel Level  | 15%        |            |
| Short Term Fuel Trim Range                            | -9%        | 11%        |
| Short Term Fuel Trim Absolute Change while in monitor |            | 10%        |
| Engine Load   | 20%        | 50%        |
| Maximum change in engine load while in monitor        |            | 0.13       |
| Vehicle Speed   | 30 mph     | 80 mph     |
| Maximum change in vehicle speed while in monitor      |            | 3 mph      |
| Engine RPM  | 1000 rpm   | 2000 rpm   |
| Maximum change in engine rpm while in monitor         |            | 150 rpm    |
| Battery Voltage                                       | 11.0 Volts | 18.0 Volts |

| Typical HO2S response rate malfunction thresholds: |
|--|
| Voltage amplitude: < 0.5 volts                     |

| J1979 Front HO2S Mode \$06 Data |         |   |       |
|---------------------------------|---------|---|-------|
| Monitor ID                      | Test ID | Description   |       |
| \$01                            | \$80    | HO2S11 voltage amplitude and voltage threshold P0133) | Volts |
| \$01                            | \$01    | H02S11 sensor switch-point voltage                    | Volts |
| \$05                            | \$80    | HO2S21 voltage amplitude and voltage threshold P0153) | Volts |
| \$05                            | \$01    | H02S21 sensor switch-point voltage                    | Volts |

## Front HO2S Heaters

| HO2S Heater Monitor Operation: |  |
|--------------------------------|--|
| DTCs Sensor 1                  | P0030 – HO2S11 Heater Control Circuit, Bank 1<br>P0050 – HO2S21 Heater Control Circuit, Bank 2<br>P0135 - O2 Sensor Heater Circuit, Bank 1<br>P0155 - O2 Sensor Heater Circuit, Bank 2<br>P0053 - HO2S Heater Resistance, Bank 1<br>P0059 - HO2S Heater Resistance, Bank 2   |
| Monitor execution              | once per driving cycle for heater current, continuous for voltage monitoring and HO2S heater temperature control monitoring.   |
| Monitor Sequence               | Heater current monitor: Stream 1 HO2S response test completed (2010 MY and earlier), Stream 2 and 3 HO2S functional tests completed (2010 MY and earlier), HO2S heater voltage check completed.<br>HO2S heater temperature control monitor: Stream 1 HO2S heater voltage check completed, Stream 1 HO2S circuit check completed, intrusive heater current monitor completed (if applicable). |
| Sensors OK                     | Heater current monitor: no HO2S heater voltage DTCs.<br>HO2S heater temperature control monitor: Stream 1 HO2S heater voltage check completed, Stream 1 HO2S circuit check completed, intrusive heater current monitor completed (if applicable).  |
| Monitoring Duration            | < 10 seconds for heater voltage check, < 5 seconds for heater current check, >= 30 seconds for the HO2S heater temperature control monitor to register a malfunction.  |

| Typical HO2S heater monitor entry conditions: |            |            |
|---|------------|------------|
| Entry condition                               | Minimum    | Maximum    |
| <b>Heater Voltage Test:</b>                   |            |            |
| Inferred HO2S 1 Temperature                   | 150 °F     | 1250 °F    |
| Battery Voltage                               | 11.0       | 18.0 Volts |
| <b>Heater Current Test:</b>                   |            |            |
| Inferred HO2S 1 Temperature                   | 250 °F     | 1250 °F    |
| HO2S 1 heater-on time                         | 30 seconds |            |
| Engine RPM                                    |            | 5000 rpm   |

|  |      |            |
|--|------|------------|
| Battery Voltage  | 11.0 | 18.0 Volts |
| <b>HO2S Heater Temperature Control Monitor:</b>            |      |            |
| Heater voltage test completed                              |      |            |
| Stream 1 HO2S circuit check completed                      |      |            |
| Intrusive heater current monitor completed (if applicable) |      |            |
| Battery Voltage  | 11.0 | 18.0 Volts |

#### Typical HO2S heater check malfunction thresholds:

Smart driver status indicated malfunction

Number monitor retries allowed for malfunction  $\geq 30$

Heater current outside limits:

- < 0.220 Amps or > 3 Amps, (NTK Thimble)
- < 0.400 Amps or > 3 Amps, (Bosch Thimble)
- < 0.550 Amps or > 3 Amps, (Bosch Planar)
- < 0.465 Amps or > 3 Amps, (NTK Fast Light Off)
- < 0.230 Amps or > 3 Amps, (Bosch Fast Light Off)

#### J1979 HO2S Heater Mode \$06 Data

| Monitor ID | Test ID | Description                   | Units |
|------------|---------|-------------------------------|-------|
| \$41       | \$81    | HO2S11 Heater Current (P0053) | Amps  |
| \$45       | \$81    | HO2S21 Heater Current (P0059) | Amps  |

## Front UEGO Monitor

### UEGO “Lack of Switching” Operation:

|                     |  |
|---------------------|--|
| DTCs                | P2195 – Lack of switching, sensor indicates lean, Bank 1<br>P2196 – Lack of switching, sensor indicates rich, Bank 1<br>P2197 – Lack of switching, sensor indicates lean, Bank 2<br>P2198 – Lack of switching, sensor indicates rich, Bank 2   |
| Monitor execution   | continuous, from startup and while in closed loop fuel or open loop fuel due to UEGO sensor fault  |
| Monitor Sequence    | None   |
| Sensors OK          | ECT, IAT, MAF, MAP, VSS, TP, ETC, FRP, FVR, DPFE EGR, VCT, VMV/EVMV, CVS, CPV, EVAPSV, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, UEGO heaters OK, no "lack of movement" malfunction, no UEGO circuit malfunction |
| Monitoring Duration | 30 seconds to register a malfunction   |

### Typical UEGO “Lack of Switching” entry conditions:

| Entry condition   | Minimum    | Maximum                |
|---|------------|------------------------|
| Closed Loop or Open Loop Requested due to UEGO sensor fault   |            |                        |
| No fuel flow entering thru PCV during cold start when flashing off fuel in oil (for O2 Sensor Stuck Rich DTCs only) |            |                        |
| Inferred Ambient Temperature  | -40 °F     |                        |
| Time within entry conditions  | 10 seconds |                        |
| Fuel Tank Pressure  |            | 10 in H <sub>2</sub> O |
| Fuel Level  | 15%        |                        |
| UEGO ASIC not in recalibration mode   |            |                        |
| No air passing through during valve overlap (scavenging).   |            |                        |
| Battery Voltage   | 11.0 Volts | 18.0 Volts             |

### Typical UEGO “Lack of Switching” malfunction thresholds:

Stage 1: > 30 seconds since reaching the short term fuel trim limits while closed loop fuel.

Stage 2 (2016MY and earlier): < 0.5 seconds rich or < 0.5 seconds lean since startup for > 30 seconds in test conditions while open loop fuel is requested due to UEGO sensor fault.

Stage 2 (2017MY+): > 5 seconds since reaching the short term fuel trim limits while closed loop fuel.

Stuck UEGO test (2019MY+): Change in filtered lambda < 0.0001 for > 30 seconds and in fuel control defib mode for > 10 seconds. A stuck lean DTC (P2195, P2197) will set if filtered lambda is  $\geq 1$ , and a stuck rich DTC (P2196, P2198) will set if filtered lambda is less than 1.

**UEGO “Open Circuit Diagnostic – RE, VM ” Operation (Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

|                     |   |
|---------------------|---|
| DTCs                | <p>P2243 – O2 Sensor Reference Voltage Circuit/Open (Bank 1, Sensor 1).<br/>(replaces P0130)</p> <p>P2247 – O2 Sensor Reference Voltage Circuit/Open (Bank 2, Sensor 1).<br/>(replaces P0150)</p> <p>P2251 – O2 Sensor Negative Current Control Circuit/Open (Bank 1, Sensor 1)<br/>(replaces P0130)</p> <p>P2254 – O2 Sensor Negative Current Control Circuit/Open (Bank 2, Sensor 1)<br/>(replaces P0150)</p> |
| Monitor execution   | continuous  |
| Monitor Sequence    | Intrusive Stream 1 UEGO heater current monitor completed  |
| Sensors OK          | UEGO heaters OK, no UEGO circuit malfunction  |
| Monitoring Duration | 10 seconds to register a malfunction  |

**Typical UEGO “Open Circuit Diagnostic – RE, VM ” entry conditions (Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

| Entry condition   | Minimum    | Maximum   |
|---|------------|---|
| UEGO ASIC not in recalibration mode   |            |   |
| All injectors on (no Decel Fuel Shut Off)   |            |   |
| Short term fuel trim  |            | 33%   |
| Time heater control voltage at maximum limit during open loop heater control              |            | 9 seconds (Bosch UEGO)<br>20 seconds (NTK UEGO) |
| Time heater control voltage at maximum or minimum limit during closed loop heater control |            | 7 seconds (Bosch UEGO)<br>1 second (NTK UEGO)   |
| Battery Voltage   | 11.0 Volts | 18.0 Volts                                      |

**Typical UEGO “Open Circuit Diagnostic – RE, VM” malfunction thresholds (Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

Open RE circuit: UEGO voltage: > 4.7 V or < 0.2 V for 10 seconds to set a DTC.

Open VM circuit: 1.45 V < UEGO voltage < 1.55 V for 10 seconds to set a DTC (Bosch CJ125).

1.95 V < UEGO voltage < 2.05 V for 10 seconds to set a DTC (Conti-Siemens ATIC42).

**UEGO “Lack of Movement – Open Pump Current Circuit” Operation (Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

|                     |   |
|---------------------|---|
| DTCs                | P2237 – O2 Sensor Positive Current Control Circuit/Open (Bank 1, Sensor 1)<br>(replaces P0134)<br><br>P2240 – O2 Sensor Positive Current Control Circuit/Open (Bank 2, Sensor 1)<br>(replaces P0154)                              |
| Monitor execution   | continuous, from startup and while in closed loop fuel or open loop fuel due to UEGO sensor fault   |
| Monitor Sequence    | None  |
| Sensors OK          | ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, UEGO heaters OK, no "lack of switching" malfunction, no "lack of movement- open reference ground circuit" malfunction, no UEGO circuit malfunction |
| Monitoring Duration | 10 - 20 seconds to register a malfunction   |

**Typical UEGO “Lack of Movement – Open Pump Current Circuit ” entry conditions**

**(Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

| Entry condition  | Minimum    | Maximum    |
|--|------------|------------|
| Closed Loop or Open Loop Requested due to UEGO sensor fault              |            |            |
| Constant lambda near stoich (~1)   | 0.99       | 1.01       |
| Time since no lambda activity seen since start up                        | 30 sec     |            |
| Time since no lambda activity during intrusive Stream 1 response monitor | 3 sec      |            |
| Inferred Ambient Temperature   | - 40 °F    |            |
| Injector fuel pulsewidth   | 650 usec   |            |
| UEGO ASIC not in recalibration mode                                      |            |            |
| No air passing through during valve overlap (scavenging).                |            |            |
| Battery Voltage  | 11.0 Volts | 18.0 Volts |

**Typical UEGO “Lack of Movement – Open Pump Current Circuit” malfunction thresholds**

**(Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

Stage 1: > 20 seconds in test conditions without lambda movement during fuel control and reference current "defib" while in closed loop fuel and < = 0.05 change in lambda movement.

Stage 2: < 0.2 seconds without lambda movement since startup for > 30 seconds in test conditions during reference current "defib" while open loop fuel is requested due to UEGO sensor fault and < = 0.05 change in lambda movement.

**UEGO “Lack of Movement – Open Reference Ground Circuit ” Operation (Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

|                     |   |
|---------------------|---|
| DTCs                | P2251 – O2 Sensor Negative Current Control Circuit/Open (Bank 1, Sensor 1)<br>(replaces P0130)<br><br>P2254 – O2 Sensor Negative Current Control Circuit/Open (Bank 2, Sensor 1)<br>(replaces P0150)                          |
| Monitor execution   | continuous, from startup and while in closed loop fuel or open loop fuel due to UEGO sensor fault   |
| Monitor Sequence    | None  |
| Sensors OK          | ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, UEGO heaters OK, no "lack of switching" malfunction, no "lack of movement- open pump current circuit" malfunction, no UEGO circuit malfunction |
| Monitoring Duration | 10 - 20 seconds to register a malfunction   |

**Typical UEGO “Lack of Movement – Open Reference Ground Circuit ” entry conditions  
(Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

| Entry condition  | Minimum    | Maximum    |
|--|------------|------------|
| Closed Loop or Open Loop Requested due to UEGO sensor fault              |            |            |
| Constant lambda near stoich (~1)   | 0.99       | 1.01       |
| Time since no lambda activity seen since start up                        | 30 sec     |            |
| Time since no lambda activity during intrusive Stream 1 response monitor | 3 sec      |            |
| Injector fuel pulsewidth   | 650 usec   |            |
| UEGO ASIC not in recalibration mode                                      |            |            |
| No air passing through during valve overlap (scavenging).                |            |            |
| Battery Voltage  | 11.0 Volts | 18.0 Volts |

**Typical UEGO “Lack of Movement – Open Reference Ground Circuit” malfunction thresholds  
(Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):**

Stage 1: > 20 seconds in test conditions without lambda movement during fuel control and reference current "defib" while in closed loop fuel and > 0.05 change in lambda movement.

Stage 2: > 20 seconds in test conditions without lambda movement during reference current "defib" while open loop fuel is requested due to UEGO sensor fault and > 0.05 change in lambda movement.

**UEGO "Wire Diagnostic via ASIC" Operation:**

|                   |  |
|-------------------|--|
| DTCs              | <p>P0131 – O2 Sensor Circuit Low Voltage (Bank 1, Sensor 1). Note: Sets for short to ground on Bosch UEGO- IP, IA, RE, VM; NTK UEGO – IP, VS, COM. (replaces P0130 in Bosch UEGO applications.)</p> <p>P0151 – O2 Sensor Circuit Low Voltage (Bank 2, Sensor 1). Note: Sets for short to ground on Bosch UEGO- IP, IA, RE, VM; NTK UEGO – IP, VS, COM. (replaces P0150 in Bosch UEGO applications.)</p> <p>P0132 – O2 Sensor Circuit High Voltage (Bank 1, Sensor 1). Note: Sets for short to battery on Bosch UEGO- IP, IA, RE, VM; NTK UEGO – IP, VS, COM. (replaces P0130 in Bosch UEGO applications.)</p> <p>P0152 – O2 Sensor Circuit High Voltage (Bank 2, Sensor 1). Note: Sets for short to battery on Bosch UEGO- IP, IA, RE, VM; NTK UEGO – IP, VS, COM. (replaces P0150 in Bosch UEGO applications.)</p> <p>P2237 – O2 Sensor Positive Current Control Circuit/Open (Bank 1, Sensor 1). Note: This DTC sets for open IP. (replaces P0130 in NTK UEGO applications.)</p> <p>P2240 – O2 Sensor Positive Current Control Circuit/Open (Bank 2, Sensor 1). Note: Sets for open IP. (replaces P0150 in NTK UEGO applications.)</p> <p>P2243 – O2 Sensor Reference Voltage Circuit/Open (Bank 1, Sensor 1). Note: Sets for open VS. (replaces P0130 in NTK UEGO applications.)</p> <p>P2247 – O2 Sensor Reference Voltage Circuit/Open (Bank 2, Sensor 1). Note: Sets for open VS. (replaces P0150 in NTK UEGO applications.)</p> <p>P2251 – O2 Sensor Negative Current Control Circuit/Open (Bank 1, Sensor 1). Note: Sets for open COM. (replaces P0130 in NTK UEGO applications.)</p> <p>P2254 – O2 Sensor Negative Current Control Circuit/Open (Bank 2, Sensor 1). Note: Sets for open COM. (replaces P0150 in NTK UEGO applications.)</p> <p>P164A – O2 Sensor Positive Current Trim Circuit Performance (Bank 1, Sensor 1). Note: Sets for an erratic RL in NTK UEGO applications only.</p> <p>P164B – O2 Sensor Positive Current Trim Circuit Performance (Bank 2, Sensor 1). Note: Sets for an erratic RL in NTK UEGO applications only.</p> <p>P2626 - O2 Sensor Positive Current Trim Circuit Open (Bank 1, Sensor 1)</p> <p>P2629 - O2 Sensor Positive Current Trim Circuit Open (Bank 2, Sensor 1)</p> <p>P2627 – O2 Sensor Positive Current Trim circuit Low (Bank 1, Sensor 1). Note: Sets for open or short to ground RL in NTK UEGO applications only.</p> <p>P2630 – O2 Sensor Positive Current Trim Circuit Low (Bank 2, Sensor 1). Note: Sets for open or short to ground RL in NTK UEGO applications only.</p> <p>P2628 – O2 Sensor Positive Current Trim Circuit High (Bank 1, Sensor 1). Note: Sets for short to battery RL in NTK UEGO applications only.</p> <p>P2631 – O2 Sensor Positive Current Trim Circuit High (Bank 2, Sensor 1). Note: Sets for short to battery RL in NTK UEGO applications only.</p> <p>P1646 – Linear O2 Sensor Control Chip, Bank 1.</p> <p>P1647 – Linear O2 Sensor Control Chip, Bank 2.</p> <p>P064D – Internal Control Module O2 Sensor Processor Performance (Bank 1).</p> <p>P064E – Internal Control Module O2 Sensor Processor Performance (Bank 2).</p> |
| Monitor execution | continuous   |
| Monitor Sequence  | None   |

|                     |                                      |
|---------------------|--------------------------------------|
| Sensors OK          | UEGO heaters OK                      |
| Monitoring Duration | 10 seconds to register a malfunction |

#### Typical UEGO "Wire Diagnostics via ASIC" entry conditions:

| Entry condition             | Minimum    | Maximum    |
|-----------------------------|------------|------------|
| Fault reported by UEGO ASIC |            |            |
| Battery Voltage             | 11.0 Volts | 18.0 Volts |

#### Typical UEGO "Wire Diagnostics via ASIC " malfunction thresholds:

UEGO ASIC indicated malfunction, DTC sets after 10 seconds when circuit failure is present.

#### UEGO "Air Rationality Test" Operation (Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):

|                     |   |
|---------------------|---|
| DTCs                | P2626 – O2 Sensor Positive Current Trim Circuit Open (Bank 1, Sensor 1)<br>P2629 – O2 Sensor Positive Current Trim Circuit Open (Bank 2, Sensor 1)  |
| Monitor execution   | continuous, every DFSO event  |
| Monitor Sequence    | Stream 1 UEGO heater voltage check completed, > 30 seconds time in lack of movement test, > 30 seconds time in lack of switch test  |
| Sensors OK          | FTP, injectors, UEGO heaters OK, no "lack of switching" malfunction, no "lack of movement" malfunction, no purge system failure, no UEGO circuit malfunction, no UEGO FAOS monitor malfunction, no front UEGO response rate malfunction |
| Monitoring Duration | 2 seconds to register a malfunction   |

#### Typical UEGO "Air Rationality Test" entry conditions (Bosch UEGO only using Bosch CJ125 or Conti-Siemens ATIC42 ASIC):

| Entry condition   | Minimum | Maximum                |
|---|---------|------------------------|
| No injectors stuck open   |         |                        |
| No purge system failure   |         |                        |
| Fuel Tank Pressure  |         | 10 in H <sub>2</sub> O |
| Closed pedal  |         |                        |
| DFSO entry conditions met   |         |                        |
| DFSO requested  |         |                        |
| DFSO injectors cut  |         |                        |
| No purge flow being requested (pass criteria only)  |         |                        |
| No fuel flow entering thru PCV during cold start when flashing off fuel in oil (pass criteria only) |         |                        |
| Transport delay (pass criteria only)  | 2 sec   |                        |
| UEGO ASIC not in recalibration mode   |         |                        |



## Front UEGO Slow/Delayed Response Monitor (2010 MY+)


| UEGO "Response Rate" Operation: |  |
|---------------------------------|--|
| DTCs                            | P0133 - O2 Sensor Circuit Slow/Delayed Response Bank 1<br>P0153 - O2 Sensor Circuit Slow/Delayed Response Bank 2   |
| Monitor execution               | once per driving cycle   |
| Monitor Sequence                | > 30 seconds time in lack of movement test, > 30 seconds time in lack of switch test   |
| Sensors OK                      | ECT, IAT, MAF, MAP, VSS, TP, ETC, FRP, FVR, DPFE EGR, VCT, VMV/EVMV, CVS, CPV, EVAPSV, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, UEGO heaters OK, no "lack of switching" malfunction, no "lack of movement" malfunction, no UEGO circuit malfunction, no UEGO FAOS monitor malfunction |
| Monitoring Duration             | 12 seconds   |

| Typical UEGO "Response Rate" entry conditions:   |             |          |
|--|-------------|----------|
| Entry condition  | Minimum     | Maximum  |
| Flex Fuel Composition not changing   |             |          |
| Not in Phase 0 of Evap Monitor, Purge intrusive test not running   |             |          |
| No Purge System reset  |             |          |
| Not performing CSER spark retard   |             |          |
| Not performing intrusive UEGO Lack of Movement "defib"   |             |          |
| No IMRC transition in progress before entering the monitor and while in monitor  |             |          |
| Engine Coolant Temp  | 150 °F      | 240 °F   |
| Intake Air Temp  |             | 140 °F   |
| Time since entering closed loop fuel   | 10 seconds  |          |
| Inferred Catalyst Midbed Temperature   |             | 1600 °F  |
| Fuel Level   | 15%         |          |
| Short Term Fuel Trim Range   | -5%         | 5%       |
| Short Term Fuel Trim Absolute Change while in monitor  |             | 15%      |
| Air Mass   | 1.2 lbs/min |          |
| Engine Load  | 20%         | 70%      |
| Maximum change in engine load while in monitor   |             | 0.25     |
| Vehicle Speed  | 35 mph      | 80 mph   |
| Maximum change in vehicle speed while in monitor   |             | 9 mph    |
| Engine RPM   | 1000 rpm    | 3000 rpm |
| Maximum change in engine rpm while in monitor  |             | 150 rpm  |
| Commanded versus actual lambda range while in monitor  | 0.85        | 1.15     |
| No excessive cam angle movement over a half cycle A/F modulation when exhaust cam position is $\geq 40$ degree or intake cam position $\geq$ |             | 3 degree |

|   |            |            |
|---|------------|------------|
| -10 degree to indicate an acceptable A/F disturbance due to cam angle movement.   |            |            |
| No excessive movement between currently utilized long term fuel trim cells (1 = complete change from one cell to adjacent cell) |            | 0.5        |
| No excessive change in fuel injection ratio   |            | 50%        |
| UEGO ASIC not in recalibration mode   |            |            |
| No air passing through during valve overlap (scavenging).   |            |            |
| Battery Voltage   | 11.0 Volts | 18.0 Volts |

#### Typical UEGO "Response Rate" malfunction thresholds:

Threshold depends on failure type (symmetric slow/delay vs. Asymmetric slow/delay)

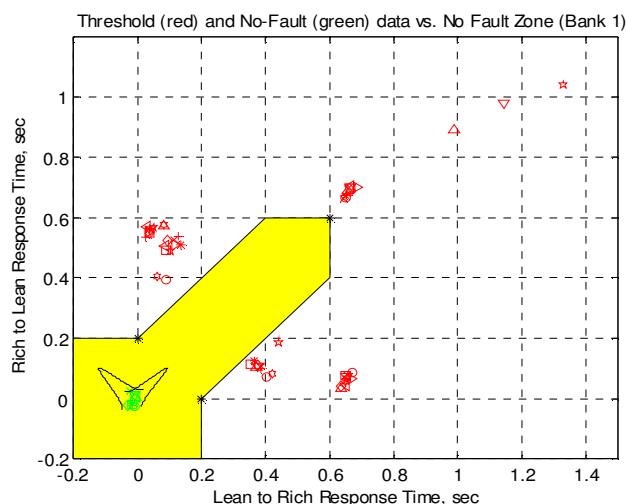

Example shown with lean-to-rich (0.2 sec), rich-to-lean (0.2 sec), and symmetric (0.6 sec) thresholds creating the yellow no-fault zone. The completed monitor results in two measurements, a lean-to-rich response time and a rich-to-lean response time. These response time values are used as x-y pairs to make a single point and then compared to the no-fault zone. Anywhere in the yellow is a pass and outside the yellow is a failure.

#### J1979 Front UEGO Mode \$06 Data

| Monitor ID | Test ID | Description                               |         |
|------------|---------|---|---------|
| \$01       | \$87    | UEGO11 Rich to Lean Response Time (P0133) | seconds |
| \$01       | \$88    | UEGO11 Lean to Rich Response Time (P0133) | seconds |
| \$05       | \$87    | UEGO21 Rich to Lean Response Time (P0153) | seconds |
| \$05       | \$88    | UEGO21 Lean to Rich Response Time (P0153) | seconds |

**DFSO 'Decel Fuel Shut Off' based Front UEGO Slow/Delayed Response Monitor (2023 MY+)**

| <b>UEGO "Response Rate" Operation:</b> |  |
|--|--|
| DTCs                                   | P0133 - O2 Sensor Circuit Slow/Delayed Response Bank 1<br>P0153 - O2 Sensor Circuit Slow/Delayed Response Bank 2   |
| Monitor execution                      | once per driving cycle   |
| Monitor Sequence                       | Measurements of response and delay are done on DFSO entry and DFSO exit.<br>DFSO events are created during vehicle deceleration or coast<br>Three measurements of rich to lean and lean to rich are required (calibratable).   |
| Sensors OK                             | ECT, IAT, MAF, MAP, VSS, TP, ETC, FRP, FVR, DPFE EGR, VCT, VMV/EVMV, CVS, CPV, EVAPSV, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, UEGO heaters OK, no "lack of switching" malfunction, no "lack of movement" malfunction, no UEGO circuit malfunction, no UEGO FAOS monitor malfunction |
| Monitoring Duration                    | Three (calibratable) 2 second long DFSO entry events<br>Three (calibratable) 2 second long DFSO exit events  |

| <b>Typical UEGO "Response Rate" entry conditions:</b>            |                |                |
|--|----------------|----------------|
| <b>Entry condition</b>   | <b>Minimum</b> | <b>Maximum</b> |
| Flex Fuel Composition not changing                               |                |                |
| Not in Phase 0 of Evap Monitor, Purge intrusive test not running |                |                |
| No Purge System reset  |                |                |
| Not performing CSER spark retard                                 |                |                |
| Not performing intrusive UEGO Lack of Movement "defib"           |                |                |
|  |                |                |
| Engine Coolant Temp  | 150 °F         | 240 °F         |
|  |                |                |
|  |                |                |
| Inferred Catalyst Midbed Temperature                             |                | 1600 °F        |
| Fuel Level   | 15%            |                |
|  |                |                |
|  |                |                |
| Air Mass, DFSO Entry   | 0.6 lb/min     | 1.2 lb/min     |
| Air mass, DFSO exit  | 0.6 lb/min     | 3 lb/min       |
| Engine Load  | 10%            | 80%            |
|  |                |                |
| Vehicle Speed  | 0 mph          | 80 mph         |
|  |                |                |
| Engine RPM, rich to lean   | 1200 rpm       | 3000 rpm       |

|   |            |            |
|---|------------|------------|
| Engine RPM, lean to rich                                  | 500 rpm    | 3000 rpm   |
| UEGO ASIC not in recalibration mode                       |            |            |
| No air passing through during valve overlap (scavenging). |            |            |
| Battery Voltage   | 11.0 Volts | 18.0 Volts |

#### Typical UEGO Response and Delay malfunction thresholds:

##### Symmetric response fault:

UEGO rich To lean average time constant > 0.55 s

<AND>

UEGO lean to rich average time constant > 0.55 s

##### Rich to lean response fault

UEGO rich to lean average time constant > 0.55 s

##### Lean to rich response fault

UEGO lean to rich average time constant > 0.55 s

##### Symmetric delay fault

UEGO rich to lean average delay > 0.4 s

<AND>

UEGO lean to rich average delay > 0.4 s

##### Rich to lean delay

UEGO rich to lean average delay > 0.55 s

##### Lean to rich delay

UEGO lean to rich average delay > 0.55 s

#### Typical UEGO Response and Delay Compensation thresholds:

##### Symmetric response fault:

UEGO rich To lean average time constant > large number (typically not used)

<AND>

UEGO lean to rich average time constant > large number (typically not used)

##### Rich to lean response fault

UEGO rich to lean average time constant > large number (typically not used)

##### Lean to rich response fault

UEGO lean to rich average time constant > large number (typically not used)

##### Symmetric delay fault

UEGO rich to lean average delay > 0.3 s <AND> UEGO lean to rich average delay > 0.3 s

< OR if UEGO diagnostic has not yet completed >

Closed loop fuel TD offset rich to lean > 0.3 s <AND> Closed loop fuel TD offset lean to rich > 0.3 s

**Rich to lean delay**

UEGO rich to lean average delay > large number (typically not used)

**Lean to rich delay**

UEGO lean to rich average delay > large number (typically not used)

**J1979 Front UEGO Mode \$06 Data**

| Monitor ID | Test ID | Description                               |         |
|------------|---------|---|---------|
| \$01       | \$89    | UEGO11 Rich to Lean Response Time (P0133) | seconds |
| \$01       | \$8A    | UEGO11 Lean to Rich Response Time (P0133) | Seconds |
| \$01       | \$8C    | UEGO11 Rich To Lean Delay (P0133)         | seconds |
| \$01       | \$8D    | UEGO11 Lean To Rich Delay (P0133)         | Seconds |
| \$05       | \$89    | UEGO21 Rich to Lean Response Time (P0153) | seconds |
| \$05       | \$8A    | UEGO21 Lean to Rich Response Time (P0153) | Seconds |
| \$05       | \$8C    | UEGO21 Rich To Lean Delay (P0153)         | seconds |
| \$05       | \$8D    | UEGO21 Lean To Rich Delay (P0153)         | Seconds |

## UEGO Heaters

| UEGO Heater Monitor Operation: |   |
|--------------------------------|---|
| DTCs                           | P0030 – HO2S Heater Control Circuit, Bank 1<br>P0050 – HO2S Heater Control Circuit, Bank 2<br>P0135 - HO2S Heater Circuit, Bank 1<br>P0155 - HO2S Heater Circuit, Bank 2<br>P0053 - HO2S Heater Resistance, Bank 1<br>P0059 - HO2S Heater Resistance, Bank 2  |
| Monitor execution              | once per driving cycle for heater current monitor, continuous for voltage monitoring and UEGO heater temperature control monitoring   |
| Monitor Sequence               | Heater current monitor: Stream 1 UEGO response test completed (2010 MY and earlier), Stream 2 and 3 HO2S functional tests completed (2010 MY and earlier), Stream 1 UEGO heater voltage check completed.<br><br>UEGO heater temperature control monitor: Stream 1 UEGO heater voltage check completed, Stream 1 UEGO circuit check completed, intrusive heater current monitor completed (if applicable). |
| Sensors OK                     | Heater current monitor: no HO2S/UEGO heater circuit malfunction, no UEGO heater temperature control malfunction, no UEGO circuit malfunction<br><br>UEGO heater temperature control monitor: no UEGO circuit malfunction, no UEGO heater circuit malfunction, no UEGO heater current monitor DTCs.  |
| Monitoring Duration            | < 10 seconds for heater voltage check, < 5 seconds for heater current check, >= 30 seconds for the UEGO heater temperature control monitor to register a malfunction  |

| Typical UEGO heater monitor entry conditions:   |            |   |
|---|------------|---|
| Entry condition   | Minimum    | Maximum   |
| Inferred UEGO unheated tip temperature (heater voltage check only)  | 75 °F      | 1706 °F   |
| Inferred UEGO heated tip temperature (heater current check only)  | 1346 °F    | 1616 °F   |
| UEGO heater-on time (heater current check only)   | 30 seconds |   |
| Engine RPM (heater current check only)  |            | 5000 rpm  |
| Time heater control voltage at maximum limit during open loop heater control (intrusive heater current check only)              |            | 9 seconds (Bosch UEGO)<br>20 seconds (NTK UEGO) |
| Time heater control voltage at maximum or minimum limit during closed loop heater control (intrusive heater current check only) |            | 7 seconds (Bosch UEGO)<br>1 second (NTK UEGO)   |
| Inferred UEGO unheated tip temperature (heater control monitor only)  | 75 °F      | 1000 °F   |
| UEGO ASIC not in recalibration mode   |            |   |
| Battery Voltage   | 11.0 Volts | 18.0 Volts                                      |

**Typical UEGO heater check malfunction thresholds:**

Smart driver status indicated malfunction (heater voltage check)

Number monitor retries allowed for malfunction  $\geq 30$  (heater voltage check)

Heater current outside limits:

< 1.0 Amps or > 3 Amps (intrusive test) or < 0.55 Amps or > 3 Amps (Bosch UEGO)

< 1.45 Amps or > 3 Amps (intrusive test) or < 1.05 Amps or > 3 Amps (NTK UEGO)

< 1.62 Amps or > 3.80 Amps (intrusive test) or < 1.12 Amps or > 3.80 Amps (Conti-Moto CBP-A2 PCM with NTK UEGO)

UEGO heater temperature control monitor:  $\geq 30$  seconds to register a malfunction while the heater control integrator is at its maximum or minimum limit

**J1979 UEGO Heater Mode \$06 Data**

| Monitor ID | Test ID | Description                   | Units |
|------------|---------|-------------------------------|-------|
| \$41       | \$81    | HO2S11 Heater Current (P0053) | Amps  |
| \$45       | \$81    | HO2S21 Heater Current (P0059) | Amps  |

## Rear HO2S Monitor

### Rear HO2S Signal

| Rear HO2S Functional Check Operation: |   |
|---------------------------------------|---|
| DTCs Sensor 2                         | P0136 - HO2S12 No activity or<br>P2270 - HO2S12 Signal Stuck Lean<br>P2271 - HO2S12 Signal Stuck Rich<br>P0156 - HO2S22 No activity or<br>P2272 - HO2S22 Signal Stuck Lean<br>P2273 - HO2S22 Signal Stuck Rich  |
| Monitor execution                     | once per driving cycle for activity test  |
| Monitor Sequence                      | > 30 seconds time in lack of movement test (UEGO only), > 30 seconds time in lack of switch test, front HO2S/UEGO response test completed, Stream 2 HO2S circuit open/short to ground test time slice completed.  |
| Sensors OK                            | ECT, IAT, MAF, MAP, VSS, TP, ETC, FRP, FVR, DPFE EGR, VCT, VMV/EVMV, CVS, CPV, EVAPSV, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, UEGO/HO2S (front and rear) heaters OK, no "lack of switching" malfunction, no "lack of movement" malfunction (UEGO only), no UEGO/HO2S (front and rear) circuit malfunction, no rear HO2S out of range low malfunction, no UEGO FAOS monitor malfunction, no front HO2S/UEGO response rate malfunction |
| Monitoring Duration                   | continuous until monitor completed  |

| Typical Rear HO2S functional check entry conditions:    |               |         |
|---|---------------|---------|
| Entry condition   | Minimum       | Maximum |
| Stream 1 HO2S not in CSD recovery mode                  |               |         |
| Flex Fuel Composition not changing                      |               |         |
| Not in Phase 0 of Evaporative System Monitor            |               |         |
| No Purge System reset                                   |               |         |
| Purge intrusive test not running                        |               |         |
| Not performing CSER spark retard                        |               |         |
| Engine Coolant Temp                                     | 150 °F        | 240 °F  |
| Intake Air Temp   |               | 140 °F  |
| Time since entering closed loop fuel                    | 10 seconds    |         |
| Inferred Catalyst Midbed Temperature                    |               | 1600 °F |
| Heater-on Inferred Sensor(s) 2/3 HO2S Temperature Range | 400 °F        | 1400 °F |
| Sensor(s) 2/3 HO2S heater-on time                       | 90 seconds    |         |
| Short Term Fuel Trim Range                              | -9%           | 11%     |
| Fuel Level (forced excursion only)                      | 15%           |         |
| Throttle position                                       | Part throttle |         |

|   |            |            |
|---|------------|------------|
| Engine RPM (forced excursion only)                        | 1000 rpm   | 2000 rpm   |
| UEGO ASIC not in recalibration mode                       |            |            |
| No air passing through during valve overlap (scavenging). |            |            |
| Battery Voltage   | 11.0 Volts | 18.0 Volts |

#### Typical Rear HO2S functional check malfunction thresholds:

Does not exceed rich and lean HO2S voltage threshold envelope:

Rich < 0.42 volts

Lean > 0.48 volts

#### J1979 Rear HO2S Functional Check Mode \$06 Data

| Monitor ID | Test ID | Description                        |       |
|------------|---------|------------------------------------|-------|
| \$02       | \$01    | HO2S12 sensor switch-point voltage | volts |
| \$06       | \$01    | HO2S22 sensor switch-point voltage | volts |

#### Rear HO2S “Over Voltage Test” Operation:

|                     |  |
|---------------------|--|
| DTCs                | P0138 - HO2S12 Circuit High Voltage<br>P0158 - HO2S22 Circuit High Voltage |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | rear HO2S heaters OK   |
| Monitoring Duration | 10 seconds to register a malfunction                                       |

#### Typical HO2S “Over Voltage Test” entry conditions:

| Entry condition                      | Minimum    | Maximum    |
|--------------------------------------|------------|------------|
| Inferred Stream 2/3 HO2S Temperature | 400 °F     |            |
| Sensor(s) 2/3 HO2S heater-on time    | 90 seconds |            |
| Voltage at sensor 2 HO2S connector   | 11.0 Volts |            |
| Battery Voltage                      | 11.0 Volts | 18.0 Volts |

#### Typical HO2S “Over Voltage Test” malfunction thresholds:

HO2S Voltage > 1.1 volts or 1.9 volts (pending on feedback circuit) for 10 seconds for over voltage test

**Rear HO2S “Out of Range Low Test” Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P2A01 HO2S12 Circuit Range/Performance (Bank 1 Sensor 2)<br>P2A04 HO2S22 Circuit Range/Performance (Bank 2 Sensor 2) |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | rear HO2S heaters OK, no rear HO2S shorted to ground malfunction   |
| Monitoring Duration | 10 seconds to register a malfunction   |

**Typical HO2S “Out of Range Low Test” entry conditions:**

| Entry condition                    | Minimum    | Maximum    |
|------------------------------------|------------|------------|
| Inferred Stream 2 HO2S Temperature | 400 °F     |            |
| Sensor 2 HO2S heater-on time       | 90 seconds |            |
| Voltage at sensor 2 HO2S connector | 11.0 Volts |            |
| Battery Voltage                    | 11.0 Volts | 18.0 Volts |

**Typical HO2S “Out of Range Low Test” malfunction thresholds:**

HO2S Voltage < -0.2 volts for 10 seconds for out of range low test

**Rear HO2S “Circuit Open/Shorted to Ground Test via HO2S Impedance Measurement” Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P0137 HO2S12 Circuit Low Voltage (Bank 1 Sensor 2)<br>P0157 HO2S22 Circuit Low Voltage (Bank 2 Sensor 2) |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | rear HO2S heaters OK, no rear HO2S out of range low malfunction, no rear HO2S functional DTCs            |
| Monitoring Duration | 10 seconds to register a malfunction   |

**Typical HO2S “Circuit Open/Shorted to Ground Test via HO2S Impedance Measurement” entry conditions:**

| Entry condition  | Minimum                  | Maximum                   |
|--|--------------------------|---------------------------|
| Closed Loop  |                          |                           |
| Inferred Stream 2 HO2S Temperature   | 680 °F                   | 1526 °F (short to ground) |
| Inferred Stream 2 HO2S Element Temperature (applicable only if Stream 2 HO2S Impedance Monitor is enabled)   | 480 °F                   |                           |
| Time Stream 2 HO2S inferred element temperature within 10% of the predicted steady state temperature (applicable only if Stream 2 HO2S Impedance Monitor is enabled) | 1 second                 |                           |
| Sensor 2 HO2S heater-on time   | 60 seconds               |                           |
| All injectors on (no Decel Fuel Shut Off)  |                          |                           |
| Not commanding lean lambda due to torque reduction   |                          |                           |
| Not requesting enrichment due to catalyst reactivation following decel fuel shut off   |                          |                           |
| Sensor 2 HO2S voltage (open circuit voltage fault band):<br>Conti-Moto CBP-A2 PCM  | -0.05 Volts              | 0.05 Volts                |
| Other PCMs<br>or depending on feedback circuit   | 0.27 Volts<br>1.30 Volts | 0.50 Volts<br>1.90 Volts  |
| Sensor 2 HO2S voltage (circuit shorted to ground voltage fault band):  | -3.00 Volts              | 0.06 Volts                |
| Voltage at sensor 2 HO2S connector   | 11.0 Volts               |                           |
| Battery Voltage  | 11.0 Volts               | 18.0 Volts                |

**Typical HO2S “Circuit Open/Shorted to Ground Test” malfunction thresholds:**

HO2S Circuit Open:

HO2S Impedance > 500k ohms (Conti-Moto CBP-A2, Conti-Siemens CBP-C2, Bosch Green Oak, Bosch MED ECM, Conti EMS22xx processors)

> 250k ohms (Conti EMS22xx, Conti EMS23xx, Conti EMS24xx without feedback circuit processors)

> 150k ohms (Bosch MEDG, Bosch MED ECM with feedback circuit, Bosch MG1 multicore, Bosch ME processors)

> 20k ohms (Conti EMS24xx with feedback circuit, Conti EMX25xx, Conti EMS27xx, Conti EMS28xx, Conti EMS290x, Conti EMS295x processors)

Fault counter > 14 (200 msec test every 500 msec check)

HO2S Circuit Shorted to ground:

HO2S Impedance < 10 ohms

Fault counter > 17 (100 msec test every 500 msec check)

| HO2S "Wire Diagnostics via ASIC" Operation: |  |
|---|--|
| DTCs  | P0137 - HO2S12 Circuit Low Voltage (Bank 1 Sensor 2)<br>P0157 - HO2S22 Circuit Low Voltage (Bank 2 Sensor 2)<br>P0138 - HO2S12 Circuit High Voltage<br>P0158 - HO2S22 Circuit High Voltage |
| Monitor execution                           | continuous   |
| Monitor Sequence                            | None   |
| Sensors OK                                  | HO2S heaters OK  |
| Monitoring Duration                         | 10 seconds to register a malfunction   |

| Typical HO2S "Wire Diagnostics via ASIC" entry conditions: |            |            |
|--|------------|------------|
| Entry condition  | Minimum    | Maximum    |
| Fault reported by UEGO ASIC                                |            |            |
| Battery Voltage  | 11.0 Volts | 18.0 Volts |

| Typical HO2S "Wire Diagnostics via ASIC " malfunction thresholds:                           |
|---|
| UEGO ASIC indicated malfunction, DTC sets after 10 seconds when circuit failure is present. |

## Rear HO2S Decel Fuel Shut Off Response Test (2009 MY+)

| Rear O2 DFSO Response Monitor Operation: |  |
|--|--|
| DTCs                                     | <p>P013A – O2 Sensor Slow Response – Rich to Lean (Bank 1 Sensor 2)</p> <p>P013C – O2 Sensor Slow Response – Rich to Lean (Bank 2 Sensor 2)</p> <p>Model year 2018 and previous:</p> <p>P013E – O2 Sensor Delayed Response – Rich to Lean (Bank 1 Sensor 2) (sensor stuck in range)</p> <p>P014A – O2 Sensor Delayed Response – Rich to Lean (Bank 2 Sensor 2) (sensor stuck in range)</p> <p>Model year 2019 and later:</p> <p>P2270 – O2 sensor stuck lean (bank 1 sensor 2)</p> <p>P2271 – O2 sensor stuck rich (bank 1 sensor 2)</p> <p>P2272 – O2 sensor stuck lean (bank 2 sensor 2)</p> <p>P2273 – O2 sensor stuck rich (bank 2 sensor 2)</p> |
| Monitor execution                        | Once per driving cycle, after 3 DFSO events, with a “learn ahead” additional 3 DFSO events   |
| Monitor Sequence                         | > 30 seconds time in lack of movement test (UEGO only), > 30 seconds time in lack of switch test, front HO2S/UEGO response test completed, HO2S 2 and 3 functional tests completed, HO2S/UEGO heater voltage and current checks completed,   |
| Sensors OK                               | ECT, IAT, MAF, VSS, TP, ETC, FRP, EGR, VCT, VMV/EVMV, CVS, FTP, CKP, CMP, ignition coils, injectors, no misfire DTCs, no system failures affecting fuel, no EVAP gross leak failure, UEGO heaters OK, rear HO2S heaters OK, no "lack of switching" malfunction, no "lack of movement" malfunction, no UEGO circuit malfunction, no rear stream 2 HO2S circuit malfunction, no rear stream 2 HO2S functional DTCs, Not performing CSER spark retard. Flex fuel composition not changing. No intrusive EGO monitors running.   |
| Monitoring Duration                      | 3 DFSO events, 450 seconds on the FTP.   |

| Typical DFSO Response Monitor entry conditions: |            |            |
|---|------------|------------|
| Entry condition                                 | Minimum    | Maximum    |
| Air Mass  | 0.5        | 6          |
| Vehicle Speed                                   |            | 90         |
| Engine Coolant Temp                             | 155 °F     | 240 °F     |
| Catalyst Temperature (Inferred)                 | 800 °F     | 1600 °F    |
| Rear Ego Tip Temperature (Inferred)             | 800 °F     |            |
| Fuel Level                                      | 15%        |            |
| Fuel In Control                                 | -3%        | 3%         |
| Adaptive Fuel Within Limits                     | -3%        | 3%         |
| Battery Voltage                                 | 11.0 Volts | 18.0 Volts |
| Rich Voltage on downstream CMS sensor(s)        | 0.6 Volts  |            |

|  |                   |          |
|--|-------------------|----------|
| Rich Voltage on upstream HEGO / UEGO sensor(s) | 0.45 Volts (HEGO) | 1 (UEGO) |
|--|-------------------|----------|

#### Typical DFSO response rate malfunction thresholds:

Rich to lean response rate thresholds:

Normal Threshold = > 0.0 mV/sec

Fast Initial Response Threshold = > 0.0 mV/sec

Step Change Threshold = > 0.3 mV/sec

Note that the thresholds use a normalized offset and the threshold is set at "zero".

#### Typical DFSO delayed response malfunction (P013E / P014A) thresholds (MY18 and prior):

Successive failures are counted up (5 to 10 faults). Monitor will now intrusively force rich fuel to run the test.

Intrusive controls will time out based on drivability (1 to 2 sec).

Successive drivability failures are counted up (3 faults).

Intrusive controls will now time out at a slower time (5 to 10 sec) and count a fault. After 3 faults are counted, a DTC is set.

#### J1979 DFSO response rate Mode \$06 Data (Model Year 18 and previous)

| Monitor ID | Test ID | Description   |        |
|------------|---------|---|--------|
| \$02       | \$85    | HO2S12 Fuel Shut off Rich to Lean Response Rate (P013A) | mV/sec |
| \$02       | \$86    | HO2S12 Fuel Shut off Rich to Lean Response Time (P013E) | msec   |
| \$06       | \$85    | HO2S22 Fuel Shut off Rich to Lean Response Rate (P013C) | mV/sec |
| \$06       | \$86    | HO2S22 Fuel Shut off Rich to Lean Response Time (P014A) | msec   |

#### J1979 DFSO response rate Mode \$06 Data (Model Year 19 and later)

| Monitor ID | Test ID | Description   |        |
|------------|---------|---|--------|
| \$02       | \$85    | HO2S12 Fuel Shut off Rich to Lean Response Rate (P013A) | mV/sec |
| \$02       | \$87    | HO2S12 stuck in range rich (P2271)                      | Volts  |
| \$02       | \$88    | HO2S12 stuck in range lean (P2270)                      | Volts  |
| \$06       | \$85    | HO2S22 Fuel Shut off Rich to Lean Response Rate (P013C) | mV/sec |
| \$06       | \$87    | HO2S22 stuck in range rich (P2273)                      | Volts  |
| \$06       | \$88    | HO2S22 stuck in range lean (P2272)                      | Volts  |

## Rear HO2S Heaters

| HO2S Heater Monitor Operation: |  |
|--------------------------------|--|
| DTCs Sensor 2                  | P0036 – HO2S12 Heater Control Circuit, Bank 1<br>P0056 – HO2S22 Heater Control Circuit, Bank 2<br>P0141 - O2 Sensor Heater Circuit, Bank 1<br>P0161 - O2 Sensor Heater Circuit, Bank 2<br>P0054 - HO2S Heater Resistance, Bank 1<br>P0060 - HO2S Heater Resistance, Bank 2   |
| DTCs Sensor 3                  | P00D2 - HO2S Heater Control Circuit Range/Performance (Bank 1, Sensor 2)<br>P00D4 - HO2S Heater Control Circuit Range/Performance (Bank 2, Sensor 2)<br>P0147 - O2 Sensor Heater Circuit, Bank 1<br>P0167 - O2 Sensor Heater Circuit, Bank 2<br>P0055 - HO2S Heater Resistance, Bank 1<br>P0061 - HO2S Heater Resistance, Bank 2   |
| Monitor execution              | once per driving cycle for heater current monitor and HO2S impedance monitor, continuous for voltage monitoring and HO2S heater temperature control monitoring.  |
| Monitor Sequence               | Heater current monitor: Stream 1 HO2S/UEGO response test complete (2010 MY and earlier), Stream 2 and 3 HO2S functional tests completed (2010 MY and earlier), HO2S/UEGO heater voltage check completed.<br><br>HO2S heater temperature control monitor: Stream 2 HO2S heater voltage check completed, Stream 2 HO2S circuit check completed, intrusive heater current monitor completed (if applicable).<br><br>HO2S impedance monitor: Stream 2 HO2S heater voltage check complete, Stream 2 HO2S circuit check and test time slice completed. |
| Sensors OK                     | Heater current monitor: no HO2S/UEGO heater voltage DTCs.<br><br>HO2S heater temperature control monitor: no rear HO2S circuit malfunction, no rear HO2S out of range low malfunction, no rear HO2S heater circuit malfunction, no HO2S heater current monitor DTCs.<br><br>HO2S impedance monitor: rear HO2S heaters OK, no rear HO2S out of range low malfunction, no rear HO2S functional DTCs, no rear HO2S circuit malfunction.   |
| Monitoring Duration            | < 10 seconds for heater voltage check, < 5 seconds for heater current check, >= 30 seconds for the HO2S heater temperature control monitor to register a malfunction, < 11 seconds for HO2S impedance test.  |

| Typical HO2S heater monitor entry conditions:  |                          |                          |
|--|--------------------------|--------------------------|
| Entry condition  | Minimum                  | Maximum                  |
| <b>Heater Voltage Test:</b>  |                          |                          |
| Inferred HO2S 2/3 Temperature  | 400 °F                   | 1562 °F                  |
| Battery Voltage  | 11.0                     | 18.0 Volts               |
| <b>Heater Current Test:</b>  |                          |                          |
| Inferred HO2S 2 Temperature  | 250 °F                   | 1436 °F                  |
| Inferred HO2S 3 Temperature  | 250 °F                   | 1400 °F                  |
| HO2S 1/2/3 heater-on time  | 30 seconds               |                          |
| Engine RPM   |                          | 5000 rpm                 |
| Battery Voltage  | 11.0                     | 18.0 Volts               |
| <b>HO2S Heater Temperature Control Monitor:</b>  |                          |                          |
| Heater voltage test completed  |                          |                          |
| Stream 2 HO2S circuit check completed  |                          |                          |
| Intrusive heater current monitor completed (if applicable)   |                          |                          |
| Battery Voltage  | 11.0                     | 18.0 Volts               |
| <b>HO2S Impedance Monitor:</b>   |                          |                          |
| Inferred Stream 2 HO2S Temperature   | 680 °F                   |                          |
| Inferred Stream 2 HO2S Element Temperature   | 480 °F                   | 1020 °F                  |
| Time Stream 2 HO2S inferred element temperature within 10% of the predicted steady state temperature   | 1 second                 |                          |
| Sensor 2 HO2S heater-on time   | 60 seconds               |                          |
| All injectors on (no Decel Fuel Shut Off)  |                          |                          |
| Not commanding lean lambda due to torque reduction   |                          |                          |
| Not requesting enrichment due to catalyst reactivation following decel fuel shut off                   |                          |                          |
| Sensor 2 HO2S voltage (open circuit voltage fault band- intrusive test only):<br>Conti-Moto CBP-A2 PCM | -0.05 Volts              | 0.05 Volts               |
| Other PCMs<br>or depending on feedback circuit   | 0.27 Volts<br>1.30 Volts | 0.50 Volts<br>1.90 Volts |
| Sensor 2 HO2S voltage (circuit shorted to ground voltage fault band- intrusive test only):             | -3.00 Volts              | 0.06 Volts               |
| Voltage at sensor 2 HO2S connector   | 11.0 Volts               |                          |
| Battery Voltage  | 11.0 Volts               | 18.0 Volts               |

**Typical HO2S heater check malfunction thresholds:****Heater Voltage Test:**

Smart driver status indicated malfunction

Number monitor retries allowed for malfunction  $\geq 30$

**Heater Current Test:**

Heater current outside limits:

- < 0.220 Amps or > 3 Amps, (NTK Thimble)
- < 0.400 Amps or > 3 Amps, (Bosch Thimble)
- < 0.550 Amps or > 3 Amps, (Bosch Planar)
- < 0.465 Amps or > 3 Amps, (NTK Fast Light Off)
- < 0.230 Amps or > 3 Amps, (Bosch Fast Light Off)

**HO2S Heater Temperature Control Monitor:**

$\geq 30$  seconds to register a malfunction while the heater control integrator is at its maximum or minimum limit and HO2S Impedance  $\geq 1$  k ohms (Bosch), 11,500 ohms (NTK)

**HO2S Impedance Test:**

HO2S internal impedance > table below (ohms), fault counter  $\geq 10$

| Voltage at HO2S (Volts)/<br>HO2S inferred element temp (°F) | 11    | 13    | 14    | 15   | 18   |
|---|-------|-------|-------|------|------|
| 480   | 71734 | 26000 | 14583 | 9268 | 2856 |
| 570   | 25864 | 10522 | 6496  | 3733 | 1644 |
| 671   | 8629  | 4057  | 2905  | 2083 | 1175 |
| 730   | 3253  | 1862  | 1399  | 1066 | 576  |
| 770   | 2906  | 1614  | 1223  | 941  | 530  |
| 905   | 838   | 575   | 470   | 383  | 273  |
| 1020  | 675   | 473   | 410   | 359  | 251  |

**J1979 HO2S Heater Mode \$06 Data**

| Monitor ID | Test ID | Description                    | Units |
|------------|---------|--------------------------------|-------|
| \$42       | \$81    | HO2S12 Heater Current (P0054)  | Amps  |
| \$46       | \$81    | HO2S22 Heater Current (P0060)  | Amps  |
| \$42       | \$82    | O2S12 Heater Impedance (P00D2) | kOhm  |
| \$46       | \$82    | O2S22 Heater Impedance (00D4)  | kOhm  |

## Stepper Motor EGR System Monitor

### EGR Stepper Monitor Electrical Check Operation:

|                     |                                     |
|---------------------|-------------------------------------|
| DTCs                | P0403                               |
| Monitor execution   | continuous                          |
| Monitor Sequence    | none                                |
| Sensors OK          |                                     |
| Monitoring Duration | 4 seconds to register a malfunction |

### Stepper motor electrical check entry conditions:

Battery voltage > 11.0 volts

### Typical EGR electrical check malfunction thresholds:

"Smart" Coil Output Driver status indicates open or short to ground, or short to power

| MAP Sensor Check Operation |   |
|----------------------------|---|
| DTCs                       | P0107 (low voltage), P0108 (high voltage) |
| Monitor execution          | continuous                                |
| Monitor Sequence           | none                                      |
| Sensors OK                 | not applicable                            |
| Monitoring Duration        | 5 seconds to register a malfunction       |

| MAP electrical check entry conditions: |
|--|
| Battery voltage > 11.0 volts           |

| Typical MAP sensor check malfunction thresholds: |
|--|
| Voltage < 0.024 volts or voltage > 4.96 volts    |

| MAP Sensor Rationality Check Operation |                                      |
|--|--------------------------------------|
| DTCs                                   | P0106                                |
| Monitor execution                      | continuous                           |
| Monitor Sequence                       | None                                 |
| Sensors OK                             | ECT, ACT, TP (Throttle Position)     |
| Monitoring Duration                    | 10 seconds to register a malfunction |

| Typical MAP Rationality check entry conditions: |         |          |
|---|---------|----------|
| Entry Conditions                                | Minimum | Maximum  |
| Change in load                                  |         | 5%       |
| Engine rpm                                      | 580 rpm | 2500 rpm |

| Typical MAP Rationality check malfunction thresholds:     |
|---|
| Difference between inferred MAP and actual MAP > 10 in Hg |

| MAP Sensor Intermittent Check Operation |                |
|---|----------------|
| DTCs                                    | P0109 (MIL)    |
| Monitor execution                       | Continuous     |
| Monitor Sequence                        | None           |
| Sensors OK                              | not applicable |
| Monitoring Duration                     | 25 occurrences |

| Typical MAP Intermittent check malfunction thresholds: |
|--|
| Voltage < 0.024 volts or voltage > 4.96 volts          |

| EGR Flow Check Operation: |   |
|---------------------------|---|
| DTCs                      | P0400   |
| Monitor execution         | once per driving cycle  |
| Monitor Sequence          | None  |
| Sensors OK                | CPS, ECT, IAT, MAF, MAP (P0106/7/8), TP, BARO not available yet |
| Monitoring Duration       | 200 seconds (600 data samples)                                  |

| Typical EGR flow check entry conditions:      |             |             |
|---|-------------|-------------|
| Entry Condition                               | Minimum     | Maximum     |
| Engine RPM                                    | 1400 rpm    | 2600 rpm    |
| Inferred Ambient Air Temperature              | 32 °F       | 140 °F      |
| Engine Coolant Temperature                    | 80 °F       | 250 °F      |
| Engine RPM Steady (change/0.050 sec)          |             | 100 rpm     |
| MAP Steady (change/0.050 sec)                 |             | 0.5 in Hg   |
| Engine Load Steady (change/0.050 sec)         |             | 1.5 %       |
| BARO  | 22.5 " Hg   |             |
| Intake Manifold Vacuum                        | 9.0 "Hg     | 16.0 "Hg    |
| Vehicle Speed                                 | 35 MPH      | 70 MPH      |
| Engine Throttle Angle steady(absolute change) | 0.0 degrees | 4.0 degrees |

| Typical EGR flow check malfunction thresholds: |
|--|
| < 1.0 MAP differential                         |

| J1979 Mode \$06 Data |         |   |          |
|----------------------|---------|---|----------|
| Monitor ID           | Test ID | Description                                       | Units    |
| \$31                 | \$82    | Normalized MAP differential (range 0 – 2) (P0400) | unitless |

## High Pressure Cooled EGR Monitor (HPEGR)

### EGR DPFE Electrical Check Operation:

|                     |   |
|---------------------|---|
| DTCs                | P044C EGR Sensor "C" Circuit Low<br>P044D EGR Sensor "C" Circuit High |
| Monitor execution   | Continuous, during EGR monitor  |
| Monitor Sequence    | None  |
| Sensors OK          |   |
| Monitoring Duration | 5 seconds to register a malfunction                                   |

### Typical DPFE EGR electrical check entry conditions:

Continuous

### Typical DPFE EGR electrical check malfunction thresholds:

DPFE sensor outside voltage: > 4.65 volts, < 0.25 volts

### DPFE Sensor Transfer Function

| Pressure Range: -10.989 [kPa] to +18.315 [kPa]                                 |                     |
|--|---------------------|
| $V_{out} = V_{ref} * (0.027304 * P + 0.40031)$ , P in [kPa], Vref is 5.0 volts |                     |
| Volts  | Delta Pressure, kPa |
| 0.500  | -11.00              |
| 0.90   | -8.07.0             |
| 1.50   | -3.6750             |
| 1.90   | -0.745              |
| 2.10   | 0.720               |
| 2.50   | 3.65                |
| 3.70   | 12.44               |
| 4.50   | 18.3                |

| DPFE EGR Hose Check Operation: |  |
|--------------------------------|--|
| DTCs                           | P139A EGR Sensor "C" Hoses Reversed<br>P139B EGR Sensor "C" Upstream Hose Off or Plugged<br>P139C EGR Sensor "C" Downstream Hose Off or Plugged                        |
| Monitor execution              | Continuous during the driving cycle  |
| Monitor Sequence               | after electrical checks completed  |
| Sensors OK                     | P0071, P0072, P0073, P0106, P0107, P0108, P0111, P0112, P0113, P0116, P0117, P0118, P2227, P2228, P2229, P04FA, P042E, P042F, P044C, P044D, P0405, P0406, P0472, P0473 |
| Monitoring Duration            | 25 to 50 seconds to register a malfunction   |

| Typical DPFE EGR hose check entry conditions: |              |             |
|---|--------------|-------------|
| Entry Conditions                              | Minimum      | Maximum     |
| Ambient Air Temperature                       | > 35 deg F   | < 200 deg F |
| BARO  | > 22.0 in Hg |             |
| Entry conditions for hoses reversed           |              |             |
| EGR Valve Position (EGR commanded on)         | > 0%         | 100%        |
| Entry conditions for hoses off or plugged     |              |             |
| EGR flow near zero                            | >0.5 g/s     |             |
| Manifold Pressure                             | > -85 kPa    | < 102 kPa   |

| Typical EGR hose check malfunction thresholds: |
|--|
| P139A: DPFE signal < -0.5 kPa for 30 sec       |
| P139B: DPFE Signal > 13.0 kPa for 25 sec       |
| P139C: DPFE Signal < -4.0 kPa for 50 sec       |

| <b>EGR Control Valve Electrical Check Operation:</b> |  |
|--|--|
| DTCs   | EGR valve position sensor tests<br>P0405 EGR Sensor "A" Circuit Low<br>P0406 EGR Sensor "A" Circuit High<br>P046D EGR Sensor "A" Circuit Intermittent/Erratic<br>EGR valve control circuit tests<br>P0404 EGR "A" Control Stuck P04FA EGR "A" Control Temperature Too High |
| Monitor execution                                    | Continuous, during EGR monitor   |
| Monitor Sequence                                     | None   |
| Sensors OK   | P0071, P0072, P0073, P0106, P0107, P0108, P2227, P2228, P2229, P044C, P044D, P0405, P0406<br><br>P0071, P0072, P0073, P0106, P0107, P0108, P0111, P0112, P0113, P0116, P0117, P0118, P2227, P2228, P2229, P044C, P044D, P0472, P0473                                       |
| Monitoring Duration                                  | 4 seconds to register a malfunction  |

| <b>Typical EGR Control Valve entry conditions:</b> |              |         |
|--|--------------|---------|
| Entry Conditions                                   | Minimum      | Maximum |
| Battery Voltage                                    | > 8.25 volts |         |
| H-Bridge Voltage                                   | > 8.25 volts |         |
| Engine rpm   | > 400 rpm    |         |

| <b>EGR Valve Position Sensor Transfer Function</b>      |                 |
|---|-----------------|
| $V_{out} = 0.625 * (mm) - 0.25$ . (6 mm maximum travel) |                 |
| Volts   | Valve Lift (mm) |
| 0.25 (5% of full scale)                                 | 0               |
| 0.50 (10% of full scale)                                | 1.2             |
| 1.00 (20% of full scale)                                | 2.0             |
| 1.50 (30% of full scale)                                | 2.8             |
| 2.50 (50% of full scale)                                | 4.4             |
| 3.50 (70% of full scale)                                | 6.0             |
| 4.75 (95% of full scale)                                | 8.0             |

**Typical EGR Control Valve electrical check malfunction thresholds:**

P0405: EGR Valve Position signal < 5% of full scale for 4 sec

P0406: EGR Valve Position signal > 95% of full scale for 4 sec

P046D: EGR Valve Position signal > 95% or < 5% of full scale for 0.4 sec

P042E: Observed actuator A position < calculated low limit minus calculated margin and observed actuator A position and observed actuator A position calculated high limit > 11 mm.

P042F: Observed actuator A position < calculated low limit minus calculated margin and observed actuator A position and observed actuator A position calculated high limit < 11 mm.

P04FA: 2 \* observed position > 5.5mmk and 8 \* estimated position < 5.5 mm and observed velocity of position > 5.5 mm/s and opening by percent <10%.

**EGR Flow Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P0401 – Insufficient EGR Flow<br>P0402 – Excessive EGR Flow  |
| Monitor execution   | once per driving cycle   |
| Monitor Sequence    | Must pass circuit (P044C, P044D) & hose tests (P139B, P139C) before a flow test fault is determined            |
| Sensors OK          | P0071, P0072, P0073, P0106, P0107, P0108, P2227, P2228, P2229, P044C, P044D, P0405, P0406, P139A, P139B, P139C |
| Monitoring Duration | 70 seconds to register a malfunction   |

**Typical EGR Flow check entry conditions:**

| Entry Conditions        | Minimum      | Maximum     |
|-------------------------|--------------|-------------|
| Ambient Air Temperature | > 35 deg F   | < 200 deg F |
| BARO                    | > 22.0 in Hg |             |
| Engine running          |              |             |

**Typical EGR flow check malfunction thresholds:**

P0401: Insufficient flow rate ratio > 0.6 after sufficient EGR flow accumulation

P0402: Excessive flow rate ratio > 0.4 after sufficient EGR flow accumulation

**J1979 Mode \$06 Data**

| Monitor ID | Test ID | Description for ESM DPFE                                    | Units    |
|------------|---------|---|----------|
| \$32       | \$85    | Flow ratio for insufficient flow test and threshold (P0401) | Unitless |
| \$32       | \$84    | Flow ratio for excessive flow test and threshold (P0402)    | Unitless |

## EGR Cooler and Diagnostics

| EGR Temperature Sensor "B" Electrical Check Operation: |   |
|--|---|
| DTCs   | P041C EGR Temperature Sensor "B" Circuit Low<br>P041D EGR Temperature Sensor "B" Circuit High<br>P041B EGR Temperature Sensor "B" Range/Performance |
| Monitor execution                                      | Continuous, during EGR monitor  |
| Monitor Sequence                                       | None  |
| Sensors OK   | No EGR flow faults (P0401, P0402)   |
| Monitoring Duration                                    | 5 seconds to register a malfunction   |

| Typical EGR Temperature Sensor "B" check entry conditions: |
|--|
| Continuous   |

| Typical EGR Temperature Sensor "B" check malfunction thresholds: |
|--|
| EGR Temp Sensor "B" voltage: > 4.94 volts, < 0.32 volts          |

| Dual Range EGR Temperature Sensor Transfer Function |                      |       |                     |
|---|----------------------|-------|---------------------|
| Range Switched at 100°C +/-5°C                      |                      |       |                     |
| Volts   | Cold Range Temp (°C) | Volts | Hot Range Temp (°C) |
| 0.198   | 130                  | 0.378 | 250                 |
| 0.331   | 110                  | 0.438 | 240                 |
| 0.567   | 90                   | 0.511 | 230                 |
| 0.747   | 80                   | 0.596 | 220                 |
| 0.984   | 70                   | 0.697 | 210                 |
| 1.677   | 50                   | 0.818 | 200                 |
| 2.137   | 40                   | 0.960 | 190                 |
| 2.913   | 25                   | 1.127 | 180                 |
| 3.668   | 10                   | 1.323 | 170                 |
| 4.087   | 0                    | 1.548 | 160                 |
| 4.416   | -10                  | 2.091 | 140                 |
| 4.648   | -20                  | 2.732 | 120                 |
| 4.799   | -30                  | 3.069 | 110                 |
| 4.891   | -40                  | 3.708 | 90                  |

**Exhaust Pressure Sensor “A” Electrical Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P0472 Exhaust Pressure Sensor "A" Circuit Low<br>P0473 Exhaust Pressure Sensor "A" Circuit High<br>P0474 Exhaust Pressure Sensor "A" Circuit Intermittent/Erratic<br>P0471 Exhaust Pressure Sensor "A" Circuit Range/Performance |
| Monitor execution   | Continuous, during EGR monitor   |
| Monitor Sequence    | None   |
| Sensors OK          |  |
| Monitoring Duration | 5 seconds to register a malfunction  |

**Typical Exhaust Pressure Sensor “A” check entry conditions:**

Continuous

**Typical Exhaust Pressure Sensor “A” check malfunction thresholds:**

Exhaust Pressure Sensor "A" voltage: > 4.80 volts, < 0.21 volts

**Exhaust Pressure Sensor Transfer Function**

|   |               |
|---|---------------|
| Pressure Range: 49 [kPa] to +378 [kPa]  |               |
| $V_{out} = V_{ref} * (0.0027 * P_{exh}) + -0.0715$ Pexh in [kPa], Vref is 5.0 volts |               |
| Volts   | Pressure, kPa |
| 0.300   | 49            |
| 0.982   | 100           |
| 1.518   | 140           |
| 2.053   | 180           |
| 2.522   | 215           |
| 3.058   | 255           |
| 3.527   | 290           |
| 4.70  | 378           |

| <b>EGR Cooler Check Operation:</b> |   |
|------------------------------------|---|
| DTCs                               | P2457 – EGR Cooler Efficiency Below Threshold   |
| Monitor execution                  | once per driving cycle  |
| Monitor Sequence                   |   |
| Sensors OK                         | P0071, P0072, P0073, P0106, P0107, P0108, P2227, P2228, P2229, P044C, P044D, P0405, P0406 |
| Monitoring Duration                | 70 seconds to register a malfunction  |

| <b>Typical EGR Cooler check entry conditions:</b> |              |             |
|---|--------------|-------------|
| Entry Conditions                                  | Minimum      | Maximum     |
| Ambient Air Temperature                           | > 35 deg F   | < 200 deg F |
| BARO  | > 22.0 in Hg |             |
| Engine running                                    |              |             |

| <b>Typical EGR Cooler check malfunction thresholds:</b>                          |
|--|
| P2457: Insufficient flow rate ratio > 0.5 after sufficient EGR flow accumulation |

## Low Pressure Cooled EGR Monitor (LPEGR)

### EGR DPFE Electrical Check Operation:

|                     |   |
|---------------------|---|
| DTCs                | P044C EGR Sensor "C" Circuit Low<br>P044D EGR Sensor "C" Circuit High |
| Monitor execution   | Continuous, during EGR monitor  |
| Monitor Sequence    | None  |
| Sensors OK          |   |
| Monitoring Duration | 5 seconds to register a malfunction                                   |

### Typical DPFE EGR electrical check entry conditions:

Continuous

### Typical DPFE EGR electrical check malfunction thresholds:

DPFE sensor outside voltage: > 4.65 volts, < 0.25 volts

### DPFE Sensor Transfer Function

| Pressure Range: -10.989 [kPa] to +18.315 [kPa]                                       |                     |
|--|---------------------|
| $V_{out} = V_{ref} * (2.7300E-02 * P + 4.0000E-01)$ , P in [kPa] , Vref is 5.0 volts |                     |
| Volts  | Delta Pressure, kPa |
| 0.500  | -11.00              |
| 0.90   | -8.07.0             |
| 1.50   | -3.6750             |
| 1.90   | -0.745              |
| 2.10   | 0.720               |
| 2.50   | 3.65                |
| 3.70   | 12.44               |
| 4.50   | 18.3                |

| DPFE EGR Hose Check Operation: |   |
|--------------------------------|---|
| DTCs                           | P139A EGR Sensor "C" Hoses Reversed<br>P139B EGR Sensor "C" Upstream Hose Off or Plugged<br>P139C EGR Sensor "C" Downstream Hose Off or Plugged |
| Monitor execution              | once per driving cycle  |
| Monitor Sequence               | after electrical checks completed   |
| Sensors OK                     | P0071, P0072, P0073, P0106, P0107, P0108, P2227, P2228, P2229, P044C, P044D, P0405, P0406   |
| Monitoring Duration            | 25 to 50 seconds to register a malfunction  |

| Typical DPFE EGR hose check entry conditions: |              |             |
|---|--------------|-------------|
| Entry Conditions                              | Minimum      | Maximum     |
| Ambient Air Temperature                       | > 35 deg F   | < 200 deg F |
| BARO  | > 22.0 in Hg |             |
| Entry conditions for hoses reversed           |              |             |
| EGR Valve Position (EGR commanded on)         | > 0%         | 0%          |
| Entry conditions for hoses off or plugged     |              |             |
| EGR flow near zero                            |              | < 0.5 g/s   |
| Manifold Pressure                             | > 50 kPa     | < -11 kPa   |

| Typical EGR hose check malfunction thresholds: |
|--|
| P139A: DPFE signal < -0.5 kPa for 30 sec       |
| P139B: DPFE Signal > 13.0 kPa for 25 sec       |
| P139C: DPFE Signal < -4.0 kPa for 50 sec       |

**EGR Control Valve Electrical Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | EGR valve position sensor tests<br>P0405 EGR Sensor "A" Circuit Low<br>P0406 EGR Sensor "A" Circuit High<br>P046D EGR Sensor "A" Circuit Intermittent/Erratic<br>EGR valve control circuit tests<br>P042E EGR "A" Control Stuck Open<br>P042F EGR "A" Control Stuck Closed<br>P04FA EGR "A" Control Temperature Too High |
| Monitor execution   | Continuous, during EGR monitor   |
| Monitor Sequence    | None   |
| Sensors OK          | P0071, P0072, P0073, P0106, P0107, P0108, P2227, P2228, P2229, P044C, P044D, P0405, P0406  |
| Monitoring Duration | 4 seconds to register a malfunction  |

**Typical DPFE EGR hose check entry conditions:**

| Entry Conditions | Minimum      | Maximum |
|------------------|--------------|---------|
| Battery Voltage  | > 8.25 volts |         |
| H-Bridge Voltage | > 8.25 volts |         |
| Engine rpm       | > 400 rpm    |         |

**EGR Valve Position Sensor Transfer Function**

| Vout = 0.625 * (mm) – 0.25. (max. 6 mm travel) |                 |
|--|-----------------|
| Volts  | Valve Lift (mm) |
| 0.25 (5% of full scale)                        | 0               |
| 0.50 (10% of full scale)                       | 1.2             |
| 1.00 (20% of full scale)                       | 2.0             |
| 1.50 (30% of full scale)                       | 2.8             |
| 2.50 (50% of full scale)                       | 4.4             |
| 3.50 (70% of full scale)                       | 6.0             |
| 4.75 (95% of full scale)                       | 8.0             |

**Typical EGR Control Valve electrical check malfunction thresholds:**

P0405: EGR Valve Position signal < 5% of full scale for 4 sec

P0406: EGR Valve Position signal > 95% of full scale for 4 sec

P046D: EGR Valve Position signal > 95% or < 5% of full scale for 0.4 sec

P042E: Observed actuator A position < calculated low limit minus calculated margin and observed actuator A position and observed actuator A position calculated high limit > 11 mm.

P042F: Observed actuator A position < calculated low limit minus calculated margin and observed actuator A position and observed actuator A position calculated high limit < 11 mm.

P04FA: 2 \* observed position > 5.5mmk and 8 \* estimated position < 5.5 mm and observed velocity of position > 5.5 mm/s and opening by percent <10%.

**EGR Flow Check Operation:**

|                     |   |
|---------------------|---|
| DTCs                | P0401 – Insufficient EGR Flow<br>P0402 – Excessive EGR Flow                               |
| Monitor execution   | once per driving cycle  |
| Monitor Sequence    | done after P0402 completed  |
| Sensors OK          | P0071, P0072, P0073, P0106, P0107, P0108, P2227, P2228, P2229, P044C, P044D, P0405, P0406 |
| Monitoring Duration | 70 seconds to register a malfunction  |

**Typical EGR FLOW check entry conditions:**

| Entry Conditions        | Minimum      | Maximum     |
|-------------------------|--------------|-------------|
| Ambient Air Temperature | > 35 deg F   | < 200 deg F |
| BARO                    | > 22.0 in Hg |             |
| Engine running          |              |             |

**Typical EGR flow check malfunction thresholds:**

P0401: Insufficient flow rate ratio > 0.5 after sufficient EGR flow accumulation

P0402: Excessive flow rate ratio > 0.5 after sufficient EGR flow accumulation

**J1979 Mode \$06 Data**

| Monitor ID | Test ID | Description for ESM DPFE                                    | Units    |
|------------|---------|---|----------|
| \$32       | \$86    | Flow ratio for insufficient flow test and threshold (P0401) | Unitless |
| \$31       | \$87    | Flow ratio for excessive flow test and threshold (P0402)    | Unitless |

### **PCV Monitor Operation**

|                     |   |
|---------------------|---|
| DTCs                | P2282 - Air Leak Between Throttle Body and Intake Valve   |
| Monitor execution   | Continuous  |
| Monitor Sequence    | None  |
| Monitoring Duration | N/A   |
| Sensors OK          | No fault is present in any of the sensors or systems affecting the PCV monitor. BARO sensor, MAP sensor, throttle charge temperature sensor, throttle inlet pressure sensor, manifold charge temperature sensor, no VCT malfunction |

#### **Typical P2282 check entry conditions:**

| Entry Condition                                    | Minimum     | Maximum |
|--|-------------|---------|
| Throttle angle (at condition for 300 msec minimum) | N/A         | 4 deg   |
| Intake Air Temp                                    | -20 deg. F. |         |
| Engine coolant temperature                         | -20 deg. F. |         |
| Barometric pressure                                | 20 in. Hg.  |         |

#### **Typical P2282 malfunction thresholds:**

Calculated air leak of 1 lbm/min or greater that persists for at least 5 seconds.

## PCV System Monitor – Turbocharged Engine with MAP Sensor

| CKCP Sensor Electrical Check Operation |  |
|--|--|
| DTCs                                   | Analog Sensor:<br>P051C – Crankcase Pressure Sensor “A” Circuit Low<br>P051D – Crankcase Pressure Sensor “A” Circuit High<br>P051B – Crankcase Pressure Sensor “A” Circuit Range/Performance<br><br>SENT sensor:<br>P051A – Crankcase Pressure Sensor “A” Circuit<br>U060E – Lost Communication with Crankcase Pressure Sensor “A” |
| Monitor execution                      | Continuous for circuit checks  |
| Monitor Sequence                       | None   |
| Sensors OK                             | not applicable   |
| Monitoring Duration                    | 5 seconds to register a malfunction  |

| CKCP Sensor Electrical check entry conditions: |         |         |
|--|---------|---------|
| Entry Conditions                               | Minimum | Maximum |
| Engine not cranking (for offset check only)    |         |         |

| Typical CKCP sensor electrical check malfunction thresholds:   |
|--|
| P051C: Voltage < 0.44 volts<br>P051D: Voltage > 4.56 volts,<br>P051B: Sensor offset > 0.15” Hg OR<br>Crankcase pressure > 5.0 “ Hg or Crankcase pressure < -0.6 “ Hg at air flows < 1.0 lb/min<br>P051A/U060E: Faulted signal patterns recognized. |

| PCV Fresh Air Disconnect Check Operation: |  |
|---|--|
| DTCs                                      | P04DB – Crankcase Ventilation System Disconnected  |
| Monitor execution                         | Dirty side - once per driving cycle at crank<br>Clean side - once per driving cycle at airflows > 5 lb/min |
| Monitor Sequence                          | none   |
| Sensors OK                                | CKCP (P051B, P051C, P051D) ; or P051A/U060E SENT sensor  |
| Monitoring Duration                       | up to 15 minutes to register a clan side malfunction   |

| PCV Fresh Air Disconnect check entry conditions: |         |         |
|--|---------|---------|
| Entry Conditions                                 | Minimum | Maximum |
|  |         |         |

|                     |           |  |
|---------------------|-----------|--|
| Ambient temperature | 40 deg F  |  |
| BARO                | 22.5"Hg   |  |
| Air Mass            | 5 lbm/min |  |

**PCV Fresh Air Disconnect check malfunction thresholds:**

P04DB:

Clean side: expected sum > 2.5 in Hg

Dirty side test: dip signal or pulse signal > 0.004

## Thermostat Monitor

### THERMOSTAT MONITOR OPERATION

|                     |  |
|---------------------|--|
| DTC                 | P0128 - Coolant Thermostat (Coolant temperature below thermostat regulating temperature)   |
| Monitor Execution   | Once per driving cycle, during a cold start  |
| Monitoring Duration | Drive cycle dependent. Monitor completes in less than 300 seconds, when inferred ECT exceeds threshold (at 70 deg F ambient temperature) |

### TYPICAL THERMOSTAT MONITOR ENTRY AND COMPLETION CONDITIONS

| Entry conditions  | Minimum | Maximum |
|---|---------|---------|
| Engine Coolant Temperature at start                       | None    | 125 °F  |
| Intake Air Temperature at start (ambient temp)            | 20 °F   | None    |
| Inferred Percent Ethanol (flex fuel vehicles only)        | Learned | N/A     |
| Completion condition                                      | Minimum | Maximum |
| Modeled ECT   | 172 °F  | None    |
| Time Since Modeled ECT Exceeded WUT Threshold             | 3 sec.  | None    |
| Time at Idle/Low Load Compared with Total Engine Run Time | None    | 50%     |

### TYPICAL MALFUNCTION THRESHOLD

|   |
|---|
| Engine Coolant Temperature < 172 °F (for a typical 192 °F thermostat) |
|---|

## Time To Closed Loop Monitor

### TIME TO CLOSED LOOP MONITOR OPERATION

|                     |  |
|---------------------|--|
| DTC                 | P0125 - Insufficient Coolant Temp For Closed Loop Fuel Control |
| Monitor Execution   | Once per driving cycle, during a cold start                    |
| Monitoring Duration | Drive cycle  |

### TYPICAL TIME TO CLOSED LOOP MONITOR ENTRY AND COMPLETION CONDITIONS

| Entry conditions  | Minimum | Maximum |
|---|---------|---------|
| Engine Coolant Temperature at start                       | None    | 80 °F   |
| Intake Air Temperature at start (ambient temp)            | 20 °F   | None    |
| Inferred Percent Ethanol (flex fuel vehicles only)        | Learned | N/A     |
| Completion condition                                      | Minimum | Maximum |
| Modeled ECT   | 80 °F   | None    |
| Time Since Modeled ECT Exceeded Threshold                 | 3 sec.  | None    |
| Time at Idle/Low Load Compared with Total Engine Run Time | None    | 50%     |

### TYPICAL TIME TO CLOSED LOOP MALFUNCTION THRESHOLD

|                                    |
|------------------------------------|
| Engine Coolant Temperature < 50 °F |
|------------------------------------|

## Cold Start Emission Reduction Component Monitor

### Throttle Plate Controller and Actuator Operation:

|                     |   |
|---------------------|---|
| DTCs                | P2107 – processor test (MIL)<br>P2111 – throttle actuator system stuck open (MIL)<br>P2112 – throttle actuator system stuck closed (MIL)<br>Note: For all the above DTCs, in addition to the MIL, the ETC light will be on for the fault that caused the FMEM action. |
| Monitor execution   | Continuous  |
| Monitor Sequence    | None  |
| Monitoring Duration | 60 msec for processor fault, 500 msec for stuck open/closed fault   |

### Throttle Plate Controller and Actuator malfunction thresholds:

P2111 - Desired throttle angle vs. actual throttle angle > 6 degrees  
P2112 - Desired throttle angle vs. actual throttle angle < 6 degrees  
P2107 - Internal processor fault, lost communication with main CPU

## Engine Speed and Spark Timing Component Monitor (2010 MY and beyond)

| CSER COMPONENT MONITOR OPERATION |  |
|----------------------------------|--|
| Component Monitor DTCs           | P050A: Cold Start Idle Air Control System Performance<br>P050B: Cold Start Ignition Timing Performance   |
| Monitor Execution                | Once per driving cycle, during a cold start  |
| Monitor Sequence                 | Monitor data collection takes place during first 15 seconds of cold start  |
| Sensors OK                       | No fault is present in any of the sensors or systems affecting the catalyst temperature model: Mass Air Flow (P0102, P0103), Throttle Position (P0122, P0123, P0222, P0223), Misfire (P0316, P0300-P0312), Injectors (P0201-P0212), Fuel System (P0171, P0172, P0174, P0175), Secondary Air (P0412, P2258), Crank Position Sensor (P0320), Ignition Coil (P0351-P0360), Intake Air Temp (P0112, P0113), Engine Coolant Temp/Cylinder Head Temp (P0117, P0118, P1289, P1290), Variable Cam Timing (P0010, P0020, P0011, P0012, P0021, P0022), Intake Manifold Runner Control (P2008). |
| Monitoring Duration              | Monitor completes 300 seconds after initial engine start   |

| TYPICAL CSER COMPONENT MONITOR ENTRY AND COMPLETION CONDITIONS |           |         |
|--|-----------|---------|
| Entry condition  | Minimum   | Maximum |
| Barometric Pressure  | 22 in. Hg |         |
| Engine Coolant Temperature at Start                            | 20 °F     | 100 °F  |
| Catalyst Temperature at Start                                  | 20 °F     | 125 °F  |
| Fuel Level   | 15%       |         |
| No Torque Reduction by Injector Cutout                         |           |         |
| Power Takeout Not Active                                       |           |         |
| Completion condition   | Minimum   | Maximum |
| Length of Time Entry Conditions are Satisfied                  | 11 sec.   |         |
| Expected Change in Catalyst Temperature                        | 50 °F     |         |
| Time in Idle   | 10 sec.   |         |
| Selected Gear  | Neutral   | Drive   |

| TYPICAL CSER COMPONENT MONITOR MALFUNCTION THRESHOLDS |
|---|
| Engine speed discrepancy > 200 rpm                    |
| Spark timing discrepancy > 10 deg.                    |

## Cold Start Variable Cam Timing Monitor (2008 MY and beyond)

| CSER VCT Target Error Check Operation:] |   |
|---|---|
| DTCs                                    | P052A – Cold start camshaft position timing over-advanced (Bank 1)<br>P052B – Cold start camshaft timing over-retarded (Bank 1)<br>P052C – Cold start camshaft timing over-advanced (Bank 2)<br>P052D – Cold start camshaft timing over-retarded (Bank 2) |
| Monitor execution                       | Continuous  |
| Monitor Sequence                        | None  |
| Sensors OK                              |   |
| Monitoring Duration                     | 5 seconds   |

| Typical CSER VCT target error entry conditions:                        |         |            |
|--|---------|------------|
| Entry condition  | Minimum | Maximum    |
| VCT control enabled and commanded to advance or retard cam during CSER | n/a     | n/a        |
| Time since start of CSER cam phase monitoring                          |         | 60 seconds |

| Typical CSER VCT target error malfunction thresholds:   |
|---|
| CSER Response/target error - VCT over-advance: 11 degrees<br>CSER Response/target error - VCT over-retard: 11 degrees<br>CSER Response/Stuck Pin – 10 degrees phasing commanded, and not seeing at least 2 degrees of movement. |

## Cold Start Emission Reduction System Monitor

### CSER SYSTEM MONITOR OPERATION

|                     |  |
|---------------------|--|
| System Monitor DTC  | P050E: Cold Start Engine Exhaust Temperature Too Low   |
| Monitor Execution   | Once per driving cycle, during a cold start  |
| Monitor Sequence    | Monitor data collection takes place during first 15 seconds of cold start  |
| Sensors OK          | No fault is present in any of the sensors or systems affecting the catalyst temperature model: Mass Air Flow (P0102, P0103), Throttle Position (P0122, P0123, P0222, P0223), Misfire (P0316, P0300-P0312), Injectors (P0201-P0212), Fuel System (P0171, P0172, P0174, P0175), Secondary Air (P0412, P2258), Crank Position Sensor (P0320), Ignition Coil (P0351-P0360), Intake Air Temp (P0112, P0113), Engine Coolant Temp/Cylinder Head Temp (P0117, P0118, P1289, P1290), Variable Cam Timing (P0010, P0020, P0011, P0012, P0021, P0022), Intake Manifold Runner Control (P2008). |
| Monitoring Duration | Monitor completes 300 seconds after initial engine start   |

### TYPICAL CSER SYSTEM MONITOR ENTRY AND COMPLETION CONDITIONS

| Entry condition                               | Minimum   | Maximum |
|---|-----------|---------|
| Barometric Pressure                           | 22 in. Hg |         |
| Engine Coolant Temperature at Start           | 20 °F     | 100 °F  |
| Catalyst Temperature at Start                 | 20 °F     | 125 °F  |
| Fuel Level                                    | 15%       |         |
| No Torque Reduction by Injector Cutout        |           |         |
| Power Takeout Not Active                      |           |         |
| Completion condition                          | Minimum   | Maximum |
| Length of Time Entry Conditions are Satisfied | 11 sec.   |         |
| Expected Change in Catalyst Temperature       | 50 °F     |         |
| Time in Idle                                  | 10 sec.   |         |
| Selected Gear                                 | Neutral   | Drive   |

### TYPICAL CSER SYSTEM MONITOR MALFUNCTION THRESHOLDS

Cold start warm-up temperature ratio > 0.4

## Variable Cam Timing System Monitor

### VCT Monitor Operation:

|                     |  |
|---------------------|--|
| DTCs                | P0010 - Camshaft Position Actuator Circuit (Bank 1)<br>P0011 - Intake Camshaft Position Timing - Over-Advanced (Bank 1)<br>P0012 - Intake Camshaft Position Timing - Over-Retarded (Bank 1)<br>P0014 - Exhaust Camshaft Position Timing - Over-Advanced (Bank 1)<br>P0015 - Exhaust Camshaft Position Timing - Over-Retarded (Bank 1)<br>P0016 - Crank/Cam Position Correlation (Bank 1)<br>P0020 - Camshaft Position Actuator Circuit (Bank 2)<br>P0021 - Intake Camshaft Position Timing - Over-Advanced (Bank 2)<br>P0022 - Intake Camshaft Position Timing - Over-Retarded (Bank 2)<br>P0024 - Exhaust Camshaft Position Timing - Over-Advanced (Bank 2)<br>P0025 - Exhaust Camshaft Position Timing - Over-Retarded (Bank 2)<br>P0018 – Crank/Cam Position Correlation (Bank 2) |
| Monitor execution   | Continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | IAT, ECT, EOT, IMRC, TP, MAF, CKP, and CMP   |
| Monitoring Duration | 5 - 10 seconds for circuit faults and functional checks, 300 - 900 seconds for target error  |

### Typical VCT response/functional monitor entry conditions:

| Entry condition  | Minimum | Maximum |
|--|---------|---------|
| Engine RPM (rpm to get minimum oil pressure)   | 400     |         |
| Engine RPM (for P0016/P0018 only)  | 500     | 4500    |
| Engine Coolant Temperature   | 18 °F   |         |
| Time Since Start (function of ECT at start) (time to build oil pressure at start)  | 2 sec   |         |
| VCT control enabled and commanded to advance or retard cam **  | n/a     | n/a     |
| ** VCT control of advance and retard by the engine is disabled in crank mode, when engine oil is, while learning the cam/crank offset, while the control system is "cleaning" the solenoid oil passages, throttle actuator control in failure mode, and if one of the following sensor failures occurs: IAT, ECT, EOT, MAF, TP, CKP, CMP, or IMRC or a VCT solenoid fails. |         |         |

**Typical VCT monitor malfunction thresholds:**

VCT solenoid circuit: Open/short fault set by the PCM driver

Cam/crank misalignment: > or = one tooth difference, or 16 crank degrees

Response/target error - VCT over-advance variance too high: 40 to 700 degrees squared

Response/target error - VCT over-retard variance too high: 40 to 700 degrees squared

Response/target error - Cam bank-to-bank variance too high: 40 to 700; degrees squared

**J1979 VCT Monitor Mode \$06 Data**

| Monitor ID | Test ID | Description for CAN                                      | Units                     |
|------------|---------|--|---------------------------|
| \$35       | \$80    | Camshaft Advanced Position Error Bank 1<br>(P011/P0014)  | Unsigned, Angular degrees |
| \$35       | \$81    | Camshaft Retarded Position Error Bank 1<br>(P0012/P0015) | Unsigned, Angular degrees |
| \$36       | \$80    | Camshaft Advanced Position Error Bank 2<br>(P0021/P0024) | Unsigned, Angular degrees |
| \$36       | \$81    | Camshaft Retarded Position Error Bank 2<br>(P0022/P0025) | Unsigned, Angular degrees |

## Variable Displacement Engine (VDE) System Monitor

### VDE Control Circuit Check Operation:]

|                     |  |
|---------------------|--|
| DTCs                | P3401 - Cylinder 1 Deactivation/Intake Valve Control Circuit/Open<br>P3403 - Cylinder 1 Deactivation/Intake Valve Control Circuit Low<br>P3404 - Cylinder 1 Deactivation/Intake Valve Control Circuit High |
| Monitor execution   | Continuous   |
| Monitor Sequence    | None   |
| Sensors OK          |  |
| Monitoring Duration | 5 seconds  |

### Typical VDE Control Circuit malfunction thresholds:

“Smart” Output Driver status indicates open or short to ground, or short to power

### VDE Performance Monitor Operation:

|                     |  |
|---------------------|--|
| DTCs                | P3402 - Cylinder 1 Deactivation/Intake Valve Control Circuit Performance |
| Monitor execution   | Continuous   |
| Monitor Sequence    | None   |
| Sensors OK          |  |
| Monitoring Duration | Continuous during VDE, entry and exit                                    |

### Typical VDE performance monitor entry conditions:

| Entry condition   | Minimum | Maximum |
|---|---------|---------|
| Engine RPM (rpm to get minimum oil pressure)                                      | 400     |         |
| Engine RPM (for P0016/P0018 only)   | 500     | 4500    |
| Engine Coolant Temperature  | 18 °F   |         |
| Time Since Start (function of ECT at start) (time to build oil pressure at start) | 2 sec   |         |
| VCT control enabled and commanded to advance or retard cam **                     | n/a     | n/a     |

## Barometric Pressure Sensor (BARO)

| BARO Sensor Transfer Function                               |               |                     |
|---|---------------|---------------------|
| $V_{out} = V_{ref} * (0.007895 * \text{Pressure (in kPa)})$ |               |                     |
| Volts   | Pressure, kPa | Pressure, Inches Hg |
| 0.3   | 7.6           | 2.2                 |
| 0.5   | 12.7          | 3.8                 |
| 2.638   | 60            | 17.7                |
| 4.54  | 115           | 34.0                |
| 4.75  | 120.3         | 35.5                |
| 4.8   | 121.6         | 35.9                |

| Barometric Pressure Sensor Range Check |   |
|--|---|
| DTCs                                   | P2228 Barometric Pressure Circuit Low<br>P2229 Barometric Pressure Circuit High |
| Monitor execution                      | continuous  |
| Monitor Sequence                       | None  |
| Sensors OK                             | not applicable  |
| Monitoring Duration                    | 5 seconds to register a malfunction   |

| Typical Barometric Pressure Sensor Range Check Malfunction Thresholds |   |
|---|---|
| P2228   | BP < 2.0 volts (above 15,000 ft altitude) |
| P2229   | BP > 4.4 volts (below -1,000 ft altitude) |

## Turbocharger Boost Sensor A (TCB-A)

| TCB-A and MAP Sensor Transfer Function                                      |               |                     |
|---|---------------|---------------------|
| $V_{out} = (V_{ref} / 5) * (0.0146428 * \text{Pressure (in kPa)} + 0.1072)$ |               |                     |
| Volts   | Pressure, kPa | Pressure, Inches Hg |
| 0.3   | 13.16         | 3.89                |
| 0.4   | 20            | 5.91                |
| 0.986   | 60.0          | 17.72               |
| 2.157   | 140           | 41.34               |
| 3.329   | 220.0         | 64.97               |
| 4.5   | 300           | 88.59               |
| 4.8   | 320.49        | 94.64               |

| Throttle Inlet Pressure Sensor Range Circuit Check |   |
|--|---|
| DTCs   | P0237 Turbocharger/Supercharger Boost Sensor A Circuit Low<br>P0238 Turbocharger/Supercharger Boost Sensor A Circuit High |
| Monitor execution                                  | continuous  |
| Monitor Sequence                                   | None  |
| Sensors OK   | not applicable  |
| Monitoring Duration                                | 5 seconds to register a malfunction   |

| Typical Throttle Inlet Pressure Sensor Range Circuit Malfunction Thresholds |                            |
|---|----------------------------|
| P0237   | TCB-A voltage < 0.19 volts |
| P0238   | TCB_A voltage > 4.88 volts |

| Throttle Inlet Pressure Sensor Range Circuit Intermittent Check |   |
|---|---|
| DTCs  | P025E Turbocharger/Supercharger Boost Sensor "A" Intermittent/Erratic |
| Monitor execution   | continuous  |
| Monitor Sequence  | none  |
| Sensors OK  | not applicable  |
| Monitoring Duration   | counts intermittent events per trip                                   |

| Typical Throttle Inlet Pressure Sensor Range Circuit Malfunction Thresholds |  |
|---|--|
| 10 intermittent out-of-range events per driving cycle                       |  |

## Intake Manifold Pressure (MAP) Sensor

| TCB-A nd MAP Sensor Transfer Function                                   |               |                     |
|---|---------------|---------------------|
| $V_{out} = V_{ref} * (0.0044736 * \text{Pressure (in kPa)} + 0.035263)$ |               |                     |
| Volts   | Pressure, kPa | Pressure, Inches Hg |
| 0.3   | 5.53          | 1.63                |
| 0.40  | 10.0          | 2.95                |
| 1.630   | 65.0          | 19.19               |
| 2.301   | 95.0          | 28.05               |
| 3.643   | 155.0         | 45.77               |
| 4.65  | 200.0         | 59.06               |
| 4.8   | 206.71        | 61.04               |

| Intake Manifold Pressure Sensor Range Circuit Check |   |
|---|---|
| DTCs  | P0107 Manifold Absolute Pressure/BARO Sensor Low<br>P0108 Manifold Absolute Pressure/BARO Sensor High |
| Monitor execution                                   | continuous  |
| Monitor Sequence                                    | None  |
| Sensors OK  | not applicable  |
| Monitoring Duration                                 | 5 seconds to register a malfunction   |

| Typical Intake Manifold Pressure Sensor Range Circuit Check Malfunction Thresholds |                          |
|--|--------------------------|
| P0107  | MAP voltage < 0.19 volts |
| P0108  | MAP voltage > 4.88 volts |

| Intake Manifold Pressure Sensor Range Circuit Intermittent Check |   |
|--|---|
| DTCs   | P0109 Manifold Absolute Pressure/BARO Sensor Intermittent |
| Monitor execution  | continuous  |
| Monitor Sequence   | none  |
| Sensors OK   | not applicable  |
| Monitoring Duration  | counts intermittent events per trip                       |

| Typical Intake Manifold Pressure Sensor Range Circuit Malfunction Thresholds |  |
|--|--|
| 25 intermittent out-of-range events per driving cycle                        |  |

## BARO, TCB-A, MAP Sensor 3-Way Correlation Check at Key-Up

| BP, TIP, MAP Sensor 3-Way Correlation Check at Key-Up |   |
|---|---|
| DTCs  | P2227 P0236 P0106 Barometric Pressure Circuit Range/Performance |
| Monitor execution                                     | At key-up   |
| Monitor Sequence                                      | None  |
| Sensors OK  | BP, MAP, TIP  |
| Monitoring Duration                                   | 0.2 seconds   |

| BP, TIP, MAP Sensor 3-Way Correlation Check at Key-Up Entry Conditions |            |         |
|--|------------|---------|
| Entry condition  | Minimum    | Maximum |
| Engine off (soak) time   | 10 seconds |         |
| Battery Voltage  | 6.75 volts |         |

| Typical BP, TIP, MAP Sensor 3-Way Correlation Check at Key-Up Malfunction Thresholds |  |
|--|--|
| TCB-A – MAP  < 2.72"Hg   |  |
| BARO – MAP  < 2.03"Hg  |  |
| BARO – TCB-A  < 2.14"Hg  |  |

## BARO, TCB-A and TCB-A, MAP Sensor 2-Way Correlation Check

| BARO, TCB-A Sensor 2-Way Correlation Check Entry |   |
|--|---|
| DTCs   | P2227 Barometric Pressure Sensor "A" Circuit Range/Performance<br>P0236 Turbocharger/Supercharger Boost Sensor "A" Circuit Range/Performance<br>P0106 Barometric Pressure Circuit Range/Performance |
| Monitor execution                                | Continuous  |
| Monitor Sequence                                 | None  |
| Sensors OK                                       | BP, TIP, MAP  |
| Monitoring Duration                              | 10 seconds  |

| BARO, TCB-A Sensor 2-Way Correlation Check Entry Conditions |         |          |
|---|---------|----------|
| Entry condition   | Minimum | Maximum  |
| Low TP  |         | 4.0°     |
| Low engine rpm  |         | 1500 rpm |

| Typical BARO, TCB-A Sensor 2-Way Correlation Check Entry Malfunction Thresholds |  |
|---|--|
| pass  | ( BARO – TCB-A  < 5.5"Hg) AND ( MAP – Estimated MAP  < 3.5"Hg) |
| P2227   | ( BARO – TCB-A  > 5.5"Hg) AND ( MAP – Estimated MAP  < 1.8"Hg) |
| P0106   | ( BARO – TCB-A  < 1.8"Hg) AND ( MAP – Estimated MAP  > 3.5"Hg) |
| P0236   | (if none of above conditions met)                              |

## Compressor Bypass Valve(s)

| Compressor Bypass Valve Circuit Check Operation: |  |
|--|--|
| DTCs   | P0034 Turbocharger/Supercharger Bypass Valve "A" Control Circuit Low<br>P0035 Turbocharger/Supercharger Bypass Valve "A" Control Circuit High<br>P00C1 Turbocharger/Supercharger Bypass Valve "B" Control Circuit Low<br>P00C2 Turbocharger/Supercharger Bypass Valve "B" Control Circuit High |
| Monitor execution                                | Continuous   |
| Monitor Sequence                                 | None   |
| Monitoring Duration                              | 5 seconds  |

| Compressor Bypass Valve Circuit malfunction thresholds:  |
|--|
| PCM smart driver hardware detects faults for circuit short to battery, short to ground, and open circuit. Fault status reported to PCM to set appropriate DTC. |

## Wastegate Pneumatic Solenoid Valve

| Wastegate Pneumatic Solenoid Valve Circuit Check Operation |   |
|--|---|
| DTCs   | P0245 Turbocharger/Supercharger Wastegate Solenoid A Low<br>P0246 Turbocharger/Supercharger Wastegate Solenoid A High |
| Monitor execution  | Continuous  |
| Monitor Sequence   | None  |
| Monitoring Duration  | 5 seconds   |

| Wastegate Pneumatic Solenoid Valve Circuit malfunction thresholds:   |
|--|
| PCM smart driver hardware detects faults for circuit short to battery, short to ground, and open circuit. Fault status reported to PCM to set appropriate DTC. |

## Vacuum Actuated Wastegate System

| Wastegate Pneumatic Solenoid Valve Circuit Check Operation |   |
|--|---|
| DTCs   | P0245 Turbocharger/Supercharger Wastegate Solenoid A Low<br>P0246 Turbocharger/Supercharger Wastegate Solenoid A High |
| Monitor execution  | Continuous  |
| Monitor Sequence   | None  |
| Monitoring Duration  | 2 - 3 seconds   |

### Wastegate Pneumatic Solenoid Valve Circuit malfunction thresholds:

PCM smart driver hardware detects faults for circuit short to battery, short to ground, and open circuit. Fault status reported to PCM to set appropriate DTC.

| Wastegate Pneumatic Solenoid Valve Circuit Check Operation |   |
|--|---|
| DTCs   | P0249 Turbocharger/Supercharger Wastegate Solenoid B Low<br>P0250 Turbocharger/Supercharger Wastegate Solenoid B High |
| Monitor execution  | Continuous  |
| Monitor Sequence   | None  |
| Monitoring Duration  | 2 - 3 seconds   |

### Wastegate Pneumatic Solenoid Valve Circuit malfunction thresholds:

PCM smart driver hardware detects faults for circuit short to battery, short to ground, and open circuit. Fault status reported to PCM to set appropriate DTC.

| Wastegate Control Pressure Check Operation |  |
|--|--|
| DTCs                                       | P1015 Wastegate Control Pressure Lower Than Expected<br>P1016 Wastegate Control Pressure Lower Than Expected |
| Monitor execution                          | Continuous   |
| Sensors OK                                 | No P100F, P1011, P1012, P1013, P0245, P0246 DTCs   |
| Monitor Sequence                           | None   |
| Monitoring Duration                        | 5 seconds  |

| Wastegate Control Pressure Check Entry Conditions  |         |           |
|--|---------|-----------|
| Entry Condition  | Minimum | Maximum   |
| Desired wastegate control pressure is stable:<br>(desired pressure - expected pressure). |         | 0.5 in Hg |

| Wastegate Pneumatic Solenoid Valve Circuit malfunction thresholds: |
|--|
| P1015 - Wastegate control pressure error > 3 in Hg                 |
| P1016 - Wastegate control pressure error > 5 in Hg                 |

## Wastegate Control Pressure Sensor

| Wastegate Control Pressure Sensor Check Operation |   |
|---|---|
| DTCs  | P1012 Wastegate Control Pressure Sensor Circuit Low<br>P1013 Wastegate Control Pressure Sensor Circuit High<br>P1014 Wastegate Control Pressure Sensor Circuit Intermittent/Erratic |
| Monitor execution                                 | Continuous  |
| Monitor Sequence                                  | None  |
| Monitoring Duration                               | 5 seconds   |

| Wastegate Control Pressure Sensor Transfer Function                      |               |                     |
|--|---------------|---------------------|
| $V_{out} = (V_{ref} / 5) * (0.04399 * \text{Pressure (in kPa)} - 0.140)$ |               |                     |
| Volts  | Pressure, kPa | Pressure, Inches Hg |
| 0.3  | 10.0          | 2.95                |
| 0.4  | 12.3          | 3.62                |
| 1.0  | 25.9          | 7.65                |
| 2.0  | 48.6          | 14.36               |
| 3.0  | 71.4          | 21.07               |
| 4.5  | 105.5         | 31.14               |
| 4.8  | 112.8         | 33.31               |

| Wastegate Control Pressure Sensor Check Entry Conditions |         |         |
|--|---------|---------|
| Entry Condition  | Minimum | Maximum |
| none   |         |         |

| Wastegate Pneumatic Solenoid Valve Circuit malfunction thresholds: |
|--|
| P1012 – voltage < 0.20 V   |
| P1013 – voltage > 4.93 V   |
| P1014 – open or shorted > 10 events in a driving cycle             |

| Wastegate Control Pressure Sensor Check Operation |  |
|---|--|
| DTCs  | P1011 Wastegate Control Pressure Sensor Circuit Range/Performance<br>P100F Wastegate Control Pressure/BARO Correlation |
| Monitor execution                                 | Continuous   |
| Monitor Sequence                                  | None   |
| Sensors OK  | No P1012, P1013, P1011, P2228, P2229, P2227, P0236, P0106 DTCs.  |
| Monitoring Duration                               | 5 seconds  |

| Wastegate Control Pressure Sensor Check Entry Conditions |         |         |
|--|---------|---------|
| Entry Condition  | Minimum | Maximum |
| Engine off time (P100F only)                             | 20 sec  |         |

| Wastegate Pneumatic Solenoid Valve Circuit malfunction thresholds: |
|--|
| P100F – pressure error exceeds 2.5 in Hg                           |
| P1011 – pressure exceeds BARO by > 3.0 in Hg                       |

## Electric Turbocharger Wastegate

### Wastegate Actuator "A"

| Wastegate Circuit A Check Operation |   |
|-------------------------------------|---|
| DTCs                                | P0243 - Turbocharger/Supercharger Wastegate Solenoid A Low<br>P2ABD - Turbocharger/Supercharger Wastegate Actuator "A" Driver Current/Temp Too High |
| Monitor execution                   | Continuous  |
| Monitor Sequence                    | None  |
| Monitoring Duration                 | 0.4 seconds   |

| Wastegate Circuit A malfunction thresholds:  |
|--|
| PCM smart driver hardware detects faults for circuit short to battery, short to ground, and open circuit. Fault status reported to PCM to set DTC. |

| Wastegate A Functional Check Operation |  |
|--|--|
| DTCs                                   | P25B3 Turbocharger/Supercharger Wastegate "A" Stuck Open<br>P25B4 Turbocharger/Supercharger Wastegate "A" Stuck Closed |
| Monitor execution                      | Continuous   |
| Sensors OK                             | No P0243, P2ABD DTCs   |
| Monitor Sequence                       | None   |
| Monitoring Duration                    | 2.5 seconds  |

| Wastegate A Functional Check malfunction thresholds:                                 |
|--|
| P25B3 - Wastegate position error > 20 mm<br>P25B4 - Wastegate position error > 20 mm |

## Wastegate Position Sensor A

| Wastegate Position Sensor Circuit Check Operation |   |
|---|---|
| DTCs  | P2AB8 - Wastegate Position Sensor "A" Circuit Low<br>P2AB9 - Wastegate Position Sensor "A" Circuit High |
| Monitor execution                                 | Continuous  |
| Monitor Sequence                                  | None  |
| Monitoring Duration                               | 4 seconds   |

| Wastegate Position Sensor A Circuit malfunction thresholds: |  |
|---|--|
| P2AB8   | Wastegate Position Sensor "A" voltage < 0.50 volts |
| P2AB9   | Wastegate Position Sensor "A" voltage > 4.50 volts |

## Wastegate Actuator "B"

| Wastegate Circuit B Check Operation |   |
|-------------------------------------|---|
| DTCs                                | P0247 - Turbocharger/Supercharger Wastegate Solenoid B Low<br>P2ABE - Turbocharger/Supercharger Wastegate Actuator "B" Driver Current/Temp Too High |
| Monitor execution                   | Continuous  |
| Monitor Sequence                    | None  |
| Monitoring Duration                 | 0.4 seconds   |

| Wastegate Circuit B malfunction thresholds:  |  |
|--|--|
| PCM smart driver hardware detects faults for circuit short to battery, short to ground, and open circuit. Fault status reported to PCM to set DTC. |  |

| Wastegate B Functional Check Operation |  |
|--|--|
| DTCs                                   | P25B5 Turbocharger/Supercharger Wastegate "B" Stuck Open<br>P25B6 Turbocharger/Supercharger Wastegate "B" Stuck Closed |
| Monitor execution                      | Continuous   |
| Sensors OK                             | No P0247, P2ABE DTCs   |
| Monitor Sequence                       | None   |
| Monitoring Duration                    | 2.5 seconds  |

| Wastegate B Functional Check malfunction thresholds: |  |
|--|--|
| P25B5 - Wastegate position error > 20 mm             |  |
| P25B6 - Wastegate position error > 20 mm             |  |

## Wastegate Position Sensor B

| Wastegate Position Sensor B Circuit Check Operation |   |
|---|---|
| DTCs  | P2ABB - Wastegate Position Sensor "B" Circuit Low<br>P2ABC - Wastegate Position Sensor "B" Circuit High |
| Monitor execution                                   | Continuous  |
| Monitor Sequence                                    | None  |
| Monitoring Duration                                 | 4 seconds   |

| Wastegate Position Sensor B Circuit malfunction thresholds: |                              |
|---|------------------------------|
| P2ABB   | WGP "A" voltage < 0.50 volts |
| P2ABC   | WGP "A" voltage > 4.50 volts |

## Boost Control

### OverBoost Control Functional Check Operation:

|                      |   |
|----------------------|---|
| DTCs                 | P0234 (Turbocharger/Supercharger A Overboost Condition) |
| Monitor execution    | continuous  |
| Monitor Sequence     | none  |
| Sensors/Actuators OK | CBV, TCB-A, WGS, BARO                                   |
| Monitoring Duration  | 5 seconds (up/down timer)                               |

### OverBoost Control Functional Check Entry Conditions:

| Entry Condition      | Minimum | Maximum |
|----------------------|---------|---------|
| Wastegate Duty Cycle |         | 0.05    |

### OverBoost Control Functional Check Malfunction Thresholds:

(Boost Pressure Desired – Boost Pressure Actual) > 4 psi

### UnderBoost Control Functional Check Operation:

|                      |  |
|----------------------|--|
| DTCs                 | P0299 (Turbocharger/Supercharger A Underboost Condition) |
| Monitor execution    | continuous   |
| Monitor Sequence     | none   |
| Sensors/Actuators OK | CBV, TCB-A, WGS, BARO                                    |
| Monitoring Duration  | 5 seconds (up/down timer)                                |

### OverBoost Control Functional Check Entry Conditions:

| Entry Condition      | Minimum | Maximum |
|----------------------|---------|---------|
| Wastegate Duty Cycle | 0.95    |         |

### OverBoost Control Functional Check Malfunction Thresholds:

(Boost Pressure Desired – Boost Pressure Actual) > 4 psi

## Fuel Injectors, Gasoline Direct Injection

### Fuel Injectors

| Injector Circuit Check Operation |   |
|----------------------------------|---|
| DTCs                             | P0201 through P0206 (Cylinder x Injector Circuit)<br>P062D Fuel Injector Driver Circuit Performance |
| Monitor execution                | Continuous within entry conditions  |
| Monitor Sequence                 | None  |
| Monitoring Duration              | 10 seconds  |

| Typical Injector Circuit Check Entry Conditions |            |         |
|---|------------|---------|
| Entry Condition                                 | Minimum    | Maximum |
| Battery Voltage                                 | 11.0 volts |         |

### Fuel Volume Regulator

| Fuel Volume Regulator Circuit Check Operation |   |
|---|---|
| DTCs  | P0001 Fuel Volume Regulator Control Circuit / Open<br>P0003 Fuel Volume Regulator Control Circuit Low<br>P0004 Fuel Volume Regulator Control Circuit High |
| Monitor execution                             | continuous  |
| Monitor Sequence                              | none  |
| Sensors OK                                    | none  |
| Monitoring Duration                           | not applicable  |

## Fuel Rail Pressure Sensor

| FRP Sensor Transfer Function  |                       |                       |
|---|-----------------------|-----------------------|
| FRP = $-471.37 \text{ psi} + (\text{FRP\_voltage} / 5.0 \text{ volts}) * 4713.73 \text{ psi}$ |                       |                       |
| Volts   | Pressure, MPa (gauge) | Pressure, psi (gauge) |
| 4.80  | 27.95                 | 4054                  |
| 4.50  | 26                    | 3771                  |
| 3.50  | 19.5                  | 2828                  |
| 2.50  | 13.0                  | 1885                  |
| 1.50  | 6.5                   | 943                   |
| 0.50  | 0                     | 0                     |
| 0.20  | -1.95                 | -283                  |

| FRP Open/Short Check Operation: |   |
|---------------------------------|---|
| DTCs                            | P0192 - Fuel Rail Pressure Sensor A Circuit Low<br>P0193 - Fuel Rail Pressure Sensor A Circuit High |
| Monitor execution               | Continuous  |
| Monitor Sequence                | none  |
| Sensors OK                      | none  |
| Monitoring Duration             | 5 seconds to register a malfunction   |

| Typical FRP Sensor Check Malfunction Thresholds:         |
|--|
| FRP voltage < 0.20 volts   or   FRP voltage > 4.80 volts |

## Fuel Rail Pressure Control

### Fuel Rail Pressure Control (Normal) Functional Check Operation:

|                      |   |
|----------------------|---|
| DTCs                 | P0087 (Fuel Rail Pressure Too Low)<br>P0088 (Fuel Rail Pressure Too High) |
| Monitor execution    | continuous  |
| Monitor Sequence     | P0087 and P0088 must complete before setting P00C6 or P053F               |
| Sensors/Actuators OK | FLI, FRP, FVR, Lift Pump  |
| Monitoring Duration  | not applicable  |

### Typical Fuel Rail Pressure Control (Normal) Functional Check Entry Conditions:

| Entry Condition   | Minimum             | Maximum       |
|---|---------------------|---------------|
| High Pressure Pump Enabled                                  | Enabled             |               |
| Fuel level  | 15%                 |               |
| Injector Cut Off  | No Injector Cut Off |               |
| Injection Volume / (720° Pump Volume / Number of Cylinders) | 0.05                | 0.90          |
| Engine Coolant Temperature                                  | 20°F / 7°C          | 250°F / 121°C |
| CSER Mode   | Not in CSER         |               |

### Typical Fuel Rail Pressure Control (Normal) Functional Check Malfunction Thresholds:

P0087:  $(\text{Fuel\_Pressure\_Desired} - \text{Fuel\_Pressure\_Actual}) / \text{Fuel\_Pressure\_Desired} > 0.25$

P0088:  $-(\text{Fuel\_Pressure\_Desired} - \text{Fuel\_Pressure\_Actual}) / \text{Fuel\_Pressure\_Desired} > 0.25$

## Fuel Rail Pressure Control (Cranking)

### Fuel Rail Pressure Control (Cranking) Functional Check Operation:

|                      |   |
|----------------------|---|
| DTCs                 | P00C6 (Fuel Rail Pressure Too Low – Engine Cranking)      |
| Monitor execution    | Minimum pressure met instantaneously once during cranking |
| Monitor Sequence     | P0087 and P0088 must pass before setting P00C6 or P053F   |
| Sensors/Actuators OK | FLI, FRP, FVR, Lift Pump                                  |
| Monitoring Duration  | Minimum met instantaneously once during cranking          |

### Typical Fuel Rail Pressure Control (Cranking) Functional Check Entry Conditions:

| Entry Condition | Minimum | Maximum |
|-----------------|---------|---------|
| Fuel level      | 15%     |         |

### Typical Fuel Rail Pressure Control (Cranking) Functional Check Malfunction Thresholds:

$\text{Fuel\_Pressure\_Actual} \geq \text{Fuel\_Pressure\_Desired}$

## Fuel Rail Pressure Control (CSER)

| Fuel Rail Pressure Control (CSER) Functional Check Operation: |  |
|---|--|
| DTCs  | P053F (Cold Start Fuel Pressure Control Performance) |
| Monitor execution   | During CSER  |
| Monitor Sequence  | None   |
| Sensors/Actuators OK  | FLI, FRP, FVR, Lift Pump                             |
| Monitoring Duration   | Entire CSER monitoring period                        |

| Typical Fuel Rail Pressure Control (CSER) Functional Check Entry Conditions: |         |         |
|--|---------|---------|
| Entry Condition  | Minimum | Maximum |
| Fuel level   | 15%     |         |

| Typical Fuel Rail Pressure Control (CSER) Functional Check Malfunction Thresholds: |  |
|--|--|
| Time in Fuel Injection Pressure Window / CSER Duration > 0.70                      |  |
| Fuel Injection Pressure Window defined as follows:                                 |  |
| Minimum Fuel Pressure to Support Desired Injection Mode <= Fuel Pressure Actual    |  |
| Fuel Pressure Actual <= Maximum Fuel Pressure to Support Desired Injection Mode    |  |

## Controlled Valve Operation (CVO)

| CVO Functional Check Operation: |  |
|---------------------------------|--|
| DTCs                            | P02EE - Cylinder 1 Injector Circuit Range/Performance<br>P02EF - Cylinder 2 Injector Circuit Range/Performance<br>P02F0 - Cylinder 3 Injector Circuit Range/Performance<br>P02F1 - Cylinder 4 Injector Circuit Range/Performance<br>P02F2 - Cylinder 5 Injector Circuit Range/Performance<br>P02F3 - Cylinder 6 Injector Circuit Range/Performance<br>P02F4 - Cylinder 7 Injector Circuit Range/Performance<br>P02F5 - Cylinder 8 Injector Circuit Range/Performance |
| Monitor execution               | Continuous   |
| Monitor Sequence                | none   |
| Sensors/Actuators OK            | FRP (P0192, P0193, P0087, P0088), FVR (P0001, P0003, P0004), INJ (P0201, P0202, P0203, P0204, P0205, P0206)  |
| Monitoring Duration             | 25 seconds   |

| Typical CVO Functional Check Malfunction Thresholds:                              |  |
|---|--|
| Driver software indicates CVO circuit fault or unable to adapt/adaption at limits |  |

## PFI/DI Fuel System

### High Pressure Fuel Rail Pressure Sensor (DI Fuel Rail)

| FRP Open/Short Check Operation: |   |
|---------------------------------|---|
| DTCs                            | P0192 - Fuel Rail Pressure Sensor A Circuit Low<br>P0193 - Fuel Rail Pressure Sensor A Circuit High |
| Monitor execution               | Continuous  |
| Monitor Sequence                | none  |
| Sensors OK                      | none  |
| Monitoring Duration             | 5 seconds to register a malfunction   |

| Typical FRP Sensor Check Malfunction Thresholds:     |
|--|
| FRP voltage < 0.27 volts or FRP voltage > 4.76 volts |

| FRP Sensor Transfer Function  |                       |                       |
|---|-----------------------|-----------------------|
| FRP = $-471.37 \text{ psi} + (\text{FRP\_voltage} / 5.0 \text{ volts}) * 4713.73 \text{ psi}$ |                       |                       |
| Volts   | Pressure, MPa (gauge) | Pressure, psi (gauge) |
| 4.76  | 27.69                 | 4016                  |
| 4.50  | 26                    | 3771                  |
| 3.50  | 19.5                  | 2828                  |
| 2.50  | 13.0                  | 1885                  |
| 1.50  | 6.5                   | 943                   |
| 0.50  | 0                     | 0                     |
| 0.27  | -1.49                 | -217                  |

## Fuel Rail Pressure Control

| Fuel Rail Pressure Control (Normal) Functional Check Operation: |   |
|---|---|
| DTCs  | P0087 (Fuel Rail Pressure Too Low)<br>P0088 (Fuel Rail Pressure Too High) |
| Monitor execution   | continuous  |
| Monitor Sequence  | P0087 and P0088 must complete before setting P00C6 or P053F               |
| Sensors/Actuators OK  | FLI, FRP, FVR, Lift Pump  |
| Monitoring Duration   | not applicable  |

| Typical Fuel Rail Pressure Control (Normal) Functional Check Entry Conditions: |                     |               |
|--|---------------------|---------------|
| Entry Condition  | Minimum             | Maximum       |
| High Pressure Pump Enabled   | Enabled             |               |
| Fuel level   | 15%                 |               |
| Injector Cut Off   | No Injector Cut Off |               |
| Injection Volume / (720° Pump Volume / Number of Cylinders)                    | 0.05                | 0.90          |
| Engine Coolant Temperature   | 20°F / 7°C          | 250°F / 121°C |
| CSER Mode  | Not in CSER         |               |

| Typical Fuel Rail Pressure Control (Normal) Functional Check Malfunction Thresholds:                               |
|--|
| P0087: $(\text{Fuel\_Pressure\_Desired} - \text{Fuel\_Pressure\_Actual}) / \text{Fuel\_Pressure\_Desired} > 0.25$  |
| P0088: $-(\text{Fuel\_Pressure\_Desired} - \text{Fuel\_Pressure\_Actual}) / \text{Fuel\_Pressure\_Desired} > 0.25$ |

## Fuel Rail Pressure Control (Cranking)

| Fuel Rail Pressure Control (Cranking) Functional Check Operation: |   |
|---|---|
| DTCs  | P00C6 (Fuel Rail Pressure Too Low – Engine Cranking)      |
| Monitor execution   | Minimum pressure met instantaneously once during cranking |
| Monitor Sequence  | P0087 and P0088 must pass before setting P00C6 or P053F   |
| Sensors/Actuators OK  | FLI, FRP, FVR, Lift Pump                                  |
| Monitoring Duration   | Minimum met instantaneously once during cranking          |

| Typical Fuel Rail Pressure Control (Cranking) Functional Check Entry Conditions: |         |         |
|--|---------|---------|
| Entry Condition  | Minimum | Maximum |
| Fuel level   | 15%     |         |

| Typical Fuel Rail Pressure Control (Cranking) Functional Check Malfunction Thresholds: |
|--|
| Fuel_Pressure_Actual >= Fuel_Pressure_Desired  |

## Fuel Rail Pressure Control (CSER)

| Fuel Rail Pressure Control (CSER) Functional Check Operation: |  |
|---|--|
| DTCs  | P053F (Cold Start Fuel Pressure Control Performance) |
| Monitor execution   | During CSER  |
| Monitor Sequence  | None   |
| Sensors/Actuators OK  | FLI, FRP, FVR, Lift Pump                             |
| Monitoring Duration   | Entire CSER period                                   |

| Typical Fuel Rail Pressure Control (CSER) Functional Check Entry Conditions: |         |         |
|--|---------|---------|
| Entry Condition  | Minimum | Maximum |
| Fuel level   | 15%     |         |

| Typical Fuel Rail Pressure Control (CSER) Functional Check Malfunction Thresholds:  |
|---|
| Time in Fuel Injection Pressure Window / CSER Duration > 0.70<br>Fuel Injection Pressure Window defined as follows:<br>Minimum Fuel Pressure to Support Desired Injection Mode <= Fuel Pressure Actual<br>Fuel Pressure Actual <= Maximum Fuel Pressure to Support Desired Injection Mode |

## Low Pressure Fuel Rail Pressure Sensor (PFI Fuel Rail)

### Fuel Rail Pressure Sensor B Check Operation:

|                     |                                       |
|---------------------|---------------------------------------|
| DTCs                | P018C (low input), P018D (high input) |
| Monitor execution   | continuous                            |
| Monitor Sequence    | None                                  |
| Sensors OK          | not applicable                        |
| Monitoring Duration | 8 seconds to register a malfunction   |

### Typical FRP sensor check malfunction thresholds:

Voltage < 0.049 volts or voltage > 4.88 volts

### Fuel Rail Pressure Sensor Transfer Function

$$\text{FRP volts} = [ \text{Vref} * ( 4 * \text{Fuel Pressure} / 70 ) + 0.50 ] / 5.00$$

| Volts | A/D counts in PCM | Pressure, psi |
|-------|-------------------|---------------|
| 4.85  | 993               | 76.125        |
| 4.50  | 922               | 70            |
| 4.00  | 820               | 61.25         |
| 3.50  | 717               | 52.5          |
| 3.00  | 614               | 43.75         |
| 2.50  | 512               | 35            |
| 2.00  | 410               | 26.25         |
| 1.50  | 307               | 17.5          |
| 1.00  | 205               | 8.75          |
| 0.50  | 102               | 0             |
| 0.15  | 31                | -6.125        |

### Fuel Rail Pressure Control (Normal) Functional Check Operation:

|                      |   |
|----------------------|---|
| DTCs                 | P008A (Fuel Rail Pressure Too Low)<br>P008B (Fuel Rail Pressure Too High) |
| Monitor execution    | continuous  |
| Monitor Sequence     | P018C, P018D and P018B must complete                                      |
| Sensors/Actuators OK | FRP   |
| Monitoring Duration  | not applicable  |

### Typical Fuel Rail Pressure Control (Normal) Functional Check Entry Conditions:

| Entry Condition            | Minimum | Maximum |
|----------------------------|---------|---------|
| High Pressure Pump Enabled | Enabled |         |
| Fuel level                 | 15%     |         |

|   |                     |               |
|---|---------------------|---------------|
| Injector Cut Off  | No Injector Cut Off |               |
| Injection Volume / (720° Pump Volume / Number of Cylinders) | 0.05                | 0.90          |
| Engine Coolant Temperature                                  | 20°F / 7°C          | 250°F / 121°C |
| CSER Mode   | Not in CSER         |               |

**Typical Fuel Rail Pressure Control (Normal) Functional Check Malfunction Thresholds:**

P008A:  $(\text{Fuel\_Pressure\_Desired} - \text{Fuel\_Pressure\_Actual}) / \text{Fuel\_Pressure\_Desired} > 0.25$

P008B:  $-(\text{Fuel\_Pressure\_Desired} - \text{Fuel\_Pressure\_Actual}) / \text{Fuel\_Pressure\_Desired} > 0.25$

**FRP Range/Performance Check Operation:**

|                     |                                     |
|---------------------|-------------------------------------|
| DTCs                | P018B (FRP range/performance)       |
| Monitor execution   | Continuous                          |
| Monitor Sequence    | None                                |
| Sensors OK          | FRP                                 |
| Monitoring Duration | 8 seconds to register a malfunction |

**Typical FRP Sensor Range/Performance check entry conditions:**

| Entry Condition            | Minimum | Maximum |
|----------------------------|---------|---------|
| Demand pressure reasonable | 35 psig | 60 psig |
| Fuel level                 | 15%     |         |

**Typical FRP Range/Performance check malfunction thresholds:**

Fuel pressure error (demand – actual pressure) > 20 psig

## Fuel Volume Regulator

| Fuel Volume Regulator Circuit Check Operation |   |
|---|---|
| DTCs  | P0001 Fuel Volume Regulator Control Circuit / Open<br>P0003 Fuel Volume Regulator Control Circuit Low<br>P0004 Fuel Volume Regulator Control Circuit High |
| Monitor execution                             | continuous  |
| Monitor Sequence                              | none  |
| Sensors OK                                    | none  |
| Monitoring Duration                           | 5 seconds   |

## Fuel Injector (DI System)

| Fuel System "A" Injector Check Operation: |  |
|---|--|
| DTCs                                      | P0201 through P0208 - Cylinder X Injector "A" Circuit (opens/shorts) |
| Monitor execution                         | Continuous within entry conditions                                   |
| Monitor Sequence                          | None   |
| Monitoring Duration                       | 8 seconds  |

| Typical injector circuit check entry conditions: |          |         |
|--|----------|---------|
| Entry Condition                                  | Minimum  | Maximum |
| Battery Voltage                                  | 11 volts |         |

## Fuel Injector (PFI System)

| Fuel System "B" Injector Check Operation: |  |
|---|--|
| DTCs                                      | P21CF through P21D6 - Cylinder X Injector "B" Circuit (opens/shorts) |
| Monitor execution                         | Continuous within entry conditions                                   |
| Monitor Sequence                          | None   |
| Monitoring Duration                       | 5 seconds  |

| Typical injector circuit check entry conditions: |          |         |
|--|----------|---------|
| Entry Condition                                  | Minimum  | Maximum |
| Battery Voltage                                  | 11 volts |         |

## Controlled Valve Operation (CVO) / Closed Loop Injection Control (CLIC)

| CVO Functional Check Operation: |  |
|---------------------------------|--|
| DTCs                            | P02EE - Cylinder 1 Injector Circuit Range/Performance<br>P02EF - Cylinder 2 Injector Circuit Range/Performance<br>P02F0 - Cylinder 3 Injector Circuit Range/Performance<br>P02F1 - Cylinder 4 Injector Circuit Range/Performance<br>P02F2 - Cylinder 5 Injector Circuit Range/Performance<br>P02F3 - Cylinder 6 Injector Circuit Range/Performance<br>P02F4 - Cylinder 7 Injector Circuit Range/Performance<br>P02F5 - Cylinder 8 Injector Circuit Range/Performance |
| Monitor execution               | Continuous   |
| Monitor Sequence                | none   |
| Sensors/Actuators OK            | FRP (P0192, P0193, P0087, P0088, P018C, P018D, P008A, P008B), FVR (P0001, P0003, P0004), INJ (P0201, P0202, P0203, P0204, P0205, P0206)  |
| Monitoring Duration             | 25 seconds   |

| Typical CVO Functional Check Malfunction Thresholds:                              |
|---|
| Driver software indicates CVO circuit fault or unable to adapt/adaption at limits |

## PFI/DI Fuel Adaptive Monitor

| Fuel Monitor Operation: |  |
|-------------------------|--|
| DTCs                    | Common mode faults:<br>P0171 System Too Lean (Bank 1)<br>P0172 System Too Rich (Bank 1)<br>P0174 System Too Lean (Bank 2)<br>P0175 System Too Rich (Bank 2)<br><br>DI mode faults:<br>P2BEC Fuel Control System "A" Too Lean Bank 1<br>P2BED Fuel Control System "A" Too Rich Bank 1<br>P2BEE Fuel Control System "A" Too Lean Bank 2<br>P2BEF Fuel Control System "A" Too Rich Bank 2<br><br>PFI mode faults:<br>P2BF0 Fuel Control System "B" Too Lean Bank 1<br>P2BF1 Fuel Control System "B" Too Rich Bank 1<br>P2BF2 Fuel Control System "B" Too Lean Bank 2<br>P2BF3 Fuel Control System "B" Too Rich Bank 2 |
| Monitor execution       | continuous while in closed loop fuel   |
| Monitor Sequence        | none   |
| Sensors OK              | Fuel Rail Pressure (if available), IAT, CHT/ECT, MAF, TP   |
| Monitoring Duration     | 2 seconds to register malfunction  |

| Typical fuel monitor entry conditions: |                 |                 |
|--|-----------------|-----------------|
| Entry condition                        | Minimum         | Maximum         |
| Engine Coolant Temp                    | 170 °F / 70 °C  | 230 °F / 110 °C |
| Engine load                            | 12%             |                 |
| Intake Air Temp                        | -30 °F / -40 °C | 150 °F / 65 °C  |
| Fuel Level                             | 10%             |                 |
| Purge Duty Cycle                       | 0%              | 0%              |

| Typical fuel monitor malfunction thresholds:   |
|--|
| Long Term Fuel Trim correction cell currently being utilized in conjunction with Short Term Fuel Trim:<br>Lean malfunction: LONGFT > 25%, SHRTFT > 1%<br>Rich malfunction: LONGFT < 25%, SHRTFT < 1% |

## Electronic Throttle Control (Dependability Monitor)

### Level 1 Monitor – Main Control system limits or diagnostics.

#### Pedal On-Demand Tests

| On-demand KOEO / KOER Sensor Check Operation: |  |
|---|--|
| DTCs  | P1124 – TP out of self-test range (non-MIL)<br>P1575 – APP out of self-test range (non-MIL)<br>P1703 – Brake switch out of self-test range (non-MIL) |
| Monitor execution                             | On-demand  |
| Monitor Sequence                              | None   |
| Sensors OK                                    | not applicable   |
| Monitoring Duration                           | < 1 seconds to register a malfunction  |

#### Accelerator Pedal Position

| Accelerator Pedal Position Sensor Check Operation: |  |
|--|--|
| DTCs   | P2122, P2123 – APP D circuit continuity (wrench light, MIL)<br>P2127, P2128 – APP E circuit continuity (wrench light, MIL)<br>P2138 – APP D/E circuit disagreement (wrench light, MIL) |
| Monitor execution                                  | continuous   |
| Monitor Sequence                                   | none   |
| Sensors OK   | not applicable   |
| Monitoring Duration                                | < 1 seconds to register a malfunction  |

| APP sensor check malfunction thresholds:                          |  |
|---|--|
| Circuit continuity - Voltage < 0.25 volts or voltage > 4.75 volts |  |
| Range/performance – disagreement between sensors > 0.9 degrees    |  |

## Brake Pedal Position

| Brake On Off Switch Check Operation: |   |
|--------------------------------------|---|
| DTCs                                 | P0504 – Brake switch A/B correlation (wrench light, non-MIL)<br>P0572 – Brake switch circuit low (wrench light, non-MIL)<br>P0573 – Brake switch circuit high (wrench light, non-MIL) |
| Monitor execution                    | Continuous  |
| Monitor Sequence                     | None  |
| Sensors OK                           | not applicable  |
| Monitoring Duration                  | > 25 brake application cycles to register a malfunction   |

| Brake Pressure Sensor Check Operation: |  |
|--|--|
| DTCs                                   | P1561 – Brake Line Pressure Sensor Circuit (wrench light, non-MIL) |
| Monitor execution                      | Continuous   |
| Monitor Sequence                       | None   |
| Sensors OK                             | not applicable   |
| Monitoring Duration                    | < 2 seconds to register a malfunction                              |

## Brake Diagnostics for Stop-Start Dependability

| Brake Torque Message Diagnostics for Stop Start Dependability Operation: |  |
|--|--|
| DTCs   | P05FF – Brake pressure/brake pedal position correlation (non-MIL)<br>P1935 – Brake pressure sensor out of range over network (MIL for MHT, non-MIL for other vehicles) |
| Monitor execution  | Continuous   |
| Monitor Sequence   | None   |
| Sensors OK   | not applicable   |
| Monitoring Duration  | < 1 second to register a malfunction   |

## Clutch Pedal Position

### a. Dual Clutch Switches

| Clutch Pedal Position Switch Check Operation: |   |
|---|---|
| DTCs  | P0704 – Clutch Switch continuous compare check (non-MIL)<br>P0830 – Clutch Switch stuck high (non-MIL)<br>P0833 – Clutch Switch stuck low (non-MIL) |
| Monitor execution                             | Continuous  |
| Monitor Sequence                              | None  |
| Sensors OK                                    | not applicable  |
| Monitoring Duration                           | > 40 clutch application cycles while driving at different speeds  |

### b. Dual PWM Clutch Sensors

| Clutch Pedal Position Sensor Check Operation: |  |
|---|--|
| DTCs  | P08A9 – Clutch pedal position sensor A circuit low<br>P08AA – Clutch pedal position sensor A circuit high<br>P08B6 – Clutch pedal position sensor B circuit low<br>P08B7 – Clutch pedal position sensor B circuit high<br>P08B9 – Clutch pedal position sensor A/B correlation |
| Monitor execution                             | Continuous   |
| Monitor Sequence                              | None   |
| Sensors OK                                    | not applicable   |
| Monitoring Duration                           | < 1 seconds to register a malfunction  |

### c. Single Analog sensor with Dual Clutch Switch Hardware

| Clutch Pedal Position Sensor w. Switches Check Operation: |   |
|---|---|
| DTCs  | P08A9 – Clutch pedal position sensor A circuit low<br>P08AA – Clutch pedal position sensor A circuit high<br>P08B9 – Clutch pedal position sensor in range rationality (or) any malfunction with the dual switch hardware |
| Monitor execution   | Continuous  |
| Monitor Sequence  | None  |
| Sensors OK  | not applicable  |
| Monitoring Duration                                       | < 1 seconds to register a malfunction for the sensor and 40 drive cycles at different vehicle speeds for the switches   |

d. Clutch Actuation Position Sensor

| Clutch Actuation Position Operation: |  |
|--------------------------------------|--|
| DTCs                                 | P2C4C – Clutch actuation position sensor A circuit low<br>P2C4D – Clutch actuation position sensor A circuit high<br>P2C50 – Clutch actuation position sensor in range rationality |
| Monitor execution                    | Continuous   |
| Monitor Sequence                     | None   |
| Sensors OK                           | not applicable   |
| Monitoring Duration                  | < 1 seconds to register a malfunction for the sensor   |

## Throttle Position

### a. Analog Throttle Position

| Throttle Position Sensor Check Operation: |   |
|---|---|
| DTCs                                      | P0122, P0123 – TP A circuit continuity (MIL, wrench light)<br>P0222, P0223 – TP B circuit continuity (MIL, wrench light)<br>P2135 – TP A / TP B correlation (non-MIL, wrench light) |
| Monitor execution                         | Continuous  |
| Monitor Sequence                          | None  |
| Sensors OK                                | not applicable  |
| Monitoring Duration                       | < 1 seconds to register a malfunction   |

| TP sensor check malfunction thresholds:                                      |
|--|
| Circuit continuity - Voltage < 0.25 volts or voltage > 4.75 volts            |
| Correlation and range/performance – disagreement between sensors > 7 degrees |

### b. SENT Throttle Position

| Throttle Position Sensor Check Operation: |   |
|---|---|
| DTCs                                      | P0120 – Throttle/Pedal Position Sensor/Switch "A" Circuit (MIL, wrench light)<br>U0606 – Lost Communication With Throttle/Pedal Position Sensor/Switch "A"(MIL, wrench light)<br>P0124 - Throttle/Pedal Position Sensor/Switch "A" Intermittent (MIL, wrench light)<br>U210F - Throttle/Pedal Position Sensor/Switch "A" Communication Circuit Low (MIL, wrench light)<br>U2110 - Throttle/Pedal Position Sensor/Switch "A" Communication Circuit High (MIL, wrench light)<br>P0068 - MAP / MAF - Throttle Position Correlation (MIL, wrench light) |
| Monitor execution                         | Continuous  |
| Monitor Sequence                          | None  |
| Sensors OK                                | not applicable  |
| Monitoring Duration                       | < 0.4 to 4 seconds to register a malfunction  |

| TP sensor check malfunction thresholds:                                    |
|--|
| P0120 (TP sensor fault) – SENT device faulted > 4 seconds                  |
| P0124 (TP intermittent) – fault present for > 0.4 seconds                  |
| U0606 (Lost Comm with TP sensor) – wiring or SENT device fault > 4 seconds |
| U210F/U2110 (SENT Comm line shorted high or low > 4 sec.                   |

**Throttle Position Sensor Check Operation (for ETB B on dual throttle applications):**

|                     |  |
|---------------------|--|
| DTCs                | P0225 – Throttle/Pedal Position Sensor/Switch "C" Circuit (MIL, wrench light)<br>U0608 – Lost Communication With Throttle/Pedal Position Sensor/Switch "C"(MIL, wrench light)<br>P0229 - Throttle/Pedal Position Sensor/Switch "C" Intermittent (MIL, wrench light)<br>U2111 - Throttle/Pedal Position Sensor/Switch "B" Communication Circuit Low (MIL, wrench light)<br>U2112 - Throttle/Pedal Position Sensor/Switch "B" Communication Circuit High (MIL, wrench light) |
| Monitor execution   | Continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | not applicable   |
| Monitoring Duration | < 0.4 to 4 seconds to register a malfunction   |

**TP sensor check malfunction thresholds:**

P0225 (TP sensor fault) – SENT device faulted > 4 seconds  
P0229 (TP intermittent) – fault present for > 0.4 seconds  
U0608 (Lost Comm with TP sensor) – wiring or SENT device fault > 4 seconds  
U2111/U2112 (SENT Comm line shorted high or low > 4 sec.

## Throttle Plate Position Controller (TPPC)

| Throttle Plate Controller and Actuator Operation: |  |
|---|--|
| DTCs  | <p>P2118 – Throttle Actuator “A” Control Motor Current Range/Performance (MIL, wrench light)</p> <p>P2111 – Throttle Actuator “A” Control System – Stuck Open (MIL, wrench light)</p> <p>P2112 – Throttle Actuator “A” Control System – Stuck Closed (MIL, wrench light)</p> <p>P2119 – Throttle Actuator “A” Control Throttle Body Range/Performance (MIL, wrench light)</p> <p>P2101 – Throttle Actuator “A” Control Motor Circuit Range/Performance (MIL, wrench light)</p> <p>P115E – Throttle Actuator “A” Control Throttle Body Air Flow Trim at Max Limit (MIL, legacy)</p> <p>P0FB6 – Throttle Actuator “A” Control Throttle Body Air Flow Trim at Max Limit (MIL, replaces P115E from new 23MY)</p> |
| Monitor execution                                 | Continuous   |
| Monitor Sequence                                  | None   |
| Monitoring Duration                               | < 5 seconds to register a malfunction  |

| Throttle Plate Controller and Actuator Operation (for ETB B on dual throttle applications): |  |
|---|--|
| DTCs  | <p>P211C – Throttle Actuator “B” Control Motor Current Range/Performance (MIL, wrench light)</p> <p>P211A – Throttle Actuator “B” Control System – Stuck Open (MIL, wrench light)</p> <p>P211B – Throttle Actuator “B” Control System – Stuck Closed (MIL, wrench light)</p> <p>P211D – Throttle Actuator “B” Control Throttle Body Range/Performance (MIL, wrench light)</p> <p>P210B – Throttle Actuator “B” Control Motor Circuit Range/Performance (MIL, wrench light)</p> <p>P0FB7 – Throttle Actuator “B” Control Throttle Body Air Flow Trim at Max Limit (MIL)</p> |
| Monitor execution   | Continuous   |
| Monitor Sequence  | None   |
| Monitoring Duration   | < 5 seconds to register a malfunction  |

## Level 2 Monitoring – IPC and Input Validation

| Electronic Throttle Monitor Operation: |  |
|--|--|
| DTCs                                   | <p>P060D – Internal control module accelerator pedal performance (MIL, wrench)</p> <p>P061A – Internal control module torque performance (non-MIL, wrench light for cruise fault, no wrench light for torque clipping)</p> <p>P061B – Internal control module torque calculation performance (MIL, wrench light)</p> <p>P061C – Internal control module engine rpm performance (MIL, wrench light)</p> <p>P061D – Internal control module engine air mass performance (MIL, wrench light)</p> <p>P061E – Internal control module brake signal performance (non-MIL, wrench light) – Replaced by U1012 on new 18MY+ vehicles</p> <p>P062B – Internal control module fuel injector control performance (MIL for VDE in US and China 6, non-MIL for Europe VDE, OFF for non-VDE applications)</p> <p>P062C – Internal control module vehicle speed performance (non-MIL, wrench light)</p> <p>P162D – Internal control module cruise control performance (non-MIL, wrench light)</p> <p>P162E – Internal Control Module PTO Control Performance (non-MIL for PTO programs)</p> <p>P164C – Internal control module stop/start performance (non-MIL, wrench light)</p> <p>P166F – Internal Control Module Clutch Actuation Position Performance (non-MIL for Stop in Gear functional Manual Transmission vehicles)</p> <p>P26C3 – Internal Control Module Transmission Range Sensor Performance (non-MIL)</p> <p>P26C4 – Internal control module clutch pedal performance (non-MIL for manual transmission vehicles)</p> <p>U0515 – Invalid Data Received From Remote Function Actuation Module (non-MIL for Remote Park Assist programs)</p> <p>U053B – Invalid Data Received From Image Processing Module A (non-MIL Remote Park Assist programs and Auto Hitch programs)</p> <p>U1010 – Invalid Internal control module Monitoring Data received from Hybrid Powertrain module (non-MIL, wrench light)</p> <p>U1011 – Torque Plausibility Communication Error – ECM signal to TCM (non-MIL for TCM)</p> <p>U1012 – Invalid Internal Control Module Monitoring Data received from ABS module (MIL for MHT, non-MIL for all others)</p> <p>U1013 – Torque Plausibility Communication error – TCM signal to ECM (non-MIL for ECM with Auto Trans)</p> <p>U101E – Invalid Internal Control Module Monitoring Data Received from Gear Shift Module (non-Mil for Park by Wire only)</p> <p>U101F – Invalid Internal Control Module Monitoring Data Received from Transmission Range Control Module (non-MIL for Park by Wire only).</p> <p>U102C – Invalid Internal Control Module Monitoring Data Received from Park Assist Control Module (non-MIL for Fully Aided Park Assist vehicles)</p> <p>U102F – Invalid Internal Control Module Monitoring Data Received from Driveline Control Module (non-MIL for R-AWD with a DLCM)</p> |

|                     |   |
|---------------------|---|
|                     | U1022 – Invalid Internal Control Module Monitoring Data Received from Body Control Module (non-MIL for OTA)<br>U3003 – Low Battery Voltage (MIL, wrench light)<br>P27B2 – Invalid Internal Control Module Transmission Range Control Performance (non-MIL for Shift by Wire vehicles)<br>P27B3 – Invalid Internal Control Module Transmission Actuator Manager Performance (non-MIL for Park by Wire vehicles)<br>P27B4 – Invalid Internal Control Module Transmission Gear Detection Control Performance (non-MIL for Shift by Wire vehicles)<br>P27B5 – Invalid Internal Control Module Transmission Gear Ratio Control Performance (non-MIL for Shift by Wire vehicles)<br>P27B6 – Invalid Internal Control Module Transmission Speed Sensor Performance (non-MIL for shift-by-wire) |
| Monitor execution   | Continuous  |
| Monitor Sequence    | None  |
| Sensors OK          | not applicable  |
| Monitoring Duration | < 1 seconds to register a malfunction   |

### Level 3 Monitoring – Quizzer assesses Main processor/IPC health

| Electronic Throttle Monitor Operation: |  |
|--|--|
| DTCs                                   | P0600 – Serial Communication Link (MIL, wrench light)<br>P060A – Internal control module monitoring processor performance (MIL, wrench light)<br>P060B – Internal control module A/D processing performance (MIL, wrench light)<br>P060C – Internal control module main processor performance (MIL, wrench light)<br>P0606 – Control Module Processor (MIL, wrench light)<br>P1674 – Internal control module software corrupted (MIL, wrench light)<br>U0300 – ETC software version mismatch, IPC, Quizzer or TPPC (MIL, wrench light) |
| Monitor execution                      | Continuous   |
| Monitor Sequence                       | None   |
| Sensors OK                             | not applicable   |
| Monitoring Duration                    | < 1 seconds to register a malfunction  |

## Stop Start Diagnostics

### Stop Start Enable Conditions:

| Input                  | Stop-Start Inhibit Conditions   | Rationale   |
|------------------------|---|---|
| ECT                    | 140 deg F < ECT < 230 deg F   | Combustion Stability  |
| BARO                   | BARO <= 20 in Hg (Altitude <= 10,000 ft)  | Minimum Air Charge  |
| FRP at Idle            | Fuel Rail Pressure (FRP) at Idle >= 45 Bar  | Restart Combustion Stability  |
| FRP w/Engine Off       | FRP at engine off >= FRP at Idle with max drop of 5 Bar. If FRP at eng off drops below threshold, request pull-up | Restart Combustion Stability  |
| Time Since Key-Start   | 10 seconds  | Oil Stabilization and Learn Closed Throttle                                       |
| Max Crank Time         | Max Crank Time should be min of 5 sec below limit to allow a shutdown   | To avoid a possible max crank fault   |
| Low Fuel Level         | fuel level below 15%  | Avoid starts on empty fuel tank   |
| Purge complete         | Canister Purge Valve no closed before end of pre stop period  | Wait for purge to complete before pulling down engine                             |
| Adaptive Fuel Complete | Adaptive fuel learning not complete   | If Adaptive fuel learning is in process, wait for it to complete before pull down |

### Stop Start Disable Conditions:

**FVR** (P0001, P0003, P0004), **Low Pressure Fuel** (P008A, P008B), **Crank Fuel Pressure** (P00C6),  
**VVT** (P0010, P0011, P0012, P0013, P0014, P0015, P0016, P0017),  
**AAT** (P0072, P0073, P0074), **IAT** (P00CE), **High Pressure Fuel** (P0087, P0088),  
**IAT2** (P0096, P0097, P0098), **MAF** (P0100, P0102, P0103, P1101), **MAF/TP** (P0068),  
**MAP** (P0106, P0107, P0108, P0109), **IAT1** (P0111, P0112, P0113, P0114),  
**ECT** (P0116, P0117, P0118, P0119), **TP1** (P0122, P0123), **TP2** (P0222, P0223),  
**Fuel Monitor** (P0148, P0171, P0172), **LP FP** (P018C, P018D), **FRP** (P0192, P0193),  
**Injectors** (P0201, P0202, P0203, P0204), **Misfire** (P0300, P0301, P0302, P0303, P0304),  
**Fuel Pump** (P025A, P025B, P0230, P0231, P0232, P0627, P064A),  
**CMP A** (P0340, P0341, P0344), **Coils** (P0351, P0352, P0353, P0354),  
**CMP B** (P0365, P0366, P0369), **Idle Speed** (P0505, P0506, P0507), **Starter** (P0615, P06E9, P162F),  
**ETC** (P2100, P2101, P2107, P2111, P2112), **APP** (P2122, P2123, P2127, P2128, P2135, P2138),  
**BARO** (P2227, P2228, P2229, P2230), **PCV** (P2282),  
**Coils** (P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310)

## Comprehensive Component Monitor - Engine

### Engine Temperature Sensor Inputs

#### Engine Coolant Temperature Sensor Check Operation:

|                     |                                       |
|---------------------|---------------------------------------|
| DTCs                | P0117 (low input), P0118 (high input) |
| Monitor execution   | continuous                            |
| Monitor Sequence    | None                                  |
| Sensors OK          | not applicable                        |
| Monitoring Duration | 5 seconds to register a malfunction   |

#### Typical ECT sensor check malfunction thresholds:

Voltage < 0.244 volts or voltage > 4.96 volts

#### ECT Sensor Rationality Check Operation:

|  |  |
|--|--|
| DTCs                                   | P0116 (ECT stuck high or midrange)                                 |
| Monitor execution                      | Once per driving cycle   |
| Monitor Sequence                       | None   |
| Sensors OK                             | ECT, CHT, IAT  |
| Monitoring Duration for stuck high     | On first valid sample after key on (engine does not have to start) |
| Monitoring Duration for stuck midrange | 5 seconds to register a malfunction                                |

#### Typical ECT Sensor Rationality check entry conditions:

| Entry Condition   | Minimum | Maximum |
|---|---------|---------|
| Engine-off time (soak time)                             | 360 min |         |
| Difference between ECT and IAT (stuck high only)        |         | 50 deg  |
| Engine Coolant Temperature for stuck high condition     | 230 °F  |         |
| Engine Coolant Temperature for stuck midrange condition | 175 °F  | 230 °F  |

#### Typical ECT Sensor Rationality check malfunction thresholds:

ECT stuck high after first valid sample OR ECT stuck midrange for > 5 seconds

**Cylinder Head Temperature Sensor Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P1289 (high input), P1290 (low input), P1299 (fail-safe cooling activated) |
| Monitor execution   | continuous   |
| Monitor Sequence    | none   |
| Sensors OK          | not applicable   |
| Monitoring Duration | 5 seconds to register a malfunction  |

**Typical CHT sensor check malfunction thresholds:**

Voltage < 0.244 volts or voltage > 4.96 volts

For P1299, MIL illuminates immediately if CHT > 270 ° Fuel shut-off is activated to reduce engine and coolant temperature

**Cylinder Head Temperature Sensor Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P1289 (high input), P1290 (low input), P1299 (fail-safe cooling activated) |
| Monitor execution   | continuous   |
| Monitor Sequence    | none   |
| Sensors OK          | not applicable   |
| Monitoring Duration | 5 seconds to register a malfunction  |

**Typical CHT sensor check malfunction thresholds:**

Voltage < 0.244 volts or voltage > 4.96 volts

For P1299, MIL illuminates immediately if CHT > 270 ° Fuel shut-off is activated to reduce engine and coolant temperature

**Intake Air Temperature Sensor Check Operation:**

|                     |                                       |
|---------------------|---------------------------------------|
| DTCs                | P0112 (low input), P0113 (high input) |
| Monitor execution   | continuous                            |
| Monitor Sequence    | none                                  |
| Sensors OK          | not applicable                        |
| Monitoring Duration | 5 seconds to register a malfunction   |

**Typical IAT sensor check malfunction thresholds:**

Voltage < 0.244 volts or voltage > 4.96 volts

**Engine Oil Temperature Sensor Check Operation:**

|                     |                                       |
|---------------------|---------------------------------------|
| DTCs                | P0197 (low input), P0198 (high input) |
| Monitor execution   | continuous                            |
| Monitor Sequence    | none                                  |
| Sensors OK          | not applicable                        |
| Monitoring Duration | 5 seconds to register a malfunction   |

**Typical EOT sensor check malfunction thresholds:**

Voltage < 0.20 volts or voltage > 4.96 volts

**Fuel Rail Temperature Sensor Check Operation:**

|                     |                                       |
|---------------------|---------------------------------------|
| DTCs                | P0182 (low input), P0183 (high input) |
| Monitor execution   | continuous                            |
| Monitor Sequence    | none                                  |
| Sensors OK          | not applicable                        |
| Monitoring Duration | 5 seconds to register a malfunction   |

**Typical FRT sensor check malfunction thresholds:**

Voltage < 0.12 volts or voltage > 4.82 volts

## Ambient Air Temperature

| Ambient Air Temperature Sensor Check Operation: |   |
|---|---|
| DTCs  | P0072 - AAT Sensor Circuit Low<br>P0073 - AAT Sensor Circuit High |
| Monitor execution                               | Continuous  |
| Monitor Sequence                                | None  |
| Sensors OK                                      | not applicable  |
| Monitoring Duration                             | 5 seconds to register a malfunction                               |

| Typical AAT sensor check malfunction thresholds: |  |
|--|--|
| Voltage < 0.51 volts   or   voltage > 4.93 volts |  |

| ECT, IAT, EOT Temperature Sensor Transfer Function |                   |                        |
|--|-------------------|------------------------|
| Volts  | A/D counts in PCM | Temperature, degrees F |
| 4.89   | 1001              | -40                    |
| 4.86   | 994               | -31                    |
| 4.81   | 983               | -22                    |
| 4.74   | 970               | -13                    |
| 4.66   | 954               | -4                     |
| 4.56   | 934               | 5                      |
| 4.45   | 910               | 14                     |
| 4.30   | 880               | 23                     |
| 4.14   | 846               | 32                     |
| 3.95   | 807               | 41                     |
| 3.73   | 764               | 50                     |
| 3.50   | 717               | 59                     |
| 3.26   | 666               | 68                     |
| 3.00   | 614               | 77                     |
| 2.74   | 561               | 86                     |
| 2.48   | 508               | 95                     |
| 2.23   | 456               | 104                    |
| 1.99   | 407               | 113                    |
| 1.77   | 361               | 122                    |
| 1.56   | 319               | 131                    |
| 1.37   | 280               | 140                    |
| 1.20   | 246               | 149                    |
| 1.05   | 215               | 158                    |
| 0.92   | 188               | 167                    |
| 0.80   | 165               | 176                    |
| 0.70   | 144               | 185                    |
| 0.61   | 126               | 194                    |

|      |     |     |
|------|-----|-----|
| 0.54 | 110 | 203 |
| 0.47 | 96  | 212 |
| 0.41 | 85  | 221 |
| 0.36 | 74  | 230 |
| 0.32 | 65  | 239 |
| 0.28 | 57  | 248 |
| 0.25 | 51  | 257 |
| 0.22 | 45  | 266 |
| 0.19 | 40  | 275 |
| 0.17 | 35  | 284 |
| 0.15 | 31  | 293 |
| 0.14 | 28  | 302 |

| CHT Temperature Sensor Transfer Function, Cold End |                   |                        |
|--|-------------------|------------------------|
| Volts  | A/D counts in PCM | Temperature, degrees F |
| 4.899  | 1002              | -40                    |
| 4.861  | 995               | -31                    |
| 4.812  | 985               | -22                    |
| 4.75   | 972               | -14                    |
| 4.671  | 956               | -4                     |
| 4.572  | 936               | 4                      |
| 4.452  | 911               | 14                     |
| 4.309  | 882               | 22                     |
| 4.14   | 847               | 32                     |
| 3.95   | 808               | 40                     |
| 3.737  | 765               | 48                     |
| 3.508  | 717               | 58                     |
| 3.26   | 666               | 68                     |
| 3.00   | 614               | 77                     |
| 2.738  | 560               | 87                     |
| 2.478  | 507               | 96                     |
| 2.226  | 455               | 105                    |
| 1.985  | 406               | 114                    |
| 1.759  | 360               | 122                    |
| 1.551  | 317               | 132                    |
| 1.362  | 279               | 141                    |
| 1.193  | 244               | 149                    |
| 1.043  | 213               | 159                    |
| 0.91   | 186               | 168                    |
| 0.794  | 162               | 176                    |
| 0.693  | 142               | 186                    |
| 0.604  | 124               | 194                    |
| 0.528  | 108               | 203                    |
| 0.462  | 95                | 204                    |

| CHT Temperature Sensor Transfer Function, Hot End |                   |                        |
|---|-------------------|------------------------|
| Volts   | A/D counts in PCM | Temperature, degrees F |
| 4.235   | 866               | 168                    |
| 4.119   | 843               | 168                    |
| 3.993   | 817               | 176                    |
| 3.858   | 789               | 185                    |
| 3.714   | 760               | 194                    |
| 3.563   | 729               | 203                    |
| 3.408   | 697               | 212                    |
| 3.244   | 664               | 221                    |
| 3.076   | 629               | 230                    |
| 2.908   | 595               | 239                    |
| 2.740   | 561               | 248                    |
| 2.575   | 527               | 257                    |
| 2.411   | 493               | 266                    |
| 2.252   | 461               | 275                    |
| 2.099   | 430               | 284                    |
| 1.953   | 400               | 294                    |
| 1.813   | 371               | 303                    |
| 1.680   | 344               | 312                    |
| 1.556   | 318               | 320                    |
| 1.439   | 294               | 329                    |
| 1.329   | 272               | 338                    |
| 1.228   | 251               | 347                    |
| 1.133   | 232               | 356                    |
| 1.046   | 214               | 366                    |
| 0.965   | 197               | 375                    |
| 0.891   | 182               | 383                    |
| 0.822   | 168               | 392                    |
| 0.760   | 155               | 401                    |
| 0.701   | 144               | 408                    |
| 0.648   | 133               | 415                    |
| 0.599   | 123               | 422                    |
| 0.555   | 113               | 428                    |
| 0.513   | 105               | 433                    |
| 0.476   | 97                | 438                    |
| 0.441   | 90                | 442                    |
| 0.409   | 84                | 447                    |
| 0.380   | 78                | 450                    |
| 0.353   | 72                | 454                    |
| 0.328   | 67                | 457                    |
| 0.306   | 63                | 460                    |
| 0.285   | 58                | 463                    |
| 0.265   | 54                | 465                    |

|       |    |     |
|-------|----|-----|
| 0.248 | 51 | 468 |
| 0.231 | 47 | 470 |
| 0.216 | 44 | 472 |
| 0.202 | 41 | 474 |
| 0.190 | 39 | 475 |
| 0.178 | 36 | 477 |
| 0.167 | 34 | 478 |
| 0.156 | 32 | 480 |

## Intake Air Temperature 1 Sensor (IAT1)

| Intake Air Temperature 1 Sensor Circuit Range Check |   |
|---|---|
| DTCs  | P0112 Intake Air Temperature Sensor 1 Circuit Low (Bank 1)<br>P0113 Intake Air Temperature Sensor 1 Circuit High (Bank 1) |
| Monitor execution                                   | continuous  |
| Monitor Sequence                                    | none  |
| Sensors OK  | not applicable  |
| Monitoring Duration                                 | 5 seconds to register a malfunction   |

| Typical Intake Air Temperature 1 Sensor Circuit Range Check Malfunction Thresholds |                            |
|--|----------------------------|
| P0112  | IAT1 voltage < 0.244 volts |
| P0113  | IAT1 voltage > 4.96 volts  |

| Intake Air Temperature Sensor 1 Circuit Intermittent Check |   |
|--|---|
| DTCs   | P0114 Intake Air Temperature Sensor 1 Intermittent/Erratic (Bank 1) |
| Monitor execution  | continuous  |
| Monitor Sequence   | none  |
| Sensors OK   | not applicable  |
| Monitoring Duration  | counts intermittent events per trip                                 |

| Typical Air Charge Temperature Sensor Check Malfunction Thresholds |  |
|--|--|
| 10 intermittent out-of-range events per driving cycle              |  |

## Charge Air Cooler Temperature Sensor (CACT)

| Throttle Charge Temperature Sensor Circuit Range Check |   |
|--|---|
| DTCs   | P007C Charge Air Cooler Temperature Sensor Circuit Low (Bank 1)<br>P007D Charge Air Cooler Temperature Sensor Circuit High (Bank 1) |
| Monitor execution                                      | continuous  |
| Monitor Sequence                                       | none  |
| Sensors OK   | not applicable  |
| Monitoring Duration                                    | 5 seconds to register a malfunction   |

| Typical Throttle Charge Temperature Sensor Circuit Range Check Malfunction Thresholds |                            |
|---|----------------------------|
| P007C   | CACT voltage < 0.244 volts |
| P007D   | CACT voltage > 4.96 volts  |

## Intake Air Temperature 2 Sensor (IAT2)

| Manifold Charge Temperature Sensor Circuit Range Check |   |
|--|---|
| DTCs   | P0097 Intake Air Temperature Sensor 2 Circuit Low (Bank 1)<br>P0098 Intake Air Temperature Sensor 2 Circuit High (Bank 1) |
| Monitor execution                                      | Continuous  |
| Monitor Sequence                                       | None  |
| Sensors OK   | not applicable  |
| Monitoring Duration                                    | 5 seconds to register a malfunction   |

| Typical Manifold Charge Temperature Sensor Circuit Range Malfunction Thresholds |                            |
|---|----------------------------|
| P0097   | IAT2 voltage < 0.244 volts |
| P0098   | IAT2 voltage > 4.96 volts  |

| IAT1, CACT, IAT2, EOT Temperature Sensor Transfer Function |                   |                        |
|--|-------------------|------------------------|
| Volts  | A/D counts in PCM | Temperature, degrees F |
| 4.89   | 1001              | -40                    |
| 4.86   | 994               | -31                    |
| 4.81   | 983               | -22                    |
| 4.74   | 970               | -13                    |
| 4.66   | 954               | -4                     |
| 4.56   | 934               | 5                      |
| 4.45   | 910               | 14                     |
| 4.30   | 880               | 23                     |
| 4.14   | 846               | 32                     |
| 3.95   | 807               | 41                     |
| 3.73   | 764               | 50                     |
| 3.50   | 717               | 59                     |
| 3.26   | 666               | 68                     |
| 3.00   | 614               | 77                     |
| 2.74   | 561               | 86                     |
| 2.48   | 508               | 95                     |
| 2.23   | 456               | 104                    |
| 1.99   | 407               | 113                    |
| 1.77   | 361               | 122                    |
| 1.56   | 319               | 131                    |
| 1.37   | 280               | 140                    |
| 1.20   | 246               | 149                    |
| 1.05   | 215               | 158                    |
| 0.92   | 188               | 167                    |
| 0.80   | 165               | 176                    |
| 0.70   | 144               | 185                    |
| 0.61   | 126               | 194                    |
| 0.54   | 110               | 203                    |
| 0.47   | 96                | 212                    |
| 0.41   | 85                | 221                    |
| 0.36   | 74                | 230                    |
| 0.32   | 65                | 239                    |
| 0.28   | 57                | 248                    |
| 0.25   | 51                | 257                    |
| 0.22   | 45                | 266                    |
| 0.19   | 40                | 275                    |
| 0.17   | 35                | 284                    |
| 0.15   | 31                | 293                    |
| 0.14   | 28                | 302                    |

## Relative Humidity Temperature Sensor (RHT)

| Relative Humidity Temperature Sensor Circuit Range Check |                                     |
|--|-------------------------------------|
| DTCs   | P0f5a RHT Sensor SENT Circuit       |
| Monitor execution  | Continuous                          |
| Monitor Sequence   | None                                |
| Sensors OK   | not applicable                      |
| Monitoring Duration                                      | 3 seconds to register a malfunction |

## IAT1, CACT, IAT2 Key-Up Correlation Check

| Engine Air Temperature Sensor Key-Up Correlation Check |  |
|--|--|
| DTCs   | P0111 Intake Air Temperature Sensor 1 Circuit Range/Performance (Bank 1)<br>P007B Charge Air Cooler Temperature Sensor Circuit Range/Performance (Bank 1)<br>P0096 Intake Air Temperature Sensor 2 Circuit Range/Performance (Bank 1)<br>P00CE Intake Air Temperature Measurement System – Multiple Sensor Correlation |
| Monitor execution                                      | Once per driving cycle, at start-up  |
| Monitor Sequence                                       | None   |
| Sensors OK   | ECT/CHT, IAT1, CACT, IAT2, TFT   |
| Monitoring Duration                                    | Immediate  |

| Engine Air Temperature Sensor Key-Up Correlation Check Entry Conditions |         |         |
|---|---------|---------|
| Entry condition   | Minimum | Maximum |
| Engine off (soak) time  | 6 hours |         |
| CHT – TFT at start (block heater inferred)                              |         | +10 °F  |

| Typical Engine Air Temperature Sensor Key-Up Correlation Check Malfunction Thresholds |
|---|
| CHT at least 10°F hotter than TFT means block heater detected.                        |

## IAT Rationality Test

| Intake Air Temperature Sensor Range/Performance Check Operation: |   |
|--|---|
| DTCs   | P0111 (IAT11 range/performance)<br>P0096 (IAT12 range/performance)<br>P00ab (IAT21 range/performance) |
| Monitor execution  | Once per driving cycle, at start-up   |
| Monitor Sequence   | None  |
| Sensors OK   | ECT/CHT, IAT, VSS   |
| Monitoring Duration  | Immediate or up to 30 minutes to register a malfunction   |

| Typical Engine Air Temperature Sensor Out of Range Hot Check Malfunction Thresholds |              |
|---|--------------|
| P0111   | IAT1 > 150°F |
| P007B   | CACT > 220°F |
| P0096   | IAT2 > 240°F |

## IAT1, CACT, IAT2 Out of Range Hot Check

| Engine Air Temperature Sensor Out of Range Hot Check |   |
|--|---|
| DTCs   | P0111 Intake Air Temperature Sensor 1 Circuit Range/Performance (Bank 1)<br>P007B Charge Air Cooler Temperature Sensor Circuit Range/Performance (Bank 1)<br>P0096 Intake Air Temperature Sensor 2 Circuit Range/Performance (Bank 1) |
| Monitor execution                                    | Continuous  |
| Monitor Sequence                                     | None  |
| Sensors OK   | ECT/CHT, IAT, VSS   |
| Monitoring Duration                                  | 250 seconds to register a malfunction   |

| Engine Air Temperature Sensor Out of Range Hot Check Entry Conditions |         |         |
|---|---------|---------|
| Entry condition   | Minimum | Maximum |
| Vehicle speed   | 40 mph  |         |
| Time above minimum vehicle speed (if driving req'd)                   | 5 min   |         |
| For IAT1, Load below a maximum load threshold                         | 1.0     |         |

| Typical Engine Air Temperature Sensor Out of Range Hot Check Malfunction Thresholds |              |
|---|--------------|
| P0111   | IAT1 > 150°F |
| P007B   | CACT > 220°F |
| P0096   | IAT2 > 240°F |

## RHT Rationality Test

| Relative Humidity Temperature Sensor Range/Performance Check Operation: |   |
|---|---|
| DTCs  | P05fb (range/performance)                               |
| Monitor execution   | Once per driving cycle, at start-up                     |
| Monitor Sequence  | None  |
| Sensors OK  | IAT   |
| Monitoring Duration   | Immediate or up to 30 minutes to register a malfunction |

| Relative Humidity Temperature Sensor Out of Range High Check Operation: |   |
|---|---|
| DTCs  | P05fb (Out of Range High)                               |
| Monitor execution   | Continuous  |
| Monitor Sequence  | None  |
| Sensors OK  | IAT   |
| Monitoring Duration   | Immediate or up to 30 minutes to register a malfunction |

## AAT Rationality Test

| Ambient Air Temperature Sensor Range/Performance Check Operation: |  |
|---|--|
| DTCs  | P0071 - AAT Sensor Range/Performance                   |
| Monitor execution   | Once per driving cycle, at start-up                    |
| Monitor Sequence  | None   |
| Sensors OK  | ECT/CHT, IAT, VSS, P2610                               |
| Monitoring Duration   | Immediate or up to 5 minutes to register a malfunction |

| Typical Ambient Air Temperature Sensor Range/Performance Entry Conditions |            |         |
|---|------------|---------|
| Entry condition   | Minimum    | Maximum |
| Engine off (soak) time  | 6 hours    |         |
| Battery Voltage   | 11.0 Volts |         |
| Time since engine start (if driving req'd)                                |            | 30 min  |
| Vehicle speed (if driving req'd)  | 25 mph     |         |
| Time above minimum vehicle speed (if driving req'd)                       | 5 min      |         |
| IAT - ECT at start (block heater inferred)                                | -30 °F     | -90 °F  |

| Typical AAT sensor check malfunction thresholds:        |  |
|---|--|
| AAT and IAT and ECT/CHT error at start-up > +/-30 deg F |  |

| Ambient Air Temperature Sensor Out of Range High Check Operation: |                                       |
|---|---------------------------------------|
| DTCs  | P0071 (Out of Range High)             |
| Monitor execution   | Continuous                            |
| Monitor Sequence  | None                                  |
| Sensors OK  | ECT/CHT, IAT, VSS, P2610              |
| Monitoring Duration   | 300 seconds to register a malfunction |

| Typical Ambient Air Temperature Sensor Out of Range high Entry Conditions |            |         |
|---|------------|---------|
| Entry condition   | Minimum    | Maximum |
| Engine off (soak) time  | 6 hours    |         |
| Battery Voltage   | 11.0 Volts |         |
| Load  |            | 200%    |
| Vehicle speed   | 10 mph     |         |
| Time above minimum vehicle speed (if driving req'd)                       | 5 min      |         |

| Typical AAT Sensor Out of Range High check malfunction thresholds: |
|--|
| IAT > 150 deg F  |

## Fuel Rail Pressure Sensor

| Fuel Rail Pressure Sensor Check Operation: |                                       |
|--|---------------------------------------|
| DTCs                                       | P0192 (low input), P0193 (high input) |
| Monitor execution                          | continuous                            |
| Monitor Sequence                           | None                                  |
| Sensors OK                                 | not applicable                        |
| Monitoring Duration                        | 8 seconds to register a malfunction   |

| Typical FRP sensor check malfunction thresholds: |
|--|
| Voltage < 0.049 volts or voltage > 4.88 volts    |

| Fuel Rail Pressure Sensor Transfer Function                    |                   |               |
|--|-------------------|---------------|
| FRP volts = [ Vref * ( 4 * Fuel Pressure / 70) + 0.50 ] / 5.00 |                   |               |
| Volts  | A/D counts in PCM | Pressure, psi |
| 4.85   | 993               | 76.125        |
| 4.50   | 922               | 70            |
| 4.00   | 820               | 61.25         |
| 3.50   | 717               | 52.5          |
| 3.00   | 614               | 43.75         |
| 2.50   | 512               | 35            |
| 2.00   | 410               | 26.25         |
| 1.50   | 307               | 17.5          |
| 1.00   | 205               | 8.75          |
| 0.50   | 102               | 0             |
| 0.15   | 31                | -6.125        |

| FRP Range/Performance Check Operation: |   |
|--|---|
| DTCs                                   | P0191 (FRP range/performance), P1090 (stuck in range) |
| Monitor execution                      | Continuous  |
| Monitor Sequence                       | None  |
| Sensors OK                             | FRP   |
| Monitoring Duration                    | 8 seconds to register a malfunction                   |

**Typical FRP Sensor Range/Performance check entry conditions:**

| Entry Condition            | Minimum | Maximum |
|----------------------------|---------|---------|
| Demand pressure reasonable | 35 psig | 60 psig |
| Fuel level                 | 15%     |         |

**Typical FRP Range/Performance check malfunction thresholds:**

Fuel pressure error (demand – actual pressure) > 20 psig

**Typical FRP Sensor Stuck check entry conditions:**

| Entry Condition      | Minimum | Maximum      |
|----------------------|---------|--------------|
| FRP sensor input     | 0 psig  | 46 psig      |
| FRP input not moving |         | 1 psig / sec |

**Typical FRP Stuck check malfunction thresholds:**

Fuel pressure error (demand – actual pressure) > 5 psig

## Mass Air Flow Sensor

| MAF Sensor Check Operation: |  |
|-----------------------------|--|
| DTCs                        | Digital MAF Sensor A: P0100 (broken element), P0102 (low input), P0103 (high input), P0104 (intermittent)<br>Digital MAF Sensor B: P010A (broken element), P010C (low input), P010D (high input), P010E (intermittent) |
| Monitor execution           | continuous   |
| Monitor Sequence            | none   |
| Sensors OK                  | not applicable   |
| Monitoring Duration         | 5 seconds to register a malfunction  |

| Typical MAF Sensor check entry conditions:        |                          |          |
|---|--------------------------|----------|
| Entry Condition                                   | Minimum                  | Maximum  |
| P0100   |                          |          |
| Time since last PIP edge (engine has not stalled) |                          |          |
| P0102   |                          |          |
| Time since last PIP edge (engine has not stalled) |                          | 150 msec |
| Engine rpm  | Base idle speed – 25 rpm |          |
| Relative throttle position                        | 1 degree                 |          |
| P0103   |                          |          |
| Engine rpm  |                          | 6000 rpm |

| Typical MAF sensor check malfunction thresholds:                                      |
|---|
| Digital Sensor:   |
| P0100/P010A – MAF sensor signal period > 1300 microseconds (< 0.78 kHz) for > 0.5 sec |
| P0102/P010C - MAF sensor signal period > 658 microseconds (< 1.5 kHz) for > 5 sec     |
| P0103/P010D - MAF sensor signal period < 83 microseconds (> 0.78kHz) for > 5 sec      |
| P0104/P010E – MAF sensor open/shorted > 25 occurrences                                |

## Manifold Absolute Pressure Sensor

| MAP Sensor Transfer Function  |               |                     |
|---|---------------|---------------------|
| $V_{out} = (V_{ref} / 5) * 0.0409523809 * \text{Pressure (in kPa)} + -0.1095238095$ |               |                     |
| Volts   | Pressure, kPa | Pressure, Inches Hg |
| 0.30  | 10.0          | 2.59                |
| 0.38  | 12.0          | 3.54                |
| 1.00  | 27.0          | 7.97                |
| 2.35  | 60.0          | 17.72               |
| 3.37  | 85.0          | 25.10               |
| 4.48  | 112.0         | 33.07               |
| 4.60  | 115.0         | 33.96               |

| MAP Sensor Check Operation |   |
|----------------------------|---|
| DTCs                       | P0107 (low voltage), P0108 (high voltage) |
| Monitor execution          | continuous                                |
| Monitor Sequence           | None                                      |
| Sensors OK                 | not applicable                            |
| Monitoring Duration        | 5 seconds to register a malfunction       |

| MAP electrical check entry conditions: |
|--|
| Battery voltage > 11.0 volts           |

| Typical MAP sensor check malfunction thresholds: |
|--|
| Voltage < 0.19 volts or voltage > 4.88 volts     |

## MAP Sensor Rationality Test (Naturally Aspirated Speed Density Engines)

| Key-Up Test (MAP signal vs. BP signal) |  |
|--|--|
| DTC                                    | P0106 Manifold Absolute Pressure Circuit Range/Performance |
| Monitor execution                      | At key-up  |
| Monitor Sequence                       | None   |
| Sensors OK                             | BP, MAP  |
| Monitoring Duration                    | 0.3 seconds  |

| Typical Key-Up Test Entry Conditions |           |         |
|--------------------------------------|-----------|---------|
| Entry condition                      | Minimum   | Maximum |
| Engine off (soak) time               | 4 seconds |         |

| Engine Running Test (MAP signal vs. Estimated MAP signal/BP signal) |  |
|---|--|
| DTC   | P0106 Manifold Absolute Pressure Circuit Range/Performance |
| Monitor execution   | Continuous, if entry conditions are met                    |
| Monitor Sequence  | None   |
| Sensors OK  | BP, MAP, TPS   |
| Monitoring Duration   | 10~15 seconds (one monitoring event)                       |

| Typical Engine Running Test Entry Conditions |            |         |
|--|------------|---------|
| Entry conditions                             | Minimum    | Maximum |
| Throttle Position                            | 10 degrees |         |
| Engine Speed                                 | 525 RPM    |         |
| Change in Throttle Position                  | 1.0 degree |         |
| Change in MAP signal                         | 1.0"Hg     |         |
| Change in estimated MAP signal               | 1.0"Hg     |         |

**Typical MAP Sensor Rationality Test Malfunction Thresholds** $|BARO - MAP| < 3.0\text{"Hg}$  (Key-Up test) $|MAP - \text{Estimated MAP} / BARO| < 2.20\text{"Hg}$  (Engine Running Test)**Intake Manifold Pressure Sensor Range Circuit Intermittent Check**

|                     |   |
|---------------------|---|
| DTCs                | P0109 Manifold Absolute Pressure/BARO Sensor Intermittent |
| Monitor execution   | continuous  |
| Monitor Sequence    | none  |
| Sensors OK          | not applicable  |
| Monitoring Duration | 25 counts intermittent events per trip                    |

**Typical Intake Manifold Pressure Sensor Range Circuit Malfunction Thresholds**

25 intermittent out-of-range events per driving cycle

## MAP Sensor Rationality Test (Supercharged Engine)

| Key-Up Test (MAP signal vs. BP signal) |  |
|--|--|
| DTC                                    | P0106 Manifold Absolute Pressure Circuit Range/Performance |
| Monitor execution                      | At key-up  |
| Monitor Sequence                       | None   |
| Sensors OK                             | BP, MAP  |
| Monitoring Duration                    | 0.3 seconds  |

| Typical Key-Up Test Entry Conditions |           |         |
|--------------------------------------|-----------|---------|
| Entry condition                      | Minimum   | Maximum |
| Engine off (soak) time               | 4 seconds |         |

| Engine Running Test (MAP signal vs. Estimated MAP signal) |  |
|---|--|
| DTC   | P0106 Manifold Absolute Pressure Circuit Range/Performance |
| Monitor execution   | Continuous, if entry conditions are met                    |
| Monitor Sequence  | None   |
| Sensors OK  | BP, MAP, TPS, SIP  |
| Monitoring Duration                                       | 2~5 seconds (after 2~4 seconds of stabilization time)      |

| Typical Engine Running Test Entry Conditions |              |         |
|--|--------------|---------|
| Entry conditions                             | Minimum      | Maximum |
| Engine Coolant Temperature                   | 70 degrees F |         |
| Throttle Position                            | 10 degrees   |         |
| Change in Throttle Position                  | 0.3 degree   |         |

| Typical MAP Sensor Rationality Test Malfunction Thresholds |  |
|--|--|
| BARO – MAP  < 1.5"Hg (Key-Up test)                         |  |
| MAP – Estimated MAP  < 2.50"Hg (Engine Running Test)       |  |

| Intake Manifold Pressure Sensor Range Circuit Intermittent Check |   |
|--|---|
| DTCs   | P0109 Manifold Absolute Pressure/BARO Sensor Intermittent |
| Monitor execution  | continuous  |
| Monitor Sequence   | none  |
| Sensors OK   | not applicable  |
| Monitoring Duration  | 25 counts intermittent events per trip                    |

| Typical Intake Manifold Pressure Sensor Range Circuit Malfunction Thresholds |  |
|--|--|
| 25 intermittent out-of-range events per driving cycle                        |  |

## MAF/MAP - TP Rationality Test

| MAF/TP Rationality Check Operation: |   |
|-------------------------------------|---|
| DTCs                                | P0068 - MAP / MAF - Throttle Position Correlation |
| Monitor execution                   | Continuous  |
| Monitor Sequence                    | None  |
| Sensors OK                          |   |
| Monitoring Duration                 | 5 seconds within test entry conditions            |

| Typical MAF/TP rationality check entry conditions: |         |                     |
|--|---------|---------------------|
| Entry Condition                                    | Minimum | Maximum             |
| Engine RPM   | 550 rpm | minimum of 5000 rpm |
| Engine Coolant Temp                                | 150 °F  |                     |

| Typical MAF/TP rationality check malfunction thresholds:       |  |
|--|--|
| Load > 60% and TP < 2.4 volts or Load < 30% and TP > 2.4 volts |  |

## Engine Off Timer Monitor

| Engine Off Timer Check Operation: |   |
|-----------------------------------|---|
| DTCs                              | P2610                                     |
| Monitor execution                 | Continuous within entry conditions        |
| Monitor Sequence                  | None                                      |
| Monitoring Duration               | Immediately on startup or after 5 minutes |

| Typical Engine Off Timer check malfunction thresholds: |
|--|
| Engine off time < 30 seconds after inferred soak       |
| Engine off timer accuracy off by > 15 sec.             |
| Engine off time CAN message missing at startup         |

**5 Volt Sensor Reference Voltage A Check:**

|                     |   |
|---------------------|---|
| DTCs                | P0642 - Sensor Reference Voltage "A" Circuit Low<br>P0643 - Sensor Reference Voltage "A" Circuit High |
| Monitor execution   | Continuous  |
| Monitor Sequence    | None  |
| Sensors OK          | not applicable  |
| Monitoring Duration | 5 sec to register a malfunction   |

**Typical 5 Volt Sensor Reference Voltage A check entry conditions:**

| Entry Condition | Minimum | Maximum |
|-----------------|---------|---------|
| Ignition "ON"   | NA      | NA      |

**Typical 5 Volt Sensor Reference Voltage A check malfunction thresholds:**P0642

Short to ground (signal voltage): &lt; 4.75 V

P0643

Short to battery plus (signal voltage): &gt; 5.25 V

**5 Volt Sensor Reference Voltage A/B/C Check:**

|                     |  |
|---------------------|--|
| DTCs                | P06A6 - Sensor Reference Voltage "A" Circuit Range/Performance<br>P06A7 - Sensor Reference Voltage "B" Circuit Range/Performance<br>P06A8 - Sensor Reference Voltage "C" Circuit Range/Performance |
| Monitor execution   | Continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | not applicable   |
| Monitoring Duration | 0.5 sec to register a malfunction  |

**Typical 5 Volt Sensor Reference Voltage A/B/C check entry conditions:**

| Entry Condition | Minimum | Maximum |
|-----------------|---------|---------|
| Ignition "ON"   | NA      | NA      |

**Typical 5 Volt Sensor Reference Voltage A/B/C check malfunction thresholds:**P0646, P0647, P06A8 (used for Bosch Tricore modules)

Reference voltage: &lt; 4.7 V or reference voltage: &gt; 5.2 V

## Ignition System Tests

| CKP Ignition System Check Operation: |   |
|--------------------------------------|---|
| DTCs                                 | P0320 Ignition Engine Speed Input Circuit<br>P0322 Ignition Engine Speed Input Circuit No Signal<br>P0339 Crankshaft Position Sensor "A" Circuit Intermittent<br>P0335 Crankshaft Position Sensor "A" Circuit |
| Monitor execution                    | continuous  |
| Monitor Sequence                     | none  |
| Sensors OK                           |   |
| Monitoring Duration                  | < 5 seconds   |

| Typical CKP ignition check entry conditions: |         |         |
|--|---------|---------|
| Entry Condition                              | Minimum | Maximum |
| Engine RPM for CKP                           | 500 rpm |         |

| Typical CKP ignition check malfunction thresholds:  |
|---|
| P0320 or P0339:<br>Incorrect number of teeth after the missing tooth is recognized, time between teeth too low (< 30 rpm or > 9,000 rpm), missing tooth was not where it was expected to be.<br>P0322 or P0335:<br>Camshaft indicates > 1 engine revolution while crankshaft signal missing |

| <b>CMP Ignition System Check Operation:</b> |   |
|---|---|
| DTCs  | P0340 - Intake Cam Position Circuit, Bank 1<br>P0344 – Intake Cam Position Circuit Intermittent, Bank 1<br>P0345 - Intake Cam Position Circuit, Bank 2<br>P0349 – Intake Cam Position Circuit Intermittent Bank 2<br>P0365 - Exhaust Cam Position Circuit, Bank 1<br>P0369 – Intake Cam Position Circuit Intermittent, Bank 1<br>P0390 - Exhaust Cam Position Circuit, Bank 2<br>P0394 – Exhaust Cam Position Circuit Intermittent Bank 2 |
| Monitor execution                           | continuous  |
| Monitor Sequence                            | none  |
| Sensors OK                                  |   |
| Monitoring Duration                         | < 5 seconds   |

| <b>Typical CMP ignition check entry conditions:</b> |         |         |
|---|---------|---------|
| Entry Condition                                     | Minimum | Maximum |
| Engine RPM for CMP                                  | 200 rpm |         |

| <b>Typical CMP ignition check malfunction thresholds:</b>  |
|--|
| Ratio of PIP events to CMP events: 4:1, 6:1, 8:1 or 10:1 based on engine cyl.<br>Intermittent CMP signal – CMP signal in unexpected location |

**Coil Primary Ignition System Check Operation:**

|                     |   |
|---------------------|---|
| DTCs                | P0351 – P0360 (Coil primary)<br><br>P2300, P2303, P2306, P2309, P2312, P2315, P2318, P2321, P2324, P2327 (Coil driver short circuit low)<br><br>P2301, P2304, P2307, P2310, P2313, P2316, P2319, P2322, P2325, P2328 (Coil driver short circuit high)<br><br>P06D1 (Internal control module ignition coil control module performance) |
| Monitor execution   | Continuous  |
| Monitor Sequence    | None  |
| Sensors OK          |   |
| Monitoring Duration | < 1 seconds   |

**Typical Coil primary ignition check entry conditions:**

| Entry Condition             | Minimum         | Maximum             |
|-----------------------------|-----------------|---------------------|
| Engine RPM for coil primary | 200 rpm         | Minimum of 3200 rpm |
| Positive engine torque      | Positive torque |                     |
| Battery Voltage             | 11 volts        | 16 volts            |

**Typical Coil primary ignition check malfunction thresholds:**

P035x (driver in module Ignition systems):

Ratio of PIP events to IDM or NOMI events 1:1

P035x, P23xx (driver on coil Ignition systems):

Coil driver circuit current and/or voltage out of range of open and short circuit limits.

P06D1 (driver on coil Ignition systems):

Missing communication from coil driver IC.

## Knock Sensor

| Knock Sensor Check Operation: |  |
|-------------------------------|--|
| DTCs                          | P0325 – Knock Sensor 1 Circuit<br>P0330 – Knock Sensor 2 Circuit<br>P032A – Knock Sensor 3 Circuit<br>P033A – Knock Sensor 4 Circuit<br>P0327 – Knock Sensor 1 Circuit Low<br>P0328 – Knock Sensor 1 Circuit High<br>P0332 – Knock Sensor 2 Circuit Low<br>P0333 – Knock Sensor 2 Circuit High<br>P032C – Knock Sensor 3 Circuit Low<br>P032D – Knock Sensor 3 Circuit High<br>P033C – Knock Sensor 4 Circuit Low<br>P033D – Knock Sensor 4 Circuit High<br>P130D – Engine Knock / Combustion Performance – Forced Limited Power |
| Monitor execution             | Continuous within entry conditions<br><br>Supplemental circuit low and high codes: Semi-continuous (periodically active) within entry conditions. Knock sensor lines are actively tested for a single combustion event once every 250 engine cycles.   |
| Monitor Sequence              | None   |
| Sensors OK                    | Not in failsafe cooling mode   |
| Monitoring Duration           | Circuit codes: ~10 seconds to detect fault.<br><br>Supplemental circuit low and high codes: ~1 to 2 minutes after engine start to detect fault. This is a typical amount of time to acquire 2 consecutive failed samples from the periodically active test.<br><br>Mega Knock: Event based. See Malfunction thresholds below.  |

| Typical Knock Sensor check entry conditions:           |            |          |
|--|------------|----------|
| Entry Condition  | Minimum    | Maximum  |
| Time since engine start                                | 2 to 5 sec |          |
| Engine Coolant Temperature                             | 140 °F     |          |
| Engine load (circuit codes)                            | 35%        |          |
| Engine load (supplemental circuit low and high codes)  |            |          |
| Engine load (Mega Knock codes)                         | 90%        |          |
| Engine speed (circuit codes)                           | 1500 rpm   | 6000 rpm |
| Engine speed (supplemental circuit low and high codes) |            | 4500 rpm |
| Engine speed (Mega Knock codes)                        | 1000 rpm   | 4000 rpm |

**Typical Knock Sensor functional check malfunction thresholds:**

P0325 & P0330, P032A, P033A Knock signal too low (function of engine speed): < 20 normalized A/D counts (out of 255)

P0327, P0332, P032C, P033C (used only for PCM/ECM with corresponding diagnostic circuit)

Voltage level from active knock sensor circuit probe below limit

P0328, P0333, P032D, P033D (used only for PCM/ECM with corresponding diagnostic circuit)

Voltage level from active knock sensor circuit probe above limit

P130D Mega Knock detection rate too high: > 10 Mega Knock events within span of several thousand combustion events.

## Engine Oil System Components

### Engine Oil Pressure (EOP) Sensor

| Analog EOP Sensor Transfer Function                                |               |               |
|--|---------------|---------------|
| $V_{out} = (V_{ref}) * (0.0008 * \text{Pressure (in kPa)} + 0.10)$ |               |               |
| Volts  | Pressure, kPa | Pressure, psi |
| 0.500  | 0             | 0             |
| 0.660  | 40            | 5.80          |
| 0.820  | 80            | 11.60         |
| 0.980  | 120           | 17.40         |
| 1.140  | 160           | 23.21         |
| 1.300  | 200           | 26.11         |
| 1.460  | 240           | 34.81         |
| 1.620  | 280           | 40.61         |
| 1.780  | 320           | 46.41         |
| 1.940  | 360           | 52.21         |
| 2.100  | 400           | 58.02         |
| 2.260  | 440           | 63.82         |
| 2.420  | 480           | 69.62         |
| 2.580  | 520           | 75.42         |
| 2.740  | 560           | 81.22         |
| 2.900  | 600           | 87.02         |
| 3.060  | 640           | 92.82         |
| 3.220  | 680           | 98.63         |
| 3.380  | 720           | 104.43        |
| 3.700  | 800           | 116.03        |
| 4.020  | 880           | 127.63        |
| 4.340  | 960           | 139.24        |
| 4.420  | 980           | 142.14        |
| 4.500  | 1000          | 145.04        |

| Analog EOP Sensor Circuit Fault Check Operation: |  |
|--|--|
| DTCs   | Analog EOP Sensor<br>P0522: Engine Oil Pressure Sensor "A" Circuit Low<br>P0523: Engine Oil Pressure Sensor "A" Circuit High |
| Monitor Execution                                | Continuous   |
| Monitor Sequence                                 | None   |
| Sensors OK                                       | Not applicable   |
| Monitoring Duration                              | 5 seconds to register a malfunction  |

| Typical Analog EOP Sensor Circuit Check Malfunction Thresholds: |
|---|
| Voltage < 0.25 volts or voltage > 4.75 volts                    |

| <b>SENT EOP Sensor Internal Signal and Communication Fault Check Operation:</b> |   |
|---|---|
| DTCs  | SENT EOP Sensor<br>P0520: Engine Oil Pressure Sensor "A" Circuit<br>U0600: Lost Communication With Engine Oil Pressure Sensor "A" |
| Monitor Execution   | Continuous  |
| Monitor Sequence  | None  |
| Sensors OK  | Not applicable  |
| Monitoring Duration   | 5 seconds to register a malfunction   |

| <b>EOP Sensor Circuit Check Entry Conditions:</b> |
|---|
| Battery voltage > 11.0 volts                      |

### **EOP Sensor Rationality Test**

| <b>EOP Sensor Rationality Check Operation:</b> |   |
|--|---|
| DTCs   | P0521: Engine Oil Pressure Sensor "A" Range/Performance   |
| Monitor Execution                              | Stuck High: Once (up to three times) per driving cycle<br>Stuck In-range: Once per driving cycle<br>Stuck Low: Once per driving cycle<br>Signal lower than estimated: Continuous<br>Signal greater than estimated: Continuous   |
| Monitor Sequence                               | None  |
| Sensors OK                                     | EOP, EOT, ECT   |
| Monitoring Duration for Stuck High             | Stuck High: When first valid engine-off average pressure value is available<br>Stuck In-range: When first valid engine-off and engine-on average pressure values are available<br>Stuck Low: When first valid engine-on average pressure value is available<br>Signal lower than estimated: 5~10 seconds to register a malfunction<br>Signal greater than estimated: 5~10 seconds to register a malfunction |

## Engine Oil Pressure Out of Range Test

| Engine Oil Pressure (EOP) Check Operation: |  |
|--|--|
| DTCs                                       | P0524 - Engine Oil Pressure Too Low<br>P055F - Engine Oil Pressure Out Of Range (Too High)   |
| Monitor Execution                          | Continuous   |
| Monitor Sequence                           | None   |
| Sensors OK                                 | EOP, EOT, ECT  |
| Monitoring Duration                        | P0524 Engine Protection from low oil pressure: 5 seconds<br>P0524 Extended VCT hard-locking command (Mid-lock VCT engine only): 10~25 seconds<br>P055F Engine Protection from high oil pressure: 5 seconds |

## Oil Pressure Control Solenoid

| Oil Pressure Control Solenoid Circuit Check: |   |
|--|---|
| DTCs   | P06DA – Engine Oil Pressure Control Circuit/Open<br>P06DB – Engine Oil Pressure Control Circuit Low<br>P06DC – Engine Oil Pressure Control Circuit High |
| Monitor execution                            | continuous  |
| Monitor Sequence                             | None  |
| Sensors OK                                   | Not applicable  |
| Monitoring Duration                          | 5 seconds   |

| Typical Oil Control Solenoid Circuit Check Entry Conditions: |            |         |
|--|------------|---------|
| Entry Condition  | Minimum    | Maximum |
| Battery Voltage  | 11.0 volts |         |

| Typical Oil Control Solenoid Circuit Check Malfunction Thresholds: |
|--|
| P06DA/P06DB/P06DC - Smart driver reports output circuit fault.     |

## Oil Pressure Control Solenoid Rationality Test

| Oil Pressure Control Solenoid Functional Check: |   |
|---|---|
| DTC   | P06DD – Engine Oil Pressure Control Performance/Stuck Off<br>P06DE – Engine Oil Pressure Control Stuck On |
| Monitor execution                               | 2 stage: On pressure mode (Hi/Lo) change<br>Continuous variable: Continuous                               |
| Monitor Sequence                                | None  |
| Sensors/Actuators OK                            | EOP, EOT, ECT   |
| Monitoring Duration                             | 2 stage: < 1 seconds to register a malfunction once occurred<br>Continuous variable: 10 seconds           |

| Typical Oil Control Solenoid Functional Check Entry Conditions: |            |         |
|---|------------|---------|
| Entry Condition   | Minimum    | Maximum |
| Time since engine start   | 30 seconds |         |

## Engine Oil Temperature (EOT) Sensor

| EOP Sensor Transfer Function |                        |                        |
|------------------------------|------------------------|------------------------|
| Volts                        | Temperature, degrees F | Temperature, degrees C |
| 4.886                        | -40                    | -40                    |
| 4.845                        | -31                    | -35                    |
| 4.792                        | -22                    | -30                    |
| 4.640                        | -4                     | -20                    |
| 4.409                        | 14                     | -10                    |
| 4.084                        | 32                     | 0                      |
| 3.664                        | 50                     | 10                     |
| 3.173                        | 68                     | 20                     |
| 2.650                        | 86                     | 30                     |
| 2.142                        | 104                    | 40                     |
| 1.685                        | 122                    | 50                     |
| 1.299                        | 140                    | 60                     |
| 0.994                        | 158                    | 70                     |
| 0.757                        | 176                    | 80                     |
| 0.577                        | 194                    | 90                     |
| 0.441                        | 212                    | 100                    |
| 0.339                        | 230                    | 110                    |
| 0.262                        | 248                    | 120                    |
| 0.205                        | 266                    | 130                    |
| 0.161                        | 284                    | 140                    |
| 0.143                        | 293                    | 145                    |
| 0.128                        | 302                    | 150                    |

| EOT Sensor Circuit Check Operation: |  |
|-------------------------------------|--|
| DTCs                                | Analog Sensor<br>P0197: Engine Oil Temperature Sensor "A" Circuit Low<br>P0198: Engine Oil Temperature Sensor "A" Circuit High |
| Monitor Execution                   | Continuous   |
| Monitor Sequence                    | None   |
| Sensors OK                          | Not applicable   |
| Monitoring Duration                 | 5 seconds to register a malfunction  |

| EOT Sensor Circuit Check Entry Conditions: |
|--|
| Battery voltage > 11.0 volts               |

| Typical EOT Sensor Circuit Check Malfunction Thresholds: |
|--|
| Voltage < 0.16 volts or Voltage > 4.93 volts             |

## EOT Sensor Rationality Test

| EOT Sensor Rationality Check Operation: |  |
|---|--|
| DTCs                                    | P0196: Engine Oil Pressure Sensor "A" Range/Performance<br>P1184: Engine Oil Temperature Sensor Out Of Self Test Range |
| Monitor Execution                       | P0196: Continuous<br>P1184: As requested   |
| Monitor Sequence                        | None   |
| Sensors OK                              | ECT  |
| Monitoring Duration                     | Usually 5 seconds to register a malfunction  |

## Engine Outputs

| IAC Check Operation: |   |
|----------------------|---|
| DTCs                 | P0507 - Idle Control System – RPM Higher Than Expected<br>P0506 - Idle Control System – RPM Lower Than Expected |
| Monitor execution    | Continuous  |
| Monitor Sequence     | None  |
| Sensors OK           | ECT, VSS (Vehicle Speed Sensor)   |
| Monitoring Duration  | P0507 (overspeed): 15 seconds<br>P0506 (underspeed): 10 seconds   |

| Typical IAC functional check entry conditions:           |             |         |
|--|-------------|---------|
| Entry Condition  | Minimum     | Maximum |
| Engine Coolant Temp                                      | 150 °F      |         |
| Time since engine start-up                               | 100 seconds |         |
| Closed loop fuel   | Yes         |         |
| Throttle Position (at idle, closed throttle, no dashpot) | Closed      | Closed  |

| Typical IAC functional check malfunction thresholds:   |  |
|--|--|
| For underspeed error: Actual rpm 100 rpm below target, closed-loop IAC correction > 1 lb/min |  |
| For overspeed error: Actual rpm 200 rpm above target, closed-loop IAC correction < .2 lb/min |  |

The PCM monitors the "smart" driver fault status bit that indicates either an open circuit, short to power or short to ground.

| Injector Check Operation: |                                    |
|---------------------------|------------------------------------|
| DTCs                      | P0201 through P0210 (opens/shorts) |
| Monitor execution         | Continuous within entry conditions |
| Monitor Sequence          | None                               |
| Monitoring Duration       | 5 seconds                          |

| Typical injector circuit check entry conditions: |            |         |
|--|------------|---------|
| Entry Condition                                  | Minimum    | Maximum |
| Battery Voltage                                  | 11.0 volts |         |

## Fuel Pump Diagnostics

| Single speed MRFS Check Operation: |   |
|------------------------------------|---|
| DTCs                               | P0230 – Fuel Pump Primary Circuit (opens/shorts)<br>P0231 – Fuel Pump Secondary Circuit Low<br>P0232 – Fuel Pump Secondary Circuit High |
| Monitor execution                  | Continuous within entry conditions  |
| Monitor Sequence                   | None  |
| Sensors OK                         |   |
| Monitoring Duration                | 2-5 seconds   |

| Typical Single speed MRFS check entry conditions: |          |          |
|---|----------|----------|
| Entry Condition                                   | Minimum  | Maximum  |
| Battery Voltage                                   | 11 volts | 16 volts |

| Fuel Pump Driver Module Check Operation: |   |
|--|---|
| DTCs                                     | P1233 – FPDM disabled or offline<br>P1235 – Fuel pump control out of range<br>P1237 – Fuel pump secondary circuit |
| Monitor execution                        | Continuous, voltage > 11 volts  |
| Monitor Sequence                         | None  |
| Monitoring Duration                      | 3 seconds   |

| Typical ERFS check entry conditions: |          |          |
|--------------------------------------|----------|----------|
| Entry Condition                      | Minimum  | Maximum  |
| Battery Voltage                      | 11 volts | 16 volts |

**MRFS FP A Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P0230 – PEM Power Relay Circuit<br>P025A – Fuel Pump A Control Circuit (opens/shorts)<br>P025B – Invalid Fuel Pump A Control Data<br>P0627 – Fuel Pump A Secondary Circuit<br>P064A – Fuel Pump A Driver Module Internal Error<br>U210B – Fuel Pump A Disabled Circuit (obsolete)<br>U0109 – Loss of Communication with Fuel Pump Module A |
| Monitor execution   | Continuous with entry conditions   |
| Monitor Sequence    | None   |
| Sensors OK          |  |
| Monitoring Duration | 2-5 seconds  |

**Typical MRFS FP A check entry conditions:**

| Entry Condition | Minimum  | Maximum  |
|-----------------|----------|----------|
| Battery Voltage | 11 volts | 16 Volts |

**Typical MRFS FP A check malfunction thresholds:**

P0230 – no threshold (fuel pump driver detects PEM relay circuit fault)  
P025A – no threshold (fuel pump driver detects FPC signal fault)  
P025B - Fuel Pump Monitor duty cycle feedback of  $20 \pm 4\%$   
P0627 – Fuel Pump Monitor duty cycle feedback correspondent to open/short or overtemperature faults  
P064A – Fuel Pump Monitor duty cycle feedback of  $30 \pm 4\%$   
U210B – Fuel Pump Monitor duty cycle feedback of 40% (obsolete)  
U0109 - No Fuel Pump Monitor duty cycle feedback (i.e. 0% or 100% duty cycle)

**MRFS FP B Check Operation:**

|                     |   |
|---------------------|---|
| DTCs                | P025A – Fuel Pump A/B Control Circuit (opens/shorts)<br>P027B – Invalid Fuel Pump B Control Data<br>P2632 – Fuel Pump B Secondary Circuit<br>P26EA – Fuel Pump B Driver Module Internal Error<br>U210C – Fuel Pump B Disabled Circuit (obsolete)<br>U016C – Loss of Communication with Fuel Pump Module B |
| Monitor execution   | Continuous with entry conditions  |
| Monitor Sequence    | None  |
| Sensors OK          |   |
| Monitoring Duration | 2-5 seconds   |

**Typical MRFS FP B check entry conditions:**

| Entry Condition | Minimum  | Maximum  |
|-----------------|----------|----------|
| Battery Voltage | 11 volts | 16 volts |

**Typical MRFS FP B check malfunction thresholds:**

P025A - no threshold (fuel pump driver detects FPC signal fault)  
P027B - Fuel Pump Monitor duty cycle feedback of 20%  $\pm$  4%  
P2632 – Fuel Pump Monitor duty cycle feedback correspondent to open/short or overtemperature faults  
P26EA – Fuel Pump Monitor duty cycle feedback of 30%  $\pm$  4%  
U210C – Fuel Pump Monitor duty cycle feedback of 40% (obsolete)  
U016C - No Fuel Pump Monitor duty cycle feedback (i.e. 0% or 100% duty cycle)

## Intake Manifold Runner Control Systems

| IMRC System Check Operation: |  |
|------------------------------|--|
| DTCs                         | Vacuum actuated, V engine:<br>P2004 – IMRC stuck open, Bank 1<br>P2005 – IMRC stuck open, Bank 2<br>P2006 – IMRC stuck closed, Bank 1<br>P2007 – IMRC stuck closed, Bank 2<br>P2008 – IMRC Control Circuit<br>P2011 – IMRC Control Circuit, Bank 2<br>P2016 – IMRC Position Sensor Circuit Low, Bank 1<br>P2021 – IMRC Position Sensor Circuit Low, Bank 2<br>P2017 – IMRC Position Sensor Circuit High, Bank 1<br>P2022 – IMRC Position Sensor Circuit High, Bank 2<br>P2015 – IMRC Position Sensor Over Travel, Bank 1<br>P2020 – IMRC Position Sensor Over Travel, Bank 2 |
| Monitor execution            | Continuous, after ECT > 40 deg F   |
| Monitor Sequence             | None   |
| Sensors OK                   |  |
| Monitoring Duration          | Electrical: 5 seconds for circuit check<br>Functional: 4 events for stuck/over travel check  |

| Typical IMRC Solenoid Circuit Check Entry Conditions: |            |         |
|---|------------|---------|
| Entry Condition                                       | Minimum    | Maximum |
| Battery Voltage                                       | 11.0 volts |         |

| Typical IMRC functional check malfunction thresholds                                |
|---|
| IMRC plates do not match commanded position / exceed operational range (functional) |
| IMRC position sensors open/shorted, (< 0.24 volts, > 4.7 volts)                     |
| IMRC control circuit (electrical, indicated by driver circuit)                      |

## Intake Manifold Tuning Valve Systems

| IMTV Check Operation: |   |
|-----------------------|---|
| DTCs                  | P1549 or P0660 - IMTV output electrical check (does not illuminate MIL) |
| Monitor execution     | continuous  |
| Monitor Sequence      | None  |
| Sensors OK            |   |
| Monitoring Duration   | 5 seconds   |

## Engine Cooling System Outputs

| Engine Coolant Bypass Valve Check Operation: |  |
|--|--|
| DTCs   | P26B7 – Engine Coolant Bypass Valve "C" Control Circuit<br>where "C" is defined as "Engine Coolant Radiator" |
| Monitor execution                            | continuous   |
| Monitor Sequence                             | None   |
| Sensors OK                                   | not applicable   |
| Monitoring Duration                          | 5 seconds  |

| Typical Engine Coolant Bypass Valve check malfunction thresholds: |  |
|---|--|
| P26B7 - Smart driver reports output circuit fault.                |  |

| Engine Coolant Cabin Heating Bypass Valve Check Operation: |   |
|--|---|
| DTCs   | P26BD – Engine Coolant Bypass Valve "D" Control Circuit<br>where "D" is defined as "Engine Coolant Cabin Heating" |
| Monitor execution  | continuous  |
| Monitor Sequence   | None  |
| Sensors OK   | not applicable  |
| Monitoring Duration  | 5 seconds   |

| Typical Engine Coolant Cabin Heating Bypass Valve check malfunction thresholds: |  |
|---|--|
| P26BD - Smart driver reports output circuit fault.                              |  |

**Active Transmission Heating Valve Solenoid Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P2681 – Engine Coolant Bypass Valve "A" Control Circuit<br>where "A" is defined as "Engine Coolant Auto Trans Cooler Flow" |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | not applicable   |
| Monitoring Duration | 5 seconds  |

**Typical Active Transmission Heating Valve Solenoid check malfunction thresholds:**

P26B7 - Smart driver reports output circuit fault.

**Active Transmission Cooling Valve Solenoid Check Operation:**

|                     |  |
|---------------------|--|
| DTCs                | P26AC – Engine Coolant Bypass Valve "B" Control Circuit<br>Where "B" is defined as "Engine Coolant Auto Trans Cooling" |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | not applicable   |
| Monitoring Duration | 5 seconds  |

**Typical Active Transmission Cooling Valve Solenoid check malfunction thresholds:**

P26AC - Smart driver reports output circuit fault.

## Auxiliary Coolant System Pumps

### Coolant Pump “A”

| Auxiliary Coolant Pump “A” Check Operation: |   |
|---|---|
| DTCs  | P2600 – Coolant Pump “A” Control Circuit/Open<br>P2601 – Coolant Pump “A” Control Performance/Stuck Off<br>P2602 – Coolant Pump “A” Control Circuit Low<br>P2603 – Coolant Pump “A” Control Circuit High<br>"A" is defined as "High Temp Loop Aux Pump - Cabin Heating" |
| Monitor execution                           | continuous  |
| Monitor Sequence                            | None  |
| Sensors OK                                  | not applicable  |
| Monitoring Duration                         | 5 seconds   |

| Typical auxiliary cooling pump “A” circuit check entry conditions: |            |         |
|--|------------|---------|
| Entry Condition  | Minimum    | Maximum |
| Battery Voltage  | 11.0 volts |         |

| Typical auxiliary cooling pump “A” circuit check malfunction thresholds: |
|--|
| P2602/P2603 - Smart driver reports output circuit fault.                 |

## Coolant Pump “B”

| Auxiliary Coolant Pump “B” Check Operation: |  |
|---|--|
| DTCs  | P261A – Coolant Pump “B” Control Circuit/Open<br>P261B1 – Coolant Pump “B” Control Performance/Stuck Off<br>P261C – Coolant Pump “B” Control Circuit Low<br>P261D – Coolant Pump “B” Control Circuit High<br>"B" is defined as High Temp Loop Aux Pump - Component Cooling #1" |
| Monitor execution                           | continuous   |
| Monitor Sequence                            | None   |
| Sensors OK                                  | not applicable   |
| Monitoring Duration                         | 5 seconds  |

| Typical auxiliary cooling pump “B” circuit check entry conditions: |            |         |
|--|------------|---------|
| Entry Condition  | Minimum    | Maximum |
| Battery Voltage  | 11.0 volts |         |

| Typical auxiliary cooling pump “B” circuit check malfunction thresholds: |
|--|
| P261C/P261D - Smart driver reports output circuit fault.                 |

## Exhaust Flow Control Valve - Exhaust Tuning

### Exhaust Flow Control Valve Check Operation:

|                     |  |
|---------------------|--|
| DTCs                | <b>Bank 1:</b><br>P26C5: Exhaust Flow Control Valve "A" Control Circuit/Open<br>P26C6: Exhaust Flow Control Valve "A" Control Circuit Low<br>P26C7: Exhaust Flow Control Valve "A" Control Circuit High<br>P26FE: Exhaust Flow Control Valve "A" Control Performance<br><b>Bank 2:</b><br>P2BF8: Exhaust Flow Control Valve "A" Control Circuit/Open<br>P2BF9: Exhaust Flow Control Valve "A" Control Circuit Low<br>P2BFA: Exhaust Flow Control Valve "A" Control Circuit High<br>P2BFB: Exhaust Flow Control Valve "A" Control Performance |
| Monitor execution   | continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | not applicable   |
| Monitoring Duration | 5 seconds  |

### Typical Exhaust Flow Control Valve check malfunction thresholds:

P26C5, P25C6, P25C7, P2BF8, P2BF9, P2BFA – Exhaust Valve Smart driver reports output circuit fault  
P26FE, P2BFB – Exhaust Flow Control Valve Smart driver reports stuck valve (via PWM signal line)

## Exhaust Flow Control Valve - Rationality Test

### Exhaust Flow Control Valve Rationality Check Operation:

|                     |  |
|---------------------|--|
| DTCs                | P26FE: Exhaust Flow Control Valve "A" Control Performance<br>P2BFB: Exhaust Flow Control Valve "B" Control Performance |
| Monitor Execution   | Continuous   |
| Monitor Sequence    | None   |
| Sensors OK          | Not applicable   |
| Monitoring Duration | Varies depending on ambient conditions   |

### Typical Exhaust Flow Control Valve Rationality Check Malfunction Thresholds:

Measured valve position outside the threshold band of Commanded valve position on any of the two valves

## Active Mounts (ACMTS)

| Active Mounts Circuit Check Operation: |  |
|--|--|
| DTCs                                   | <b>Bank 1:</b><br>P0A14: Engine Mount Control "A" Circuit/Open<br>P0A15: Engine Mount Control "A" Circuit Low<br>P0A16: Engine Mount Control "A" Circuit High<br><b>Bank 2:</b><br>P0AB6: Engine Mount Control "B" Circuit/Open<br>P0AB7: Engine Mount Control "B" Circuit Low<br>P0AB8: Engine Mount Control "B" Circuit High |
| Monitor execution                      | Continuous   |
| Monitor Sequence                       | None   |
| Sensors OK                             | Not applicable   |
| Monitoring Duration                    | 5 seconds to register a malfunction  |

| Typical Active Mounts check malfunction thresholds:   |  |
|---|--|
| All DTCs listed above – Low level driver reports a fault which is matured in the PCM strategy |  |

## Comprehensive Component Monitor - Transmission

### Transmission Inputs

| Transmission Range Sensor Check Operation: |   |
|--|---|
| DTCs                                       | P0705 invalid pattern for digital TRS<br>P0706 Out of range signal frequency for PWM TRS<br>P0707 Signal out of range low for PWM TRS<br>P0708 Open circuit for digital TRS or signal out of range high for PWM TRS |
| Monitor execution                          | Continuous  |
| Monitor Sequence                           | None  |
| Sensors OK                                 |   |
| Monitoring Duration                        | Up to 30 seconds for pattern recognition, 5 seconds for analog faults   |

| Typical TRS check entry conditions: |                                    |             |
|-------------------------------------|------------------------------------|-------------|
| Auto Transmission Entry Conditions  | Minimum                            | Maximum     |
| Gear selector position              | each position for up to 30 seconds | 480 seconds |

| Typical TRS malfunction thresholds: |   |
|-------------------------------------|---|
| Digital TRS:                        | Invalid pattern from 3 or 5 digital inputs and/or 1 analog circuit open for 5 seconds   |
| 4-bit digital TRS:                  | Invalid pattern for 200 ms  |
| Dual analog TRS:                    | Voltage > 4.84 volts or < 0.127 volts for 200 ms or<br>Sum of both inputs is outside the range of 5.0 volts +/- 0.29 volts for 200 ms   |
| PWM TRS:                            | Frequency > 175 Hz or < 100 Hz,<br>Duty Cycle > 90% or < 10%  |
| Dual PWM TRS:                       | each signal tested for: <ul style="list-style-type: none"> <li>Frequency &gt; 175 Hz or &lt; 100 Hz (HF32); &gt; 300 Hz or &lt; 200 Hz (DPS6)</li> <li>Duty Cycle &gt; 90% or &lt; 10%</li> </ul> |
| Sum of both inputs = 100% +/- 4%    |   |

| Vehicle Speed Sensor Functional Check Operation: |                     |
|--|---------------------|
| DTCs   | P0500 – VSS circuit |
| Monitor execution                                | Continuous          |
| Monitor Sequence                                 | None                |
| Sensors OK                                       |                     |
| Monitoring Duration                              | 30 seconds          |

| Typical VSS functional check entry conditions: |          |         |
|--|----------|---------|
| Auto Transmission Entry Conditions             | Minimum  | Maximum |
| Gear selector position                         | drive    |         |
| Engine rpm (above converter stall speed) OR    | 3000 rpm |         |
| Turbine shaft rpm (if available) OR            | 1500 rpm |         |
| Output shaft rpm                               | 650 rpm  |         |
| Vehicle speed (if available)                   | 15 mph   |         |
| Manual Transmission Entry Conditions           |          |         |
| Engine load                                    | 50 %     |         |
| Engine rpm                                     | 2400 rpm |         |

| Typical VSS functional check malfunction thresholds:   |
|--|
| Vehicle is inferred to be moving with positive driving torque and VSS is < 1 - 5 mph for 5 seconds |

| Output Shaft Speed Sensor Functional Check Operation: |  |
|---|--|
| DTCs  | P0720 – OSS circuit<br>P0721 – OSS range/performance -F-21, 6HP26<br>P0722 – OSS no signal<br>P0723 – OSS intermittent/erratic – 6HP26 |
| Monitor execution                                     | Continuous   |
| Monitor Sequence                                      | None   |
| Sensors OK  | TSS, Wheel Speed   |
| Monitoring Duration                                   | 30 seconds   |

| Typical OSS functional check entry conditions: |               |         |
|--|---------------|---------|
| Auto Transmission Entry Conditions             | Minimum       | Maximum |
| Gear selector position                         | drive         |         |
| Engine rpm (above converter stall speed) OR    | 3000 rpm      |         |
| Primary Pulley Speed (CFT30) OR                | 400 rpm       |         |
| Turbine shaft rpm (if available) OR            | 1500 rpm      |         |
| Output shaft rpm                               | 300 - 650 rpm |         |
| Vehicle speed (if available)                   | 12.5 - 15 mph |         |

| Typical OSS functional check malfunction thresholds:   |
|--|
| Circuit/no signal - vehicle is inferred to be moving with positive driving torque and OSS < 100 to 200 rpm for 5 to 30 seconds<br>6HP26 Circuit/no signal: open or short circuit for > 0.6 seconds<br>6HP Range/Performance: > 200 rpm difference between OSS and wheel speed and > 250 rpm difference between OSS and input shaft speed<br>F21 Range/Performance: TSS, ABS wheel speed and engine rpm correlate properly, but OSS error is greater than 15% for 10 seconds<br>CFT30 Range/Performance: ABS wheel speed indicates a 6.24 mph difference with OSS calculated wheel speed<br>6HP26 Intermittent/Erratic: > -1000 rpm instantaneous change with locked torque converter clutch<br>CFT30 Intermittent/Erratic: > 6000 rpm/sec change |

| Intermediate Shaft Speed Sensor Functional Check Operation: |                     |
|---|---------------------|
| DTCs  | P0791 – ISS circuit |
| Monitor execution   | Continuous          |
| Monitor Sequence  | None                |
| Sensors OK  |                     |
| Monitoring Duration   | 30 seconds          |

| Typical ISS functional check entry conditions: |          |         |
|--|----------|---------|
| Auto Transmission Entry Conditions             | Minimum  | Maximum |
| Gear selector position                         | drive    |         |
| Engine rpm (above converter stall speed) OR    | 3000 rpm |         |
| Turbine shaft rpm (if available) OR            | 1500 rpm |         |
| Output shaft rpm                               | 650 rpm  |         |
| Vehicle speed (if available)                   | 15 mph   |         |

| Typical ISS functional check malfunction thresholds:  |
|---|
| Vehicle is inferred to be moving with positive driving torque and ISS < 250 rpm for 5 seconds |

| <b>Turbine Shaft Speed Sensor Functional Check Operation:</b> |   |
|---|---|
| DTCs  | P0715 – TSS circuit / no signal<br>P0718 – TSS erratic signal |
| Monitor execution   | Continuous  |
| Monitor Sequence  | None  |
| Sensors OK  | OSS, Wheel Speed  |
| Monitoring Duration   | 30 seconds  |

| <b>Typical TSS functional check entry conditions:</b> |               |         |
|---|---------------|---------|
| Auto Transmission Entry Conditions                    | Minimum       | Maximum |
| Gear selector position                                | Forward range |         |
| Engine rpm (above converter stall speed) OR           | 3000 rpm      |         |
| Output shaft rpm OR                                   | 600 - 650 rpm |         |
| Vehicle speed (if available)                          | 12.5 - 15 mph |         |

| <b>Typical TSS functional check malfunction thresholds:</b>  |
|--|
| Circuit/no signal - vehicle is inferred to be moving with positive driving torque and TSS < 200 rpm for 5 – 30 seconds |
| Erratic signal – observe 200 turbine speed spikes > 400 rpm with no more than 1.5 seconds between spikes               |

| Transmission Fluid Temperature Sensor Functional Check Operation: |   |
|---|---|
| DTCs  | P0711 – in range failure<br>P0712 – short to ground<br>P0713 – open circuit             |
| Monitor execution   | continuous  |
| Monitor Sequence  | none  |
| Sensors OK  | ECT substituted if TFT has malfunction<br>TFT inferred from pressure solenoids on CFT30 |
| Monitoring Duration   | 5 seconds for electrical, 600 seconds for functional check                              |

| Typical TFT Stuck Low/High check entry conditions:             |               |         |
|--|---------------|---------|
| Auto Transmission Entry Conditions                             | Minimum       | Maximum |
| Engine Coolant Temp (hot or cold, not midrange)                | > 100 °F      | < 20 °F |
| Time in run mode   | 500 – 600 sec |         |
| Time in gear, vehicle moving, positive torque                  | 150 sec       |         |
| Vehicle Speed  | 15 mph        |         |
| Time with engine off (cold start) OR                           | 420 min       |         |
| Engine Coolant Temp AND Trans Fluid Temp (inferred cold start) |               | 122 °F  |

| Typical TFT malfunction thresholds:   |
|---|
| <p>Opens/shorts: TFT voltage &lt;0.05 or &gt; 4.6 volts for 5 – 12 seconds</p> <p>TFT Stuck low/high, i.e. TFT stuck at high temperature or stuck at low temperature):</p> <p>Stores a fault code if TFT stabilizes (stops increasing if temperature &lt; 70 deg F, stops decreasing if temperature &gt; 225 deg F) before reaching the temperature region where all MIL tests are enabled (70 to 225 deg F). If TFT remains constant (+/- 2 deg F) for approximately 2.5 minutes of vehicle driving outside the 70 to 225 deg F zone a P0711 fault code will be stored. Old logic used to indicate a "pass" for a single delta, and not test until the normal operating region (70-225 deg F) was reached.</p> |

## Transmission Outputs

| Shift Solenoid Check Operation: |  |
|---------------------------------|--|
| DTCs                            | <p>SS A - P0750 - open circuit,<br/> P0751 – functionally failed off<br/> P0752 – functionally failed on<br/> P0973 – short to ground<br/> P0974 - shorts to power<br/> P1714 ISIG functional (4R70 only, replaces P0751, P0752)</p> <p>SS B - P0755 - open circuit<br/> P0756 – functionally failed off<br/> P0757 – functionally failed on<br/> P0976 – short to ground<br/> P0977 - shorts to power<br/> P1715 ISIG functional (4R70 only, replaces P0756, P0757)</p> <p>SS C - P0760 - open circuit<br/> P0761 – functionally failed off<br/> P0762 – functionally failed on<br/> P0979 – short to ground<br/> P0980 - shorts to power</p> <p>SS D P0765 - open circuit<br/> P0766 – functionally failed off<br/> P0767 – functionally failed on<br/> P0982 – short to ground<br/> P0983 - shorts to power</p> <p>SS E - P0770 - open circuit<br/> P0771 – functionally failed off<br/> P0772 – functionally failed on<br/> P0985 – short to ground<br/> P0986 - shorts to power</p> |
| Monitor execution               | electrical - continuous, functional - during off to on solenoid transitions  |
| Monitor Sequence                | None   |
| Sensors OK                      |  |
| Monitoring Duration             | 0.5 to 5 seconds for electrical checks, 3 solenoid events for functional check   |

| Typical Shift Solenoid ISIG functional check entry conditions: |  |         |
|--|--|---------|
| Entry Conditions   | Minimum                                  | Maximum |
| Transmission Fluid Temp  | 70 °F                                    | 225 °F  |
| Throttle position  | positive drive torque (actual TP varies) |         |

| Typical Shift Solenoid mechanical functional check entry conditions: |                       |         |
|--|-----------------------|---------|
| Entry Conditions (with turbine speed)                                | Minimum               | Maximum |
| Gear ratio calculated  | each gear             |         |
| Throttle position  | positive drive torque |         |

| Typical Shift Solenoid mechanical functional check entry conditions: |                       |         |
|--|-----------------------|---------|
| Entry Conditions (without turbine speed)                             | Minimum               | Maximum |
| Rpm drop is obtained   | each shift            |         |
| Throttle position  | positive drive torque |         |

| Typical Shift Solenoid malfunction thresholds:   |  |  |
|--|--|--|
| Electrical circuit check: Output driver feedback circuit does not match commanded driver state for 0.5 – 5.0 seconds                 |  |  |
| Electrical current check: Feedback current out of range for 0.5 seconds  |  |  |
| ISIG functional check: ISIG chip hardware circuit does not detect characteristic current dip and rise produced by solenoid movement. |  |  |
| Mechanical functional check: Actual obtained gear or shift pattern indicates which shift solenoid is stuck on or off.                |  |  |

| Gear Ratio Check Operation: |   |
|-----------------------------|---|
| DTCs                        | P0731 incorrect gear 1 ratio<br>P0732 incorrect gear 2 ratio<br>P0733 incorrect gear 3 ratio<br>P0734 incorrect gear 4 ratio<br>P0735 incorrect gear 5 ratio<br>P0729 incorrect gear 6 ratio<br>P0736 incorrect reverse ratio |
| Monitor execution           | Continuous, in each gear  |
| Monitor Sequence            | None  |
| Sensors OK                  | TSS, OSS, wheel speed   |
| Monitoring Duration         | 12 seconds  |

| Typical Forward Gear Ratio check entry conditions: |                               |          |
|--|-------------------------------|----------|
| Entry Conditions                                   | Minimum                       | Maximum  |
| Gear selector position                             | forward range,<br>> 8 seconds |          |
| Engine Torque                                      | 100 NM                        |          |
| Throttle position                                  | 10%                           |          |
| Not shifting                                       | > 0.5 seconds                 |          |
| Engine/input Speed                                 | 550 rpm                       |          |
| Output Shaft Speed                                 | 250 rpm                       | 1350 rpm |

| Typical Neutral Gear Ratio check entry conditions: |                              |         |
|--|------------------------------|---------|
| Entry Conditions                                   | Minimum                      | Maximum |
| Gear selector position                             | forward range,<br>> 1 second |         |
| Absolute value of Engine rpm – Turbine rpm         |                              | 150 rpm |
| Output Shaft Speed                                 |                              | 500 rpm |

| Typical Gear Ratio malfunction thresholds:   |
|--|
| Forward gear check: > 30 rpm error in commanded ratio for > 1.8 seconds that repeats 3 times |

| Torque Converter Clutch Check Operation: |   |
|--|---|
| DTCs                                     | P0740 – open circuit<br>P0742 – short to ground<br>P0744 – short to power<br>P0741 – functionally stuck off<br>P2758 – functionally stuck on<br>P1740 – Inductive signature (4R70 only, replaces P0741 / P2758) |
| Monitor execution                        | electrical - continuous,<br>mechanical - during lockup  |
| Monitor Sequence                         | None  |
| Sensors OK                               | TSS, OSS  |
| Monitoring Duration                      | Electrical – 5 seconds, Functional - 5 lock-up events   |

| Typical TCC ISIG functional check entry conditions: |                       |         |
|---|-----------------------|---------|
| Entry Conditions                                    | Minimum               | Maximum |
| Transmission Fluid Temp                             | 70 °F                 | 225 °F  |
| Engine Torque                                       | positive drive torque |         |
| Commanded TCC duty cycle for 0 rpm slip             | 60%                   | 90%     |

| Typical TCC mechanical functional check stuck off entry conditions: |                       |         |
|---|-----------------------|---------|
| Entry Conditions  | Minimum               | Maximum |
| Throttle Position   | steady                |         |
| Engine Torque   | positive drive torque |         |
| Transmission Fluid Temp   | 70 °F                 | 225 °F  |
| Commanded TCC duty cycle (0 rpm slip)                               | 60%                   | 100%    |
| Not shifting  |                       |         |

| Typical TCC malfunction thresholds:  |
|--|
| Electrical circuit check: Output driver feedback circuit does not match commanded driver state for 0.5 – 5.0 seconds                 |
| Electrical current check: Feedback current out of range for 0.5 seconds  |
| ISIG functional check: ISIG chip hardware circuit does not detect characteristic current dip and rise produced by solenoid movement. |
| Mechanical check, stuck off: Slip across torque converter > 100 – 200 rpm or speed ratio < 0.93                                      |
| Mechanical check, stuck on: Slip across torque converter < 20 rpm with converter commanded off                                       |
| Mechanical check, stuck on: engine rpm < 100 after drive engagement (engine stall)   |

| Pressure Control Solenoid Check Operation: |   |
|--|---|
| DTCs                                       | P0960 – open circuit<br>P0962 – short to ground<br>P0963 – short to power |
| Monitor execution                          | Continuous  |
| Monitor Sequence                           | none  |
| Sensors OK                                 |   |
| Monitoring Duration                        | Electrical: 5 seconds,<br>Mechanical functional: up to 30 seconds         |

| Typical Pressure Control Solenoid mechanical functional check entry conditions: |                       |         |
|---|-----------------------|---------|
| Entry Conditions  | Minimum               | Maximum |
| Gear ratio calculated   | each gear             |         |
| Transmission Fluid Temperature  | 70 °F                 | 225 °F  |
| Throttle Position   | positive drive torque |         |

| Typical Pressure Control Solenoid malfunction thresholds:  |
|--|
| Electrical circuit check: Output driver feedback circuit does not match commanded driver state for 0.5 – 5.0 seconds |
| Electrical current check: Feedback current out of range for 0.5 seconds  |
| Mechanical functional check: Actual obtained gear pattern indicates Pressure Control solenoid fault                  |

| Inductive Signature or ADLER Chip Communication Check Operation: |  |
|--|--|
| DTCs   | P1636 ISIG or ADLER chip loss of communication   |
| Monitor execution  | off-to-on solenoid transitions (ISIG)<br>continuous for ADLER (driver chip that controls shift solenoids on the 6 speed transmissions) |
| Monitor Sequence   | none   |
| Sensors OK   |  |
| Monitoring Duration  | < 100 solenoid events (ISIG)<br>5 30ms loops without communication (ADLER)   |

| Typical Inductive Signature or ADLER Chip Communication Check entry conditions: |         |             |
|---|---------|-------------|
| Entry Conditions  | Minimum | Maximum     |
| Transmission Fluid Temp   | 70 °F   | 225 °F      |
| Solenoid commanded off duration   |         | < 2 seconds |

| Typical Inductive Signature or ADLER Communication Chip malfunction thresholds: |
|---|
| Checksum error, chip not responding   |